

配置在SPA922上的呼叫转移

目录

[简介](#)

Q. [如何使用 SPA922 转移呼叫？](#)

[相关信息](#)

简介


本文是一系列协助设置、排错和维护Cisco小型企业产品(以前Linksys企业系列)文档中的一篇。

Q. [如何使用 SPA922 转移呼叫？](#)

A.


步骤 1：

访问 SPA922 基于网络的设置页。通过LCD验证IP地址。点击 **Menu 按钮**，然后按 9。它应该显示您DHCP IP地址。打开浏览器并且输入那地址栏。

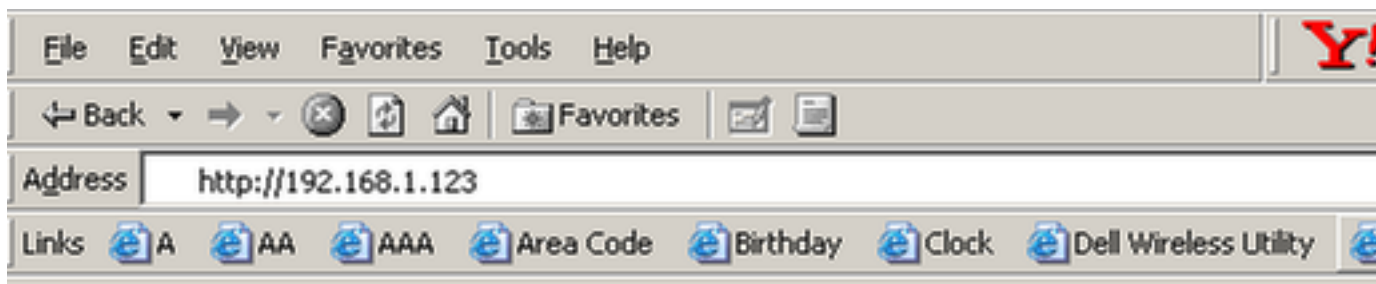

步骤 2：

点击 **Admin Login**，然后点击 **advanced**。

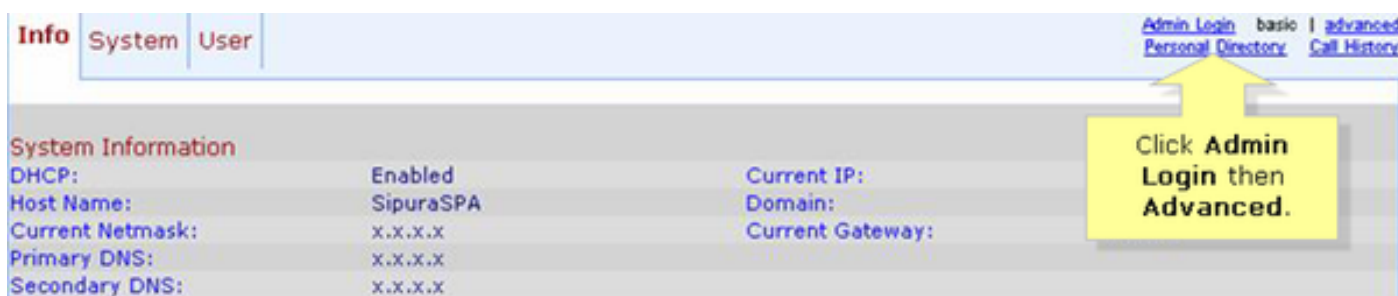

注意：默认情况下，SPA922 没有用户名和密码。如果系统要求您提供用户名和密码，则意味着 SPA921 已锁定。您需要向您的VoIP供应商验证这些。

步骤 3：

点击 **User** 选项卡并且在 **Call Forward** 选项下设置电话号码或分机号。

[User Login](#) | [basic](#) | [advanced](#)
[Personal Directory](#) | [Call History](#)

[Provisioning](#) | [Regional](#) | [Phone](#) | [Ext 1](#) | [Ext 2](#) | **User**

Set the phone number.

Call Forward

Cfwd All Dest:	<input type="text"/>	Cfwd Busy Dest:	7034833923
Cfwd No Ans Dest:	7034833923	Cfwd No Ans Delay:	20

Speed Dial

Speed Dial 2:	<input type="text"/>	Speed Dial 3:	<input type="text"/>
Speed Dial 4:	<input type="text"/>	Speed Dial 5:	<input type="text"/>
Speed Dial 6:	<input type="text"/>	Speed Dial 7:	<input type="text"/>
Speed Dial 8:	<input type="text"/>	Speed Dial 9:	<input type="text"/>

Supplementary Services

CW Setting:	<input type="text" value="yes"/>	Block CID Setting:	<input type="text" value="no"/>
Block ANC Setting:	<input type="text" value="no"/>	DND Setting:	<input type="text" value="no"/>
Secure Call Setting:	<input type="text" value="no"/>	Dial Assistance:	<input type="text" value="no"/>
Auto Answer Page:	<input type="text" value="yes"/>	Preferred Audio Device:	<input type="text" value="Speaker"/>
Send Audio To Speaker:	<input type="text" value="no"/>	Time Format:	<input type="text" value="12hr"/>
Date Format:	<input type="text" value="month/day"/>	Miss Call Shortcut:	<input type="text" value="yes"/>
Accept Media Loopback Request:	<input type="text" value="automatic"/>	Media Loopback Mode:	<input type="text" value="source"/>
Media Loopback Type:	<input type="text" value="media"/>		

Audio Volume

Ringer Volume:	<input type="text" value="0"/>	Speaker Volume:	<input type="text" value="8"/>
Handset Volume:	<input type="text" value="11"/>	Headset Volume:	<input type="text" value="10"/>
LCD Contrast:	<input type="text" value="8"/>	Back Light Timeout:	<input type="text" value="10 s"/>

Click **Submit Changes** when done.

相关信息

- [技术支持和文档 - Cisco Systems](#)