

# 插入并且去除一个网络模块(NetMod)在一个8000系列Firepower设备

## 目录

[简介](#)

[先决条件](#)

[开始使用前](#)

[需要的工具和硬件](#)

[删除模块或插槽盖](#)

[插入模块或插槽盖](#)

## 简介

而不是多数高端安全工具的通常固定端口配置，8000系列设备的模块化使您选择和更改接口的数量和类型设备的。多种网络模块(NetMods)插入到8000系列设备定制接口配置匹配您的网络要求。本文描述如何插入和删除在一个8000系列Firepower设备的NetMod。

**Caution:** 如果安装在一不兼容slot的NetMod在您的设备或NetMod与您的系统是否则不兼容的，错误或警告消息在管理防御中心的Web接口出现，当您尝试配置NetMod时。

## [先决条件](#)


### 开始使用前

在您开始前，使用以下指南，请准备插入或去除您的模块：

- 识别所有设备和模块零件。
- 识别您要安装您的NetMods的slot。
- 识别您的堆叠模块的正确slot。
- 确认EMI垫圈到位。
- 拔掉从设备的所有电源线。

**警告：** 您不能热交换模块。您必须关掉和从设备拔掉两条电源线在插入或删除模块前。

**Caution:** 请使用适当静电释放(ESD)实践例如佩带的腕带和使用ESD加工面，当处理模块时。存储在ESD袋子或方框的未使用模块防止损伤。

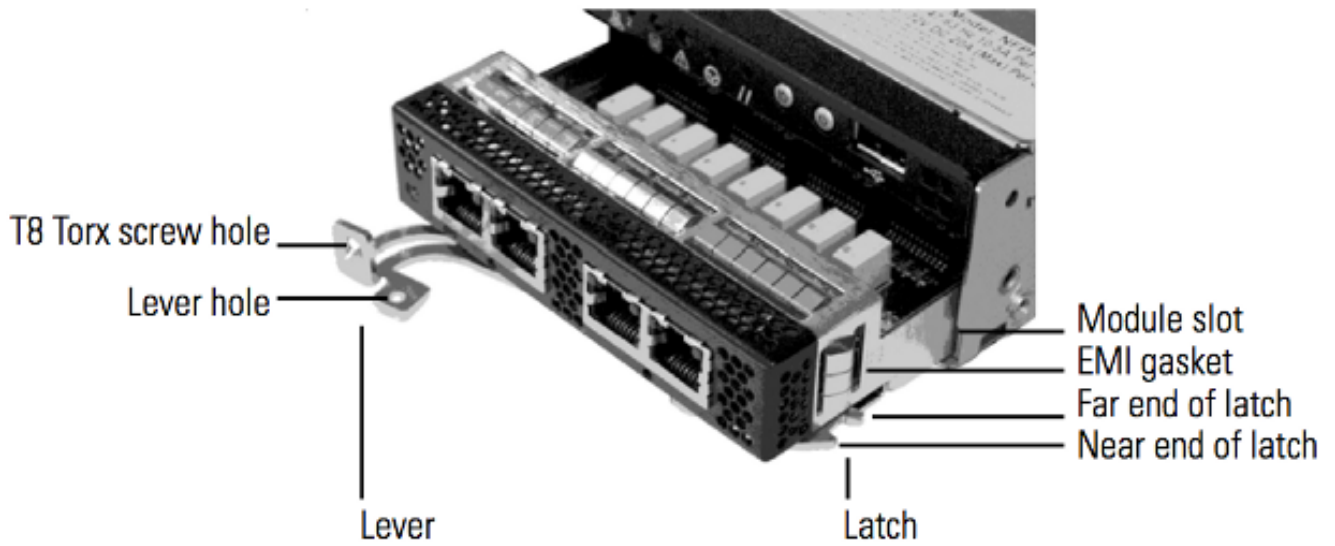


## 需要的工具和硬件


- T8 Torx螺丝起子
- 8000系列Firepower设备

## 删除模块或插槽盖


步骤 1：使用T8 Torx螺丝起子，去除并且保留从模块的杠杆的T8 Torx螺丝。

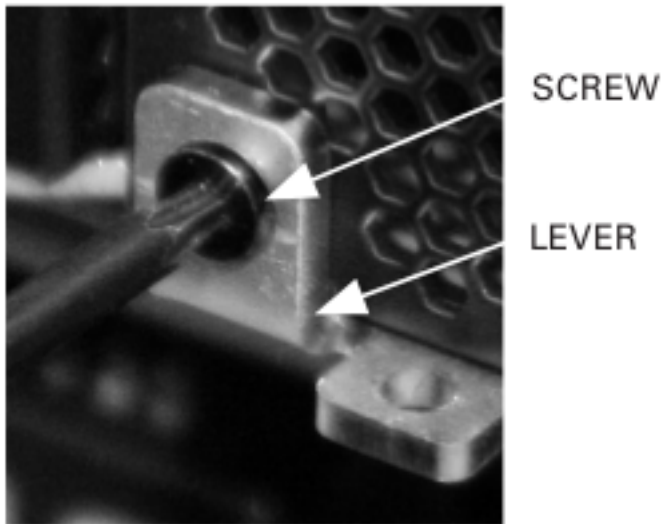

步骤 2：请求远离模块的杠杆发布门插销。

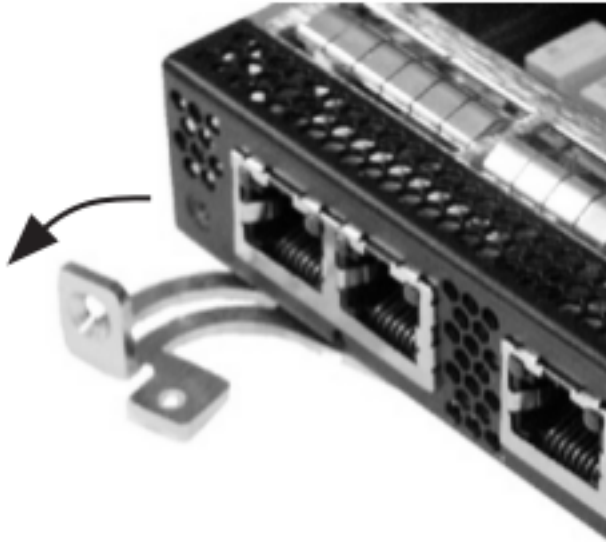


**步骤 3：**滑模块在slot外面。

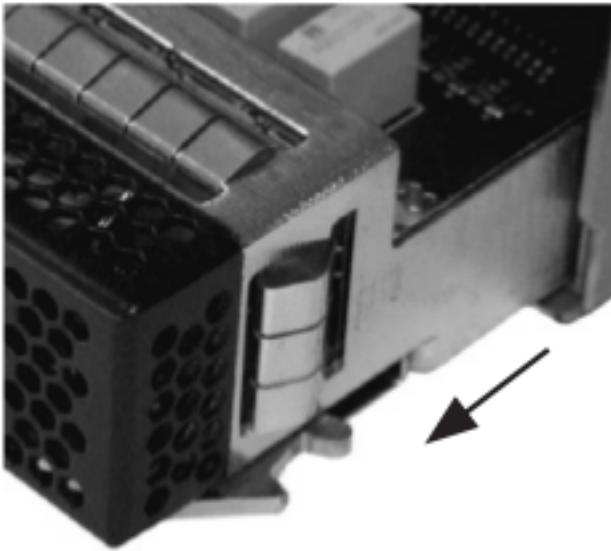


## 插入模块或插槽盖

**步骤 1：**使用T8 Torx螺丝起子，去除并且保留从模块的杠杆的T8 Torx螺丝。

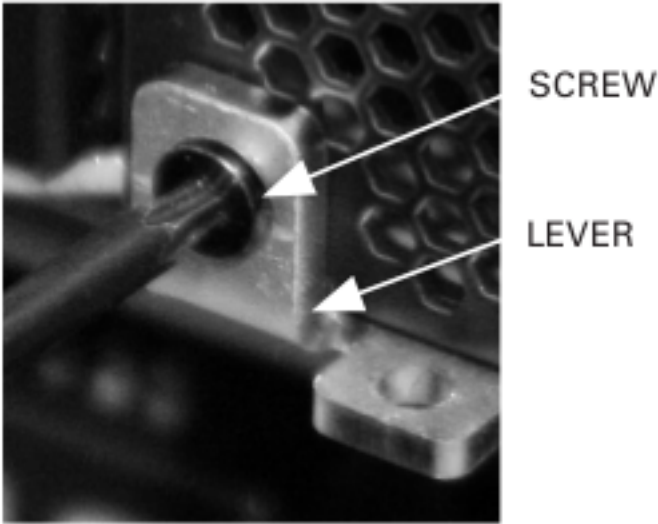


**步骤 2：** 请求远离模块的杠杆打开门插销。门插销的近端可视。门插销的远端是在模块里面。

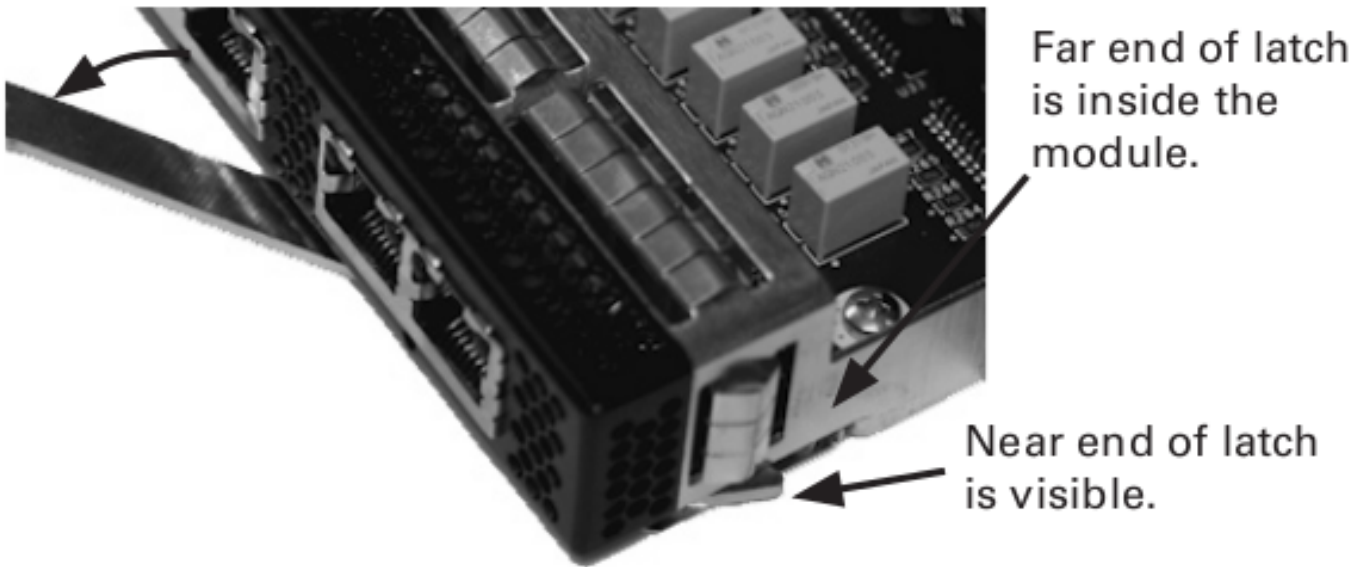

**步骤 3：** 请插入模块到slot，直到门插销的远端是在slot里面，并且门插销的近端涉及slot的外部。




Near end of latch is outside the slot.  
Far end of latch is inside the slot.

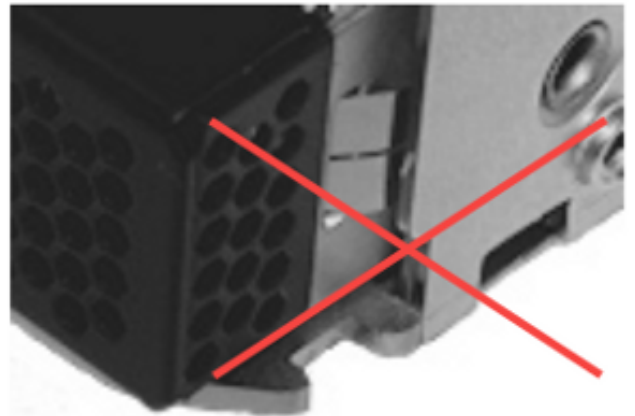

Far end of latch must not be outside the slot.


**步骤 4：** 推送杠杆朝模块，以便门插销从事并且拉模块到slot。

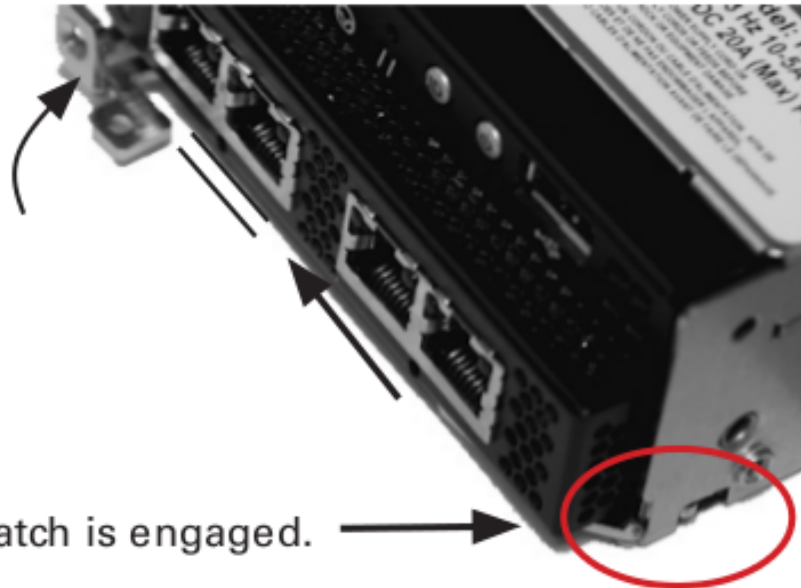

The latch is engaged.

Do NOT use excessive force. If the latch does not engage, remove and realign the module, then try again.

步骤 5：稳固地按在螺丝孔充分地推送杠杆模块获取门插销。

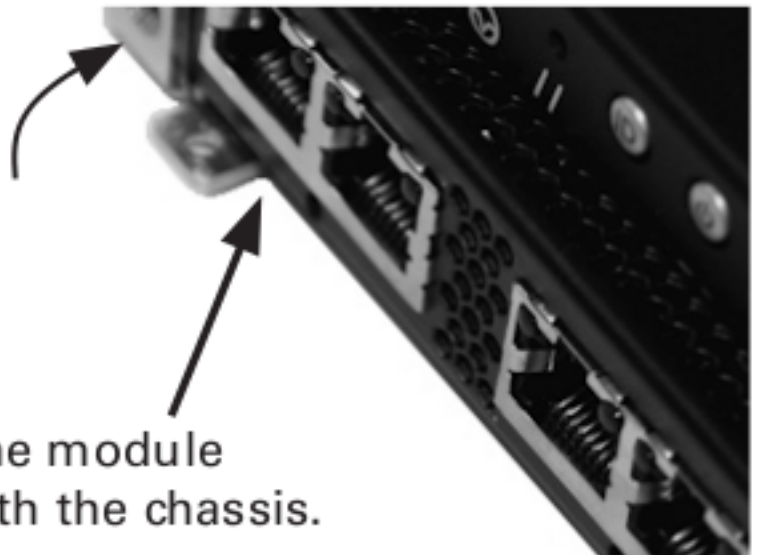

The lever is fully against the module and the module is flush with the chassis.

步骤 6：插入并且拧紧保留T8 Torx螺丝到杠杆。

