

认证署名请求(CSR)在RV320和RV325 VPN路由器

客观

要获得认证机关签字的认证，您需要创建认证署名请求(CSR)。目的将发送认证机关足够的信息创建认证，无需发送整个专用密钥或减弱任何敏感信息。CSR也包含在认证，例如，域名、现场信息等等将包括的信息。

本文解释如何配置在的认证署名请求RV32x VPN路由器系列。

可适用的设备


- RV320双倍广域网VPN路由器
- RV325千兆位双重广域网VPN路由器

软件版本


- v1.1.0.09

CSR授权

步骤1.登陆到Web配置工具并且选择**证书管理> CSR授权**。 *CSR Authorzation*页打开：



The screenshot shows the 'CSR Authorization' web page. It has a title bar 'CSR Authorization' and a sub-header 'CSR Authorization'. There are two main input areas: 'Certificate Signing Request:' with an empty text box and a 'Browse...' button, and 'My Certificate:' with a dropdown menu showing '01. Subject : 6c:20:56:c6:16:52'. At the bottom, there are 'Save' and 'Cancel' buttons.

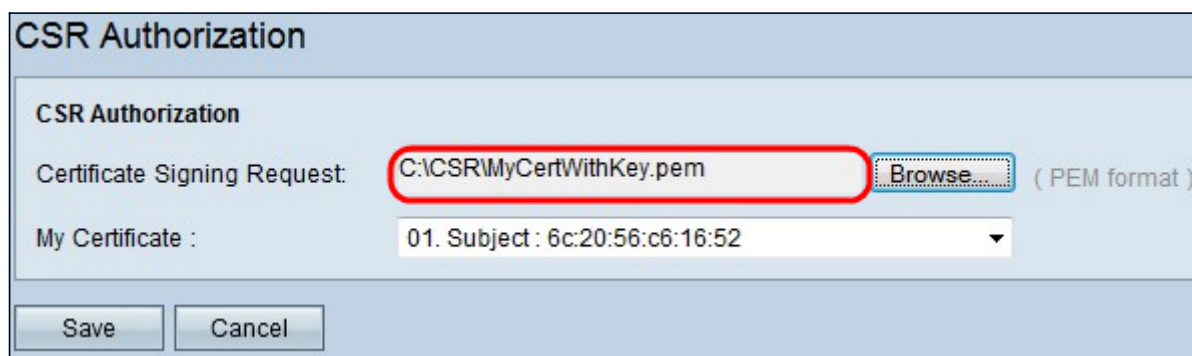

The screenshot shows the 'CSR Authorization' web page after the file path 'C:\CSR\MyCertWithKey.pem' has been entered into the 'Certificate Signing Request:' text box. The 'Browse...' button is still present. The 'My Certificate:' dropdown menu remains the same. The 'Save' and 'Cancel' buttons are at the bottom.

步骤2.点击**访问**找出从PC的认证署名请求认证。它应该以.pem格式。

步骤3.从下拉式我的认证选择认证核准认证署名请求。

步骤4.点击“**Save**”核准认证署名请求。