

在RV315W VPN路由器的用户管理

客观

用户管理页用于创建用户和更改用户的密码。

此条款分级显示如何通过RV315W路由器的用户管理功能添加用户。

可适用的设备

- RV315W

软件版本

- 1.01.03

用户管理配置

步骤1.登陆到Web配置工具并且选择**系统管理>用户管理**。用户管理页打开：

步骤2.输入用户名在用户名字段。

步骤3.输入用户的一个密码在密码字段。

Note:在密码字段右边的公尺表示选择的密码的力量。大写字母的联合的混合，小写字母和符号提供最严格的密码组合。

步骤4.重新输入密码在密码确认字段。

步骤5.点击**添加**为了安置配置文件在本地用户列表。确认窗口出现。


步骤6.点击OK键确定动作。

Note:权限字段指定与每个配置文件产生关联的帐户类型。管理员用户类型有全部存取到设备，并且能修改在设备的任何设置。普通用户有有限享用到设备，并且有设备设置的多数的只读权限。普通用户仍然访问他们的配置文件，并且能在任何时间编辑他们的帐户。

第7.步(可选)删除一个本地用户，检查用户配置文件的本地用户列表复选框去除，然后点击**删除**。确认窗口出现。

步骤8.点击OK键确定动作。

第9.步(可选)更改一个本地用户的密码，检查用户配置文件密码的本地用户列表复选框更改，然后点击**更改密码**。更改密码窗口出现。

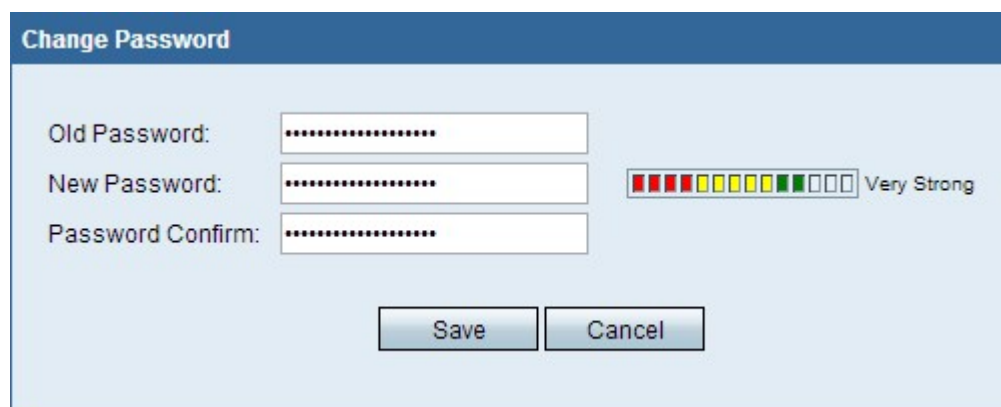

The image shows a 'Change Password' dialog box with a blue header. It contains three input fields: 'Old Password', 'New Password', and 'Password Confirm', each with a masked password (dots). To the right of the 'New Password' field is a password strength indicator consisting of 12 colored squares (3 red, 4 yellow, 3 green, 2 white) followed by the text 'Very Strong'. At the bottom, there are two buttons: 'Save' and 'Cancel'.

步骤10.编辑如期望的一样密码并且点击**“Save”**。