

# 目录

## 简介

[如何在 SPA-3102 上进行出站 PSTN 呼叫？](#)

[相关信息](#)

## 简介

本文是一系列协助设置、排错和维护Cisco小型企业产品文档中的一篇。

### Q. [如何在 SPA-3102 上进行出站 PSTN 呼叫？](#)


A.

#### 步骤 1：

访问 SPA-3102 基于网络的设置页。如需指导，请点击[这里](#)。


#### 步骤 2：

点击 Voice、Admin Login，然后点击 advanced。

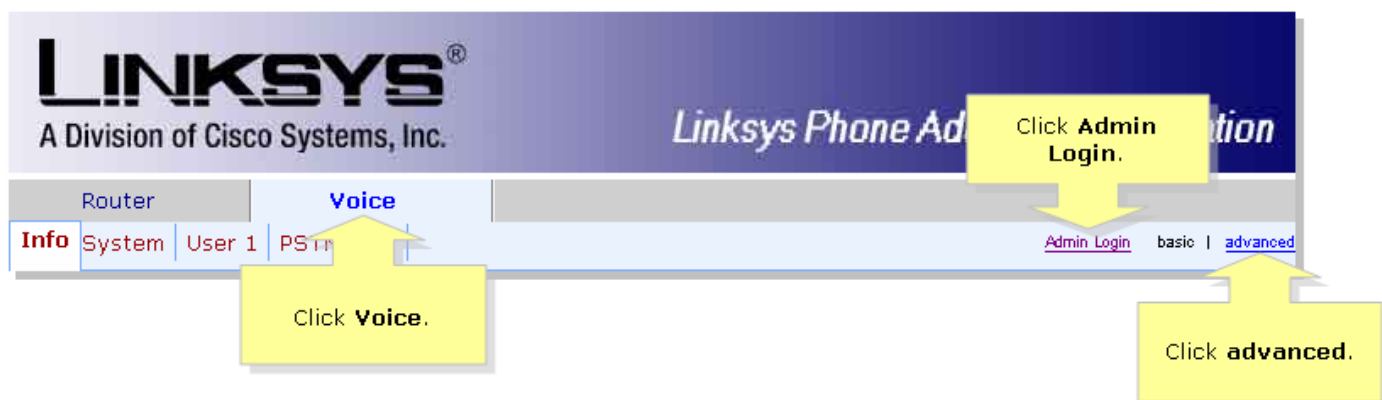

#### 步骤 3：

点击 Line 1 并查找 Proxy and Registration。

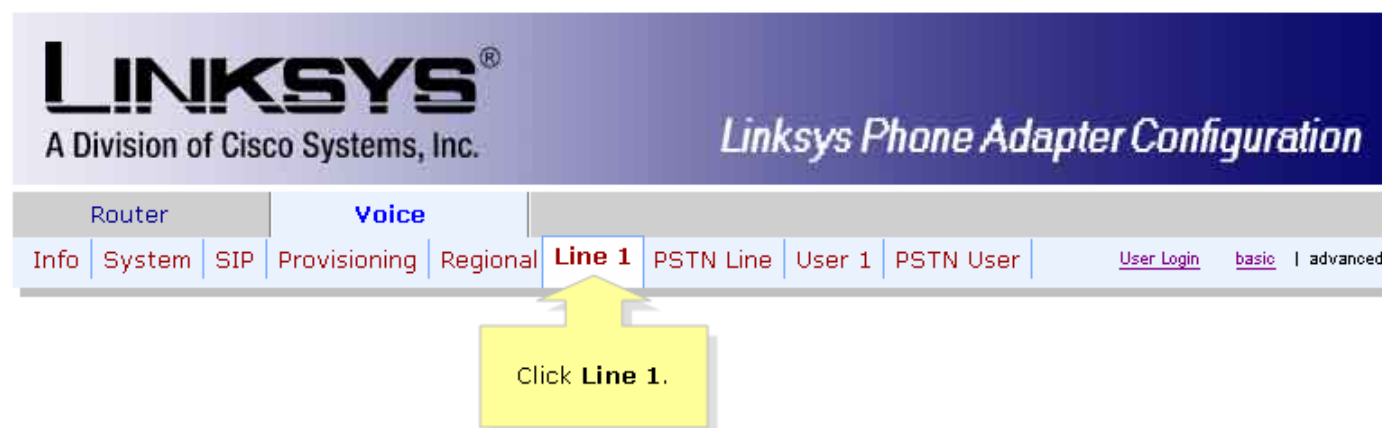

#### 步骤 4：

在 **Proxy** 下，在所提供的字段中输入 VOIP Proxy 设置。

**步骤 5：**

在 **Outbound Proxy** 下，在所提供的字段中输入 VOIP Outbound Proxy 设置。

**步骤 6：**

将 **Use Outbound Proxy** 设置为 **yes**。

**步骤 7：**

在 **Password** 下，在所提供的字段中输入用户密码。

**步骤 8：**

在 **User ID** 下，在所提供的字段中输入用户 ID。

The screenshot shows a configuration page with two main sections: "Proxy and Registration" and "Subscriber Information".

- Proxy and Registration:**
  - Proxy:** Input field with a callout: "Enter VOIP Proxy settings here."
  - Outbound Proxy:** Input field with a callout: "Enter VOIP Outbound Proxy settings here."
  - Register:** Dropdown menu set to "yes".
  - Use DNS SRV:** Input field.
  - Proxy Fallback Intvl:** Input field.
  - Voice Mail Server:** Input field.
  - Use Outbound Proxy:** Dropdown menu set to "yes". Callout: "Set Use Outbound Proxy to yes."
  - Use OB Proxy In Dialog:** Dropdown menu set to "yes".
  - Make Call Without Reg:** Dropdown menu set to "no".
  - Call Without Reg:** Dropdown menu set to "no".
  - SRV Auto Prefix:** Dropdown menu set to "no".
  - Redundancy Method:** Dropdown menu set to "Normal".
  - Box Subscribe Expires:** Input field with value "2147483647".
- Subscriber Information:**
  - Display Name:** Input field.
  - Password:** Input field. Callout: "Enter the subscriber password here."
  - Auth ID:** Input field.
  - Mini Certificate:** Input field.
  - SRTP Private Key:** Input field.
  - User ID:** Input field. Callout: "Enter User ID on this field."
  - Use Auth ID:** Dropdown menu set to "no".

**步骤 9：**

单击。

**步骤 10：**

点击 **PSTN Line**。

The screenshot shows the "Linksys Phone Adapter Configuration" page. The "Voice" tab is selected. In the navigation menu, the "PSTN Line" link is highlighted with a yellow callout box that says "Click PSTN Line." Other links in the menu include "Info", "System", "SIP", "Provisioning", "Regional", "Line 1", "User Login", "basic", and "advanced".

**步骤 11：**

在 **Proxy** 下，在所提供的字段中输入 VOIP Proxy 设置。

**步骤 12：**

在 **Outbound Proxy** 下，在所提供的字段中输入 VOIP Outbound Proxy 设置。

**步骤 13 :**

将 **Use Outbound Proxy** 设置为 **yes**。

**步骤 14 :**

在 **Password** 下，在所提供的字段中输入用户密码。

**步骤 15 :**

在 **User ID** 下，在所提供的字段中输入用户 ID。

The screenshot shows a configuration form with two main sections: "Proxy and Registration" and "Subscriber Information".

- Proxy and Registration:**
  - Proxy:** [Empty text field]
  - Outbound Proxy:** [Empty text field]
  - Register:** yes [dropdown]
  - Register Expires:** 3600 [text field]
  - Use DNS SRV:** [Empty text field]
  - Proxy Fallback Intvl:** 3 [text field]
  - Voice Mail Server:** [Empty text field]
  - Use Outbound Proxy:** yes [dropdown]
  - Use OB Proxy In Dialog:** yes [dropdown]
  - Make Call Without Reg:** no [dropdown]
  - Call Without Reg:** no [dropdown]
  - SRV Auto Prefix:** no [dropdown]
  - Redundancy Method:** Normal [dropdown]
  - Box Subscribe Expires:** 2147483647 [text field]
- Subscriber Information:**
  - Display Name:** [Empty text field]
  - Password:** [Empty text field]
  - Auth ID:** [Empty text field]
  - Mini Certificate:** [Empty text field]
  - SRTP Private Key:** [Empty text field]
  - User ID:** [Empty text field]
  - Use Auth ID:** no [dropdown]

Yellow callout boxes with arrows point to the following fields:

- "Enter VOIP Proxy settings here." points to the **Proxy** and **Outbound Proxy** fields.
- "Set Use Outbound Proxy to yes." points to the **Use Outbound Proxy** dropdown.
- "Enter VOIP Outbound Proxy settings here." points to the **Outbound Proxy** field.
- "Enter the subscriber password here." points to the **Password** field.
- "Enter User ID on this field." points to the **User ID** field.

**步骤 16 :**

单击。

**步骤 17 :**

点击 **Line 1** 并查找 **Dial Plan**。

**第 18 步 :**

将默认 **Dial Plan** 从“(\*xx|[3469]11|0|00|[2-9]xxxxxx|1xxx[2-9]xxxxxxS0|xxxxxxxxxxxxx.)”更改为“(xx.|<#9,:>xx.<:@gw0>”, 以便能够拨出 VOIP 号码和 #9，从而拨出用于出站呼叫的 PSTN 号码。

Enter  
"xx.|<#9,:>xx.<:@gw0>"  
on the **Dial Plan**.

<b>Dial Plan</b>	
Dial Plan:	<input type="text" value="(xx. &lt;#9,:&gt;xx.&lt;:@gw0&gt;"/>
Enable IP Dialing:	<input type="text" value="no"/>
Emergency Number:	<input type="text"/>
<b>FXS Port Polarity Configuration</b>	
Idle Polarity:	<input type="text" value="Forward"/>
Caller Conn Polarity:	<input type="text" value="Forward"/>
Callee Conn Polarity:	<input type="text" value="Forward"/>
<input type="button" value="Undo All Changes"/> <input type="button" value="Submit All Changes"/>	

## 相关信息

- [技术支持和文档 - Cisco Systems](#)