

Deploy the ASA Virtual Unlimited

- Overview, on page 1
- Licensing, on page 1
- Deploy the ASA Virtual Unlimited on KVM, on page 1
- Deploy the ASA Virtual Unlimited on VMware, on page 7

Overview

From ASA virtual version 9.22, ASA Virtual supports a new performance tier license - ASA Virtual Unlimited (ASAvU).

From ASA virtual version 9.22, you can use the ASAvU license for ASA Virtual deployments on KVM and VMware. ASAvU supports up to 32 vCPUs for deployments on KVM and VMware.

Licensing

ASA Virtual supports performance-tier licensing. From Version 9.22, a new performance tier license ASA Virtual Unlimited (ASAvU) is introduced. ASAvU supports deployments with up to 32 vCPUs and 64 GB memory on KVM and VMware. For more information about licensing and performance tiers, see the Smart Software Licensing chapter in the Cisco Secure Firewall ASA Series General Operations CLI Configuration Guide.

Table 1: ASA Virtual Unlimited License Entitlements

Performance Tier	Device Specifications (vCPU/RAM)	Supported platforms
ASAv - Unlimited (ASAvU)	32 vCPU/64 GB	KVM, VMware

Deploy the ASA Virtual Unlimited on KVM

From ASA virtual version 9.22, you can deploy ASA Virtual Unlimited (ASAvU) on KVM.

Prerequisites

Hardware Requirements

- Cisco UCS M7, M8 servers, or later.
- x86-based processors (64 cores per socket or higher recommended).
- 100 Gigabit Ethernet NICs - Intel E810 series or NVIDIA/Mellanox ConnectX-6 card.

CPU/Memory Requirements

32 vCPU/64 GB RAM

Guidelines and Limitations

Ensure that you read the generic guidelines and limitations for deploying ASA Virtual on KVM.

NUMA Optimization Guidelines for ASAvU

- Always enforce Single-NUMA placement. Cross-socket memory access introduces significant latency and throughput penalties.
- Ensure all vCPUs are pinned to a single physical NUMA node. Avoid vCPU/memory pinning across NUMA boundaries to maintain strict memory locality.

Prepare the Day-0 Configuration File

To prepare the Day-0 configuration file used during deployment, see the Prepare the Day-0 Configuration File section in the Deploy the ASA Virtual on KVM chapter.

Prepare the Virtual Bridge XML Files

You need to set up virtual networks that connect the ASA Virtual guests to the KVM host and that connect the guests to each other.

Note This procedure does not establish connectivity to the external world outside the KVM host.

Prepare the virtual bridge XML files on the KVM host. For the sample virtual network topology described in Prepare the Day 0 Configuration File, you need the following three virtual bridge files: virbr1.xml, virbr2.xml, and virbr3.xml (you must use these three filenames; for example, virbr0 is not allowed because it already exists). Each file has the information needed to set up the virtual bridges. You must give the virtual bridge a name and a unique MAC address. Providing an IP address is optional.

Procedure

Step 1 Create three virtual network bridge XML files. For example, virbr1.xml, virbr2.xml, and virbr3.xml:

Example:

```
<network>
<name>virbr1</name>
<bridge name='virbr1' stp='on' delay='0' />
<mac address='52:54:00:05:6e:00' />
<ip address='192.168.1.10' netmask='255.255.255.0' />
</network>
```

Example:

```
<network>
<name>virbr2</name>
<bridge name='virbr2' stp='on' delay='0' />
<mac address='52:54:00:05:6e:01' />
<ip address='10.1.1.10' netmask='255.255.255.0' />
</network>
```

Example:

```
<network>
<name>virbr3</name>
<bridge name='virbr3' stp='on' delay='0' />
<mac address='52:54:00:05:6e:02' />
<ip address='198.51.100.10' netmask='255.255.255.0' />
</network>
```

Step 2 Create a script that contains the following (in our example, we name the script virt_network_setup.sh):

```
virsh net-create virbr1.xml
virsh net-create virbr2.xml
virsh net-create virbr3.xml
```

Step 3 Run this script to set up the virtual network. The script brings up the virtual networks. The networks stay up as long as the KVM host is running.

```
stack@user-ubuntu:-/KvmAsa$ virt_network_setup.sh
```

Note If you reload the Linux host, you must rerun the virt_network_setup.sh script. It does not persist over reboots.

Step 4 Verify that the virtual networks were created:

```
stack@user-ubuntu:-/KvmAsa$ brctl show
bridge name bridge id STP enabled Interfaces
virbr0 8000.0000000000000 yes
virbr1 8000.5254000056eed yes virb1-nic
virbr2 8000.5254000056eee yes virb2-nic
virbr3 8000.5254000056eec yes virb3-nic
stack@user-ubuntu:-/KvmAsa$
```

Step 5 Display the IP address assigned to the virbr1 bridge. This is the IP address that you assigned in the XML file.

```
stack@user-ubuntu:-/KvmAsa$ ip address show virbr1
S: virbr1: <NO-CARRIER,BROADCAST,MULTICAST,UP> mtu 1500 qdisc noqueue state DOWN
link/ether 52:54:00:05:6e:00 brd ff:ff:ff:ff:ff:ff
inet 192.168.1.10/24 brd 192.168.1.255 scope global virbr1
valid_lft forever preferred_lft forever
```

Launch Using a Deployment Script

Use a virt-install based deployment script to launch the ASA Virtual.

Procedure

Step 1 Create a virt-install script called "virt_install_asav.sh."

The name of the ASA Virtual machine must be unique across all other VMs on this KVM host.

The ASA Virtual supports up to 10 networks. This example uses three networks. The order of the network bridge clauses is important. The first one listed is always the management interface of the ASA Virtual (Management 0/0), the second one listed is GigabitEthernet 0/0 of the ASA Virtual, and the third one listed is GigabitEthernet 0/1 of the ASA Virtual, and so on up through GigabitEthernet 0/8. The virtual NIC must be Virtio.

Example:

```
virt-install \
--connect=qemu:///system \
--network network=default,model=virtio \
--network network=default,model=virtio \
--network network=default,model=virtio \
--name=asav \
--cpu host \
--arch=x86_64 \
--machine=pc-1.0 \
--vcpus=1 \
--ram=2048 \
--os-type=linux \
--virt-type=kvm \
--import \
--disk path=<ASA_filepath/name>.qcow2,format=qcow2,device=disk,bus=virtio,cache=none \
--disk path=<day0_filepath/day0_filename>.iso,format=iso,device=cdrom \
--console pty,target_type=virtio \
--serial tcp,host=127.0.0.1:4554,mode=bind,protocol=telnet
```

Note From Secure Firewall ASA version 9.22, with the ASAvU license, you can enter 32 core (**vcpus** parameter in the example above) with 65536 MB (64 GB) RAM (**ram** parameter in the example above) to remove the rate limiter.

Step 2 Run the virt_install script:

Example:

```
stack@user-ubuntu:-/KvmAsa$ ./virt_install_asav.sh
```

```
Starting install...
Creating domain...
```

A window appears displaying the console of the VM. You can see that the VM is booting. It takes a few minutes for the VM to boot. Once the VM stops booting you can issue CLI commands from the console screen.

Launch Using a Graphical User Interface

There are several open-source options available to manage KVM virtual machines using a GUI. The following procedure uses virt-manager, also known as Virtual Machine Manager, to launch the ASA Virtual. virt-manager is a graphical tool for creating and managing guest virtual machines.

Note KVM can emulate a number different of CPU types. For your VM, you typically should select a processor type which closely matches the CPU of the host system, as it means that the host CPU features (also called CPU flags) will be available in your VMs. You should set the CPU type to **host** in which case the VM will have exactly the same CPU flags as your host system.

Procedure

Step 1 Start virt-manager **(Applications** > **System Tools** > **Virtual Machine Manager**).

You may be asked to select the hypervisor and/or enter your root password.

Step 2 Click the button in the top left corner to open the **New VM** wizard.

Step 3 Enter the virtual machine details:

a) For the operating system, select **Import existing disk image**.

This method allows you to import a disk image (containing a pre-installed, bootable operating system) to it.

b) Click **Forward** to continue.

Step 4 Load the disk image:

a) Click **Browse...** to select the image file.
b) Choose *Generic* for the **OS type**.
c) Click **Forward** to continue.

Step 5 Configure the memory and CPU options:

a) Set the **Memory (RAM)** parameter for your ASA Virtual platform size.
b) Set the corresponding **CPUs** parameter for the ASA Virtual platform size.
c) Click **Forward** to continue.

Step 6 Check the **Customize configuration before install** box, specify a **Name**, then click **Finish**.

Doing so opens another wizard that allows you to add, remove, and configure the virtual machine's hardware settings.

Step 7 Modify the CPU configuration:

From the left panel, select **Processor**, then select **Configuration** > **Copy host CPU configuration**.

This applies the physical host's CPU model and configuration to your VM.

Step 8 Configure the Virtual Disk:

a) From the left panel, select **Disk 1**.
b) Select **Advanced options**.
c) Set the **Disk bus** to *Virtio*.
d) Set the **Storage format** to *qcow2*.

Step 9 Configure a serial console:

a) From the left panel, select **Console**.
b) Select **Remove** to remove the default console.
c) Click **Add Hardware** to add a serial device.
d) For **Device Type**, select *TCP net console (tcp)*.
e) For **Mode**, select *Server mode (bind)*.
f) For **Host**, enter **0.0.0.0** for the IP address, then enter a unique **Port** number.
g) Check the **Use Telnet** box.
h) Configure device parameters.

Step 10 Configure a watchdog device to automatically trigger some action when the KVM guest hangs or crashes:

a) Click **Add Hardware** to add a watchdog device.
b) For **Model**, select *default*.
c) For **Action**, select *Forcefully reset the guest*.

Step 11 Configure network interfaces.

Click **Add Hardware** to add an interface, then choose **macvtap** or specify a shared device name (use a bridge name).

Interface mapping is as given below:

vnic0—Management interface

vnic1— Outside interface

vnic2—Inside interface

Step 12 If deploying using a Day 0 configuration file, create a virtual CD-ROM for the ISO:

a) Click **Add Hardware**.
b) Select **Storage**.
c) Click **Select managed or other existing storage** and browse to the location of the ISO file.
d) For **Device type**, select *IDE CDROM*.

Step 13 After configuring the virtual machine's hardware, click **Apply**.

Step 14 Click **Begin installation** for virt-manager to create the virtual machine with your specified hardware settings.

Note When launching the ASA Virtual in virt-manager, a graphical (SPICE) console opens by default. On some systems, this console may appear frozen or show only partial output during boot. However, the device continues to boot normally in the background.

To view the full console output, go to:

`View → Consoles → Console or Serial`

If a TCP serial console is configured, use telnet to access the console instead — output will not appear in virt-manager.

Deploy the ASA Virtual Unlimited on VMware

From ASA virtual version 9.22, you can deploy ASA Virtual Unlimited (ASAvU) on VMware.

Prerequisites

Hardware Requirements

- Cisco UCS M7, M8 servers, or later.
- x86-based processors (64 cores per socket or higher recommended).
- 100 Gigabit Ethernet NICs - Intel E810 series or NVIDIA/Mellanox ConnectX-6 card.

CPU/Memory Requirements

32 vCPU/64 GB RAM

Guidelines and Limitations

Ensure that you read the generic guidelines and limitations for deploying ASA Virtual on VMware.

NUMA Optimization Guidelines for ASAvU

- Always enforce Single-NUMA placement. Cross-socket memory access introduces significant latency and throughput penalties.
- Set "numa.autosize.vcpu.maxPerVirtualNode" to ≤ physical cores per socket. Exceeding this value forces the hypervisor to span sockets, degrading performance.

Unpack the ASA Virtual Software and Create a Day 0 Configuration File

You can prepare a Day 0 configuration file before you launch the ASA Virtual. This file is a text file that contains the ASA Virtual configuration to be applied when the ASA Virtual is launched. This initial

configuration is placed into a text file named “day0-config” in a working directory you chose, and is manipulated into a day0.iso file that is mounted and read on first boot. At the minimum, the Day 0 configuration file must contain commands to activate the management interface and set up the SSH server for public key authentication, but it can also contain a complete ASA configuration. A default day0.iso containing an empty day0-config is provided with the release. The day0.iso file (either your custom day0.iso or the default day0.iso) must be available during first boot.

Before you begin

We are using Linux in this example, but there are similar utilities for Windows.

- To automatically license the ASA Virtual during initial deployment, place the Smart Licensing Identity (ID) Token that you downloaded from the Cisco Smart Software Manager in a text file named ‘idtoken’ in the same directory as the Day 0 configuration file.
- If you want to access and configure the ASA Virtual from the serial port on the hypervisor instead of the virtual VGA console, you should include the **console serial** setting in the Day 0 configuration file to use the serial port on first boot.
- If you want to deploy the ASA Virtual in transparent mode, you must use a known running ASA config file in transparent mode as the Day 0 configuration file. This does not apply to a Day 0 configuration file for a routed firewall.
- See the OVF file guidelines in Guidelines and Limitations for additional information about how the ISO images are mounted on the ESXi hypervisor.

Procedure

Step 1 Download the ZIP file from Cisco.com, and save it to your local disk:

https://www.cisco.com/go/asa-software

Note A Cisco.com login and Cisco service contract are required.

Step 2 Unzip the file into a working directory. Do not remove any files from the directory. The following files are included:

- asav-vi.ovf—For vCenter deployments.
- asav-esxi.ovf—For non-vCenter deployments.
- boot.vmdk—Boot disk image.
- disk0.vmdk—ASA Virtual disk image.
- day0.iso—An ISO containing a day0-config file and optionally an idtoken file.
- asav-vi.mf—Manifest file for vCenter deployments.
- asav-esxi.mf—Manifest file for non-vCenter deployments.

Step 3 Enter the CLI configuration for the ASA Virtual in a text file called “day0-config.” Add interface configurations for the three interfaces and any other configuration you want.

The fist line should begin with the ASA version. The day0-config should be a valid ASA configuration. The best way to generate the day0-config is to copy the desired parts of a running config from an existing ASA or ASA Virtual. The order of the lines in the day0-config is important and should match the order seen in an existing **show running-config** command output.

We provide two examples of the day0-config file. The first example shows a day0-config when deploying an ASA Virtual with Gigabit Ethernet interfaces. The second example shows a day0-config when deploying an ASA Virtual with 10 Gigabit Ethernet interfaces. You would use this day0-config to deploy an ASA Virtual with SR-IOV interfaces; see Guidelines and Limitations.

Example:

```
console serial
interface Management0/0
nameif management
security-level 100
ip address 192.168.1.1 255.255.255.0
no shutdown
interface Gigabitethernet0/0
nameif inside
security-level 100
ip address 10.1.1.2 255.255.255.0
no shutdown
interface Gigabitethernet0/1
nameif outside
security-level 0
ip address 198.51.100.2 255.255.255.0
no shutdown
http server enable
http 192.168.1.0 255.255.255.0 management
crypto key generate rsa modulus 1024
username AdminUser password paSSw0rd
ssh 192.168.1.0 255.255.255.0 management
aaa authentication ssh console LOCAL
call-home
http-proxy 10.1.1.1 port 443
license smart
feature tier standard
throughput level 2G
```

Example:

```
ASA Version 9.8.1
!
console serial
interface Management 0/0
management-only
nameif management
security-level 0
ip address 192.168.0.230 255.255.255.0
!
interface Gigabitethernet0/0
nameif inside
security-level 100
ip address 10.10.10.10 255.255.255.0
ipv6 address 2001:10::1/64
!
interface Gigabitethernet0/1
nameif outside
security-level 0
```

```
ip address 10.10.20.10 255.255.255.0
ipv6 address 2001:20::1/64
!
route management 0.0.0.0 0.0.0.0 192.168.0.254
!
username cisco password cisco123 privilege 15
!
aaa authentication ssh console LOCAL
ssh 0.0.0.0 0.0.0.0 management
ssh timeout 60
ssh version 2
!
http 0.0.0.0 0.0.0.0 management
!
logging enable
logging timestamp
logging buffer-size 99999
logging buffered debugging
logging trap debugging
!
dns domain-lookup management
DNS server-group DefaultDNS
name-server 64.102.6.247
!
license smart
feature tier standard
throughput level 10G
!
crypto key generate rsa modulus 2048
```

Step 4 (Optional) Download the Smart License identity token file issued by the Cisco Smart Software Manager to your PC.

Step 5 (Optional) Copy the ID token from the download file and put it in a text file named ‘idtoken’ that only contains the ID token.

The Identity Token automatically registers the ASA Virtual with the Smart Licensing server.

Step 6 Generate the virtual CD-ROM by converting the text file to an ISO file:

Example:

```
stack@user-ubuntu:-/KvmAsa$ sudo genisoimage -r -o day0.iso day0-config idtoken
I: input-charset not specified, using utf-8 (detected in locale settings)
Total translation table size: 0
Total rockridge attributes bytes: 252
Total directory bytes: 0
Path table size (byptes): 10
Max brk space used 0
176 extents written (0 MB)
stack@user-ubuntu:-/KvmAsa$
```

Step 7 Compute a new SHA1 value on Linux for the day0.iso:

Example:

```
openssl dgst -sha1 day0.iso
SHA1(day0.iso)= e5bee36e1eb1a2b109311c59e2f1ec9f731ecb66 day0.iso
```

Step 8 Include the new checksum in the asav-vi.mf file in the working directory and replace the day0.iso SHA1 value with the newly generated one.

Example:

```
SHA1(asav-vi.ovf)= de0f1878b8f1260e379ef853db4e790c8e92f2b2
SHA1(disk0.vmdk)= 898b26891cc68fa0c94ebd91532fc450da418b02
```

```
SHA1(boot.vmdk)= 6b0000ddebfc38ccc99ac2d4d5dbfb8abfb3d9c4
SHA1(day0.iso)= e5bee36e1eb1a2b109311c59e2f1ec9f731ecb66
```

Step 9 Copy the day0.iso file into the directory where you unzipped the ZIP file. You will overwrite the default (empty) day0.iso file.

When any VM is deployed from this directory, the configuration inside the newly generated day0.iso is applied.

Access the vSphere Web Client and Install the Client Integration Plug-In

This section describes how to access the vSphere Web Client. This section also describes how to install the Client Integration Plug-In, which is required for ASA Virtual console access. Some Web Client features (including the plug-in) are not supported on the Macintosh. See the VMware website for complete client support information.

Procedure

Step 1 Launch the VMware vSphere Web Client from your browser:

https://*vCenter_server:port***/vsphere-client/**

By default, the port is 9443.

Step 2 (One time only) Install the Client Integration Plug-in so that you can access the ASA Virtual console.

a. In the login screen, download the plug-in by clicking **Download the Client Integration Plug-in**.

b. Close your browser and then install the plug-in using the installer.

c. After the plug-in installs, reconnect to the vSphere Web Client.

Step 3 Enter your username and password, and click **Login**, or check the **Use Windows session authentication** check box (Windows only).

Deploy the ASA Virtual Using the VMware vSphere Web Client

To deploy the ASA Virtual, use the VMware vSphere Web Client (or the vSphere Client) and a template file in the open virtualization format (OVF). You use the Deploy OVF Template wizard in the vSphere Web Client to deploy the Cisco package for the ASA Virtual. The wizard parses the ASA Virtual OVF file, creates the virtual machine on which you will run the ASA Virtual, and installs the package.

Most of the wizard steps are standard for VMware. For additional information about the Deploy OVF Template, see the VMware vSphere Web Client online help.

Before you begin

You must have at least one network configured in vSphere (for management) before you deploy the ASA Virtual.

Procedure

Step 1 Download the ASA Virtual ZIP file from Cisco.com, and save it to your PC:

http://www.cisco.com/go/asa-software

Note A Cisco.com login and Cisco service contract are required.

Step 2 In the vSphere Web Client **Navigator** pane, click **vCenter**.

Step 3 Click **Hosts and Clusters**.

Step 4 Right-click the data center, cluster, or host where you want to deploy the ASA Virtual, and choose **Deploy OVF Template**.
The **Deploy OVF Template** wizard appears.

Step 5 Follow the wizard screens as directed.

From Secure Firewall ASA version 9.22, on the **Configuration** window, you can choose **ASAvU - 32 Core / 64 GB** deployment configuration to remove the rate limiter. For more information on the ASAvU license, see Licensing for the ASA Virtual.

Step 6 In the **Setup networks** screen, map a network to each ASA Virtual interface that you want to use.

The networks may not be in alphabetical order. If it is too difficult to find your networks, you can change the networks later from the Edit Settings dialog box. After you deploy, right-click the ASA Virtual instance, and choose **Edit Settings** to access the **Edit Settings** dialog box. However that screen does not show the ASA Virtual interface IDs (only Network Adapter IDs). See the following concordance of Network Adapter IDs and ASA Virtual interface IDs:

Network Adapter ID	ASA Virtual Interface ID
Network Adapter 1	Management 0/0
Network Adapter 2	GigabitEthernet 0/0
Network Adapter 3	GigabitEthernet 0/1
Network Adapter 4	GigabitEthernet 0/2
Network Adapter 5	GigabitEthernet 0/3
Network Adapter 6	GigabitEthernet 0/4
Network Adapter 7	GigabitEthernet 0/5
Network Adapter 8	GigabitEthernet 0/6
Network Adapter 9	GigabitEthernet 0/7
Network Adapter 10	GigabitEthernet 0/8

You do not need to use all ASA Virtual interfaces; however, the vSphere Web Client requires you to assign a network to all interfaces. For interfaces you do not intend to use, you can simply leave the interface disabled within the ASA

Virtual configuration. After you deploy the ASA Virtual, you can optionally return to the vSphere Web Client to delete the extra interfaces from the Edit Settings dialog box. For more information, see the vSphere Web Client online help.



Note For failover/HA deployments, GigabitEthernet 0/8 is preconfigured as the failover interface.

Step 7 If your network uses an HTTP proxy for Internet access, you must configure the proxy address for smart licensing in the **Smart Call Home Settings** area. This proxy is also used for Smart Call Home in general.

Step 8 For failover/HA deployments, in the Customize template screen, configure the following:

- Specify the standby management IP address.

  When you configure your interfaces, you must specify an active IP address and a standby IP address on the same network. When the primary unit fails over, the secondary unit assumes the IP addresses and MAC addresses of the primary unit and begins passing traffic. The unit that is now in a standby state takes over the standby IP addresses and MAC addresses. Because network devices see no change in the MAC to IP address pairing, no ARP entries change or time out anywhere on the network.

- Configure the failover link settings in the **HA Connection Settings** area.

  The two units in a failover pair constantly communicate over a failover link to determine the operating status of each unit. GigabitEthernet 0/8 is preconfigured as the failover link. Enter the active and standby IP addresses for the link on the same network.

Step 9 Configure the OVF parameter **Enable Delayed Watchdog Timer** to increase the watchdog timer threshold to accommodate longer disk I/O response times.




Note This parameter helps to prevent false-positive watchdog triggers and unintended VM resets during temporary disk latency spikes. It is recommended to configure this parameter for deployments that are sensitive to storage-induced stalls or operating under variable I/O performance conditions. It is used particularly in environments using networked storage such as NFS.


Step 10 After you complete the wizard, the vSphere Web Client processes the VM; you can see the “Initialize OVF deployment” status in the **Global Information** area **Recent Tasks** pane.



When it is finished, you see the Deploy OVF Template completion status.

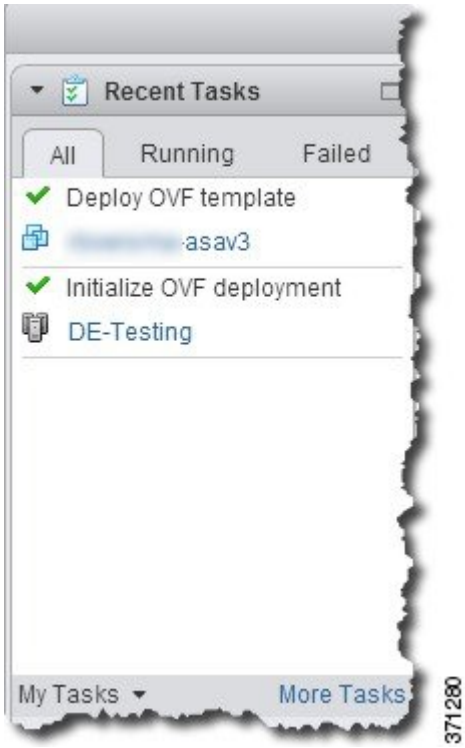

The ASA Virtual machine instance then appears under the specified data center in the Inventory.

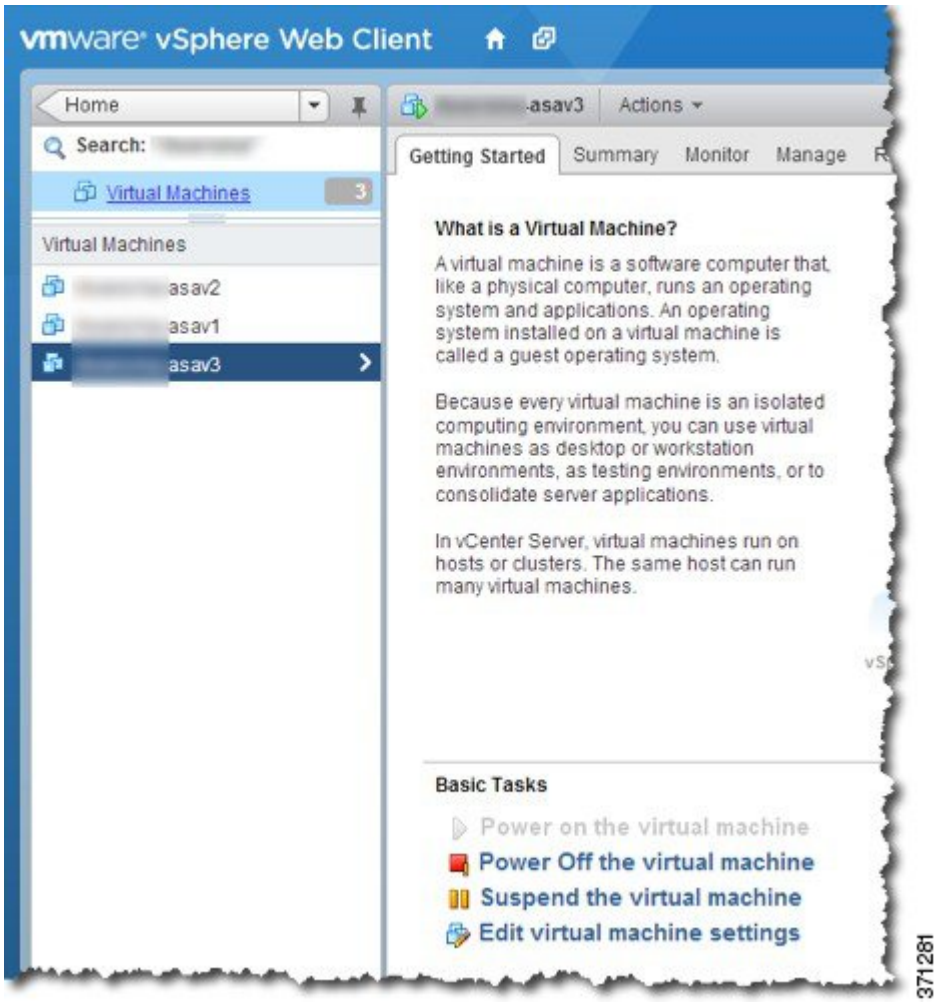

Step 11 If the ASA Virtual machine is not yet running, click **Power On the virtual machine**.

Wait for the ASA Virtual to boot up before you try to connect with ASDM or to the console. When the ASA Virtual starts up for the first time, it reads parameters provided through the OVF file and adds them to the ASA Virtual system configuration. It then automatically restarts the boot process until it is up and running. This double boot process only occurs when you first deploy the ASA Virtual. To view bootup messages, access the ASA Virtual console by clicking the **Console** tab.

Step 12 For failover/HA deployments, repeat this procedure to add the secondary unit. See the following guidelines:

- Set the same throughput level as the primary unit.
- Enter the *exact same IP address settings* as for the primary unit. The bootstrap configurations on both units are identical except for the parameter identifying a unit as primary or secondary.

What to do next

To successfully register the ASA Virtual with the Cisco Licensing Authority, the ASA Virtual requires Internet access. You might need to perform additional configuration after deployment to achieve Internet access and successful license registration.

Deploy the ASA Virtual Using the VMware vSphere Standalone Client and Day 0 Configuration

To deploy the ASA Virtual, use the VMware vSphere Client and the open virtualization format (OVF) template file (asav-vi.ovf for a vCenter deployment or asav-esxi.ovf for a non-vCenter deployment). You use the Deploy OVF Template wizard in the vSphere Client to deploy the Cisco package for the ASA Virtual. The wizard parses the ASA Virtual OVF file, creates the virtual machine on which you will run the ASA Virtual, and installs the package.

Most of the wizard steps are standard for VMware. For additional information about the Deploy OVF Template wizard, see the VMware vSphere Client online help.

Before you begin

- You must have at least one network configured in vSphere (for management) before you deploy the ASA Virtual.
- Follow the steps in Unpack the ASA Virtual Software and Create a Day 0 Configuration File to create the Day 0 configuration.

Procedure

Step 1 Launch the VMware vSphere Client and choose **File** > **Deploy OVF Template**.

The Deploy OVF Template wizard appears.

Step 2 Browse to the working directory where you unzipped the asav-vi.ovf file and select it.

Step 3 The OVF Template details are shown. Proceed through the following screens. You do not have to change any configuration if you choose to use a custom Day 0 configuration file.

Step 4 A summary of the deployment settings is shown in the last screen. Click **Finish** to deploy the VM.

Step 5 Power on the ASA Virtual, open the VMware console, and wait for the second boot.

Step 6 SSH to the ASA Virtual and complete your desired configuration. If you do not have all the configuration that you wanted in the Day 0 configuration file, open a VMware console and complete the necessary configuration.

The ASA Virtual is now fully operational.

Deploy the ASA Virtual Using the OVF Tool and Day 0 Configuration

This section describes how to deploy the ASA Virtual using the OVF tool, which requires a day 0 configuration file.

Before you begin

- The day0.iso file is required when you are deploying the ASA Virtual using the OVF tool. You can use the default empty day0.iso file provided in the ZIP file, or you can use a customized Day 0 configuration file that you generate. See Unpack the ASA Virtual Software and Create a Day 0 Configuration File for creating a Day 0 configuration file.
- Make sure the OVF tool is installed on a Linux or Windows PC and that it has connectivity to your target ESXi server.

Procedure

Step 1 Verify the OVF tool is installed:

Example:

```
linuxprompt# which ovftool
```

Step 2 Create a .cmd file with the desired deployment options:

Example:

```
linuxprompt# cat launch.cmd
ovftool \
--name="asav-941-demo" \
--powerOn \
--deploymentOption=4Core8GB \
--diskMode=thin \
--datastore=datastore1 \
--acceptAllEulas \
--net:Management0-0="Portgroup_Mgmt" \
--net:GigabitEthernet0-1="Portgroup_Inside" \
--net:GigabitEthernet0-0="Portgroup_Outside" \
--prop:HARole=Standalone \
--prop:guestinfo.day0.iso=/home/user/day0.iso \
asav-esxi.ovf \
vi://root@10.1.2.3/
```

Step 3 Execute the cmd file:

Example:

```
linuxprompt# ./launch.cmd
```

The ASA Virtual is powered on; wait for the second boot.

Step 4 SSH to the ASA Virtual to complete configuration as needed. If more configuration is required, open the VMware console to the ASA Virtual and apply the necessary configuration.

The ASA Virtual is now fully operational.