Cisco UCS Server BIOS Tokens, Release 6.0

First Published: 2025-09-02

Americas Headquarters
Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
http://www.cisco.com
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED “AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.

Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at www.cisco.com/go/offices.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: https://www.cisco.com/c/en/us/about/legal/trademarks.html. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2025 Cisco Systems, Inc. All rights reserved.

Preface

- Audience, on page iii
- Conventions, on page iii
- Related Cisco UCS Documentation, on page v
- Documentation Feedback, on page v

Audience

This guide is intended primarily for data center administrators with responsibilities and expertise in one or more of the following:

- Server administration
- Storage administration
- Network administration
- Network security

Conventions

Text Type	Indication
GUI elements	GUI elements such as tab titles, area names, and field labels appear in **this font**. Main titles such as window, dialog box, and wizard titles appear in **this font**.
Document titles	Document titles appear in *this font*.
TUI elements	In a Text-based User Interface, text the system displays appears in `this font`.
System output	Terminal sessions and information that the system displays appear in `this font`.
CLI commands	CLI command keywords appear in **this font**. Variables in a CLI command appear in *this font*.
[ ]	Elements in square brackets are optional.

Text Type	Indication
{x | y | z}	Required alternative keywords are grouped in braces and separated by vertical bars.
[x | y | z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
< >	Nonprinting characters such as passwords are in angle brackets.
[ ]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

Note Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the document.

Tip Means *the following information will help you solve a problem*. The tips information might not be troubleshooting or even an action, but could be useful information, similar to a Timesaver.

Timesaver Means *the described action saves time*. You can save time by performing the action described in the paragraph.

Caution Means *reader be careful*. In this situation, you might perform an action that could result in equipment damage or loss of data.

Warning IMPORTANT SAFETY INSTRUCTIONS

This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Use the statement number provided at the end of each warning to locate its translation in the translated safety warnings that accompanied this device.

SAVE THESE INSTRUCTIONS

Related Cisco UCS Documentation

Documentation Roadmaps

For a complete list of all B-Series documentation, see the *Cisco UCS B-Series Servers Documentation Roadmap* available at the following URL: https://www.cisco.com/c/en/us/td/docs/unified_computing/ucs/overview/guide/UCS_roadmap.html

For a complete list of all C-Series documentation, see the *Cisco UCS C-Series Servers Documentation Roadmapdoc roadmap* available at the following URL: https://www.cisco.com/c/en/us/td/docs/unified_computing/ucs/overview/guide/ucs_rack_roadmap.html.

For information on supported firmware versions and supported UCS Manager versions for the rack servers that are integrated with the UCS Manager for management, refer to Release Bundle Contents for Cisco UCS Software.

Documentation Feedback

To provide technical feedback on this document, or to report an error or omission, please send your comments to ucs-docfeedback@external.cisco.com. We appreciate your feedback.

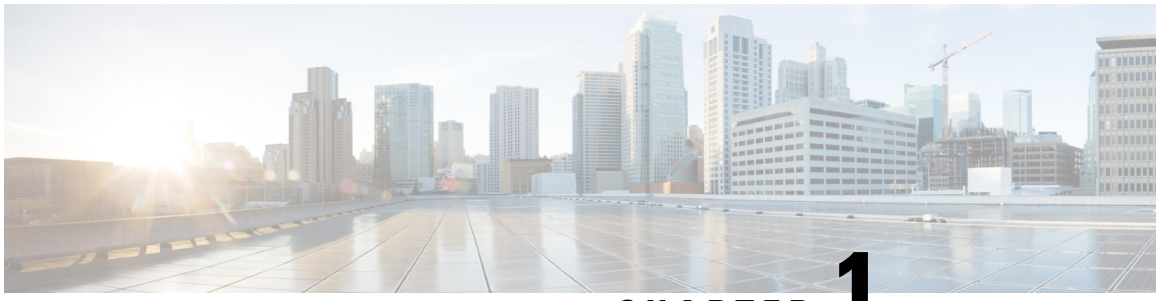

CHAPTER 1

UCS Server BIOS Tokens

- Server BIOS Tokens in Release 6.0(1b), on page 1

Server BIOS Tokens in Release 6.0(1b)

This document provides new and changed server BIOS token information in Cisco UCS Manager release, 6.0(1b). The servers supported in this release 6.0(1b) continue utilizing the BIOS tokens from the previous release and no new servers are added in this release.

For detailed information on server-specific tokens introduced in earlier versions, refer Cisco UCS Server BIOS Tokens, Release 4.3 and Cisco UCS Server BIOS Tokens, Release 4.2

Cisco UCS Manager supports the following servers in 6.0(1b):

- Cisco UCS X215c M8
- Cisco UCS X210c M8
- Cisco UCS X410c M7
- Cisco UCS X210c M7
- Cisco UCS X210c M6
- Cisco UCS C240 M8
- Cisco UCS C220 M8
- Cisco UCS C245 M8
- Cisco UCS C225 M8
- Cisco UCS C240 M7
- Cisco UCS C220 M7
- Cisco UCS C240 M6
- Cisco UCS C220 M6
- Cisco UCS C245 M6
- Cisco UCS C225 M6

- Cisco UCS B200 M6
- Cisco UCS B200 M5
- Cisco UCS B480 M5
- Cisco UCS C240 M5
- Cisco UCS C240 SD M5
- Cisco UCS C220 M5
- Cisco UCS C480 M5
- Cisco UCS C480 M5 ML
- Cisco UCS S3260 M5
- Cisco UCS C125 M5

New/Changed BIOS Tokens for 6.0(1b)

Name	Default Value	Supported Values	Servers/Platform	New/Changed
IIO eDPC Support	On Fatal and Non-Fatal Errors	Disabled, On Fatal Error, On Fatal and Non-Fatal Errors	X210c M8, X210c M7, X410c M7	New

Related Documentation

- Server BIOS Tokens, Release 4.3
- Server BIOS Tokens, Release 4.2
- Server BIOS Tokens, Release 4.1