# Multicast Support for MPLS VPNs Configuration Example

Document ID: 29220

#### **Contents**

Introduction

**Prerequisites** 

Requirements

Components Used

Conventions

**Background Information** 

**Configure** 

Network Diagram

Configurations

**Design Tips** 

Verify

**Troubleshoot** 

**Related Information** 

### Introduction

This document provides a sample configuration and general guidelines to configure multicast support for Multiprotocol Label Switching (MPLS) VPNs. This feature was introduced in Cisco IOS<sup>®</sup> Software Release 12.0(23)S and 12.2(13)T.

# **Prerequisites**

### Requirements

Before attempting this configuration, ensure that you meet these requirements:

• Service providers must have a multicast—enabled core in order to use the Cisco Multicast VPN feature.

### **Components Used**

The information in this document is based on Cisco IOS Software Release 12.2(13)T

**Note:** To obtain updated information about platform support for this feature, use the Software Advisor (registered customers only). The Software Advisor dynamically updates the list of supported platforms as new platform support is added for the feature.

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, make sure that you understand the potential impact of any command.

#### **Conventions**

For more information on document conventions, refer to Cisco Technical Tips Conventions.

# **Background Information**


For background information, refer to the Cisco IOS Software Release 12.2(13)T new feature documentation for IP Multicast Support for MPLS VPNs.

# Configure

In this section, you are presented with the information to configure the features described in this document.

### **Network Diagram**

This document uses the network setup shown in this diagram.

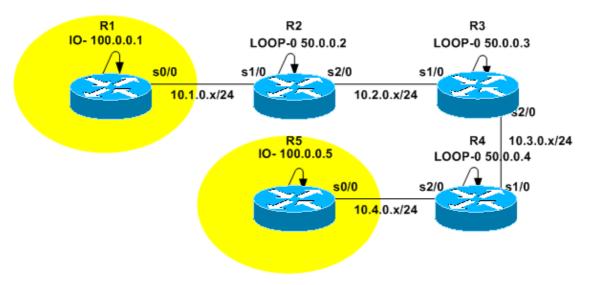

### **Configurations**

The network diagram represents a service provider's backbone. This consists of routers R2, R3, and R4. The backbone is configured to support MPLS VPN. R2 and R4 are Provider Edge (PE) routers while R3 is a Provider (P) router. R1 and R5 represent Customer Edge (CE) routers that belong to the same VPN Routing and Forwarding (VRF) instance, yellow.

In order to provide multicast services, the backbone must be configured to run multicast routing. The multicast protocol selected for this purpose is Protocol Independent Multicast (PIM), and R3 is configured as the Rendezvous Point (RP). R2 and R4 are also configured to run multicast routing into VRF yellow. PIM sparse—dense mode is configured as the multicast routing protocol between the PEs and the CEs. R2 has been configured to be the RP for VRF yellow.

In order to test the multicast connectivity, the s0/0 interface of R5 is configured to join multicast group 224.2.2.2. Pings are sent from R1's loopback address to 224.2.2.2. The Internet Control Message Protocol (ICMP) echo is a multicast packet, while the ICMP reply is a unicast packet since the IP destination address is the R1 loopback address.

The configurations presented in this document include these:

- R1-(CE)
- R2–(PE)
- R3-(P)
- R4–(PE)
- R5-(CE)

```
R1–(CE)
version 12.2
service timestamps debug datetime msec
service timestamps log datetime msec
no service password-encryption
hostname R1
clock timezone CET 1
ip subnet-zero
no ip domain lookup
ip multicast-routing
!--- Enable multicast routing.
interface Loopback0
ip address 100.0.0.1 255.255.255.255
interface Serial0/0
ip address 10.1.0.1 255.255.255.0
ip pim sparse-dense-mode
!--- PIM sparce-dense mode is used between the PE and CE.
!--- PIM sparce-dense mode is the multicast routing protocol.
router rip
version 2
network 10.0.0.0
network 100.0.0.0
no auto-summary
ip classless
no ip http server
ip pim bidir-enable
!
line con 0
exec-timeout 0 0
line aux 0
line vty 0 4
login
end
```

#### **R2-(PE)**

```
version 12.2
service timestamps debug datetime msec
service timestamps log datetime msec
```

```
no service password-encryption
hostname R2
clock timezone CET 1
ip subnet-zero
no ip domain lookup
ip vrf yellow
rd 2:200
route-target export 2:200
route-target import 2:200
mdt default 239.1.1.1
!--- Configure the default Multicast Distribution Tree (MDT)
!--- for VRF yellow.
mdt data 239.2.2.0 0.0.0.255 threshold 1
!--- Configure the range global addresses for
!--- data MDTs and the threshold.
ip multicast-routing
!--- Enable global multicast routing.
ip multicast-routing vrf yellow
!--- Enable multicast routing in VRF yellow.
ip cef
mpls label protocol ldp
tag-switching tdp router-id Loopback0
interface Loopback0
ip address 50.0.0.2 255.255.255.255
ip pim sparse-dense-mode
!--- Multicast needs to be enabled on loopback
!--- interface. This is used as a source
!--- for MPBGP sessions between PE routers that participate in MVPN.
interface Loopback100
ip vrf forwarding yellow
ip address 100.0.0.2 255.255.255.255
ip pim sparse-dense-mode
!--- This router needs to be RP for
!--- multicast in VRF yellow. Therefore, multicast
!--- needs to be enabled on the interface which is used as RP.
interface Serial1/0
ip vrf forwarding yellow
ip address 10.1.0.2 255.255.255.0
ip pim sparse-dense-mode
!--- Multicast is enabled on PE-CE interfaces in VRF.
```

```
interface Serial2/0
ip address 10.2.0.2 255.255.255.0
ip pim sparse-dense-mode
!--- Service provider core needs to run multicast
!--- to support MVPN services,
!--- so multicast is enabled on PE-P links.
tag-switching ip
router ospf 1
router-id 50.0.0.2
log-adjacency-changes
network 10.0.0.0 0.255.255.255 area 0
network 50.0.0.0 0.0.0.255 area 0
router rip
version 2
no auto-summary
address-family ipv4 vrf yellow
version 2
redistribute bgp 1
network 10.0.0.0
network 100.0.0.0
default-metric 5
no auto-summary
 exit-address-family
router bgp 1
no synchronization
no bgp default ipv4-unicast
bgp log-neighbor-changes
redistribute rip
neighbor 50.0.0.4 remote-as 1
neighbor 50.0.0.4 update-source Loopback0
neighbor 50.0.0.4 activate
neighbor 50.0.0.6 remote-as 1
neighbor 50.0.0.6 update-source Loopback0
neighbor 50.0.0.6 activate
no auto-summary
address-family ipv4 vrf yellow
redistribute connected
redistribute rip
no auto-summary
no synchronization
 exit-address-family
address-family vpnv4
neighbor 50.0.0.4 activate
neighbor 50.0.0.4 send-community extended
neighbor 50.0.0.6 activate
neighbor 50.0.0.6 send-community extended
no auto-summary
exit-address-family
ip classless
no ip http server
ip pim bidir-enable
ip pim vrf yellow send-rp-announce Loopback100 scope 100
ip pim vrf yellow send-rp-discovery Loopback100 scope 100
```

```
!--- Configure auto-RP. The R2's loopback
!--- 100 is the RP in VRF yellow.
!
!!!
line con 0
  exec-timeout 0 0
line aux 0
line vty 0 4
  login
!
end
```

#### R3-(P)

```
version 12.2
service timestamps debug datetime msec
service timestamps log datetime msec
no service password-encryption
hostname R3
clock timezone CET 1
ip subnet-zero
ip multicast-routing
!--- Enable global multicast routing.
ip cef
mpls label protocol ldp
tag-switching tdp router-id Loopback0
interface Loopback0
ip address 50.0.0.3 255.255.255.255
ip pim sparse-dense-mode
interface Serial1/0
ip address 10.2.0.3 255.255.255.0
ip pim sparse-dense-mode
!--- Enable multicast on links to PE routers
!--- which have MVPNs configured.
tag-switching ip
interface Serial2/0
ip address 10.3.0.3 255.255.255.0
ip pim sparse-dense-mode
tag-switching ip
router ospf 1
router-id 50.0.0.3
log-adjacency-changes
network 10.0.0.0 0.255.255.255 area 0
network 50.0.0.0 0.0.0.255 area 0
ip classless
```

```
no ip http server
ip pim bidir-enable
ip pim send-rp-announce LoopbackO scope 100
ip pim send-rp-discovery LoopbackO scope 100

!--- R3 is configured to announce itself as
!--- the RP through auto-RP.

!
!
!
!
line con 0
exec-timeout 0 0
line aux 0
line vty 0 4
login
!
end
```

#### **R4-(PE)**

```
version 12.2
service timestamps debug datetime msec
service timestamps log datetime msec
no service password-encryption
hostname R4
clock timezone CET 1
ip subnet-zero
no ip domain lookup
ip vrf yellow
rd 2:200
route-target export 2:200
route-target import 2:200
mdt default 239.1.1.1
!--- Configure the default MDT address.
mdt data 238.2.2.0 0.0.0.255 threshold 1
!--- Configure the data MDT range and threshold.
ip multicast-routing
!--- Enable global multicast routing.
ip multicast-routing vrf yellow
!--- Enable multicast routing in VRF yellow.
ip cef
mpls label protocol ldp
tag-switching tdp router-id Loopback0
interface Loopback0
ip address 50.0.0.4 255.255.255.255
ip pim sparse-dense-mode
```

```
interface Loopback100
ip vrf forwarding yellow
ip address 100.0.0.4 255.255.255.255
ip pim sparse-dense-mode
interface Serial1/0
ip address 10.3.0.4 255.255.255.0
ip pim sparse-dense-mode
tag-switching ip
interface Serial2/0
ip vrf forwarding yellow
ip address 10.4.0.4 255.255.255.0
ip pim sparse-dense-mode
!--- Enable the PIM toward the CE.
router ospf 1
router-id 50.0.0.4
log-adjacency-changes
network 10.0.0.0 0.255.255.255 area 0
network 50.0.0.0 0.0.0.255 area 0
router rip
version 2
no auto-summary
address-family ipv4 vrf yellow
 version 2
 redistribute bgp 1
network 10.0.0.0
network 100.0.0.0
default-metric 5
no auto-summary
exit-address-family
router bgp 1
no synchronization
no bgp default ipv4-unicast
bgp log-neighbor-changes
redistribute rip
neighbor 50.0.0.2 remote-as 1
neighbor 50.0.0.2 update-source Loopback0
neighbor 50.0.0.2 activate
no auto-summary
address-family ipv4 vrf yellow
redistribute connected
redistribute rip
no auto-summary
no synchronization
 exit-address-family
address-family vpnv4
neighbor 50.0.0.2 activate
neighbor 50.0.0.2 send-community extended
no auto-summary
exit-address-family
ip classless
no ip http server
ip pim bidir-enable
!
```

```
!
line con 0
exec-timeout 0 0
line aux 0
line vty 0 4
login
!
end
```

```
R5–(CE)
version 12.2
service timestamps debug datetime msec
service timestamps log datetime msec
no service password-encryption
hostname R5
clock timezone CET 1
ip subnet-zero
no ip domain lookup
ip multicast-routing
!--- Enable global multicast routing in the CE.
interface Loopback0
ip address 100.0.0.5 255.255.255.255
interface Serial0/0
ip address 10.4.0.5 255.255.255.0
ip pim sparse-dense-mode
ip igmp join-group 224.2.2.2
router rip
version 2
network 10.0.0.0
network 100.0.0.0
no auto-summary
ip classless
no ip http server
ip pim bidir-enable
line con 0
exec-timeout 0 0
line aux 0
line vty 0 4
login
```

# **Design Tips**

• Multicast for MPLS VPNs (MVPN) is configured on top of the VPN configuration. The MPLS VPN

network needs to be carefully designed, to observe all recommendations for MPLS VPN networks first

- The service provider core must be configured for native multicast service. The core must be configured for PIM Sparse mode (PIM–SM), Source specific multicast (PIM–SSM), or Bidirectional PIM (PIM–BIDIR). Dense mode PIM (PIM–DM) is not supported as core protocol in MVPN configurations. It is possible to configure a mix of supported protocols in the provider's core. This can be done when some multicast groups are handled by one PIM mode and some other groups are handled by another supported PIM mode.
- All multicast protocols are supported within multicast VRF. That is, within multicast VRF you can use MSDP and PIM–DM in addition to PIM–SSM, PIM–SSM and PIM–BIDIR
- The MVPN service can be added separately on a VRF-by-VRF basis. That is, one PE router may have both multicast-enabled VRFs and unicast-only VRFs configured.
- Not all sites of a single unicast VRF must be configured for multicast. It is possible to have some sites (and even interfaces of MVPN PE router) where multicast is not enabled. You must ensure that routes are never calculated to point to non-multicast enabled interfaces. Otherwise, multicast forwarding will be broken.
- More than one VRF can belong to the same MVPN multicast domain. IP addressing must be unique within a multicast domain. Leaking of routes and/or packets between multicast domains or into a global multicast routing table is currently not possible.
- An MDT default configuration is mandatory for MVPN to work. Configuring data MDT is optional. It is highly recommended to set the threshold for data MDT if you choose to configure one.
- The IP address of the default MDT determines which multicast domain VRF belongs to. Therefore, it is possible to have the same default MDT address for more than one VRF. However, they will share multicast packets between them and must observe other requirements on multicast domains (such as unique IP addressing scheme).
- Data MDT might or might not be configured with the same range of IP addresses on different PE routers. This depends on which PIM mode is used in a provider's core. If the service provider core is using Sparse mode PIM, then each PE router must use a unique range of IP addresses for Data MDT groups. If the service provider core is using Source—specific multicast, then all PE routers might be configured with the same range of IP addresses for Data MDT of each multicast domain.

# Verify

This section provides information you can use to confirm your configuration is working properly.

Certain **show** commands are supported by the Output Interpreter Tool (registered customers only), which allows you to view an analysis of **show** command output.

- **show ip igmp groups** Displays the multicast groups with receivers that are directly connected to the router and that were learned through Internet Group Management Protocol (IGMP).
- **show ip pim mdt bgp** Displays detailed Border Gateway Protocol (BGP) advertisement of the Route Distinguisher (RD) for the MDT default group.
- **show ip pim vrf** <*vrf-name*> **mdt send** Displays the data MDT advertisements that the router has made in the specified VRF.
- **show ip pim vrf** <*vrf*-*name*> **mdt receive** Displays the data MDT advertisements received by the router in the specified VRF.
- show ip mroute Displays the contents of the IP multicast routing table in the provider's core.
- **show ip mroute vrf** <*vrf*-name> Displays the multicast routing table in the client's VRF.

Complete these steps to verify that your configuration is working properly.

1. Check that the PEs have joined the IGMP group for the default MDT tunnel.

If it is configured after the **default-mdt** command is issued under the VRF configuration, the PE might fail to join the default MDT group. Once the loopback is configured, remove the **mdt** command from the VRF and put it back to solve the problem.

♦ For PE–R2, issue the **show ip igmp groups** command.

```
IGMP Connected Group Membership
Group Address Interface Uptime Expires Last Reporter
224.0.1.40 Serial2/0 02:21:23 stopped 10.2.0.2
239.1.1.1 Loopback0 02:36:59 stopped 0.0.0.0
```

♦ For PE–R4, issue the **show ip igmp groups** command.

```
IGMP Connected Group Membership

Group Address Interface Uptime Expires Last Reporter 224.0.1.40 Loopback0 02:51:48 00:02:39 50.0.0.4 239.1.1.2 Loopback0 02:51:45 stopped 0.0.0.0 239.1.1.1 Loopback0 02:51:45 stopped 0.0.0.0 239.2.2.0 Loopback0 01:40:03 stopped 0.0.0.0
```

2. Check the BGP advertisement received for each PE.

Note: For this example, check the MDTs sourced from the peer PEs PE-R2 and PE-R4.

◆ For PE–R2, issue the **show ip pim mdt bgp** command.

```
MDT-default group 239.1.1.1
rid: 50.0.0.4 next_hop: 50.0.0.4

WAVL tree nodes

MDT-default: 239.1.1.1 Tunnel0 source-interface: Loopback0
```

♦ For PE-R4 issue the **show ip pim mdt bgp** command

```
MDT-default group 239.1.1.1
rid: 50.0.0.2 next_hop: 50.0.0.2

WAVL tree nodes

MDT-default: 239.1.1.1 Tunnel0 source-interface: Loopback0
MDT-data : 239.2.2.0 Tunnel0 source-interface: Loopback0
```

3. Check the data MDTs.

Note: For this example, check the data MDT sourced or joined by PE-R2 and PE-R4.

♦ For PE–R2, issue the **show ip pim vrf yellow mdt send** command.

```
MDT-data send list for VRF: yellow (source, group) MDT-data group ref_count (100.0.0.1, 224.2.2.2) 239.2.2.0 1
```

♦ For PE–R2, issue the **show ip pim vrf yellow mdt receive** command.

```
Flags: D - Dense, S - Sparse, B - Bidir Group, s - SSM Group, C - Connected,
        L - Local, P - Pruned, R - RP-bit set, F - Register flag,
        T - SPT-bit set, J - Join SPT, M - MSDP created entry,
        X - Proxy Join Timer Running, A - Candidate MSDP Advertisement,
        U - URD, I - Received Source Specific Host Report, Z - Multicast Tunne
        Y - Joined MDT-data group, y - Sending to MDT-data group

Joined MDT-data groups for VRF: yellow
    group: 239.2.2.0 source: 0.0.0.0 ref_count: 1
```

♦ Check the global multicast routing table for the default MDT.

**Note:** Notice this information:

- a. The outgoing interface list is MVRF yellow on the PEs.
- b. The P router sees the group as a regular Multicast group.
- c. Each PE is a source for the default MDT, and is only in the PE routers.

Flags: D - Dense, S - Sparse, B - Bidir Group, s - SSM Group, C - Connected,

- d. A new flag, Z, indicates this is a multicast tunnel.
- ♦ For PE–R2, issue the **show ip mroute 239.1.1.1** command.

IP Multicast Routing Table

```
L - Local, P - Pruned, R - RP-bit set, F - Register flag,
               T - SPT-bit set, J - Join SPT, M - MSDP created entry,
               X - Proxy Join Timer Running, A - Candidate MSDP Advertisement,
               U - URD, I - Received Source Specific Host Report, Z - Multicast Tunne
               Y - Joined MDT-data group, y - Sending to MDT-data group
        Outgoing interface flags: H - Hardware switched
         Timers: Uptime/Expires
         Interface state: Interface, Next-Hop or VCD, State/Mode
        (*, 239.1.1.1), 02:37:16/stopped, RP 50.0.0.3, flags: SJCFZ
          Incoming interface: Serial2/0, RPF nbr 10.2.0.3
          Outgoing interface list:
            MVRF yellow, Forward/Sparse-Dense, 02:21:26/00:00:28
        (50.0.0.2, 239.1.1.1), 02:37:12/00:03:29, flags: FTZ
          Incoming interface: Loopback0, RPF nbr 0.0.0.0
          Outgoing interface list:
            Serial2/0, Forward/Sparse-Dense, 02:36:09/00:02:33
        50.0.0.4, 239.1.1.1), 02:36:02/00:02:59, flags: JTZ
          Incoming interface: Serial2/0, RPF nbr 10.2.0.3
          Outgoing interface list:
            MVRF yellow, Forward/Sparse-Dense, 02:21:26/00:00:28
♦ For P-R3, issue the show ip mroute 239.1.1.1 command.
        IP Multicast Routing Table
        Flags: D - Dense, S - Sparse, B - Bidir Group, s - SSM Group, C - Connected,
               L - Local, P - Pruned, R - RP-bit set, F - Register flag,
               T - SPT-bit set, J - Join SPT, M - MSDP created entry,
               X - Proxy Join Timer Running, A - Candidate MSDP Advertisement,
               U - URD, I - Received Source Specific Host Report, Z - Multicast Tunne
               Y - Joined MDT-data group, y - Sending to MDT-data group
        Outgoing interface flags: H - Hardware switched
         Timers: Uptime/Expires
         Interface state: Interface, Next-Hop or VCD, State/Mode
        (*, 239.1.1.1), 02:50:24/stopped, RP 50.0.0.3, flags: S
          Incoming interface: Null, RPF nbr 0.0.0.0
          Outgoing interface list:
            Serial1/0, Forward/Sparse-Dense, 02:34:41/00:03:16
            Serial2/0, Forward/Sparse-Dense, 02:49:24/00:02:37
        (50.0.0.2, 239.1.1.1), 02:49:56/00:03:23, flags: T
          Incoming interface: Serial1/0, RPF nbr 10.2.0.2
          Outgoing interface list:
            Serial2/0, Forward/Sparse-Dense, 02:49:24/00:02:37
        (50.0.0.4, 239.1.1.1), 02:49:47/00:03:23, flags: T
          Incoming interface: Serial2/0, RPF nbr 10.3.0.4
          Outgoing interface list:
            Serial1/0, Forward/Sparse-Dense, 02:34:41/00:03:16
♦ For PE–R4, issue the show ip mroute 239.1.1.1 command.
```

```
Flags: D - Dense, S - Sparse, B - Bidir Group, s - SSM Group, C - Connected,
      L - Local, P - Pruned, R - RP-bit set, F - Register flag,
      T - SPT-bit set, J - Join SPT, M - MSDP created entry,
      X - Proxy Join Timer Running, A - Candidate MSDP Advertisement,
       U - URD, I - Received Source Specific Host Report, Z - Multicast Tunne
       Y - Joined MDT-data group, y - Sending to MDT-data group
Outgoing interface flags: H - Hardware switched
Timers: Uptime/Expires
Interface state: Interface, Next-Hop or VCD, State/Mode
(*, 239.1.1.1), 02:51:06/stopped, RP 50.0.0.3, flags: SJCFZ
 Incoming interface: Serial1/0, RPF nbr 10.3.0.3
 Outgoing interface list:
   MVRF yellow, Forward/Sparse-Dense, 02:51:06/00:00:48
(50.0.0.2, 239.1.1.1), 02:50:06/00:02:58, flags: JTZ
  Incoming interface: Serial1/0, RPF nbr 10.3.0.3
  Outgoing interface list:
   MVRF yellow, Forward/Sparse-Dense, 02:50:06/00:00:48
(50.0.0.4, 239.1.1.1), 02:51:00/00:03:10, flags: FTZ
  Incoming interface: Loopback0, RPF nbr 0.0.0.0
  Outgoing interface list:
    Serial1/0, Forward/Sparse-Dense, 02:35:24/00:03:00
```

4. Check the global multicast routing table for data MDTs.

**Note:** For PE–R2, notice that the outgoing interface is tunnel0.

◆ For PE-R2, where the source is located (VRF side), issue the **show ip mroute vrf yellow** 224.2.2.2 command.

```
IP Multicast Routing Table
Flags: D - Dense, S - Sparse, B - Bidir Group, s - SSM Group, C - Connected,
      L - Local, P - Pruned, R - RP-bit set, F - Register flag,
      T - SPT-bit set, J - Join SPT, M - MSDP created entry,
      X - Proxy Join Timer Running, A - Candidate MSDP Advertisement,
      U - URD, I - Received Source Specific Host Report, Z - Multicast Tunne
      Y - Joined MDT-data group, y - Sending to MDT-data group
Outgoing interface flags: H - Hardware switched
Timers: Uptime/Expires
Interface state: Interface, Next-Hop or VCD, State/Mode
(*, 224.2.2.2), 2d01h/stopped, RP 100.0.0.2, flags: S
 Incoming interface: Null, RPF nbr 0.0.0.0
 Outgoing interface list:
    Tunnel0, Forward/Sparse-Dense, 2d01h/00:02:34
(100.0.0.1, 224.2.2.2), 00:05:32/00:03:26, flags: Ty
  Incoming interface: Serial1/0, RPF nbr 10.1.0.1
  Outgoing interface list:
    Tunnel0, Forward/Sparse-Dense, 00:05:37/00:02:34
```

◆ For PE-R2, where the source is located (global multicast route), issue the **show ip mroute** 239.2.2.0 command.

```
IP Multicast Routing Table
Flags: D - Dense, S - Sparse, B - Bidir Group, s - SSM Group, C - Connected,
        L - Local, P - Pruned, R - RP-bit set, F - Register flag,
        T - SPT-bit set, J - Join SPT, M - MSDP created entry,
        X - Proxy Join Timer Running, A - Candidate MSDP Advertisement,
        U - URD, I - Received Source Specific Host Report, Z - Multicast Tunne
        Y - Joined MDT-data group, y - Sending to MDT-data group
Outgoing interface flags: H - Hardware switched
        Timers: Uptime/Expires
Interface state: Interface, Next-Hop or VCD, State/Mode
```

```
(*, 239.2.2.0), 02:13:27/stopped, RP 50.0.0.3, flags: SJPFZ
Incoming interface: Serial2/0, RPF nbr 10.2.0.3
Outgoing interface list: Null

(50.0.0.2, 239.2.2.0), 02:13:27/00:03:22, flags: FTZ
Incoming interface: Loopback0, RPF nbr 0.0.0.0
Outgoing interface list:
    Serial2/0, Forward/Sparse-Dense, 02:13:27/00:03:26
```

**Note:** Only the PE router with has the multicast source attached to it appears as the source for multicast traffic of data MDT group address.

### **Troubleshoot**

- Issue the **show ip pim vrf neighbor** command to check that PE routers established a PIM neighbor relationship through the dynamic Tunnel interface. If they did, then Default MDT operates properly.
- If Default MDT does not function, issue the **show ip pim mdt bgp** command to check that loopbacks of remote PE routers participating in MVPN are known by the local router. If they are not, verify that PIM is enabled on loopback interfaces used as a source of MP BGP sessions
- Check that the SP core is properly configured to deliver multicast between PE routers. For test purposes you might configure **ip igmp join–group** on the loopback interface of one PE router and do multicast **ping** sourced from the loopback of another PE router.

### **Related Information**

- MPLS VPN New Feature Documentation
- MPLS Support Page
- IP Multicast Support Page
- Technical Support Cisco Systems

Contacts & Feedback | Help | Site Map © 2014 – 2015 Cisco Systems, Inc. All rights reserved. Terms & Conditions | Privacy Statement | Cookie Policy | Trademarks of Cisco Systems, Inc.

Updated: Aug 10, 2005 Document ID: 29220