

Table-Based Video and VPME Encryption

Table-based video is a configuration mode for video sessions. This feature statically maps UDP flows into appropriate RF QAM channels. Each UDP flow is identified by the destination IP address of the MPEG traffic and UDP port number. The configuration contains the input port number, which is resolved into a unique destination IP address, the UDP port, and an output program number.

The Video on Demand (VOD) Privacy Mode Encryption (PME) enables the Cisco Edge QAM Manager (CEM) to encrypt the VOD content streamed through Motorola/Arris VOD systems. PME encryption is applicable for table-based sessions.

Contents

- Overview of VPME, on page 1
- How to Configure Table-Based Video Session, on page 2
- How to Configure VPME Encryption, on page 12
- Configuration Examples For VPME Encryption, on page 14
- Feature Information for Table-Based Video and VPME Encryption , on page 16

Overview of VPME

The PME Video On Demand system integrates the encrypted VOD content within an Arris digital cable headend. A VOD system provides the clear content while the Cisco cBR-8 and CEM are added to provide encryption. The details on the usage of the CEM are described in this chapter. Every MSO site should have the CEM application, which is the single entity connecting to the Arris Encryption Renewal System (ERS). All the Cisco cBR-8s on this MSO site should connect to this CEM.

Prerequisites for VPME

To enable VPME encryption, the connection to the CEM should be configured. VPME is a licensed feature and requires appropriate license on the chassis. The following connection should be configured:

- The video traffic flow on the Ten Gigabit interface.
- Table-based video sessions.
- QAM PHY parameters for the physical QAM channel.

Restrictions for VPME

You can configure the line card in only one mode as the table-based session configuration and dynamic GQI-based sessions are mutually exclusive. Hence, PME and PowerKey encryption are also mutually exclusive modes at the line card level. For more details, see Configuring the Encryption Type on the Line Card section.

How to Configure Table-Based Video Session

- Configuring Table-Based Video
- Verifying Table-Based Video Configuration
- Configuring CEM Connectivity for PME Encryption
- Verifying CEM Connectivity

Configuring Table-Based Video

Before You Begin

Before configuring table-based sessions, you must configure the physical and virtual constructs for Cisco cBR-8. You must also configure the Logical Edge Device (LED), Service Distribution Group (SDG), binding and Virtual Carrier Group (VCG).

The following is an example for LED configuration. In this example, assumes that the video traffic is routed via the input ports of Virtual Edge Input (VEI).

```
logical-edge-device pme_tbv id 1
protocol table-based
virtual-edge-input-ip 172.16.0.1 input-port-number 1
vcg pme_tbv
active
```

In the above example, protocol table-based indicates that this LED supports table-based sessions.

For more information, see the How to Configure the Logical Edge Devices section. For details related to D6 protocol, see the How to Configure the D6 Discovery Protocol section.

Configuring Table-Based Session : VEI Input Port-Based

To configure the table-based session based on Virtual Edge Input (VEI), complete the following procedure:

```
configure terminal
cable video
table-based
vcg vcg-name
rf-channel n-m
session name {input-port number | bundle-id number} start-udp-port number
num-sessions-per-qam number processing-type {program | data } start-program
number [repeat] jitter ms [cbr | vbr ]
exit
```

The **table-based** keyword is the root keyword. The entire table-based configuration should be under this keyword. Within this, the configuration is separated based on the VCG. Within each VCG, the configuration can be created for each QAM channel.

- Processing-type
 - Remap—Configures VoD sessions as remap.
 - Data—Configure video streams that are not dejittered, and remapped. For example, Beacons, carousel, and so on.
- Repeat—Repeats the program number across QAM channels.

Example:

The following is an example in which two sessions are created on all QAM channels from 20 to 22.

```
configure terminal
cable video
table-based
vcg pme_tbv
rf-channel 20-22
session bago_tbv input-port 1 start-udp-port 49152 num-sessions-per-qam 2 processing-type
remap start-program 32 jitter 150 cbr
exit
```

The following is an example in which one session is created on each QAM channel.

```
configure terminal
cable video
table-based
vcg pme_tbv2
rf-channel 23
session pme_tbv input-port 1 start-udp-port 50152 num-sessions-per-qam 1 processing-type
remap start-program 5 jitter 150 cbr
rf-channel 24
session pme_tbv input-port 1 start-udp-port 50153 num-sessions-per-qam 1 processing-type
remap start-program 5 jitter 150 cbr
exit
```

Configuring Table-Based Session : VEI Bundle-Based

Before You Begin

- Create two or more VEIs.
- Bundle the VEIs.

For more details, see Virtual Edge Input Bundling section.

To configure the VEI bundled table-based session, complete the following procedure:

```
configure terminal
cable video
table-based
vcg vcg-name
rf-channel n-m
session name bundle-id number start-udp-port
number num-sessions-per-qam number processing-type
{program | passthru | data } start-program number
  [repeat] jitter ms [cbr | vbr ]
exit
```

Example:

The following is an example in which a session is created for VEI bundle (10).

```
configure terminal
cable video
table-based
vcg pme_vcg
rf-channel 20-21
session tbv bundle-id 10 start-udp-port 49152 num-sessions-per-qam 2 processing-type remap
    start-program 1 repeat jitter 100 vbr
exit
```

Virtual Edge Input Bundling

To create and bundle the VEIs, complete the following procedure:

```
configure terminal
cable video
logical-edge-device name
protocol table-based
virtual-edge-input-ip ip address input-port-number number
vcgvcg-name
vei-bundle id input-port-number number
active
exit
```

Example:

The following is an example in which a bundle (10) is created with two input ports (1 and 2) each with distinct IP address.

```
configure terminal cable video logical-edge-device pme_led id 1 protocol table-based virtual-edge-input-ip 172.16.0.1 input-port-number 1 virtual-edge-input-ip 172.16.0.1 input-port-number 2 vcg pme_vcg vei-bundle 10 input-port-number 1,2 active exit
```

Verifying Table-Based Video Configuration

• To verify all the sessions configured on a particular LED, use the **show cable video session logical-edge-device id** *number* command as shown in the example below:

```
show cable video session logical-edge-device id 1
Total Sessions = 6
Session Output Streaming Session Destination UDP
                                             Output Input
                                                              Output Input
Output Encrypt Encrypt Session
Ιd
      Port Type
                     Type
                                        Port Program State
                                                               State Bitrate
            Status Name
Bitrate Type
1048576 1
              Remap
                     UDP
                             174.21.1.1 49152 32
                                                     ACTIVE-PSI ON
                                                                     1718234
                     bago_tbv.1.0.1.20.49152
1702594 CLEAR
1048577 1
                     UDP 174.21.1.1 49153 33
                                                     ACTIVE-PSI ON
                                                                     1718631
              Remap
1702594 CLEAR
             _
                     bago_tbv.1.0.1.20.49153
1048578 2
              Remap UDP
                           174.21.1.1 49154 34
                                                    ACTIVE-PSI ON
                                                                     1717832
```

1702977	CLEAR	-	bago_tbv	.1.0.1.21.49	154				
1048579	2	Remap	UDP	174.21.1.1	49155	35	ACTIVE-PSI	ON	1717322
1702977	CLEAR	_	bago tbv	.1.0.1.21.49	155				
1048580	3	Remap	UDP	174.21.1.1	49156	36	ACTIVE-PSI	ON	1718697
1702959	CLEAR	_	bago tbv	.1.0.1.22.49	156				
1048581	3	Remap	UDP	174.21.1.1	49157	37	ACTIVE-PSI	ON	1717542
1702959	CLEAR	_	bago tbv	.1.0.1.22.49	157				

• To verify the summary of the session details at a LED level, use the **show cable video session logical-edge-device id** *number* **summary** command as shown in the example below:

```
show cable video session logical-edge-device id 1 summary
Video Session Summary:
         : 6
                                                 : 0
                    Init
                             : 0
Active
                                        Idle
                            : 0
Off
         : 0
                   Blocked
                                        PSI-Ready : 6
UDP
         : 6
                             : 0
                                       SSM : 0
                   ASM
Remap
        : 6
                    Data
                             : 0
                                       Passthru : 0
Total Sessions: 6
```

• To verify the QAM PHY parameters of RF-channel that are configured on the RF port, which is controller Integrated-Cable 7/0/0, use the **show controllers integrated-Cable** *slot/bay/portr***f-channel** *n-m* command as shown in the example below:

show	contro	ollers	integrated	-Cable	7/0/0	rf-ch	annel 0)-95			
Chan	State	Admin	Frequency	Type	Annex	Mod	srate	Interleaver	dcid	power	output
0	UP	UP	93000000	VIDEO	В	256	5361	I32-J4	-	34	NORMAL
1	UP	UP	99000000	VIDEO	В	256	5361	I32-J4	-	34	NORMAL
2	UP	UP	105000000	VIDEO	В	256	5361	I32-J4	-	34	NORMAL
3	UP	UP	111000000	VIDEO	В	256	5361	I32-J4	-	34	NORMAL
4	UP	UP	117000000	VIDEO	В	256	5361	I32-J4	-	34	NORMAL
5	UP	UP	123000000	VIDEO	В	256	5361	I32-J4	-	34	NORMAL
6	UP	UP	129000000	VIDEO	В	256	5361	I32-J4	-	34	NORMAL
7	UP	UP	135000000	VIDEO	В	256	5361	I32-J4	-	34	NORMAL
8	UP	UP	141000000	VIDEO	В	256	5361	I32-J4	-	34	NORMAL
9	UP	UP	147000000	VIDEO	В	256	5361	I32-J4	-	34	NORMAL
10	UP	UP	153000000	VIDEO	В	256	5361	I32-J4	_	34	NORMAL

Troubleshooting Video and VPME Encryption

Output State is OFF

Step 1 Verify the video traffic using the show cable video session logical-edge-device id 1 command. In the below example, the output state is OFF. This value confirm that there is no output traffic.

Session	Output	t Streaming	g Session	Destination	n UDP	Output	t Inpı	ıt Outp	ut Input	Output	t Encry	/pt
Encrypt	Sessio	on										
Id	Port	Type	Type		Port	Program	State	State	Bitrate	Bitrate	Type	Status
Name												
1048582	1	Remap	UDP	172.16.0.1	. 4915	52 32	OFF	OFF	0	0	PME	
Pending	bago_t	bv.1.0.1.2	20.49152									
1048583	1	Remap	UDP	172.16.0.1	4915	3 33	OFF	OFF	0	0	PME	
Pending	bago_t	bv.1.0.1.2	20.49153									
1048584	2	Remap	UDP	172.16.0.1	4915	54 34	OFF	OFF	0	0	PME	
Pending	bago_t	bv.1.0.1.2	21.49154									

1048585	2	Remap	UDP	172.16.0.1	49155 35	OFF	OFF	0	0	PME
Pending	bago_	tbv.1.0.1	.21.49155							
1048586	3	Remap	UDP	172.16.0.1	49156 36	OFF	OFF	0	0	PME
Pending	bago_	tbv.1.0.1	.22.49156							
1048587	3	Remap	UDP	172.16.0.1	49157 37	OFF	OFF	0	0	PME
Pending	bago_	tbv.1.0.1	.22.49157							

Step 2 Verify if the RF output of the controller is shut using the show cable video integrated-cable command.

Router#show cable video integrated-cable 8/0/0

Integrated			_	-	Admi	n Operatio	onal Virtual-Cari	rier Service-Dis	tribution
Cable Name Capal	_		tion To Port ssions	QAM ID	State	State	-Group Name	-Group Name	-Device
8/0/0:20 pme	1	0	1	unavailable	OFF	DOWN	pme_tbv	pme_tbv	pme_tbv
-	2	0 2	2	unavailable	OFF	DOWN	pme_tbv	pme_tbv	pme_tbv
-	3	0 2	3	unavailable	OFF	DOWN	pme_tbv	pme_tbv	pme_tbv
8/0/0:23 pme	4	0 2	4	unavailable	OFF	DOWN	pme_tbv	pme_tbv	pme_tbv
8/0/0:24 pme	5	0	5	unavailable	OFF	DOWN	pme_tbv	pme_tbv	pme_tbv

a) If the RF output of the controller is shut, you must unshut the port. This action changes the status as ON for the corresponding QAMs. You can verify the state using the **show cable video integrated-cable** command.

Router#show cable video integrated-cable 8/0/0

Integrated TSID ONID Output Physical Admin Operational Virtual-Carrier Service-Distribution Logical-Edge Encryption Total

Cable Name Capable		Port sions	QAM ID	State	State	-Group Name	-Group Name	-Device
8/0/0:20 1 pme	0 2	1	48	ON	UP	pme_tbv	pme_tbv	pme_tbv
8/0/0:21 2	0 2	2	49	ON	UP	pme_tbv	pme_tbv	pme_tbv
pme 8/0/0:22 3	0	3	50	ON	UP	pme_tbv	pme_tbv	pme_tbv
pme 8/0/0:23 4	0	4	51	ON	UP	pme_tbv	pme_tbv	pme_tbv
pme 8/0/0:24 5	0	5	24	ON	UP	pme_tbv	pme_tbv	pme_tbv
pme	2.							

Step 3 Verify the JIB channel number for a specific QAM channel using the **show cable video integrated-cable** command.

Router#show controllers integrated-Cable 7/0/0 rf-channel 21 verbose

```
Chan State Admin Frequency Type Annex Mod srate Interleaver dcid power output 21 UP UP 219000000 VIDEO B 256 5361 I32-J4 - 34 NORMAL Qam profile: 1
Spectrum Inversion: Off
Frequency Lane: 1 Block: 3 index: 6
Resource status: OK
License: granted <01:07:01 EDT Feb 19 2016>
QAM Replication:
Group ID: 57344 (Pilot)
Slot group ID: 0
Members: 7/0/0:21 (P) 7/0/1:21 7/0/2:21 7/0/3:21
```

```
Channel Replication Status: Up
JIB channel number: 21
Chan Pr EnqQ Pipe RAF SyncTmr Vid Mac
                                            Video Primary DqQ TM Mpts Sniff
 21 -- 21 0 6880 0 1 0000.0000.0000 1 0 21 0 5 NO 86
Grp Prio P Prate Phy0-ctl Phy1-ctl Enable Tun-Id L2TPv3 Ses id
      0 0
                             0 TRUE
                                       0
                                                2
             1
                     1
Chan Qos-Hi Qos-Lo
                     Med-Hi Med-Lo Low-Hi Low-Lo
      32774 16384 32768 16384
                                      65536
                                              32768
Chan Med Low TB-neg Qos_Exc Med_Xof Low_Xof Qdrops(H-M-L) Pos Qlen(Hi-Med-lo) Fl
  21 0 0 0
                    0
                              0
                                     0
                                         0 0 0 N 23808 0 11656 0
 DSPHY Register Local Copy: QPRHI = c0005564, QPRLO = 216ab0
 DSPHY Register Local Copy Vaddr = 800002e4, qam2max_mapping = 80000015
 DSPHY Register Local Copy: SPR ID = 15, SPR Mapping= c200000b
 Last read from HW: Fri Feb 19 01:07:57 2016
  QPRHI = c0005564, QPRLO = 216ab0, SPR = c200000b SPRMAPING c0000205 Q2Max 80000015
 Last time read spr rate info from HW: Fri Feb 19 03:06:43 2016
   SPR ID 21, rate value in kbps 3463, overflow count 0, underflow count 0
```

Output Status is Idle or Pending

Step 1 Verify the video traffic. In the below example, the input bitrate is zero, and the input state is IDLE / OFF. These values confirm that there is no input traffic.

```
Router#sh cable video session logical-edge-device id 1
Total Sessions = 6
Session Output Streaming Session Destination UDP
                                            Output Input Output Input Output Encrypt
Encrypt Session
     Port Type
                     Type
Id
                                       Port Program State State Bitrate Bitrate Type
                                                                                     Status
 Name
1048588 1 Remap
                             172.16.0.1 49152 32
                    IIDP
                                                     TDLE PENDING O
                                                                                PME
Pending bago tbv.1.0.1.20.49152
1048589 1 Remap UDP
                              172.16.0.1 49153 33
                                                     TDLE PENDING 0
                                                                                PME
Pending bago_tbv.1.0.1.20.49153
                              172.16.0.1 49154 34
1048590 2 Remap UDP
                                                     IDLE PENDING 0
                                                                                PME
Pending bago_tbv.1.0.1.21.49154
1048591 2 Remap UDP
                              172.16.0.1 49155 35
                                                      IDLE PENDING 0
                                                                                PME
Pending bago tbv.1.0.1.21.49155
1048592 3 Remap UDP
                              172.16.0.1 49156 36
                                                     TDLE PENDING ()
                                                                                PME
Pending bago tbv.1.0.1.22.49156
                              172.16.0.1 49157 37
1048593 3 Remap UDP
                                                      TDLE PENDING O
                                                                         Ω
                                                                                PME
Pending bago tbv.1.0.1.22.49157
```

Step 2 Verify details of the video traffic over the mid plane interface through which traffic is routed to the video data plane on the line card. The mid plane is specific to the line-card slot. On subsequent trials, the output packet count should keep increasing. You can verify the output packet count using the **show interfaces video** command.

Router#show interfaces video 7/0/0 accounting

Video7/0/0					
	Protocol	Pkts In	Chars In	Pkts Out	Chars Out
	IP	0	0	2211315936	2653579123200
	DEC MOP	0	0	12	756
	ARP	0	0	4	112

```
Video7/0/0

Protocol Pkts In Chars In Pkts Out Chars Out

IP 0 0 2220252160 2664302592000

DEC MOP 0 0 12 756

ARP 0 0 4 112
```

Step 3 If the packet count is not increasing, verify the 10 GigE physical interface through which the video traffic is fed to the chassis using the **show interfaces** command. In the below example, the video traffic is fed through the 10GigE interface 4/1/0 and the counter for packets keeps incrementing.

Router#show interfaces tenGigabitEthernet 4/1/0 accounting TenGigabitEthernet4/1/0 Pkts In Chars In Pkts Out Chars Out Protocol 109078 1814 1155 Other 15 0 0 IP 8038262210 9404766785700 DEC MOP 15 1155 14 1078 ARP 0 0 Router#show interfaces tenGigabitEthernet 4/1/0 accounting TenGigabitEthernet4/1/0 Protocol Pkts In Chars In Pkts Out Chars Out Other 1.5 1155 1816 109198 IP 8047199112 9415222959870 0 0 DEC MOP 15 1155 14 1078 0 1 60 ARP 0

Input State is Active and not Active PSI

If the input state is Active and the input PSI information is not detected, verify the input PMT information section for this particular session.

Verify the details of a particular video session, using the **show cable video session logical-edge-device id** *led-id* **session-id** *id* command.

```
Router#show cable video session logical-edge-device id 1 session-id 1048599
Session Name : bago_tbv.1.0.1.22.49157
                   : 1048599
Session Id:
Creation Time:
                  : Thu Feb 18 18:21:25 2016
Output Port
                 : 3
                  : 3
TSID
ONID
                   : 0
Number of Sources : 1
 Destination IP : 172.16.0.1
UDP Port : 49157
Config Bitrate : 2000000
                  : 150 ms
Jitter
Processing Type : Remarks : CBR
                   : Remap
Program Number
                 : 37
Idle Timeout
                 : 250 msec
                  : 1000 msec
Init Timeout
                 : 60 sec
Off Timeout
Encryption Type
                   : PME
Encryption Status : Encrypted
Input Session Stats:
  State: ACTIVE-PSI, Uptime: 0 days 00:01:01
  IP Packets: In 12202, RTP 0, Drop 0
```

```
TP Packets: In 69979, PCR 2447, PSI 1323, Null 3233, Unreference 153
  Errors: Discontinuity 8, Sync loss 0, CC error 0, PCR Jump 17,
         Underflow 0, Overflow 0, Block 0
  Bitrate: Measured 1716626 bps, PCR 1800140 bps
Output Session Stats:
  State: ON, Uptime: 0 days 00:01:01
  TP Packets: In 70535, PCR 2440, PSI 1320,
             Drop 910, Forward 68305, Insert 1752
  Errors: Info Overrun 0, Info Error 0, Block 0, Overdue 0,
          Invalid Rate 0, Underflow 0, Overflow 0
  Bitrate: Measured 1723591 bps
PAT Info:
  Version 0, TSID 1, len 20, section 0/0
 Program 0: NIT 16
  Program 1: PMT 8020
Input PMT Info:
  Program 1, Version 0, PCR 8000, Info len 0
  PID 8000: Type 2, Info len 5, (desc 2 len 3)
  PID 8001: Type 129, Info len 17, (lang eng), (desc 5 len 4), (desc 129 len 3)
Output PMT Info:
  Program 37, Version 1, PCR 273, Info len 6, (CA SYS-ID 18249, PID 303)
  PID 273: Type 2, Info len 5, (desc 2 len 3)
  PID 274: Type 129, Info len 17, (lang eng), (desc 5 len 4), (desc 129 len 3)
Output PID Map:
_____
 PID 8000 -> 273
  PID 8001 -> 274
  PID 8020 -> 272
```

Abnormalities on the Output

If there are any abnormalities in the output such as macro blocks, and so on, verify if there are any issues such as CC errors or PCR errors in the MPEG packet.

Verify the session details, using the **show cable video session logical-edge-device id** *led-id* **session-id** *id* command. This command displays errors for both input session stats and output session stats.

Configuring CEM Connectivity for PME Encryption

This section explains how to configure the connectivity to the external CEM and enforce PME encryption on the line card.

Only one device from the MSO site can communicate with the Encryption Renewal System (ERS) and obtain the latest ECM templates. The CEM communicates with the ERS and sends the ECM templates to the Cisco Edge QAM devices in the MSO site.

You can configure the following:

• VODS-ID—IDs assigned by CCAD/ARRIS to the MSO site. The configured VODS-ID on the Cisco cBR-8 and the CEM must be same.

- CEM IP—Interface IP of the Windows/Linux system through which the CEM can be reached by Cisco cBR-8.
- CEM Port—Port number on which the CEM listens for connections from the Cisco cBR-8.
- Management Interface—Source IP address of the cBR-8 virtual interface through which the connection must be established with the CEM server.



Note

There can be only one entry for VODS-ID, CEM IP, CEM Port, and Management Interface IP. If you configure any new values for these parameters, the previous configuration is cleared. You can clear the configurations using the 'no' form of the command.

Configuring VODS-ID

To configure the VODS-ID of the CEM, perform the following steps:

```
enable
configure terminal
cable video
encryption
pme vodsid id
exit
```

Configuring CEM IP and Port

To configure the CEM IP and port of the CEM, perform the following steps:

```
enable
configure terminal
cable video
encryption
pme cem ip-address tcp_port
exit
```

Configuring Management IP

To configure the PME management IP address to establish CEM connection, perform the following steps:

Before You Begin

The virtual port group must be configured before configuring the management IP. For more information, see the Configuring the VirtualPortGroup Interface section.

```
enable
configure terminal
cable video
encryption
pme mgmt-ip ip-address
exit
```

Verifying CEM Connectivity

To verify the connection status of PME, use the **show cable video encryption pme status** command as shown in the following example:

```
Router#show cable video encryption pme status
PME Connection Status:
VODS-ID: 111
CEM IP: 1.200.1.163
CEM Port: 5000
Local Mgmt IP: 1.24.2.6
Local Port: 50394
CEM Connection State: Connected
Count of ECMs recd: 2
```

Troubleshooting Tips

Connectivity with CEM is Lost

Step 1 If the CEM connection status is Not Connected, verify the VODS-ID, CEM IP, CEM port and local Mgmt IP address parameters using the **show cable video encryption pme status** command.

```
Router#show cable video encryption pme status
PME Connection Status:
------
VODS-ID : 111
CEM IP : 1.200.1.163
CEM Port : 5000
Local Mgmt IP : 1.35.2.5
Local Port : 0
```

CEM Connection State : Not Connected

Step 2 If the PME connection parameters are valid, ensure there is route from the Cisco cBR-8's Virtual management iinterface to the CEM by using the ping command. Ping the CEM IP address from the virtualPortGroup 0 on which the management IP is created.

```
Router#ping 1.200.1.163 source virtualPortGroup 0
Type escape sequence to abort.
Sending 5, 100-byte ICMP Echos to 1.200.1.163, timeout is 2 seconds:
Packet sent with a source address of 1.35.2.1
!!!!!
Success rate is 100 percent (5/5), round-trip min/avg/max = 1/1/1 ms
```

Step 3 Verify the alarms in the logs for any connectivity loss.

```
Feb 18 18:28:12.053 IST: %VEMAN-3-CEM_CONNECTION_LOST: CLC4: sup_veman: Alarm Set: CEM Connection Lost: Connection closed by peer-1.200.1.163:5000
```

How to Configure VPME Encryption

- Enforcing Data Stream Encryption Type
- Configuring Virtual Carrier Group

Enforcing Data Stream Encryption Type

Before You Begin

Configure the Virtual Carrier Group (VCG) to setup an encrypted session. For more details, see Configuring Virtual Carrier Group section.

To configure the encryption type for a VOD session, perform the following steps:

```
enable
configure terminal
cable video
encryption
linecard slot/bay ca-system [dvb | pme | powerkey] scrambler scrambler-type
  [des | dvs042]
exit
```

Configuring Virtual Carrier Group

To configure the Virtual Carrier Group (VCG) for setting up an encrypted session, perform the following steps:

```
enable
configure terminal
cable video
encryption
virtual-carrier-group name[idnumber]
rf-channel start-channel number-end-channel number tsid start-tsid-end-tsid
output-port-number start-num-end-num
virtual-edge-input ipaddr input-port-number port-number
encrypt
exit
```

Verifying VPME Encryption Configuration

• To verify the encryption configurations, use the **show cable video encryption linecard** [all | slot number] command as shown in the following example:

```
Router#show cable video encryption linecard 7/0 Line card: 7/0 CA System Scrambler _______PME dvs-042
```

1048587 3

988602 PME

Remap UDP

Encrypted bago tbv.1.0.1.22.49157

ACTIVE-PST ON

• To verify the encryption status of all sessions on an LED, use the **show cable video session logical-edge-device id** *id* command as shown in the following example:

```
Router#show cable video session logical-edge-device id 1
Total Sessions = 6
Session Output Streaming Session Destination UDP Output Input
Output Encrypt Encrypt Session
Id Port Type
                                                            State Bitrate
                     Type
                                      Port Program State
Bitrate Type
           Status Name
          Remap UDP 172.16.0.1 49152 32
1048582 1
                                                   ACTIVE-PSI ON
                                                                   996413
981109 PME
            Encrypted bago tbv.1.0.1.20.49152
1048583 1
           Remap UDP 172.16.0.1 49153 33
                                                 ACTIVE-PST ON
                                                                  1004787
981246 PME
            Encrypted bago tbv.1.0.1.20.49153
1048584 2
           Remap UDP
                           172.16.0.1 49154 34
                                                   ACTIVE-PSI ON
                                                                  995088
984011 PME
             Encrypted bago_tbv.1.0.1.21.49154
1048585 2
            Remap UDP
                            172.16.0.1 49155 35
                                                   ACTIVE-PSI ON
                                                                   993061
984051 PME
            Encrypted bago_tbv.1.0.1.21.49155
1048586 3
           Remap UDP
                           172.16.0.1 49156 36
                                                   ACTIVE-PSI ON
                                                                   994238
988617 PME
            Encrypted bago_tbv.1.0.1.22.49156
```

• To verify the various sessions, which use the PME modules that are loaded on a specific line-card, use the **show cable video encryption pme linecard** *slot/bay* **session** *1-65535* | **all** | **summary** command as shown in the example below:

172.16.0.1 49157 37

```
Router#show cable video encryption pme linecard 7/0 session all
Count of ECMG Streams: 4
Stream
ID num EcmId CP# CwE CPDur NomCPD EcmRqst EcmRsp
0020(0032) 0020(0032) 0002 0 0 40000 7 2
0021(0033) 0021(0033) 0002 0 0 40000 7 2
0040(0064) 0040(0064) 0002 0 0 40000 7 2
0041(0065) 0041(0065) 0002 0 0 40000 7 2
Router#show cable video encryption pme linecard 7/0 session 32
Stream 32, session 7681 is active
Stream number = 32 Session number = 7681
ECM requests = 8 ECM replies = 2
ECM ID = 32 CryptoPeriod num = 2
CP duration = 0 Nominal duration = 40000
CA transfer mode = 1 Stream status = No
Error Blob details
Router#show cable video encryption pme linecard 7/0 session summary
Currently active streams:
Active = 4
ECM req/resp mismatch = 4
ECM req, all streams = 32
ECM resp, all streams = 8
Since last reset:
Sessions created = 4
Sessions deleted = 0
ECMs received =2
ECMs discarded = 0
```

1004658

Troubleshooting Tips

No PMT at the Output

Step 1 Verify the encryption status using the **show cable video session logical-edge-device id** command. If the encrypt status is shown as ca-waiting, then PMT is withheld.

Step 2 Verify if the ECM count is zero using the **show cable video encryption pme status** command.

```
Router#show cable video encryption pme status
PME Connection Status:
VODS-ID: 111
CEM IP: 1.200.1.163
CEM Port: 5000
Local Mgmt IP: 1.24.2.6
Local Port: 50394
CEM Connection State: Connected
Count of ECMs recd: 0
```

Step 3 Verify if the ECM request or response count is 0 using the show cable video encryption pme linecard *slot/bay* session summary command.

```
Router#show cable video encryption pme linecard 7/0 session summary
Currently active streams:
Active = 4

ECM req/resp mismatch = 4

ECM req, all streams = 32

ECM resp, all streams = 8

Since last reset:
Sessions created = 4

Sessions deleted = 0

ECMs received = 2

ECMs discarded = 0
```

Configuration Examples For VPME Encryption

The following example shows running output for a PME configuration:


cable video

```
mgmt-intf virtualPortGroup 0
virtual-carrier-group pme_tbv
service-type narrowcast
rf-channel 20-24 tsid 1-5 out 1-5
service-distribution-group pme tbv
rf-port integrated-cable 7/0/0
vcg pme tbv sdg pme tbv
encryption
linecard 7/0 ca-system pme scrambler dvs
pme vodsid 111
pme cem 1.200.1.163 5000
pme mgmt-ip 1.25.2.6
logical-edge-device pme tbv
protocol table-based
virtual-edge-input-ip 174.101.1.1 input 1
vcg pme tbv
active
table-based
vcg vcg_replication
rf-channel 21-31
session pme_tbv1 in 1 start-udp-port 49152 num-sessions-per-qam 2 processing-type remap
start-program 32 jitter 150 cbr
session pme tbv2 in 1 start-udp-port 50001 num-sessions-per-qam 2 processing-type remap
start-program 64 jitter 150 cbr
```

Use Cases or Deployment Scenarios

Topology

A typical topology for CEM connectivity is shown below:

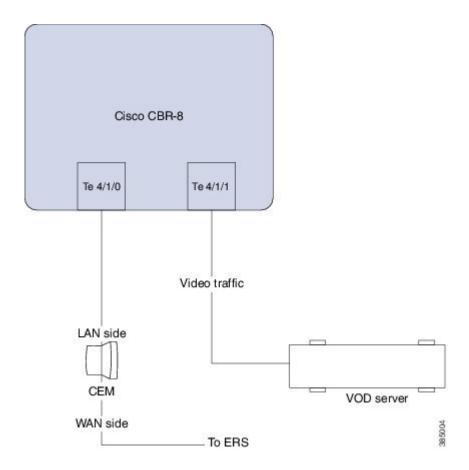

$\textbf{Feature Information for Table-Based Video} \, and \, \textbf{VPME} \, \textbf{Encryption}$

Use Cisco Feature Navigator to find information about the platform support and software image support. Cisco Feature Navigator enables you to determine which software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to the www.cisco.com/go/cfn link. An account on the Cisco.com page is not required.



Note

The following table lists the software release in which a given feature is introduced. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Table 1: Feature Information for Table-Based Video and VPME Encryption

Feature Name	Releases	Feature Information
Table-Based Video and VPME Encryption	Cisco IOS-XE Release 3.18.0S	This feature was introduced on the Cisco cBR Series Converged Broadband Routers.