



Avaya S8500 Version 4.0 to Cisco IOS Voice Gateway using H.323 with T1-CAS to PSTN

January 29, 2008

Table of Contents

Introduction	2
Network Topology.....	3
Limitations.....	3
System Components	4
Hardware requirements	4
Software Requirements	4
Features	4
Features Supported.....	4
Features Not Supported.....	4
Configuration.....	5
Avaya S8500 Configuration.....	5
Cisco IOS Voice Gateway (c3845) configuration	20
Acronyms	23



Introduction

- This Application note provides basic call interoperability and documented steps and configurations necessary for H.323 integration between Avaya S8500 to Cisco IOS Voice Gateway providing PSTN (T1-CAS) connectivity.
- The H.323 protocol is used between Cisco IOS Voice gateway and Avaya S8500. The connection between Cisco IOS gateway and PSTN uses T1-CAS (E&M, immediate start).
- Features tested include Basic call, Call Transfer supervised, Call Transfer blind, Call Forward (Unconditional, Busy and No Answer), Three-way Conference, DTMF tones (in-band and relay via RFC2833), Digit Translation, and Call Hold.
- The Cisco IOS Voice Gateway offers the advantage of providing connectivity between Avaya S8500 and PSTN by offering H.323 to T1-CAS inter-working functionality.
- The network topology diagram (Figure 1) shows the test setup for end-to-end interoperability with the Cisco IOS Voice Gateway connected to the Avaya S8500 (10/100baseT) and connected to the PSTN via T1-CAS.
- This Application Notes uses the Cisco 3845 IOS-voice-gateway, however other Cisco voice gateways are also an option to use since the voice gateway implementation does not depend on the platform. Below is a list of Cisco platforms capable of voice gateway functionality: Care must be taken when selecting a voice gateway platform depending on the capacity and capability required for the intended deployment.

[Cisco 1861 Integrated Services Router](#)

[Cisco IAD2400 Series Integrated Access Device](#)

[Cisco 2800 Series Integrated Services Routers](#)

[Cisco 3700 Series Routers](#)


[Cisco 3800 Series Integrated Services Routers](#)

[Cisco AS5350XM Universal Gateway](#)

[Cisco AS5400XM Universal Gateway](#)

Network Topology

Figure 1. Network Topology

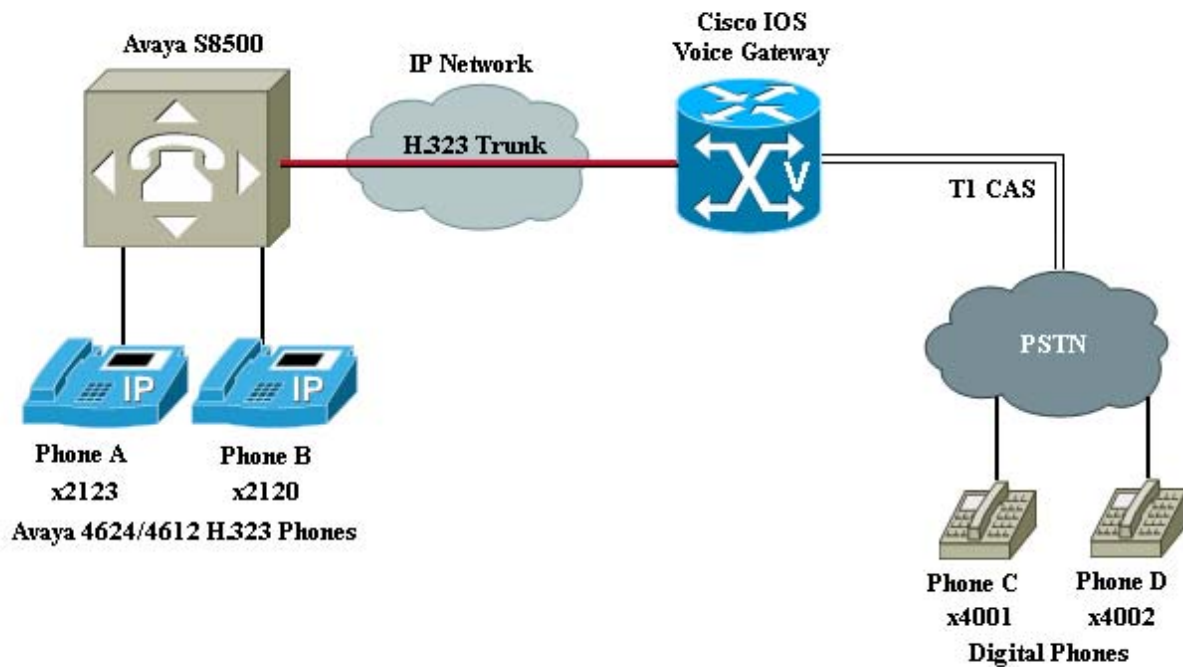

Limitations

- Basic call using G.726-32K and G.722-64K failed. Avaya rejects G.726 and G.722 codec, even when the Avaya is set for G.726 and G.722.
- The Avaya H323 phones did not work when the trunk codec was set to G.723-5.3K or G.723-6.3K.
- For inband DTMF, the Avaya "DTMF over IP" setting in the signalling group had to be set to "in-band", not "in-band-g711".
- RFC2833 DTMF relay is currently not supported in IOS. Support for this feature is in progress.



System Components

Hardware requirements

Cisco equipment

- Cisco 3845 (Cisco 3800 family routers)

Avaya equipment

- Avaya S8500
- (2) Avaya 4624/4612 IP phones
- TN2312BP IPSI
- TN799DP C-LAN
- TN2302AP IP Media Processor

Software Requirements

- Cisco IOS Voice Gateway: Cisco IOS Release – Cisco 3845 Version 12.4(18): c3845-ipvoice-mz.124-18.bin
- Avaya Communications Manager Release 4.0
- Avaya 4612/4624 (H.323 phones) load: def24rl_8_3.bin

Features

Features Supported

- Basic call with G.711alaw, G.711ulaw, G.729, G.729B
- Call Transfer Blind and Call Transfer Supervised
- Call Conference
- Call on Hold
- Call Forward All
- Call Forward No Reply
- Call Forward Busy
- Digit Translation
- DTMF – in-band
- DTMF – H245 alphanumeric / signal

Features Not Supported

- DTMF – RFC2833



Configuration

Avaya S8500 Configuration

Figure 2. Signaling group (In band)

The screenshot displays the DEFINITY Site Administration interface for configuring a signaling group. The main window is titled "DEFINITY Site Administration - [SIP2 GEDI]". The left sidebar shows a "General" tab with various user management options. The main area is titled "SIGNALING GROUP" and shows the configuration for group 115. The "Group Number" is 115, and the "DTMF over IP" is set to "in-band". Other settings include "Group Type: h.323", "Remote Office? n", "SBS? n", "Max number of NCA TSC: 10", "Max number of CA TSC: 10", "Trunk Group for NCA TSC: 115", "IP Video? n", "Trunk Group for Channel Selection: 115", "TSC Supplementary Service Protocol: a", "T303 Timer(sec): 10", "Near-end Node Name: clan1", "Far-end Node Name: Chris-GW", "Near-end Listen Port: 1720", "Far-end Listen Port: 1720", "Far-end Network Region: 1", "LRQ Required? n", "RRQ Required? n", "Media Encryption? n", "Calls Share IP Signaling Connection? n", "H245 Control Addr On FACility? n", "Bypass IF IP Threshold Exceeded? n", "H.235 Annex H Required? n", "Direct IP-IP Audio Connections? n", "IP Audio Hairpinning? n", "Link Loss Delay Timer(sec): 90", "Interworking Message: PROGRESS", "Enable Layer 3 Test? n", "DCP/Analog Bearer Capability: 3.1kHz".

Severity	Date/Time	System	Description
Info	1/25/2008 3:01:15 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 3:00:24 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 2:50:33 PM	SIP2	change signaling-group 115
Info	1/25/2008 2:50:28 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 2:48:41 PM	SIP2	change signaling-group 115



Figure 3. Signaling group (H245)

The screenshot shows the Cisco DEFINTY Site Administration interface for a SIP2 GEDI system. The main window displays the configuration for signaling group 115. The configuration is organized into several sections:

- General:** Includes fields for Group Number (115), Group Type (h.323), Remote Office?, SBS?, IP Video?, Trunk Group for Channel Selection (115), TSC Supplementary Service Protocol (a), and T303 Timer (10).
- Node Information:** Includes Near-end Node Name (clan1), Near-end Listen Port (1720), Far-end Node Name (Chris-GW), Far-end Listen Port (1720), and Far-end Network Region (1).
- Advanced Options:** Includes checkboxes for LRQ Required?, RRQ Required?, Media Encryption?, Calls Share IP Signaling Connection?, H245 Control Addr On FACility?, Bypass If IP Threshold Exceeded?, H.235 Annex H Required?, Direct IP-IP Audio Connections?, IP Audio Hairpinning?, and Enable Layer 3 Test?.
- DTMF over IP:** A red box highlights the field "DTMF over IP: out-of-band".
- Link Loss Delay Timer (sec):** Set to 90.
- Interworking Message:** Set to PROGRESS.
- DCP/Analog Bearer Capability:** Set to 3.1kHz.

The interface also features a left-hand navigation menu with options like Start GEDI, Add User, Change User Name, Remove User, Add Bridged Appearance, Browse Dial Ranges, Browse Stations, Browse Unused Ports, Find Unused Extension, and Print Button Labels. At the bottom, there is a log window showing system events, including several "change signaling-group 115" entries.



Figure 4. Signaling group (RFC 2833)

DEFINITY® Site Administration - [SIP2 GEDI]

File Edit View System Action Tools Window Help

change signaling-group 115 send (return) help (f5) cancel (esc) enter (f3) schedule (f9) next (f7) previous (f8) next form (f6)

1 2 3 4 5

SIGNALING GROUP

Group Number: 115

Group Type: h.323

Remote Office? n

SBS? n

Max number of NCA TSC:

Max number of CA TSC:

Trunk Group for NCA TSC:

IP Video? n

Trunk Group for Channel Selection:

TSC Supplementary Service Protocol:

T303 Timer(sec):

Near-end Node Name: Far-end Node Name:

Near-end Listen Port: Far-end Listen Port:

Far-end Network Region:

LRQ Required? n

RRQ Required? n

Media Encryption? n

DTMF over IP:

Link Loss Delay Timer(sec):

Enable Layer 3 Test? n

Calls Share IP Signaling Connection? n

H245 Control Addr On FACility? n

Bypass IF IP Threshold Exceeded? n

H.235 Annex H Required? n

Direct IP-IP Audio Connections? n

IP Audio Hairpinning? n

Interworking Message:

DCP/Analog Bearer Capability:

Right-click in a field to see a list of valid entries or help text

Severity	Date/Time	System	Description
Info	1/25/2008 3:01:15 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 3:00:24 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 2:50:33 PM	SIP2	change signaling-group 115
Info	1/25/2008 2:50:28 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 2:48:41 PM	SIP2	change signaling-group 115

Ready NUM



Figure 5. Trunk group – p1 of 5 (trunk group number circled).

The screenshot shows the DEFINITY Site Administration interface for a SIP2 system. The main window displays the configuration for Trunk Group 115. The 'Group Number' field is circled in red. The configuration includes the following fields:

- Group Number: 115
- Group Type: isdn
- CDR Reports:
- Group Name: Chris's H323-GW
- COR: 1
- TN: 1
- TAC: 818
- Direction: two-way
- Outgoing Display?:
- Carrier Medium: H.323
- Dial Access?:
- Busy Threshold: 255
- Night Service:
- Queue Length: 0
- Service Type: tie
- Auth Code?:
- Member Assignment Method: manual

The interface also shows a left-hand navigation pane with options like 'Start GEDI', 'Add User', 'Change User Name', etc. At the bottom, there is a 'History' tab showing a list of events:

Severity	Date/Time	System	Description
Info	1/25/2008 3:01:15 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 3:00:24 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 2:50:33 PM	SIP2	change signaling-group 115
Info	1/25/2008 2:50:28 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 2:48:41 PM	SIP2	change signaling-group 115



Figure 6. Trunk group – p2 of 5

DEFINITY Site Administration - [SIP2 GEDI]

change trunk-group 115

Group Type: isdn

TRUNK PARAMETERS

Codeset to Send Display: 0 Codeset to Send National IEs: 6

Charge Advice: none

Supplementary Service Protocol: q Digit Handling (in/out): enbloc/enbloc

Digital Loss Group: 18

Incoming Calling Number - Delete: Insert: Format:

Disconnect Supervision - In? Out?

Answer Supervision Timeout: 0

Severity	Date/Time	System	Description
Info	1/25/2008 3:01:15 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 3:00:24 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 2:50:33 PM	SIP2	change signaling-group 115
Info	1/25/2008 2:50:28 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 2:48:41 PM	SIP2	change signaling-group 115



Figure 7. Trunk group – p3 of 5

DEFINITY® Site Administration - [SIP2 GEDI]

File Edit View System Action Tools Window Help

SIP2

change trunk-group 115 send (return) help (f5) cancel (esc) enter (f3) schedule (f9) next (f7) previous (f8) next form (f6)

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21

TRUNK FEATURES

ACA Assignment? Measured: none

Internal Alert? Maintenance Tests?

Data Restriction? NCA-TSC Trunk Member:

Send Name: Send Calling Number:

Send EMU Visitor CPN?

Used for DCS? Format: public

Suppress # Outpulsing? UII IE Treatment: service-provider

Replace Restricted Numbers?

Replace Unavailable Numbers?

Send Connected Number:

Hold/Unhold Notifications?

Modify Tandem Calling Number?

Send UII IE?

Send UCID?

Send Codeset 6/7 LAI IE?

General

- Start GEDI
- Add User
- Change User Name
- Remove User
- Add Bridged Appearance
- Browse Dial Ranges
- Browse Stations
- Browse Unused Ports
- Find Unused Extension
- Print Button Labels

Advanced

Fault & Performance

Tasks Tree

Right-click in a field to see a list of valid entries or help text

Severity	Date/Time	System	Description
Info	1/25/2008 3:01:15 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 3:00:24 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 2:50:33 PM	SIP2	change signaling-group 115
Info	1/25/2008 2:50:28 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 2:48:41 PM	SIP2	change signaling-group 115

History Schedule Connection Status

Ready NUM



Figure 8. Trunk group – p4 of 5

The screenshot shows the DEFINITY Site Administration interface for SIP2 GEDI. The main window displays the configuration for 'change trunk-group 115'. The page title is 'QSIG TRUNK GROUP OPTIONS'. The main content area contains two fields: 'SBS?' and 'QSIG Value-Added?'. The interface includes a menu bar, a toolbar, a left-hand navigation pane, and a bottom status bar with a log table.

Severity	Date/Time	System	Description
Info	1/25/2008 3:01:15 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 3:00:24 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 2:50:33 PM	SIP2	change signaling-group 115
Info	1/25/2008 2:50:28 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 2:48:41 PM	SIP2	change signaling-group 115



Figure 9. Trunk group – p5 of 5

DEFINITY® Site Administration - [SIP2 GEDI]

File Edit View System Action Tools Window Help

SIP2

change trunk-group 115 send (return) help (f5) cancel (esc) enter (f3) schedule (f9) next (f7) previous (f8) next form (f6)

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21

TRUNK GROUP
Administered Members (min/max): 1/4
Total Administered Members: 4

GROUP MEMBER ASSIGNMENTS

Port	Name	Night	Sig Grp
1: T00017			115
2: T00018			115
3: T00023			115
4: T00024			115
5:			
6:			
7:			
8:			
9:			
10:			
11:			
12:			
13:			
14:			
15:			

Advanced
Fault & Performance

Tasks Tree

Right-click in a field to see a list of valid entries or help text

Severity	Date/Time	System	Description
Info	1/25/2008 3:01:15 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 3:00:24 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 2:50:33 PM	SIP2	change signaling-group 115
Info	1/25/2008 2:50:28 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 2:48:41 PM	SIP2	change signaling-group 115

History / Schedule / Connection Status

Ready NUM



Figure 10. Node-names IP

The screenshot shows the DEFINITY Site Administration interface for SIP2 GEDJ. The main window displays a list of IP Node Names with columns for Name and IP Address. The list includes entries such as CCM3.3, CCM4.1, CCM4.1.2, CCM5.0-UENUS, CM-KLINGON, CM-POLARIS, CM-cluster1_s, Chris-GW, IPIPGW, MAvantage, avayasip1, avayasip2, clan1, clan1server1, default, and medpro1. Below the list, a message indicates that 16 of 17 administered node-names were displayed and provides instructions on how to view all administered node-names and how to change or add a node-name.

Name	IP Address
CCM3.3	172.20.31.254
CCM4.1	172.20.231.254
CCM4.1.2	172.20.236.2
CCM5.0-UENUS	172.20.214.254
CM-KLINGON	172.20.32.254
CM-POLARIS	172.20.236.50
CM-cluster1_s	172.20.241.253
Chris-GW	172.20.15.123
IPIPGW	172.20.8.26
MAvantage	172.20.7.252
avayasip1	172.20.212.254
avayasip2	172.20.213.254
clan1	172.20.213.253
clan1server1	172.20.212.253
default	0.0.0.0
medpro1	172.20.213.252

(16 of 17 administered node-names were displayed)
 Use 'list node-names' command to see all the administered node-names
 Use 'change node-names ip xxx' to change a node-name 'xxx' or add a node-name

At the bottom of the interface, a History log shows several information messages from 1/25/2008, including 'change ip-codec-set 3' and 'change signaling-group 115'.



Figure 11. IP Network Region

The screenshot shows the DEFINITY Site Administration interface for SIP2 GEDI. The main window displays the configuration for IP Network Region 1. The configuration includes parameters for Region, Location, Name, Media Parameters, Diffserv/TOS Parameters, 802.1p/Q Parameters, H.323 IP Endpoints, and Audio Resource Reservation Parameters.

```

IP NETWORK REGION

Region: 1
Location: 1      Authoritative Domain: lab2.com
Name: CiscoLAB2
MEDIA PARAMETERS      Intra-region IP-IP Direct Audio: yes
                      Inter-region IP-IP Direct Audio: yes
                      IP Audio Hairpinning? y
Codec Set: 3
UDP Port Min: 2048
UDP Port Max: 3029
DIFFSERV/TOS PARAMETERS      RTCP Reporting Enabled? y
Call Control PHB Value: 34    RTCP MONITOR SERVER PARAMETERS
                              Audio PHB Value: 46      Use Default Server Parameters? y
                              Video PHB Value: 26
802.1P/Q PARAMETERS
Call Control 802.1p Priority: 7
Audio 802.1p Priority: 6
Video 802.1p Priority: 5      AUDIO RESOURCE RESERVATION PARAMETERS
H.323 IP ENDPOINTS
H.323 Link Bounce Recovery? y
Idle Traffic Interval (sec): 20
Keep-Alive Interval (sec): 5
Keep-Alive Count: 5
                              RSVP Enabled? n
  
```

The interface also shows a left-hand navigation menu with options like Start GEDI, Add User, Change User Name, Remove User, Add Bridged Appearance, Browse Dial Ranges, Browse Stations, Browse Unused Ports, Find Unused Extension, and Print Button Labels. At the bottom, there is a log window showing several 'Info' messages from SIP2 regarding 'change ip-codec-set 3'.

Severity	Date/Time	System	Description
Info	1/15/2008 5:14:43 PM	SIP2	change ip-codec-set 3
Info	1/15/2008 5:12:58 PM	SIP2	change ip-codec-set 3
Info	1/15/2008 5:11:12 PM	SIP2	change ip-codec-set 3
Info	1/15/2008 5:01:08 PM	SIP2	change ip-codec-set 3
Info	1/15/2008 5:00:15 PM	SIP2	change ip-codec-set 3



Figure 12. IP codec set – 1 of 2 (G.711u shown).

DEFINITY® Site Administration - [SIP2 GEDI]

File Edit View System Action Tools Window Help

SIP2

change ip-codec-set 3 send (return) help (f5) cancel (esc) enter (f3) schedule (f9) next (f7) previous (f8) next form (f6)

IP Codec Set

Codec Set: 3

Audio Codec	Silence Suppression	Frames Per Pkt	Packet Size(ms)
1: G.711MU	<input type="checkbox"/> n	<input type="text" value="2"/>	20
2:	<input type="checkbox"/>	<input type="text"/>	
3:	<input type="checkbox"/>	<input type="text"/>	
4:	<input type="checkbox"/>	<input type="text"/>	
5:	<input type="checkbox"/>	<input type="text"/>	
6:	<input type="checkbox"/>	<input type="text"/>	
7:	<input type="checkbox"/>	<input type="text"/>	

Media Encryption

1:	none
2:	
3:	

Right-click in a field to see a list of valid entries or help text

Severity	Date/Time	System	Description
Info	1/25/2008 3:39:20 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 3:01:15 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 3:00:24 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 2:50:33 PM	SIP2	change signaling-group 115
Info	1/25/2008 2:50:28 PM	SIP2	change ip-codec-set 3

Ready NUM



Figure 13. IP codec set – 2 of 2.

The screenshot shows the Cisco DEFINITY Site Administration interface for SIP2 GEDI. The main window is titled "DEFINITY® Site Administration - [SIP2 GEDI]". The left sidebar contains a "General" section with options like "Start GEDI", "Add User", "Change User Name", "Remove User", "Add Bridged Appearance", "Browse Dial Ranges", "Browse Stations", "Browse Unused Ports", "Find Unused Extension", and "Print Button Labels". Below these are "Advanced" and "Fault & Performance" sections. The main content area is titled "IP Codec Set" and contains the question "Allow Direct-IP Multimedia?" with a help icon. Below this is a table with columns "Mode" and "Redundancy".

	Mode	Redundancy
FAX	relay	0
Modem	off	0
TDD/TTY	US	3
Clear-channel	n	0

At the bottom of the interface is a log window with the following data:

Severity	Date/Time	System	Description
Info	1/25/2008 3:39:20 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 3:01:15 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 3:00:24 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 2:50:33 PM	SIP2	change signaling-group 115
Info	1/25/2008 2:50:28 PM	SIP2	change ip-codec-set 3

The interface also includes a "Tasks" section with "Tree" and "Right-click in a field to see a list of valid entries or help text" instructions. The status bar at the bottom shows "Ready" and "NUM".



Figure 14. Uniform dialing plan (matching pattern for H323 trunk circled).

The screenshot shows the Cisco DEFINITY Site Administration interface for SIP2 GEDI. The main window displays the 'UNIFORM DIAL PLAN TABLE' with a 'Percent Full: 0' indicator. The table lists various dialing patterns and their associated parameters. The row with Matching Pattern 30 is circled in red, indicating it is the matching pattern for H323 trunk.

Matching Pattern	Len	Del	Insert Digits	Net Conv	Node Num
16	4	0	201	aar	n
1600	4	0	213	aar	n
1612	4	0	216	aar	n
1613	4	0	216	aar	n
2200	4	0	204	aar	n
2201	4	0	204	aar	n
26	4	0	201	aar	n
29	4	0	201	aar	n
30	4	0	218	aar	n
3503	4	0	201	aar	n
3504	4	0	201	aar	n
36	4	0	214	aar	n
37	4	0	213	aar	n
40	4	0	201	aar	n
4131	4	0	201	aar	n
4132	4	0	201	aar	n

Below the table, there is a log window showing system events:

Severity	Date/Time	System	Description
Info	1/25/2008 3:39:20 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 3:01:15 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 3:00:24 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 2:50:33 PM	SIP2	change signaling-group 115
Info	1/25/2008 2:50:28 PM	SIP2	change ip-codec-set 3



Figure 15. AAR analysis (dialed string for H323 trunk circled).

DEFINITY® Site Administration - [SIP2 GEDI]

File Edit View System Action Tools Window Help

SIP2

display aar analysis 218 send (return) help (f5) cancel (esc) enter (f3) schedule (f9) next (f7) previous (f8) next form (f6)

1 2

AAR DIGIT ANALYSIS TABLE

Percent Full: 2

Dialed String	Total Min	Total Max	Route Pattern	Call Type	Node Num	ANI Read
218	7	7	115	aar		n
224	7	7	224	aar		n
3	7	7	999	aar		n
4	7	7	999	aar		n
5	7	7	999	aar		n
6	7	7	999	aar		n
7	7	7	999	aar		n
8	7	7	999	aar		n
9	7	7	999	aar		n
						n
						n
						n
						n
						n
						n

General

- Start GEDI
- Add User
- Change User Name
- Remove User
- Add Bridged Appearance
- Browse Dial Ranges
- Browse Stations
- Browse Unused Ports
- Find Unused Extension
- Print Button Labels

Advanced

Fault & Performance

Tasks Tree

Severity	Date/Time	System	Description
Info	1/25/2008 3:39:20 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 3:01:15 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 3:00:24 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 2:50:33 PM	SIP2	change signaling-group 115
Info	1/25/2008 2:50:28 PM	SIP2	change ip-codec-set 3

History Schedule Connection Status

Ready NUM



Figure 16. Route Pattern (corresponding trunk group number circled).

DEFINITY® Site Administration - [SIP2 GEDI]

File Edit View System Action Tools Window Help

SIP2

display route-pattern 115 send (return) help (f5) cancel (esc) enter (f3) schedule (f9) next (f7) previous (f8) next form (f6)

General

- Start GEDI
- Add User
- Change User Name
- Remove User
- Add Bridged Appearance
- Browse Dial Ranges
- Browse Stations
- Browse Unused Ports
- Find Unused Extension
- Print Button Labels

Advanced

Fault & Performance

Tasks Tree

1 2 3

Pattern Number: 115 Pattern Name: Chris-H323-GW

SCCAN? n Secure SIP? n

Grp No	FRL	NPA	Pfx	Hop	Toll	No.	Inserted	DCS/	IXC
			Mrk	Lmt	List	Del	Digits	QSIG	
						Dgts		Intw	
1:	115	0				3		n	user
2:								n	user
3:								n	user
4:								n	user
5:								n	user
6:								n	user

	BCC	VALUE	TSC	CA-TSC	ITC	BCIE	Service/Feature	PARM	No.	Numbering	LAR
	0	1	2	M	4	W	Request		Dgts	Format	Subaddress
1:	y	y	y	y	n		as-needed		rest		none
2:	y	y	y	y	n				rest		none
3:	y	y	y	y	n				rest		none
4:	y	y	y	y	n				rest		none
5:	y	y	y	y	n				rest		none
6:	y	y	y	y	n				rest		none

Severity	Date/Time	System	Description
Info	1/25/2008 3:39:20 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 3:01:15 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 3:00:24 PM	SIP2	change ip-codec-set 3
Info	1/25/2008 2:50:33 PM	SIP2	change signaling-group 115
Info	1/25/2008 2:50:28 PM	SIP2	change ip-codec-set 3

History Schedule Connection Status

Ready NUM



Cisco IOS Voice Gateway (c3845) configuration

show version

Cisco IOS Software, 3800 Software (C3845-IPVOICE-M), Version 12.4(18), RELEASE SOFTWARE (fc1)
Technical Support: <http://www.cisco.com/techsupport>
Copyright (c) 1986-2007 by Cisco Systems, Inc.
Compiled Fri 30-Nov-07 23:49 by prod_rel_team

ROM: System Bootstrap, Version 12.3(11r)T1, RELEASE SOFTWARE (fc1)

3845_West uptime is 3 hours, 13 minutes
System returned to ROM by power-on
System image file is "flash:c3845-ipvoice-mz.124-18.bin"

Cisco 3845 (revision 1.0) with 224256K/37888K bytes of memory.
Processor board ID FHK0847F136
2 Gigabit Ethernet interfaces
2 Channelized T1/PRI ports
2 Voice FXS interfaces
DRAM configuration is 64 bits wide with parity enabled.
479K bytes of NVRAM.
62592K bytes of ATA System CompactFlash (Read/Write)

Configuration register is 0x2102

show run

```
!  
Current configuration : 3243 bytes  
!  
version 12.4  
service timestamps debug datetime msec  
service timestamps log datetime msec  
no service password-encryption  
!  
hostname 3845_West  
!  
boot-start-marker  
boot system flash:c3845-ipvoice-mz.124-18.bin  
boot-end-marker  
!  
card type t1 0 0  
logging buffered 1000000 debugging  
no logging console  
enable secret 5 $1$MFhi$AqqpDsFeO4Sb/IkzkrcmO/  
!  
no aaa new-model  
network-clock-participate wic 0  
network-clock-select 1 T1 0/0/0  
voice-card 0  
no dspfarm  
!  
!  
ip cef  
!  
!
```



```
no ip domain lookup
!
voice call carrier capacity active
!
voice service pots
!
voice service voip
!
!
voice translation-rule 1 1
rule 1 /30/ /40\1/
!
voice translation-rule 2
rule 1 /11/ /21\1/
!
voice translation-profile PSTN-to-H323
translate called 2
!
voice translation-profile H323-to-PSTN 2
translate called 1
!
!
controller T1 0/0/0
framing esf
linecode b8zs
cablelength long 0db
ds0-group 2 timeslots 1-5 type e&m-immediate-start
!
controller T1 0/0/1
framing esf
linecode b8zs
cablelength long 0db
!
!
ip tcp synwait-time 13
!
!
GigabitEthernet0/0
description $ETH-LAN$ETH-SW-LAUNCH$$INTF-INFO-GE 0/0$
ip address 10.10.10.1 255.255.255.248
shutdown
duplex auto
speed auto
media-type rj45
no keepalive
!
interface GigabitEthernet0/1
ip address 172.20.15.123 255.255.255.0
duplex auto
speed auto
media-type rj45
no keepalive
!
!
```

¹ The above translation rule replaces the number “30xx” with “40xx”

² This defines the translation profile for the called number. In this particular example, the called number “30xx” is converted to “40xx”.



```
ip forward-protocol nd
ip route 0.0.0.0 0.0.0.0 172.20.15.1
!
ip http server
ip http authentication local
!
control-plane
!
voice-port 0/0/0:2
!
voice-port 0/1/0
!
voice-port 0/1/1
!
!
!
dial-peer voice 4000 pots
translation-profile incoming PSTN-to-H323
destination-pattern 4...
incoming called-number 1...
port 0/0/0:2
forward-digits all
!
!
dial-peer voice 519 voip
translation-profile incoming H323-to-PSTN 3
destination-pattern 2...
session target ipv4:172.20.213.253
incoming called-number 3... 4
dtmf-relay h245-alphanumeric h245-signal 5
codec g711ulaw 6
!
!
banner login ^C
```

Cisco Router and Security Device Manager (SDM) is installed on this device. This feature requires the one time use, initial credentials, of username "cisco" with password "cisco".

Please change these publicly known initial credentials through SDM or IOS CLI. Here's the Cisco IOS command:

```
no username cisco
```

NOTE: Please add a new username to be able to launch SDM for router management.

For more information about SDM please follow the instructions in the QUICK START GUIDE for your router or at <http://www.cisco.com/go/sdm>

³ This defines the call number translation profile for incoming calls. Here, a called number "30xx" is converted to "40xx" for an incoming call associated with this dial peer (i.e., via this H323 trunk).

⁴ This is to specify a digit string that can be matched by an incoming call to associate the call with a dial peer. For this example, user dials 3xxx will associate to this dial-peer.

⁵ This is for Dual-Tone Multifrequency (DTMF) tones to be sent out of band, as an H.245 message. It is omitted for inband DTMF.

⁶ Also changed to G.711A, G.729, and G.729B during the course of testing.



```
^C
!  
line con 0  
  exec-timeout 600 0  
  password cisco  
  login  
line aux 0  
line vty 0 4  
  exec-timeout 600 0  
  privilege level 15  
  password cisco  
  login  
  transport input telnet  
line vty 5 15  
  privilege level 15  
  login local  
  transport input telnet  
!  
scheduler allocate 20000 1000  
!  
end
```

Acronyms

Acronym	Definitions
codec	compressor/decompressor
PBX	Private Branch Exchange
PSTN	Public Switched Telephone Network
IOS	Internetworking Operating System

Important Information

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.



Corporate Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
www.cisco.com
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 526-4100

European Headquarters

Cisco Systems International
BV
Haarlerberg park
Haarlerbergweg 13-19
1101 CH Amsterdam
The Netherlands
www-europe.cisco.com
Tel: 31 0 20 357 1000
Fax: 31 0 20 357 1100

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
www.cisco.com
Tel: 408 526-7660
Fax: 408 527-0883

Asia Pacific Headquarters

Cisco Systems, Inc.
Capital Tower
168 Robinson Road
#22-01 to #29-01
Singapore 068912
www.cisco.com
Tel: +65 317 7777
Fax: +65 317 7799

Cisco Systems has more than 200 offices in the following countries and regions. Addresses, phone numbers, and fax numbers are listed on the Cisco Web site at www.cisco.com/go/offices.

Argentina • Australia • Austria • Belgium • Brazil • Bulgaria • Canada • Chile • China PRC • Colombia • Costa Rica • Croatia • Czech Republic • Denmark • Dubai, UAE • Finland • France • Germany • Greece • Hong Kong SAR • Hungary • India • Indonesia • Ireland • Israel • Italy • Japan • Korea • Luxembourg • Malaysia • Mexico • The Netherlands • New Zealand • Norway • Peru • Philippines • Poland • Portugal • Puerto Rico • Romania • Russia • Saudi Arabia • Scotland • Singapore • Slovakia • Slovenia • South Africa • Spain • Sweden • Switzerland • Taiwan • Thailand • Turkey • Ukraine • United Kingdom • United States • Venezuela • Vietnam • Zimbabwe

© 2008 Cisco Systems, Inc. All rights reserved.

CCDE, CCENT, Cisco Eos, Cisco Lumin, Cisco StadiumVision, the Cisco logo, DCE, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn is a service mark; and Access Registrar, Aironet, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, EtherFast, EtherSwitch, Event Center, Fast Step, Follow Me Browsing, FormShare, GigaDrive, HomeLink, Internet Quotient, IOS, iPhone, iQ Expertise, the iQ logo, iQ Net Readiness Scorecard, iQuick Study, IronPort, the IronPort logo, LightStream, Linksys, MediaTone, MeetingPlace, MGX, Networkers, Networking Academy, Network Registrar, PCNow, PIX, PowerPanels, ProConnect, ScriptShare, SenderBase, SMARTnet, Spectrum Expert, StackWise, The Fastest Way to Increase Your Internet Quotient, TransPath, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0804R)

Printed in the USA