

Manage Remote Network Monitoring (RMON) Statistics on a Switch

Objective

Remote Network Monitoring (RMON) was developed by the Internet Engineering Task Force (IETF) to support monitoring and protocol analysis of Local Area Networks (LANs). It is a standard monitoring specification which enables different network monitors and console systems to exchange their network-monitoring data with each other. RMON facilitates network administrators to choose among the network-monitoring probes and consoles with features that meet their particular networking needs. RMON specifically defines the information that any network monitoring system should be able to provide. Statistics, events, history, alarms, hosts, hosts top N, matrix, filter, capture, and token ring are the ten groups in RMON.

The RMON Statistics page of the switch displays detailed information regarding packet sizes and information regarding physical layer errors. The information is displayed according to the RMON standard. An oversized packet is defined as an Ethernet frame with the following criteria:

- Packet length is greater than Maximum Receive Unit (MRU) byte size.
- Collision event has not been detected.
- Late collision event has not been detected.
- Received (Rx) error event has not been detected.
- Packet has a valid Cyclic Redundancy Check (CRC).

This article provides instructions on how to manage RMON statistics on your switch.

Applicable Devices

- Sx250 Series
- Sx300 Series
- Sx350 Series
- SG350X Series
- Sx500 Series
- Sx550X Series

Software Version


- 1.4.7.05 — Sx300, Sx500
- 2.2.8.04 — Sx250, Sx350, SG350X, Sx550X

Manage RMON Statistics on your Switch

Manage RMON Statistics of an Interface

Step 1. Log in to the web-based utility of your switch then choose **Status and Statics >RMON > Statistics**.

Note: In this example, SG350X-48MP switch is used.

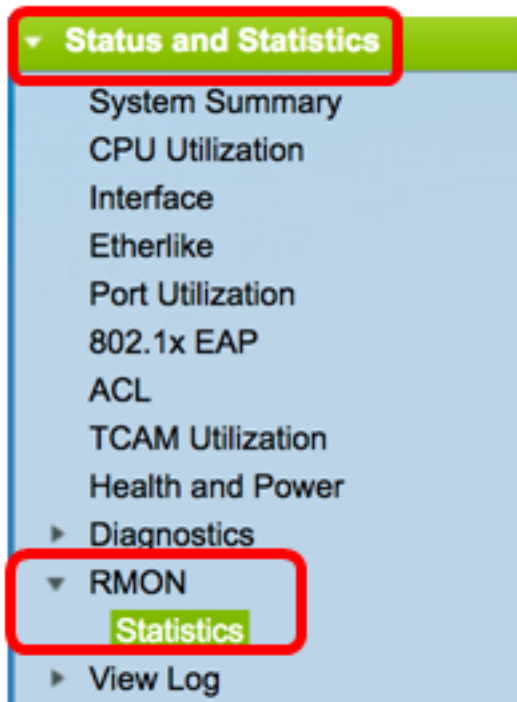


Step 2. In the Interface area, choose the interface for which the Ethernet statistics are to be displayed.

Note: In this example, Port GE2 of Unit 1 is chosen.



Note: If you have a non-stackable switch such as Sx250 or Sx300 Series switch, the options are Port and LAG only.



Step 3. Click a refresh rate from the Refresh Rate area. This is the time period that passes before the interface statistics are refreshed.



Note: In this example, 60 sec is chosen.

The following statistics are displayed for the chosen interface:

Bytes Received:	1792576
Drop Events:	0
Packets Received:	6079
Broadcast Packets Received:	40
Multicast Packets Received:	897
CRC & Align Errors:	0
Undersize Packets:	0
Oversize Packets:	0
Fragments:	0
Jabbers:	0
Collisions:	0
Frames of 64 Bytes:	5368
Frames of 65 to 127 Bytes:	1761
Frames of 128 to 255 Bytes:	653
Frames of 256 to 511 Bytes:	1761
Frames of 512 to 1023 Bytes:	1553
Frames of 1024 Bytes or More:	2227

Clear Interface Counters
Refresh
Graphic View
View All Interfaces Statistics

- Bytes Received — Octets received, including bad packets and FCS octets, but excluding framing bits.
- Drop Events — Packets dropped.
- Packets Received — Good packets received, including Multicast and Broadcast packets.
- Broadcast Packets Received — Good Broadcast packets received. This number does not include Multicast packets.
- Multicast Packets Received — Good Multicast packets received.
- CRC & Align Errors — CRC and Align errors that have occurred.
- Undersize Packets — Undersized packets (less than 64 octets) received.
- Oversize Packets — Oversized packets (over 2000 octets) received.
- Fragments — The fragments or packets with less than 64 octets, excluding framing bits, but including Frame Check Sequence (FCS) octets received.
- Jabbers — Received packets that longer than 1632 octets. This number excludes frame bits, but includes FCS octets that had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a non-integral octet (Alignment Error) number. A Jabber packet is defined as an Ethernet frame that satisfies the following criteria:
 - Packet data length is greater than MRU.
 - Packet has an invalid CRC.
 - Received (Rx) Error Event has not been detected.
- Collisions — The collisions received. If Jumbo frames are enabled, the threshold of

Jabber frames is raised to the maximum size of Jumbo frames.

- Frames of 64 Bytes — Frames, containing 64 bytes that were sent or received.
- Frames of 65 to 127 Bytes — Frames, containing 65-127 bytes that were sent or received.
- Frames of 128 to 255 Bytes — Frames, containing 128-255 bytes that were sent or received.
- Frames of 256 to 511 Bytes — Frames, containing 256-511 bytes that were sent or received.
- Frames of 512 to 1023 Bytes — Frames, containing 512-1023 bytes that were sent or received.
- Frames of 1024 Bytes or More — Frames, containing 1024-2000 bytes, and Jumbo Frames, that were sent or received.

Step 4. (Optional) Click **Clear Interface Counters** to clear the counters of the chosen interface.

Bytes Received:	1792576
Drop Events:	0
Packets Received:	6079
Broadcast Packets Received:	40
Multicast Packets Received:	897
CRC & Align Errors:	0
Undersize Packets:	0
Oversize Packets:	0
Fragments:	0
Jabbers:	0
Collisions:	0
Frames of 64 Bytes:	5368
Frames of 65 to 127 Bytes:	1761
Frames of 128 to 255 Bytes:	653
Frames of 256 to 511 Bytes:	1761
Frames of 512 to 1023 Bytes:	1553
Frames of 1024 Bytes or More:	2227

Clear Interface Counters Refresh Graphic View View All Interfaces Statistics

Step 5. (Optional) Click **OK** to clear the interface statistics.



This operation will clear the interface statistics, the Etherlike statistics and the RMON statistics for the selected interface.



Step 6. (Optional) Click **Refresh** to refresh the statistics page.

Bytes Received:	1792576
Drop Events:	0
Packets Received:	6079
Broadcast Packets Received:	40
Multicast Packets Received:	897
CRC & Align Errors:	0
Undersize Packets:	0
Oversize Packets:	0
Fragments:	0
Jabbers:	0
Collisions:	0
Frames of 64 Bytes:	5368
Frames of 65 to 127 Bytes:	1761
Frames of 128 to 255 Bytes:	653
Frames of 256 to 511 Bytes:	1761
Frames of 512 to 1023 Bytes:	1553
Frames of 1024 Bytes or More:	2227

Clear Interface Counters **Refresh** Graphic View View All Interfaces Statistics


You should now have successfully managed the RMON statistics of an interface on your switch.

View RMON Statistics of All Interfaces

Step 1. In the Statistics page, click **View All Interfaces Statistics** to see all ports in table view.


Bytes Received:	1792576
Drop Events:	0
Packets Received:	6079
Broadcast Packets Received:	40
Multicast Packets Received:	897
CRC & Align Errors:	0
Undersize Packets:	0
Oversize Packets:	0
Fragments:	0
Jabbers:	0
Collisions:	0
Frames of 64 Bytes:	5368
Frames of 65 to 127 Bytes:	1761
Frames of 128 to 255 Bytes:	653
Frames of 256 to 511 Bytes:	1761
Frames of 512 to 1023 Bytes:	1553
Frames of 1024 Bytes or More:	2227

Step 2. (Optional) Choose a refresh rate from the Refresh Rate drop-down list. This is the time period that passes before the interface statistics are refreshed.

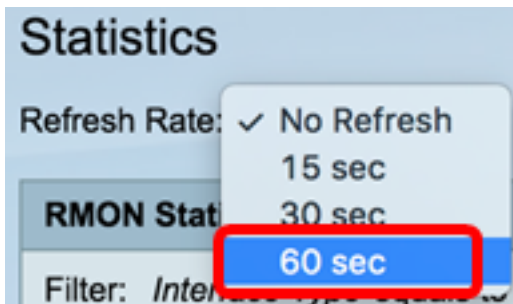

Note: In this example, 60 sec is chosen.

Step 3. Choose the interface type from the Interface Type drop-down list then click **Go**.

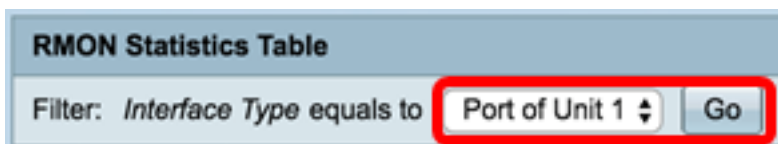

Note: In this example, Port of Unit 1 is chosen.

The RMON Statistics Table will display the statistics of all the ports of the chosen switch.

Interface	Bytes Received	Drop Events	Packets Received	Broadcast Packets Received	Multicast Packets Received	CRC & Align Errors	Undersize Packets	Oversize Packets	Fragments	Jabbers	Collisions	Frames of 64 Bytes	Frames of 65 to 127 Bytes	Frames of 128 to 255 Bytes	Frames of 256 to 511 Bytes	Frames of 512 to 1023 Bytes	Frames of 1024 Bytes or More
GE1	1324725	0	8045	246	1108	0	0	0	0	0	0	7571	3778	1624	2782	1590	1624
GE2	4679088	0	17734	114	2260	0	0	0	0	0	0	18180	3036	1583	4638	6177	8303
GE3	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
GE4	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
GE5	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
GE6	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
GE7	7271734	0	8736	16	263	0	0	0	0	0	0	7639	1622	946	2722	3693	3964
GE8	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Step 4. (Optional) Click **Clear Interface Counters** to clear the counters of the chosen interface.

<input type="radio"/>	GE27	0	0	0	0	0	0
<input type="radio"/>	GE28	0	0	0	0	0	0

Step 5. (Optional) Click **Refresh** to refresh the statistics page.

<input type="radio"/>	GE27	0	0	0	0	0	0
<input type="radio"/>	GE28	0	0	0	0	0	0

You should now have successfully viewed the RMON statistics of all the ports of your switch.

Graphic RMON Statistics View of an Interface

Note: This feature is not available to Sx300 and Sx500 Series switches.

Step 1. In the Statistics page, click **Graphic View** button to display these results in graphic form.

Bytes Received:	1792576
Drop Events:	0
Packets Received:	6079
Broadcast Packets Received:	40
Multicast Packets Received:	897
CRC & Align Errors:	0
Undersize Packets:	0
Oversize Packets:	0
Fragments:	0
Jabbers:	0
Collisions:	0
Frames of 64 Bytes:	5368
Frames of 65 to 127 Bytes:	1761
Frames of 128 to 255 Bytes:	653
Frames of 256 to 511 Bytes:	1761
Frames of 512 to 1023 Bytes:	1553
Frames of 1024 Bytes or More:	2227

Step 2. In the Interface area, choose the interface for which the Ethernet statistics are to be displayed.

Note: In this example, Port GE2 of Unit 1 is chosen.

Statistics

Interface: Unit 1 Port GE2 LAG 1

Note: If you have a non-stackable switch such as Sx250 Series switch, the options are Port and LAG only.

Interface: Port GE2 LAG 1

Step 3. (Optional) Check the frames sizes that you want to be displayed.

Frames of 64 Bytes	<input type="checkbox"/>
Frames of 65 to 127 Bytes	<input type="checkbox"/>
Frames of 128 to 255 Bytes	<input type="checkbox"/>
Frames of 256 to 511 Bytes	<input checked="" type="checkbox"/>
Frames of 512 to 1023 Bytes	<input checked="" type="checkbox"/>
Frames of 1024 Bytes or More	<input checked="" type="checkbox"/>

Note: In this example, Frames of 256 to 511 Bytes, Frames of 512 to 1023 Bytes, and Frames of 1024 to 1023 Bytes or More are chosen.


Step 4. (Optional) From the Time Span area, click the time span of the RMON statistics that you want to view.

Time Span:

Last 5 Minutes
 Last Hour
 Last Day

Note: In this example, Last Hour is chosen.

The chart should display the RMON statistics of the chosen interface and frames of your switch.

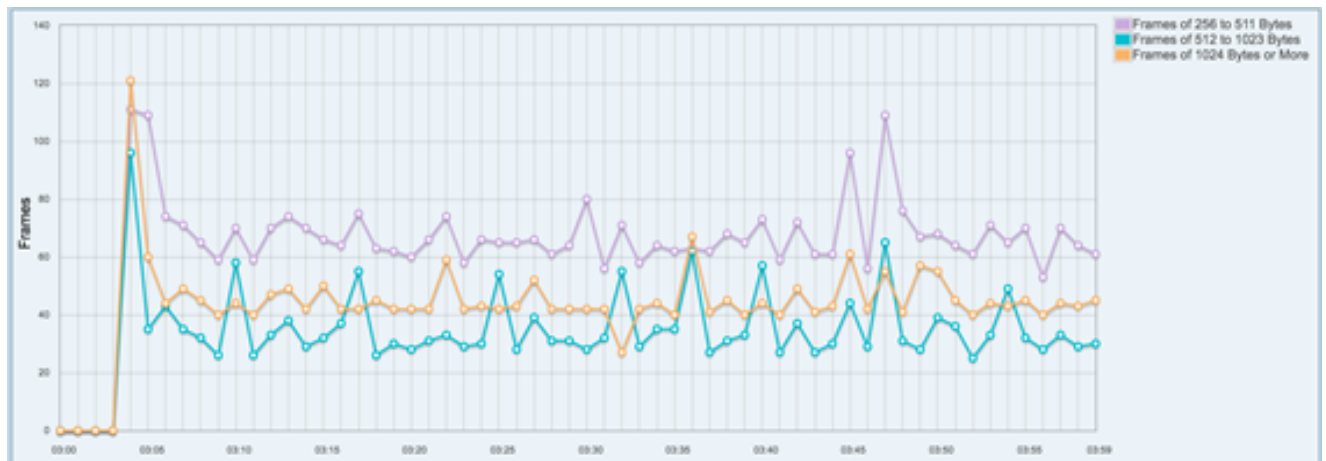

You should now have successfully viewed the graphic RMON statistics of an interface on your switch.