

Nexus 9000: Packet Tracer tool explained

Contents

[Introduction](#)

[Prerequisites](#)

[Requirements](#)

[Components Used](#)

[Use Case Scenerios](#)

[Supported Hardware](#)

[Unsupported Hardware](#)

[How to Use Packet Tracer](#)

[Configuration](#)

[Background Information](#)

[Problem](#)

[Solution](#)

[Other useful commands:](#)

Introduction

Packet-tracer is an inbuilt utility on the Nexus 9000 that can be used to trace the path of the packet through the switch. It can be invoked using the command line and can be configured to match IP address and or layer 4 attributes. It cannot be used to match ARP traffic.

This tool will provide confirmation on whether a flow is traversing through the switch. It also provides a counter to track flow statistics which can be useful for scenerios of intermittent/complete packet loss.

Prerequisites

Requirements

Cisco recommends that you have basic knowledge of these topics:

- Cisco Nexus 9000 hardware architecture

Components Used

The information in this document is based on these software and hardware versions:

- Cisco Nexus 9500
- SW Version 7.0(3)I2(2a)

Use Case Scenerios

- Applicable for IPv4 flows only (IPv6 and non IP not supported)
- This tool does not display the packet inner details as shown by wireshark.
- Intermittent packet loss : Ping or any other utility can provide a definite symptom of lost packets
- Complete packet loss

Supported Hardware

Only line cards/Fabric Modules or TORs with Broadcom Trident II asics are supported. List is below:

- N9K-C9372TX
- N9K-C9372PX
- N9K-C9332PQ
- N9K-C9396TX
- N9K-C9396PX
- N9K-C93128TX
- N9K-C9336PQ
- N9K-X9564PX
- N9K-X9564TX
- N9K-X9636PQ

Unsupported Hardware

- N9K-C93180YC-EX
- N9K-X9732C-EX
- N9K-C9232C
- N9k-C9272Q
- N9k-C92160YC

Note: Please reach out to TAC if a specific line card/TOR is not listed

How to Use Packet Tracer

Configuration

Packet-tracer commands are EXEC level commands.

```
N9K-9508#test packet-tracer src_ip <src_ip> dst_ip <dst_ip> <==== provide your src and dst ip
N9K-9508#test packet-tracer start <==== Start packet tracer
N9K-9508#test packet-tracer stop <==== Start packet tracer
N9K-9508#test packet-tracer show <==== Check for packet matches
```

The above commands programs the trigger on every Broadcom Trident II Asic that exist on the line card or the fabric modules. When a flow with the matching attributes passes through these modules, it will show the counters being hit thereby helping identify the path within the switch (Ingress module--->One of the fabric module---->egress module).

The counters can be used to correlate drops.

Background Information

Fabric modules interconnect I/O module slots. All fabric modules are active and carry traffic. Two Broadcom Trident II ASIC (T2) instances per fabric module.

Problem

PACL (Port Access-list) is used to see if a particular physical interface received our interested traffic. However on Nexus platform, some of the linecards do not have TCAM carved for PACL. TCAM carving requires module reload. In those cases, use packet tracer to match the interested traffic. You can also trace the packet going up to fabric ports and going towards egress module. So packet tracer gives you more insight into how traffic is being forwarded within the switch.


Packet tracer uses TCAM entries carved for SPAN.

Solution

- NS - North Star ASIC
- T2 - Trident II ASIC
- NFE - Network Forwarding Engine
- ALE - ACI Leaf Engine

For more information about Nexus 9000 Switch Architecture, refer to:

<http://www.cisco.com/c/en/us/products/collateral/switches/nexus-9000-series-switches/white-paper-c11-729987.html>

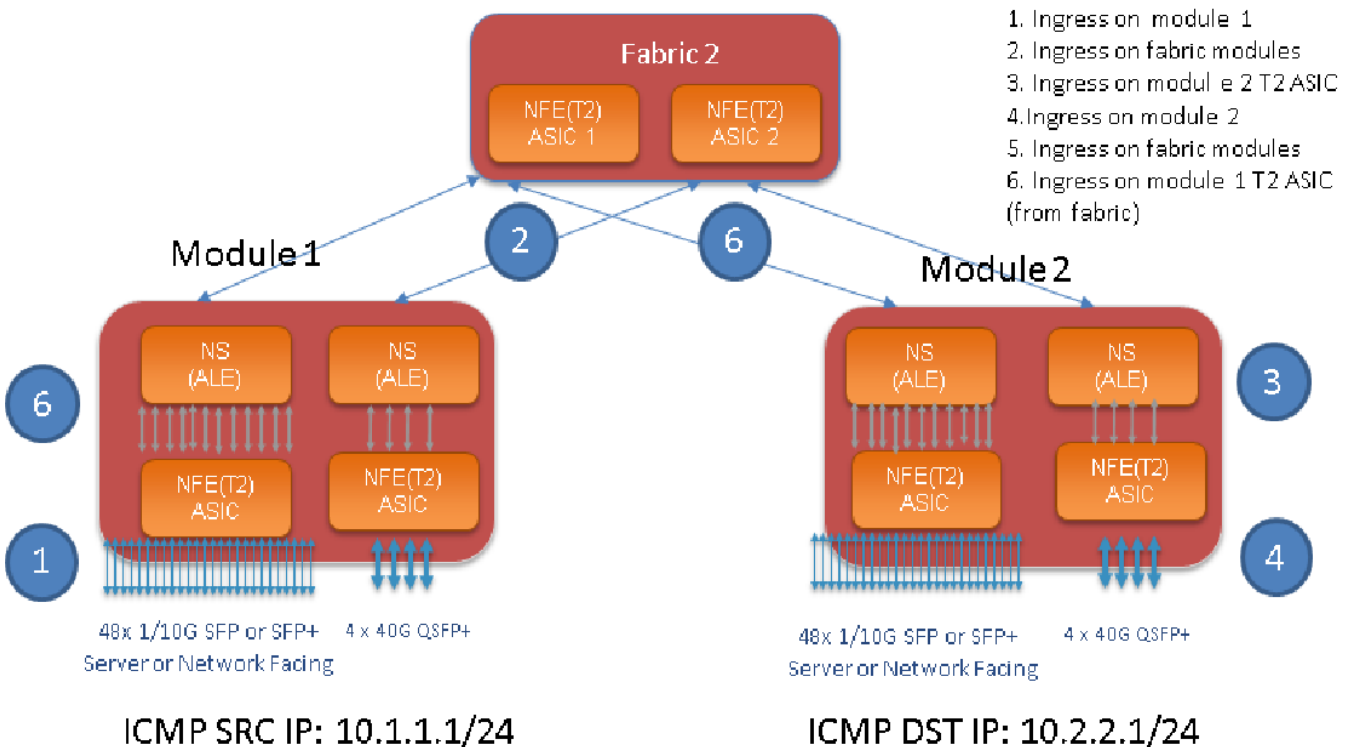

Note:

There are upto six fabric modules on a 9500 chassis. Showing only one fabric in above picture to make it simple. Traffic from modules can hit any fabric module

USE CASE: Match traffic on ingress module, traffic ingressing on a fabric module and traffic ingressing T2 ASIC on egress module

Here are the basic steps that needs to be configured to match our interested traffic:

```
switch#test packet-tracer {<src-ip>|<dst-ip>|<src-l4-port>|<dst-l4-port>} [<protocol>] [detail-  
fp|detail-hg]
```

Here is the config you need :

```
switch#test packet-tracer src_ip <src_ip> dst_ip <dst_ip> protocol <> <==== provide your src and  
dst ip and protocol (protocol option 1 is for icmp)  
switch#test packet-tracer start <==== Start packet tracer  
switch#test packet-tracer show <==== Check for packet match statistics
```

You don't need to apply it to any particular interface. Above config installs filter ACL across all LC's/FM's on all instances of T2 ASIC.

It will show packet count on the module on which traffic ingressed. This matches our interested traffic ingressing on a module , both linecard and Fabric.

Here is a configuraiton example:

```
N9K-9508# test packet-tracer src-ip 10.1.1.1 dst-ip 10.2.2.1 protocol 1 <=== Protocol 1 matches  
ICMP traffic  
N9K-9508# test packet-tracer start
```

Here is how to interpret 'test packet-tracer show" output:

```
N9K-9508# test packet-tracer show  
Packet-tracer stats  
-----  
Module 1: <=== Slot #. Same output will be displayed for other Linecards's and Fabric modules.  
Filter 1 installed: src-ip 10.1.1.1 dst-ip 10.2.2.1 <==== Our filter #1  
ASIC instance 0: <==== Trident ASIC instance #0  
Entry 0: id = 7425, count = 0, active, fp, <==== pakcet match count on front panel port. it  
could be any port  
Entry 1: id = 7426, count = 0, active, hg, <==== packet match count from fabric module to T2  
ASIC on the linecard  
ASIC instance 1:  
Entry 0: id = 7425, count = 0, active, fp,  
Entry 1: id = 7426, count = 0, active, hg,  
Filter 2 uninstalled:  
Filter 3 uninstalled:  
Filter 4 uninstalled:  
Filter 5 uninstalled:
```

Example Configuration:

Configure Packet Tracer:

```
N9K-9508# test packet-tracer src-ip 10.1.1.1 dst-ip 10.2.2.1 protocol 1 <==== Filter to match  
echo traffic. Protocol 1 to match icmp traffic  
N9K-9508# test packet-tracer src-ip 10.2.2.1 dst-ip 10.1.1.1 protocol 1 <=== Filter to match  
echo reply traffic  
N9K-9508# test packet-tracer start <==== Start packet tracer  
N9K-9508# test packet-tracer show non-zero <==== Command to see packet statistics  
Packet-tracer stats
```

```

-----
Module 1:
Filter 1 installed: src-ip 10.1.1.1 dst-ip 10.2.2.1
Filter 2 installed: src-ip 10.2.2.1 dst-ip 10.1.1.1
Filter 3 uninstalled:
Filter 4 uninstalled:
Filter 5 uninstalled:
Module 2:
Filter 1 installed: src-ip 10.1.1.1 dst-ip 10.2.2.1
Filter 2 installed: src-ip 10.2.2.1 dst-ip 10.1.1.1
Filter 3 uninstalled:
Filter 4 uninstalled:
Filter 5 uninstalled:
Module 22:
Filter 1 installed: src-ip 10.1.1.1 dst-ip 10.2.2.1
Filter 2 installed: src-ip 10.2.2.1 dst-ip 10.1.1.1
Filter 3 uninstalled:
Filter 4 uninstalled:
Filter 5 uninstalled:
Module 23:
Filter 1 installed: src-ip 10.1.1.1 dst-ip 10.2.2.1
Filter 2 installed: src-ip 10.2.2.1 dst-ip 10.1.1.1
Filter 3 uninstalled:
Filter 4 uninstalled:
Filter 5 uninstalled:
Module 24:
Filter 1 installed: src-ip 10.1.1.1 dst-ip 10.2.2.1
Filter 2 installed: src-ip 10.2.2.1 dst-ip 10.1.1.1
Filter 3 uninstalled:
Filter 4 uninstalled:
Filter 5 uninstalled:
Module 25:
Filter 1 installed: src-ip 10.1.1.1 dst-ip 10.2.2.1
Filter 2 installed: src-ip 10.2.2.1 dst-ip 10.1.1.1
Filter 3 uninstalled:
Filter 4 uninstalled:
Filter 5 uninstalled:

```

Test: Run ping from SRC IP connected off of Module 1 to a DST IP connected off of Module 2:

```

Router# ping 10.1.1.1 source 10.2.2.1
PING 10.1.1.1 (10.1.1.1) from 10.2.2.1: 56 data bytes
64 bytes from 10.1.1.1: icmp_seq=0 ttl=253 time=0.77 ms
64 bytes from 10.1.1.1: icmp_seq=1 ttl=253 time=0.43 ms
64 bytes from 10.1.1.1: icmp_seq=2 ttl=253 time=0.408 ms
64 bytes from 10.1.1.1: icmp_seq=3 ttl=253 time=0.398 ms
64 bytes from 10.1.1.1: icmp_seq=4 ttl=253 time=0.383 ms
--- 10.1.1.1 ping statistics ---
5 packets transmitted, 5 packets received, 0.00% packet loss
round-trip min/avg/max = 0.383/0.477/0.77 ms

```

Verify: Check packet tracer count:

```

N9K-9508# test packet-tracer show non-zero <==== Command to see packet statistics

```

```

Packet-tracer stats
-----

```

```

Module 1:
Filter 1 installed: src-ip 10.1.1.1 dst-ip 10.2.2.1 protocol 1
ASIC instance 0:
Entry 0: id = 7425, count = 5, active, fp, <==== 5 Echo packets ingress on Module 1
Filter 2 installed: src-ip 10.2.2.1 dst-ip 10.1.1.1 protocol 1
Filter 3 uninstalled:

```

Filter 4 uninstalled:
Filter 5 uninstalled:

Module 2:

Filter 1 installed: src-ip 10.1.1.1 dst-ip 10.2.2.1 protocol 1
Filter 2 installed: src-ip 10.2.2.1 dst-ip 10.1.1.1 protocol 1

ASIC instance 0:

Entry 0: id = 7457, count = 5, active, fp, <===== 5 Echo reply packets ingress on Module 2

Filter 3 uninstalled:
Filter 4 uninstalled:
Filter 5 uninstalled:

Module 3:

Filter 1 installed: src-ip 10.1.1.1 dst-ip 10.2.2.1 protocol 1
Filter 2 installed: src-ip 10.2.2.1 dst-ip 10.1.1.1 protocol 1

Filter 3 uninstalled:
Filter 4 uninstalled:
Filter 5 uninstalled:

Module 4:

Filter 1 installed: src-ip 10.1.1.1 dst-ip 10.2.2.1 protocol 1
Filter 2 installed: src-ip 10.2.2.1 dst-ip 10.1.1.1 protocol 1

Filter 3 uninstalled:
Filter 4 uninstalled:
Filter 5 uninstalled:

Module 22:

Filter 1 installed: src-ip 10.1.1.1 dst-ip 10.2.2.1 protocol 1

ASIC instance 0:

Entry 0: id = 7425, count = 4, active, hg, <===== Fabric module 22 received 4 echo packets

Filter 2 installed: src-ip 10.2.2.1 dst-ip 10.1.1.1 protocol 1
Filter 3 uninstalled:
Filter 4 uninstalled:
Filter 5 uninstalled:

Module 23:

Filter 1 installed: src-ip 10.1.1.1 dst-ip 10.2.2.1 protocol 1

ASIC instance 0:

Entry 0: id = 7425, count = 1, active, hg, <===== Fabric module 23 received 1 echo packets

Filter 2 installed: src-ip 10.2.2.1 dst-ip 10.1.1.1 protocol 1

ASIC instance 0:

Entry 0: id = 7425, count = 3, active, hg, <===== Fabric module 23 received 3 echo reply packets

Filter 3 uninstalled:
Filter 4 uninstalled:
Filter 5 uninstalled:

Module 24:

Filter 1 installed: src-ip 10.1.1.1 dst-ip 10.2.2.1 protocol 1
Filter 2 installed: src-ip 10.2.2.1 dst-ip 10.1.1.1 protocol 1

ASIC instance 0:

Entry 0: id = 7425, count = 2, active, hg, <===== Fabric module 23 received 2 echo reply packets

Filter 3 uninstalled:
Filter 4 uninstalled:
Filter 5 uninstalled:

Module 26:

Filter 1 installed: src-ip 10.1.1.1 dst-ip 10.2.2.1 protocol 1
Filter 2 installed: src-ip 10.2.2.1 dst-ip 10.1.1.1 protocol 1

Filter 3 uninstalled:
Filter 4 uninstalled:
Filter 5 uninstalled:

N9K-9508#

Other useful commands:

test packet-tracer remove-all

<=== Removes all configured filters

test packet-tracer clear <filter #>

<=== Clear counters for all filters or specified filter

test packet-tracer src_ip <.> dst_ip <> l4-dst-port <dst_port> | l4-src-port <src_port> | protocol

<=== Matches based on L4 src_port, L4 dst_port or protocol.