



# Implementing GMPLS UNI

The Generalized Multiprotocol Label Switching (GMPLS) User Network Interface (UNI) creates a circuit connection between two clients (UNI-C) of an optical network. This connection is achieved by signaling exchanges between UNI Client (UNI-C) and UNI Network (UNI-N) nodes. The UNI-C nodes are router nodes and UNI-N nodes are optical nodes.

A GMPLS overlay model has to connect packet routers with the optical network in these scenarios:

- Different groups within a service provider are responsible for managing packet and optical networks.
- Different service providers manage the optical and packet networks.
- There is a weak trust model between the entities operating the optical and packet networks.

## Feature History for Implementing GMPLS UNI

Release	Modification
Release 4.3.0	The GMPLS UNI feature was introduced.

- [Prerequisites for Implementing GMPLS UNI, on page 1](#)
- [Restrictions for Implementing GMPLS UNI, on page 2](#)
- [Information About Implementing GMPLS UNI, on page 2](#)
- [nLight Enhancements, on page 4](#)
- [How to Implement GMPLS UNI, on page 8](#)
- [Configuration Examples for GMPLS UNI, on page 38](#)
- [Additional References, on page 40](#)

## Prerequisites for Implementing GMPLS UNI

The following prerequisites are required to implement GMPLS UNI:

- You must be in a user group associated with a task group that includes the proper task IDs. The command reference guides include the task IDs required for each command. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.
- Router that runs Cisco IOS XR software.
- Installation of the Cisco IOS XR software mini-image on the router.

- Installation of the Cisco IOS XR MPLS software package on the router.

## Restrictions for Implementing GMPLS UNI

- The total number of configured GMPLS UNI controllers should not exceed the platform scale limit of 500 GMPLS interfaces.
- Each UNI-N (ingress or egress) should be routable from its adjacent UNI-C. The UNI-C nodes need to be routable from the UNI-N nodes too.
- GMPLS UNI is supported only over DWDM controllers and so, over POS and GigabitEthernet interfaces.
- GMPLS UNI is supported only with these Cisco CRS Line Cards:
  - Cisco CRS-1 OC768 (C/L-band) DWDM PLIM
  - Cisco CRS-1 OC768 DPSK (C/L-band) STD CHAN PLIM
  - Cisco CRS-1 4 port 10GE (C/L-band) DWDM PLIM
  - Cisco CRS 1-Port 100GE CP-DQSPK Full C-Band Tunable DWDM Interface Module

## Information About Implementing GMPLS UNI

To implement GMPLS UNI, you should understand these concepts:

### GMPLS UNI vs GMPLS NNI

In case of GMPLS NNI, the optical network topology is known and path calculations are performed at the NNI head. In case of GMPLS UNI, the optical network topology is unknown to the UNI-C nodes and path calculations are performed by the UNI-N nodes.

### GMPLS LSP Signaling

The GMPLS overlay model architecture is used for LSP signaling for GMPLS connections. In GMPLS UNI, UNI-C nodes send a request for a connection to UNI-N node. The connection request does not contain an end-to-end path. This is because, as mentioned previously, UNI-C nodes do not have knowledge of the topology of the optical network and therefore cannot determine the end-to-end path. The UNI-C node signals a connection request without an ERO.

The LSP diversity is signaled on a GMPLS UNI tunnel with a path-option. A path-option is permitted on a GMPLS UNI tunnel with a "no ERO" and an optional "XRO" attribute sets to specify LSP diversity requirements. If multiple LSP exclusions are configured in the attribute-set, they can be added to the path message along with an appropriate LSP connection diversity sub-object.

### Path Message without an ERO

In GMPLS UNI, UNI-C nodes send a request for a connection to UNI-N node. The connection request does not contain an end-to-end path, because, UNI-C nodes do not have knowledge of the topology of the optical

network and therefore cannot determine the end-to-end path. The UNI-C node signals a connection request without an ERO.

When no ERO is present in a received path message, the UNI-N node calculates a route to the destination and includes that route in an ERO, before forwarding the path message. If no route is found, the UNI-N returns a path error message with an error code and subcode of 24,5 - *"No route available toward destination"*.

The destination address of a GMPLS LSP can be either the optical router-id of the tail UNI-C node, or the optical address of the ingress interface to the tail UNI-C node. Supplying the router-id allows the UNI-N to route the tunnel to the tail UNI-C node via any attached UNI-N node; supplying the UNI-C's ingress interface address forces the tunnel's path to traverse the UNI-N node attached to that interface.




---

**Note** The optical router-ids and interface addresses may or may not be the same as the packet ones.

---

## XRO Attribute-set

An optional XRO attribute-set can be specified as part of the path-option to specify LSP diversity requirements. An empty XRO attribute set results in the GMPLS tunnel being signaled with no exclusions, and therefore no XRO.




---

**Note** A non-existent XRO attribute-set can be configured in the GMPLS UNI tunnel path-option; in this case no attempt will be made to bring up the GMPLS tunnel until the configuration is complete.

---

## Connection Diversity

Connection diversity is required to ensure that GMPLS tunnels can be established without sharing resources, thus, greatly reducing the probability of simultaneous connection failures. For example, an edge-node wishes to establish multiple LSPs towards the same destination edge-node, and these LSPs need to have few or no resources in common.

Connection diversity supports the establishment of a GMPLS LSP which is diverse from the path taken by an existing LSP. An XRO is added to the tunnel's path message with appropriate LSP diversity sub-objects or exclusions. A maximum of 20 connection diversity exclusions per XRO is supported.

## DWDM Transponder Integration

A GMPLS UNI based solution preserves all the advantages of the integration of the DWDM transponder into the router blade. These advantages include:

- improved CAPEX and OPEX models
- component, space and power savings
- improved IP availability through pro-active protection.

# nLight Enhancements

These topics describe the enhancements made to nLight (also known as GMPLS UNI):

## Explicit Route Object

Explicit Route Objects (EROs) limit LSP routing to a specified list of LSRs. Formerly, the UNI Client (UNI-C) node signaled a connection request, without an ERO, to the UNI Network (UNI-N) node. In this IOS XR Software release, the UNI-C node provides support for path message with ERO for GMPLS tunnels. This includes the capability to specify either a strict or a loose ERO to a path option to be included in the path message for processing by the ingress UNI-N.

An ERO is constructed using the strict and loose hops, specified in the explicit path, by the path option.

When a loose hop is configured, it identifies one or more transit LSRs which suggests the preferred path for the LSP. If a suggested path fails, another LSR is tried.

When a strict hop is configured, it identifies an exact path through which the LSP must be routed. Strict hop EROs specify the exact sequence of LSRs in the LSP.

As a result of these operations, a LSP is established from the sender to the destination of the session, following the explicitly routed path specified in the ERO.


**Note**

- *lockdown* and *verbatim* are mandatory in ERO path option.
- A path option may still be configured to use no ERO.
- In no ERO, *lockdown* is mandatory.

## Wavelength Specification

The wavelength (also called label) specification enhancement enables the network planning tool to determine the wavelength, and specify the same at the UNI-C. The UNI-N then accepts the label provided by the UNI-C, or rejects the path entirely. Previously, the wavelength to be used for the GMPLS UNI tunnel was determined by the UNI-N, taking into account the headend UNI-C's capabilities.

The wavelength to be used is added to the path option configuration. This optional configuration allows a fixed wavelength to be specified for the path option.

When signaling using a path option with the specified wavelength takes place, the following changes happen because of the wavelength specification enhancement:

- The configured wavelength is validated against the controller's capabilities; signaling fails if the wavelength cannot be used by the controller.
- The upstream label is set to the specified wavelength.
- The label-set in the Path message, instead of containing one label for each supported wavelength, contains only the specified wavelength.

- A path-error message with error code 25 and subcode 6 no longer receives special handling. If a suggested label is supplied, it is ignored.

**Note**

A suggested label received in response to signaling with a path option that specifies a different label, is not stored for future use. Other path options, in general, have different constraints and therefore require path calculation to be redone.

## Multiple Path Options

Multiple path options are permitted per GMPLS UNI tunnel. The index given to each path option indicates its relative preference level, with lower indices being preferred. This is similar to the existing multiple path option functionality available for packet TE. This allows the provision of multiple path options with, for example, progressively free constraints.

The path-option index is no longer fixed to ten and is now set by the user and distinguishes path options in the same manner as for packet tunnels. In all situations where a tunnel is being brought up or reoptimized, the path-option with the lowest index is tried first; if no LSP can be established with this path option, then subsequent path options are tried in ascending order. This also applies to recovery from failures, unless any recovery path option is specified.

## Reoptimization

Reoptimization differs from restoration though the mechanisms involved are similar. Reoptimization occurs without the original connection having failed.

Unlike packet tunnels, reoptimization in GMPLS tunnels is not supposed to be loss free.

### Manual Reoptimization

Manual reoptimization of a single GMPLS UNI tunnel can be triggered from the UNI-C node (headend). Use the **mpls traffic-eng optical-uni reoptimize tunnel-id** command to trigger manual reoptimization of a GMPLS UNI tunnel.

The manual trigger for reoptimization causes the currently established LSP to be torn down and signals a new LSP using the normal bring-up process (though the new LSP is same as the current one).

It is not possible to trigger reoptimization for multiple GMPLS UNI tunnels or at the tailend of a tunnel.

## SRLG Discovery

**Note**

SRLG (Shared Risk Link Group) discovery, SRLG collection and SRLG recording represent the same function.

The head and tail UNI-C routers have no direct knowledge of the path taken through the optical network by a GMPLS UNI tunnel, or of the properties of that path. All information about the path of a particular GMPLS UNI connection must therefore be explicitly requested and learned during the signaling process.


A key property of a GMPLS UNI connection is the set of SRLGs used by the optical links along the connection. It is necessary for the UNI-C routers to learn the set of SRLGs associated with a connection, so that this information can be used, both by GMPLS UNI in the specification of diversity requirements for other connections and by Layer-3 applications for effecting routing and protection decision making.

The learning of SRLGs during GMPLS UNI LSP signaling is done by requesting SRLG collection when LSP signaling is initiated, and by the addition of SRLG RRO sub-objects to the Path and Resv messages during signaling as described in IETF draft *SRLG-collect*. Path message learns egress interfaces from head to tail and Resv message learns egress interfaces from tail to head

## Provision of Discovered SRLGs to RSI

Once the SRLGs used by a GMPLS UNI connection are collected during signaling as in SRLG discovery, they are made available to the Layer-3 processes. This is done through RSI (Router Space Infrastructure), as illustrated in the following diagram:

**Figure 1: SRLG Communication**

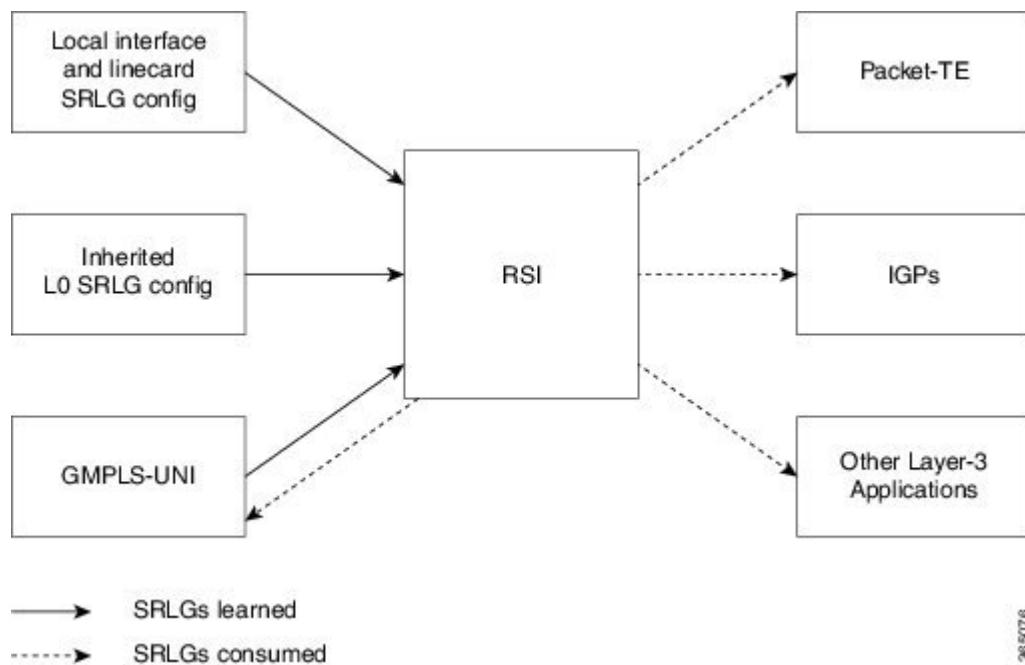

An API is provided by the RSI component to allow SRLGs discovered during GMPLS UNI signaling to be communicated to RSI, as documented in IETF draft *RSI-SRLG*. RSI combines the SRLG sets learned from GMPLS and configuration for an interface and deliver a single set of SRLGs to applications registered as SRLG clients.

The SRLGs discovered during GMPLS UNI signaling are given to RSI for application to the Layer-3 interface of the DWDM controller associated with the GMPLS UNI tunnel. This may be a POS, GigE or an OTN interface.

## SRLG Announce

All SRLGs discovered through GMPLS signaling are announced to RSI once the tunnel is up. These SRLGs are withdrawn from RSI when the tunnel goes down.

## SRLG Diversity



**Note** SRLG diversity and SRLG exclusion represent the same function.

Support is added for signaling SRLG based diversity requirements, based on the XRO SRLG sub-object defined in RFC 4874. The use of SRLGs removes the restrictions of LSP based diversity, as SRLGs are flooded throughout the optical network, and by their very nature, reduce the risk of concurrent failure.

SRLG diversity is configured under the XRO attribute-set.

### Head UNI-C Behavior

SRLG diversity is configured at the tunnel head. Individual SRLG exclusions are added to an XRO attribute-set; each is specified as either *best-effort* or mandatory (*strict*). Whenever any exclusion is specified, an XRO object is added to the Path message by the head UNI-C. The XRO contains a SRLG sub-object for each specified SRLG. The SRLG exclusions may coexist in the same XRO with LSP exclusions.

The XRO attribute-set is associated with tunnel path options in the same manner as for LSP exclusions.

If a SRLG with a strict exclusion matches an SRLG configured on the local DWDM controller, the bring-up attempt fails.

The SRLG exclusions requested by the head UNI-C are processed by the ingress UNI-N node during path calculation for the tunnel.

### Tail UNI-C Behavior

On receiving a Path message containing an XRO, the tail UNI-C inspects each SRLG sub-object. If a SRLG sub-object, with a strict exclusion, matches an SRLG configured on the local DWDM controller, the Path message is rejected and a path-error is generated with error codes. No action is taken if the SRLG sub-object specifies a *best-effort* exclusion.

## Multi-Layer Restoration - Optical

Multi-Layer Restoration-Optical (MLR-O) involves restoration from failures in the optical network that can leverage the same router interfaces at both ends.

Optical restoration involves the repair of a failure by the optical network locally. Although the routers may see loss of light until the failure is repaired, there is no signaling involving the routers, and from the routers perspective the GMPLS UNI LSP remains unchanged.

### Optical Restoration: Same Wavelength

When a failure occurs on a physical link within the optical network, the routers identify that the link is down and Layer 3 protection mechanisms, such as FRR, are used to minimize the traffic loss. The optical network re-routes the GMPLS connection to an alternative path. This is done without any involvement of the routers.

#### Limitation

A significant limitation of optical restoration in this case, is that the wavelength in use for the connection cannot be changed. This is because the wavelength must be the same along the entire path and cannot be

changed without end-to-end signaling. The constraints imposed on the connection during its initial signaling are also unchanged, which may reduce the chance of finding an alternative path.

## Optical Restoration: Wavelength Change

Optical restoration may occur with an associated wavelength change, in the case where the optical network finds an alternative path with the same constraints as were originally signaled, but using a different wavelength. Some signaling is required, since the wavelength (and therefore the labels) used by the GMPLS connection are to change.

Consider a failure within the optical network on the path of a GMPLS UNI LSP. The restoration proceeds as in the previous case (same wavelength), but the new path found, uses a different wavelength. The ingress UNI-N then sends a path-error message indicating the new wavelength to be used; this has error code 24 (routing), sub-error 6 (unacceptable label set) and contains a suggested-label sub-object with the new label to be used. The head UNI-C then signals a new LSP with the new wavelength.

Although the wavelength in use may change in this case, the constraints used in signaling the original LSP remain unchanged.

# How to Implement GMPLS UNI

A new submode is introduced under the main TE submode to enable GMPLS UNI and to contain GMPLS UNI configuration.

To implement GMPLS UNI, follow these procedures:

## Configuring TE for GMPLS UNI

TE configuration specific to packet tunnels does not affect GMPLS UNI tunnels.

To implement TE configuration for GMPLS UNI, follow these procedures:

## Enabling GMPLS UNI Submode

Perform this task to enable GMPLS UNI configuration submode and to configure GMPLS UNI tunnels.



**Note**

Removal of the GMPLS UNI submode results in the removal of all configuration within it, including any other parser submode, and the immediate destruction of all GMPLS UNI tunnels.

## SUMMARY STEPS

1. **configure**
2. **mpls traffic-eng**
3. **gmpls optical-unı**
4. **commit**

**DETAILED STEPS**

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure</b>	
<b>Step 2</b>	<b>mpls traffic-eng</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config)# <b>mpls traffic-eng</b>	Enters MPLS-TE configuration mode.
<b>Step 3</b>	<b>gmppls optical-uni</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-mpls-te)# <b>gmppls optical-uni</b>  RP/0/RP0/CPU0:router(config-te-gmppls) #	Enters GMPLS UNI configuration submode.
<b>Step 4</b>	<b>commit</b>	

**Configuring GMPLS UNI Controller**

Perform this task to setup a GMPLS tail in MPLS-TE configuration. This task enables GMPLS UNI controller submode to configure controllers for establishing GMPLS UNI tunnels. This is the minimal configuration required at the tunnel tail.

**Note**

Removal of the GMPLS UNI controller submode results in the immediate destruction of any GMPLS tunnel established over the controller referenced.

**SUMMARY STEPS**

1. **configure**
2. **mpls traffic-eng**
3. **gmppls optical-uni**
4. **controller dwdm *interface***
5. **commit**

**DETAILED STEPS**

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure</b>	
<b>Step 2</b>	<b>mpls traffic-eng</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config)# <b>mpls traffic-eng</b>	Enters MPLS-TE configuration mode.

## Configuring the GMPLS UNI Controller as a Tunnel Head

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 3</b>	<b>mpls optical-uni</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-mpls-te)# <b>mpls optical-uni</b>	Enters GMPLS UNI configuration submode.
<b>Step 4</b>	<b>controller dwdm interface</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls)# <b>controller dwdm 0/1/0/1</b>  RP/0/RP0/CPU0:router(config-te-gmpls-cntl) #	Enters GMPLS UNI controller submode.
<b>Step 5</b>	<b>commit</b>	

## Configuring the GMPLS UNI Controller as a Tunnel Head

Perform this task to configure the tunnel properties for a GMPLS UNI controller.

This configuration designates the controller as a tunnel-head, rather than a tunnel tail. After you configure the tunnel properties, the incoming path messages are rejected and any existing tailend tunnel is torn down.

### SUMMARY STEPS

1. **configure**
2. **mpls traffic-eng**
3. **mpls optical-uni**
4. **controller dwdm interface**
5. **tunnel-properties**
6. **tunnel-id number**
7. **destination ipv4 unicast address**
8. **path-option 10 no-ero lockdown**
9. **commit**

### DETAILED STEPS

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure</b>	
<b>Step 2</b>	<b>mpls traffic-eng</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config)# <b>mpls traffic-eng</b>	Enters MPLS-TE configuration mode.
<b>Step 3</b>	<b>mpls optical-uni</b>  <b>Example:</b>	Enters GMPLS UNI configuration submode.

	<b>Command or Action</b>	<b>Purpose</b>
	RP/0/RP0/CPU0:router(config-mpls-te)# <b>mpls optical-uni</b>	
<b>Step 4</b>	<b>controller dwdm <i>interface</i></b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls)# <b>controller dwdm 0/1/0/1</b>  RP/0/RP0/CPU0:router(config-te-gmpls-cntl) #	Enters GMPLS UNI controller submode.
<b>Step 5</b>	<b>tunnel-properties</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-cntl) # <b>tunnel-properties</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun) #	Enters the submode to configure tunnel-specific information for a GMPLS UNI controller.
<b>Step 6</b>	<b>tunnel-id <i>number</i></b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun) # <b>tunnel-id 100</b>	Specifies a tunnel-id for a headend router of a GMPLS tunnel. The tunnel-id is a 16-bit number ranging 0–65535.
<b>Step 7</b>	<b>destination ipv4 unicast <i>address</i></b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun) # <b>destination ipv4 unicast 10.10.3.4</b>	Specifies a tunnel destination for a headend router of a GMPLS tunnel. The destination argument is an IPv4 address.
<b>Step 8</b>	<b>path-option 10 no-ero lockdown</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun) # <b>path-option 10 no-ero lockdown</b>	Specifies the path-option for a headend router of a GMPLS tunnel.  <b>Note</b> You can specify an XRO attribute-set as part of the path-option.
<b>Step 9</b>	<b>commit</b>	

## Configuring Other Tunnel Properties for a GMPLS UNI Tunnel

Perform this task to configure the optional tunnel properties for a GMPLS UNI tunnel. This configuration is optional, and if omitted, the GMPLS tunnel is established with the default property values.

### SUMMARY STEPS

1. **configure**
2. **mpls traffic-eng**
3. **mpls optical-uni**
4. **controller dwdm *interface***

5. **tunnel-properties**
6. **priority setup-priority hold-priority**
7. **record-route**
8. **signalled-name name**
9. **logging events lsp-status state**
10. **commit**

## DETAILED STEPS

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure</b>	
<b>Step 2</b>	<b>mpls traffic-eng</b> <b>Example:</b> <pre>RP/0/RP0/CPU0:router(config)# mpls traffic-eng</pre>	Enters MPLS-TE configuration mode.
<b>Step 3</b>	<b>gmpls optical-uni</b> <b>Example:</b> <pre>RP/0/RP0/CPU0:router(config-mpls-te)# gmpls optical-uni</pre>	Enters GMPLS UNI configuration submode.
<b>Step 4</b>	<b>controller dwdm interface</b> <b>Example:</b> <pre>RP/0/RP0/CPU0:router(config-te-gmpls)# controller dwdm 0/1/0/1</pre>	Enters GMPLS UNI controller submode.
<b>Step 5</b>	<b>tunnel-properties</b> <b>Example:</b> <pre>RP/0/RP0/CPU0:router(config-te-gmpls-cntl)# tunnel-properties</pre>	Enters the submode to configure tunnel-specific information for a GMPLS UNI controller.
<b>Step 6</b>	<b>priority setup-priority hold-priority</b> <b>Example:</b> <pre>RP/0/RP0/CPU0:router(config-te-gmpls-tun)# priority 3 2</pre>	<p>Specifies the priority for a GMPLS tunnel. The default priority value is 7 for both setup and hold priorities.</p> <p><b>Note</b> The setup-priority and hold-priority values are numbers ranging from 0 to 7, where 0 represents the highest priority. The hold-priority must be equal or higher (numerically less) than the setup-priority.</p>
<b>Step 7</b>	<b>record-route</b> <b>Example:</b> <pre>RP/0/RP0/CPU0:router(config-te-gmpls-tun)# record-route</pre>	Enables record-route functionality for a GMPLS tunnel.

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 8</b>	<b>signalled-name name</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun) # <b>signalled-name sign1</b>	Configures signalled-name for a GMPLS tunnel.  <b>Note</b> If no signalled name is configured, TE will generate a default name in the form of <i>router-name_tunnel-id_destination-address</i> , for example, <i>te-mal_123_10.10.10.10</i> .
<b>Step 9</b>	<b>logging events lsp-status state</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun) # <b>logging events lsp-status state</b>	Configure events to generate system log messages when state changes occur on the GMPLS tunnel. If omitted, no events will result in the generation of system log messages.
<b>Step 10</b>	<b>commit</b>	

## Configuring LSP Diversity

To configure an XRO attribute-set as part of the path-option for MPLS-TE, and to specify exclusions for an attribute set for LSP diversity, follow these procedures:

### Configuring XRO Attribute-set

Perform this task to configure XRO attribute set in the GMPLS UNI tunnel path-option, under MPLS-TE submode.

### SUMMARY STEPS

1. **configure**
2. **mpls traffic-eng**
3. **mpls optical-uni**
4. **controller dwdm interface**
5. **tunnel-properties**
6. **path-option 10 no-ero [xro-attribute-set *name*] lockdown**
7. **commit**

### DETAILED STEPS

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure</b>	
<b>Step 2</b>	<b>mpls traffic-eng</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config) # <b>mpls traffic-eng</b>	Enters MPLS-TE configuration mode.
<b>Step 3</b>	<b>mpls optical-uni</b>  <b>Example:</b>	Enters GMPLS UNI configuration submode.

## Configuring Connection Diversity

	<b>Command or Action</b>	<b>Purpose</b>
	RP/0/RP0/CPU0:router(config-mpls-te)# <b>mpls optical-uni</b>	
<b>Step 4</b>	<b>controller dwdm interface</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls)# <b>controller dwdm 0/1/0/1</b>	Enters GMPLS UNI controller submode.
<b>Step 5</b>	<b>tunnel-properties</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-cntl)# <b>tunnel-properties</b>	Enters the submode to configure tunnel-specific information for a GMPLS UNI controller.
<b>Step 6</b>	<b>path-option 10 no-ero [xro-attribute-set name] lockdown</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun)# <b>path-option 10 no-ero xro-attribute-set A01 lockdown</b>	Specifies the path-option for a headend router of a GMPLS tunnel.
<b>Step 7</b>	<b>commit</b>	

## Configuring Connection Diversity

Perform this task to specify exclusions for an attribute set for LSP diversity, under MPLS-TE attribute-set configuration mode.

### SUMMARY STEPS

1. **configure**
2. **mpls traffic-eng**
3. **attribute-set xro name**
4. **exclude {best-effort | strict} lsp source source-address destination destination-address tunnel-id tunnel-id extended-tunnel-id extended-tunnel-id [lsp-id lsp-id]**
5. **commit**

### DETAILED STEPS

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure</b>	
<b>Step 2</b>	<b>mpls traffic-eng</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config)# <b>mpls traffic-eng</b>	Enters MPLS-TE configuration mode.

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 3</b>	<b>attribute-set xro name</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-mpls-te)# <b>attribute-set xro attrset01</b>	Configures an XRO attribute-set for a GMPLS tunnel.
<b>Step 4</b>	<b>exclude {best-effort   strict} lsp source source-address destination destination-address tunnel-id tunnel-id extended-tunnel-id extended-tunnel-id [lsp-id lsp-id]</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-attribute-set)# <b>exclude best-effort lsp source 10.10.1.2 destination 10.20.4.4 tunnel-id 17 extended-tunnel-id 10.20.3.3 lsp-id 17</b> RP/0/RP0/CPU0:router(config-te-attribute-set) #	Specifies exclusions for an attribute set for LSP diversity.  <b>Note</b> A maximum of 20 LSP exclusions per XRO is supported.
<b>Step 5</b>	<b>commit</b>	

## Configuring LMP for GMPLS UNI

To implement LMP configuration for GMPLS UNI, follow these procedures:

### Configuring Optical Router ID

Perform this task to enable GMPLS UNI LMP functionality and to configure LMP unicast router ID.

#### SUMMARY STEPS

1. **configure**
2. **lmp**
3. **mpls optical-uni**
4. **router-id ipv4 unicast address**
5. **commit**

#### DETAILED STEPS

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure</b>	
<b>Step 2</b>	<b>lmp</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config)# <b>lmp</b>	Enters LMP configuration mode.
<b>Step 3</b>	<b>mpls optical-uni</b>  <b>Example:</b>	Enters GMPLS UNI configuration submode.

## Configuring an LMP Neighbor

	<b>Command or Action</b>	<b>Purpose</b>
	RP/0/RP0/CPU0:router(config-lmp)# <b>mpls optical-uni</b>	
<b>Step 4</b>	<b>router-id ipv4 unicast address</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-lmp-gmpls-uni)# <b>router-id ipv4 unicast 10.10.4.4</b>	Configures the LMP unicast router ID for GMPLS.
<b>Step 5</b>	<b>commit</b>	

## Configuring an LMP Neighbor

Perform this task to configure an LMP neighbor for a GMPLS UNI tunnel.

### SUMMARY STEPS

1. **configure**
2. **lmp**
3. **mpls optical-uni**
4. **neighbor name**
5. **ipcc routed**
6. **router-id ipv4 unicast address**
7. **commit**

### DETAILED STEPS

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure</b>	
<b>Step 2</b>	<b>lmp</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config)# <b>lmp</b>	Enters LMP configuration mode.
<b>Step 3</b>	<b>mpls optical-uni</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-lmp)# <b>mpls optical-uni</b>	Enters GMPLS UNI configuration submode.
<b>Step 4</b>	<b>neighbor name</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-lmp-gmpls-uni)# <b>neighbor nbr1</b>	Specifies an LMP neighbor for GMPLS and enters the LMP GMPLS UNI neighbor configuration submode.

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 5</b>	<b>ipcc routed</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-lmp-gmpls-uni-nbr-nbr1)# <b>ipcc routed</b>	Specifies the LMP neighbor IPCC configuration for GMPLS UNI.
<b>Step 6</b>	<b>router-id ipv4 unicast address</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-lmp-gmpls-uni-nbr-nbr1)# <b>router-id ipv4 unicast 10.10.4.5</b>	Configures the LMP unicast router ID for GMPLS.
<b>Step 7</b>	<b>commit</b>	

## Configuring an LMP Controller

Perform this task to configure an LMP link for a GMPLS UNI controller.

### SUMMARY STEPS

1. **configure**
2. **lmp**
3. **mpls optical-uni**
4. **controller dwdm controller**
5. **neighbor name**
6. **link-id ipv4 unicast address**
7. **neighbor link-id ipv4 unicast address**
8. **neighbor interface-id unnumbered interface-id**
9. **commit**

### DETAILED STEPS

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure</b>	
<b>Step 2</b>	<b>lmp</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config)# <b>lmp</b>	Enters LMP configuration mode.
<b>Step 3</b>	<b>mpls optical-uni</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-lmp)# <b>mpls optical-uni</b>	Enters GMPLS UNI configuration submode.

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 4</b>	<b>controller dwdm <i>controller</i></b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-lmp-gmpls-uni)# <b>controller dwdm 0/4/0/0</b>	Specifies a controller for GMPLS UNI.
<b>Step 5</b>	<b>neighbor <i>name</i></b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-lmp-gmpls-uni-cntl)# <b>neighbor nbr1</b>	Specifies an LMP neighbor for GMPLS and enters the LMP GMPLS UNI neighbor configuration submode.
<b>Step 6</b>	<b>link-id ipv4 unicast <i>address</i></b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-lmp-gmpls-uni-cntl)# <b>link-id ipv4 unicast 10.2.2.4</b>	Specifies the optical interface address for an LMP link for a GMPLS UNI controller.
<b>Step 7</b>	<b>neighbor link-id ipv4 unicast <i>address</i></b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-lmp-gmpls-uni-cntl)# <b>neighbor link-id ipv4 unicast 10.2.2.5</b>	Specifies the neighbor's optical address of an LMP link for a GMPLS UNI controller.
<b>Step 8</b>	<b>neighbor interface-id unnumbered <i>interface-id</i></b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-lmp-gmpls-uni-cntl)# <b>neighbor interface-id unnumbered 17</b>	Specifies the neighbor's optical interface ID of an LMP link for a GMPLS UNI controller.
<b>Step 9</b>	<b>commit</b>	

## Configuring RSVP Optical Refresh Interval and Missed Count

Perform this task to configure optical refresh interval under the RSVP controller submode and to configure the number of missed refresh messages allowed before optical tunnel states are deleted.

### SUMMARY STEPS

1. **configure**
2. **rsvp**
3. **controller dwdm *interface***
4. **signalling refresh out-of-band interval *interval***
5. **signalling refresh out-of-band missed *miss-count***

## 6. commit

### DETAILED STEPS

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure</b>	
<b>Step 2</b>	<b>rsvp</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config)# <b>rsvp</b>	Enters RSVP configuration mode.
<b>Step 3</b>	<b>controller dwdm interface</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-rsvp)# <b>controller dwdm 0/1/0/1</b>	Configures a controller for establishing a GMPLS UNI tunnel.
<b>Step 4</b>	<b>signalling refresh out-of-band interval interval</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-rsvp-cntl)# <b>signalling refresh out-of-band interval 200</b>	Configures optical refresh interval.  The interval argument is the interval (in seconds) at which refresh messages are sent and expected to be received. The range is 180 to 86400 (a refresh-interval of 1 day).
<b>Step 5</b>	<b>signalling refresh out-of-band missed miss-count</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-rsvp-cntl)# <b>signalling refresh out-of-band missed 30</b>	Configures number of missed refresh messages allowed before optical tunnel states are deleted.  The miss-count argument is the number of refresh messages, expected at the configured refresh-interval, which can be missed before optical tunnel states time out. The accepted range is 1 to 48. The default value is 12.
<b>Step 6</b>	<b>commit</b>	

## nLight Enhancements: Configurations and Verifications

These topics describe the configurations and verifications for the nLight enhancements made:

### Configuring an ERO for a GMPLS Tunnel

Perform this task to configure an ERO for a GMPLS tunnel.

### SUMMARY STEPS

1. **configure**
2. **mpls traffic-eng**
3. **gmpls optical-uni**
4. **controller dwdm interface**

5. **tunnel-properties**
6. **tunnel-id *number***
7. **logging events lsp-status state**
8. **destination ipv4 unicast *address***
9. **path-option *number* explicit name *name* lockdown verbatim**
10. **commit**

## DETAILED STEPS

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure</b>  <b>Example:</b> RP/0/RP0/CPU0:router# configure	Enters Global Configuration mode.
<b>Step 2</b>	<b>mpls traffic-eng</b>  <b>Example:</b> RP/0/RP0/CPU0:router(config)# mpls traffic-eng	Enters MPLS-TE configuration mode.
<b>Step 3</b>	<b>gmppls optical-uni</b>  <b>Example:</b> RP/0/RP0/CPU0:router(config-mpls-te)# gmppls optical-uni	Enters GMPLS UNI configuration submode.
<b>Step 4</b>	<b>controller dwdm <i>interface</i></b>  <b>Example:</b> RP/0/RP0/CPU0:router(config-te-gmppls-uni)# controller dwdm 0/2/1/1	Enters GMPLS UNI controller submode.
<b>Step 5</b>	<b>tunnel-properties</b>  <b>Example:</b> RP/0/RP0/CPU0:router(config-te-gmppls-cntl)# tunnel-properties  RP/0/RP0/CPU0:router(config-te-gmppls-tun) #	Enters the submode to configure tunnel-specific information for a GMPLS UNI controller.
<b>Step 6</b>	<b>tunnel-id <i>number</i></b>  <b>Example:</b> RP/0/RP0/CPU0:router(config-te-gmppls-tun) # tunnel-id 1001	Specifies a tunnel-ID for a headend router of a GMPLS tunnel. The tunnel-ID is a 16-bit number ranging from 0 to 65535.

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 7</b>	<b>logging events lsp-status state</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun)# <b>logging events lsp-status state</b>	Configure events to generate system log messages when state changes occur on the GMPLS tunnel. If omitted, no events will result in the generation of system log messages.
<b>Step 8</b>	<b>destination ipv4 unicast address</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun)# <b>destination ipv4 unicast 102.3.233.1</b>	Specifies a tunnel destination for a headend router of a GMPLS tunnel. The destination argument is an IPv4 address.
<b>Step 9</b>	<b>path-option number explicit name name lockdown verbatim</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun)# <b>path-option 10 explicit name explicit_path_a lockdown verbatim</b>	Specifies an explicit path for a headend router of a GMPLS tunnel.  The path-option range is 1 to 1000.  <b>Note</b> lockdown and verbatim are mandatory in ERO path option.
<b>Step 10</b>	<b>commit</b>	

## Verifying an ERO Configuration: Example

The following example shows how to verify an ERO configuration:

```
RP/0/RP0/CPU0:router# show mpls traffic-eng tunnels 1001 detail

Name: GMPLS-UNI-dwdm0_3_0_0 Destination: 2.2.2.2
      Signalled-Name: head_ot1001_2.2.2.2
      GMPLS UNI tunnel controlling link dwdm0/3/0/0, tunnel-id: 1001
      Status:
          Admin:    up Oper:    up Path: valid Signalling: connected

      path option 10, (LOCKDOWN verbatim) type explicit explicit_path_a (Basis for Setup,
      path weight 0)
          G-PID: 0x0800 (derived from egress interface properties)
          Creation Time: Fri Jul 17 08:41:21 ---- (3d07h ago)
          .....
          Current LSP Info:
              Instance: 20
              Uptime: 00:00:33 (since Mon Jul 20 ---- 15:45:22)
              Upstream label:
                  Optical label:
                      Grid : DWDM
                      Channel spacing : 50 GHz
                      Identifier : 0
                      Channel Number : 60
              Downstream label:
                  Optical label:
                      Grid : DWDM
                      Channel spacing : 50 GHz
                      Identifier : 0
                      Channel Number : 60
```

## Configuring Wavelength for a Path Option

```

Router-IDs: local      1.1.1.1
              downstream 2.2.2.2
Soft Preemption: None
SRLGs: not collected
Path Info:
  Outgoing:
    Explicit Route:
      Strict, 10.10.10.2
      Strict, 11.11.11.3
      Strict, 12.12.12.3
.....
```

## Configuring Wavelength for a Path Option

Perform this task to configure wavelength for a path option for a GMPLS tunnel.

### SUMMARY STEPS

1. **configure**
2. **mpls traffic-eng**
3. **gmpls optical-uni**
4. **controller dwdm *interface***
5. **tunnel-properties**
6. **tunnel-id *number***
7. **destination ipv4 unicast *address***
8. **path-option *number* explicit name *name* signaled-label dwdm wavelength *dwdm channel number* lockdown verbatim**
9. **commit**

### DETAILED STEPS

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure</b>  <b>Example:</b> RP/0/RP0/CPU0:router# configure	Enters Global Configuration mode.
<b>Step 2</b>	<b>mpls traffic-eng</b>  <b>Example:</b> RP/0/RP0/CPU0:router(config)# mpls traffic-eng	Enters MPLS-TE configuration mode.
<b>Step 3</b>	<b>gmpls optical-uni</b>  <b>Example:</b> RP/0/RP0/CPU0:router(config-mpls-te)# gmpls optical-uni	Enters GMPLS UNI configuration submode.

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 4</b>	<b>controller dwdm interface</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-uni)# <b>controller dwdm 0/3/0/0</b>	Enters GMPLS UNI controller submode.
<b>Step 5</b>	<b>tunnel-properties</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-cntl)# <b>tunnel-properties</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun)#	Enters the submode to configure tunnel-specific information for a GMPLS UNI controller.
<b>Step 6</b>	<b>tunnel-id number</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun)# <b>tunnel-id 1001</b>	Specifies a tunnel-ID for a headend router of a GMPLS tunnel. The tunnel-ID is a 16-bit number ranging from 0 to 65535.
<b>Step 7</b>	<b>destination ipv4 unicast address</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun)# <b>destination ipv4 unicast 2.2.2.2</b>	Specifies a tunnel destination for a headend router of a GMPLS tunnel. The destination argument is an IPv4 address.
<b>Step 8</b>	<b>path-option number explicit name name signaled-label dwdm wavelength dwdm channel number lockdown verbatim</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun)# <b>path-option 10 explicit name exp_all_loose_hop signaled-label dwdm wavelength 10 lockdown verbatim</b>	Specifies a wavelength for the path option.  The DWDM channel number range is 1 to 89.  The DWDM channel number configured is formulated as 61-channel number. So, if we want channel number 42 (in the supported channel list), the configured "DWDM channel number" will be 61 - 42 = 19.
<b>Step 9</b>	<b>commit</b>	

## Configuring and Verifying Wavelength Configuration: Examples

The following sequence of examples show how to add a wavelength to a path option for a GMPLS tunnel and verify the outgoing label is set accordingly.

This example shows how to configure a GMPLS tunnel with no ERO path option.

```
mpls optical-uni
  controller dwdm0/3/0/0
    tunnel-properties
      tunnel-id 1001
```

## Configuring and Verifying Wavelength Configuration: Examples

```
destination ipv4 unicast 2.2.2.2
path-option 10 no-ero lockdown
!
!
```

This example shows how to verify the default values for the outgoing label (UNI-N source, channel number same as Default Channel) and the list of valid wavelengths.

```
RP/0/RP0/CPU0:router#show mpls traffic-eng link-management optical-uni controller dwdm
0/3/0/0

Optical interface: dwdm0/3/0/0
Overview:
  IM state: Up
  Child interface: POS0_3_0_0: IM state Up
  OLM/LMP state: Up
  Optical tunnel state: up
Connection:
  Tunnel role: Head
  Tunnel-id: 1001, LSP-id 21, Extended tunnel-id 1.1.1.1
  Tunnel source: 1.1.1.1, destination: 2.2.2.2
  Optical router-ids: Local: 1.1.1.1, Remote: 2.2.2.2
  Label source: UNI-N
Upstream label:
  Optical label:
    Grid : DWDM
    Channel spacing : 50 GHz
    Identifier : 0
    Channel Number : 60
Downstream label:
  Optical label:
    Grid : DWDM
    Channel spacing : 50 GHz
    Identifier : 0
    Channel Number : 60
SRLG discovery: Disabled
SRLG announcement: None
...
Optical capabilities:
  Controller type: DWDM
  Channel spacing: 50 GHz
  Default channel: 60
89 supported channels:
  -28, -27, -26, -25, -24, -23, -22, -21
  -20, -19, -18, -17, -16, -15, -14, -13
  -12, -11, -10, -9, -8, -7, -6, -5
  -4, -3, -2, -1, 0, 1, 2, 3
  4, 5, 6, 7, 8, 9, 10, 11
  12, 13, 14, 15, 16, 17, 18, 19
  20, 21, 22, 23, 24, 25, 26, 27
  28, 29, 30, 31, 32, 33, 34, 35
  36, 37, 38, 39, 40, 41, 42, 43
  44, 45, 46, 47, 48, 49, 50, 51
  52, 53, 54, 55, 56, 57, 58, 59
  60
Controller SRLGs
None
```

This example shows how to set valid wavelength 10 (61 - 51) for the current path.

```

gmpls optical-uni
  controller dwdm0/3/0/0
    tunnel-properties
      tunnel-id 1001
      destination ipv4 unicast 2.2.2.2
      path-option 10 explicit name explicit_all_loose_multi_hop signaled-label dwdm wavelength
      10 lockdown verbatim
    !
  !
!
```

This example shows how to verify that the tunnel is up and the specified wavelength is used (label source is UNI-C and outgoing label is 51).

```

RP/0/RP0/CPU0:router#show mpls traffic-eng link-management optical-uni controller dwdm
0/3/0/0

Optical interface: dwdm0/3/0/0
  Overview:
    IM state: Up
    Child interface: POS0_3_0_0: IM state Up
    OLM/LMP state: Up
    Optical tunnel state: up
  Connection:
    Tunnel role: Head
    Tunnel-id: 1001, LSP-id 23, Extended tunnel-id 1.1.1.1
    Tunnel source: 1.1.1.1, destination: 2.2.2.2
    Optical router-ids: Local: 1.1.1.1, Remote: 2.2.2.2
    Label source: UNI-C
    Upstream label:
      Optical label:
        Grid : DWDM
        Channel spacing : 50 GHz
        Identifier : 0
        Channel Number : 51
    Downstream label:
      Optical label:
        Grid : DWDM
        Channel spacing : 50 GHz
        Identifier : 0
        Channel Number : 51
    SRLG discovery: Disabled
    SRLG announcement: None
  ...
  Optical capabilities:
    Controller type: DWDM
    Channel spacing: 50 GHz
    Default channel: 60
    89 supported channels:
      -28, -27, -26, -25, -24, -23, -22, -21
      -20, -19, -18, -17, -16, -15, -14, -13
      -12, -11, -10, -9, -8, -7, -6, -5
      -4, -3, -2, -1, 0, 1, 2, 3
      4, 5, 6, 7, 8, 9, 10, 11
      12, 13, 14, 15, 16, 17, 18, 19
      20, 21, 22, 23, 24, 25, 26, 27
      28, 29, 30, 31, 32, 33, 34, 35
      36, 37, 38, 39, 40, 41, 42, 43
      44, 45, 46, 47, 48, 49, 50, 51
      52, 53, 54, 55, 56, 57, 58, 59
      60

```

## Configuring Multiple Path Options

Controller SRLGs  
None

This example shows how to verify the upstream label on the tunnel tail.

```
RP/0/RP0/CPU0:router#show mpls traffic-eng link-management optical-unı controller dwdm
0/3/0/0

Optical interface: dwdm0/3/0/0
Overview:
    IM state: Up
    Child interface: POS0_3_0_0: IM state Up
    OLM/LMP state: Up
    Optical tunnel state: up
Connection:
    Tunnel role: Tail
    Tunnel-id: 1001, LSP-id 23, Extended tunnel-id 1.1.1.1
    Tunnel source: 1.1.1.1, destination: 2.2.2.2
    Optical router-ids: Local: 2.2.2.2, Remote: 1.1.1.1
    Label source: UNI-N
    Upstream label:
        Optical label:
            Grid : DWDM
            Channel spacing : 50 GHz
            Identifier : 0
            Channel Number : 51
    Downstream label:
        Optical label:
            Grid : DWDM
            Channel spacing : 50 GHz
            Identifier : 0
            Channel Number : 51
    SRLG discovery: Disabled
    SRLG announcement: None
.....
Optical capabilities:
    Controller type: DWDM
    Channel spacing: 50 GHz
    Default channel: 60
    89 supported channels:
        -28, -27, -26, -25, -24, -23, -22, -21
        -20, -19, -18, -17, -16, -15, -14, -13
        -12, -11, -10, -9, -8, -7, -6, -5
        -4, -3, -2, -1, 0, 1, 2, 3
        4, 5, 6, 7, 8, 9, 10, 11
        12, 13, 14, 15, 16, 17, 18, 19
        20, 21, 22, 23, 24, 25, 26, 27
        28, 29, 30, 31, 32, 33, 34, 35
        36, 37, 38, 39, 40, 41, 42, 43
        44, 45, 46, 47, 48, 49, 50, 51
        52, 53, 54, 55, 56, 57, 58, 59
        60
    Controller SRLGs
    None
```

## Configuring Multiple Path Options

Perform this task to configure multiple path options for a single tunnel.

**Note**

If a tunnel is up and a lower index path option is configured, the tunnel does not try the lower index path option, unless for some reason the tunnel is flapped or reoptimized.

**SUMMARY STEPS**

1. **configure**
2. **mpls traffic-eng**
3. **gmpls optical-uni**
4. **controller dwdm *interface***
5. **tunnel-properties**
6. **tunnel-id *number***
7. **logging events lsp-status state**
8. **destination ipv4 unicast *address***
9. **path-option *number* explicit name *name* lockdown verbatim**
10. **path-option *number* explicit name *name* lockdown verbatim**
11. **path-option *number* no-ero lockdown**
12. **commit**

**DETAILED STEPS**

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure</b>  <b>Example:</b> RP/0/RP0/CPU0:router# configure	Enters Global Configuration mode.
<b>Step 2</b>	<b>mpls traffic-eng</b>  <b>Example:</b> RP/0/RP0/CPU0:router(config)# mpls traffic-eng	Enters MPLS-TE configuration mode.
<b>Step 3</b>	<b>gmpls optical-uni</b>  <b>Example:</b> RP/0/RP0/CPU0:router(config-mpls-te)# gmpls optical-uni	Enters GMPLS UNI configuration submode.
<b>Step 4</b>	<b>controller dwdm <i>interface</i></b>  <b>Example:</b> RP/0/RP0/CPU0:router(config-te-gmpls-uni)# controller dwdm 0/3/0/0	Enters GMPLS UNI controller submode.

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 5</b>	<b>tunnel-properties</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-cntl)# <b>tunnel-properties</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun) #	Enters the submode to configure tunnel-specific information for a GMPLS UNI controller.
<b>Step 6</b>	<b>tunnel-id number</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun) # <b>tunnel-id 1001</b>	Specifies a tunnel-ID for a headend router of a GMPLS tunnel. The tunnel-ID is a 16-bit number ranging from 0 to 65535.
<b>Step 7</b>	<b>logging events lsp-status state</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun) # <b>logging events lsp-status state</b>	Configure events to generate system log messages when state changes occur on the GMPLS tunnel. If omitted, no events will result in the generation of system log messages.
<b>Step 8</b>	<b>destination ipv4 unicast address</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun) # <b>destination ipv4 unicast 2.2.2.2</b>	Specifies a tunnel destination for a headend router of a GMPLS tunnel. The destination argument is an IPv4 address.
<b>Step 9</b>	<b>path-option number explicit name name lockdown verbatim</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun) # <b>path-option 10 explicit name explicit_path_a lockdown verbatim</b>	Specifies a path option for a headend router of a GMPLS tunnel.  The path-option range is 1 to 1000.
<b>Step 10</b>	<b>path-option number explicit name name lockdown verbatim</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun) # <b>path-option 20 explicit name explicit_path_b lockdown verbatim</b>	Specifies a path option.  The path-option range is 1 to 1000.
<b>Step 11</b>	<b>path-option number no-ero lockdown</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun) # <b>path-option 30 no-ero lockdown</b>	Specifies a path option with no ERO.

	Command or Action	Purpose
<b>Step 12</b>	<b>commit</b>	

## Configuring and Verifying Multiple Path Options: Examples

This example shows how to configure multiple path options.

```
mpls traffic-eng
  gmpls optical-uni
    controller dwdm0/2/0/2
      tunnel-properties
        path-option 10 explicit name explicit_path_a lockdown verbatim
        path-option 20 explicit name explicit_path_b lockdown verbatim
        path-option 30 no-ero lockdown
    !
!
```

The following sequence of examples show how to configure a GMPLS tunnel, add a new path option with a lower index than the path option in use, flap the tunnel and verify that the new path option (with a lower index) is used .

This example shows how to configure a GMPLS tunnel with one path option.

```
gmpls optical-uni
  controller dwdm0/3/0/0
    tunnel-properties
      tunnel-id 1001
      destination ipv4 unicast 2.2.2.2
      path-option 10 explicit name explicit_path_a lockdown verbatim
    !
!
```

This example shows how to verify the tunnel path and status with a show command.

```
RP/0/RP0/CPU0:router#show mpls traffic-eng tunnels 1001 detail

Name: GMPLS-UNI-dwdm0_3_0_0 Destination: 2.2.2.2
  Signalled-Name: head_ot1001_2.2.2.2
GMPLS UNI tunnel controlling link dwdm0/3/0/0, tunnel-id: 1001
  Status:
    Admin: up Oper: up Path: valid Signalling: connected

    path option 10, (LOCKDOWN verbatim) type explicit explicit_path_a (Basis for Setup,
path weight 0)
      G-PID: 0x0800 (derived from egress interface properties)
      Creation Time: Fri Jul 17 08:41:21 ---- (3d06h ago)
    ...

```

This example shows how to add another path option with a lower index.

```
gmpls optical-uni
  controller dwdm0/3/0/0
    tunnel-properties
      tunnel-id 1001
      destination ipv4 unicast 2.2.2.2
      path-option 1 no-ero lockdown
```

## Enabling SRLG Discovery

```

path-option 10 explicit name explicit_path_a lockdown verbatim
!
!
```

Flag the tunnel (or trigger reoptimization) and verify that the tunnel comes up on the path with a lower index.

```
RP/0/RP0/CPU0:router#show mpls traffic-eng tunnels 1001 detail

Name: GMPLS-UNI-dwdm0_3_0_0 Destination: 2.2.2.2
      Signalled-Name: head_ot1001_2.2.2.2
GMPLS UNI tunnel controlling link dwdm0/3/0/0, tunnel-id: 1001
      Status:
          Admin:    up Oper:   up Path: valid Signalling: connected

      path option 1, (LOCKDOWN) type no-ero (Basis for Setup, path weight 0)
      Last Signalled Error : Mon Jul 20 17:03:00 2015
          Info: [24] PathErr(2,2)-(Admin, reason unknown) at 50.0.0.2
      path option 10, (LOCKDOWN verbatim) type explicit explicit_all_loose_multi_hop
      Last Signalled Error : Mon Jul 20 17:03:00 ----
          Info: [25] PathErr(2,2)-(Admin, reason unknown) at 50.0.0.2
```

## Enabling SRLG Discovery

Perform this task to enable SRLG discovery on the head node of a nLight tunnel.



### Note

- SRLG discovery/recording is enabled only on the headend for each tunnel.
- SRLG discovery/recording allows a maximum of 62 SRLGs in RSVP, which is different from the maximum count of 64 in RSI.

## SUMMARY STEPS

1. **configure**
2. **mpls traffic-eng**
3. **mpls optical-uni**
4. **controller dwdm *interface***
5. **tunnel-properties**
6. **logging events lsp-status state**
7. **tunnel-id *number***
8. **record srlg**
9. **destination ipv4 unicast *address***
10. **path-option *number* no-ero lockdown**
11. **commit**

**DETAILED STEPS**

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure</b>  <b>Example:</b> RP/0/RP0/CPU0:router# configure	Enters Global Configuration mode.
<b>Step 2</b>	<b>mpls traffic-eng</b>  <b>Example:</b> RP/0/RP0/CPU0:router(config)# mpls traffic-eng	Enters MPLS-TE configuration mode.
<b>Step 3</b>	<b>gmppls optical-un</b>  <b>Example:</b> RP/0/RP0/CPU0:router(config-mpls-te)# gmppls optical-un	Enters GMPLS UNI configuration submode.
<b>Step 4</b>	<b>controller dwdm interface</b>  <b>Example:</b> RP/0/RP0/CPU0:router(config-te-gmppls-un) # controller dwdm 0/2/0/0	Enters GMPLS UNI controller submode.
<b>Step 5</b>	<b>tunnel-properties</b>  <b>Example:</b> RP/0/RP0/CPU0:router(config-te-gmppls-cntl) # tunnel-properties RP/0/RP0/CPU0:router(config-te-gmppls-tun) #	Enters the submode to configure tunnel-specific information for a GMPLS UNI controller.
<b>Step 6</b>	<b>logging events lsp-status state</b>  <b>Example:</b> RP/0/RP0/CPU0:router(config-te-gmppls-tun) # logging events lsp-status state	Configure events to generate system log messages when state changes occur on the GMPLS tunnel. If omitted, no events will result in the generation of system log messages.
<b>Step 7</b>	<b>tunnel-id number</b>  <b>Example:</b> RP/0/RP0/CPU0:router(config-te-gmppls-tun) # tunnel-id 100	Specifies a tunnel-ID for a headend router of a GMPLS tunnel. The tunnel-ID is a 16-bit number ranging from 0 to 65535.
<b>Step 8</b>	<b>record srlg</b>  <b>Example:</b>	Enables SRLG recording.

## Verifying SRLG Discovery Configuration: Examples

	<b>Command or Action</b>	<b>Purpose</b>
	RP/0/RP0/CPU0:router(config-te-gmpls-tun)# <b>record srlg</b>	
<b>Step 9</b>	<b>destination ipv4 unicast address</b> <b>Example:</b> RP/0/RP0/CPU0:router(config-te-gmpls-tun)# <b>destination ipv4 unicast 192.168.1.2</b>	Specifies a tunnel destination for a headend router of a GMPLS tunnel. The destination argument is an IPv4 address.
<b>Step 10</b>	<b>path-option number no-ero lockdown</b> <b>Example:</b> RP/0/RP0/CPU0:router(config-te-gmpls-tun)# <b>path-option 10 no-ero lockdown</b>	Specifies the path option for a headend router of a nLight (GMPLS) tunnel. The path-option range is 1 to 1000.
<b>Step 11</b>	<b>commit</b>	

## Verifying SRLG Discovery Configuration: Examples

This example shows how to verify SRLG discovery configuration.

```
RP/0/0/CPU0:router#show mpls traffic-eng tunnels 100 detail
Name: GMPLS-UNI-dwdm0_2_0_0 Destination: 192.168.1.2
Signalled-Name: rtrA_ot100_192.168.1.2
GMPLS UNI tunnel controlling link dwdm0/2/0/0, tunnel-id: 100
Status:
Admin: up Oper: up Path: valid Signalling: connected

path option 10, (LOCKDOWN) type no-ero (Basis for Setup, path weight 0)
G-PID: 0x0800 (derived from egress interface properties)
Creation Time: Mon Jul 20 19:32:03 ---- (00:48:02 ago)
Config Parameters:
Priority: 7 7 Affinity: 0x0/0xffff
Path Protection: Not Enabled
BFD Fast Detection: Disabled
Reoptimization after affinity failure: Enabled
SRLG discovery: Enabled

...
Soft Preemption: None
SRLGs: mandatory collection
Path Info:
...
Resv Info:
Record Route:
IPv4 10.10.10.2, flags 0x0
SRLGs: 21, 22, 23, 24
Fspec: avg rate=10000 kbytes, burst=1000 bytes, peak rate=10000 kbytes
Displayed 1 (of 3) heads, 0 (of 0) midpoints, 0 (of 2) tails
Displayed 1 up, 0 down, 0 recovering, 0 recovered heads
```

This example shows how to verify SRLG discovery configuration at the headend and the tailend. The output shows the list of SRLGs.

```

RP/0/0/CPU0:router#show srlg

System Information::
  Interface Count      : 4 (Maximum Interfaces Supported 512)
  Group Count          : 0 (Maximum Groups Supported 50)
  Inherit Location Count : 0 (Maximum Inherit Locations Supported 10)
  Optical Interfaces Count : 4 (Maximum Optical Interfaces Supported 500)

  Interface      : GigabitEthernet0/2/0/0, Value Count : 10, Registrations : 2
  SRLG Values    : 11, 12, 13, 14, 15
                    21, 22, 23, 24, 25
                                         -> Note:
These are announced srlgs.

  Interface      : GigabitEthernet0/2/0/2, Value Count : 0, Registrations : 1
  SRLG Values    :

  Interface      : GigabitEthernet0/2/0/4, Value Count : 0, Registrations : 2
  SRLG Values    :

  Interface      : GigabitEthernet0/2/0/5, Value Count : 0, Registrations : 2
  SRLG Values    :

  Optical Interface: dwdm0/2/0/0, Value Count : 5, References: 2
  SRLG Values    : 11, 12, 13, 14, 15
                                         -> Note:
These are locally configured srlgs for controller (dwdm)

  Optical Interface: dwdm0/2/0/1, Value Count : 0, References: 1
  SRLG Values    :

  Optical Interface: dwdm0/2/0/2, Value Count : 0, References: 1
  SRLG Values    :

  Optical Interface: dwdm0/2/0/3, Value Count : 0, References: 1
  SRLG Values    :

```

## Enabling SRLG Announce

Perform this task to enable SRLG announce. SRLG announce can be enabled on both headend and tailend.

### SUMMARY STEPS

- 1. configure**
- 2. mpls traffic-eng**
- 3. gmpls optical-uni**
- 4. controller dwdm *interface***
- 5. announce srlgs**
- 6. commit**

### DETAILED STEPS

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure</b> <b>Example:</b> <pre>RP/0/RP0/CPU0:router# configure</pre>	Enters Global Configuration mode.

## Verifying SRLG Announce Configuration: Example

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 2</b>	<b>mpls traffic-eng</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config)# <b>mpls traffic-eng</b>	Enters MPLS-TE configuration mode.
<b>Step 3</b>	<b>gmpls optical-uní</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-mpls-te)# <b>gmpls optical-uní</b>	Enters GMPLS UNI configuration submode.
<b>Step 4</b>	<b>controller dwdm interface</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-uni)# <b>controller dwdm 0/1/0/1</b>	Enters GMPLS UNI controller submode.
<b>Step 5</b>	<b>announce srlgs</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-cntl)# <b>announce srlgs</b>	Announces discovered SRLGs to the system.
<b>Step 6</b>	<b>commit</b>	

## Verifying SRLG Announce Configuration: Example

The following example shows how to verify SRLG announce configuration:

```
RP/0/0/CPU0:router#show srlg

System Information::
Interface Count      : 2 (Maximum Interfaces Supported 512)
Group Count          : 0 (Maximum Groups Supported 50)
Inherit Location Count : 0 (Maximum Inherit Locations Supported 10)
Optical Interfaces Count : 5 (Maximum Optical Interfaces Supported 500)

Interface      : GigabitEthernet0/2/0/4, Value Count : 0, Registrations : 2
SRLG Values   :

Interface      : GigabitEthernet0/2/0/5, Value Count : 0, Registrations : 2
SRLG Values   :

Interface: GigabitEthernet0/2/0/0, Value Count : 4, References: 1
SRLG Values     : 21, 22, 23, 24

Optical Interface: dwdm0/2/0/0, Value Count : 3, References: 2
SRLG Values     : 11, 12, 13

Optical Interface: dwdm0/2/0/1, Value Count : 0, References: 1
SRLG Values     :
```

```
Optical Interface: dwdm0/2/0/2, Value Count : 0, References: 1
SRLG Values      :
```

```
Optical Interface: dwdm0/2/0/3, Value Count : 0, References: 1
SRLG Values      :
```

## Configuring SRLG Diversity

Perform this task to configure SRLG diversity with the best-effort or strict exclusion.

### SUMMARY STEPS

1. **configure**
2. **mpls traffic-eng**
3. **attribute-set xro *name***
4. **exclude [best-effort | strict] srlg value *number***
5. **exit**
6. **mpls optical-un**
7. **controller dwdm *interface***
8. **announce srlgs**
9. **tunnel-properties**
10. **logging events lsp-status state**
11. **tunnel-id *number***
12. **record srlg**
13. **destination ipv4 unicast *address***
14. **path-option *number* no-ero xro-attribute-set exclude\_srlgs lockdown**
15. **commit**

### DETAILED STEPS

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure</b> <b>Example:</b> RP/0/RP0/CPU0:router# configure	Enters Global Configuration mode.
<b>Step 2</b>	<b>mpls traffic-eng</b> <b>Example:</b> RP/0/RP0/CPU0:router(config)# mpls traffic-eng	Enters MPLS-TE configuration mode.
<b>Step 3</b>	<b>attribute-set xro <i>name</i></b> <b>Example:</b> RP/0/RP0/CPU0:router(config-te)# attribute-set xro exclude_srlgs	Enters the attribute set submode and specifies the attribute set name.

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 4</b>	<b>exclude [best-effort   strict] srlg value number</b> <b>Example:</b> <pre>RP/0/RP0/CPU0:router(config-te-attribute-set)# exclude best-effort srlg value 21</pre>	Specifies path diversity based on SRLG.
<b>Step 5</b>	<b>exit</b> <b>Example:</b> <pre>RP/0/RP0/CPU0:router(config-te-attribute-set)# exit</pre>	Exits attribute-set submode.
<b>Step 6</b>	<b>mpls optical-uni</b> <b>Example:</b> <pre>RP/0/RP0/CPU0:router(config-mpls-te)# mpls optical-uni</pre>	Enters GMPLS UNI configuration submode.
<b>Step 7</b>	<b>controller dwdm interface</b> <b>Example:</b> <pre>RP/0/RP0/CPU0:router(config-te-gmpls-uni)# controller dwdm 0/2/0/0</pre>	Enters GMPLS UNI controller submode.
<b>Step 8</b>	<b>announce srlgs</b> <b>Example:</b> <pre>RP/0/RP0/CPU0:router(config-te-gmpls-cntl)# announce srlgs</pre>	Announces discovered SRLGs to the system.
<b>Step 9</b>	<b>tunnel-properties</b> <b>Example:</b> <pre>RP/0/RP0/CPU0:router(config-te-gmpls-cntl)# tunnel-properties</pre> <pre>RP/0/RP0/CPU0:router(config-te-gmpls-tun) #</pre>	Enters the submode to configure tunnel-specific information for a GMPLS UNI controller.
<b>Step 10</b>	<b>logging events lsp-status state</b> <b>Example:</b> <pre>RP/0/RP0/CPU0:router(config-te-gmpls-tun) # logging events lsp-status state</pre>	Configure events to generate system log messages when state changes occur on the GMPLS tunnel. If omitted, no events will result in the generation of system log messages.

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 11</b>	<b>tunnel-id number</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun)# <b>tunnel-id 100</b>	Specifies a tunnel-ID for a headend router of a GMPLS tunnel. The tunnel-ID is a 16-bit number ranging from 0 to 65535.
<b>Step 12</b>	<b>record srlg</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun)# <b>record srlg</b>	Enables SRLG recording.
<b>Step 13</b>	<b>destination ipv4 unicast address</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun)# <b>destination ipv4 unicast 192.168.1.2</b>	Specifies a tunnel destination for a headend router of a GMPLS tunnel. The destination argument is an IPv4 address.
<b>Step 14</b>	<b>path-option number no-ero xro-attribute-set exclude_srlgs lockdown</b>  <b>Example:</b>  RP/0/RP0/CPU0:router(config-te-gmpls-tun)# <b>path-option 10 no-ero xro-attribute-set exclude_srlgs lockdown</b>	The XRO attribute set is attached to the GMPLS UNI tunnel through the path option.  The path-option range is 1 to 1000.
<b>Step 15</b>	<b>commit</b>	

## Verifying SRLG Diversity Configuration: Example

The following example shows how to verify SRLG diversity configuration:

```
RP/0/0/CPU0:router#show mpls traffic-eng tunnels 100 detail

Name: GMPLS-UNI-dwdm0_2_0_0 Destination: 192.168.1.2
      Signalled-Name: rtrA_ot100_192.168.1.2
GMPLS UNI tunnel controlling link dwdm0/2/0/0, tunnel-id: 100
Status:
      Admin:    up Oper:   up Path: valid Signalling: connected

      path option 10, (LOCKDOWN) type no-ero  (Basis for Setup, path weight 0)
      XRO attribute-set: exclude_srlgs
      Best-effort, SRLG id 21
Last Signalled Error : Mon Jul 20 20:55:33 ----
      Info: [5] PathErr(24,67)-(routing, route blocked by exclude route) at 10.10.10.2
      G-PID: 0x0800 (derived from egress interface properties)
      Creation Time: Mon Jul 20 19:32:03 2015 (01:25:19 ago)
Config Parameters:
      Priority: 7 7 Affinity: 0x0/0xffff
      Path Protection: Not Enabled
      BFD Fast Detection: Disabled
      Reoptimization after affinity failure: Enabled
      SRLG discovery: Enabled
```

```

Binding Label: 0
History:
  Tunnel has been up for: 00:00:23 (since Mon Jul 20 20:56:59 EDT 2015)
  Current LSP:
    Uptime: 00:00:23 (since Mon Jul 20 20:56:59 EDT ----)
  Current LSP Info:
    Instance: 6
    Uptime: 00:00:23 (since Mon Jul 20 20:56:59 EDT ----)
    Upstream label:
      Optical label:
        Grid : DWDM
        Channel spacing : 50 GHz
        Identifier : 0
        Channel Number : 16
    Downstream label:
      Optical label:
        Grid : DWDM
        Channel spacing : 50 GHz
        Identifier : 0
        Channel Number : 16
    Router-IDs: local 192.168.1.1
                  downstream 192.168.1.2
    Soft Preemption: None
    SRLGs: mandatory collection
  Path Info:
    Outgoing:
      No ERO
  Route Exclusions:
    Best-effort, SRLG id 21
  Record Route: Disabled
  Tspec: avg rate=10000 kbytes, burst=1000 bytes, peak rate=10000 kbytes
  Session Attributes: Local Prot: Not Set, Node Prot: Not Set, BW Prot: Not Set
  Resv Info:
    Record Route:
      IPv4 10.10.10.2, flags 0x0
      SRLGs: 21, 22, 23, 24
    Ftspec: avg rate=10000 kbytes, burst=1000 bytes, peak rate=10000 kbytes
  Displayed 1 (of 3) heads, 0 (of 0) midpoints, 0 (of 2) tails
  Displayed 1 up, 0 down, 0 recovering, 0 recovered heads

```

## Configuration Examples for GMPLS UNI

These configuration examples are provided for GMPLS UNI:

### Configuring Head UNI-C for a GMPLS Tunnel: Example

This example shows the minimal head UNI-C configuration required to establish a GMPLS tunnel:

```

rsvp
  controller dwdm 0/1/0/1
    signalling refresh out-of-band interval 3600
    signalling refresh out-of-band missed 24
  !
  !
  mpls traffic-eng
    gmpls optical-uni
      controller dwdm 0/1/0/1
        tunnel-properties

```

```

        tunnel-id 100
        destination 100.20.20.20
        path-option 10 no-ero
    !
    !
    !
lmp
    gmpls optical-uni
        router-id 100.11.11.11
        neighbor nbr_A
            ipcc routed
            neighbor router-id ipv4 unicast 100.12.12.12
    !
    controller dwdm 0/1/0/1
        neighbor nbr_A
        link-id ipv4 unicast 192.168.100.1
        neighbor link-id ipv4 unicast 192.168.100.2
        neighbor interface-id unnumbered 13
    !
    !
!
```

## Configuring Tail UNI-C for a GMPLS Tunnel: Example

This example shows the minimal tail UNI-C configuration required to establish a GMPLS tunnel:



**Note** The controller must be specified under the GMPLS UNI submode to inform TE that incoming GMPLS path messages are to be accepted and processed.

```

rsvp
    controller dwdm 0/1/0/1
        signalling refresh out-of-band interval 3600
        signalling refresh out-of-band missed 24
    !
    !
mpls traffic-eng
    gmpls optical-uni
        controller dwdm 0/1/0/1
    !
    !
lmp
    gmpls optical-uni
        router-id 100.20.20.20
        neighbor nbr_B
            ipcc routed
            neighbor router-id ipv4 unicast 100.19.19.19
    !
    controller dwdm 0/1/0/1
        neighbor nbr_B
        link-id ipv4 unicast 192.168.103.2
        neighbor link-id ipv4 unicast 192.168.103.1
        neighbor interface-id unnumbered 22
    !
!
```

!

## Configuring LSP Diversity: Example

This example shows the configuration for two diverse LSPs:

```

mpls traffic-eng
  attribute-set xro exclude-tun1
    exclude best-effort lsp source 88.0.0.8 destination 10.0.0.2 tunnel-id 1
    extended-tunnel-id 88.0.0.8
  !
  attribute-set xro exclude-tun2
    exclude strict lsp source 88.0.0.8 destination 10.0.1.2 tunnel-id 2 extended-tunnel-id
    88.0.0.8 lsp-id 2
  !
  gmpls optical-uni
    controller dwdm 0/1/0/0
      tunnel-properties
        logging events lsp-status state
        tunnel-id 1
        destination ipv4 unicast 10.0.0.2
        path-option 10 no-ero xro-attribute-set exclude-tun2
      !
    !
    controller dwdm 0/1/0/1
      tunnel-properties
        logging events lsp-status state
        tunnel-id 2
        destination ipv4 unicast 10.0.1.2
        path-option 10 no-ero xro-attribute-set exclude-tun1
      !
    !
  !
!
```

## Additional References

For additional information related to implementing GMPLS UNI, refer to the following references:

### Related Documents

Related Topic	Document Title
GMPLS UNI commands	<i>GMPLS UNI Commands</i> module in <i>MPLS Command Reference for the Cisco CRS Router</i>
MPLS Traffic Engineering commands	<i>MPLS Traffic Engineering commands</i> module in <i>MPLS Command Reference for the Cisco CRS Router</i>
RSVP commands	<i>RSVP commands</i> module in <i>MPLS Command Reference for the Cisco CRS Router</i>
Getting started material	<i>Cisco IOS XR Getting Started Guide for the Cisco CRS Router</i>

Related Topic	Document Title
Information about user groups and task IDs	<i>Configuring AAA Services module in System Security Configuration Guide for Cisco CRS Routers</i>

### Standards

Standard	Title
OIF UNI 1.0	<i>User Network Interface (UNI) 1.0 Signaling Specification</i>

### MIBs

MIBs	MIBs Link
—	To locate and download MIBs using Cisco IOS XR software, use the Cisco MIB Locator found at the following URL and choose a platform under the Cisco Access Products menu: <a href="http://cisco.com/public/sw-center/netmgmt/cmtk/mibs.shtml">http://cisco.com/public/sw-center/netmgmt/cmtk/mibs.shtml</a>

### RFCs

RFCs	Title
RFC 3471	<i>Generalized Multi-Protocol Label Switching (GMPLS) Signaling Functional Description</i>
RFC 3473	<i>Generalized Multi-Protocol Label Switching (GMPLS) Signaling Resource ReserVation Protocol-Traffic Engineering (RSVP-TE) Extensions</i>
RFC 4208	<i>Generalized Multiprotocol Label Switching (GMPLS) User-Network Interface (UNI): Resource ReserVation Protocol-Traffic Engineering (RSVP-TE) Support for the Overlay Model</i>
RFC 4872	<i>RSVP-TE Extensions in Support of End-to-End Generalized Multi-Protocol Label Switching (GMPLS) Recovery</i>
RFC 4874	<i>Exclude Routes - Extension to Resource ReserVation Protocol-Traffic Engineering (RSVP-TE)</i>
RFC 6205	<i>Generalized Labels for Lambda-Switch-Capable (LSC) Label Switching Routers</i>

**Additional References****Technical Assistance**

Description	Link
The Cisco Technical Support website contains thousands of pages of searchable technical content, including links to products, technologies, solutions, technical tips, and tools. Registered Cisco.com users can log in from this page to access even more content.	<a href="http://www.cisco.com/techsupport">http://www.cisco.com/ techsupport</a>