



## Manage device configuration

To manage a device, Security Cloud Control stores a copy of the device configuration in its local database. When Security Cloud Control reads a configuration from a managed device, it copies and saves the configuration.

Security Cloud Control also reads and saves a copy of a device configuration when the device is onboarded. Each of these actions serves a specific purpose.

- **Discard Changes:** This action is available when a device configuration status is "Not Synced." In the **Not Synced** state, there are changes to the device configuration pending on Security Cloud Control. This option allows you to undo all pending changes. The pending changes are deleted and Security Cloud Control overwrites its copy of the configuration with the copy of the configuration stored on the device.
- **Check for Changes:** This action is available if the device configuration status is "Synced." Click **Check for Changes** to instruct Security Cloud Control to compare its copy of the device configuration with the copy stored on the device. If a difference is detected, Security Cloud Control immediately overwrites its copy of the device configuration with the copy stored on the device.
- **Review Conflict** and **Accept Without Review:** If you have enabled [Conflict Detection](#) on a device, Security Cloud Control checks for configuration changes made on the device every 10 minutes. If the copy of the configuration stored on the device has changed, Security Cloud Control notifies you by displaying the "Conflict Detected" configuration status.
  - **Review Conflict:** Click **Review Conflict** to review changes made directly on a device and accept or reject them.
  - **Accept Without Review:** This action overwrites the copy of the device configuration on Security Cloud Control with the latest copy of the configuration stored on the device. Security Cloud Control does not prompt you to confirm the differences in the two copies of the configuration before taking the overwriting action.

**Read All:** This is a bulk operation. You can select any number of devices in any state and click **Read All** to overwrite all the device configurations stored on Security Cloud Control with the configurations stored on the devices.

- **Deploy Changes:** When you make changes to a device configuration, Security Cloud Control saves your changes to its copy of the configuration. These changes remain **Pending** in Security Cloud Control until you deploy them to the device. If there are pending changes that have not been deployed, the device is in the **Not Synced** configuration state.

Pending configuration changes do not affect network traffic. They take effect only after Security Cloud Control deploys them to the device.

When Security Cloud Control deploys changes to a device configuration, only the elements that were changed are overwritten. The entire device configuration file is not overwritten. You can deploy changes to one device or multiple devices simultaneously.

- **Discard All:** This option appears after you click **Preview and Deploy...** When you click **Preview and Deploy...**, Security Cloud Control displays a preview of the pending changes in Security Cloud Control. You can delete all pending changes from Security Cloud Control without deploying them to the selected devices by clicking **Discard All**. Unlike "Discard Changes," deleting the pending changes completes the operation.
- [Read, discard, and deploy configuration changes, on page 2](#)
- [Synchronizing configurations between Security Cloud Control and device, on page 9](#)

## Read, discard, and deploy configuration changes

### Read All Device Configurations

If a configuration change is made to a device outside of Security Cloud Control, the device configuration stored on Security Cloud Control and the device's local copy of its configuration are no longer the same. You may want to overwrite Security Cloud Control's copy of the device's configuration with the configuration stored on the device to make the configurations the same again. You can perform this task on many devices simultaneously using the **Read All** link.

For more information about how Security Cloud Control manages the two copies of the device configuration, refer to [Reading, Discarding, Checking for, and Deploying Configuration Changes](#).

Here are three configuration statuses where clicking **Read All** will overwrite Security Cloud Control's copy of the device's configuration with the device's copy of the configuration.

- **Conflict Detected:** If conflict detection is enabled, Security Cloud Control polls the devices it manages every 10 minutes for changes made to their configurations. If Security Cloud Control finds that the configuration on the device has changed, Security Cloud Control displays a "Conflict detected" configuration status for the device.
- **Synced:** If the device is in a synced state, and you click **Read All**, Security Cloud Control immediately checks the devices to determine if there have been any changes made to its configurations directly. After clicking **Read All**, Security Cloud Control confirms your intent to overwrite its copy of the device's configuration and then Security Cloud Control performs the overwrite.
- **Not Synced:** If the device is in the **Not Synced** state, and you click **Read All**, Security Cloud Control warns you that there are pending changes made to the device's configuration using Security Cloud Control and that proceeding with the **Read All** operation will delete those changes and then overwrite Security Cloud Control's copy of the configuration with the configuration on the device. This Read All functions like [Discard Changes](#).

## Procedure

- 
- Step 1** Choose **Security Devices**.
- Step 2** Click the **Devices** tab.
- Step 3** Click the appropriate device type tab.
- Step 4** (Optional) Create a [change request label](#) to identify the results of this bulk action easily in the change log.
- Step 5** Select the devices whose configurations you want to save in Security Cloud Control.  
Security Cloud Control only provides command buttons for actions that can be applied to all the selected devices.  
Security Cloud Control warns you if there are configuration changes staged on Security Cloud Control for any of the devices you selected and asks if you want to continue with the bulk reading configurations action.
- Step 6** Click **Read All** to continue.
- Step 7** Look at the [notifications tab](#) for the progress of the **Read All** configurations operation. If you want more information about how individual actions in the bulk operation succeeded or failed, click the blue **Review** link and you will be directed to the [Jobs page](#).
- Step 8** If you created and activated a change request label, remember to clear it so that you don't inadvertently associate other configuration changes with this event.
- 

## Related Information

- [Reading, Discarding, Checking for, and Deploying Configuration Changes](#)
- [Discard Changes](#)
- [Check for Changes](#)

# Read changes from Firewalls

To manage a Cisco IOS device or SSH device, Security Cloud Control must have its own copy of the device configuration file. The device is onboarded the first time you allow Security Cloud Control to read and save its configuration file. When you check the configuration from the device, Security Cloud Control saves a new copy of the device configuration file and replaces the copy in its database. For more information, refer to [Reading, Discarding, Checking for, and Deploying Configuration Changes](#).

For more information about detecting changes that were made directly to the Cisco IOS or SSH device outside of Security Cloud Control, refer to [Check for Changes](#).

For more information on how to undo configuration changes that you have started to make on Security Cloud Control but have not deployed to the IOS or SSH device, refer to [Discard Changes](#).

## Preview and deploy configuration changes for all devices

Security Cloud Control informs you when you have made a configuration change to a device in your organization, but you have not deployed that change, by displaying an orange dot on the deploy icon . Each device affected by these changes displays a status of "Not Synced" in the **Security Devices** page. Click **Deploy** to review which devices have pending changes and deploy the changes to those devices.

This deployment method is available for all supported devices.

You can use this deployment method for a single configuration change. Alternatively, you can wait and deploy multiple changes at once.

### Procedure

---

- Step 1** In the menu bar of Security Cloud Control click the **Deploy** button .
  - Step 2** Select the devices with changes you want to deploy. If a device displays a yellow caution triangle, you cannot deploy changes to that device. Hover your pointer over the yellow caution triangle to see the reason.
  - Step 3** (Optional) If you want to see more information about a pending change, click the **View Detailed Change log** link to open the change log associated with that change. Click the **Deploy** icon to return to the **Devices with Pending Changes** page.
  - Step 4** Click **Deploy Now** to deploy the changes immediately to the devices that you selected. You will see the progress in the Active jobs indicator in the Jobs tray.
  - Step 5** (Optional) After the deployment has finished, click **Jobs** in the Security Cloud Control navigation bar. The results of the deployment appear in a recent "Deploy Changes" job.
  - Step 6** If you created a change request label and have no more configuration changes to associate with it, clear the label.
- 

## Bulk Deploy Device Configurations

If you have made changes to multiple devices, for instance by editing a shared object, you can apply those change to all of the affected devices at once:

### Procedure

---

- Step 1** In the left pane, click **Security Devices**.
- Step 2** Click the **Devices** tab.
- Step 3** Click the appropriate device type tab.
- Step 4** Select all of the devices for which you have made configuration changes on Security Cloud Control. These devices should show "Not Synced" status.
- Step 5** Deploy the changes using one of these methods:
  - Click the  button at the top-right of the screen to view the **Devices with Pending Changes** window. This gives you a chance to review the pending changes on the devices you selected before you deploy them. Click **Deploy Now** to deploy the changes.

#### Note

If you see a yellow warning triangle next to a device on the **Devices with Pending Changes** screen, you cannot deploy a change to that device. Hover your mouse over the warning triangle for information about why changes cannot be deployed to that device.

- Click **Deploy All**  on the details pane. Review any warnings and click **OK**. The bulk deployment starts immediately without a review of the changes.

**Step 6** (Optional) Click the Jobs icon  in the navigation bar to view the results of the bulk deploy.

## About Scheduled Automatic Deployments

Using Security Cloud Control, you can make configuration changes to one or more of the devices it manages and then schedule the changes to be deployed to those devices at a time that is convenient for you.

You can only schedule deployments if you [Enable scheduled automatic deployments](#) in the **Tenant Settings** tab of the Settings page. Once this option is enabled, you can create, edit, or delete scheduled deployments. A scheduled deployment deploys all the staged changes saved on Security Cloud Control at the date and time set. You can also view and delete scheduled deployments from the Jobs page.

If there were changes made directly to the device that have not been [read](#) to Security Cloud Control, the scheduled deployment will be skipped until that conflict is resolved. The Jobs page will list any instance where a scheduled deployment fails. If **Enable the Option to Schedule Automatic Deployments** is turned off, all scheduled deployments are deleted.



### Caution

If you schedule a new deployment for multiple devices, and some of those devices already have deployments scheduled, the new scheduled deployment overwrites the existing scheduled deployments.



### Note

When you create a scheduled deployment, the schedule is created in your local time, not in the time zone of the device. Scheduled deployments *do not* automatically adjust for daylight savings time.

## Schedule an Automatic Deployment

The deployment schedule can be a single event or a recurring event. You may find recurring automatic deployments a convenient way to line up recurring deployments with your maintenance window. Follow this procedure to schedule a one-time or a recurring deployment for a single device.



### Important

This procedure applies only to ASAs and FDM-managed devices.

To schedule deployments for Secure Firewall Threat Defense devices managed by on-premises Firewall Management Center or Cloud-Delivered Firewall Management Center, see [Scheduling](#).



### Note

If you schedule a deployment for a device that has an existing deployment scheduled, the new scheduled deployment overwrites the existing deployment.

### Procedure

- 
- Step 1** From the Security Cloud Control home page, choose **Security Devices**.
- Step 2** Click the **Devices** tab.
- Step 3** Click the appropriate device type tab.
- Step 4** Select one or more devices.
- Step 5** In the Device Details pane, locate the Scheduled Deployments tab and click **Schedule**.
- Step 6** Select when the deployment should occur.
- For a one-time deployment, click the **Once on** option to select a date and time from the calendar.
  - For a recurring deployment, click the **Every** option. You can choose either a daily or once a week deployment. Select the **Day** and **Time** the deployment should occur.
- Step 7** Click **Save**.
- 

## Edit a Scheduled Deployment

Follow this procedure to edit a scheduled deployment:

### Procedure

- 
- Step 1** From the Security Cloud Control home page, choose **Security Devices**.
- Step 2** Click the **Devices** tab.
- Step 3** Click the appropriate device type tab.
- Step 4** Select one or more devices.
- Step 5** In the **Device Details** pane, locate the Scheduled Deployments tab and click **Edit**.
- 
- Step 6** Edit the recurrence, date, or time of a scheduled deployment.
- Step 7** Click **Save**.
- 

## Delete a Scheduled Deployment

Follow this procedure to delete a scheduled deployment:



- 
- Note** If you schedule a deployment for multiple devices, and then change or delete the schedule for some of the devices, the original scheduled deployment for the remaining devices will be preserved.
-

## Procedure

- 
- Step 1** Click the **Devices** tab.
- Step 2** Click the appropriate device type tab.
- Step 3** Select one or more devices.
- Step 4** In the **Device Details** pane, locate the **Scheduled Deployments** tab and click **Delete** .
- 

## What to do next

- [Reading, Discarding, Checking for, and Deploying Configuration Changes](#)
- [Read All Device Configurations, on page 2](#)
- [Preview and deploy configuration changes for all devices, on page 3](#)

# Check for Configuration Changes

**Check for Changes** to determine if the device's configuration has been changed directly on the device and it is no longer the same as the copy of the configuration stored on Security Cloud Control. You will see the this option when the device is in the "Synced" state.

To check changes:

## Procedure

- 
- Step 1** From the Security Cloud Control home page, choose **Security Devices**.
- Step 2** Click the **Devices** tab.
- Step 3** Click the appropriate device type tab.
- Step 4** Select the device, whose configuration you suspect may have been changed directly on the device.
- Step 5** Click **Check for Changes** in the Synced pane on the right.
- Step 6** The behavior that follows is slightly different depending on the device:
- For device if there has been a change to the device's configuration, you will receive the message:  

```
Reading the policy from the device. If there are active deployments on the device,
reading will start after they are finished.
```

    - Click **OK** to continue. The configuration on the device will overwrite the stored configuration on Security Cloud Control.
    - Click **Cancel** to cancel the action.
  - For SSH device:

- a. Compare the two configurations presented to you. Click **Continue**. The configuration labeled **Last Known Device Configuration** is the configuration stored on Security Cloud Control. The configuration labeled **Found on Device** is the configuration saved on the ASA.
  - b. Select either:
    1. **Reject** the out-of-band changes to keep the "Last Known Device Configuration."
    2. **Accept** the out-of-band changes to overwrite the device's configuration stored in Security Cloud Control with the configuration found on the device.
  - c. Click **Continue**.
- 

## Discard Configuration Changes

Click **Discard Changes** when you want to "undo" all the *undeployed* configuration changes you made to a device's configuration using Security Cloud Control. When you click **Discard Changes**, Security Cloud Control *completely overwrites* its local copy of a device's configuration with the configuration stored on the device.

When you click **Discard Changes**, your device's configuration status is in a **Not Synced** state. After you discard your changes, the copy of the configuration on Security Cloud Control will be the same as the copy of the configuration on the device and the configuration status in Security Cloud Control will return to Synced.

To discard, or "undo," all of your undeployed configuration changes for a device:

### Procedure

---

- Step 1** From the Security Cloud Control home page, choose **Security Devices**.
  - Step 2** Click the **Devices** tab.
  - Step 3** Click the appropriate device type tab.
  - Step 4** Select the device you have been making configuration changes to.
  - Step 5** Click **Discard Changes** in the **Not Synced** pane on the right.
    - For FDM-managed devices-Security Cloud Control warns you that "Pending changes on Security Cloud Control will be discarded and the Security Cloud Control configuration for this device will be replaced with the configuration currently running on the device." Click **Continue** to discard your changes.
    - For Meraki devices-Security Cloud Control deletes the change immediately.
    - For AWS devices-Security Cloud Control displays what you are about to delete. Click **Accept** or **Cancel**.
- 

## Out-of-Band Changes on Devices

Out-of-band changes refer to changes made directly on the device without using Security Cloud Control. These changes may be made using the device's command-line interface over an SSH connection or by using

a local manager like the Adaptive Security Device Manager (ASDM) for the ASA, the FDM for the FDM-managed device, or for an On-Premises Firewall Management Center on the On-Premises Firewall Management Center user interface. An out-of-band change causes a conflict between the device's configuration stored on Security Cloud Control and the configuration stored on the device itself.

### Detecting Out-of-Band Changes on Devices

If Conflict Detection is enabled for an ASA, or an FDM-managed device, a Cisco IOS device, or an On-Premises Firewall Management Center, Security Cloud Control checks the device every 10 minutes searching for any new changes made directly to the device's configuration outside of Security Cloud Control.

If Security Cloud Control finds that there are changes to the device's configuration that are not stored on Security Cloud Control, it changes the **Configuration Status** of that device to the "Conflict Detected" state.

When Security Cloud Control detects a conflict, one of two conditions is likely:

- There have been configuration changes made to the device directly that have not been saved to Security Cloud Control's database.
- In the case of an FDM-managed device, there may be "pending" configuration changes on the FDM-managed device that have not been deployed.
- In the case of an On-Premises Firewall Management Center, there may be changes made, for instance, to objects outside Security Cloud Control, which are pending to be synchronized with Security Cloud Control or changes made in Security Cloud Control which are pending to be deployed to the On-Premises Firewall Management Center.

## Synchronizing configurations between Security Cloud Control and device

### About configuration conflicts

In the **Security Devices** page, you may see devices or services have the status "Synced," "Not Synced," or "Conflict Detected." To know the status of an On-Premises Firewall Management Center that you manage using Security Cloud Control, navigate **Administration > Integrations > Firewall Management Center**.

- When a device is **Synced**, the configuration on Security Cloud Control and the configuration stored locally on the device are the same.
- When a device is **Not Synced**, the configuration stored in Security Cloud Control was changed and it is now different than the configuration stored locally on the device. Deploying your changes from Security Cloud Control to the device changes the configuration on the device to match Security Cloud Control's version.
- Changes made to devices outside of Security Cloud Control are called **out-of-band changes**. When out-of-band changes are made, you'll see the device state change to "Conflict Detected," if conflict detection is enabled for the device. Accepting the out-of-band changes, changes the configuration on Security Cloud Control to match the configuration on the device.

## Conflict Detection

When conflict detection is enabled, Security Cloud Control polls the device for the default interval to determine if a change has been made to the device's configuration outside of Security Cloud Control. If Security Cloud Control detects that a change was made, it changes the configuration status for the device to **Conflict Detected**. Changes made to a device outside of Security Cloud Control are called "out-of-band" changes.

In the case of an On-Premises Firewall Management Center that is managed by Security Cloud Control, if there are changes that are staged and the device is in **Not Synced** state, Security Cloud Control stops polling the device to check for changes. When there are changes made outside Security Cloud Control which are pending to be synchronized with Security Cloud Control and changes made in Security Cloud Control which are pending to be deployed to the on-premises Firewall Management Center, Security Cloud Control declares the on-premises Firewall Management Center to be in the **Conflict Detected** state.


Once this option is enabled, you can configure how often conflicts or OOB changes are detected per device. See [Schedule polling for device changes, on page 13](#) for more information.

### Enable Conflict Detection

Enabling conflict detection alerts you to instances where changes have been made to a device outside of Security Cloud Control.

#### Procedure

- Step 1** Choose **Security Devices**.
- Step 2** Click the **Devices** tab.
- Step 3** Select the appropriate device type tab.
- Step 4** Select the device or devices for which you want to enable conflict detection.
- Step 5** In the **Conflict Detection** box at the right of the device table, select **Enabled** from the list.

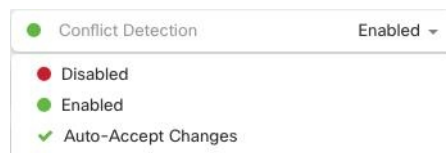

The image shows a configuration dropdown menu for 'Conflict Detection'. The top bar has a green circle icon, the text 'Conflict Detection', and a dropdown arrow showing 'Enabled'. Below this, there are three options: 'Disabled' with a red circle icon, 'Enabled' with a green circle icon, and 'Auto-Accept Changes' with a green checkmark icon.

## Automatically Accept Out-of-Band Changes from your Device

You can configure Security Cloud Control to automatically accept any change made directly to a managed device by enabling auto-accept changes. Changes made directly to a device without using Security Cloud Control are referred to as out-of-band changes. An out-of-band change creates a *conflict* between the device's configuration stored on Security Cloud Control and the configuration stored on the device itself.

The auto-accept changes feature is an enhancement to conflict detection. If you have auto-accept changes enabled on your device, Security Cloud Control checks for changes every 10 minutes to determine if there have been any out-of-band changes made to the device's configuration. If there have been configuration changes, Security Cloud Control automatically updates its local version of the device's configuration without prompting you.

Security Cloud Control will **not** automatically accept a configuration change if there are configuration changes made on Security Cloud Control that have not yet been deployed to the device. Follow the prompts on the screen to determine your next action.


To use auto-accept changes, you first enable the tenant to display the auto-accept option in the Conflict Detection menu on the **Security Devices** page; then, you enable auto-accept changes for individual devices.

If you want Security Cloud Control to detect out-of-band changes but give you the option to accept or reject them manually, enable [Conflict Detection, on page 10](#) instead.

## Configure Auto-Accept Changes

### Procedure

- Step 1** Log in to Security Cloud Control using an account with Admin or Super Admin privileges.
- Step 2** Choose **Administration > General Settings**.
- Step 3** In the **Tenant Settings** area, click the toggle to **Enable the option to auto-accept device changes**. This enables the Auto-Accept Changes menu option to appear in the Conflict Detection menu on the **Security Devices** page.
- Step 4** In the left pane, click **Security Devices** and select the device for which you want to automatically accept out-of-band changes.
- Step 5** In the **Conflict Detection** menu, select **Auto-Accept Changes** in the drop-down menu.

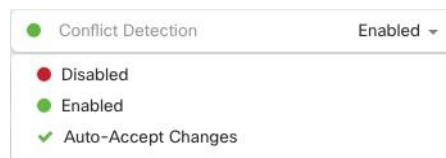

## Disabling Auto-Accept Changes for All Devices on the Tenant

### Procedure

- Step 1** Log-in to Security Cloud Control using an account with Admin or Super Admin privileges.
- Step 2** Choose **Administration > General Settings**.
- Step 3** In the **Tenant Settings** area, disable the "**Enable the option to auto-accept device changes**" by sliding the toggle to the left so it shows a grey X. This disables Auto-Accept Changes option in the Conflict Detection menu and disables the feature for every device on your tenant.

#### Note

Disabling "Auto-Accept" will require you to review each device conflict before you can accept it into Security Cloud Control. This includes devices previously configured to auto-accept changes.

## Resolve configuration conflicts

This section explains how to resolve configuration conflicts that occur on the device.

### Resolve the Not Synced Status

Use the following procedure to resolve a device with a "Not Synced" Configuration Status:

#### Procedure

---

**Step 1** Choose **Security Devices**.

**Note**

For an On-Premises Firewall Management Center, click **Administration > Integrations > Firewall Management Center** and select the FMC that is in **Not Synced** state and continue from Step 5.

**Step 2** Click the **Devices** tab to locate the device or the **Templates** tab to locate the model device.

**Step 3** Click the appropriate device type tab.

**Step 4** Select the device reported as Not Synced.

**Step 5** In the **Not synced** panel to the right, select either of the following:

- **Preview and Deploy...** -If you want to push the configuration change from Security Cloud Control to the device, [preview and deploy](#) the changes you made now, or wait and deploy multiple changes at once.
- **Discard Changes** -If you do **not** want to push the configuration change from Security Cloud Control to the device, or you want to "undo" the configuration changes you started making on Security Cloud Control. This option overwrites the configuration stored in Security Cloud Control with the running configuration stored on the device.

---

### Resolve the conflict detected status

Security Cloud Control allows you to enable or disable conflict detection on each live device. If [Conflict Detection, on page 10](#) is enabled and there was a change made to the device's configuration without using Security Cloud Control, the device's configuration status will show **Conflict Detected**.

To resolve a **Conflict Detected** status, follow this procedure:

#### Procedure

---

**Step 1** Choose **Security Devices**.

**Note**

For an On-Premises Firewall Management Center, click **Administration > Integrations > Firewall Management Center** and select the FMC that is in **Not Synced** state and continue from Step 5.

**Step 2** Click the **Devices** tab to locate your device.

- Step 3** Click the appropriate device type tab.
- Step 4** Select the device reporting the conflict and click **Review Conflict** in the details pane on the right.
- Step 5** In the **Device Sync** page, compare the two configurations by reviewing the highlighted differences.
- The panel labeled "Last Known Device Configuration" is the device configuration stored on Security Cloud Control.
  - The panel labeled "Found on Device" is the configuration stored in the running configuration on the ASA.
- Step 6** Resolve the conflict by selecting one of the following:
- **Accept Device changes:** This will overwrite the configuration **and any pending changes stored on** Security Cloud Control with the device's running configuration.
- Note**  
As Security Cloud Control does not support deploying changes to the Cisco IOS devices outside of the command line interface, your only choice for a Cisco IOS device will be to select **Accept Without Review** when resolving the conflict.
- **Reject Device Changes:** This will overwrite the configuration stored on the device with the configuration stored on Security Cloud Control.
- Note**  
All configuration changes, rejected or accepted, are recorded in the change log.

---

## Schedule polling for device changes

If you enable [Conflict Detection, on page 10](#) or **Enable the option to auto-accept device changes** from the **Settings** page, Security Cloud Control polls the device at the default interval to check for configuration changes made outside Security Cloud Control. You can set how often Security Cloud Control polls for changes for each device. This customization can be applied to multiple devices.

If you do not configure a selection for a device, the interval is automatically configured for "tenant default".



---

**Note** If you set a custom interval per device on the **Security Devices** page, it overrides the polling interval selected as the [Default Conflict Detection Interval](#) on the **General Settings** page.

---

After you enable **Conflict Detection** from the **Security Devices** page or **Enable the option to auto-accept device changes** from the **Settings** page, you can schedule how often Security Cloud Control polls your devices with this procedure.

### Procedure


---

- Step 1** Choose **Security Devices**.
- Step 2** Click the **Devices** tab to locate your device.

**Step 3** Click the appropriate device type tab.

**Step 4** Select the devices where you want to enable conflict detection.

**Step 5** Next to **Conflict Detection**, click the drop-down menu for **Check every** and select the polling interval you want.

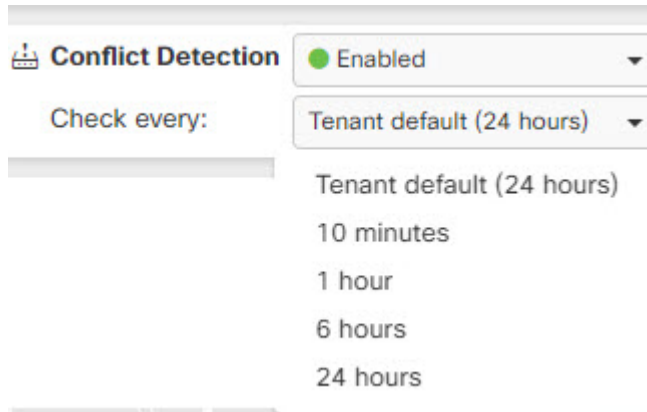

The screenshot shows a configuration panel for 'Conflict Detection'. It features a green status indicator and the word 'Enabled' next to a dropdown arrow. Below this, the text 'Check every:' is followed by another dropdown menu currently set to 'Tenant default (24 hours)'. This menu is open, showing a list of options: 'Tenant default (24 hours)', '10 minutes', '1 hour', '6 hours', and '24 hours'.