



CHAPTER 6

Job Profiles

Job profiles are templates that define how jobs should be processed; they can contain part or all of the settings required to process jobs from beginning to final distribution.

This chapter includes the following topics:

- [Introduction to Job Profiles, page 6-1](#)
- [Setting the Default Profile Directory, page 6-2](#)
- [Creating a New Job Profile, page 6-3](#)
- [Standard Cisco MXE 3500 Job Profiles, page 6-6](#)
- [Using the Profile Browser to Select a Job Profile, page 6-7](#)
- [Editing an Existing Job Profile, page 6-7](#)
- [Deleting Profiles, page 6-7](#)
- [Copying Job Profiles, page 6-8](#)

Introduction to Job Profiles

A Job Profile is a template that defines how a job should be processed. Saved Job Profiles can contain part or all of the settings required to process jobs from ingest/encoding to final distribution. Job Profiles can be optimized for different types of input media, encoding output, and distribution. Profiles can be stored in a location accessible to all users or can be saved to individual locations.

- **Job Profile:** A is a collection of subprofiles, similar to a template, that tells the Cisco MXE 3500 what settings should be used at each stage of production. The Job Profile consists of multiple task-specific subprofiles, which taken together include all the information needed to process an incoming signal from start to finish.
- **Subprofile:** The Cisco MXE 3500 offers four types of **subprofiles** that may be part of a Job Profile:
 - [Distribution Profiles, page 4-1](#)
 - [Encoder Profiles, page 5-1](#)
 - [Other Profiles, page 7-1](#)
 - [Preprocessor Profiles, page 8-1](#)

Send document feedback to mxe-doc@cisco.com.

For example, if you want to transform MPEG-2 content into Flash 8 and Real, report the job completion and then distribute the output, you need to create a Job Profile that, at a minimum, includes the following:

- Preprocessor Profile
- Encoder Profile that includes Flash 8 and Real encoders
- Distribution Profile that includes notification information

This section includes the following topics:

- [What must go into a Job Profile?](#), page 6-2
- [What can go into a Job Profile?](#), page 6-2
- [Job Profile File Extension](#), page 6-2

What must go into a Job Profile?

At a minimum to process a job, a Job Profile must consist of a Preprocessor Profile and an Encoder Profile.

What can go into a Job Profile?

In addition, a Job Profile may contain:

- Multiple encoder profiles that generate multiple output files.
- A Distribution Profile that copies or FTPs the output media and that notifies operators or other downstream systems of the failure or completion of a transcoded/encoded job.

Job Profile File Extension

Job profiles and subprofiles both have an .awp extension.

Setting the Default Profile Directory

To manage multiple profile directories or switch between profile directories while working, see the [“Profile Spaces” section on page 9-32](#).

Procedure

-
- Step 1** From the **Toolbox**, click **Administration > System**.
 - Step 2** In the **Input** section, enter the information in the **Profile Directory** field. See [Figure 6-1](#).

Send document feedback to mxe-doc@cisco.com.

Figure 6-1 Profile Directory Field

Output	
r/Trailer Directory	WMXE3000C\media
n Directories	WMXE3000C\media
Directory	WMXE3000C\media
Profile Directory	C:\Program Files\Cisco\Media Experience Engine\profiles
Input Extensions	.mov; .avi; .mpg; .mpeg; .mpv; .mpa; .m1v; .m2v; .mp2; .mp4; .m4v; .omf; .ref; .lst; .raw; .saf; .c
Mark Directory	WMXE3000C\media

Step 3 Click **Save**.

Creating a New Job Profile

This section includes the following topics:

- [Creating a New Job Profile, page 6-3](#)
- [Creating a New Job Profile from an Existing Job Profile, page 6-5](#)
- [Creating a New Job Profile from the Profile Browser, page 6-5](#)

Creating a New Job Profile


Use this procedure to create a new Job Profile.

Procedure

Step 1 From the **Toolbox**, expand **Profile Management**, and click **New Profile**. The New Profile pop-up displays. See [Figure 6-2](#).


Send document feedback to mxe-doc@cisco.com.

Figure 6-2 New Profile Pop-Up

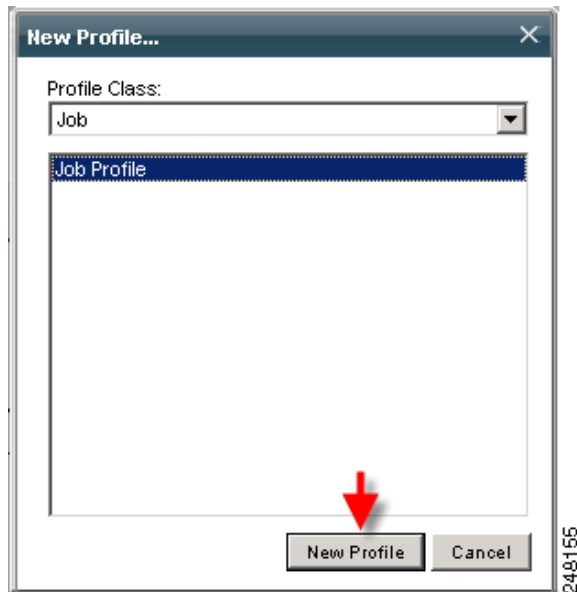

Step 2 From the **Profile Class** drop-down, select **Job**, and click the **New Profile** button. The New Job Profile page displays. See [Figure 6-3](#).

Figure 6-3 New Job Profile Page

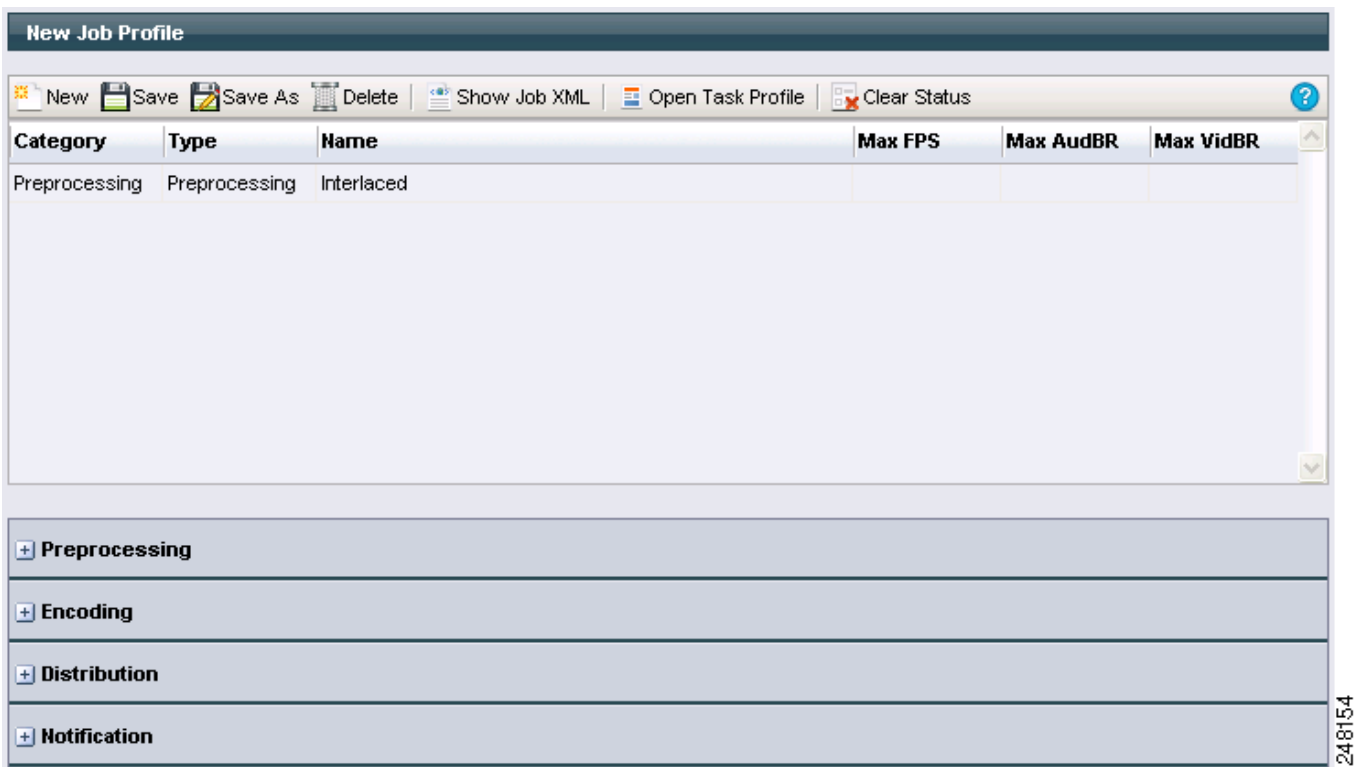

Step 3 Expand the **Preprocessing** section, and from the drop-down, select a Preprocessor Profile.

Step 4 Expand the **Encoding** section, and select one or more encoders.

Send document feedback to mxe-doc@cisco.com.

- Step 5** (Optional) Expand the **Distribution** section, and select one Output Profile, one or more Delivery and/or Source Delivery Profiles, and one Webcast Profile.
 - Step 6** (Optional) Expand the **Notification** section, and select one or more Notification Profiles.
 - Step 7** Click **Save**.
-

Creating a New Job Profile from an Existing Job Profile

Use this procedure to create a new Job Profile from an existing Job Profile.

Procedure

- Step 1** From the **Toolbox**, click **Profile Management > Open Profile > Job**.
- Step 2** Highlight a Job Profile, and click the **Open Profile** button.
- Step 3** Expand the Preprocessing, Encoding, Distribution, and/or Notification sections, and make any necessary changes.
- Step 4** Click **Save As**, and provide a new name for the new Job Profile.



Tip You can also use the **Save As** option to rename a Job Profile that displays in the Video Conversion Interface. For more information, see the [Deployment and Administration Guide for Cisco MXE 3500](#).

Creating a New Job Profile from the Profile Browser

Use this procedure to create a new Job Profile from the Profile Browser.

Procedure

- Step 1** From the **Profile Browser**, in the **Browse Type**, select **Job Profile**.
 - Step 2** Leave **Filter Text** blank, and click the **Search** button.
 - Step 3** From the **Results** drop-down, double-click **Create New Profile**. The New Job Profile page displays.
 - Step 4** Expand the **Preprocessing** section, and from the drop-down, select a Preprocessor Profile.
 - Step 5** Expand the **Encoding** section, and select one or more Encoder Profiles.
 - Step 6** (Optional) Expand the **Distribution** section, and select one Output Profile, one or more Delivery and/or Source Delivery Profiles, one Webcast Profile, and one IP Stream profile.
 - Step 7** (Optional) Expand the **Notification** section, and select one or more Notification Profiles.
 - Step 8** Click **Save**.
-

Send document feedback to mxe-doc@cisco.com.

Standard Cisco MXE 3500 Job Profiles

The Cisco MXE 3500 provides many pre-installed Job Profiles.



Note

These profiles often need to be adjusted to meet individual encoding or transcoding needs.

To view or use these Job Profiles, see the “[Profile \(File Job\)](#)” section on page 2-4.

- **Android** - designed to produce a video for playout on Android devices
- **Audio_Podcast** - designed to produce MP3 (128K bit rate) audio
- **Blackberry_320x240_1MB_30**: Designed to produce a 320x240 (1MB bit rate, 30FPS) video for playout on Blackberry devices
- **Blackberry_320x240_500K_30**: Designed to produce a 320x240 (500K bit rate, 30FPS) video for playout on Blackberry devices
- **Blackberry_480x320_1.5MB_24**: Designed to produce a 480x320 (1.5MB bit rate, 24FPS) video for playout on Blackberry devices
- **Blackberry_480x360_1.5MB_24**: Designed to produce a 480x360 (1.5MB bit rate, 24FPS) video for playout on Blackberry devices
- **Blackberry_480x360_2MB_30**: Designed to produce a 480x360 (2MB bit rate, 30FPS) video for playout on Blackberry devices
- **Cisco_DMP_4300.job.awp**: Designed to produce a video for playout on Cisco DMP4300 Digital Media Player
- **Cisco_DMP_4400.job.awp**: Designed to produce a video for playout on Cisco DMP4400 Digital Media Player
- **Flash_16x9.job.awp**: Designed to produce Flash FLV 16x9 video
- **Flash_4x3.job.awp**: Designed to produce Flash FLV 4x3 video
- **h.264_16x9.job.awp**: Designed to produce H264 16x9 video
- **h.264_4x3.job.awp**: Designed to produce H264 4x3 video
- **iPad_720p.job.awp**: Designed to produce a 720P video for playout on the iPad
- **iPhone-iPod-iPad_320x240_250K.job.awp**: Designed to produce a 320x240 (250K bit rate) video for playout on iPhone, iPod Touch, or iPad
- **iPhone-iPod-iPad_320x240_500K.job.awp**: Designed to produce a 320x240 (500K bit rate) video for playout on iPhone, iPod Touch, or iPad
- **iPhone-iPod-iPad_640x480_1M.job.awp**: Designed to produce a 640x480 (1MB bit rate) video for playout on iPhone, iPod Touch, or iPad
- **Real_640x480_500K** - designed to produce a 640x480 (500K bit rate) Real 10 video
- **SNS_16X9_FLV.job.awp**: Designed to produce a 16x9 Flash video for upload to Show and Share
- **SNS_16X9_h.264.job.awp**: Designed to produce a 16x9 H264 video for upload to Show and Share
- **SNS_4X3_FLV.job.awp**: Designed to produce a 4x3 Flash video for upload to Show and Share
- **SNS_4X3_h.264.job.awp**: Designed to produce a 4x3 H264 video for upload to Show and Share
- **WMV_16x9.job.awp**: Designed to produce a 16x9 Windows Media video
- **WMV_4x3.job.awp**: Designed to produce a 4x3 Windows Media video

Send document feedback to mxe-doc@cisco.com.

Using the Profile Browser to Select a Job Profile

Use this procedure to use the Profile Browser to select a Job Profile.

Procedure

- Step 1** In the **Profile Browser**, from the **Browse Type** drop-down, select **Job Profile**.
 - Step 2** In the **Filter Text** box, type all or part of the Job Profile name, and click **Search**. A list of Job Profiles defined in the system displays in the Results area.
 - Step 3** Double-click a Job Profile. In the main window, all of the Job Profile's settings display.
-

Editing an Existing Job Profile



Note Jobs in the Job Status window (submitted jobs) will not be affected by Job Profile changes.

Use this procedure to edit a Job Profile.

Procedure

- Step 1** From the **Toolbox**, click **Profile Management > Open Profile > Job**.
 - Step 2** Highlight a Job Profile, and click the **Open Profile** button.
 - Step 3** Expand the Preprocessing, Encoding, Distribution, and/or Notification sections, and make any necessary changes.
 - Step 4** Click **Save**.
-

Deleting Profiles



Note Jobs in the Job Status window (submitted jobs) will not be affected by Job Profile deletions.

Use this procedure to delete a Job Profile.

Procedure

- Step 1** From the **Toolbox**, click **Profile Management > Open Profile > Job**.
- Step 2** Highlight a Job Profile, and click the **Open Profile** button.
- Step 3** Click **Delete**. The confirm file delete pop-up window displays.

Send document feedback to mxe-doc@cisco.com.

Step 4 Click **OK** to confirm the deletion.

Copying Job Profiles

Use this procedure to copy a Job Profile.

Procedure

- Step 1** From the **Toolbox**, click **Profile Management > Open Profile > Job**.
 - Step 2** Highlight a Job Profile, and click the **Open Profile** button.
 - Step 3** Click **Save As**, and provide a new name for the Job Profile copy.
-