

CER IP アドレス変更

目次

[概要](#)

[CER IP 変更](#)

概要

この資料に Cisco 緊急状態応答 (CER) の IP アドレスを変更する方法を記述されています。

CER IP 変更



注: この例では、CER リリース 8.6.1 はインストールされています、Domain Name System (DNS) 設定は (IP は DNS で登録されていません) ないし、CER IP アドレスは 14.128.60.213 から 14.128.60.212 に変更されます。

CER IP アドレスを変更するために、これらのステップを完了して下さい:


1. CER 管理 GUI を使用し、**System > Server 設定**にナビゲートして下さい。



- 2.
3. 新しい IP アドレスにサーバ名を変更して下さい。

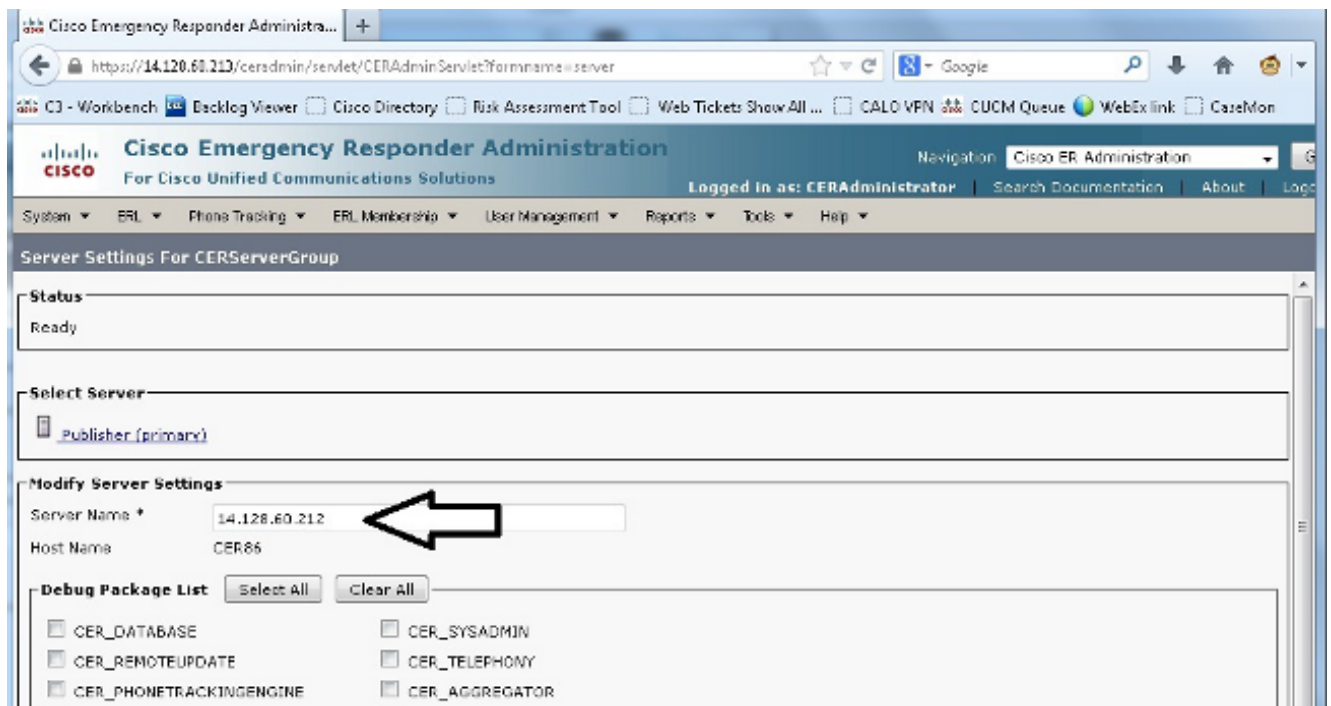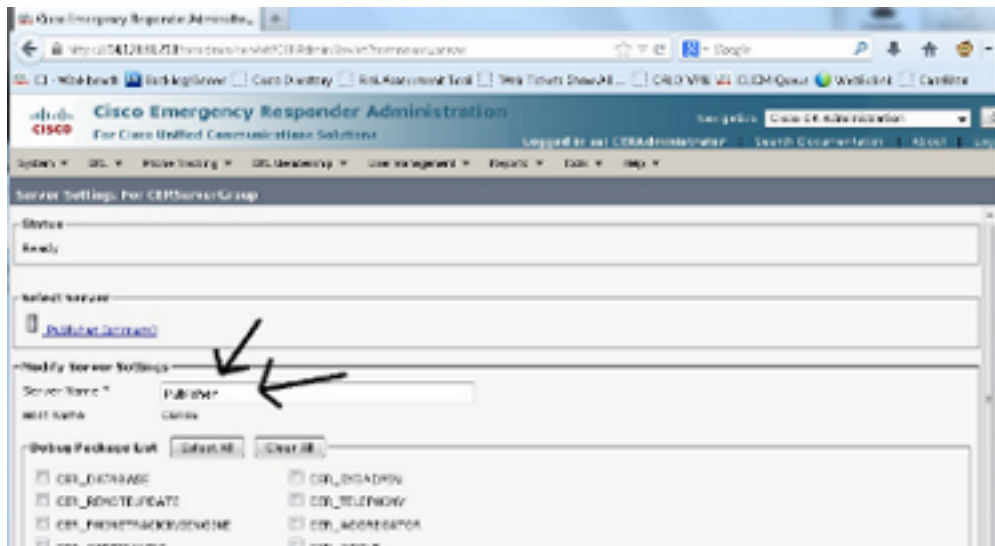


- 4.
5. 新しい IP アドレスは 3 つの場所でサーバ名が更新済であり、ページがリフレッシュされれば示されています:

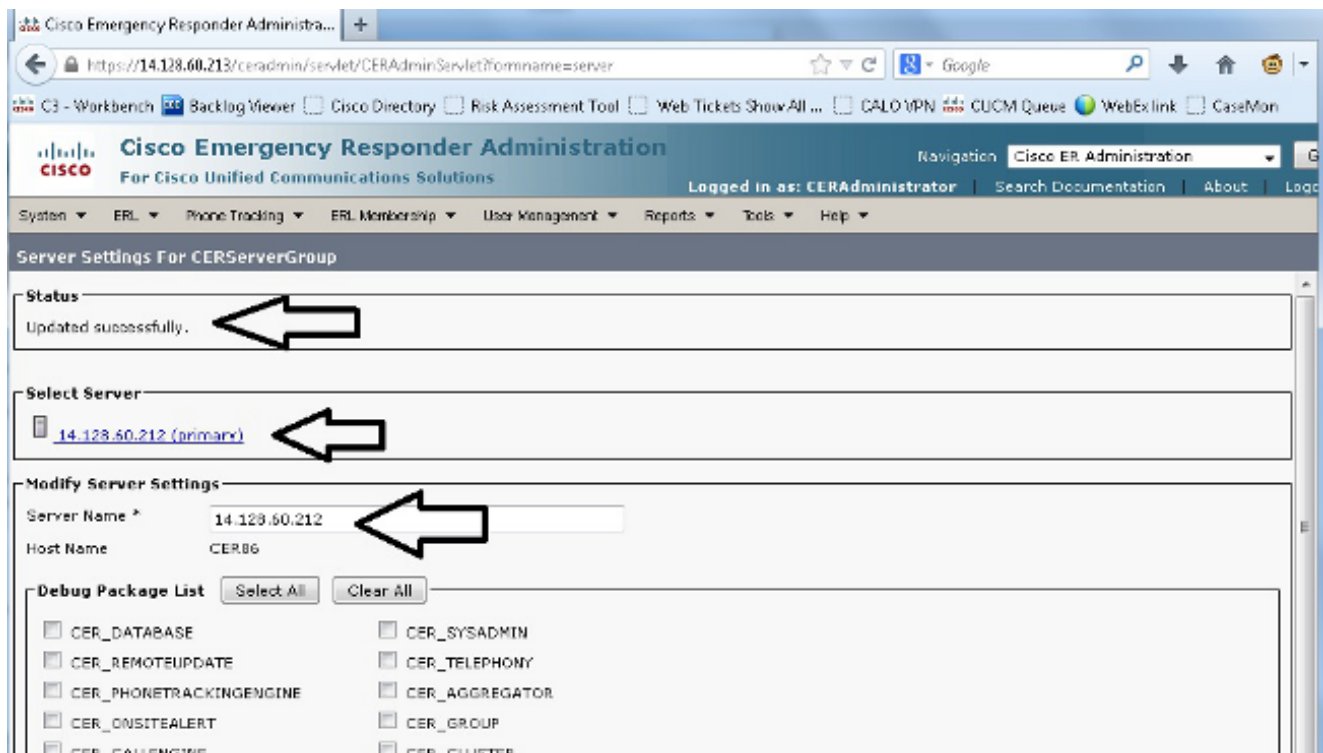

6.

7. admin として CER へのセキュア シェル (SSH) : そして CLI の使用のゲートウェイへの変更を行なって下さい。

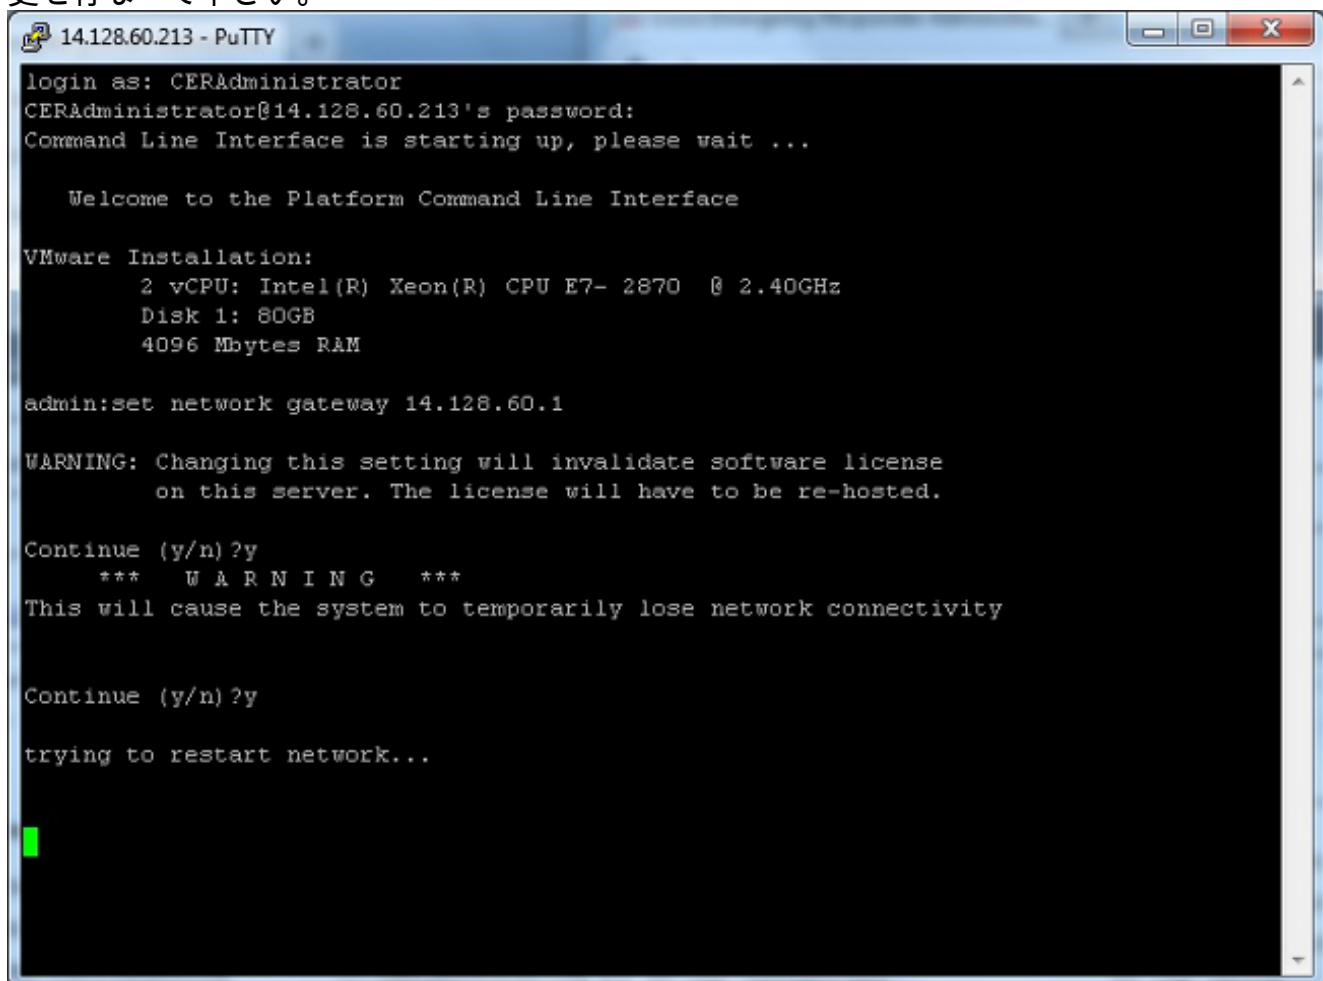

admin を待って下さい: 続行する前に戻るプロンプト。

8.

9. IP アドレスおよびサブネット情報を変更して下さい:

```
14.128.60.213 - PuTTY
admin:
admin:
admin:
admin:
admin:
admin:set network ip eth0 14.128.60.212 255.255.255.0

WARNING: Changing this setting will invalidate software license
         on this server. The license will have to be re-hosted.

Continue (y/n)?y
          ***  W A R N I N G  ***
If there are IP addresses (not hostnames)
configured in Cisco Unified CM Administration
under System -> Servers
then you must change the IP address there BEFORE
changing it here or call processing will fail.

This will cause the system to restart

=====
Note: To recognize the new IP address all nodes within
      the cluster will have to be manually rebooted.
=====

Continue (y/n)?y

trying to restart system...

Warning: Restart could take up to 5 minutes...

Shutting down Service Manager. Please wait...
Service Manager shutting down services... Please Wait
```

再度ブートするプロセスが完了する後、来、きちんとはたらくサービス全員のための 15 から 20 分オンラインがかかります。