

PIX/ASA 7.x 及更高版本/FWSM : 使用 MPF 设置 SSH/Telnet/HTTP 连接超时的配置示例

文档ID68332

已更新：2008年10月16日

 [下载 pdf文档](#)

 [打印](#)

[Feedback](#)

相关产品

- [Cisco 自适应安全设备管理器](#)
- [Cisco ASA 5500-X系列下一代防火墙](#)
- [Cisco PIX 500 系列安全设备](#)

Contents

[Introduction](#)

[Prerequisites](#)

[Requirements](#)

[Components Used](#)

[Conventions](#)

[Configure](#)

[Network Diagram](#)

[配置](#)

[初期超时](#)

[Verify](#)

[Troubleshoot](#)

[Related Information](#)

[相关的思科支持社区讨论](#)

[Introduction](#)

本文档为 PIX 7.1(1) 和更高版本提供特定于特定应用程序 (如 SSH/Telnet/HTTP) 的超时 (而非适用于所有应用程序的超时) 的配置示例。本配置示例使用 PIX 7.0 中引入的新模块化策略框架。有关详细信息，请参阅[使用模块化策略框架](#)。

在本配置示例中，PIX 防火墙配置为允许工作站 (10.77.241.129) 连接到 Telnet/SSH/HTTP，再到路由器后的远程服务器 (10.1.1.1)。还配置了单独的 Telnet/SSH/HTTP 数据流连接超时。所有其他 TCP 流量继续使用与 `timeout conn 1:00:00` 关联的正常连接超时值。

参考[AASA 8.3及以后：设置SSH/Telnet/HTTP连接超时使用MPF配置示例](#)关于相同配置的更多信息使用与Cisco可适应的安全工具(ASA)的ASDM与版本8.3和以上。

Prerequisites

Requirements

There are no specific requirements for this document.

Components Used

本文的信息根据Cisco PIX/ASA安全与可适应安全设备管理器(ASDM)的工具软件版本7.1(1) 5.1。

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, make sure that you understand the potential impact of any command.

Conventions

有关文档规则的详细信息，请参阅 [Cisco 技术提示规则](#)。


Configure

本部分提供有关如何配置本文档所述功能的信息。

Note: 使用[命令查找工具](#) ([仅限注册用户](#)) 可获取有关本部分所使用命令的详细信息。

Network Diagram

本文档使用以下网络设置：

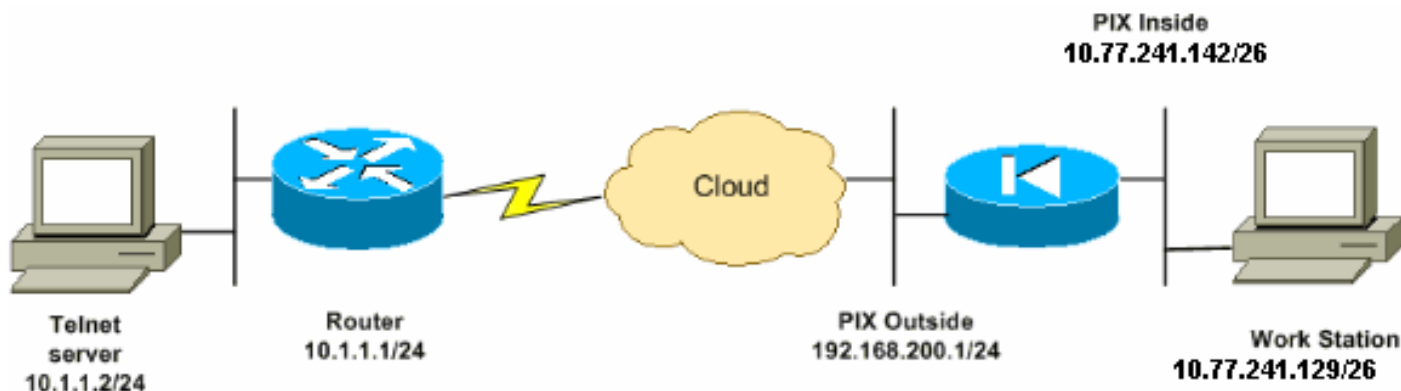

Note: 此配置中使用的 IP 编址方案在 Internet 上不可合法路由。这些地址是在实验室环境中使用的 RFC 1918 地址。

配置

本文档使用以下配置：

Note: 这些 CLI 和 ASDM 配置适用于防火墙服务模块 (FWSM)

CLI 配置 :

PIX配置

```
PIX Version - 7.1(1)
!
hostname PIX
domain-name Cisco.com
enable password 8Ry2YjIyt7RRXU24 encrypted
names
!
interface Ethernet0
 nameif outside
 security-level 0
 ip address 192.168.200.1 255.255.255.0
!
interface Ethernet1
 nameif inside
 security-level 100
 ip address 10.77.241.142 255.255.255.192
!

access-list inside_nat0_outbound extended permit ip
10.77.241.128 255.255.255.192 any

!--- Define the traffic that has to be matched in the
class map. !--- Telnet is defined in this example.
access-list outside_mpc in extended permit tcp host
10.77.241.129 any eq telnet
access-list outside_mpc in extended permit tcp host
10.77.241.129 any eq ssh
access-list outside_mpc in extended permit tcp host
10.77.241.129 any eq www
access-list 101 extended permit tcp 10.77.241.128
255.255.255.192 any eq telnet
access-list 101 extended permit tcp 10.77.241.128
255.255.255.192 any eq ssh
access-list 101 extended permit tcp 10.77.241.128
255.255.255.192 any eq www

pager lines 24
mtu inside 1500
mtu outside 1500
no failover
no asdm history enable
arp timeout 14400
nat (inside) 0 access-list inside_nat0_outbound
access-group 101 in interface outside

route outside 0.0.0.0 0.0.0.0 192.168.200.2 1
timeout xlate 3:00:00

!--- The default connection timeout value of one hour is
applicable to !--- all other TCP applications.
timeout conn 1:00:00 half-closed 0:10:00 udp 0:02:00 icmp
0:00:02
timeout sunrpc 0:10:00 h323 0:05:00 h225 1:00:00 mgcp
0:05:00
timeout mgcp-pat 0:05:00 sip 0:30:00 sip_media 0:02:00
```

```

timeout uauth 0:05:00 absolute
no snmp-server location
no snmp-server contact
snmp-server enable traps snmp authentication linkup
linkdown coldstart
telnet timeout 5
ssh timeout 5
console timeout 0
!

!--- Define the class map telnet in order !--- to
classify Telnet/ssh/http traffic when you use Modular
Policy Framework !--- to configure a security feature.
!--- Assign the parameters to be matched by class map.

class-map telnet
  description telnet
  match access-list outside_mpc_in

class-map inspection_default
  match default-inspection-traffic
!
!
policy-map global_policy
  class inspection_default
    inspect dns maximum-length 512
    inspect ftp
    inspect h323 h225
    inspect h323 ras
    inspect netbios
    inspect rsh
    inspect rtsp
    inspect skinny
    inspect esmtp
    inspect sqlnet
    inspect sunrpc
    inspect tftp
    inspect sip
    inspect xdmcp

!--- Use the pre-defined class map telnet in the policy
map.

policy-map telnet

!--- Set the connection timeout under the class mode in
which !--- the idle TCP (Telnet/ssh/http) connection is
disconnected. !--- There is a set value of ten minutes
in this example. !--- The minimum possible value is five
minutes. class telnet
  set connection timeout tcp 00:10:00 reset
!
!
service-policy global_policy global

!--- Apply the policy-map telnet on the interface. !---
You can apply the service-policy command to any
interface that !--- can be defined by the nameif
command.

service-policy telnet interface outside
end

```

ASDM 配置：

完成以下步骤，以基于使用 ASDM 的访问控制列表设置 Telnet 数据流的 TCP 连接超时，如下所示。

Note: 请参阅 [允许 ASDM 的 HTTPS 访问](#) 了解基本设置，以通过 ASDM 访问 PIX/ASA。

1. **配置接口**选择 **Configuration > Interfaces > Add** 以配置接口 Ethernet0 (外部) 和 Ethernet1 (内部)，如下所示。

Hardware Port: **Ethernet0** Configure Hardware Properties

Enable Interface Dedicate this interface to management only

Interface Name:

Security Level:

IP Address

Use Static IP Obtain Address via DHCP

IP Address:

Subnet Mask:

MTU:

Description:

OK Cancel Help

Hardware Port: **Ethernet1** Configure Hardware Properties

Enable Interface Dedicate this interface to management only

Interface Name:

Security Level:

IP Address

Use Static IP Obtain Address via DHCP

IP Address:

Subnet Mask:

MTU:

Description:

单击 **Ok**。

Configuration > Interfaces

Interface	Name	Enabled	Security Level	IP Address	Subnet Mask	Management Only	MTU
Ethernet0	outside	Yes	0	192.168.200.1	255.255.255.0	No	1500
Ethernet1	inside	Yes	100	10.77.241.142	255.255.255.192	No	1500

等效的 CLI 配置如下所示：

```

PIX Version - 7.1(1)
!
hostname PIX
domain-name Cisco.com
enable password 8Ry2YjIyt7RRXU24 encrypted
names
!
interface Ethernet0

```

```

nameif outside
security-level 0
ip address 192.168.200.1 255.255.255.0
!
interface Ethernet1
nameif inside
security-level 100
ip address 10.77.241.142 255.255.255.192
!

access-list inside_nat0_outbound extended permit ip 10.77.241.128 255.255.255.192 any

!--- Define the traffic that has to be matched in the class map. !--- Telnet is defined in
this example. access-list outside_mpc_in extended permit tcp host 10.77.241.129 any eq
telnet
access-list outside_mpc_in extended permit tcp host 10.77.241.129 any eq ssh
access-list outside_mpc_in extended permit tcp host 10.77.241.129 any eq www
access-list 101 extended permit tcp 10.77.241.128 255.255.255.192 any eq telnet
access-list 101 extended permit tcp 10.77.241.128 255.255.255.192 any eq ssh
access-list 101 extended permit tcp 10.77.241.128 255.255.255.192 any eq www

pager lines 24
mtu inside 1500
mtu outside 1500
no failover
no asdm history enable
arp timeout 14400
nat (inside) 0 access-list inside_nat0_outbound
access-group 101 in interface outside

route outside 0.0.0.0 0.0.0.0 192.168.200.2 1
timeout xlate 3:00:00

!--- The default connection timeout value of one hour is applicable to !--- all other TCP
applications. timeout conn 1:00:00 half-closed 0:10:00 udp 0:02:00 icmp 0:00:02
timeout sunrpc 0:10:00 h323 0:05:00 h225 1:00:00 mgcp 0:05:00
timeout mgcp-pat 0:05:00 sip 0:30:00 sip_media 0:02:00
timeout uauth 0:05:00 absolute
no snmp-server location
no snmp-server contact
snmp-server enable traps snmp authentication linkup linkdown coldstart
telnet timeout 5
ssh timeout 5
console timeout 0
!

!--- Define the class map telnet in order !--- to classify Telnet/ssh/http traffic when you
use Modular Policy Framework !--- to configure a security feature. !--- Assign the
parameters to be matched by class map.

class-map telnet
description telnet
match access-list outside_mpc_in

class-map inspection_default
match default-inspection-traffic
!
!
policy-map global_policy
class inspection_default
inspect dns maximum-length 512
inspect ftp

```

```
inspect h323 h225
inspect h323 ras
inspect netbios
inspect rsh
inspect rtsp
inspect skinny
inspect esmtp
inspect sqlnet
inspect sunrpc
inspect tftp
inspect sip
inspect xdmcp
```

*!--- Use the pre-defined class map **telnet** in the policy map.*

policy-map telnet

!--- Set the connection timeout under the class mode in which !--- the idle TCP (Telnet/ssh/http) connection is disconnected. !--- There is a set value of ten minutes in this example. !--- The minimum possible value is five minutes. class telnet

```
set connection timeout tcp 00:10:00 reset
```

```
!
```

```
!
```

```
service-policy global_policy global
```

*!--- Apply the policy-map **telnet** on the interface. !--- You can apply the **service-policy** command to any interface that !--- can be defined by the **nameif** command.*

```
service-policy telnet interface outside
```

```
end
```

2. 配置 NAT 0选择 Configuration > NAT > Translation Exemption Rules > Add , 以允许来自网络 10.77.241.128/26 的数据流在未进行任何转换的情况下便可访问 Internet。

Add Address Exemption Rule

Action

Select an action:

Host/Network Exempted From NAT

IP Address Name Group

Interface:

IP address:

Mask:

When Connecting To


IP Address Name Group

Interface:

IP address:

Mask:

Rule Flow Diagram

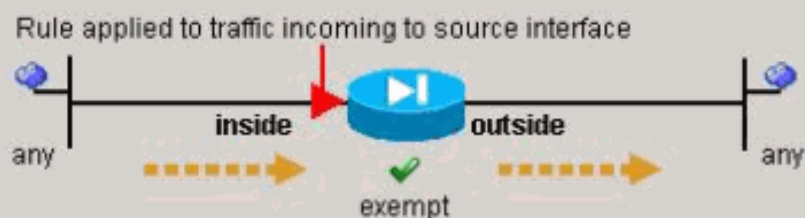

Please enter the description below (optional):

OK

Cancel

Help

单击 Ok。



Enable traffic through the firewall without address translation

Translation Rules Translation Exemption Rules

Show Rules for Interface:

Show All

#	Rule Enabled	Action	Interface	Host/Network	When Connecting To Host/Network
1	<input checked="" type="checkbox"/>	exempt	inside (outbound)	10.77.241.128/26	any

等效的 CLI 配置如下所示：

```
PIX Version - 7.1(1)
```

```
!
```

```
hostname PIX
```

```
domain-name Cisco.com
```

```
enable password 8Ry2YjIyt7RRXU24 encrypted
```

```

names
!
interface Ethernet0
  nameif outside
  security-level 0
  ip address 192.168.200.1 255.255.255.0
!
interface Ethernet1
  nameif inside
  security-level 100
  ip address 10.77.241.142 255.255.255.192
!

access-list inside_nat0_outbound extended permit ip 10.77.241.128 255.255.255.192 any

!--- Define the traffic that has to be matched in the class map. !--- Telnet is defined in
this example. access-list outside_mpc_in extended permit tcp host 10.77.241.129 any eq
telnet
access-list outside_mpc_in extended permit tcp host 10.77.241.129 any eq ssh
access-list outside_mpc_in extended permit tcp host 10.77.241.129 any eq www
access-list 101 extended permit tcp 10.77.241.128 255.255.255.192 any eq telnet
access-list 101 extended permit tcp 10.77.241.128 255.255.255.192 any eq ssh
access-list 101 extended permit tcp 10.77.241.128 255.255.255.192 any eq www

pager lines 24
mtu inside 1500
mtu outside 1500
no failover
no asdm history enable
arp timeout 14400
nat (inside) 0 access-list inside_nat0_outbound
access-group 101 in interface outside

route outside 0.0.0.0 0.0.0.0 192.168.200.2 1
timeout xlate 3:00:00

!--- The default connection timeout value of one hour is applicable to !--- all other TCP
applications. timeout conn 1:00:00 half-closed 0:10:00 udp 0:02:00 icmp 0:00:02
timeout sunrpc 0:10:00 h323 0:05:00 h225 1:00:00 mgcp 0:05:00
timeout mgcp-pat 0:05:00 sip 0:30:00 sip_media 0:02:00
timeout uauth 0:05:00 absolute
no snmp-server location
no snmp-server contact
snmp-server enable traps snmp authentication linkup linkdown coldstart
telnet timeout 5
ssh timeout 5
console timeout 0
!

!--- Define the class map telnet in order !--- to classify Telnet/ssh/http traffic when you
use Modular Policy Framework !--- to configure a security feature. !--- Assign the
parameters to be matched by class map.

class-map telnet
  description telnet
  match access-list outside_mpc_in

class-map inspection_default
  match default-inspection-traffic
!
!
policy-map global_policy

```

```
class inspection_default
inspect dns maximum-length 512
inspect ftp
inspect h323 h225
inspect h323 ras
inspect netbios
inspect rsh
inspect rtsp
inspect skinny
inspect esmtp
inspect sqlnet
inspect sunrpc
inspect tftp
inspect sip
inspect xdmcp
```

*!--- Use the pre-defined class map **telnet** in the policy map.*

policy-map telnet

!--- Set the connection timeout under the class mode in which !--- the idle TCP (Telnet/ssh/http) connection is disconnected. !--- There is a set value of ten minutes in this example. !--- The minimum possible value is five minutes. class telnet

```
    set connection timeout tcp 00:10:00 reset
!
!
service-policy global_policy global
```

*!--- Apply the policy-map **telnet** on the interface. !--- You can apply the **service-policy** command to any interface that !--- can be defined by the **nameif** command.*

```
service-policy telnet interface outside
end
```

3. **配置ACL**选择 **Configuration > Security Policy > Access Rules** 以配置 ACL，如下所示。单击 **Add** 来配置一个允许源于网络 10.77.241.128/26 的 Telnet 数据流传输到所有目标网络的 ACL 101，并将它应用于外部接口上的出站数据流。

Action

Select an action:

Apply to Traffic:

Source Host/Network

IP Address Name Group

Interface:

IP address: ...

Mask:

Syslog

Default Syslog

Time Range

Time Range:

Destination Host/Network

IP Address Name Group

Interface:

IP address: ...

Mask:

Rule Flow Diagram

Rule applied to traffic outgoing from destination interface

Protocol and Service

TCP UDP ICMP IP

Source Port

Service = ...

Service Group

Destination Port

Service = ...

Service Group

单击 **Ok**。对于 ssh 和 http 数据流，配置是类似的：
：

Action

Select an action:

Apply to Traffic:

Syslog

Default Syslog

Time Range

Time Range:

Source Host/Network

IP Address Name Group

Interface:

IP address:

Mask:

Destination Host/Network

IP Address Name Group

Interface:

IP address:

Mask:

Rule Flow Diagram

Rule applied to traffic outgoing from destination interface

10.77.241.128/26

inside

outside

any

Allow traffic

Protocol and Service

TCP UDP ICMP IP

Source Port

Service =

Service Group

Destination Port

Service =

Service Group

Action

Select an action:

Apply to Traffic:

Syslog

Default Syslog

Time Range

Time Range:

Source Host/Network

IP Address Name Group

Interface:

IP address:

Mask:

Destination Host/Network

IP Address Name Group

Interface:

IP address:

Mask:

Rule Flow Diagram

Rule applied to traffic outgoing from destination interface

Protocol and Service

TCP UDP ICMP IP

Source Port

Service =

Service Group

Destination Port

Service =

Service Group

等效的 CLI 配置如下所示：

```

PIX Version - 7.1(1)
!
hostname PIX
domain-name Cisco.com
enable password 8Ry2YjIyt7RRXU24 encrypted
names
!
interface Ethernet0
 nameif outside
 security-level 0
 ip address 192.168.200.1 255.255.255.0
!
interface Ethernet1
 nameif inside
 security-level 100
 ip address 10.77.241.142 255.255.255.192
!

access-list inside_nat0_outbound extended permit ip 10.77.241.128 255.255.255.192 any

!--- Define the traffic that has to be matched in the class map. !--- Telnet is defined in
this example. access-list outside_mpc_in extended permit tcp host 10.77.241.129 any eq
telnet

```



```
access-list outside_mpc_in extended permit tcp host 10.77.241.129 any eq ssh
access-list outside_mpc_in extended permit tcp host 10.77.241.129 any eq www
access-list 101 extended permit tcp 10.77.241.128 255.255.255.192 any eq telnet
access-list 101 extended permit tcp 10.77.241.128 255.255.255.192 any eq ssh
access-list 101 extended permit tcp 10.77.241.128 255.255.255.192 any eq www
```

```
pager lines 24
mtu inside 1500
mtu outside 1500
no failover
no asdm history enable
arp timeout 14400
nat (inside) 0 access-list inside_nat0_outbound
access-group 101 in interface outside
```

```
route outside 0.0.0.0 0.0.0.0 192.168.200.2 1
timeout xlate 3:00:00
```

```
!--- The default connection timeout value of one hour is applicable to !--- all other TCP applications. timeout conn 1:00:00 half-closed 0:10:00 udp 0:02:00 icmp 0:00:02
```

```
timeout sunrpc 0:10:00 h323 0:05:00 h225 1:00:00 mgcp 0:05:00
```

```
timeout mgcp-pat 0:05:00 sip 0:30:00 sip_media 0:02:00
```

```
timeout uauth 0:05:00 absolute
```

```
no snmp-server location
```

```
no snmp-server contact
```

```
snmp-server enable traps snmp authentication linkup linkdown coldstart
```

```
telnet timeout 5
```

```
ssh timeout 5
```

```
console timeout 0
```

```
!
```

```
!--- Define the class map telnet in order !--- to classify Telnet/ssh/http traffic when you use Modular Policy Framework !--- to configure a security feature. !--- Assign the parameters to be matched by class map.
```

```
class-map telnet
  description telnet
  match access-list outside_mpc_in
```

```
class-map inspection_default
  match default-inspection-traffic
```

```
!
```

```
!
```

```
policy-map global_policy
  class inspection_default
    inspect dns maximum-length 512
    inspect ftp
    inspect h323 h225
    inspect h323 ras
    inspect netbios
    inspect rsh
    inspect rtsp
    inspect skinny
    inspect esmtp
    inspect sqlnet
    inspect sunrpc
    inspect tftp
    inspect sip
    inspect xdmcp
```

```
!--- Use the pre-defined class map telnet in the policy map.
```

policy-map telnet


!--- Set the connection timeout under the class mode in which !--- the idle TCP (Telnet/ssh/http) connection is disconnected. !--- There is a set value of ten minutes in this example. !--- The minimum possible value is five minutes. class telnet

```
set connection timeout tcp 00:10:00 reset
!  
!  
service-policy global_policy global
```

!--- Apply the policy-map telnet on the interface. !--- You can apply the service-policy command to any interface that !--- can be defined by the nameif command.

```
service-policy telnet interface outside  
end
```

4. 配置超时选择 Configuration > Properties > Timeouts 以配置各种超时。在此方案中，请保持所有超时的默认值。

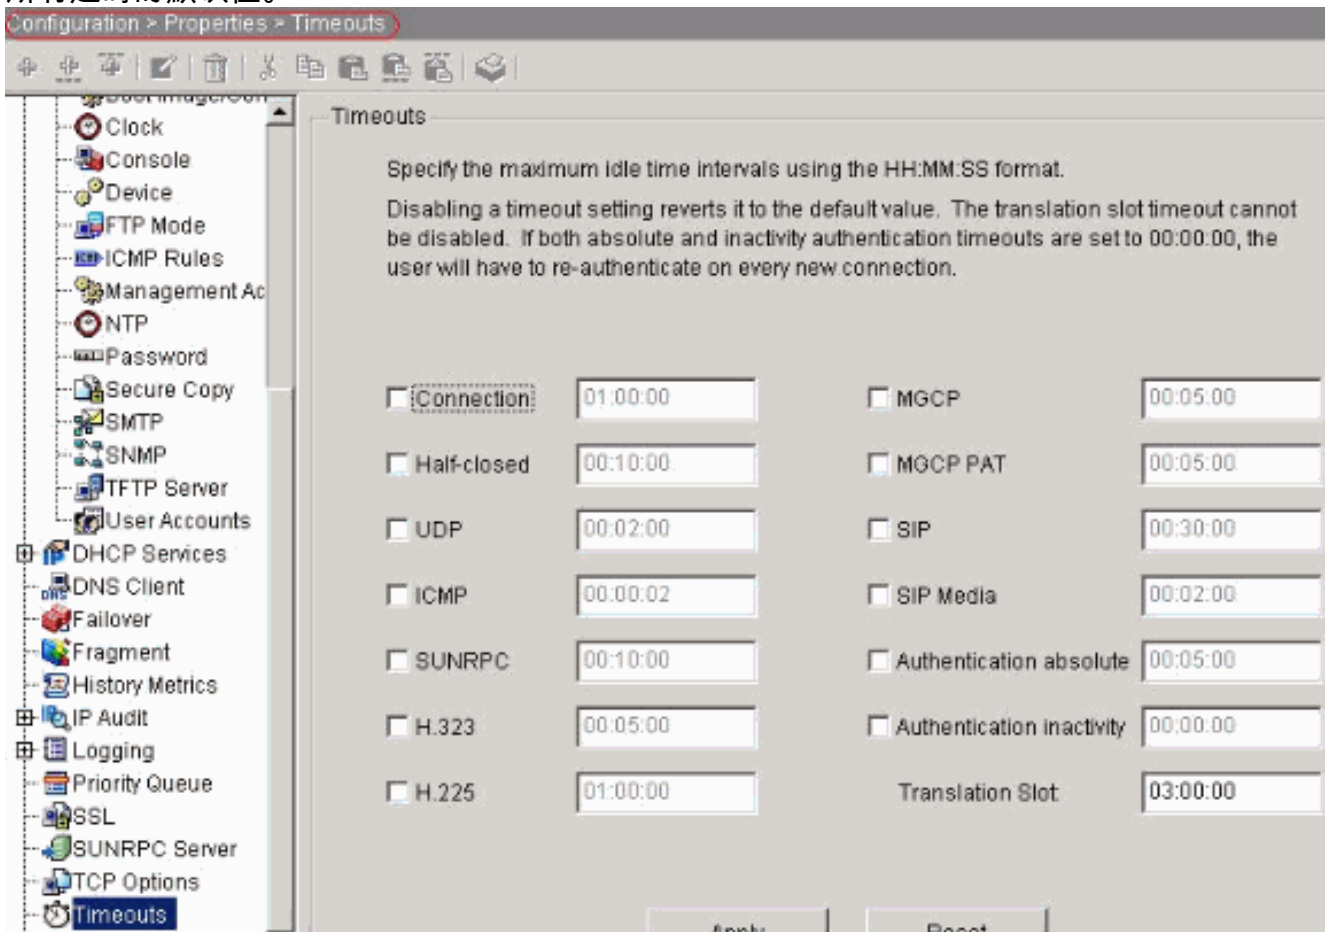

等效的 CLI 配置如下所示：

```
PIX Version - 7.1(1)
!  
hostname PIX  
domain-name Cisco.com  
enable password 8Ry2YjIyt7RRXU24 encrypted  
names  
!  
interface Ethernet0  
nameif outside  
security-level 0  
ip address 192.168.200.1 255.255.255.0  
!  
interface Ethernet1  
nameif inside  
security-level 100
```



```
ip address 10.77.241.142 255.255.255.192
!
```

```
access-list inside_nat0_outbound extended permit ip 10.77.241.128 255.255.255.192 any
```

```
!--- Define the traffic that has to be matched in the class map. !--- Telnet is defined in this example. access-list outside_mpc_in extended permit tcp host 10.77.241.129 any eq telnet
```

```
access-list outside_mpc_in extended permit tcp host 10.77.241.129 any eq ssh
```

```
access-list outside_mpc_in extended permit tcp host 10.77.241.129 any eq www
```

```
access-list 101 extended permit tcp 10.77.241.128 255.255.255.192 any eq telnet
```

```
access-list 101 extended permit tcp 10.77.241.128 255.255.255.192 any eq ssh
```

```
access-list 101 extended permit tcp 10.77.241.128 255.255.255.192 any eq www
```

```
pager lines 24
```

```
mtu inside 1500
```

```
mtu outside 1500
```

```
no failover
```

```
no asdm history enable
```

```
arp timeout 14400
```

```
nat (inside) 0 access-list inside_nat0_outbound
```

```
access-group 101 in interface outside
```

```
route outside 0.0.0.0 0.0.0.0 192.168.200.2 1
```

```
timeout xlate 3:00:00
```

```
!--- The default connection timeout value of one hour is applicable to !--- all other TCP applications. timeout conn 1:00:00 half-closed 0:10:00 udp 0:02:00 icmp 0:00:02
```

```
timeout sunrpc 0:10:00 h323 0:05:00 h225 1:00:00 mgcp 0:05:00
```

```
timeout mgcp-pat 0:05:00 sip 0:30:00 sip_media 0:02:00
```

```
timeout uauth 0:05:00 absolute
```

```
no snmp-server location
```

```
no snmp-server contact
```

```
snmp-server enable traps snmp authentication linkup linkdown coldstart
```

```
telnet timeout 5
```

```
ssh timeout 5
```

```
console timeout 0
```

```
!
```

```
!--- Define the class map telnet in order !--- to classify Telnet/ssh/http traffic when you use Modular Policy Framework !--- to configure a security feature. !--- Assign the parameters to be matched by class map.
```

```
class-map telnet
```

```
description telnet
```

```
match access-list outside_mpc_in
```

```
class-map inspection_default
```

```
match default-inspection-traffic
```

```
!
```

```
!
```

```
policy-map global_policy
```

```
class inspection_default
```

```
inspect dns maximum-length 512
```

```
inspect ftp
```

```
inspect h323 h225
```

```
inspect h323 ras
```

```
inspect netbios
```

```
inspect rsh
```

```
inspect rtsp
```

```
inspect skinny
```

```
inspect esmtp
```

```
inspect sqlnet
inspect sunrpc
inspect tftp
inspect sip
inspect xdmcp
```

!--- Use the pre-defined class map telnet in the policy map.

policy-map telnet

!--- Set the connection timeout under the class mode in which !--- the idle TCP (Telnet/ssh/http) connection is disconnected. !--- There is a set value of ten minutes in this example. !--- The minimum possible value is five minutes. class telnet

```
set connection timeout tcp 00:10:00 reset
```

```
!
```

```
!
```

```
service-policy global_policy global
```

!--- Apply the policy-map telnet on the interface. !--- You can apply the service-policy command to any interface that !--- can be defined by the nameif command.

```
service-policy telnet interface outside
```

```
end
```

5. 配置 Service Policy Rules。选择 **Configuration > Security Policy > Service Policy Rules > Add** 以配置类映射、策略映射以用于将 TCP 连接超时设置为 10 分钟，并将服务策略应用于外部接口，如下所示。选择 **Interface** 单选按钮来选择 **outside - (create new service policy)** (它将被创建)，然后将 telnet 指定为策略名称。

Adding a new service policy rule requires three steps:

Step 1: Configure a service policy.

Step 2: Configure the traffic classification criteria for the service policy rule.

Step 3: Configure actions on the traffic classified by the service policy rule.

Create a service policy and apply to:

Only one service policy can be configured per interface or at global level. If a service policy already exists, then you can add a new rule into the existing service policy. Otherwise, you can create a new service policy.

Interface:

outside - (create new service policy)

Policy Name:

telnet

Description:

Global - applies to all interfaces

Policy Name:

global_policy

单击 **Next**。创建类映射名称 **telnet**，然后选中 Traffic 匹配条件中的 Source and Destination IP address (uses ACL) 复选框。

Create a new traffic class:

Description (optional):

Traffic match criteria

- Default Inspection Traffic
- Source and Destination IP Address (uses ACL)
- Tunnel Group
- TCP or UDP Destination Port
- RTP Range
- IP DiffServ CodePoints (DSCP)
- IP Precedence
- Any traffic

If traffic does not match a existing traffic class, then it will match the class-default traffic class. Class-default can be used in catch all situation.

Use class-default as the traffic class.


单击 **Next**。创建 ACL 以将源于网络 10.77.241.128/26 的 Telnet 数据流与所有目标网络匹配，并将它应用于 telnet 类。

Action
 Select an action:

Time Range
 Time Range:

Source Host/Network
 IP Address Name Group
 Interface:
 IP address:
 Mask:

Destination Host/Network
 IP Address Name Group
 Interface:
 IP address:
 Mask:

Rule Flow Diagram
 Rule applied to traffic incoming to source interface


Protocol and Service
 TCP UDP ICMP IP

Source Port
 Service =
 Service Group

Destination Port
 Service =
 Service Group

单击 **Next**。对于 ssh 和 http 数据流，配置是类似的

:

Action
Select an action:

Time Range
Time Range:

Source Host/Network
 IP Address Name Group
Interface:
IP address:
Mask:

Destination Host/Network
 IP Address Name Group
Interface:
IP address:
Mask:

Rule Flow Diagram
Rule applied to traffic incoming to source interface

The diagram shows a central router with two interfaces: 'outside' on the left and 'inside' on the right. A red arrow points to the router from the left, indicating incoming traffic. Below the router, a red arrow points to the 'match' action. Dashed orange arrows show traffic flow from the 'outside' interface, through the 'match' action, and out the 'inside' interface to a destination labeled 'any'. The source IP is '10.77.241.128/25' and the destination is 'any'.

Protocol and Service
 TCP UDP ICMP IP

Source Port
 Service =
 Service Group


Destination Port
 Service =
 Service Group

Action
 Select an action:

Time Range
 Time Range:

Source Host/Network
 IP Address Name Group
 Interface:
 IP address:
 Mask:

Destination Host/Network
 IP Address Name Group
 Interface:
 IP address:
 Mask:

Rule Flow Diagram
 Rule applied to traffic incoming to source interface

 10.77.241.128/25 → outside → match → inside → any

Protocol and Service
 TCP UDP ICMP IP

Source Port
 Service =
 Service Group

Destination Port
 Service =
 Service Group

选择 **Connection Settings** 以将 TCP Connection Timeout 设置为 10 分钟，并选中 Send reset to TCP endpoints before timeout 复选框。

Protocol Inspection | Connection Settings | QoS

Maximum Connections

TCP & UDP Connections : Default (0) ▼

Embryonic Connections: Default (0) ▼

Per Client Connections: Default (0) ▼

Per Client Embryonic Connections: Default (0) ▼

Randomize Sequence Number

Randomize the sequence number of TCP/IP packets. Disable this feature only if another inline PIX is also randomizing sequence numbers. The result is scrambling the data. Disabling this feature may leave systems with weak TCP Sequence number randomization vulnerable.

TCP Timeout

Connection Timeout : 00:10:00 ▼

Send reset to TCP endpoints before timeout

Embryonic Connection Timeout : Default (0:00:30) ▼

Half Closed Connection Timeout : Default (0:10:00) ▼

TCP Normalization

Use TCP Map

TCP Map: []

New Edit

单击 完成。

Configuration > Security Policy > Service Policy Rules

Access Rules | AAA Rules | Filter Rules | **Service Policy Rules**

Show Rules for Interface: All Interfaces Show All

#	Traffic Classification							
	Name	Enabled	Match	Source	Destination	Service	Time Range	
Global, Policy: global_policy								
	inspection_d...			any	any	default-inspection		inspect (1
Interface: outside, Policy: telnet								
1	telnet	<input checked="" type="checkbox"/>		10.77.241...	any	telnet/tcp	-- Not Appl...	connectio send res...

等效的 CLI 配置如下所示：

```
PIX Version - 7.1(1)
!
hostname PIX
domain-name Cisco.com
enable password 8Ry2YjIyt7RRXU24 encrypted
names
!
interface Ethernet0
 nameif outside
 security-level 0
 ip address 192.168.200.1 255.255.255.0
!
interface Ethernet1
 nameif inside
 security-level 100
```



```
ip address 10.77.241.142 255.255.255.192
!
```

```
access-list inside_nat0_outbound extended permit ip 10.77.241.128 255.255.255.192 any
```

```
!--- Define the traffic that has to be matched in the class map. !--- Telnet is defined in this example. access-list outside_mpc_in extended permit tcp host 10.77.241.129 any eq telnet
```

```
access-list outside_mpc_in extended permit tcp host 10.77.241.129 any eq ssh
```

```
access-list outside_mpc_in extended permit tcp host 10.77.241.129 any eq www
```

```
access-list 101 extended permit tcp 10.77.241.128 255.255.255.192 any eq telnet
```

```
access-list 101 extended permit tcp 10.77.241.128 255.255.255.192 any eq ssh
```

```
access-list 101 extended permit tcp 10.77.241.128 255.255.255.192 any eq www
```

```
pager lines 24
```

```
mtu inside 1500
```

```
mtu outside 1500
```

```
no failover
```

```
no asdm history enable
```

```
arp timeout 14400
```

```
nat (inside) 0 access-list inside_nat0_outbound
```

```
access-group 101 in interface outside
```

```
route outside 0.0.0.0 0.0.0.0 192.168.200.2 1
```

```
timeout xlate 3:00:00
```

```
!--- The default connection timeout value of one hour is applicable to !--- all other TCP applications. timeout conn 1:00:00 half-closed 0:10:00 udp 0:02:00 icmp 0:00:02
```

```
timeout sunrpc 0:10:00 h323 0:05:00 h225 1:00:00 mgcp 0:05:00
```

```
timeout mgcp-pat 0:05:00 sip 0:30:00 sip_media 0:02:00
```

```
timeout uauth 0:05:00 absolute
```

```
no snmp-server location
```

```
no snmp-server contact
```

```
snmp-server enable traps snmp authentication linkup linkdown coldstart
```

```
telnet timeout 5
```

```
ssh timeout 5
```

```
console timeout 0
```

```
!
```

```
!--- Define the class map telnet in order !--- to classify Telnet/ssh/http traffic when you use Modular Policy Framework !--- to configure a security feature. !--- Assign the parameters to be matched by class map.
```

```
class-map telnet
```

```
description telnet
```

```
match access-list outside_mpc_in
```

```
class-map inspection_default
```

```
match default-inspection-traffic
```

```
!
```

```
!
```

```
policy-map global_policy
```

```
class inspection_default
```

```
inspect dns maximum-length 512
```

```
inspect ftp
```

```
inspect h323 h225
```

```
inspect h323 ras
```

```
inspect netbios
```

```
inspect rsh
```

```
inspect rtsp
```

```
inspect skinny
```

```
inspect esmtp
```



```
inspect sqlnet
inspect sunrpc
inspect tftp
inspect sip
inspect xdmcp
```

!--- Use the pre-defined class map telnet in the policy map.

policy-map telnet

!--- Set the connection timeout under the class mode in which !--- the idle TCP (Telnet/ssh/http) connection is disconnected. !--- There is a set value of ten minutes in this example. !--- The minimum possible value is five minutes. class telnet

```
set connection timeout tcp 00:10:00 reset
```

```
!
```

```
!
```

```
service-policy global_policy global
```

!--- Apply the policy-map telnet on the interface. !--- You can apply the service-policy command to any interface that !--- can be defined by the nameif command.

```
service-policy telnet interface outside
```

```
end
```

初期超时

初期连接是半打开的连接，例如，尚未为其完成三方握手的连接。它被定义为 ASA 上的 SYN 超时：默认情况下，ASA 上的 SYN 超时为 30 秒。这是配置初期超时的方式：

```
PIX Version - 7.1(1)
```

```
!
```

```
hostname PIX
```

```
domain-name Cisco.com
```

```
enable password 8Ry2YjIyt7RRXU24 encrypted
```

```
names
```

```
!
```

```
interface Ethernet0
```

```
nameif outside
```

```
security-level 0
```

```
ip address 192.168.200.1 255.255.255.0
```

```
!
```

```
interface Ethernet1
```

```
nameif inside
```

```
security-level 100
```

```
ip address 10.77.241.142 255.255.255.192
```

```
!
```

```
access-list inside_nat0_outbound extended permit ip 10.77.241.128 255.255.255.192 any
```

!--- Define the traffic that has to be matched in the class map. !--- Telnet is defined in this example. access-list outside_mpc_in extended permit tcp host 10.77.241.129 any eq telnet

```
access-list outside_mpc_in extended permit tcp host 10.77.241.129 any eq ssh
```

```
access-list outside_mpc_in extended permit tcp host 10.77.241.129 any eq www
```

```
access-list 101 extended permit tcp 10.77.241.128 255.255.255.192 any eq telnet
```

```
access-list 101 extended permit tcp 10.77.241.128 255.255.255.192 any eq ssh
```

```
access-list 101 extended permit tcp 10.77.241.128 255.255.255.192 any eq www
```

```
pager lines 24
```

```
mtu inside 1500
```

```
mtu outside 1500
no failover
no asdm history enable
arp timeout 14400
nat (inside) 0 access-list inside_nat0_outbound
access-group 101 in interface outside

route outside 0.0.0.0 0.0.0.0 192.168.200.2 1
timeout xlate 3:00:00
```

!--- The default connection timeout value of one hour is applicable to !--- all other TCP applications. timeout conn 1:00:00 half-closed 0:10:00 udp 0:02:00 icmp 0:00:02

```
timeout sunrpc 0:10:00 h323 0:05:00 h225 1:00:00 mgcp 0:05:00
timeout mgcp-pat 0:05:00 sip 0:30:00 sip_media 0:02:00
timeout uauth 0:05:00 absolute
no snmp-server location
no snmp-server contact
snmp-server enable traps snmp authentication linkup linkdown coldstart
telnet timeout 5
ssh timeout 5
console timeout 0
!
```

!--- Define the class map telnet in order !--- to classify Telnet/ssh/http traffic when you use Modular Policy Framework !--- to configure a security feature. !--- Assign the parameters to be matched by class map.

```
class-map telnet
description telnet
match access-list outside_mpc_in
```

```
class-map inspection_default
match default-inspection-traffic
!
```

```
policy-map global_policy
class inspection_default
inspect dns maximum-length 512
inspect ftp
inspect h323 h225
inspect h323 ras
inspect netbios
inspect rsh
inspect rtsp
inspect skinny
inspect esmtp
inspect sqlnet
inspect sunrpc
inspect tftp
inspect sip
inspect xdmcp
```

!--- Use the pre-defined class map telnet in the policy map.

```
policy-map telnet
```

!--- Set the connection timeout under the class mode in which !--- the idle TCP (Telnet/ssh/http) connection is disconnected. !--- There is a set value of ten minutes in this example. !--- The minimum possible value is five minutes. class telnet

```
set connection timeout tcp 00:10:00 reset
!
```

```
service-policy global_policy global
```

*!--- Apply the policy-map telnet on the interface. !--- You can apply the **service-policy** command to any interface that !--- can be defined by the **nameif** command.*

```
service-policy telnet interface outside
end
```

[Verify](#)

Use this section to confirm that your configuration works properly.

[命令输出解释程序 \(仅限注册用户 \)](#) (OIT) 支持某些 **show** 命令。使用 OIT 可查看对 **show** 命令输出的分析。

发出 **show service-policy interface outside** 命令以验证您的配置。

```
PIX#show service-policy interface outside

Interface outside:
  Service-policy: http
  Class-map: http
    Set connection policy:
    Set connection timeout policy:
      tcp 0:05:00 reset
  Inspect: http, packet 80, drop 0, reset-drop 0
```

发出 [show service-policy flow](#) 命令以验证特定数据流是否与策略配置匹配。

此命令输出显示了一个示例：

```
PIX#show service-policy flow tcp host 10.77.241.129 host 10.1.1.2 eq 23

Global policy:
Service-policy: global_policy

Interface outside:
  Service-policy: telnet
  Class-map: telnet
    Match: access-list 101
      Access rule: permit tcp 10.77.241.128 255.255.255.192 any eq telnet
    Action:
      Input flow: set connection timeout tcp 0:10:00 reset
```

[Troubleshoot](#)

如果发现连接超时不与模块化策略架构(MPF)一起使用，则请检查TCP开始连接。问题可能是颠倒了源和目标 IP 地址，或访问控制列表中的 IP 地址与用于为应用程序设置新超时值或更改默认超时的 MPF 中的 IP 地址不匹配。按照连接启动创建访问控制列表条目（源和目标），以使用 MPF 设置连接超时。

[Related Information](#)

- [Cisco PIX 500 系列安全设备](#)
- [Cisco ASA 5500 系列自适应安全设备](#)
- [Cisco PIX 防火墙软件](#)
- [Cisco Secure PIX防火墙命令参考](#)
- [安全产品 Field Notices \(包括 PIX \)](#)
- [请求注解 \(RFC\)](#)

本文档是否是有用？[有](#) [没有](#)

感谢您的反馈。

[打开通用支持案例](#) (需要[思科服务合同](#)。)

相关的思科支持社区讨论

[思科支持社区](#)是提出和解答问题、分享建议以及与同行协作的论坛。

有关本文档中所用的规则信息，请参阅 [Cisco Technical Tips Conventions](#)。

已更新：2008年10月16日

文档ID68332