



## Bandwidth on Demand (BWoD)

Bandwidth on Demand (BWoD) provides a bandwidth-aware Path Computation Element (PCE) in conjunction with SR-PCE for segment routing policies (SR policies). BWoD policies can be PCC-initiated (PCE-delegated) or PCE-initiated. BWoD is designed to deliver soft bandwidth guarantee services over SR policies. BWoD monitors network conditions and re-optimizes BWoD paths to prevent total BWoD traffic on any interface from exceeding the configured threshold percent.

BWoD does not track total interface utilization, and therefore, interfaces can still be congested if the combined BWoD traffic and non-BWoD traffic exceed the interface capacity. In addition, BWoD does not enforce the total amount of traffic entering BWoD SR policy. BWoD policies may traverse Equal Cost Multi-Path (ECMP) and assume even traffic distribution over these paths. However, actual ECMP distribution can be uneven, especially with large flows.



---

**Note** Functionality described within this section is only available with certain licensing options.

---

This section contains the following topics:

- [Important considerations when using BWoD, on page 1](#)
- [PCC-initiated BWoD SR-TE policies, on page 2](#)
- [Provision an SR-TE policy to maintain intent-based bandwidth requirements example, on page 3](#)
- [Configure Bandwidth on Demand, on page 9](#)
- [Troubleshoot BWoD, on page 10](#)

## Important considerations when using BWoD


Consider the following information when using BWoD:

- To provision a BWoD policy, you must have write-access to the head-end device based on Device Access Groups and assigned roles. Only BWoD admin users can modify BWoD configuration settings. See the [Cisco Crosswork Network Controller Administration Guide](#).
- If BWoD cannot find a path for a policy that guarantees its requested bandwidth, BWoD will attempt to find a *best effort* path if this option is enabled.
- BWoD will disable itself when an unexpected error is encountered to avoid network disruption.

- ## PCC-initiated BWoD SR-TE policies

The following figure shows the PCC-initiated workflow for BWoD:

**Figure 1: PCC-Initiated BWoD SR-TE Policies**

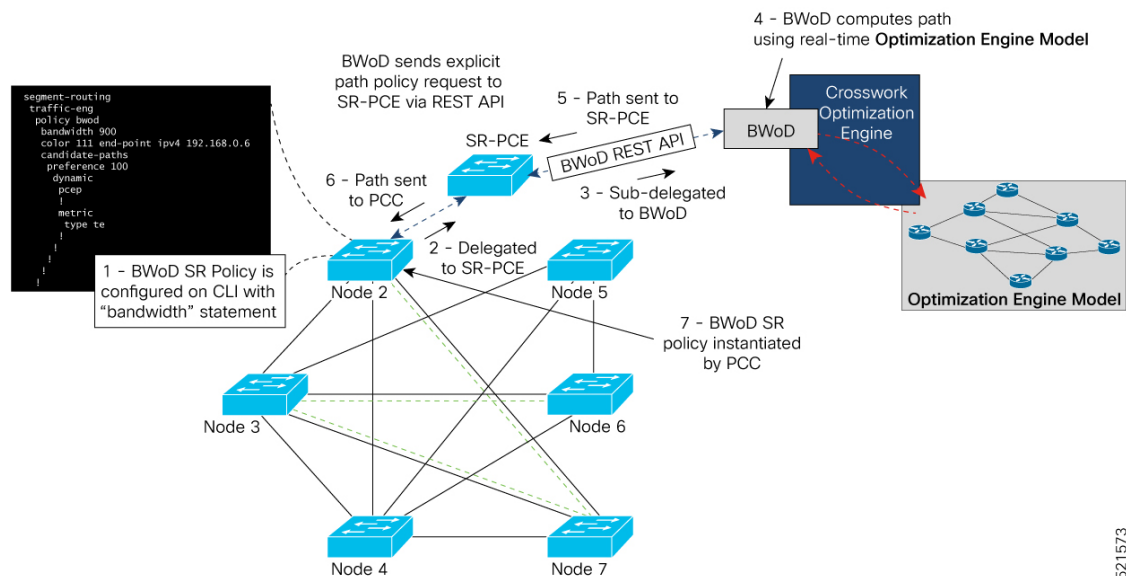

```
segment-routing
traffic-eng
  policy bwod
    bandwidth 900
    color 100 end-point ipv4 1.1.1.2
  candidate-paths
    preference 100
  dynamic
    pcep
    !
    metric
      type te
    !
  !
  constraints
    affinity
      exclude-any
        name RED
      !
    !
  !
  !
  !
```


## Provision an SR-TE policy to maintain intent-based bandwidth requirements example

This example demonstrates

- how to enable and configure Bandwidth on Demand (BWoD)
- how to create BWoD policies
- how BWoD calculates paths, and
- how BWoD calculates new policies when the Policy violation option is set to Loose or Strict.

In particular, three BWoD policies will be created using the *same* headend (L1-NCS5501.cisco.sjc20.com) and endpoint (L5-8201-1-crosswork.cisco.com) with a bandwidth requirement of 700 and 1000 Mbps, while keeping the utilization at 80%. In this example, all interfaces have the capacity of **1 Gbps**.

**Figure 2: Initial BWoD topology**

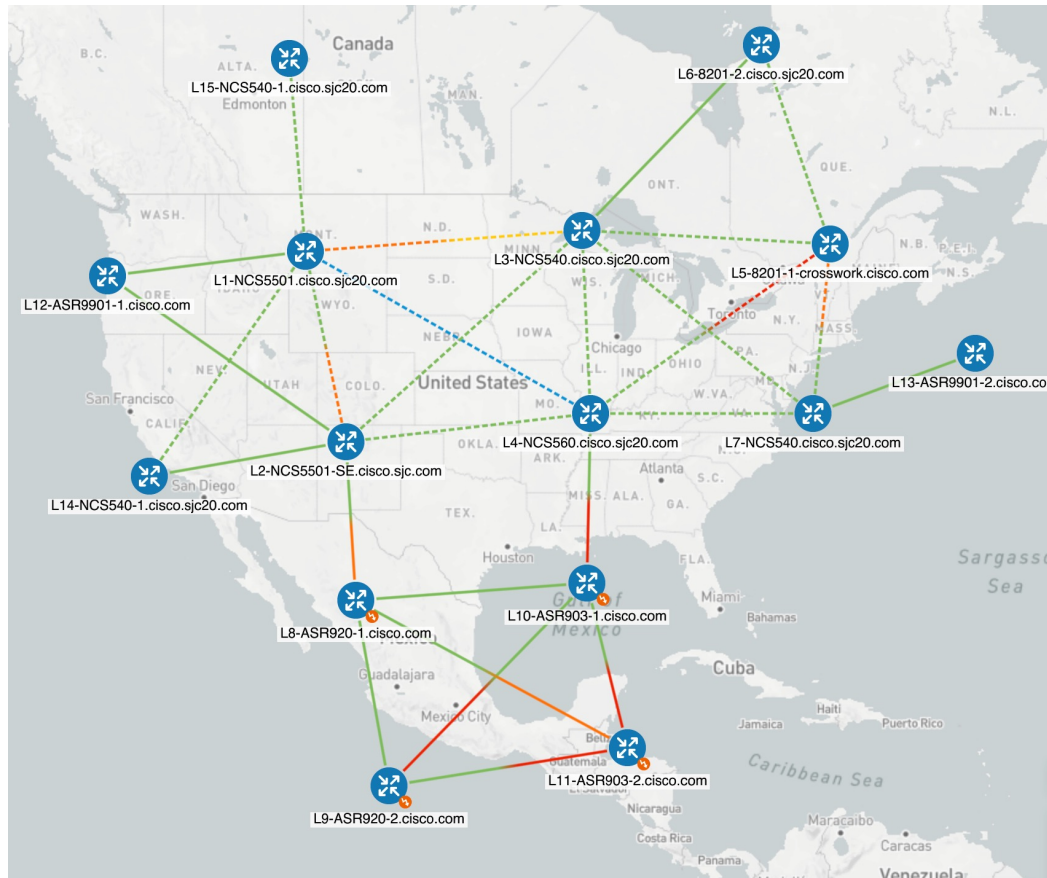

## Procedure

**Step 1** Enable and configure BWoD.

- From the main menu, choose **Services & Traffic Engineering > Bandwidth on Demand > Configuration**.
- Set Enable to **True**, enter **80** in the **Link utilization** field, and confirm that **Advance > Policy violations** is set to **Loose**. To find descriptions of other options, simply hover the mouse over **i**.
- Click **Commit changes**.

**Step 2** Create the first PCE-initiated BWoD SR-TE policy.

- From the main menu, choose **Traffic Engineering > SR-TE** tab and click **Create > PCE init**.
- Enter the required policy details. In this example, we are creating a policy with these values:
  - Headend: **L1-NCS5501.cisco.sjc20.com**
  - Endpoint: **L5-8201-1-crosswork.cisco.com**

- Color: **70000**

**Example:****Figure 3: Policy details**

The screenshot shows a 'Policy details' configuration window. It has three main sections: 'Headend', 'Endpoint', and 'Color'. The 'Headend' section shows a selected value 'L1-NCS5501.cisco.sjc20.com [192.168. ...] [2001:192:168::1]' with an 'Edit' link. Below it is a dropdown menu with the same text. The 'Endpoint' section shows a selected value 'L5-8201-1-crosswork.cisco.com [192.168. ...] [2001:192: ...]' with an 'Edit' link. Below it are two dropdown menus, one with 'L5-8201-1-crosswork.cisco....' and another with '192.168. ...'. The 'Color' section has a text input field containing '70000'.

- c) In the **Policy path** area, click **Bandwidth on demand**, and enter the required policy path details. In this example, we use these values:

- Path name: **bwod-70000**
- Optimization objective: **Interior gateway protocol (IGP) metric**
- Bandwidth: **7000 Mbps**

**Example:**

Figure 4: Policy path details

**Policy path**

☐ Explicit path
 ☐ Dynamic path
 ☒ Bandwidth on demand

Path name \* ⓘ  
bwod-70000

Optimization objective \*  
Interior gateway protocol (IGP) metric


Bandwidth \* ⓘ  
700 Mbps

SID algorithm ⓘ

- d) Click **Preview**. BWoD only takes into account current interface utilization that has been reserved by another BWoD policy. Otherwise, BWoD only considers the capacity of the interface in its calculations. In this example, all interfaces have the capacity of 1 Gbps. Since there are no existing BWoD policies, BWoD considers the capacity of all nodes and takes the shortest route.

**Example:**

Figure 5: First BWoD policy (bwod-70000)

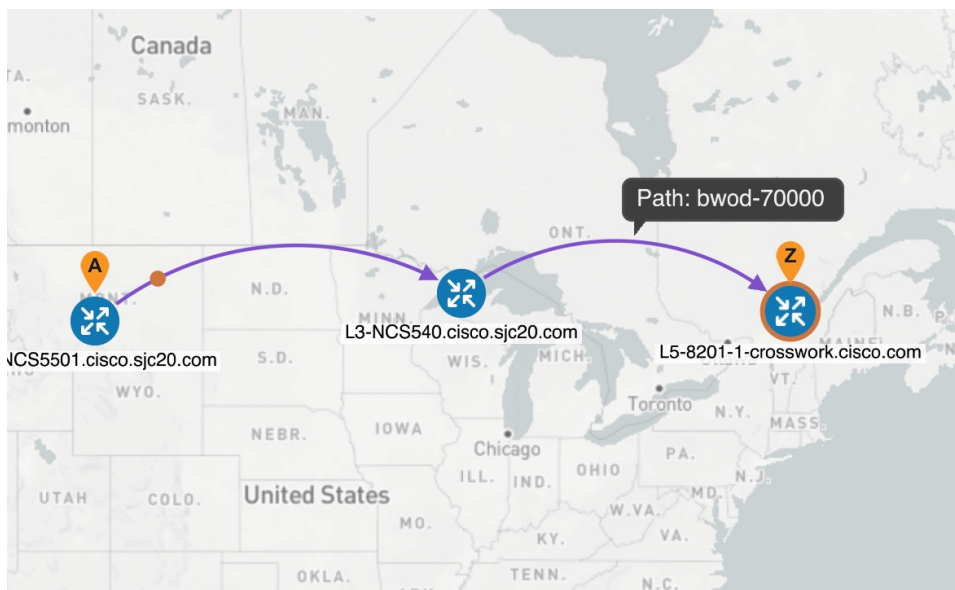

- e) If you are satisfied with the proposed BWoD SR-TE policy deployment, click **Provision**.

**Step 3**

Verify that the new BWoD SR-TE policy has been created.

- a) From the main menu, choose **Traffic Engineering > SR-TE**.

b) Select the new BWoD SR-TE policy and view the SR policy details (click and choose **View details**).


**Step 4**

Create a second BWoD policy. In this example, we use these values:

- Headend: **L1-NCS5501.cisco.sjc20.com**
- Endpoint: **L5-8201-1-crosswork.cisco.com**
- Color: **70001**
- Path name: **bwod-70001**
- Optimization objective: **Interior gateway protocol (IGP) metric**
- Bandwidth: **700 Mbps**

BWoD considers the existing BWoD policy (bwod-70000) and its bandwidth requirement into its interface capacity calculations. So, a new path is created for the bwod-70001 policy.

*Figure 6: New bwod-70001 policy*

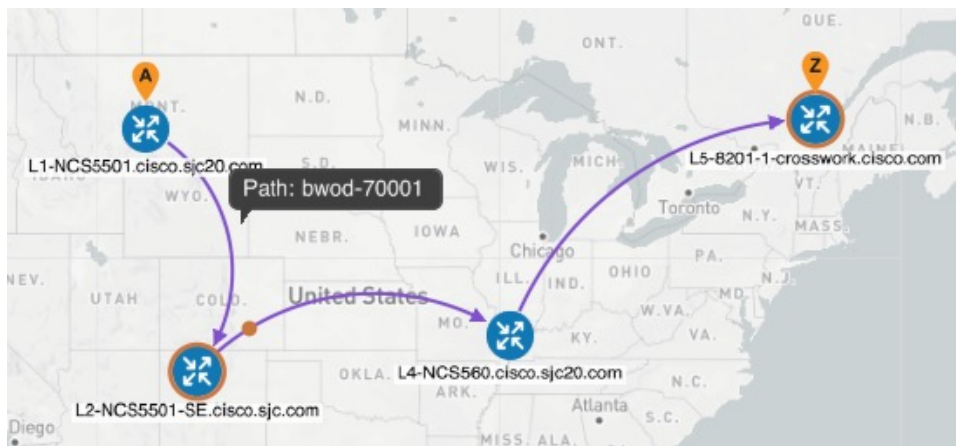**Step 5**


Create a third BWoD policy. In this example, we use these values:

- Headend: **L1-NCS5501.cisco.sjc20.com**
- Endpoint: **L5-8201-1-crosswork.cisco.com**
- Color: **70002**
- Path name: **bwod-70002**
- Optimization objective: **Interior gateway protocol (IGP) metric**
- Bandwidth: **1000 Mbps**

Since BWoD takes into account all previous BWoD policy requirements and the BWoD policy violation option was set to **Loose**, BWoD creates a best effort path for the bwod-70002 policy. You will receive this message when you provision the new policy:




Figure 7: Best effort message

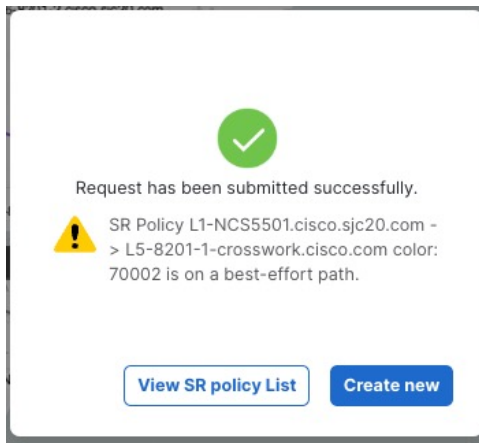

Note that existing paths for bwod-7000 and bwod-70001 are moved to accommodate the new bwod-70002 policy.

### Example:

Figure 8: BWoD policies with Loose option

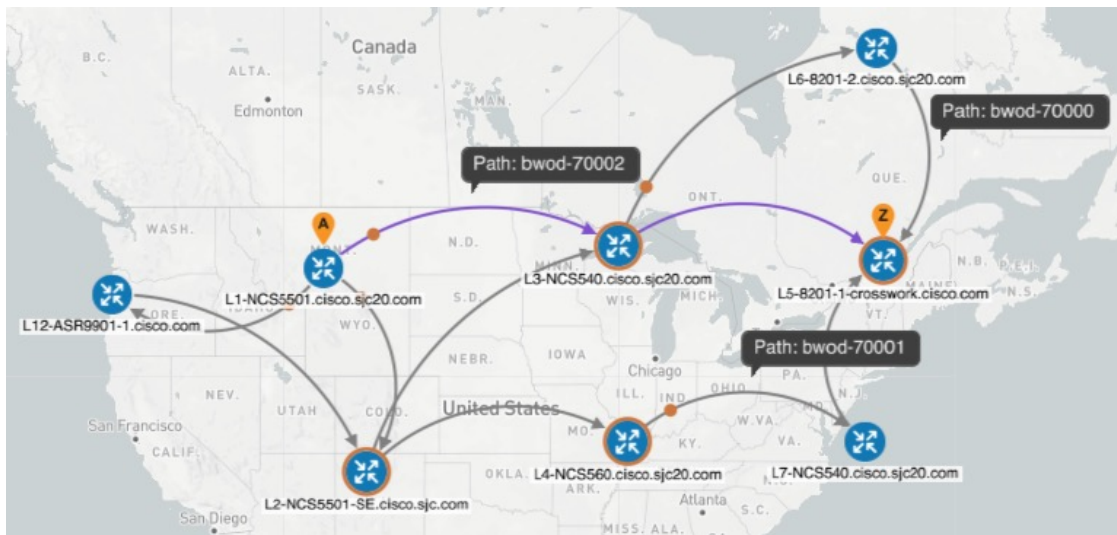

**Step 6** Change the BWoD policy violation option to **Strict** (Services & Traffic Engineering > Bandwidth on Demand > Configuration > Advanced).


**Step 7** Create a fourth BWoD policy. In this example, we use these values:

- Headend: **L1-NCS5501.cisco.sjc20.com**
- Endpoint: **L5-8201-1-crosswork.cisco.com**
- Color: **70003**
- Path name: **bwod-70003**
- Optimization objective: **Interior gateway protocol (IGP) metric**
- Bandwidth: **1000 Mbps**



Since the BWoD policy violation option is set to **Strict**, BWoD is not be able to overwrite existing BWoD policies, and the request for additional 1000 Mbps policy results in a "No solution found" message.

Figure 9: No solution found

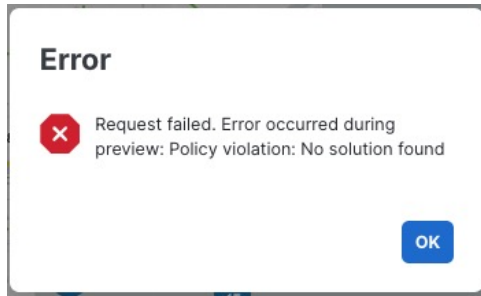


## Configure Bandwidth on Demand

There are two main steps in using Bandwidth on Demand (BWoD):

1. Enable and configure BWoD options.
2. Create BWoD SR policies. As long as BWoD is enabled, you can create multiple BWoD SR policies.

### Procedure

- 
- |                |   |
|----------------|---|
| <b>Step 1</b>  | From the main menu, choose <b>Services &amp; Traffic Engineering &gt; Bandwidth on Demand &gt; Configuration</b> .  |
| <b>Step 2</b>  | Toggle the <b>Enable</b> switch to <b>True</b> .  |
| <b>Step 3</b>  | Configure additional options. Hover the mouse pointer over  to view a description of each field.   |
| <b>Step 4</b>  | Click <b>Commit changes</b> to save the configuration.  |
| <b>Step 5</b>  | To create BWoD SR policies, choose <b>Traffic Engineering &gt; Traffic Engineering</b> .  |
| <b>Step 6</b>  | From the SR Policy table, choose <b>Create &gt; PCE Init</b> .  |
| <b>Step 7</b>  | In addition to entering the required SR policy details, click the <b>Bandwidth on demand</b> option and enter the required bandwidth.   |
| <b>Step 8</b>  | If applicable, enter a Flexible Algorithm constraint in the <b>SID Algorithm</b> field. The values correspond to the Flexible Algorithm that are defined on the device and the 128-255 range is enforced by Cisco IOS XR. Cisco Crosswork will try to find a path with this SID. If a path with the SID constraint cannot be found, the provisioned policy will remain operationally down until the conditions are met. |
| <b>Step 9</b>  | Click <b>Preview</b> to view the proposed SR policy.  |
| <b>Step 10</b> | Click <b>Provision</b> to commit the SR policy.   |
-

# Troubleshoot BWoD

The following are some of the most common error conditions for BWoD and some possible corrective actions that may fix the issue.

**Table 1: Errors**

Error event message	Possible causes and recommended corrective Aaction
OptimaModelError	<p>The network model used by BWoD from the Optimization Engine is corrupt or is missing key data needed to properly support BWoD. Possible causes include network discovery issues or synchronization problems between the Optimization Engine and Topology Services. Try restarting the Optimization Engine pod to rebuild the model.</p> <p>This error can also occur if the time required to discover a policy and add it to the model after it has been deployed exceeds the <b>Deployment Timeout</b> option set for BWoD. The default is 30 seconds, sufficient for small to medium-sized networks. However, larger networks may require additional time.</p>
NATSTimedOutError	<p>The deployment of a bandwidth policy through SR-PCE exceeds the <b>Deployment Timeout</b> option set for BWoD. Increase the <b>Deployment Timeout</b> option to allow for additional time for deployments in larger networks.</p>
Traceback or other errors found in the log file	Please contact your Cisco service representative.