

# PIX/ASA URL Filtering Configuration Example

Document ID: 97277

---

## Introduction

### Prerequisites

Components Used

Conventions

### Background Information

#### Configure the ASA/PIX with the CLI

Network Diagram

Identify the Filtering Server

Configure the Filtering Policy

Advanced URL Filtering

Configuration

#### Configure the ASA/PIX with ASDM

### Verify

### Troubleshoot

### Related Information

---

## Introduction

This document explains how to configure URL filtering on a security appliance.

To filter traffic has these advantages:

- It can help reduce security risks and prevent inappropriate usage.
- It can provide greater control over the traffic that passes through the security appliance.

**Note:** Because URL filtering is CPU-intensive, the use of an external filtering server ensures that the throughput of other traffic is not affected. However, based on the speed of your network and the capacity of your URL filtering server, the time required for the initial connection can be noticeably slower when traffic is filtered with an external filtering server.

## Prerequisites

### Components Used

The information in this document is based on these software and hardware versions:

- PIX 500 Series Security Appliance with version 6.2 and later
- ASA 5500 Series Security Appliance with version 7.x and later
- Adaptive Security Device Manager (ASDM) 6.0

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, make sure that you understand the potential impact of any command.

## Conventions

Refer to the Cisco Technical Tips Conventions for more information on document conventions.

## Background Information

You can filter connection requests that originate from a more secure network to a less secure network. Although you can use access control lists (ACLs) in order to prevent outbound access to specific content servers, it is difficult to manage usage this way because of the size and dynamic nature of the Internet. You can simplify configuration and improve security appliance performance with the use of a separate server that runs one of these Internet filtering products:

- Websense Enterprise filters HTTP, HTTPS, and FTP. It is supported by PIX firewall version 5.3 and later.
- Secure Computing SmartFilter, formerly known as N2H2 filters HTTP, HTTPS, FTP, and long URL filtering. It is supported by PIX firewall version 6.2 and later.

Compared to the use of access control lists, this reduces the administrative task and improves filtering effectiveness. Also, because URL filtering is handled on a separate platform, the performance of the PIX firewall is much less affected. However, users can notice longer access times to websites or FTP servers when the filtering server is remote from the security appliance.

The PIX firewall checks outbound URL requests with the policy defined on the URL filtering server. The PIX firewall either permits or denies the connection, based on the response from the filtering server.

When filtering is enabled and a request for content is directed through the security appliance, the request is sent to the content server and to the filtering server at the same time. If the filtering server allows the connection, the security appliance forwards the response from the content server to the client that originated the request. If the filtering server denies the connection, the security appliance drops the response and sends a message or return code that indicates that the connection is not successful.

If user authentication is enabled on the security appliance, the security appliance also sends the user name to the filtering server. The filtering server can use user-specific filtering settings or provide enhanced reports with regard to usage.


## Configure the ASA/PIX with the CLI

In this section, you are presented with the information to configure the features described in this document.

**Note:** Use the Command Lookup Tool (registered customers only) in order to obtain more information on the commands used in this section.

## Network Diagram

This document uses this network setup:

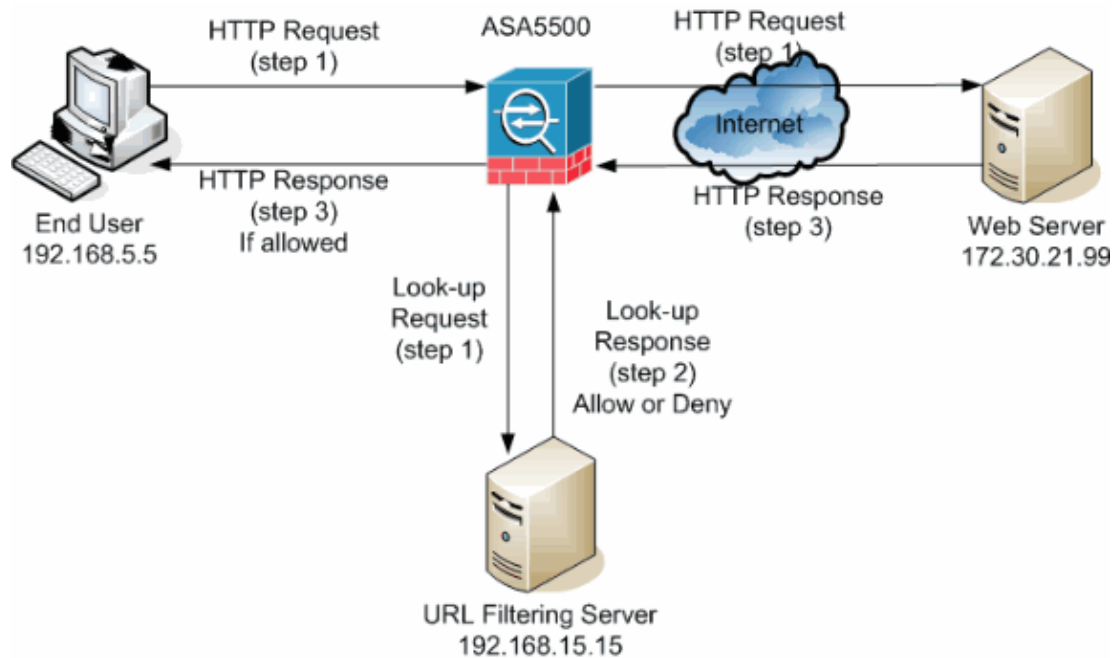

In this example, the URL filtering server is located in a DMZ network. End users located inside the network try to access the web server located outside the network over the Internet.

These steps are completed during the user request for the web server:

1. The end user browses to a page on the web server, and the browser sends an HTTP request.
2. After the security appliance receives this request, it forwards the request to the web server and simultaneously extracts the URL and sends a look-up request to the URL filtering server.
3. After the URL filtering server receives the look-up request, it checks its database in order to determine whether to permit or deny the URL. It returns a permit or deny status with a look-up response to the Cisco IOS® firewall.
4. The security appliance receives this look-up response and performs one of these functions:
  - ◆ If the look-up response permits the URL, it sends the HTTP response to the end user.
  - ◆ If the look-up response denies the URL, the URL filtering server redirects the user to its own internal web server, which displays a message that describes the category under which the URL is blocked. Thereafter, the connection is reset on both ends.

## Identify the Filtering Server

You need to identify the address of the filtering server with the **url-server** command. You must use the appropriate form of this command based on the type of filtering server you use.

**Note:** For software version 7.x and later, you can identify up to four filtering servers for each context. The security appliance uses the servers in order until a server responds. You can only configure a single type of server, either Websense or N2H2, in your configuration.

### Websense

Websense is a third-party filtering software that can filter HTTP requests on the basis of these policies:

- destination hostname
- destination IP address
- keywords

- user name

The software maintains a URL database of more than 20 million sites organized into more than 60 categories and subcategories.

- Software version 6.2:

```
url-server [(if_name)] vendor websense host local_ip [timeout seconds] [protocol {TCP | UDP}]
```

The **url-server** command designates the server that runs the N2H2 or Websense URL filtering application. The limit is 16 URL servers. However, you can use only one application at a time, either N2H2 or Websense. Additionally, if you change your configuration on the PIX firewall, it does not update the configuration on the application server. This must be done separately, based on the instructions of the individual vendor.

- Software version 7.x and later:

```
pix(config)# url-server (if_name) host local_ip [timeout seconds] [protocol TCP | UDP]
[connections num_conns] ]
```

Replace `if_name` with the name of the security appliance interface that is connected to the filtering server. The default is `inside`. Replace `local_ip` with the IP address of the filtering server. Replace `seconds` with the number of seconds the security appliance must continue to try to connect to the filtering server.

Use the `protocol` option in order to specify whether you want to use TCP or UDP. With a Websense server, you can also specify the `version` of TCP you want to use. TCP version 1 is the default. TCP version 4 allows the PIX firewall to send authenticated user names and URL logging information to the Websense server if the PIX firewall has already authenticated the user.

For example, in order to identify a single Websense filtering server, issue this command:

```
hostname(config)#url-server (DMZ) vendor websense host 192.168.15.15 protocol TCP version 4
```

## Secure Computing SmartFilter

- PIX version 6.2:

```
pix(config)#url-server [(if_name)] vendor n2h2 host local_ip[:port number] [timeout
[protocol TCP | UDP]
```

- Software versions 7.0 and 7.1:

```
hostname(config)#url-server (if_name) vendor n2h2 host local_ip[:port number] [timeo
[protocol TCP connections number | UDP [connections num_conns]]
```

- Software version 7.2 and later:

```
hostname(config)#url-server (if_name) vendor {secure-computing | n2h2} host <local_ip>
[port <number>] [timeout <seconds>] [protocol {TCP [connections <number>]} | UDP]
```

For the vendor `{secure-computing | n2h2}`, you can use `secure-computing` as a vendor string. However, `n2h2` is acceptable for backward compatibility. When the configuration entries are generated, `secure-computing` is saved as the vendor string.

Replace `if_name` with the name of the security appliance interface that is connected to the filtering server. The default is `inside`. Replace `local_ip` with the IP address of the filtering server and `port <number>`

with the desired port number.

**Note:** The default port used by the Secure Computing SmartFilter server to communicate with the security appliance with TCP or UDP is port 4005.

Replace `seconds` with the number of seconds the security appliance must continue to try to connect to the filtering server. Use the `protocol` option in order to specify whether you want to use TCP or UDP.

The `connections <number>` is the number of times to attempt to make a connection between the host and server.

For example, in order to identify a single N2H2 filtering server, issue this command:

```
hostname(config)#url-server (DMZ) vendor n2h2 host 192.168.15.15 port 4444 timeout 45 protocol
tcp connections 10
```

Or, if you want to use default values, issue this command:

```
hostname(config)#url-server (DMZ) vendor n2h2 host 192.168.15.15
```

## Configure the Filtering Policy

**Note:** You must identify and enable the URL filtering server before you enable URL filtering.

### Enable URL Filtering

When the filtering server approves an HTTP connection request, the security appliance allows the reply from the web server to reach the client that originated the request. If the filtering server denies the request, the security appliance redirects the user to a block page that indicates that access is denied.

Issue the **filter url** command in order to configure the policy used to filter URLs:

- PIX version 6.2:

```
filter url [http | port[-port] local_ip local_mask foreign_ip foreign_mask] [allow]
[longurl-truncate | longurl-deny] [cgi-truncate]
```

- Software version 7.x and later:

```
filter url [http | port[-port] local_ip local_mask foreign_ip foreign_mask] [allow]
[longurl-truncate | longurl-deny] [cgi-truncate]
```

Replace `port` with the port number on which to filter HTTP traffic if a different port than the default port for HTTP (80) is used. In order to identify a range of port numbers, enter the start and end of the range separated by a hyphen.

With filtering enabled, the security appliance stops outbound HTTP traffic until a filtering server permits the connection. If the primary filtering server does not respond, the security appliance directs the filtering request to the secondary filtering server. The `allow` option causes the security appliance to forward HTTP traffic without filtering when the primary filtering server is unavailable.

Issue the **proxy-block** command in order to drop all requests to proxy servers.

**Note:** The remainder of the parameters are used in order to truncate long URLs.

## Truncate Long HTTP URLs

The `longurl-truncate` option causes the security appliance to send only the host name or IP address portion of the URL for evaluation to the filtering server when the URL is longer than the maximum length permitted.

Use the `longurl-deny` option in order to deny outbound URL traffic if the URL is longer than the maximum permitted.

Use the `cgi-truncate` option in order to truncate CGI URLs to include only the CGI script location and the script name without any parameters.

This is a general filter configuration example:

```
hostname(config)#filter url http 192.168.5.0 255.255.255.0 172.30.21.99 255.255.255.255 a1.  
proxy-block longurl-truncate cgi-truncate
```

## Exempt Traffic from Filtering

If you want to make an exception to the general filtering policy, issue this command:

```
filter url except local_ip local_mask foreign_ip foreign_mask]
```

Replace `local_ip` and `local_mask` with the IP address and subnet mask of a user or subnetwork that you want to exempt from filtering restrictions.

Replace `foreign_ip` and `foreign_mask` with the IP address and subnet mask of a server or subnetwork that you want to exempt from filtering restrictions.

For example, this command causes all HTTP requests to 172.30.21.99, from the inside hosts, to be forwarded to the filtering server except for requests from host 192.168.5.5:

This is a configuration example for an exception:

```
hostname(config)#filter url except 192.168.5.5 255.255.255.255 172.30.21.99 255.255.255.255
```

## Advanced URL Filtering

This section provides information about advanced filtering parameters, which includes these topics:

- buffering
- caching
- long URL support

## Buffer The Web Server Responses

When a user issues a request to connect to a content server, the security appliance sends the request to the content server and to the filtering server at the same time. If the filtering server does not respond before the content server, the server response is dropped. This delays the web server response from the point of view of the web client because the client must reissue the request.

If you enable the HTTP response buffer, replies from web content servers are buffered and the responses are forwarded to the client that makes the request if the filtering server allows the connection. This prevents the delay that can otherwise occur.

In order to buffer responses to HTTP requests, complete these steps:

1. In order to enable buffering of responses for HTTP requests that are pending a response from the filtering server, issue this command:

```
hostname(config)#url-block block block-buffer-limit
```

Replace `block-buffer-limit` with the maximum number of blocks to be buffered.

2. In order to configure the maximum memory available to buffer pending URLs, and to buffer long URLs with Websense, issue this command:

```
hostname(config)#url-block url-mempool memory-pool-size
```

Replace `memory-pool-size` with a value from 2 to 10240 for a maximum memory allocation of 2 KB to 10 MB.

## Cache Server Addresses

After a user accesses a site, the filtering server can allow the security appliance to cache the server address for a certain amount of time, as long as every site hosted at the address is in a category that is permitted at all times. Then, when the user accesses the server again, or if another user accesses the server, the security appliance does not need to consult the filtering server again.

Issue the `url-cache` command if needed to improve throughput:

```
hostname(config)#url-cache dst | src_dst size
```

Replace `size` with a value for the cache size within the range 1 to 128 (KB).

Use the `dst` keyword in order to cache entries based on the URL destination address. Select this mode if all users share the same URL filtering policy on the Websense server.

Use the `src_dst` keyword in order to cache entries based on both the source address that initiates the URL request as well as the URL destination address. Select this mode if users do not share the same URL filtering policy on the Websense server.

## Enable Filtering of Long URLs

By default, the security appliance considers an HTTP URL to be a long URL if it is greater than 1159 characters. You can increase the maximum length allowed for a single URL with this command:

```
hostname(config)#url-block url-size long-url-size
```

Replace `long-url-size` with the maximum size in KB for each long URL to be buffered.

For example, these commands configure the security appliance for advanced URL filtering:

```
hostname(config)#url-block block 10
hostname(config)#url-block url-mempool 2
hostname(config)#url-cache dst 100
hostname(config)#url-block url-size 2
```

# Configuration

This configuration includes the commands described in this document:

## ASA 8.0 Configuration

```
ciscoasa#show running-config
: Saved
:
ASA Version 8.0(2)
!
hostname ciscoasa
domain-name Security.lab.com
enable password 2kxsYuz/BehvglCF encrypted
no names
dns-guard
!
interface GigabitEthernet0/0
 speed 100
 duplex full
 nameif outside
 security-level 0
 ip address 172.30.21.222 255.255.255.0
!
interface GigabitEthernet0/1
 description INSIDE
 nameif inside
 security-level 100
 ip address 192.168.5.11 255.255.255.0
!
interface GigabitEthernet0/2
 description LAN/STATE Failover Interface
 shutdown
!
interface GigabitEthernet0/3
 description DMZ
 nameif DMZ
 security-level 50
 ip address 192.168.15.1 255.255.255.0
!
interface Management0/0
 no nameif
 no security-level
 no ip address
!
passwd 2KFQnbNIdI.2KYOU encrypted
boot system disk0:/asa802-k8.bin
ftp mode passive
clock timezone CST -6
clock summer-time CDT recurring
dns server-group DefaultDNS
domain-name Security.lab.com
same-security-traffic permit intra-interface

pager lines 20
logging enable
logging buffer-size 40000
logging asdm-buffer-size 200
logging monitor debugging
logging buffered informational
logging trap warnings
logging asdm informational
logging mail debugging
```

```
logging from-address aaa@cisco.com
mtu outside 1500
mtu inside 1500
mtu DMZ 1500
no failover
failover lan unit primary
failover lan interface interface GigabitEthernet0/2
failover link interface GigabitEthernet0/2
no monitor-interface outside
icmp unreachable rate-limit 1 burst-size 1

asdm image disk0:/asdm-602.bin
asdm history enable
arp timeout 14400
global (outside) 1 interface
nat (inside) 1 0.0.0.0 0.0.0.0

route outside 0.0.0.0 0.0.0.0 172.30.21.244 1
timeout xlate 3:00:00
timeout conn 1:00:00 half-closed 0:10:00 udp 0:02:00 icmp 0:00:02
timeout sunrpc 0:10:00 h323 0:05:00 h225 1:00:00 mgcp 0:05:00 mgcp-pat 0:05:00
timeout sip 0:30:00 sip_media 0:02:00 sip-invite 0:03:00 sip-disconnect 0:02:00
timeout uauth 0:05:00 absolute
ldap attribute-map tomtom
dynamic-access-policy-record DfltAccessPolicy

url-server (DMZ) vendor websense host 192.168.15.15 timeout 30 protocol TCP version 1 connections

url-cache dst 100
aaa authentication ssh console LOCAL
aaa authentication enable console LOCAL
aaa authentication telnet console LOCAL

filter url except 192.168.5.5 255.255.255.255 172.30.21.99 255.255.255.255

filter url http 192.168.5.0 255.255.255.0 172.30.21.99 255.255.255.255 allow
proxy-block longurl-truncate cgi-truncate
http server enable
http 172.30.0.0 255.255.0.0 outside

no snmp-server location
no snmp-server contact
telnet 0.0.0.0 0.0.0.0 inside
telnet timeout 5
ssh 0.0.0.0 0.0.0.0 inside
ssh timeout 60
console timeout 0
management-access inside
dhcpd address 192.168.5.12-192.168.5.20 inside
dhcpd enable inside
!
threat-detection basic-threat
threat-detection statistics access-list
!
class-map inspection_default
match default-inspection-traffic
!
!
policy-map global_policy
class inspection_default
inspect ftp
inspect h323 h225
inspect h323 ras
inspect rsh
inspect sqlnet
inspect skinny
```


```
inspect sunrpc
inspect xdmcp
inspect sip
inspect netbios
inspect tftp
inspect icmp
!
service-policy global_policy global
url-block url-mempool 2
url-block url-size 2
url-block block 10
username fwadmin password aDRVKThrSs46pTjG encrypted privilege 15
prompt hostname context
Cryptochecksum:db208a243faa71f9b3e92491a6ed2105
: end
```

## Configure the ASA/PIX with ASDM


This section demonstrates how to configure URL filtering for the security appliance with the Adaptive Security Device Manager (ASDM).

After you launch ASDM, complete these steps:

1. Choose the **Configuration** pane.

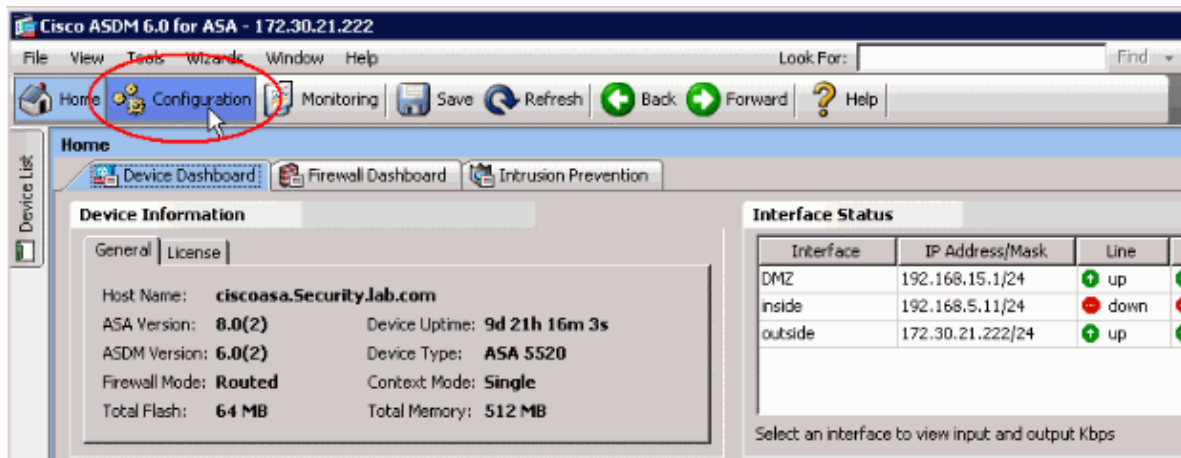

2. Click **Firewall** in the list shown in the **Configuration** pane.

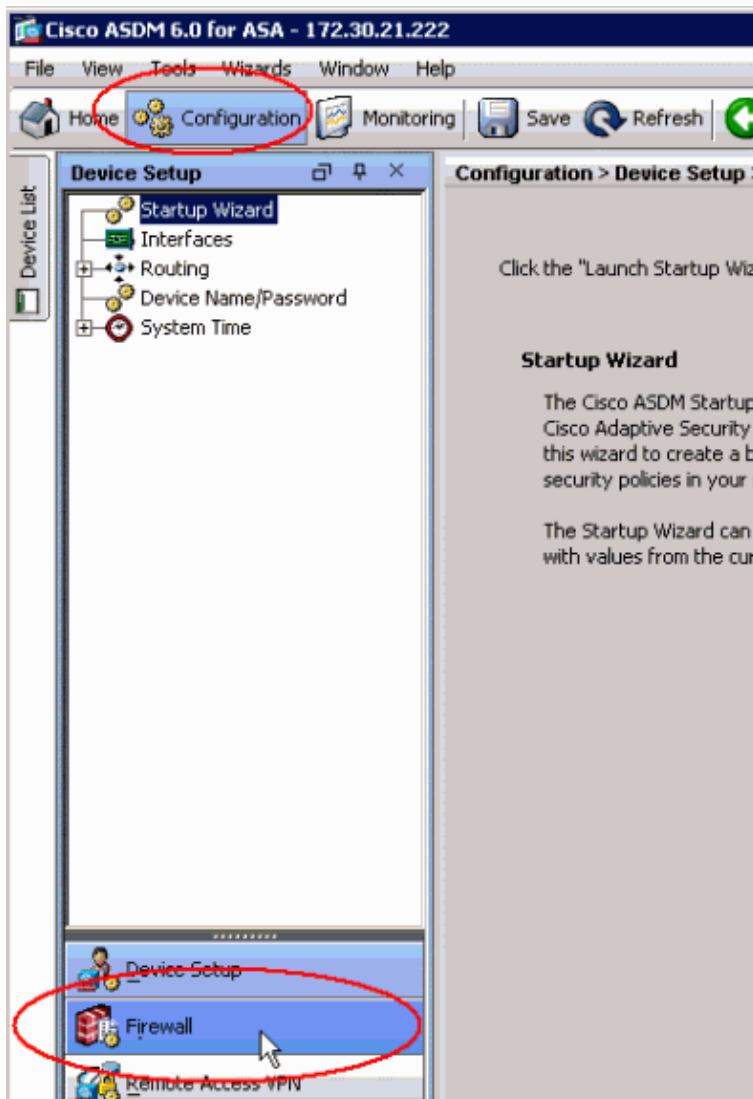

- From the **Firewall** drop-down list, choose **URL Filtering Servers**. Choose the URL Filtering Server type you want to use, and click **Add** to configure its parameters.


**Note:** You must add the filtering server before you can configure filtering for HTTP, HTTPS, or FTP filtering rules.




- Choose the appropriate parameters in the popup window:

- ◆ Interface Displays the interface connected to the filtering server
- ◆ IP Address Displays the IP address of the filtering server
- ◆ Timeout Displays the number of seconds after which the request to the filtering server times out
- ◆ Protocol Displays the protocol used to communicate with the filtering server. TCP version 1 is the default. TCP version 4 allows the PIX firewall to send authenticated user names and URL logging information to the Websense server, if the PIX firewall has already authenticated the user
- ◆ TCP Connections Displays the maximum number of TCP connections allowed to communicate with the URL filtering server


After you enter the parameters, click **OK** in the popup window and **Apply** in the main window.

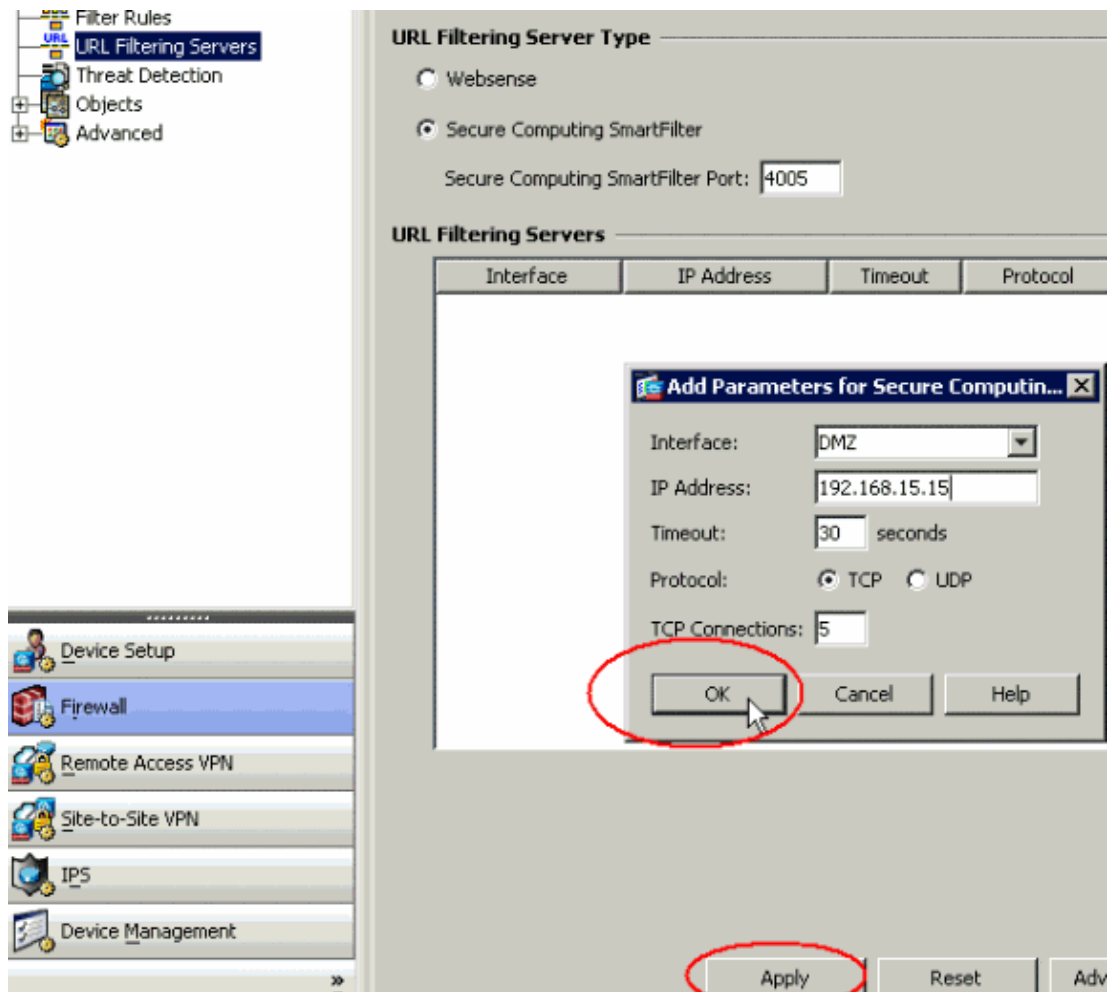


5. From the **Firewall** drop-down list, choose **Filter Rules**. Click the **Add** button in the main window, and choose the type of rule you want to add. In this example, the **Add Filter HTTP Rule** is chosen.

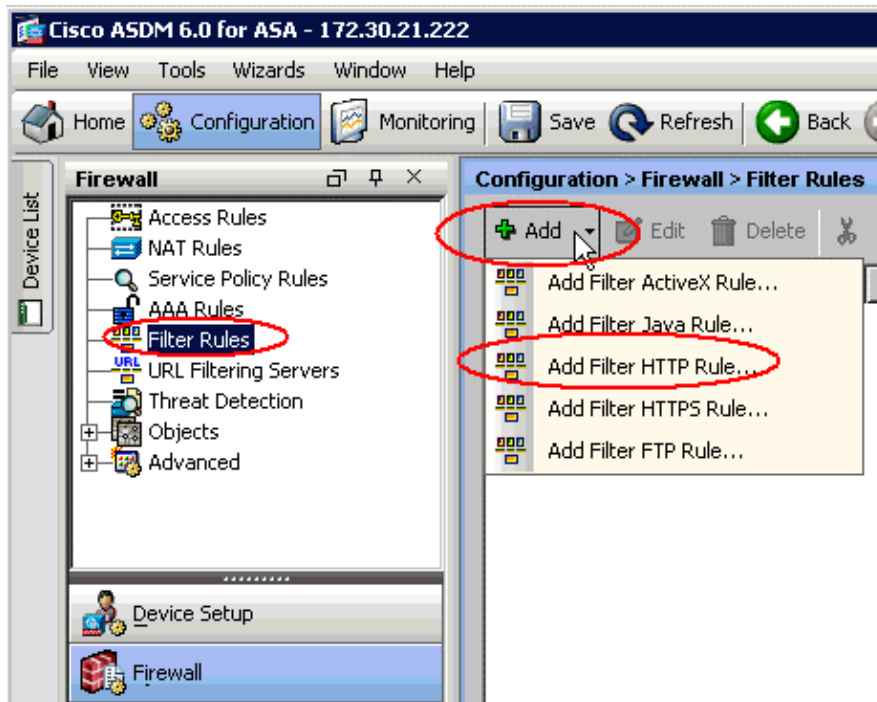


6. Once the popup window appears, you can click on the browse buttons for **Source**, **Destination** and **Service** options in order to choose the appropriate parameters.

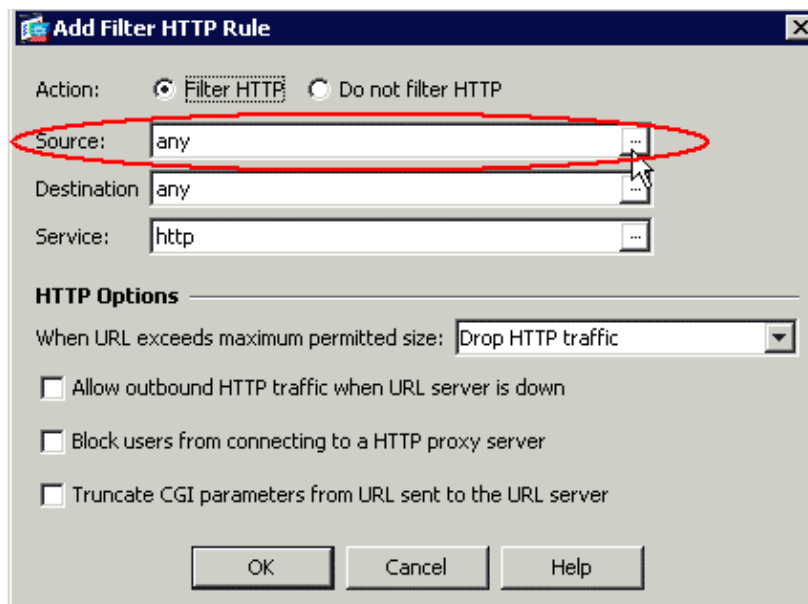


7. This shows the browse window for the **Source** option. Make your selection and click **OK**.

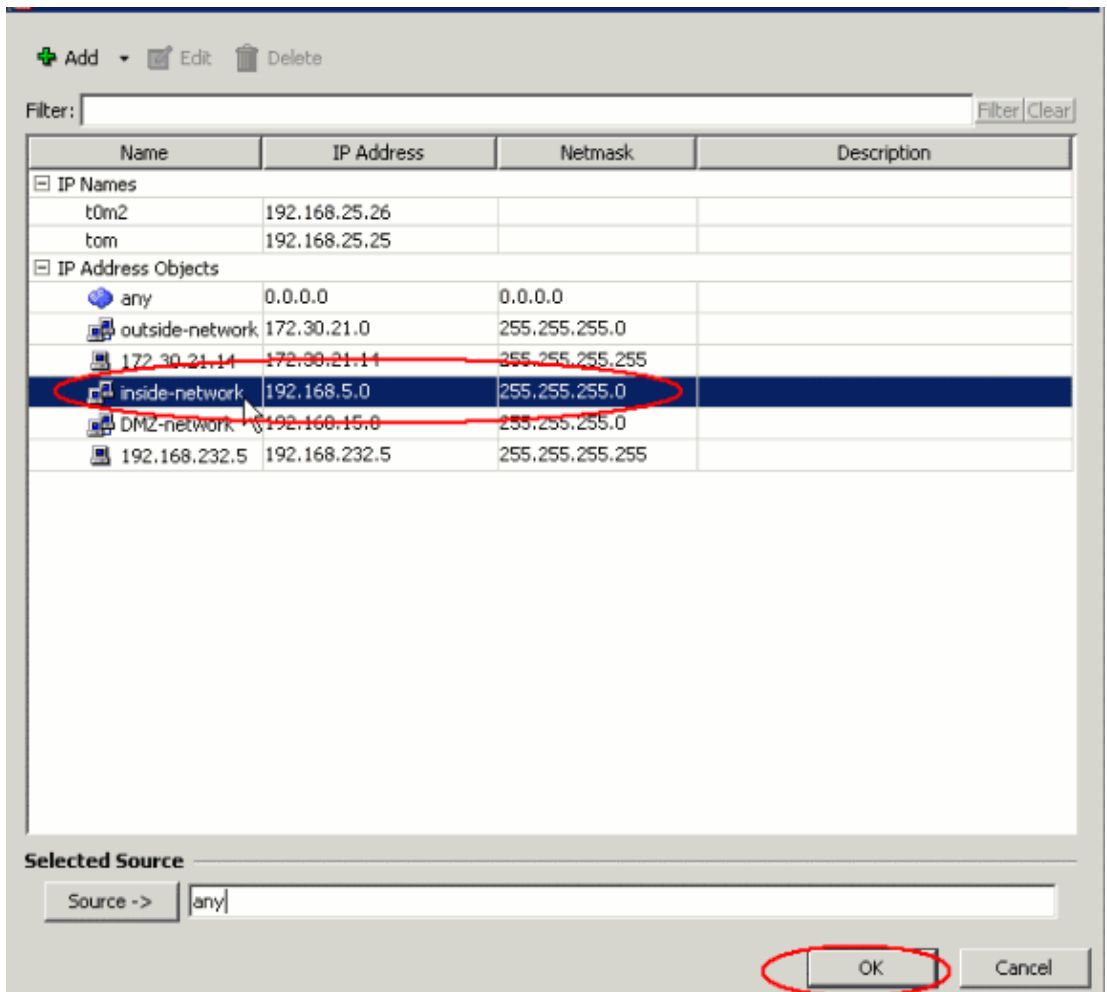


8. After you complete the selection for all parameters, click **OK** to continue.

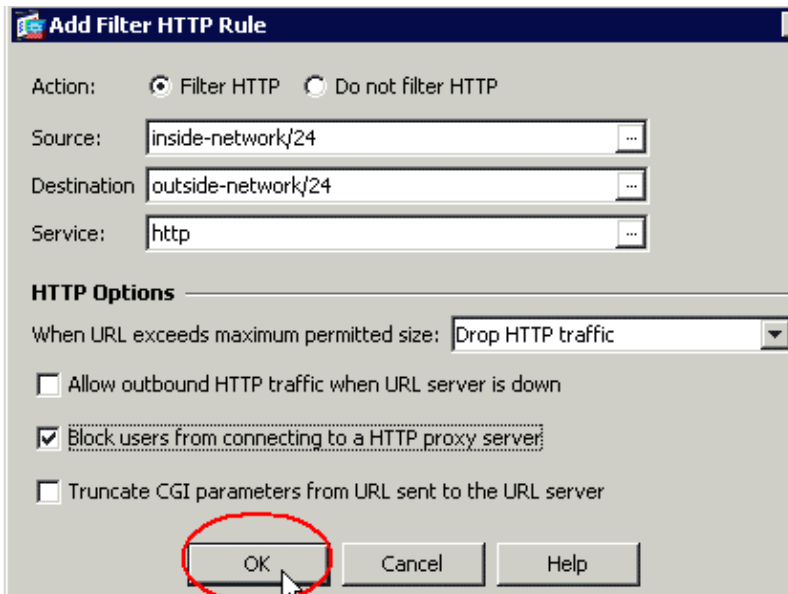

9. Once the appropriate parameters are configured, click **Apply** in order to submit the changes.

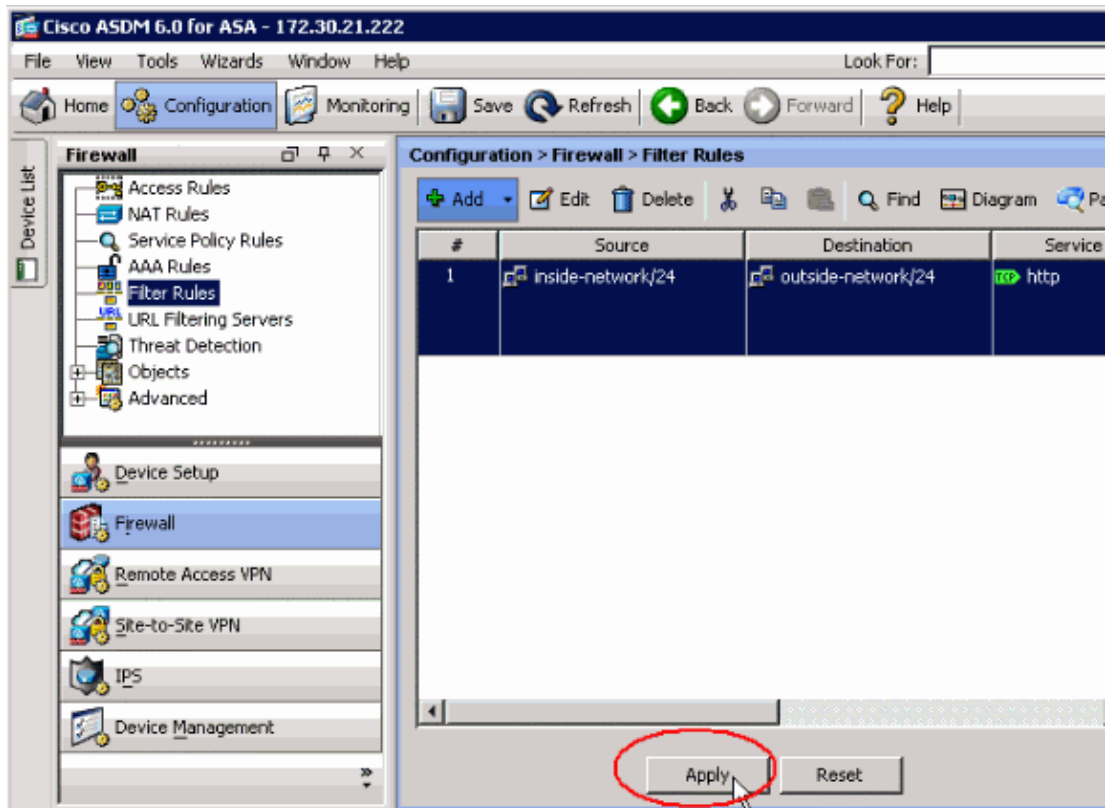

10. For advanced URL filtering options, choose **URL Filtering Servers** again from the **Firewall** drop down list, and click the **Advanced** button in the main window.

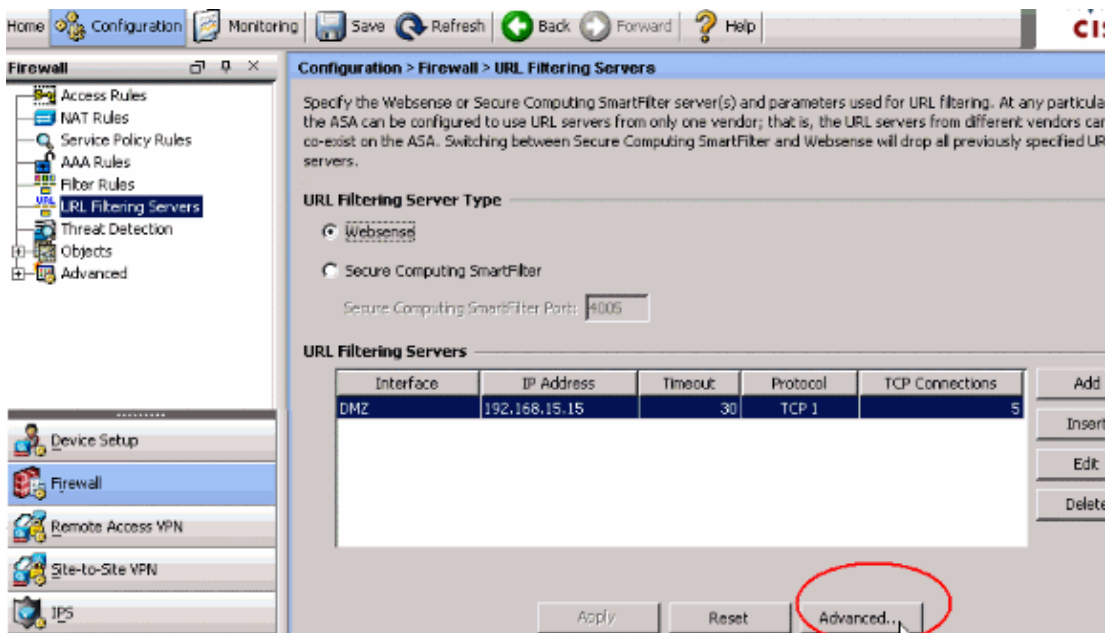

11. Configure the parameters, such as URL cache size, URL buffer size and Long URL support, in the popup window. Click **OK** in the popup window, and click **Apply** in the main window in order to continue.

**URL Cache Size**

Cache the URL access privileges in the memory of the ASA.

Enable caching based on:       Destination address       Source/destination address

Cache size:  KB

---

**URL Buffer Size**

Buffer the response from the Web server in cases where the URL filter response from the URL server has not been received.

Enable buffering

Number of 1550-Byte Buffers:

---

**Long URL Support**

The ASA considers the URL as a long URL if it is equal to or greater than 1159 characters. If it exceeds the Maximum Long URL Size, by default it drops the packet. Configure the filter rule to change this default in the Access Rules tab.

Use Long URL

Maximum Long URL Size:  KB

Memory Allocated for Long URL:  KB

OK      Cancel      Help

12. Finally, make sure that you save the changes that you make before you terminate the ASDM session.

## Verify

Use the commands in this section in order to view URL filtering information. You can use these commands in order to verify your configuration.

The Output Interpreter Tool (registered customers only) (OIT) supports certain **show** commands. Use the OIT in order to view an analysis of **show** command output.

- **show url-server** Shows information about the filtering server

For example:

```
hostname#show url-server
url-server (DMZ) vendor n2h2 host 192.168.15.15 port 4444 timeout 45 protocol tcp co
```

In software version 7.2 and later, issue the **show running-config url-server** form of this command.

- **show url-server stats** Shows information and statistics about the filtering server

For software version 7.2, issue the **show running-config url-server statistics** form of this command.

In software version 8.0 and later, issue the **show url-server statistics** form of this command.

For example:

```
hostname#show url-server statistics

Global Statistics:
-----
URLs total/allowed/denied          13/3/10
URLs allowed by cache/server       0/3
```

```

URLs denied by cache/server      0/10
HTTPSS total/allowed/denied     138/137/1
HTTPSS allowed by cache/server   0/137
HTTPSS denied by cache/server    0/1
FTPs total/allowed/denied       0/0/0
FTPs allowed by cache/server     0/0
FTPs denied by cache/server      0/0
Requests dropped                 0
Server timeouts/retries         0/0
Processed rate average 60s/300s 0/0 requests/second
Denied rate average 60s/300s    0/0 requests/second
Dropped rate average 60s/300s   0/0 requests/second

```

Server Statistics:

```

-----
192.168.15.15                    UP
  Vendor                          websense
  Port                             15868
  Requests total/allowed/denied    151/140/11
  Server timeouts/retries          0/0
  Responses received                151
  Response time average 60s/300s   0/0

```

URL Packets Sent and Received Stats:

```

-----
Message          Sent      Received
STATUS_REQUEST   1609    1601
LOOKUP_REQUEST   1526    1526
LOG_REQUEST       0        NA

```

Errors:

```

-----
RFC noncompliant GET method      0
URL buffer update failure        0

```

- **show url-block** Shows the configuration of the URL block buffer

For example:

```

hostname#show url-block
url-block url-mempool 128
url-block url-size 4
url-block block 128

```

In software version 7.2 and later, issue the **show running-config url-block** form of this command.

- **show url-block block statistics** Shows the URL block statistics

For example:

```

hostname#show url-block block statistics

URL Pending Packet Buffer Stats with max block 128
-----
Cumulative number of packets held:          896
Maximum number of packets held (per URL):    3
Current number of packets held (global):     38
Packets dropped due to
  exceeding url-block buffer limit:          7546
  HTTP server retransmission:                10
Number of packets released back to client:    0

```

For software version 7.2, issue the **show running-config url-block block statistics** form of this command.

- **show url-cache stats** Shows how the cache is used

For example:

```
hostname#show url-cache stats

URL Filter Cache Stats
-----
  Size :           128KB
  Entries :         1724
  In Use :           456
  Lookups :           45
  Hits :              8
```

In software version 8.0, issue the **show url-cache statistics** form of this command.

- **show perfmon** Shows URL filtering performance statistics, along with other performance statistics. The filtering statistics are shown in the URL Access and URL Server Req rows.

For example:

```
hostname#show perfmon

PERFMON STATS:      Current      Average
Xlates              0/s         0/s
Connections         0/s         2/s
TCP Conns           0/s         2/s
UDP Conns           0/s         0/s
URL Access         0/s        2/s
URL Server Req    0/s        3/s
TCP Fixup           0/s         0/s
TCPIntercept       0/s         0/s
HTTP Fixup          0/s         3/s
FTP Fixup           0/s         0/s
AAA Authen          0/s         0/s
AAA Author          0/s         0/s
AAA Account         0/s         0/s
```

- **show filter** Shows the filtering configuration

For example:

```
hostname#show filter

filter url http 192.168.5.5 255.255.255.255 172.30.21.99 255.255.255.255 allow proxy
```

In software version 7.2 and later, issue the **show running-config filter** form of this command.

## Troubleshoot

There is currently no specific troubleshooting information available for this configuration.

---

## Related Information

- [Cisco ASA 5500 Series Adaptive Security Appliances Product Support](#)
- [Cisco PIX 500 Series Security Appliances Product Support](#)
- [Cisco Adaptive Security Device Manager Product Support](#)
- [PIX/ASA: Establish and Troubleshoot Connectivity through the Cisco Security Appliance](#)
- [Troubleshoot Connections through the PIX and ASA](#)
- [Technical Support & Documentation – Cisco Systems](#)

---

[Contacts & Feedback](#) | [Help](#) | [Site Map](#)

© 2008 – 2009 Cisco Systems, Inc. All rights reserved. [Terms & Conditions](#) | [Privacy Statement](#) | [Cookie Policy](#) | [Trademarks of Cisco Systems, Inc.](#)

---

Updated: Oct 10, 2008

Document ID: 97277

---