

Access List-Based RBSCP

The Access List-Based Rate-Based Satellite Control Protocol (RBSCP) feature allows you to selectively apply the TCP ACK splitting feature of RBSCP to any outgoing interface. The result is reduced effect of long latencies over a satellite link. Access List-Based RBSCP has no tunneling or queueing overhead that is associated with RBSCP tunnels. Additional benefits include more interoperability with other Cisco IOS features (such as TCP/IP header compresssion, DMVPN, and QoS) because the TCP and Stream Control Transmission Protocol (SCTP) packets are no longer encapsulated with an RBSCP/IP header. This feature works on process switched forwarding, fast switching, or Cisco Express Forwarding (CEF).

- Finding Feature Information, page 1
- Prerequisites for Access List-Based RBSCP, page 1
- Restrictions for Access List-Based RBSCP, page 2
- Information About Access List-Based RBSCP, page 2
- How to Configure Access List-Based RBSCP, page 4
- Configuration Examples for Access List-Based RBSCP, page 6
- Additional References, page 7
- Feature Information for Access List-Based RBSCP, page 9

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest caveats and feature information, see Bug Search Tool and the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the feature information table at the end of this module.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Prerequisites for Access List-Based RBSCP

This document assumes that you already understand how to configure an IP access list and have one configured.

Restrictions for Access List-Based RBSCP



Plan your network carefully so that no more than one Cisco IOS router in a given routing path has the Access List-Based RBSCP feature enabled. You do not want to recursively ACK split traffic.

- The Access List-Based RBSCP feature will process only IPv4 packets, not IPv6 packets.
- The feature will process only standalone TCP packets. Encapsulated (encrypted or tunneled) TCP packets will be left unprocessed.
- This feature is available only on non-distributed platforms.

Information About Access List-Based RBSCP

Benefits of Access List-Based RBSCP


The Access List-Based Rate-Based Satellite Control Protocol (RBSCP) feature provides the following benefits:

- It allows you to selectively apply the TCP ACK splitting feature of RBSCP to any outgoing interface.
 TCP ACK splitting is a benefit because it reduces the effect of long latencies characteristic of satellite links. Applying this feature selectively by using an access list is a benefit because you control which packets are subject to TCP ACK splitting.
- It has no tunneling or queueing overhead that is associated with RBSCP tunnels.
- It provides more interoperability with other Cisco IOS features (such as TCP/IP header compresssion, DMVPN, and QoS) because the TCP and Stream Control Transmission Protocol (SCTP) packets are no longer encapsulated with an RBSCP/IP header.
- This feature works on process switched forwarding, fast switching, or CEF.
- It preserves the internet end-to-end principle.

Rate-Based Satellite Control Protocol

Rate-Based Satellite Control Protocol (RBSCP) was designed for wireless or long-distance delay links with high error rates, such as satellite links. RBSCP can improve the performance of certain IP protocols, such as TCP and IP Security (IPsec), over satellite links without breaking the end-to-end model. For instructions on how to implement RBSCP over a tunnel, see the "Implementing Tunnels" chapter of the *Interface and Hardware Component Configuration Guide*.


The TCP ACK splitting capability of RBSCP can be implemented without a tunnel, by using an IP access list, as shown in the figure below. The TCP ACK splitting occurs at the outgoing interface between the router and the internal network or Internet. It does not occur over the link to the satellite.

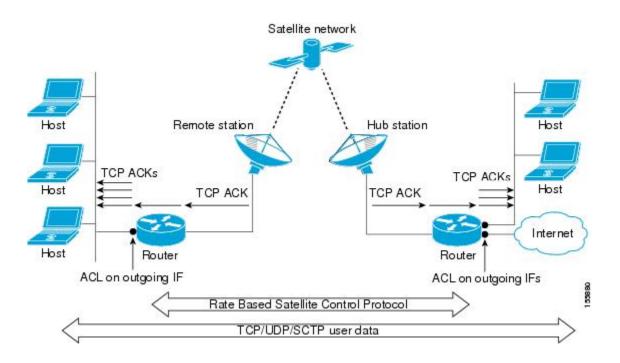

TCP ACK Splitting

TCP ACK splitting is a software technique to improve performance for clear-text TCP traffic using acknowledgment (ACK) splitting, in which a number of additional TCP ACKs are generated for each TCP ACK received. TCP ACK splitting causes TCP to open the congestion window more quickly than usual, thus decreasing the effect of long latencies. TCP will generally open the congestion window by one maximum transmission unit (MTU) for each TCP ACK received. Opening the congestion window results in increased bandwidth becoming available. Configure this feature only when the satellite link is not using all the available bandwidth. Encrypted traffic cannot use TCP ACK splitting.

The *size* argument in the **ip rbscp ack-split**command determines how many TCP ACKs are generated from the incoming TCP ACK, as shown in the figure below.

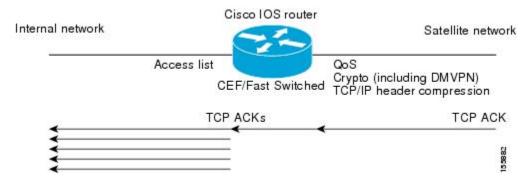

If n ACKs are configured and M is the cumulative ACK point of the original TCP ACK, the resulting TCP ACKs exiting the router will have the following cumulative ACK points:

M-n+1, M-n+2, M-n+3,...M

For example, if the *size* argument is set to 5, and the access list permits a TCP ACK with a cumulative ACK acknowledging bytes to 1000, then the resulting TCP ACKs exiting the router will have the following cumulative ACK points:

TCP ACK (996) (1000-5+1)

TCP ACK (997) (1000-5+2)

TCP ACK (998) (1000-5+3)

TCP ACK (999) (1000-5+4)

TCP ACK (1000) (1000-5+5)

Access List-Based RBSCP Functionality

The Access List-Based RBSCP feature will accept a numbered or named, standard or extended IP access list. The access list controls which packets are subject to TCP ACK splitting. That is, the feature is applied to packets that a **permit** statement allows; the feature is not applied to packets that a **deny** statement filters.

An instance of this feature consists of an access list and an ACK split value. An ACK split value of 0 or 1 indicates that this feature is disabled (that is, no ACK split will be done). The ACK split value range is 0 through 32.

An interface can use only one instance of this feature at a time. Each instance of this feature can be used on multiple interfaces.

If you configure this feature but it refers to a nonexistent access list, this is interpreted as having an access list that denies all traffic from being processed by the access list-based RBSCP feature, so the feature is essentially disabled and the traffic goes through the normal switching path.

If both an RBSCP tunnel and an instance of the Access List-Based RBSCP feature are enabled along a routing or switching path, the TCP ACKs detunneled from the RBSCP tunnel will be ACK split according to the tunnel configuration and the Access List-Based RBSCP split parameters on the outgoing interface are effectively disabled.

How to Configure Access List-Based RBSCP

Use RBSCP Selectively by Applying an Access List

This task illustrates how to apply the feature to an interface, and presumes that an access list is already configured. Perform this task by applying the access list on the router interface that is facing the internal network, not the satellite network.



Tip

The feature will try to process all the TCP flows as filtered by the access list. Try to make the access list applied to RBSCP as precise as possible to avoid unnecessary processing.



Caution

Plan your network carefully so that no more than one Cisco IOS router in a given routing path has this feature enabled. You do not want to recursively ACK split traffic.

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- **3. interface** *type number*
- **4. ip rbscp ack-split** *size* {access-list-name | access-list-number} **out**
- **5.** Although it is not required, you should repeat this task on the router that is on the other side of the satellite, on the outgoing interface facing the network, not the satellite. Use a different access list.

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Router# configure terminal	
Step 3	interface type number	Specifies an interface.
	Example:	 Specify an interface that is facing your internal network, opposite the satellite network.
	Router(config)# interface ethernet 1	
Step 4	ip rbscp ack-split size {access-list-name access-list-number} out	Configures RBSCP on the outgoing interface for packets that are permitted by the specified access list.
	<pre>Example: Router(config-if) # ip rbscp ack-split 6 101 out</pre>	• The ACK split <i>size</i> determines the number of ACKs to send for every ACK received. An ACK split value of 0 or 1 indicates that this feature is disabled (that is, no ACK split will be done). The range is 0 through 32. See "TCP ACK Splitting".
		• In this example, access list 101 determines which packets are subject to TCP ACK splitting.
Step 5	Although it is not required, you should repeat this task on the router that is on the other side of the satellite, on the outgoing interface facing the network, not the satellite. Use a different access list.	

Configuration Examples for Access List-Based RBSCP

Example Access List-Based RBSCP

In the following example, access list 101 performs TCP ACK splitting on packets going out FastEthernet interface 1/1 from a source at 1.1.1.1 to a destination at 3.3.3.1:

```
version 12.4
no service pad
service timestamps debug datetime msec
service timestamps log datetime msec
no service password-encryption
hostname IOSACL-72b
boot-start-marker
boot-end-marker
enable password lab
no aaa new-model
resource policy
ip cef
interface Ethernet0/0
no ip address
shut.down
duplex auto
no cdp enable
interface GigabitEthernet0/0
no ip address
 shutdown
duplex full
speed 1000
media-type qbic
negotiation auto
no cdp enable
interface FastEthernet1/0
 ip address 1.1.1.2 255.255.255.0
duplex half
no cdp enable
interface FastEthernet1/1
ip address 2.2.2.2 255.255.255.0
 ip rbscp ack-split 4 101 out
duplex half
no cdp enable
interface FastEthernet2/0
no ip address
 shutdown
duplex half
no cdp enable
interface Serial3/0
no ip address
 shutdown
serial restart-delay 0
interface Serial3/1
```

```
no ip address
 shutdown
 serial restart-delay 0
 no cdp enable
interface Serial3/2
 no ip address
 shutdown
 serial restart-delay 0
 no cdp enable
interface Serial3/3
 no ip address
 shutdown
 serial restart-delay 0
 no cdp enable
interface FastEthernet4/0
 no ip address
 shutdown
 duplex auto
 speed auto
 no cdp enable
interface FastEthernet4/1
 no ip address
 shutdown
 duplex auto
 speed auto
 no cdp enable
router eigrp 100 network 1.0.0.0
 network 2.0.0.0
 auto-summary
no ip http server
no ip http secure-server
logging alarm informational
access-list 101 permit tcp host 1.1.1.1 host 3.3.3.1 dialer-list 1 protocol ip permit
control-plane
gatekeeper
 shutdown
line con 0
 exec-timeout 0 0
 stopbits 1
line aux 0
 stopbits 1
line vty 0 4
 login
end
```

Additional References

Related Documents

Related Topic	Document Title
Cisco IOS commands	Cisco IOS Master Commands List, All Releases

Related Topic	Document Title
IP access list commands: complete command syntax, command mode, command history, defaults, usage guidelines, and examples	Cisco IOS Security Command Reference
RBSCP commands: complete command syntax, command mode, command history, defaults, usage guidelines, and examples	Cisco IOS Interface and Hardware Component Command Reference
Configuring Rate-Based Satellite Control Protocol (RBSCP)	"Implementing Tunnels" chapter in the Cisco IOS Interface and Hardware Component Configuration Guide

Standards

Standard	Title
None	

MIBs

MIB	MIBs Link
None	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL: http://www.cisco.com/go/mibs

RFCs

RFC	Title
None	

Technical Assistance

Description	Link
The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.	http://www.cisco.com/cisco/web/support/index.html

Feature Information for Access List-Based RBSCP

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Table 1: Feature Information for Access List-Based RBSCP

Feature Name	Releases	Feature Information
Access List-Based RBSCP	12.4(9)T	The Access List-Based Rate-Based Satellite Control Protocol feature allows you to selectively apply the TCP ACK splitting sub-feature of RBSCP to any outgoing interface. This feature has no tunneling or queueing overhead that is associated with RBSCP tunnels. The following commands are introduced or modified by this feature: debug ip rbscp, debug ip rbscp ack-split, ip rbscp ack-split.

Feature Information for Access List-Based RBSCP