



User Identity Policies

The following topics discuss how to create and manage identity rules and identity policies:

- [About Identity Policies, on page 1](#)
- [License Requirements for Identity Policies, on page 2](#)
- [Requirements and Prerequisites for Identity Policies, on page 2](#)
- [Create an Identity Policy, on page 3](#)
- [Identity Rule Conditions, on page 5](#)
- [Create an Identity Rule, on page 11](#)
- [Sample Identity Policies and Rules, on page 13](#)
- [Manage an Identity Policy, on page 20](#)
- [Manage an Identity Rule, on page 21](#)
- [Troubleshoot User Control, on page 21](#)

About Identity Policies

Identity policies contain identity rules. Identity rules associate sets of traffic with a realm and an authentication method: passive authentication, active authentication, or no authentication.

With the exception noted in the following paragraphs, you must configure realms and authentication methods you plan to use before you can invoke them in your identity rules:

- You configure realms outside of your identity policy, at **System > Integration > Realms**. For more information, see [Create an LDAP Realm or an Active Directory Realm and Realm Directory](#).
- You configure ISE/ISE-PIC, a passive authentication identity source, at **System > Integration > Identity Sources**.
- You configure the TS Agent, a passive authentication identity source, outside the system. For more information, see the *Cisco Terminal Services (TS) Agent Guide*.
- You configure captive portal, an active authentication identity source, within the identity policy. For more information, see [How to Configure the Captive Portal for User Control](#).
- You configure Remote Access VPN, an active authentication identity source, in Remote Access VPN policies. For more information, see [Remote Access VPN Authentication](#).

After you add multiple identity rules to a single identity policy, order the rules. The system matches traffic to rules in top-down order by ascending rule number. The first rule that traffic matches is the rule that handles the traffic.

You can also filter traffic by network object, which limits the network each device monitors in the event your devices are at or near their memory limits.

After you configure one or more identity policies, you must associate one identity policy with your access control policy. When traffic on your network matches the conditions in your identity rule, the system associates the traffic with the specified realm and authenticates the users in the traffic using the specified identity source.

If you do not configure an identity policy, the system does not perform user authentication.

Exception to creating an identity policy

An identity policy is not required if all of the following are true:

- You use the ISE/ISE-PIC identity source.
- You do not use users or groups in access control policies.
- You use Security Group Tags (SGT) in access control policies. For more information, see [ISE SGT vs Custom SGT Rule Conditions](#).

Related Topics

[How to Set Up an Identity Policy](#)

License Requirements for Identity Policies

Threat Defense License

Any

Classic License

Control

Requirements and Prerequisites for Identity Policies

Model Support

Any.

Supported Domains

Any

User Roles

- Admin
- Access Admin

- Network Admin

Create an Identity Policy

This task discusses how to create an identity policy.

Before you begin

An identity policy is required to use users and groups in a realm in access control policies. Create and enable one or more realms as described in [Create an LDAP Realm or an Active Directory Realm and Realm Directory](#).

(Optional.) If a particular managed device monitors a large number of user groups, the system might drop user mappings based on groups due to managed device memory limitations. As a result, rules with realm or user conditions might not perform as expected. Provided the devices run version 6.7 or later, you can configure the identity rule to monitor traffic by one network or network group object only. To create a network object, see [Creating Network Objects](#).

An identity policy is not required if all of the following are true:

- You use the ISE/ISE-PIC identity source.
- You do not use users or groups in access control policies.
- You use Security Group Tags (SGT) in access control policies. For more information, see [ISE SGT vs Custom SGT Rule Conditions](#).

Procedure

- Step 1** Log in to the management center.
 - Step 2** Click **Policies > Access Control > Identity** and click **New Policy**.
 - Step 3** Enter a **Name** and, optionally, a **Description**.
 - Step 4** Click **Save**.
 - Step 5** To add a rule to the policy, click **Add Rule** as described in [Create an Identity Rule, on page 11](#).
 - Step 6** To create a rule category, click **Add Category**.
 - Step 7** To configure captive portal active authentication, click **Active Authentication** and see [Configure the Captive Portal Part 2: Create an Identity Policy and Active Authentication Rule](#).
 - Step 8** (Optional.) To filter traffic by network object, click the **Identity Source** tab. From the list, click the network object to use to filter traffic for this identity policy. Click **Add (+)** to create a new network object.
 - Step 9** Click **Save** to save the identity policy.
-

What to do next

- Add rules to your identity policy that specify which users to match and other options; see [Create an Identity Rule, on page 11](#).
- Associate the identity policy with an access control policy to allow or block selected users from accessing specified resources; see [Associating Other Policies with Access Control](#).

- (Not required for Microsoft Azure AD realms.) Deploy configuration changes to managed devices; see [Deploy Configuration Changes](#).

If you encounter issues, see [Troubleshoot User Control](#), on page 21.

Related Topics

[Configure the Captive Portal Part 2: Create an Identity Policy and Active Authentication Rule](#)

[Create an Identity Mapping Filter](#), on page 4

[Captive Portal Fields](#)

[Troubleshoot User Control](#), on page 21

Create an Identity Mapping Filter

An identity mapping filter can be used to limit the networks to which an identity rule applies. For example, if your management center manages FTDs that have a limited amount of memory, you can limit the networks they monitor.

You can also optionally exclude subnets from receiving user-to-IP and Security Group Tag (SGT)-to-IP mappings from ISE. You should typically do this for lower-memory managed devices to prevent Snort identity health monitor memory errors.

Before you begin

Perform the following tasks:

1. Create a realm, which is required for an identity policy. See [Create an LDAP Realm or an Active Directory Realm and Realm Directory](#).
2. Create an identity policy. See [Create an Identity Policy](#), on page 3.
3. Create a network object or network group object as discussed in [Creating Network Objects](#). The network object or group you create should define the network you want managed devices to monitor in identity policies.

Procedure

-
- Step 1** Log in to the management center.
- Step 2** Click **Policies > Identity**.
- Step 3** Click **Edit** (✎).
- Step 4** Click the **Identity Source** tab.
- Step 5** From the **Identity Mapping Filter** list, choose the name of a network object to use as a filter .

To create a new network object, see [Creating Network Objects](#).

Note To restrict traffic to IPv6 addresses, you must add at least one address, network, or group to the filter.

- Step 6** Click **Save**.

- Step 7** (Not required for Microsoft Azure AD realms.) Deploy configuration changes to managed devices; see [Deploy Configuration Changes](#).
-

What to do next

(Not required for Microsoft Azure AD realms.) Associate the identity policy with an access control policy as discussed in [Associating Other Policies with Access Control](#).

To check or change ISE identity mapping filters (also referred to as *subnet filters*), use the following commands:

```
show identity-subnet-filter
configure identity-subnet-filter { add | remove } subnet
```

Identity Rule Conditions

Rule conditions enable you to fine-tune your identity policy to target the users and networks you want to control. See one of the following sections for more information.

Related Topics

[Security Zone Rule Conditions](#)

[Network Rule Conditions](#)

[VLAN Tags Rule Conditions](#)

[Port Rule Conditions](#)

[Realm & Settings Rule Conditions](#), on page 9

Security Zone Rule Conditions

Security zones segment your network to help you manage and classify traffic flow by grouping interfaces across multiple devices.

Zone rule conditions control traffic by its source and destination security zones. If you add both source and destination zones to a zone condition, matching traffic must originate from an interface in one of the source zones and leave through an interface in one of the destination zones.

Just as all interfaces in a zone must be of the same type (all inline, passive, switched, or routed), all zones used in a zone condition must be of the same type. Because devices deployed passively do not transmit traffic, you cannot use a zone with passive interfaces as a destination zone.

Leave matching criteria empty whenever possible, especially those for security zones, network objects, and port objects. When you specify multiple criteria, the system must match against every combination of the contents of the criteria you specify.



Tip Constraining rules by zone is one of the best ways to improve system performance. If a rule does not apply to traffic through any of device's interfaces, that rule does not affect that device's performance.

Security Zone Conditions and Multitenancy

In a multidomain deployment, a zone created in an ancestor domain can contain interfaces that reside on devices in different domains. When you configure a zone condition in a descendant domain, your configurations apply to only the interfaces you can see.

Network Rule Conditions

Network rule conditions control traffic by its source and destination IP address, using inner headers. Tunnel rules, which use outer headers, have tunnel endpoint conditions instead of network conditions.

You can use predefined objects to build network conditions, or manually specify individual IP addresses or address blocks.



Note You *cannot* use FQDN network objects in identity rules.

Leave matching criteria empty whenever possible, especially those for security zones, network objects, and port objects. When you specify multiple criteria, the system must match against every combination of the contents of the criteria you specify.

Redirect to Host Name Network Rule Conditions

(Snort 3.0 only.)—You can use a network object that contains the fully-qualified host name (FQDN) of the interface that captive portal can use for active authentication requests.

The FQDN must resolve to the IP address of one of the interfaces on a managed device. By using an FQDN, you can assign a certificate for active authentication that the client will recognize, thus avoiding the untrusted certificate warning users get when being redirected to a managed device's IP address.

The certificate can specify one FQDN, a wildcard FQDN, or multiple FQDNs in the Subject Alternate Names (SAN) in the certificate.

If an identity rule requires active authentication for a user, but you do not specify a redirect FQDN, the user is redirected to the captive portal port on the managed device interface to which they are connected.

If you do not supply a Redirect to Host Name FQDN, the HTTP Basic, HTTP Response Page, and NTLM authentication methods redirect the user to the captive portal using the IP address of the interface. However, for HTTP Negotiate, the user is redirected using the fully-qualified DNS name *firewall-hostname.directory-server-domain-name*. To use HTTP Negotiate without a Redirect to Host Name FQDN, you must also update your DNS server to map this name to the IP addresses of all inside interfaces where you are requiring active authentication. Otherwise, the redirection cannot complete, and users cannot authenticate.

We recommend that you always provide a Redirect to Host Name FQDN to ensure consistent behavior regardless of authentication method.

VLAN Tags Rule Conditions



Note VLAN tags in access rules only apply to inline sets. Access rules with VLAN tags do not match traffic on firewall interfaces.

VLAN rule conditions control VLAN-tagged traffic, including Q-in-Q (stacked VLAN) traffic. The system uses the innermost VLAN tag to filter VLAN traffic, with the exception of the prefilter policy, which uses the outermost VLAN tag in its rules.

Note the following Q-in-Q support:

- Threat Defense on Firepower 4100/9300—Does not support Q-in-Q (supports only one VLAN tag).
- Threat Defense on all other models:
 - Inline sets and passive interfaces—Supports Q-in-Q, up to 2 VLAN tags.
 - Firewall interfaces—Does not support Q-in-Q (supports only one VLAN tag).

You can use predefined objects to build VLAN conditions, or manually enter any VLAN tag from 1 to 4094. Use a hyphen to specify a range of VLAN tags.

In a cluster, if you encounter problems with VLAN matching, edit the access control policy advanced options, Transport/Network Preprocessor Settings, and select the **Ignore the VLAN header when tracking connections** option.



Note The system builds a separate network map for each leaf domain. In a multidomain deployment, using literal VLAN tags to constrain this configuration can have unexpected results. Using override-enabled objects allows descendant domain administrators to tailor Global configurations to their local environments.

Port Rule Conditions

Port conditions allow you to control traffic by its source and destination ports.

Leave matching criteria empty whenever possible, especially those for security zones, network objects, and port objects. When you specify multiple criteria, the system must match against every combination of the contents of the criteria you specify.

Best Practices for Port-Based Rules

Specifying ports is the traditional way to target applications. However, applications can be configured to use unique ports to bypass access control blocks. Thus, whenever possible, use application filtering criteria rather than port criteria to target traffic.

Application filtering is also recommended for applications, like threat defense, that open separate channels dynamically for control vs. data flow. Using port-based access control rules can prevent these kinds of applications from performing correctly, and could result in blocking desirable connections.

Using Source and Destination Port Constraints

If you add both source and destination port constraints, you can only add ports that share a single transport protocol (TCP or UDP). For example, if you add DNS over TCP as a source port, you can add Yahoo Messenger Voice Chat (TCP) as a destination port but not Yahoo Messenger Voice Chat (UDP).

If you add only source ports or only destination ports, you can add ports that use different transport protocols. For example, you can add both DNS over TCP and DNS over UDP as source port conditions in a single access control rule.

Port, Protocol, and ICMP Code Rule Conditions

Port conditions match traffic based on the source and destination ports. Depending on the rule type, “port” can represent any of the following:

- TCP and UDP—You can control TCP and UDP traffic based on the port. The system represents this configuration using the protocol number in parentheses, plus an optional associated port or port range. For example: TCP(6)/22.
- ICMP—You can control ICMP and ICMPv6 (IPv6-ICMP) traffic based on its internet layer protocol plus an optional type and code. For example: ICMP(1):3:3.
- Protocol—You can control traffic using other protocols that do not use ports.

Leave matching criteria empty whenever possible, especially those for security zones, network objects, and port objects. When you specify multiple criteria, the system must match against every combination of the contents of the criteria you specify.

Best Practices for Port-Based Rules

Specifying ports is the traditional way to target applications. However, applications can be configured to use unique ports to bypass access control blocks. Thus, whenever possible, use application filtering criteria rather than port criteria to target traffic. Note that application filtering is not available in prefilter rules.

Application filtering is also recommended for applications, like FTP, that open separate channels dynamically for control vs. data flow. Using port-based access control rules can prevent these kinds of applications from performing correctly, and could result in blocking desirable connections.

Using Source and Destination Port Constraints

If you add both source and destination port constraints, you can only add ports that share a single transport protocol (TCP or UDP). For example, if you add DNS over TCP as a source port, you can add Yahoo Messenger Voice Chat (TCP) as a destination port but not Yahoo Messenger Voice Chat (UDP).

If you add only source ports or only destination ports, you can add ports that use different transport protocols. For example, you can add both DNS over TCP and DNS over UDP as destination port conditions in a single access control rule.

Matching Non-TCP Traffic with Port Conditions

You can match non-port-based protocols. By default, if you do not specify a port condition, you are matching IP traffic. Although you can configure port conditions to match non-TCP traffic, there are some restrictions:

- Access control rules—For Classic devices, you can match GRE-encapsulated traffic with an access control rule by using the GRE (47) protocol as a destination port condition. To a GRE-constrained rule, you can add only network-based conditions: zone, IP address, port, and VLAN tag. Also, the system

uses outer headers to match **all** traffic in access control policies with GRE-constrained rules. For threat defense devices, use tunnel rules in the prefilter policy to control GRE-encapsulated traffic.

- Decryption rules—These rules support TCP port conditions only.
- ICMP echo—A destination ICMP port with the type set to 0 or a destination ICMPv6 port with the type set to 129 only matches unsolicited echo replies. ICMP echo replies sent in response to ICMP echo requests are ignored. For a rule to match on any ICMP echo, use ICMP type 8 or ICMPv6 type 128.

Realm & Settings Rule Conditions

The **Realm & Settings** tab page enables you to choose a realm or realm sequence to which to apply the identity rule. If you are using captive portal, you have additional options.

Authentication Realm

From the **Realm** list, click a realm or realm sequence.

The realm or realm sequence containing the users you want to perform the specified **Action** on. You must fully configure a realm or realm sequence before selecting it as the realm in an identity rule.



Note If remote access VPN is enabled and your deployment is using a RADIUS server group for VPN authentication, make sure you specify the realm associated with this RADIUS server group.

Active authentication only: other options

If you either choose **Active Authentication** as the authentication type or if you check the box, **Use active authentication if passive or VPN identity cannot be established**, you have the following options.

Use active authentication if passive or VPN identity cannot be established

(Passive authentication rule only.) Selecting this option authenticates users using captive portal active authentication if a passive or a VPN authentication fails to identify them. You must configure an Active Authentication rule in your identity policy in order to select this option. (That is, users must authenticate using the captive portal.)

If you disable this option, users that do not have a VPN identity or that passive authentication cannot identify are identified as Unknown.

Also see the discussion of the **Authentication Realm** list later in this topic,

Identify as Special Identities/Guest if authentication cannot identify user

Selecting this option allows users who fail captive portal active authentication the specified number of times to access your network as a guest. These users appear in the management center identified by their username (if their username exists on the AD or LDAP server) or by **Guest** (if their user name is unknown). Their realm is the realm specified in the identity rule. (By default, the number of failed logins is 3.)

This field is displayed only if you configure **Active Authentication** (that is, captive portal authentication) as the rule **Action**.

Authentication Protocol

The method to use to perform captive portal active authentication. An example of what users see when logging in with a response page is shown in [Create a Sample Identity Policy with an Active Authentication Rule](#), on page 16.

The selections vary depending on the type of realm, LDAP or AD:

- Choose **HTTP Basic** if you want to authenticate users using an unencrypted HTTP Basic Authentication (BA) connection. Users log in to the network using their browser's default authentication pop-up window.

Most web browsers cache the credentials from **HTTP Basic** logins and use the credentials to seamlessly begin a new session after an old session times out.

- Choose **NTLM** to authenticate users using a NT LAN Manager (NTLM) connection. This selection is available only when you select an AD realm. If transparent authentication is configured in a user's browser, the user is automatically logged in. If transparent authentication is not configured, users log in to the network using their browser's default authentication pop-up window.
- Choose **Kerberos** to authenticate users using a Kerberos connection. This selection is available only when you select an AD realm for a server with secure LDAP (LDAPS) enabled. If transparent authentication is configured in a user's browser, the user is automatically logged in. If transparent authentication is not configured, users log in to the network using their browser's default authentication pop-up window.



Note The **Realm** you select must be configured with an **AD Join Username** and **AD Join Password** to perform Kerberos captive portal active authentication.



Note If you are creating an identity rule to perform Kerberos captive portal and you have DNS resolution configured, you must configure your DNS server to resolve the fully qualified domain name (FQDN) of the captive portal device. The FQDN must match the host name you provided when configuring DNS.

For threat defense devices, the FQDN must resolve to the IP address of the routed interface used for captive portal.

- Choose **HTTP Negotiate** to allow the captive portal server to choose between HTTP Basic, Kerberos, or NTLM for the authentication connection. This type is available only when you select an AD realm.



Note The **Realm** you choose must be configured with an **AD Join Username** and **AD Join Password** for **HTTP Negotiate** to choose Kerberos captive portal active authentication.



Note If you are creating an identity rule to perform **HTTP Negotiate** captive portal and you have DNS resolution configured, you must configure your DNS server to resolve the fully qualified domain name (FQDN) of the captive portal device. The FQDN of the device you are using for captive portal must match the hostname you provided when configuring DNS.

- Choose **HTTP Response Page** to enable users to choose a realm to log in to. You can optionally customize the response page; for example, to conform to company style standards.

Active Authentication Realm

(Passive authentication rule only.) If you clicked **Use active authentication if passive or VPN identity cannot be established**, you must click the name of a realm or realm sequence. The availability of a realm or realm sequence is determined by your choice for Authentication Protocol as follows:

- **HTTP Basic** or **HTTP Response Page** authentication protocol: You can choose either a realm or a realm sequence.
- **NTLM**, **Kerberos**, or **HTTP Negotiate** authentication protocol: You can choose a realm only. You *cannot* choose a realm sequence.

Create an Identity Rule

For details about configuration options for identity rules, see [Identity Rule Fields, on page 12](#).

Before you begin

You must create and enable a realm or realm sequence.

- Create a Microsoft Active Directory realm and realm directory as discussed in [Create an LDAP Realm or an Active Directory Realm and Realm Directory](#).
- (Microsoft AD realm only.) Download users and groups and enable the realm as discussed in [Synchronize Users and Groups](#).
- Create a Microsoft Azure Active Directory realm as discussed in [Create an Azure AD Realm](#).
- (Optional.) Create a realm sequence as discussed in [Create a Realm Sequence](#).



Caution Adding the first or removing the last active authentication rule when TLS/SSL decryption is disabled (that is, when the access control policy does not include a decryption policy) restarts the Snort process when you deploy configuration changes, temporarily interrupting traffic inspection. Whether traffic drops during this interruption or passes without further inspection depends on how the target device handles traffic. See [Snort Restart Traffic Behavior](#) for more information.

Note that an active authentication rule has either an **Active Authentication** rule action, or a **Passive Authentication** rule action with **Use active authentication if passive or VPN identity cannot be established** selected.

Procedure

- Step 1** Log in to the management center.
- Step 2** Click **Policies > Access Control > Identity** .
- Step 3** Click **Edit** (✎) next to the identity policy to which to add the identity rule.
- If **View** (👁) appears instead, the configuration belongs to an ancestor domain, or you do not have permission to modify the configuration.
- Step 4** Click **Add Rule**.
- Step 5** Enter a **Name**.
- Step 6** If the Specified rule is applicable, check the check box of **Enabled**.
- Step 7** To add the rule to an existing category, indicate where you want to **Insert** the rule. To add a new category, click **Add Category**.
- Step 8** Choose a rule **Action** from the list.
- Step 9** If you're configuring captive portal, see [How to Configure the Captive Portal for User Control](#).
- Step 10** (Optional) To add conditions to the identity rule, see [Identity Rule Conditions, on page 5](#).
- Step 11** Click **Add**.
- Step 12** In the policy editor, set the rule position. Click and drag or use the right-click menu to cut and paste. Rules are numbered starting at 1. The system matches traffic to rules in top-down order by ascending rule number. The first rule that traffic matches is the rule that handles that traffic. Proper rule order reduces the resources required to process network traffic and prevents rule preemption.
- Step 13** Click **Save**.
-

What to do next

- Deploy configuration changes; see [Deploy Configuration Changes](#).

Identity Rule Fields

Use the following fields to configure identity rules.

Enabled

Enabling this option enables the identity rule in the identity policy. Unselecting this option disables the identity rule.

Action

Specify the type of authentication you want to perform on the users in the specified realm: **Passive Authentication** (default), **Active Authentication**, or **No Authentication**. You must fully configure the authentication method, or *identity source*, before selecting it as the action in an identity rule.

Additionally, if VPN is enabled (configured on at least one managed device), remote access VPN sessions are actively authenticated by VPN. Other sessions use the rule action. This means that, if VPN is enabled, VPN identity determination is performed first for all sessions regardless of the selected action. If a VPN identity is found on the specified realm, this is the identity source used. No additional captive portal active authentication is done, even if selected.

If the VPN identity source is not found, the process continues according to the specified action. You cannot restrict the identity policy to VPN authentication only because if the VPN identity is not found, the rule is applied according to the selected action.

**Caution**

Adding the first or removing the last active authentication rule when TLS/SSL decryption is disabled (that is, when the access control policy does not include an SSL policy) restarts the Snort process when you deploy configuration changes, temporarily interrupting traffic inspection. Whether traffic drops during this interruption or passes without further inspection depends on how the target device handles traffic. See [Snort Restart Traffic Behavior](#) for more information.

Note that an active authentication rule has either an **Active Authentication** rule action, or a **Passive Authentication** rule action with **Use active authentication if passive or VPN identity cannot be established** selected.

For information about which passive and active authentication methods are supported in your version of the system, see [About User Identity Sources](#).

Sample Identity Policies and Rules

The following sections provide examples of configuring an identity policy with either a passive authentication rule or an active authentication rule. In addition, because you can authenticate users with active authentication using either realms or realm sequences, separate examples are provided.

Active authentication means the user authenticates using the captive portal; the user enters network credentials before being allowed to access allowed resources. (RA-VPN is another type of active authentication but it cannot be used together with captive portal authentication. For more information, see [The Remote Access VPN Identity Source](#).)

Passive authentication covers all other types. Passive authentication includes using Microsoft Active Directory realms, Microsoft Azure Active Directory realms, Cisco Identity Services Engine, and others.

You can use a Microsoft Azure Active Directory realm to authenticate users a different way that is not discussed here. For more information, see [Create a Microsoft Azure AD Realm](#).

Assumptions

The examples use the following assumptions:

- Microsoft Active Directory (AD) realm named forest.example.com with two child domains configured in a trust relationship:
 - US-West
 - US-East
- A realm sequence named US that includes both realms
- Passive authentication rule that authenticates users with a realm sequence
- Two active authentication rules:
 - One rule that authenticates users with a realm and uses the NTLM authentication protocol

- One rule that authenticates users with a realm sequence and uses the HTTP Response Page authentication protocol
- Each sample identity rule is associated with a different identity policy

Passive authentication identity rules

When you configure a Passive Authentication identity rule, you can choose to authenticate users either with LDAP, a Microsoft Active Directory realm, or a Microsoft AD realm sequence. You can use a realm to authenticate with any authentication type; realm sequence restricts the authentication types you can use. For an example, see [Create an Identity Policy with a Passive Authentication Rule, on page 14](#).

Active authentication identity rules

When you configure an Active Authentication identity rule, you can choose to authenticate users either with LDAP, a Microsoft Active Directory realm, or a Microsoft AD realm sequence. You can use a realm to authenticate with any authentication type; realm sequence restricts the authentication types you can use.

You can also authenticate users with a Microsoft Active Directory realm sequence except for the following authentication types:

- NTLM
- Kerberos
- HTTP Negotiate

For an example, see [Create a Sample Identity Policy with an Active Authentication Rule, on page 16](#).

Create an Identity Policy with a Passive Authentication Rule

This task discusses how to create an identity policy with a passive authentication rule that authenticates users using the US realm sequence. If a user is not found in the first realm in the sequence, the system searches the other realms in the sequence in the order listed in the realm sequence. If a user is still not found in the realm or realm sequence, the user is identified as Unknown.

You can optionally authenticate a user with the captive portal (that is, active authentication) if the user is not found in any realm in the sequence. For more information, see [Captive Portal Guidelines and Limitations](#).

Procedure

-
- Step 1** Log in to the management center.
 - Step 2** Click **Policies > Access Control > Identity**.
 - Step 3** Click **New Policy**.
 - Step 4** Enter a **Name** for the policy and an optional **Description**.
 - Step 5** Click **Save**.
 - Step 6** Click **Add Rule**.
 - Step 7** Enter a **Name** for the rule.
 - Step 8** From the list, click **Passive Authentication**.

Step 9

Click the **Realms & Settings** tab page.

Step 10

From the list, click the name of a realm or realm sequence.

The following figure shows an example.

The screenshot shows the 'Add Rule' configuration page. The 'Name' field is 'Passive rule', 'Enabled' is checked, and 'Insert' is set to 'into Category' with 'Standard Rules' selected. The 'Authentication Protocol' is 'HTTP Basic' and 'Exclude HTTP User-Agents' is 'None'. The 'Authentication Realm' dropdown is open, showing options: 'US-East (AD)', 'US-West (AD)', 'LDAP (LDAP)', and 'US (Sequence)'. A red asterisk indicates a required field. At the bottom right, there are 'Cancel' and 'Add' buttons.

- If you choose a realm (such as **US-East** in the example), the system searches that realm for users to match the rule. If a user is not found, the user is identified as Unknown.
- If you choose a realm sequence (**US (Sequence)** in the example), users are searched in every realm in the sequence in the order specified in the sequence. If the user is not found, the user is identified as Unknown.
- You can also choose an LDAP realm.
- For additional ways to authenticate the user, check **Use active authentication if passive or VPN identity cannot be established**. For more information, see [Captive Portal Guidelines and Limitations](#).

The following figure shows a sample passive identity policy configured to search for users in the US realm sequence.

Add Rule

Name: Enabled

Realm: US (Sequence) **Authentication Protocol:** HTTP Basic **Exclude HTTP User-Agents:** None

Zones Networks VLAN Tags Ports **Realm & Settings**

Authentication Realm *

Use active authentication if passive or VPN identity cannot be established

* Required Field

- Step 11** (Optional.) To filter traffic by network object, click the **Identity Source** tab. From the list, click the network object to use to filter traffic for this identity policy. Click **Add (+)** to create a new network object.
- Step 12** Set identity rule conditions as discussed in [Identity Rule Conditions, on page 5](#).
- Step 13** Associate the identity rule with an access control rule as discussed in [Associating Other Policies with Access Control](#).
- Step 14** Deploy configuration changes to managed devices; see [Deploy Configuration Changes](#).

Create a Sample Identity Policy with an Active Authentication Rule

The associated tasks show an examples of configuring an identity policy with an **Active Authentication** rule where authentication is performed using either a realm or a realm sequence.

The differences follow:

- *Realm* enables you to use any supported authentication type (currently, **HTTP Basic**, **NTPM**, **Kerberos**, **HTTP Negotiate**, or **HTTP Response Page**).
- *Realm sequence* limits you to only the **HTTP Basic** or **HTTP Response Page** authentication types.

Users who authenticate with a realm sequence and the HTTP Response Page authentication type see the following by default:

Login

Please enter your username and password or log in as a guest.

Username

Password realm: east.example.com

east.example.com


west.example.com

-or-

The user can authenticate in any of the following ways:

- If a list of realms in the realm sequence is displayed (as shown), the user must enter their user name and password in the provided fields and click the name of their realm from the list.
- If realms are not displayed in a list, the user can enter their credentials in `username@domain` format.

Users who authenticate with a realm and the HTTP Basic authentication page see the following:

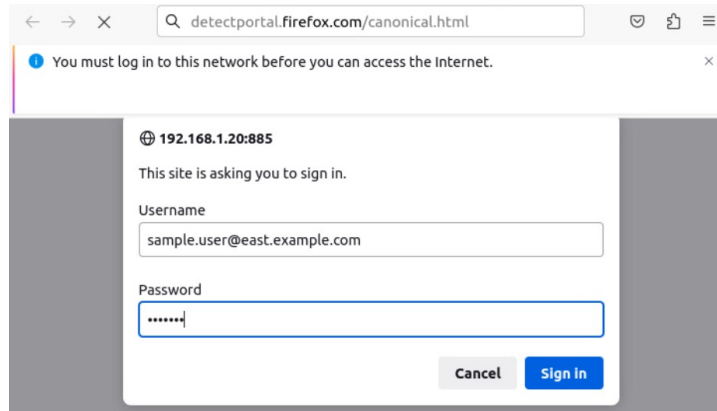

The user must enter their user name in `username@domain` format.

Procedure

-
- Step 1** Log in to the management center.
- Step 2** Click **Policies > Access Control > Identity** .
- Step 3** Click **New Policy**.
- Step 4** Enter a **Name** for the policy and an optional **Description**.
- Step 5** Click **Save**.
- Step 6** Click the **Active Authentication** tab.
- Step 7** Enter the following information:
- **Server Certificate:** From the list, click an internal certificate object to use for secure connection to the Threat Defense device, or click **Add (+)** to add one.
 - **Redirect to Host Name:** (Optional.) From the list, click a network object to which to redirect captive portal requests. If you omit this value, requests redirect to the IP address of the managed device. You can click **Add (+)** to create a new network object. For more information, see [Redirect to Host Name Network Rule Conditions, on page 6](#).
Managed devices must have Snort 3 enabled to use this option.
 - **Port:** Enter a port for the captive portal to use. This port must be unique for the captive portal and must match an access control rule you set up as discussed in [Configure the Captive Portal Part 3: Create a TCP Port Access Control Rule](#). (Default is 885.)
 - **Maximum login attempts:** Enter the maximum number of login attempts before login fails. (Default is 3.)

- **Share active authentication sessions across firewalls:** Uncheck to enable the management center to force users to reauthenticate every time they access your network using a different managed device than the last time.

For more information about this option, see [Captive Portal Fields](#).

- **Active Authentication Response Page:** Choose a system-provided or custom login page for captive portal users. For more information about your options, see [Captive Portal Fields](#).

- Step 8** Click **Save** to save your changes to the identity policy.
- Step 9** Click the **Rules** tab.
- Step 10** Click **Add Rule**.
- Step 11** Enter a **Name** for the rule.
- Step 12** From the list, click **Active Authentication**.
- Step 13** Click the **Realms & Settings** tab page and continue with one of the following sections.

What to do next

Continue with one of the following sections:

- [Active Authentication Using a Realm, on page 18](#)
- [Active Authentication Using a Realm Sequence, on page 19](#)

Active Authentication Using a Realm

This task discusses how to authenticate captive portal users with a realm and any available authentication protocol (currently, **HTTP Basic**, **NTLM**, **Kerberos**, **HTTP Negotiate**, or **HTTP Response Page**).

Before you begin

Complete the task discussed in [Create a Sample Identity Policy with an Active Authentication Rule, on page 16](#).

Procedure

- Step 1** Continue from [Create a Sample Identity Policy with an Active Authentication Rule, on page 16](#).
- Step 2** On the **Realms & Settings** tab page, click **US-East**.
- Step 3** From the **Authentication Protocol** list, click **NTLM**.

The following figure shows an example.

The screenshot shows the 'Add Rule' configuration window. At the top, there's a 'Name' field with 'Active' entered, an 'Enabled' checkbox that is checked, and an 'Insert' dropdown set to 'into Category'. To the right is a 'Standard Rules' dropdown. Below this is a 'Active Authentication' dropdown. Further down, it shows 'Realm: US-East (AD)', 'Authentication Protocol: NTLM', and 'Exclude HTTP User-Agents: None'. There are tabs for 'Zones', 'Networks', 'VLAN Tags', and 'Ports', with 'Realm & Settings' being the active tab. In the 'Authentication Realm' section, 'US-East (AD)' is selected. There is an unchecked checkbox for 'Identify as Special Identities/Guest if authentication cannot identify user'. The 'Authentication Protocol' is set to 'NTLM'. Below that is a section for 'HTTP User Agent Exclusions'. At the bottom right, there are 'Cancel' and 'Add' buttons. A '* Required Field' note is visible at the bottom left.

If you choose a realm (such as in the example), the system searches that realm for users to match the rule. If a user is not found, the user is identified as Unknown.

- Step 4** Click **Add**.
- Step 5** (Optional.) To filter traffic by network object, click the **Identity Source** tab. From the list, click the network object to use to filter traffic for this identity policy. Click **Add (+)** to create a new network object.
- Step 6** Set identity rule conditions as discussed in [Identity Rule Conditions, on page 5](#).
- Step 7** Associate the identity rule with an access control rule as discussed in [Associating Other Policies with Access Control](#).
- Step 8** Deploy configuration changes to managed devices; see [Deploy Configuration Changes](#).

Active Authentication Using a Realm Sequence

This task discusses how to authenticate captive portal users with a realm sequence, which restricts you to the **HTTP Basic** or **HTTP Response Page** authentication protocols.

Before you begin

Complete the task discussed in [Create a Sample Identity Policy with an Active Authentication Rule, on page 16](#).

Procedure

- Step 1** Continue from [Create a Sample Identity Policy with an Active Authentication Rule, on page 16](#).
- Step 2** On the **Realms & Settings** tab page, click the name of a realm from the list.
- Step 3** From the list, click **US-East**.
- Step 4** From the **Protocol** list, click **HTTP Response Page**.

The following figure shows an example.

The screenshot shows the 'Add Rule' configuration page. The 'Name' field is 'Active', 'Enabled' is checked, and 'Insert into Category' is set to 'Standard Rules'. The 'Authentication Protocol' is 'HTTP Response Page'. The 'Authentication Realm' is 'US (Sequence)'. There is a 'Required Field' indicator next to the 'Authentication Realm' dropdown. At the bottom right, there are 'Cancel' and 'Add' buttons.

If you choose a realm sequence (such as in the example), the system searches realms in the sequence in the order specified in the realm sequence. The first realm in the sequence can be referred to as the *default* realm; it's the realm that is used if the user does not change it. If a user is not found, the user is identified as Unknown.

(Only if you upgraded to version 7.4.1 from an earlier version.) Edit the HTTP response page so it shows the list of realms in the sequence as discussed in [Update a Custom Authentication Form](#).

- Step 5** Click **Add**.
- Step 6** (Optional.) To filter traffic by network object, click the **Identity Source** tab. From the list, click the network object to use to filter traffic for this identity policy. Click **Add** (+) to create a new network object.
- Step 7** Set identity rule conditions as discussed in [Identity Rule Conditions, on page 5](#).
- Step 8** Associate the identity rule with an access control rule as discussed in [Associating Other Policies with Access Control](#).
- Step 9** Deploy configuration changes to managed devices; see [Deploy Configuration Changes](#).

Manage an Identity Policy

In a multidomain deployment, the system displays policies created in the current domain, which you can edit. It also displays policies created in ancestor domains, which you cannot edit. To view and edit policies created in a lower domain, switch to that domain.

Procedure

- Step 1** Log in to the management center.
- Step 2** Click **Policies > Access Control > Identity**.
- Step 3** To delete a policy, click **Delete** (🗑). If the controls are dimmed, the configuration belongs to an ancestor domain, or you do not have permission to modify the configuration.

- Step 4** To edit a policy, click **Edit** (✎) next to the policy and make changes as described in [Create an Identity Policy, on page 3](#). If **View** (👁) appears instead, the configuration belongs to an ancestor domain, or you do not have permission to modify the configuration.
- Step 5** To copy a policy, click **Copy** (📄).
- Step 6** To generate a report for the policy, click **Report** (📄) as described in [Generate Current Policy Reports](#).
- Step 7** To compare policies, see [Compare Policies](#).
- Step 8** To create a folder in which to organize policies, click **Add Category**.
-

What to do next

Deploy configuration changes; see [Deploy Configuration Changes](#).

Manage an Identity Rule

Procedure

- Step 1** Log in to the management center.
- Step 2** Click **Policies > Access Control > Identity**.
- Step 3** Click **Edit** (✎) next to the policy you want to edit. If **View** (👁) appears instead, the configuration belongs to an ancestor domain, or you do not have permission to modify the configuration.
- Step 4** To edit an identity rule, click **Edit** (✎) and make changes as described in [Create an Identity Policy, on page 3](#).
- Step 5** To delete an identity rule, click **Delete** (🗑).
- Step 6** To create a rule category, click **Add Category** and choose the position and the rule.
- Step 7** Click **Save**.
-

What to do next

- Deploy configuration changes; see [Deploy Configuration Changes](#).

Troubleshoot User Control

If you notice unexpected user rule behavior, consider tuning your rule, identity source, or realm configurations. For other related troubleshooting information, see:

- [Troubleshoot the ISE/ISE-PIC or Cisco TrustSec Issues](#)
- [Troubleshoot the TS Agent Identity Source](#)
- [Troubleshoot the Captive Portal Identity Source](#)

- [Troubleshoot Realms and User Downloads](#)

Rules targeting realms, users, or user groups are not matching traffic

If you configure a TS Agent or ISE/ISE-PIC device to monitor a large number of user groups, or if you have a very large number of users mapped to hosts on your network, the system may drop user records due to your management center user limit. As a result, rules with user conditions may not match traffic as expected.

Rules targeting user groups or users within user groups are not matching traffic as expected

If you configure a rule with a user group condition, your LDAP or Active Directory server must have user groups configured. The system cannot perform user group control if the server organizes the users in basic object hierarchy.

Rules targeting users in secondary groups are not matching traffic as expected

If you configure a rule with a user group condition that includes or excludes users who are members of a secondary group on your Active Directory server, your server may be limiting the number of users it reports.

By default, Active Directory servers limit the number of users they report from secondary groups. You must customize this limit so that all of the users in your secondary groups are reported to the management center and eligible for use in rules with user conditions.

Rules are not matching users when seen for the first time

After the system detects activity from a previously-unseen user, the system retrieves information about them from the server. Until the system successfully retrieves this information, activity seen by this user is *not* handled by matching rules. Instead, the user session is handled by the next rule it matches (or the policy's default action, if applicable).

For example, this might explain when:

- Users who are members of user groups are not matching rules with user group conditions.
- Users who were reported by a TS Agent or ISE device are not matching rules, when the server used for user data retrieval is an Active Directory server.

Note that this might also cause the system to delay the display of user data in event views and analysis tools.

Rules are not matching all ISE/ISE-PIC users

This is expected behavior. You can perform user control on ISE/ISE-PIC users who were authenticated by an Active Directory domain controller. You cannot perform user control on ISE/ISE-PIC users who were authenticated by an LDAP, RADIUS, or RSA domain controller.

Users and groups using too much memory

If processing users and groups is using too much memory, health alerts are displayed. Remember that all user sessions are propagated to all devices managed by the management center. If your management center manages devices with different amounts of memory, the device with the least amount of memory determines the number of user sessions the system can handle without errors.

If issues persist, you have the following options:

- Segregate lower capacity managed devices on subnets and configure ISE/ISE-PIC to not report passive authentication data to those subnets.

See the chapter on managing network devices in the *Cisco Identity Services Engine Administrator Guide*.

- Unsubscribe from Security Group Tags (SGTs).

For more information, see [Configure ISE for User Control](#).

- Upgrade your managed device to a model with more memory.

