



Configuring QoS on VLANs

This chapter contains the following sections:

- [Information About VLAN QoS, on page 1](#)
- [Precedence of QoS Policies, on page 1](#)
- [Limiting TCAM Entries for VLAN QoS, on page 3](#)
- [Guidelines and Limitations for VLAN QoS, on page 4](#)
- [Configuring VLAN QoS, on page 5](#)
- [Verifying the VLAN QoS Configuration, on page 8](#)
- [Feature History for VLAN QoS, on page 8](#)

Information About VLAN QoS

On Cisco Nexus devices, you can configure quality of service (QoS) policies for classification and marking on VLANs. The policies that you apply to a VLAN are applied to the traffic on the VLAN's Layer 2 and switch virtual interface (SVI) ports.

Precedence of QoS Policies

The marking requirements in a QoS policy determine its precedence. Interface QoS policies take the highest precedence, the VLAN QoS policies are next, and the System QoS policies have the lowest precedence.

However, if a VLAN is assigned both a VLAN QoS policy and a VLAN ACL (VACL), the VACL takes the highest precedence.

Example of Interface, System, and VLAN Policy Precedence

This example shows a configuration where the traffic on interface 1/1 with CoS 5 goes to qos-group 3. Traffic on the other interfaces with VLAN 10 and CoS 5 go to qos-group 4. Traffic on interfaces other than VLAN 10 and CoS 5 go to qos-group 5.

```
class-map type qos match-all cml
  match cos 5
policy-map type qos pm-ifc
  class cml
    set qos-group 3
```

```

class class-default
policy-map type qos pm-vlan
class cml
  set qos-group 4
class class-default
policy-map type qos pm-sys
class cml
  set qos-group 5
class class-default

system qos
  service-policy type qos input pm-sys
vlan configuration 10
  service-policy type qos input pm-vlan
interface Ethernet1/1
  service-policy type qos input pm-ifc

```

Example of Interface and System QoS Policy Precedence

This example shows a configuration where the traffic on interface 1/1 with CoS 5 goes to qos-group 3. Traffic on the other interfaces with CoS 5 go to qos-group 5.

```

class-map type qos match-all cml
  match cos 5
policy-map type qos pm-ifc
class cml
  set qos-group 3
class class-default
policy-map type qos pm-sys
class cml
  set qos-group 5
class class-default

system qos
  service-policy type qos input pm-sys

interface Ethernet1/1
  service-policy type qos input pm-ifc

```

Example of System and VLAN Policy Precedence

This example shows a configuration where the traffic on VLAN 10 with CoS 5 goes to qos-group 4. Traffic on the other VLANs with CoS 5 go to qos-group 5.

```

class-map type qos match-all cml
  match cos 5
policy-map type qos pm-vlan
class cml
  set qos-group 4
class class-default
policy-map type qos pm-sys
class cml
  set qos-group 5
class class-default

system qos
  service-policy type qos input pm-sys
vlan configuration 10
  service-policy type qos input pm-vlan

```

Example of VLAN QoS and VACL Policy Precedence

In this example, the packets with source IP address 10.10.10.1 are dropped. However, the other packets with VLAN 10 and CoS 5 go to qos-group 4.

```
ip access-list all
 10 permit ip 10.10.10.1/24 any
vlan access-map v-am1
 match ip address all
 action drop
vlan filter v-am1 vlan-list 10


class-map type qos match-all cml
 match cos 5
policy-map type qos pm-vlan
 class cml
  set qos-group 4
 class class-default

vlan configuration 10
 service-policy type qos input pm-vlan
```

Limiting TCAM Entries for VLAN QoS

The QoS TCAM region is shared by the interface QoS, system QoS, and VLAN QoS policies. You need to limit the number of TCAM entries for the interface QoS policies in order to define VLAN QoS policies. Use the **hardware profile tcam feature interface-qos limit** *tcam-size* to configure this limit.

Figure 1: QoS TCAM Region

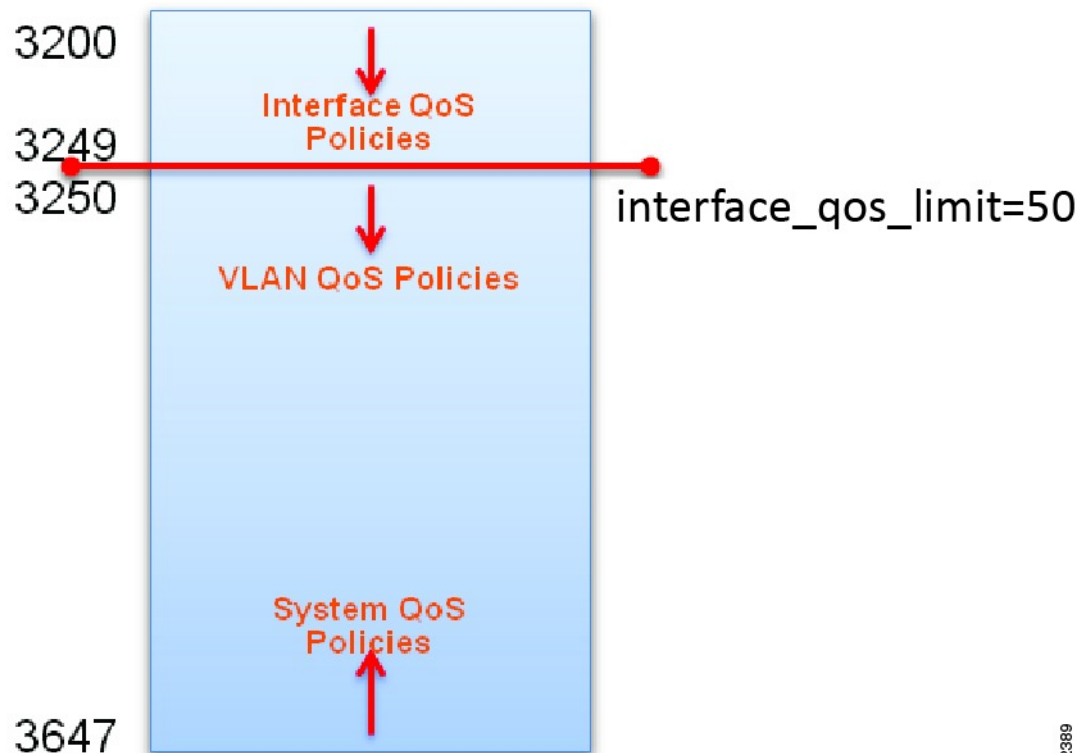

332389

Guidelines and Limitations for VLAN QoS

- A VLAN must have at least one active member port for a service policy to be configured on. If a VLAN does not have at least one active member, and you configure a service policy on it, the configuration is accepted; however, the TCAM is not programmed.
- If a VLAN is removed with the `no vlan number` command, the service policy that is configured on that VLAN is still present, but it is not active.
- The TCAM must have enough free entries to configure the service policy on the VLAN.
- A rollback might fail if the interface QoS limit is different in the running configuration than in the rollback configuration.
- If a VLAN with a QoS policy is configured on an interface with no QoS policy, the `show policy-map interface number` command does not display the QoS policy configured on the VLAN.
- Remove all interface QoS policies before changing the interface QoS limit.
- Acllogs can only support logging levels of 3 or later.
- We support only logging denials on the ACL, permits will not be logged.
- Only one log message will be displayed until the flow stops and the rest is displayed later.

Configuring VLAN QoS

Configuring or Changing the Interface QoS TCAM Limit

To configure the `interface_qos_limit` to a specific number, the QoS region of the TCAMs in all of the ASICs cannot have any interfaces policies configured beyond the offset of that number. For example, to configure the `interface_qos_limit` to 1000, the QoS regions of the TCAMs in all of the ASICs cannot have any interface policies configured beyond offset 1000.

Procedure

	Command or Action	Purpose
Step 1	<code>switch# configure terminal</code>	Enters global configuration mode.
Step 2	<code>switch(config)# hardware profile tcam feature interface-qos limit <i>tcam-size</i></code>	Configures the interface QoS TCAM limit. The <i>tcam-size</i> range is from 7 to 446 entries.
Step 3	<code>switch(config)# show hardware profile tcam feature qos</code>	Displays the limits of the QoS TCAMs.
Step 4	(Optional) <code>switch(config)# copy running-config startup-config</code>	Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

Example

This example shows how to set the interface QoS TCAM limit to 20 entries:

```
switch(config)# configure terminal
switch(config)# hardware profile tcam feature interface-qos limit 20
switch(config)# show hardware profile tcam feature qos
Feature                               Limit (number of tcam entries)
-----
interface-qos                          20
vlan-qos + global-qos                  428

switch(config)# copy running-config startup-config
```

Removing the Interface QoS Limit from the TCAM

Before you begin

- Remove all VLAN QoS policies.

Procedure

	Command or Action	Purpose
Step 1	switch# configure terminal	Enters global configuration mode.
Step 2	switch(config)# show hardware profile tcam feature qos	Displays the limits of the QoS TCAMs.
Step 3	switch(config)# no hardware profile tcam feature interface-qos limit <i>tcam-size</i>	Configures the interface QoS TCAM limit. The <i>tcam-size</i> range is from 7 to 446 entries.
Step 4	(Optional) switch(config)# copy running-config startup-config	Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

Example

This example shows how to remove the interface QoS TCAM limit:

```
switch(config)# configure terminal
switch(config)# show hardware profile tcam feature qos
Feature                               Limit (number of tcam entries)
-----
interface-qos                          20
vlan-qos + global-qos                  428

switch(config)# no hardware profile tcam feature interface-qos limit 20
switch(config)# copy running-config startup-config
```

Configuring a Service Policy on a VLAN

Before you begin

- You must configure the interface QoS limit.
- You must configure a policy map.
- The TCAM must have enough free entries to configure the service policy on the VLAN.

Procedure

	Command or Action	Purpose
Step 1	switch# configure terminal	Enters global configuration mode.
Step 2	switch(config)# vlan configuration <i>vlan-number</i>	Creates a VLAN and enters VLAN configuration mode. The <i>vlan-number</i> range is from 1 to 4094.
Step 3	switch(config-vlan)# service-policy type qos input <i>policy-name</i>	Assigns a policy map to the VLAN. The <i>policy-name</i> is the name assigned to the policy

	Command or Action	Purpose
		map. The name can be a maximum of 40 alphanumeric characters.
Step 4	(Optional) <code>switch(config-vlan)# copy running-config startup-config</code>	Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

Example

This example shows how to create a service policy and assign it to VLAN 10:

```
switch# configure terminal
switch(config)# class-map type qos cml
switch(config-cmap-qos)# match cos 5
switch(config-cmap-qos)# policy-map type qos pm-vlan
switch(config-pmap-qos)# class cml
switch(config-pmap-c-qos)# set qos-group 4
switch(config-pmap-c-qos)# exit
switch(config-pmap-qos)# exit
switch(config)# vlan configuration 10
switch(config-vlan-config)# service-policy type qos input pm-vlan
switch(config-vlan-config)#
```

Removing a Service Policy from a VLAN

Procedure

	Command or Action	Purpose
Step 1	<code>switch# configure terminal</code>	Enters global configuration mode.
Step 2	<code>switch(config)# vlan configuration <i>vlan-number</i></code>	Enters VLAN configuration mode for the specified VLAN. The <i>vlan-number</i> range is from 1 to 4094.
Step 3	<code>switch(config-vlan-config)#no service-policy type qos input <i>policy-name</i></code>	Removes the policy from the VLAN. The <i>policy-name</i> is the name assigned to the policy map. The name can be a maximum of 40 alphanumeric characters.
Step 4	(Optional) <code>switch(config-vlan-config)# copy running-config startup-config</code>	Saves the changes persistently through reboots and restarts by copying the running configuration to the startup configuration.

Example

This example shows how to remove the pm-vlan policy map from VLAN 10:

```

switch# configure terminal
switch(config)# vlan configuration 10
switch(config-vlan-config)# no service-policy type qos input pm-vlan
switch(config-vlan-config)# copy running-config startup-config

```

Verifying the VLAN QoS Configuration

Use one of the following commands to verify the configuration:

Command	Purpose
<code>show policy-map vlan <i>vlan-number</i></code>	Displays the QoS policies configured on the specified VLAN.
<code>show policy-map [<i>name</i>]</code>	Displays the policy maps defined on the switch. Optionally, you can display the named policy only.
<code>running-config ipqos</code>	Displays information about the running configuration for QoS.
<code>startup-config ipqos</code>	Displays information about the startup configuration for QoS.

Feature History for VLAN QoS

Table 1: Feature History for VLAN QoS

Feature Name	Release	Feature Information
VLAN QoS	5.1(3)N2(1)	This feature was introduced.