

Cisco IP Service Level Agreement Video Operation (IPSLA VO)

Last updated: May 2011

Overview

Cisco IOS IP Service Level Agreement (SLA) is a feature embedded in Cisco IOS Software. It allows Cisco customers to understand IP service levels, increase productivity, lower operational costs, and reduce the frequency of network outages. The Cisco IOS IP SLA feature performs active monitoring of network performance and can be used for network troubleshooting, network readiness assessment and health monitoring.

Enterprise video is rapidly becoming the dominant consumer of network bandwidth, as well as a major factor in network design. With the advent of telepresence, video conferencing, and video calls, it is extremely important to ensure there is sufficient reliability and network capacity for sustaining these applications. The growing trend is that video traffic will exceed 50 percent of the network capacity. This can be attributed to the larger video bandwidth requirements relative to previous data streams.


| | |
|-----------------------------------|--|
| WebEx | <ul style="list-style-type: none"> • VoIP: 30-40 kbps, Desktop Share: 40 kbps, Video: 220 Kbps¹ • HQ Video (360p 1.5Mbps, 180p 0.5 Mbps) Min 300k |
| Video IP Telephony | <ul style="list-style-type: none"> • E20 128 kbps-1152 kbps • CP-99xx 256 kbps-1024 kbps |
| Soft Clients | <ul style="list-style-type: none"> • CUVA 460 kbps • MOVI 384 kbps-2 Mbps |
| Desktop Video Conferencing | <ul style="list-style-type: none"> • 384 kbps-6 Mbps |
| TelePresence | <ul style="list-style-type: none"> • 1.5 Mbps-24+ Mbps |

NOTE 1: average is much lower: burst bitrate could be 7-20% higher

Enterprise video represents different challenges for networks in pre-deployment assessment, service monitoring, as well as troubleshooting. IP Service Level Agreement Video Operation (IPSLA VO) provides new functionality to the Cisco IPSLA feature set allowing routers and switches to stress the network in the same way as actual video applications. IPSLA VO can be used to expose the weaknesses in a network and raises alerts based on pre-defined thresholds. Once the network stress points are exposed, next steps could possibly be to deploy Quality of Service (QoS), add additional bandwidth or reset user expectations.

Prior to IPSLA VO the most common method to help test video was to use IPSLA UDP probes, since video traffic streams are UDP-based. The main drawback to using this approach is that platform independent software features, such as IPSLA, have inherent limitations in generating the high data rates (4 Mbps – 16 Mbps) which are typical of video applications. IPSLA VO probes are designed to stress the network, whereas previous IP SLA probes were designed for measurements within the existing network infrastructure. The existing UDP-based IPSLA probes rely on an operating system timer which is insufficient for the packet generation requirements for a true video stream. IPSLA VO as described in this document addresses this limitation, by relying on platform specific timers that will enable a more precise timer interrupt, as well as the ability to generate high data rates. Using platform dependent timers eliminates protocol overhead and process scheduling delays that can contribute to the limitations of the current software to generate high rates of video traffic.

Figure 1. Typical Video Network

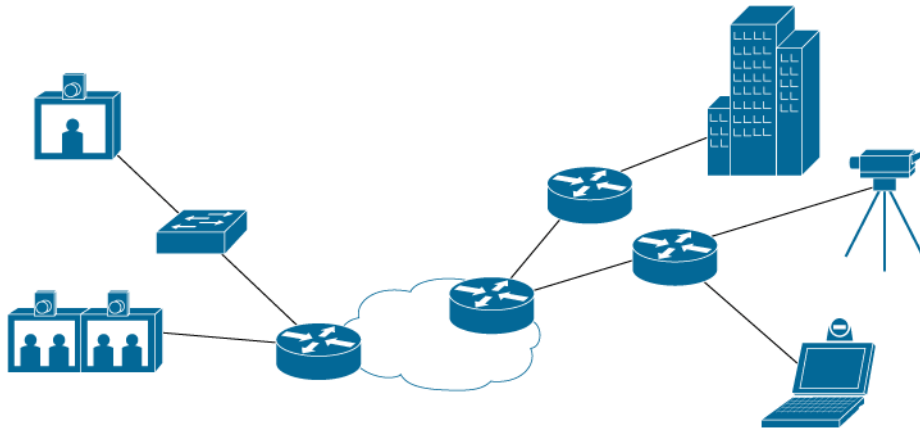

A typical video network can incorporate many different types of video endpoints representing different characteristics. IPSLA VO is available initially on the Cisco Catalyst 3K platforms beginning with Cisco IOS Software Release 12.2(58)SE and is packaged with profiles representing IPTV (unicast), Cisco IP Cameras for video surveillance and Cisco telepresence. IPSLA VO also supports the addition of custom profiles that the operator can upload to the router.

Best Practices

IPSLA VO incorporates the best practices found in many existing IPSLA designs and adds some additional recommendations due to the new functionality and potentially high data rates.

- **IPSLA Responder**

The responder functionality will increase the IPSLA RTT accuracy by subtracting the processing delay of the devices. IPSLA VO *requires* an IPSLA responder, whereas this functionality is optional on some other IPSLA probes.

- **Location of IPSLA Devices**

The judicious location of the IPSLA sender and responders within a network will greatly increase the IPSLA's ability to scale. A full mesh of probes will increase exponentially the amount of probes needed to cover an entire network and can easily overwhelm the available resources of a device. If possible, place the devices closest to the point of measurement.

- **Multi-Operation Scheduler**

This will allow the device to stagger the starting of various operations in order to smooth out the consumption of CPU resources.

- **Network Time Protocol (NTP)**

NTP configuration and synchronization between devices is required in order to have meaningful statistics for IPSLA VO. It is highly recommended for other IPSLA operations as well.

- **Duration**

IPSLA updates the statistics at the end of each operation. It is highly recommended that due to the network stress involved with IPSLA VO that test durations should be no more than 60 seconds.

IP SLA Video Packet flow

IPSLA is comprised of two main components, the IPSLA sender and the IPSLA responder. The sender is responsible for the generation, receipt and analysis of the traffic to target devices. The responder is responsible for adding timestamps and increasing the accuracy of the sender traffic.

IPSLA VO uses the existing IPSLA control channel (by default over UDP port 1967) but adds some additional functions that are unique as well.

The IPSLA sender will initiate an operation based upon the configuration of the device and sends a control message to the IPSLA responder with the specified port number and duration of the operation. If the IPSLA sender receives an "OK" reply from the responder it will begin sending test packets.

With IPSLA VO, IPSLA passes control of the test packets to the platform component. The platform components are responsible for the generation of the test packets on the sender and the responder "test sink".

When the responder "test sink" receives a signal that no more test packets will arrive from the sender, the test sink is turned off and a message is sent from the responder containing the statistics that was gathered by the responder. This sender reads this message and updates all relevant fields. IP SLA updates the counters at the end of an operation. If an operation is configured for a long period of time, there will not be any information until it is completed.

Note that all video operations are one-way and require the responder to collect and verify packets sent from the IPSLA sender. The sender gets the computed statistics through the proprietary control message protocol and makes three attempts to retrieve the statistics before it times out.

CLI Configuration

IPSLA VO adds additional functionality to the existing IPSLA feature set. This additional functionality is reflected in additional keywords and parameters in the configuration. The CLI will be familiar to anyone with prior IPSLA experience.

```
IPSLA-sw(config)#ip sla 1
IPSLA-sw(config-ip-sla)#video ?
  Hostname or A.B.C.D Destination IP address or hostname
IPSLA-sw(config-ip-sla)#video 10.4.3.19 ?
  <1-65535> Port Number
IPSLA -sw(config-ip-sla)#video 10.4.3.19 3000 ?
  source-ip Source address
```

A source IP address must be configured for use with IPSLA VO.

```
IPSLA-sw(config-ip-sla)#video 10.4.3.19 65000 source-ip 10.4.3.18 ?
source-port Source Port

IPSLA-sw(config-ip-sla)#3.19 3000 source-ip 10.4.3.18 source-port ?
<1-65535> Port Number

IPSLA-sw(config-ip-sla)#3.19 65000 source-ip 10.4.3.18 source-port 3000 ?
profile traffic profile type to be configured

IPSLA-sw(config-ip-sla)#$ source-ip 10.4.3.18 source-port 3000 profile ?
IPTV IP Television traffic (2.6 Mbps)
IPVSC IP video surveillance camera traffic (2.2 Mbps)
TELEPRESENCE Cisco Telepresence 1080P traffic (6.6Mbps)
```

The profiles presented are the ones that are shipped within the IOS image. Cisco may provide additional built-in profiles as they are validated.

```
IPSLA-sw(config-ip-sla)#$ source-ip 10.4.3.18 source-port 3000 profile
telepresence
```

Any IPSLA operation must be scheduled and started after the operation has been configured.

```
IPSLA-sw(config)#ip sla sch
IPSLA-sw(config)#ip sla schedule ?
<1-2147483647> Entry number

IPSLA-sw(config)#ip sla schedule 1 ?
ageout How long to keep this Entry when inactive
life Length of time to execute in seconds
recurring Probe to be scheduled automatically every day
start-time When to start this entry
<cr>

IPSLA-sw(config)#ip sla schedule 1 life ?
<0-2147483647> Life seconds (default 3600)
forever continue running forever

IPSLA-sw(config)#ip sla schedule 1 life fo
IPSLA-sw(config)#ip sla schedule 1 life forever ?
ageout How long to keep this Entry when inactive
recurring Probe to be scheduled automatically every day
start-time When to start this entry
<cr>

IPSLA-sw(config)#ip sla schedule 1 life forever star
IPSLA-sW(config)#ip sla schedule 1 life forever start-time ?
```

```
after      Start after a certain amount of time from now
hh:mm     Start time (hh:mm)
hh:mm:ss  Start time (hh:mm:ss)
now       Start now
pending   Start pending
```

```
IPSLA-sw(config)#ip sla schedule 1 life forever start-time now
IPSLA-sw(config)#
```

The following command can be issued to verify the previous configuration.

```
IPSLA-sw#sh config | beg sla
ip sla 1
  video 10.4.3.19 3000 source-ip 10.4.3.18 source-port 4000 profile TELEPRESENCE
  duration 45
  frequency 60
ip sla schedule 1 life forever start-time now
ip sla responder
logging esm config
logging 10.27.0.1
!
snmp-server community public RO

IPSLA-sw#
```

IPSLA VO also supports the use of custom profiles that the customer can upload to the router or switch.

```
IPSLA-sw(config)#ip sla read video-profile ?
  flash1:  Location of Video template
  flash:   Location of Video template
  fstage:  Location of Video template
```

IPSLA VO can also be configured using SNMP commands:

```
setany -v2c x.x.x.x public rttMonCtrlAdminStatus.1 -i 5 \ >
  rttMonCtrlAdminRttType.1 -i 22 \ >
  rttMonEchoAdminProtocol.1 -i 37 \ >
  rttMonEchoAdminTargetPort.1 -i 7810 \ >
  rttMonEchoAdminSourcePort.1 -i 7011 \ >
  rttMonEchoAdminSourceAddress.1 -o "65 65 65 02" \ >
  rttMonEchoAdminVideoTrafficProfile.1 -o "IPTV" \ >
  rttMonCtrlAdminNvgen.1 -i true \ >
  rttMonEchoAdminTargetAddress.1 -o "65 65 65 01"
```

Troubleshooting

The “show ip sla statistics [operation]” command can provide information regarding any problems that IPSLA VO is encountering. A sample output and the explanations are listed below:

```
show ip sla statistics 1
```

IPSLAs Latest Operation Statistics

IPSLA operation id: 1

Type of operation:

Latest operation start time: 18:38:32.126 EST Mon Mar 7 2011 ← [Table 1](#)

Latest operation return code: No Connection

Packets:

Sender Transmitted: 2034 ← [Reported values from hardware component](#)

Responder Received: 1994

Latency one-way time:

Number of Latency one-way Samples: 0

Source to Destination Latency one way Min/Avg/Max: 0/0/0 milliseconds

NTP sync state: SYNC

Inter Packet Delay Variation, RFC 5481 (IPDV):

Number of SD IPDV Samples: 0

Source to Destination IPDV Min/Avg/Max: 0/0/0 milliseconds

Packet Loss Values:

Loss Source to Destination: 0

Source to Destination Loss Periods Number: 0

Source to Destination Loss Period Length Min/Max: 0/0

Source to Destination Inter Loss Period Length Min/Max: 0/0

Out Of Sequence: 0 Tail Drop: 0

Number of successes: 0

Number of failures: 0

Operation time to live: Forever

Table 1.

| Latest Operation Return Code | Explanation of Control Plane Codes |
|-------------------------------|---|
| OK | The video session succeeded without error, and within all specified threshold and timeout parameters. Only meaningful with NTP sync, otherwise a false positive. |
| No Connection | This normally means that either the destination doesn't exist (invalid IP address, or unreachable) or that the responder is not enabled on that destination device. The SLA video operation REQUIRES the responder to be both reachable and functional for the session to start. |
| Over threshold | In the case of video, since there are no RTT values, if any time stamp delta (receive time—send time) is greater than the provisioned threshold value. If no NTP sync, then this error code is meaningless. |
| Timeout | In the case of video, since there are no RTT values, if any time stamp delta (receive time—send time) is greater than the provisioned timeout value. If no NTP sync, then this error code is meaningless. |
| Responder failure | A video specific failure, normally caused by video session on responder timing out, and clearing out all saved data before the sender transmits the Stat Retrieval message, which will then be rejected because no active session remains that matches the request. Responder session timer is equal to the duration plus 15 seconds (3x retries of the Stat Retrieval control message). |
| Authentication failure | This is caused by failure of the key-chain MD5 authentication protocol. Either the sender or responder is missing the correct key-chain from the other device. This is a common error for all SLA operations, not just for video. |
| Format failure | Control message incompatibility between sender and responder. For video, means destination device does not support video. |
| Busy | The sender is unable to start a new video session due to bandwidth limitations. Each device can only support a certain number of video sessions, depending on the platform, and bandwidth of the selected profile. |

| Latest Operation Return Code | Explanation of Control Plane Codes |
|------------------------------|--|
| Port in use | For video, this means that the responder is out of available resources for another video session. This is similar to the error Busy, but a different code to distinguish it from the sender bandwidth issue. |

IPSLA can be configured to raise traps and syslog messages based on a configured threshold value and error conditions. These thresholds are not specific to IPSLA VO, and may be available on the other IPSLA probe types. The various reactions that can be configured are:

```

iou131(config)#ip sla reaction-configuration 1 react ?
connectionLoss Connection Loss
iaJitterSD Inter Arrival Jitter from Source to Destination
packetLossSD Packet Loss in the direction from Source to Destination
rtt Round Trip Time
timeout Timeout

```

Debug Commands

IPSLA supports debug commands for the sender and responder, and can provide additional detail as to the IPSLA operation. This information may be needed if the Technical Assistance Center (TAC) is engaged. Please keep in mind that debug commands will require additional CPU resources and should be used sparingly.

Sender:

```

debug ip sla trace
debug ip sla error

```

Responder:

```

debug ip sla trace 0
debug ip sla error 0

```

IPSLA Video Operation SNMP

IPSLA VO has full SNMP support using the CISCO-IP-SLA-VIDEO-MIB.my.

For More Information

IPSLA—www.cisco.com/go/ipsla

Catalyst 3K Switches—http://www.cisco.com/en/US/products/ps11290/products_data_sheets_list.html



Americas Headquarters
Cisco Systems, Inc.
San Jose, CA

Asia Pacific Headquarters
Cisco Systems (USA) Pte. Ltd.
Singapore

Europe Headquarters
Cisco Systems International BV Amsterdam,
The Netherlands

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco Website at www.cisco.com/go/offices.

Cisco and the Cisco Logo are trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at www.cisco.com/go/trademarks. Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1005R)

Printed in USA

C11-674560-00 06/11