

Configure Dynamic Host Configuration Protocol (DHCP) Trusted Interface Settings on a Switch

Objective

Dynamic Host Configuration Protocol (DHCP) snooping provides a security mechanism to prevent receiving false DHCP response packets and to log DHCP addresses. It does this by treating ports on the device as either trusted or untrusted.

A trusted port is a port that is connected to a DHCP server and is allowed to assign DHCP addresses. DHCP messages received on trusted ports are allowed to pass through the device. Packets from these ports are automatically forwarded. If DHCP Snooping is not enabled, all ports are trusted by default.

An untrusted port is a port that is not allowed to assign DHCP addresses. By default, all ports are considered untrusted until you declare them trusted in the Interface Settings page.

This article aims to show you how to configure DHCP Trusted Interface Settings on your switch.

Applicable Devices

- Sx300 Series
- SG350X Series
- Sx500 Series
- SG500X


Software Version

- 1.4.7.06 — Sx300, Sx500, SG500X
- 2.2.8.04 — SG350X


Configure DHCP Trusted Interface Settings

Note: The appearance of your switch web-based utility may vary depending on the exact model of your device. The images below are taken from the SG350X-48MP.

Step 1. Access your switch web-based utility and choose **IP Configuration > IPv4 Management and Interfaces**.

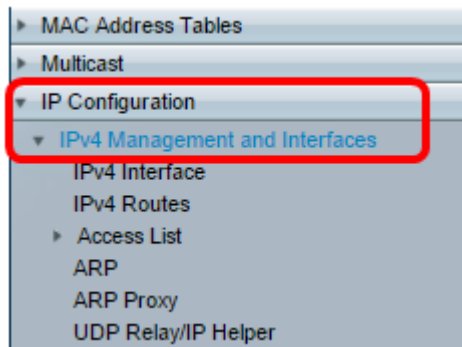

Step 2. Choose **DHCP Snooping/Relay > DHCP Snooping Trusted Interfaces**.

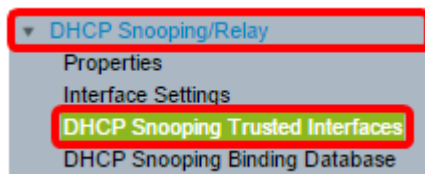

Step 3. Under the Trusted Interfaces Table, click on the port or interface that you want to configure then click **Edit**.

<input type="radio"/>	40	GE40	No
<input checked="" type="radio"/>	41	GE41	No
<input type="radio"/>	42	GE42	No
<input type="radio"/>	43	GE43	No
<input type="radio"/>	44	GE44	No
<input type="radio"/>	45	GE45	No
<input type="radio"/>	46	GE46	No
<input type="radio"/>	47	GE47	No
<input type="radio"/>	48	GE48	No
<input type="radio"/>	49	XG1	No
<input type="radio"/>	50	XG2	No
<input type="radio"/>	51	XG3	No
<input type="radio"/>	52	XG4	No

Copy Settings... Edit...

Note: In this example, Port GE41 is chosen.

Step 4. In the Edit Interface Settings window, verify that the chosen port in the Interface area is the one you have chosen in the previous step. Otherwise, click on the drop-down arrow and choose the right port.



Step 5. In the Trusted Interface area, click on a radio button to set the specific port to trusted or not trusted, and then click **Apply**.

Interface: Unit Port LAG

Trusted Interface: Yes No

Note: In this example, Yes is chosen indicating that the port is configured to be a trusted port.

Step 6. Once the Success message appears, click **Close**.


Success. To permanently save the configuration, go to the [File Operations](#) page or click the Save icon.

Interface: Unit Port LAG

Trusted Interface: Yes No

Step 7. Verify in the Trusted Interfaces Table if the newly-configured settings on the chosen port are now applied.

<input type="radio"/>	40	GE40	No
<input checked="" type="radio"/>	41	GE41	Yes
<input type="radio"/>	42	GE42	No
<input type="radio"/>	43	GE43	No
<input type="radio"/>	44	GE44	No
<input type="radio"/>	45	GE45	No
<input type="radio"/>	46	GE46	No
<input type="radio"/>	47	GE47	No
<input type="radio"/>	48	GE48	No
<input type="radio"/>	49	XG1	No
<input type="radio"/>	50	XG2	No
<input type="radio"/>	51	XG3	No
<input type="radio"/>	52	XG4	No

Step 8. (Optional) To permanently save the configuration, click on the blinking  icon at the top portion of the page.

You should now have successfully configured the Trusted Interface Settings on your switch.