

Contents

[Introduction](#)

[Prerequisites](#)

[Requirements](#)

[Components Used](#)

[Problem 1: No Decline button on incoming call](#)

[Problem 2: The call is not sent to the voice mail when the Decline button is clicked.](#)

[Related Information](#)

[Related Cisco Support Community Discussions](#)

Introduction

This document describes common issues you might experience with the decline option on an incoming call in Cisco Jabber for Microsoft Windows.

Prerequisites

Requirements

Cisco recommends that you have knowledge of:

- Cisco Unified Communication Manager
- Cisco Jabber for Windows

Components Used

The information in this document is based on these software versions:

- Cisco Unified Communications Manager 8.x or later
- Cisco Jabber for Windows 9.x and 10.x

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, make sure that you understand the potential impact of any command.

The Decline button redirects the call to the Voicemail Pilot number configured for the directory number. The Voicemail profile is configured at the Directory Number (DN) level of the device. If the user has a Voicemail profile configured in Unity Connection, it plays the user-specific prompt, otherwise it plays the default voice mail prompt.

Problem 1: No Decline button on incoming call

This image illustrates an issue in which the Decline button does not appear on an incoming call:




This issue can occur when there is no Voicemail profile assigned on the line configuration of the device. Make sure the user's Client Services Framework (CSF) line configuration has a Voicemail profile configured to get the Decline button displayed on the incoming call. As shown in this image, select a Voicemail profile from the Voice Mail Profile drop-down list:

Directory Number Settings

Voice Mail Profile	VM_Profile
Calling Search Space	Internal_CSS
BLF Presence Group*	Standard Presence group
User Hold MOH Audio Source	< None >
Network Hold MOH Audio Source	< None >
Auto Answer*	Auto Answer Off

Problem 2: The call is not sent to the voice mail when the Decline button is clicked.

This image illustrates an issue in which the Decline button appears on an incoming call:

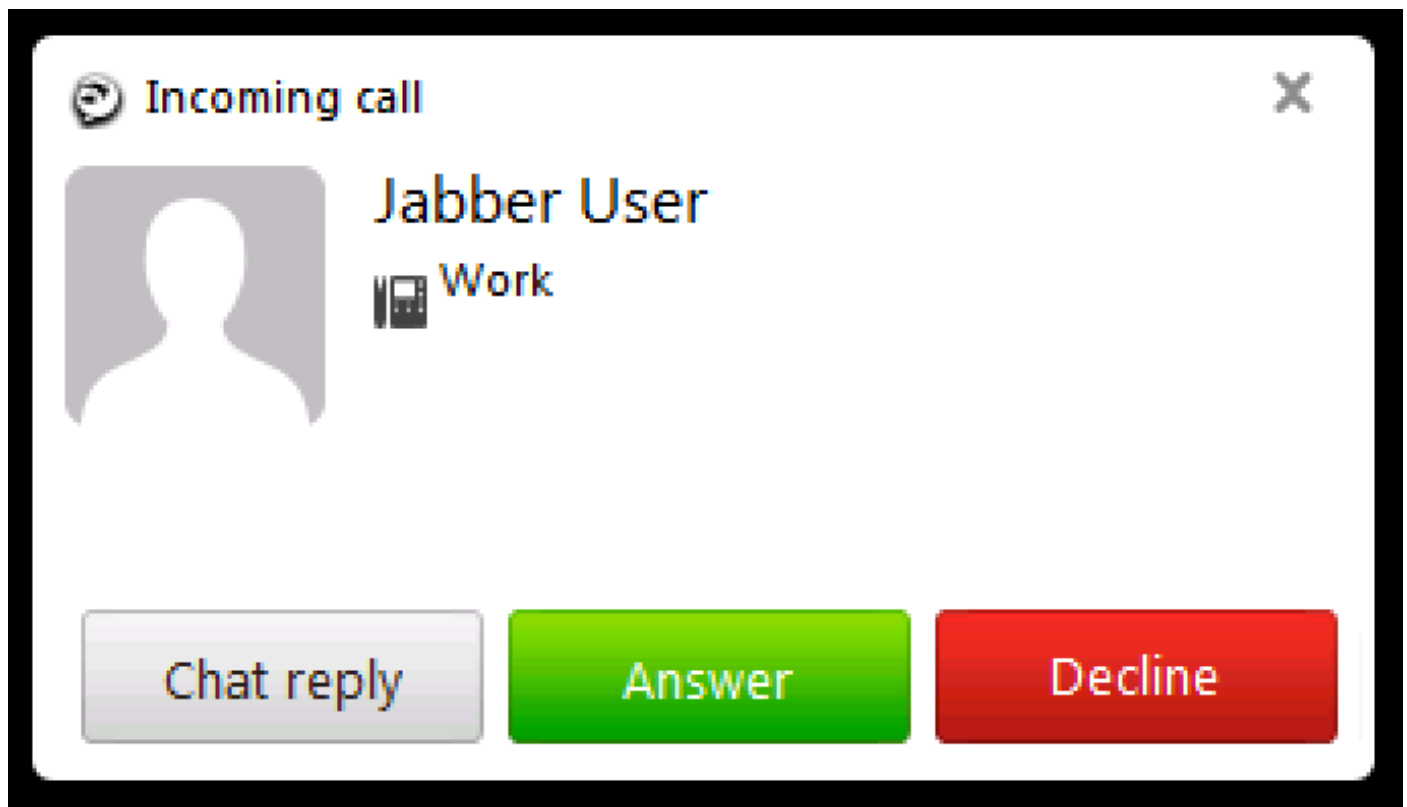

The Decline button appears for an incoming call; however, when it is clicked, the call is not sent to voice mail, and the caller continues to hear the ring back.

For incoming calls from an internal DN, ensure that the Calling Search Space (CSS) of the calling number has the Voicemail Pilot Partition.

For incoming calls from the service provider, the CSS of the Gateway or the Trunk must have the partition of the Voicemail Pilot as illustrated in the image.

Inbound Calls	
Significant Digits*	4
Connected Line ID Presentation*	Default
Connected Name Presentation*	Default
Calling Search Space	Internal_CSS
AAR Calling Search Space	< None >
Prefix DN	5

Also CSS assigned on the Call Forward setting of the line configuration must include required Voicemail Partition added.

Note:

Note: The incoming call cannot be completely dropped or disconnected when the Decline button is clicked. The Decline button only redirects the call to the configured voice mail pilot number.

If there is no voice mail server, you can configure a dummy voice mail profile and pilot number in order to display the Decline button; however, nothing will happen when the Decline button is clicked.

To ensure the feature works properly, configure a voice mail profile in Cisco Unity Connection.

Related Information

[Cisco Unified Communications Manager Administration Guide, Release 10.0\(1\)](#)

[Cisco Jabber 10.6 Deployment and Installation Guide](#)