Introduction

Note Explore the Content Hub, the all new portal that offers an enhanced product documentation experience.

- Use faceted search to locate content that is most relevant to you.
- Create customized PDFs for ready reference.
- Benefit from context-based recommendations.

Get started with the Content Hub at content.cisco.com to craft a personalized documentation experience.

Do provide feedback about your experience with the Content Hub.

This Release Notes contain information about downloading and installing Cisco 1x2 / Compact Shelf RPD Software 6.7 and its maintenance releases. It also provides new and changed information, hardware support, limitations and restrictions, and caveats for Cisco 1x2 / Compact Shelf RPD Software 6.7 and its maintenance releases.

We recommend that you view the field notices for this release to see if your software or hardware platforms are affected. If you have an account at Cisco.com, you can find the field notices at http://www.cisco.com/en/US/customer/support/tsd_products_field_notice_summary.html.

If you do not have an account at Cisco.com, you can find the field notices at http://www.cisco.com/en/US/support/tsd_products_field_notice_summary.html.

Note Cisco 1x2 / Compact Shelf RPD Software 6.7 is generally available for field deployment. To ensure a smoother, faster, and successful field deployment, we recommend that you validate and qualify the software in a limited field trial.

The versions of Cisco cBR-8 router and RPD must be compatible. If the versions are not compatible, the RPD remains in the **init(gcp)** state. The following list provides information on the compatible cBR-8 and RPD versions:

- Cisco IOS XE Everest 16.6.x works with RPD 2.x
- Cisco IOS XE Fuji 16.7.x works with RPD 3.x
- Cisco IOS XE Fuji 16.8.x works with RPD 4.x

- Cisco IOS XE Fuji 16.9.x works with RPD 5.x
- Cisco IOS XE Gibraltar 16.10.1c works with RPD 6.1, 6.2 and 6.3
- Cisco IOS XE Gibraltar 16.10.1d works with RPD 6.4, 6.5 and 6.7
- Cisco IOS XE Gibraltar 16.10.1f works with RPD 6.6 and 6.7
- Cisco IOS XE Gibraltar 16.10.1g works with RPD 6.7

This chapter includes the following sections:

- System Requirements, on page 2
- New and Changed Information, on page 3
- MIBs, on page 16
- Obtaining Documentation and Submitting a Service Request, on page 17

System Requirements

These sections describe the system requirements for Cisco 1x2 / Compact Shelf RPD Software 6.7 and its maintenance releases:

Memory Requirements for Cisco 1x2 / Compact Shelf RPD Software 6.7

Note Memory is not configurable for the Cisco Remote PHY device.

Table 1: Memory Recommendations for the Cisco Remote PHY Device

Feature Set	Cisco RPHY Processor	Software Image	Fixed Memory	Runs From
CISCO RPHY 6.7	NXP LS1043A	RPD-V6-7.itb.SSA	1G Bytes	Bootflash:

Hardware Supported

For detailed information about the hardware supported in Cisco 1x2 / Compact Shelf RPD Software 6.7 and its maintenance releases, see:

http://www.cisco.com/c/en/us/td/docs/cable/cbr/installation/guide/b_cbr_how_and_what_to_order.html.

Determining the Software Version of Cisco 1x2 / Compact Shelf RPD Software 6.7

To determine the version of the Cisco 1x2 RPD software running on your Cisco Remote PHY Device, log in and enter the **show version** EXEC command:

```
R-PHY# show version
Cisco RPD Software, version v6.7, build by rpd-release, on 2019-06-27 05:23:12
```

```
Branch information:
        RPD branch: (detached from RPD_V6_7_20190627)
        OpenRPD branch: (detached from RPD_V6_7_20190627)
        SeresRPD branch: (detached from RPD_V6_7_20190627)
```

Note The system image file name of the factory installed image is */bootflash/RPD-V6.7_hardware_certificate.itb.rel.sign.SSA*. The system image file name of the Secure Software Download (SSD) from the Cisco software download page is */bootflash/RPD-V6-7.itb.SSA.act*.

New and Changed Information

The following sections list the new hardware and software features supported on the Cisco Remote PHY Device in this release:

New Software Features in Cisco 1x2 / Compact Shelf RPD Software 6.7

The new software features for Cisco 1x2 / Compact Shelf RPD Software 6.7 release are:

PTP big jitter packets filter on RPD

From RPD V6.7 release onwards, RPD will filter PTP big jitter packets and dynamically adjust the delay threshold to improve PTP stability. This change will help avoid the modem offline issue caused by PTP lose sync issue caused by the following two scenarios:

- RPD receives a PTP packet with big jigger (bigger than 0.5ms) and then jumps back.
- Network path between RPD and PTP master is switched to another with a different time delay.

Serviceability Improvements

The following serviceability improvements are included with the RPD V6.7 release:

- Add archive and rotation for OFDM related logs.
- Resolve RPD crash issue when bcm regproc component debugs are turned on.
- Enhance **show l2tp session** CLI for improved debuggability.
- Session and tunnel IDs in **show l2tp session** table is displayed in both decimal and hex format for quick verification.

```
R-PHY#show l2tp session

L2TP Tunnel Information Total tunnels 1 sessions 48

LocSessID           RemSessID           LocTunID            RemTunID            State
Type      Last Chg
10410000/272695296  0000ec9f/60575      1da739f4/497498612  88eb608c/2297127052 est
PSP_DEPI   06:16:11 2019-05-14
00430000/4390912    0000ec01/60417      1da739f4/497498612  88eb608c/2297127052 est
PSP_DEPI   06:16:11 2019-05-14
```

```
00b40002/11796482   47040008/1191444488 1da739f4/497498612  88eb608c/2297127052 est
RNG_SCQ    06:16:10 2019-05-14
00f40003/15990787   4708000c/1191706636 1da739f4/497498612  88eb608c/2297127052 est
SPECMAN    06:16:12 2019-05-14
00f40000/15990784   47080000/1191706624 1da739f4/497498612  88eb608c/2297127052 est
SPECMAN    06:16:11 2019-05-14
00640005/6553605    47010010/1191247888 1da739f4/497498612  88eb608c/2297127052 est
UEPI_SCQAM 06:16:11 2019-05-14
00d40000/13893632   47000000/1191182336 1da739f4/497498612  88eb608c/2297127052 est
MAP_SCQ    06:16:11 2019-05-14
```

- Enhance the CLI to display per session detail to accept session/tunnel IDs in both decimal and hex format.

```
R-PHY#show l2tp session 497498612 4390913

['497498612', '4390913']

LocSessID           RemSessID           LocTunID            RemTunID            State
Type      Last Chg
00430001/4390913    0000ec02/60418      1da739f4/497498612  88eb608c/2297127052 est
PSP_DEPI   06:16:12 2019-05-14

<class 'l2tpv3.src.L2tpv3RFC3931AVPs.CallSerialNumber'> :
{
    "attrType": 15,
    "hiddenAvp": false,
    "mustAvp": true,
    "vendorID": 0,
    "length": 10,
    "serialNum": 470700954,
    "avpName": "CallSerialNumber"
}
<class 'l2tpv3.src.L2tpv3RFC3931AVPs.LocalSessionID'> :
{
    "attrType": 63,
    "hiddenAvp": false,
    "mustAvp": false,
    "vendorID": 0,
    "sessionID": 60418,
    "length": 10,
    "avpName": "LocalSessionID"
}
```

NdfPerfStats-TLV 76 support

The RPD 6.7 includes TLV 76(NdfPerfStats) support. Get NDF performance stats through this TLV 76 from RPD or use SNMP MIB table docsRphyStatsRpdDsNdfPerfStatsTable to query stats from CMTS/CCAP.

Support PNM-UTSC-SAC channel type

From RPD V6.7 release, add channel type 12(PNM-UTSC-SAC) in TLV 58.3.11.2.2(ChannelType) to alignment latest Remote-PHY Specification I12.

New Software Features in Cisco 1x2 / Compact Shelf RPD Software 6.6

The new software features for Cisco 1x2 / Compact Shelf RPD Software 6.6 release are:

SoftReset support

SoftReset is supported from RPD V6.6 release. You can softReset RPD by RPD CLI or write TLV 40.1.1(RpdResetCtrl to softReset(1)).

To perform soft-reset by RPD CLI, use the **reboot soft-reset** command:

```
R-PHY# reboot soft-reset
Warning: This action will perform a soft reset. Are you sure you want to do the soft reset
 (yes/no)?yes
SoftReset in 10 seconds
```

Support NDR/NDF channel in TLV 100.2.21

RPD V6.6 release provides NDR/NDF channel support in TLV 100.2.21(RPDSessionStats). You can get information on NDR/NDF channel counter by reading this TLV.

Add ADM1260 PSOC fault log output to log file

From RPD V6.6 release and later, ADM1260 PSOC fault log will be recorded in the RPD log file.

Support for Events 66070312, 66070313, 66070323

RPD V6.6 release provides event support for 66070312, 66070313, 66070323. Information on the event is listed in the following table:

Process	Sub-Process	RPD Priority	Event Message	Message Notes and Detail	Error Code Set	Event ID
Init	DHCP	Warning	DHCP WARNING - Non-critical field invalid in response; DHCP Server IP: <P1>; Port: <P2>; <TAGS>;	P1 = DHCP server IP address P2 = Ethernet port number	B703.12	66070312
Init	DHCP	Critical	DHCP FAILED - Critical field invalid in response; DHCP Server IP: <P1>; Port: <P2>; <TAGS>;	P1 = DHCP server IP address P2 = Ethernet port number	B703.13	66070313

Process	Sub-Process	RPD Priority	Event Message	Message Notes and Detail	Error Code Set	Event ID
Init	TOD	Error	ToD failed - Response received - Invalid data format; ToD Server IP: <P1>; Port: <P2>; <TAGS>;	P1 = ToD server IP address P2 = Ethernet port number	B703.23	66070323

Boot-up failure solution

RPD V6.6 also has the Boot-up failure solution enhancement that solves any RPD boot-up failure issues. To implement the enhancement, complete the following steps:

1. Upgrade bootloader to May 03 2019 - 21:56:55 -0400 version. The RPD boot retry sequence would change during an RPD boot failure. Boot sequence:

   ```
   primary bootloader > imagea(24 times) > imageb(1 time) > imageg(1 time) >
   golden bootloader > imagea(1 time) > imageb(1 time) > imageg(1 time)
   ```

2. Disable the console port input during RPD boot-up.
3. Change RPD uboot stop autoboot from Ctrl + C to 'shell'.
4. Disable the RPD by using the Ctrl +S key combination.
5. Revert the watchdog timing from 10 minutes to 5 minutes.
6. Add more bootup debug logs in RPD log file.

New Software Features in Cisco 1x2 / Compact Shelf RPD Software 6.5

View Downstream Channel Traffic Rate for Each Downstream Channel

You can view the downstream channel traffic rate for each downstream channel using the **show downstream channel counter dps** command. The downstream channel traffic rate is calculated every 60 seconds for SC-QAM and every 15 seconds for OFDM. This time interval for rate calculation is fixed and is not configurable. The rate for video channels is constant due to NULL padding by RPD.

The downstream channel traffic rate is displayed in the Rate-in-Mbps column.

```
R-PHY#show downstream channel counter dps
Chan Tx-packets Tx-octets Drop-pkts Tx-sum-pkts Tx-sum-octs Drop-sum-pkts Rate-in-Mbps
0    4813       312062    0         681977411   1351860818  0             1.056
1    4813       312062    0         681959934   1350670750  0             1.056
2    4813       312062    0         681976985   1351570253  0             1.056
3    4815       312386    0         682030255   1355185470  0             1.057
4    1          34        0         183779      7268458     0             0.000
5    1          34        0         183844      7275912     0             0.000
```

```
6    1          34        0         183751      7265430     0             0.000
158  2176627    315605389 0         1774253740  3657047865  0             1187.343
```

New Software Features in Cisco 1x2 / Compact Shelf RPD Software 6.4

The new software features for Cisco 1x2 / Compact Shelf RPD Software 6.4 release are:

TACACS+ support

Terminal Access Controller Access Control System (TACACS) is a security protocol that provides centralized validation of users who are attempting to gain access to a router or NAS. TACACS+, a more recent version of the original TACACS protocol, provides separate authentication, authorization, and accounting (AAA) services.

Note

1. RPD can configure 8 TACACS servers at the most. All configured servers use the same secret key.
2. If multiple TACACS servers are configured, RPD will try to connect TACACS server in the order in which the servers are configured until the connection is established successfully.
3. RPD and TACACS server must use same address family.

To enable TACACS+, user needs to setup a TACACS server with secret key configured. Then add this TACACS server's IPv4/IPv6 address and key to RPD configuration.

```
R-PHY(config)#tacacs add-server 10.0.0.113
Server '10.0.0.113' is configured on RPD successfully.

R-PHY(config)#tacacs add-key
Please add a secret key:
Please re-enter your secret key:
Add secret key successfully.
```

User can also delete server and change the secret key.

```
R-PHY(config)#tacacs delete-server 10.0.0.112
Delete server '10.0.0.112' successfully.

R-PHY(config)#tacacs change-key
Please change secret key:
Please re-enter your secret key:
Change secret key successfully.
```

To display the configured TACACS server, use the **show tacacs-server** command as shown in the following example:

```
R-PHY#show tacacs-server
TACACS server configured:
10.0.0.113
```

RpdInfo read count/read by key support

Starting from Cisco 1x2 / Compact Shelf RPD Software 6.4, TLV 100 RpdInfo read count and read by key is supported.

Spectrum capture support

The upstream triggered spectrum analysis measurement provides a wideband spectrum analyzer function in the CCAP which can be triggered to examine desired upstream transmissions as well as underlying noise or

interference during a quiet period. WBFFT stands for Wide Band Fast Fourier Transform. This feature allows all RPD US ports to enable an upstream spectrum analyzer built into the RPD's front end. RPD supports FreeRunning trigger mode.

Figure 1: Spectrum capture workflow

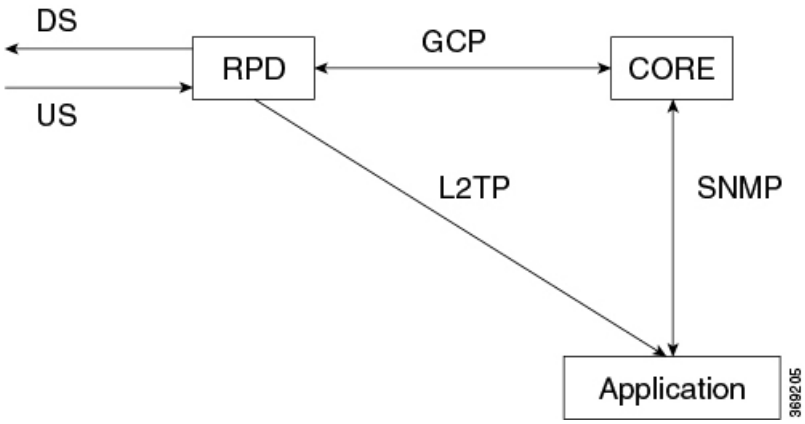

Note US FFT data is computed and sent directly from US PHY. RPD firmware does not handle these data. The firmware configures US PHY to send L2TP stream based on GCP TLV messages.

Please refer to below link for cBR8 configuration about this feature:

https://www.cisco.com/c/en/us/td/docs/cable/cbr/configuration/guide/b_cbr_docsis_full_book_xe16_10/b_cbr_docsis_full_book_xe16_10_chapter_0100110.html

Note

1. This feature provides a stream of raw spectrum data only.
2. The application that interprets and presents the data in human readable format is not part of this feature.

To verify if the spectrum capture is enabled, use **show bcm-register wbfft config** command as shown in the following example. The WBFFT Trigger Mode should be FreeRunning if this feature is enabled.

```
R-PHY#show bcm-register wbfft config
WBFFT Trigger Mode    : FreeRunning
Enable UTSC           : TRUE
Sample Num            : 4096
Session ID            : 44201020
PNM Dest IP           : 2001:30:84:0:1:0:66:1
PNM Dest Mac          : c414.3c16.d682

R-PHY#show bcm-register wbfft all 0
WBFFT Start Ctrl    [cc000000]     : 00000001
In Control          [cc000004]     : 00472F04
Out Control         [cc00000c]     : 0000009B
Timing Ctrl         [cc000010]     : 00000003
WBFFT FIRST WDW CF  [cc000024]     : 00000920
WBFFT SCND WDW CF   [cc000028]     : 0000C660
WBFFT MIDL WDW CF   [cc00002c]     : 000061E0
WBFFT MAX CTL       [d0000048]     : 33800000
WBFFT Status        [cc000034]     : 00000000
```

```
WBFFTS In Ctrl     [d0000044]     : 00000100
WBFFT PKT BYTE                    : 004A0000
WBFFT PKT COUNT                   : 00004A00
```

Viavi integration

In this feature, RPD supports non-CCAP defined MAX-HOLD mode for spectrum capture that work with Viavi RCI Agent.

Figure 2: Viavi integration workflow

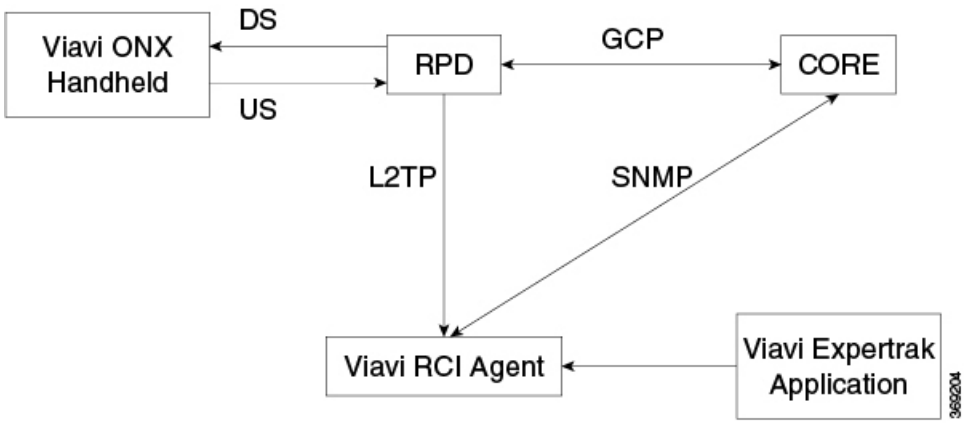

Note

1. Communications with core is implemented using SNMP.
2. Before using this feature, the NDF/NDR feature must be configured on cBR-8.
3. Viavi RCI Agent needs to be installed and configured on the system with Linux/Ubuntu operating system.

To verify if the spectrum capture is enabled, use **show bcm-register wbfft config** command as shown in the following example. The WBFFT Trigger Mode should be Other if this feature is enabled.

```
R-PHY#show bcm-register wbfft config
WBFFT Triger Mode    : Other
Enable UTSC          : True
Samples Num          : 4096
Session ID           : 5f20003c
PNM Dest IP          : 91.7.66.171
PNM Dest Mac         : 0050.5688.eb3d


R-PHY#show bcm-register wbfft all 0
WBFFT Start Ctrl   [cc000000]     : 00000005
In Control         [cc000004]     : 00472F04
Out Control        [cc00000c]     : 00000099
Timing Ctrl        [cc000010]     : 00000003
WBFFT FIRST WDW CF [cc000024]     : 00000920
WBFFT SCND WDW CF  [cc000028]     : 0000C660
WBFFT MIDL WDW CF  [cc00002c]     : 000061E0
WBFFT MAX CTL      [d0000048]     : 39C00000
WBFFT Status       [cc000034]     : 00000080

WBFFTS In Ctrl     [d0000044]     : 00000100
WBFFT PKT BYTE                    : 01557D00
```

```
WBFFT PKT COUNT                  : 0001557D
```

Soft Enforcement

Soft Enforcement of SEC-AUT-DEFROOT requirement is implemented by printing a warning message and posting warning event 2148075527 during user login process when the default password for admin account is in use.

Below is the warning message that shows up when the default password for admin account is used to login RPD:

```
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
Default login credentials detected in use.
In order to enhance the security of your network,
default login credentials must be changed on this RPD.
In a future release, this RPD will disable service
until default credentials are changed.
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
```

The following table lists the warning event that is triggered when the default password for admin account is used to login RPD:

RPD Priority	Event Message	Event ID
Warning	Rpd default login credentials detected in use - please change password immediately	2148075527

TLV100.2.21 support for OOB 55-1 and 55-2 channels

Starting from Cisco Remote PHY for Cisco 1x2 / Compact Shelf RPD Software 6.4, support for TLV 100.2.21 is added in OOB 55-1 and 55-2 channels.

New Software Features in Cisco 1x2 / Compact Shelf RPD Software 6.3

The new software feature for Cisco 1x2 / Compact Shelf RPD Software 6.3 release is:

OOB Support on Compact Shelf

This release enables support for OOB 55-1 and 55-2 functionality for Cisco Remote PHY Compact Shelf 6 x 12 and Cisco Remote PHY Compact Shelf 3 x 6.

New Software Features in Cisco 1x2 / Compact Shelf RPD Software 6.2

The new software features for Cisco 1x2 / Compact Shelf RPD Software 6.2 release are:

SFP support for 1RU shelf

The following SFPs are supported:

- SFP-10G-AOC3M(10-2847-01)
- SFP-10G-LR-S(10-3107-01)
- DWDM-SFP10G-C(10-3036-01)

You can change DWDM-SFP10G-C’s Wavelength by using the RPD config CLI:

```
R-PHY(config)#sfp itu [port_no] [channel_no]
```

For more information on the mapping relationship between channel_no with wavelength, go through Cisco 10GBASE Dense Wavelength-Division Multiplexing SFP+ Modules Data Sheet.

Read count TLV 100.21/22/23/17 support

Read count TLV 100.21 HostResourcesSystem, TLV 100.22 HostResourcesStorage, TLV 100.23 HostResourcesSwRun and TLV 100.17 IpDefaultRouter is supported in RPD V6.2 Release.

Read count TLV 74/75 support

Read count TLV 100.74 DsOob551Perf and TLV 100.75 DsOob552Perf is supported in RPD V6.2 Release

Analog Tx/Rx modules alarm threshold setting

You can set Analog Tx/Rx modules alarm threshold by TLV 21 VendorSpecificExtension sub TLV 21.13 AnalogTxPower and TLV 21.14 AnalogRxPower.

- TLV definition:

Table 2: AnalogTxPower Object

Attribute Name	Type	Access	Type constraints	Units	TLV Type
TxIndex	UnsignedByte	Key			21.13.1
MajorLowTH	UnsignedShort	Write-only			21.13.2
MinorLowTH	UnsignedShort	Write-only			21.13.3
NormalTH	UnsignedShort	Write-only			21.13.4
MinorHighTH	UnsignedShort	Write-only			21.13.5

Table 3: AnalogRxPower Object

Attribute Name	Type	Access	Type constraints	Units	TLV Type
RxIndex	UnsignedByte	Key			21.14.1
MajorLowTH	UnsignedShort	Write-only			21.14.2
MinorLowTH	UnsignedShort	Write-only			21.14.3
NormalTH	UnsignedShort	Write-only			21.14.4
MinorHighTH	UnsignedShort	Write-only			21.14.5

- You can verify Analog Tx/Rx modules alarm threshold setting on RPD by below CLI:

```
R-PHY#show environment table 49
sensor_id: 49
name: TX1_OPT_PWR_MON
type: power
unit: mW
state            low            high
```

```
-------------------------------------
MAJOR-LOW        N/A            0.00
MINOR-LOW        0.00           0.49
NORMAL           0.50           0.99
MINOR-HIGH       1.00           1.49
MAJOR-HIGH       1.50           N/A
poll_interval: 2
sensor_state: N/A
sensor_value: N/A

Configured Values (Currently Used Values):

state            low            high
-------------------------------------
MAJOR-LOW        N/A            0.00
MINOR-LOW        0.00           0.49
NORMAL           0.50           0.99
MINOR-HIGH       1.00           1.49
MAJOR-HIGH       1.50           N/A
sensor_state: N/A
R-PHY#show environment table 50
sensor_id: 50
name: RX1_OPT_PWR_MON
type: power
unit: mW
state            low            high
-------------------------------------
MAJOR-LOW        N/A            0.00
MINOR-LOW        0.00           0.49
NORMAL           0.50           1.49
MINOR-HIGH       1.50           1.99
MAJOR-HIGH       2.00           N/A
poll_interval: 2
sensor_state: N/A
sensor_value: N/A

Configured Values (Currently Used Values):
state            low            high
-------------------------------------
MAJOR-LOW        N/A            0.00
MINOR-LOW        0.00           0.49
NORMAL           0.50           1.49
MINOR-HIGH       1.50           1.99
MAJOR-HIGH       2.00           N/A
sensor_state: N/A
```

New Software Features in Cisco 1x2 / Compact Shelf RPD Software 6.1

The new software features for Cisco 1x2 / Compact Shelf RPD Software 6.1 release are:

Disable LLDP by TLV

In Cisco 1x2 / Compact Shelf RPD Software 6.1, LldpEnable TLV is introduced to enable or disable the LLDP protocol. The RPD which supports this attribute MUST preserve the value of this attribute in it non-volatile configuration store.

Value is defined as the boolean value to enable/disable LLDP operation on the RPD. The values are:

- 0 – LLDP is disabled.
- 1 – LLDP is enabled.

The selection of a default value is left to vendor's choice.

New added events

New events are supported for DHCPv6 and supported networks.

Table 4: Supported events for DHCPv6

Process	Sub-Process	RPD Priority	Event Message	Message Notes and Detail	Error Code Set	Event ID
DHCP		Error	DHCP RENEW sent - No response for <P1><P2><TAGS>	• P1= IPv4 or IPv6 • P2 = RPD interface number (EnetPortIndex)	B703.0	66070300
DHCP		Error	DHCP REBIND sent - No response for <P1><P2><TAGS>	• P1=IPv4 or IPv6 • P2 = RPD interface number (EnetPortIndex)	B703.1	66070301
DHCP		Error	DHCP RENEW WARNING - Field invalid in response <P1> option field<P2><TAGS>	• P1=v4 or IPv6 • P2 = RPD interface number (EnetPortIndex)	B703.2	66070302
DHCP		Critical	DHCP RENEW FAILED - Critical field invalid in response<P1><TAGS>	P1 = RPD interface number (EnetPortIndex)	B703.3	66070303
DHCP		Error	DHCP REBIND WARNING - Field invalid in response<P1><TAGS>	P1 = RPD interface number (EnetPortIndex)	B703.4	66070304
DHCP		Critical	DHCP REBIND FAILED - Critical field invalid in response<P1><TAGS>	P1 = RPD interface number (EnetPortIndex)	B703.5	66070305

Table 5: Supported network events

Process	Sub-Process	RPD Priority	Event Message	Message Notes and Detail	Error Code Set	Event ID
Init	Network Authentication	Error	Network Authentication Error; Descr: <P1>; <TAGS>;	P1 = Authentication error description	B701.0	66070104
Init	Network Authentication	Notice	Network Authentication Success; <TAGS>;		B701.4	66070105
Connectivity	CCAP Core	Notice	Successfully connected to Core; Core ID: <P1>; <TAGS>;	P1 = CCAP Core ID to which the connection was completed	B702.19	66070219
Connectivity	CCAP Core	Warning	Connection lost - Auxiliary CCAP Core. Reconnect attempted; Core ID: <P1>; <TAGS>;	P1 = Auxiliary CCAP Core ID to which the connection was lost.	B702.20	66070220
Connectivity	CCAP Core	Warning	Connection lost – Principal CCAP Core. Reconnect attempted; Core ID: <P1>; <TAGS>;	P1 = Principal CCAP Core ID to which the connection was lost.	B702.21	66070221
Connectivity	CCAP Core	Notice	Successfully reconnected to Core; Core ID: <P1>; <TAGS>;	P1 = CCAP Core ID to which the connection was completed	B702.22	66070222
Init	IPv4 Address Acquisition	Notice	Successfully obtained IPv4 address; <TAGS>;		B703.24	66070324
Init	IPv6 Address Acquisition	Notice	Successfully obtained IPv6 address; <TAGS>;		B703.25	66070325
Init	TOD	Notice	Successfully obtained ToD; <TAGS>;		B703.26	66070326
Init	Config	Error	Received unknown RCP message from Core; Core ID: <P1>; Descr: <P2>; <TAGS>;	P1 = CCAP Core ID P2 = Error description	B703.27	66070327

Process	Sub-Process	RPD Priority	Event Message	Message Notes and Detail	Error Code Set	Event ID
Init	Config	Error	Received RCP message from Core, not allowed in current state; Message: <P1>; Core ID: <P2>; State: <P3>; <TAGS>;	P1 = RCP message P2 = CCAP Core ID P3 = Current TopLevelRPDState	B703.28	66070328
Init	IRA	Error	No IRA received after Notify message to Core; Core IP: <P1>; <TAGS>;	P1 = CCAP Core IP address	B703.29	66070329
Init	IRA	Error	No REX received after IRA from Core; Core ID: <P1>; Core IP: <P2>; <TAGS>;	P1 = CCAP Core ID P2 = CCAP Core IP address	B703.30	66070330
Init	Initialization	Critical	Failure occurred during local RPD initialization process. RPD reset; Descr: <P1>; <TAGS>;	P1 is optional P1 = Vendor Specific Event or Text	B708.0	66070800

Factory reset support

Starting from Cisco 1x2 / Compact Shelf RPD Software 6.1, factory reset and NVRAM reset via TLV and CLI are supported.

- factoryReset: The device restores the factory configuration and performs a hard reset. You can perform a factoryReset by running the following:

```
R-PHY>enable
R-PHY#reboot factory-reset
```

- nvReset: The device clears non-volatile configuration and performs a hard reset. You can perform a nvReset by running the following:

```
R-PHY>enable
R-PHY#reboot nvreset
```

Support for Narrowband Digital Forward And Narrowband Digital Return

Narrowband Digital Forward (NDF) refers to the digitizing of an analog portion of the downstream spectrum at the headend, sending the digital samples as payload in [DEPI] packets to the RPD, and then re-creating the original analog stream at the RPD. NDF supports services such as FM Broadcast, DAB+ Broadcast, and OOB signals for Forward Sweep, DS Leakage, and Element management.

Narrowband Digital Return (NDR) refers to the digitizing of an analog portion of the upstream spectrum at the RPD, sending the digital samples as payload in [R-UEPI] packets to the CMTS, and then re-creating the

original analog stream at the headend. NDR supports legacy OOB signals for Reverse Sweep, Return Path Monitoring, FSK based HMS, and other FSK based telemetry signals.

The following commands are introduced on the Cisco 1x2 / Compact Shelf RPD Software 6.1 release:

- **show downstream oob configuration ndf** – Provides the NDF configuration in RPD for each NDF channel configured. It displays PHY information for the NDF session.
- **show upstream oob configuration ndr** – Provides the NDR configuration in RPD for each of NDR channel configured. It displays PHY and L2TP information.
- **show downstream oob counter ndf** – Provides the NDF packet counter from BCM for each NDF channel configured. It is a clear on read counter.
- **show upstream oob counter ndr** – Provides the internal mapping of RPD channels and its corresponding channel configured in core.
- **show oob fpga ndf-status** – Provides the NDF FPGA status for each NDF channel configured.
- **show oob ds-mapping** – Provides the internal mapping of RPD channels and its corresponding channel configured in the core.

For more information, see the Cisco cBR Series Converged Broadband Routers Quality of Services Configuration Guide for Cisco IOS XE Gibraltar 16.10.x and the Cisco CMTS Cable Command Reference Guide.

Modified Software Features in Cisco 1x2 / Compact Shelf RPD Software 6.7

There are no modified software features for Cisco 1x2 / Compact Shelf RPD Software 6.7 release.

Integrated Software Features in Cisco 1x2 / Compact Shelf RPD Software 6.7

There are no new integrated software features for Cisco 1x2 / Compact Shelf RPD Software 6.7 release.

New Hardware Features in Cisco 1x2 / Compact Shelf RPD Software 6.7

There are no new hardware features for Cisco 1x2 / Compact Shelf RPD Software 6.7 release.

MIBs

To locate and download MIBs for selected platforms, Cisco IOS XE releases, and feature sets, use Cisco MIB Locator found at the following URL:

https://mibs.cloudapps.cisco.com/ITDIT/MIBS/servlet/index

MIBs in Cisco 1x2 / Compact Shelf RPD Software 6.7

There are no new MIBs in Cisco 1x2 / Compact Shelf RPD Software 6.7.

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, using the Cisco Bug Search Tool (BST), submitting a service request, and gathering additional information, see What's New in Cisco Product Documentation.

To receive new and revised Cisco technical content directly to your desktop, you can subscribe to the What's New in Cisco Product Documentation RSS feed. The RSS feeds are a free service.