CISCO

Revised: December 11, 2025

Overview of HF6100-64ED

Overview HF6100-64ED

Cisco 6000 series switches are cloud-managed network fabric switches. These switches are part of the Cisco Nexus Hyperfabric fabric-as-a-service (FaaS) solution, and allows you to design and build a physical network.

The Cisco Nexus Hyperfabric FaaS is an automated and cloud-managed scalable data center fabric solution that simplifies network deployment and operations by offering networking as a managed service. The FaaS solution enables organizations to design, deploy, manage, and scale multiple data center network fabrics with ease.

The HF6100-64ED switch consists of

- 2 rack unit (RU) size

- 64 x 800G OSFP800 ports

- 1 x QSFP-28 port

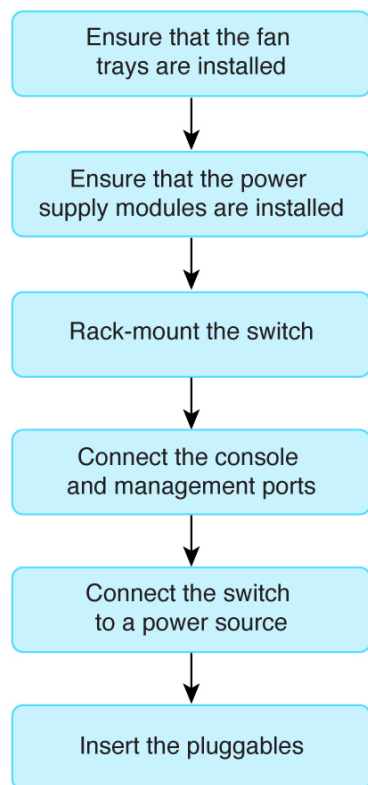- 2 power supply slots

- 4 fan trays

The Cisco HF6100-64ED operates on the Cisco Silicon One G200 network processor, and provides 51.2 Tbps of network bandwidth. The Cisco HF6100-64ED is a fixed port, high density, two rack unit form-factor switch designed for hyperscale data centers. A hyperscale data center is a very large-scale data center that supports massive computing and data storage needs with extreme scalability and efficiency.

The Cisco HF6100-64ED supports 64 x 800G OSFP800 ports. This switch supports Cisco-qualified open-source network operating systems, such as SONiC (Software for Open Networking in the Cloud).

Installation workflow

The illustration describes the installation workflow.

```
┌─────────────────────────┐
│   Ensure that the fan   │
│    trays are installed  │
└─────────────────────────┘
             │
             ▼
┌─────────────────────────┐
│   Ensure that the power │
│ supply modules are installed │
└─────────────────────────┘
             │
             ▼
┌─────────────────────────┐
│   Rack-mount the switch │
└─────────────────────────┘
             │
             ▼
┌─────────────────────────┐
│   Connect the console   │
│  and management ports   │
└─────────────────────────┘
             │
             ▼
┌─────────────────────────┐
│   Connect the switch    │
│    to a power source    │
└─────────────────────────┘
             │
             ▼
┌─────────────────────────┐
│   Insert the pluggables │
└─────────────────────────┘
```

Console speed

The console speed is 115200 baud, 8 data bits, 1 stop bit and no parity.

Front panel

The front panel of HF6100-64ED supports

- QSFP28 ports

- 2 X 32 OSFP800 ports

- LEDs

- RJ-45 console port

- RJ-45 Ethernet management port

This illustrations displays the front panel of HF6100-64ED with its components.
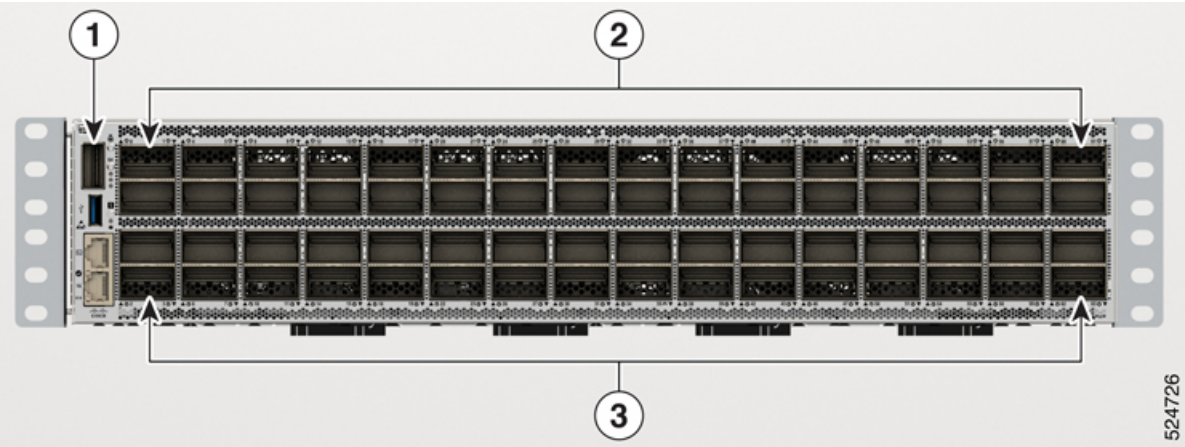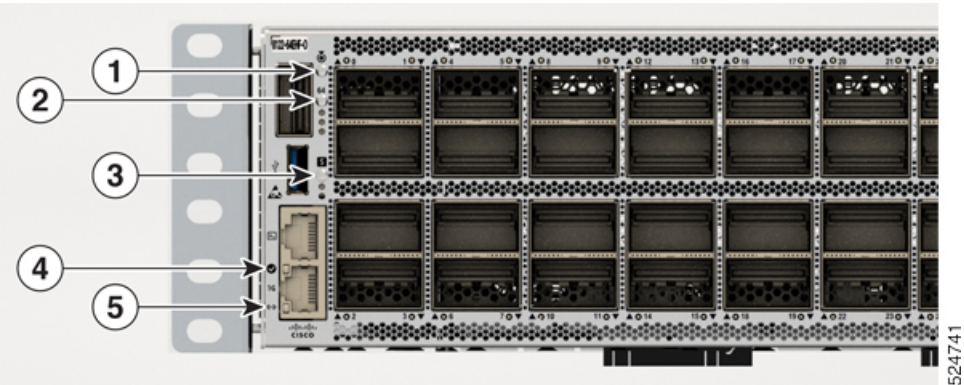
Figure 2: Front panel of HF6100-64ED

Table 1: Front panel of HF6100-64ED

1	QSFP28 port
2	32 X OSFP800 ports
3	32 X OSFP800 ports

LEDs

You can use the switch light-emitting diodes (LEDs) to monitor switch activity and its performance.

Figure 3: Chassis LEDs

1	Beacon LED
2	QSFP28 port status LED
3	Status LED
4	RJ-45 port LED
5	Activity LED: displays the activity of the ports

Beacon LEDs

The unique device identifier (UID) and the beacon LED can be turned on by the administrator to indicate that the switch needs attention. It helps the administrator identify the switch. The beacon can be enabled by pressing the UID button on the switch front panel.

Port LEDs

Each Ethernet module slot has a port LED. These port LEDs, as a group or individually, display information about the switch and about the individual ports. The port mode determines the type of information shown by the port LEDs.

To select or change a mode, press the Mode button until the desired mode is highlighted. When you change port modes, the meanings of the port LED colors also change.

This table describes the port LEDs.

Color	Description
Green	Port is operationally up.
Off	No link, or port was administratively shut down.

RJ-45 Ethernet management port LEDs

This table describes the management port LEDs.

Green	Yellow	Description
Off	On	Link up, but no activity
Off	Blink	Link up and active
On	On	Link up and active
On	Off	Link up, but no activity
Blink	Off	Link up, but no activity
Off	Off	Link down.

RJ-45 console port LEDs

This table describes the RJ-45 console port LEDs.

Green	Yellow	Description
Off	On	Link up, but no activity
Off	Blink	Link up and active
On	On	Link up and active
On	Off	Link up, but no activity
Blink	Off	Link up, but no activity

Green	Yellow	Description
Off	Off	Link down.

Status LEDs

This table explains the status LEDs.

Color	Description
Green	Switch is active.
Flashing red	Flashing red can be due to • critical process not running. • temperature or fan speed is out-of-range, or • power supply modules or fans are not present.

Rear panel

The rear panel of HF6100-64ED supports

• Fan tray with four fans

• Two power supply modules

This illustration shows the rear panel of HF6100-64Ed with its components.
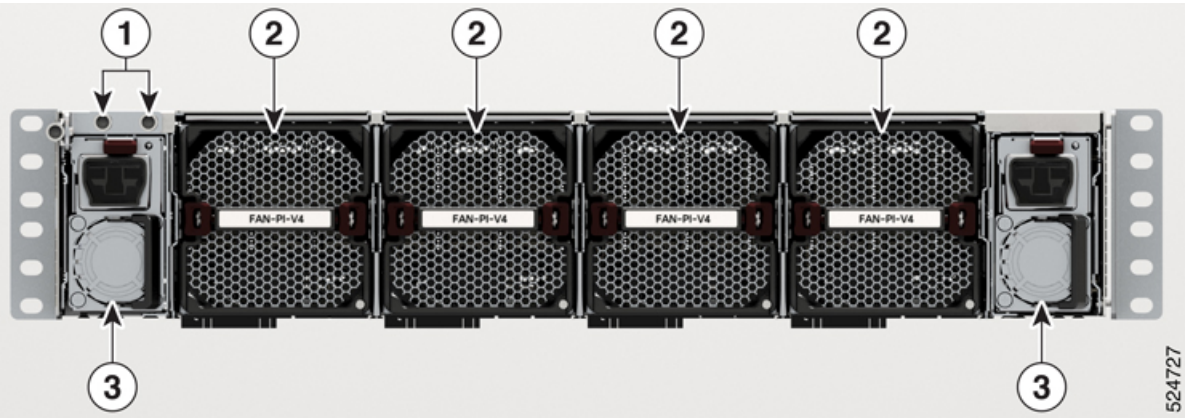
Figure 4: Rear panel of HF6100-64ED

Table 2: Rear panel of HF6100-64ED

1	Ground lugs
2	Fans (1 to 4 from left to right)
3	Power supply modules, PSU0 (left) and PSU1 (right)

Power supply units

An internal power supply module converts external electrical power (either AC or DC) into the precise DC voltages required to operate the switch's internal components.

Cisco HF-6100-64ED has two internal power supply module slots. The PSU1 is on the left side of the rear panel and PSU2 is at the right side of the rear panel.

You can use one or two power supply modules All empty power supply module slots must be filled with a blank module. By default, these switches ship with only one power supply module, and you can purchase more power supply modules when you order the switch or at a later date.

Fan modules

HF6100-64ED has four fan modules at the rear of the switch. The fans are hot-swappable and numbered from left to right.

A powered-on switch should always have more than one operational fan. The switch can operate with three operational fans and one nonfunctional fan, but the failed fan should be replaced as soon as possible to avoid a service interruption due to a second fan fault. A switch with one or more fans failed or removed will operate with fans at a faster speed, producing increased sound.

📄 **Note**

The switch requires three fans for proper cooling.

📄 **Note**

Sharp edges on the fan module can cause serious injury. Keep fingers clear.

Fan LEDs

This table describes the fan LEDs.

Table 3: Fan LED color and status

Color	Status
Amber	Fans are inserted into the device and are waiting to become active.
Flashing amber	The specific fan tray is not working or failed.
Flashing blue	The operator has activated this LED to identify the specific fan tray.
Green	Fans are operating.
Off	Fan tray is not receiving power.

Ports

This section describes the various ports on Cisco HF6100-64ED

OSPF800 ports

Octal Small Form-factor Pluggable 800 (OSFP800) ports use the OSFP form factor, which is larger than QSFP and QSFP-DD modules, and allows better thermal dissipation and supports 800G Ethernet speeds. Each OSFP800 port can handle 800 Gbps.

OSFP800 ports comply with IEEE 802.3ck and IEEE 802.3cu-2021 standards for 800G Ethernet, using Pulse Amplitude Modulation with 4 levels (PAM4) modulation and Forward Error Correction (FEC) to achieve high data integrity and performance. PAM4 is a high-speed signal modulation technique that encodes two bits of data per symbol by using four distinct amplitude levels in the signal waveform.

OSFP800 ports on Cisco devices support a range of optical modules, including OSFP-800G-DR8 modules that can transmit data up to 500 meters over single-mode fiber.

OSFP800 ports enable seamless connectivity between devices and support next-generation network speeds with efficient power consumption and cooling.

QSFP28 ports

Quad Small Form-factor Pluggable 28 (QSFP28) ports are high-speed network interface ports that use the QSFP28 transceiver modules to deliver data rates of up to 100 Gbps per port. These ports are widely used in data centers and enterprise networks to provide dense, flexible, and high-bandwidth connectivity.

QSFP28 ports support 100 Gigabit Ethernet speeds, and also support lower speeds such as 40 Gbps.

RJ-45 Ethernet management port

The management ports connect the switch to a PC running Microsoft Windows or to a terminal server.

The RJ-45 Ethernet management port is a dedicated network interface, used for out-of-band management of the Cisco device. Ethernet management port connection uses a standard RJ-45 crossover or straight-through cable.

RJ-45 console port

The RJ-45 console port is a serial communication port used for device management and configuration. It allows direct access to the Cisco device's CLI for initial setup, troubleshooting, or recovery when network access is unavailable. The console port transmits serial data rather than Ethernet traffic.

The RJ-45 console port uses the optional RJ-45-to-DB8 female cable physical connector. The USB console interface speeds are the same as the RJ-45 console interface speeds.

USB ports

USB ports provide access to external USB flash devices (also known as thumb drives or USB keys). These ports support flash drives with capacities from 128 MB to 256 GB.

The USB console port

- Serves as a serial console interface for device management.

- Connects a computer or terminal directly to the Cisco device for configuration purposes.

- Enables terminal communication to configure routers, switches, firewalls, or other Cisco network devices.

You can use the flash drive with standard file system access such as read, write, erase, and copy, and the ability to format the flash device with a File Allocation Table 16 (FAT16) file system. FAT16 file format supports up to 2GB maximum volume.

USB ports enable you to automatically upgrade the internal flash with the USB drive's configuration and image for emergency switch recovery using USB auto-upgrade. This feature checks the internal flash for a bootable image and configuration and if either image or the configuration is not available, then the USB drive is checked for boot images and configuration. If the boot image and configuration are available, these are copied to the flash for a reboot.