



Real-Time Resolution for IPsec Tunnel Peer

Last Updated: July 21, 2011

After a user specifies a host name (instead of an IP address) for remote IP Security (IPsec) peer, the Real-Time Resolution for IPsec Tunnel Peer feature allows the host name to be domain name server (DNS) resolved before the router establishes the IPsec tunnel. Thus, the router can immediately discover whether the IP address of the peer has changed.

- [Finding Feature Information, page 1](#)
- [Restrictions for Real-Time Resolution for IPsec Tunnel Peer, page 1](#)
- [Information About Real-Time Resolution for IPsec Tunnel Peer, page 2](#)
- [How to Configure Real-Time Resolution, page 2](#)
- [Configuration Examples for Real-Time Resolution, page 4](#)
- [Additional References, page 5](#)
- [Feature Information for Real-Time Resolution for IPsec Tunnel Peer, page 7](#)

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the Feature Information Table at the end of this document.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Restrictions for Real-Time Resolution for IPsec Tunnel Peer

Secure DNS Requirement

It is recommended that you use this feature only with secure DNS and when the DNS responses can be authenticated. Otherwise, an attacker can spoof or forge DNS responses and have access to Internet Key

Exchange (IKE) authentication data, such as a certificate. If an attacker has a certificate that is trusted by the initiating host, the attacker can successfully establish Phase 1 IKE security association (SA), or the attacker can try to guess the preshared key that is shared between the initiator and the actual responder.

DNS Initiator

DNS names resolution for remote IPsec peers will work only if they are used as an initiator. The first packet that is to be encrypted will trigger a DNS lookup; after the DNS lookup is complete, subsequent packets will trigger IKE.

Information About Real-Time Resolution for IPsec Tunnel Peer

- [Real-Time Resolution Via Secure DNS, page 2](#)

Real-Time Resolution Via Secure DNS

When specifying the host name of a remote IPsec peer via the **set peer** command, you can also issue the **dynamic** keyword, which defers DNS resolution of the host name until right before the IPsec tunnel has been established. Deferring resolution enables the Cisco IOS software to detect whether the IP address of the remote IPsec peer has changed. Thus, the software can contact the peer at the new IP address.

If the **dynamic** keyword is not issued, the host name is resolved immediately after it is specified. So, the software cannot detect an IP address change and, therefore, attempts to connect to the IP address that it previously resolved.

DNS resolution assures users that their established IPsec tunnel is secure and authenticated.

How to Configure Real-Time Resolution

- [Configuring Real-Time Resolution for IPsec Peers, page 2](#)

Configuring Real-Time Resolution for IPsec Peers

Use this task to configure a router to perform real-time DNS resolution with a remote IPsec peer; that is, the host name of peer is resolved through a DNS lookup right before the router establishes a connection (an IPsec tunnel) with the peer.

Before creating a crypto map, you should perform the following tasks:

- Define Internet Security Association Key Management Protocol (ISAKMP) policies.
- Define IPsec transform sets.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **crypto map** *map-name seq-num ipsec-isakmp*
4. **match address** *access-list-id*
5. **set peer** {*host-name [dynamic] [default] | ip-address [default]* }
6. **set transform-set** *transform-set-name1 [transform-set-name2...transform-set-name6]*

DETAILED STEPS

Command or Action	Purpose
<p>Step 1 enable</p> <p>Example:</p> <pre>Router> enable</pre>	<p>Enables privileged EXEC mode.</p> <ul style="list-style-type: none"> • Enter your password if prompted.
<p>Step 2 configure terminal</p> <p>Example:</p> <pre>Router# configure terminal</pre>	<p>Enters global configuration mode.</p>
<p>Step 3 crypto map <i>map-name seq-num ipsec-isakmp</i></p> <p>Example:</p> <pre>Router(config)# crypto map secure_b 10 ipsec-isakmp</pre>	<p>Specifies the crypto map entry to create (or modify) and enters crypto map configuration mode.</p>
<p>Step 4 match address <i>access-list-id</i></p> <p>Example:</p> <pre>Router(config-crypto-m)# match address 140</pre>	<p>Names an extended access list.</p> <p>This access list determines which traffic should be protected by IPsec and which traffic should not be protected by IPsec in the context of this crypto map entry.</p>

Command or Action	Purpose
<p>Step 5 <code>set peer {host-name [dynamic] [default] ip-address [default] }</code></p> <p>Example:</p> <pre>Router(config-crypto-m)# set peer b.cisco.com dynamic</pre>	<p>Specifies a remote IPsec peer.</p> <p>This is the peer to which IPsec-protected traffic can be forwarded.</p> <ul style="list-style-type: none"> The <i>host-name</i> argument specifies the IPsec peer by its hostname. This is the peer's hostname concatenated with its domain name (for example, myhost.example.com). The optional dynamic keyword allows the hostname of the IPsec peer to be resolved through a domain name server (DNS) lookup immediately before the router establishes the IPsec tunnel. The optional default keyword designates that the first peer is the default peer if there are multiple IPsec peers. The <i>ip-address</i> argument specifies the IPsec peer by its IP address. <p>Repeat this step if there are multiple remote peers.</p>
<p>Step 6 <code>set transform-set transform-set-name1 [transform-set-name2...transform-set-name6]</code></p> <p>Example:</p> <pre>Router(config-crypto-m)# set transform-set myset</pre>	<p>Specifies which transform sets are allowed for this crypto map entry. List multiple transform sets in order of priority (highest priority first).</p>

- [Troubleshooting Tips, page 4](#)
- [What to Do Next, page 4](#)

Troubleshooting Tips

To display crypto map configuration information, use the **show crypto map** command.

What to Do Next

You need to apply a crypto map set to each interface through which IPsec traffic will flow. Applying the crypto map set to an interface instructs the router to evaluate all the interface's traffic against the crypto map set and to use the specified policy during connection or security association (SA) negotiation on behalf of traffic to be protected by crypto.


Configuration Examples for Real-Time Resolution

- [Configuring Real-Time Resolution for an IPsec Peer Example, page 5](#)

Configuring Real-Time Resolution for an IPsec Peer Example

The figure below and the following example illustrate how to create a crypto map that configures the host name of a remote IPsec peer to DNS resolved through a DNS lookup right before the Cisco IOS software attempts to establish a connection with that peer.

Figure 1

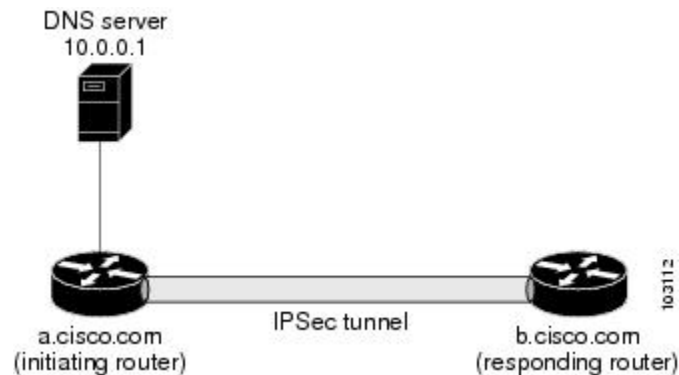

```
! Configure the initiating router.
hostname a.cisco.com
ip domain name cisco.com
ip name server 10.0.0.1
!
crypto map secure_b 10 ipsec-isakmp
  match address 140
  set peer b.cisco.com dynamic
  set transform-set xset
interface serial1
  ip address 30.0.0.1
  crypto map secure_b
access-list 140 permit ...
!
! Configure the responding router (the remote IPsec peer).
hostname b.cisco.com
!
crypto map secure_a 10 ipsec-isakmp
  match address 150
  set peer 30.0.0.1
  set transform-set
interface serial0/1
  ip address 40.0.0.1
  crypto map secure_a
access-list 150 ...
! DNS server configuration
b.cisco.com    40.0.0.1    # the address of serial0/1 of b.cisco.com
```

Additional References

Related Documents

Related Topic	Document Title
Crypto maps	“Configuring Security for VPNs with IPsec” module in the <i>Security for VPNs with IPsec Configuration Guide</i>
ISAKMP policies	“Configuring Internet Key Exchange for IPsec VPNs” module in the <i>Internet Key Exchange for IPsec VPNs Configuration Guide</i>
IPsec and IKE configuration commands	<i>Cisco IOS Security Command Reference</i>

Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature	--

MIBs

MIBs	MIBs Link
No new or modified MIBs are supported by this feature, and support for existing MIBs has not been modified by this feature.	To locate and download MIBs for selected platforms, Cisco IOS XE software releases, and feature sets, use Cisco MIB Locator found at the following URL: http://www.cisco.com/go/mibs

RFCs

RFCs	Title
No new or modified RFCs are supported by this feature, and support for existing RFCs has not been modified by this feature.	--

Technical Assistance

Description	Link
<p>The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.</p> <p>To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.</p> <p>Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.</p>	<p>http://www.cisco.com/techsupport</p>

Feature Information for Real-Time Resolution for IPsec Tunnel Peer

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Table 1 **Feature Information for Real-Time Resolution for IPsec Tunnel Peer**

Feature Name	Releases	Feature Information
Real-Time Resolution for IPsec Tunnel Peer	11.2 12.3(4)T 12.2(18)SXD 12.3(14)T 12.2(33)SRA	<p>After a user specifies a host name (instead of an IP address) for remote IP Security (IPsec) peer, the Real-Time Resolution for IPsec Tunnel Peer feature allows the host name to be domain name server (DNS) resolved before the router establishes the IPsec tunnel. Thus, the router can immediately discover whether the IP address of the peer has changed.</p> <p>This feature was introduced in Cisco IOS Release 11.2.</p> <p>In Cisco IOS Release 12.3(4)T, the dynamic keyword was added to the set peer (IPsec) command.</p> <p>In Cisco IOS Release 12.3(14)T, the dynamic keyword was added to the set peer (IPsec) command.</p> <p>The following command was introduced or modified: set peer (IPsec) .</p>

Cisco and the Cisco Logo are trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at www.cisco.com/go/trademarks. Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1005R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.