



Telemetry Configuration Guide for Cisco 8000 Series Routers, IOS XR Release 7.8.x

First Published: 2022-11-30

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883



CONTENTS

CHAPTER 1	New and Changed Feature Information	1
	New and Changed Telemetry Features	1

CHAPTER 2	YANG Data Models for Telemetry Features	3
	Using YANG Data Models	3

CHAPTER 3	Scale-Up Your Network Monitoring Strategy Using Telemetry	5
	Benefits of Shifting Network Monitoring from Pull Models to Telemetry Push Model	7
	Review Mechanisms to Stream Telemetry Data from a Router to a Destination	7
	Cadence-driven Telemetry	8
	Event-driven Telemetry	8
	Learn About the Elements that Enable Streaming Telemetry Data	9
	Sensor Path	9
	Subscription	12
	Encoder	12
	Transport	13
	gRPC Network Management Interface	13
	gRPC Network Operations Interface	15
	TLS Authentication	15
	Filter Telemetry Data Using Regex Key	16
	Explore the Methods to Establish a Telemetry Session	17
	Dial-Out Mode	17
	Dial-In Mode	17
	Identify the Telemetry Session Suitable for Your Network	17

CHAPTER 4	Establish a Model-Driven Telemetry Session from a Router to a Collector	19
------------------	--	-----------

Monitor CPU Utilization Using Telemetry Data to Plan Network Infrastructure 20

 Define a Subscription to Stream Data from Router to Receiver 21

 Verify Deployment of the Subscription 24

 Operate on Telemetry Data for In-depth Analysis of the Network 25

CHAPTER 5

Establish a Model-Driven Telemetry Session from a Collector to a Router 29

Monitor Network Parameters Using Telemetry Data for Proactive Analysis 30

 Define a Subscription to Stream Data from Router to Receiver 31

 Verify Deployment of the Subscription 32

 Operate on Telemetry Data for In-depth Analysis of the Network 33

CHAPTER 6

Build Intelligence on the Router Using AI-Driven Telemetry 37

Key Components 38

Processing Telemetry Data on the Router to Analyze Traffic Changes 39

 Define a Subscription to Stream ADT Events from Router to Receiver 40

 Verify Deployment of the Subscription 43

 Operate on Telemetry Data for In-Depth Analysis of the Network 46

CHAPTER 7

Enhancements to Streaming Telemetry 49

Hardware Timestamp 49

Stream QoS Statistics Telemetry Data 51

 Verification 53

Enhanced Syslog Notifications for Unresolved Line Card Forwarding Paths 56

Target-Defined Mode for Cached Generic Counters Data 57

gNMI Dial-Out via Tunnel Service 60

Stream Telemetry Data about PBR Decapsulation Statistics 63



CHAPTER 1

New and Changed Feature Information

This section lists all the new and changed features for the *Telemetry Configuration Guide for Cisco 8000 Series Routers*.

- [New and Changed Telemetry Features, on page 1](#)

New and Changed Telemetry Features

Feature	Description	Changed in Release
None	None	None



CHAPTER 2

YANG Data Models for Telemetry Features

This chapter provides information about the YANG data models for Telemetry features.

- [Using YANG Data Models, on page 3](#)

Using YANG Data Models

Cisco IOS XR supports a programmatic way of configuring and collecting operational data of a network device using YANG data models. Although configurations using CLIs are easier and human-readable, automating the configuration using model-driven programmability results in scalability.

The data models are available in the release image, and are also published in the [Github](#) repository. Navigate to the release folder of interest to view the list of supported data models and their definitions. Each data model defines a complete and cohesive model, or augments an existing data model with additional XPath. To view a comprehensive list of the data models supported in a release, navigate to the **Available-Content.md** file in the repository.

You can also view the data model definitions using the [YANG Data Models Navigator](#) tool. This GUI-based and easy-to-use tool helps you explore the nuances of the data model and view the dependencies between various containers in the model. You can view the list of models supported across Cisco IOS XR releases and platforms, locate a specific model, view the containers and their respective lists, leaves, and leaf lists presented visually in a tree structure. This visual tree form helps you get insights into nodes that can help you automate your network.

To get started with using the data models, see the *Programmability Configuration Guide*.



CHAPTER 3

Scale-Up Your Network Monitoring Strategy Using Telemetry

Are you monitoring your network using traditional polling methods such as SNMP, Syslog, and CLI? If yes, does the data that you extract from your network help you answer these questions?

- What percentage of the network bandwidth does the network traffic currently consume?
- Do all the links in the network run at a hundred percent utilization rate?
- If an unmanned router fails, is the network operator notified in real time about the issue and its related consequences?
- Is the CPU over- or under-utilized?
- Can the efficiency of the network be calculated based on traffic and data loss?
- What are the possible performance issues that cause traffic loss or network latency?
- How do you proactively prevent issues that may arise? Does the data support the study of network patterns in real time?


These traditional methods use a *pull* model to request information at regular intervals. The data that you collect may help you to efficiently monitor your network of a manageable size. However, as your network grows in complexity and scale, the data that you poll may be insufficient for efficient and effective monitoring. Additionally, the polling methods are resource-intensive, and network operators face information gaps in the data that they collect. With the pull model, the network device (the server) sends data only when the data collector (the client) requests it. Initiating such requests requires continual manual intervention. This manual intervention makes this model unsuitable, and limits automation and the ability to scale. It inhibits the visibility of the network and therefore provides inefficient control of the network. You need monitoring strategy that adds resiliency and stability to your network.

Telemetry does just that. Telemetry uses a *push* model that automatically streams data from a network device. Instead of a collector requesting data at periodic intervals, the network device streams operational data in real time.

Telemetry focuses on the power of scale, speed, and automation. With the power of flexibility, you can select data of interest from the routers and transmit it in a structured format to remote management stations for monitoring. Using the finer granularity and higher frequency of data available through telemetry, DevOps (development and operations) engineers in your organization can quickly locate and investigate issues as soon as they occur. They can, thus, collaborate to monitor and have better control over the network.

The following image shows the comparative benefits of streaming telemetry data using the telemetry push model over traditional pull models. The pull models create resource bottlenecks that prevent retrieving valuable operational data from the router. On the other hand, the push model is designed to remove such bottlenecks and deliver data efficiently.

Figure 1: Comparison Between Traditional Pull Models and Telemetry Push Model

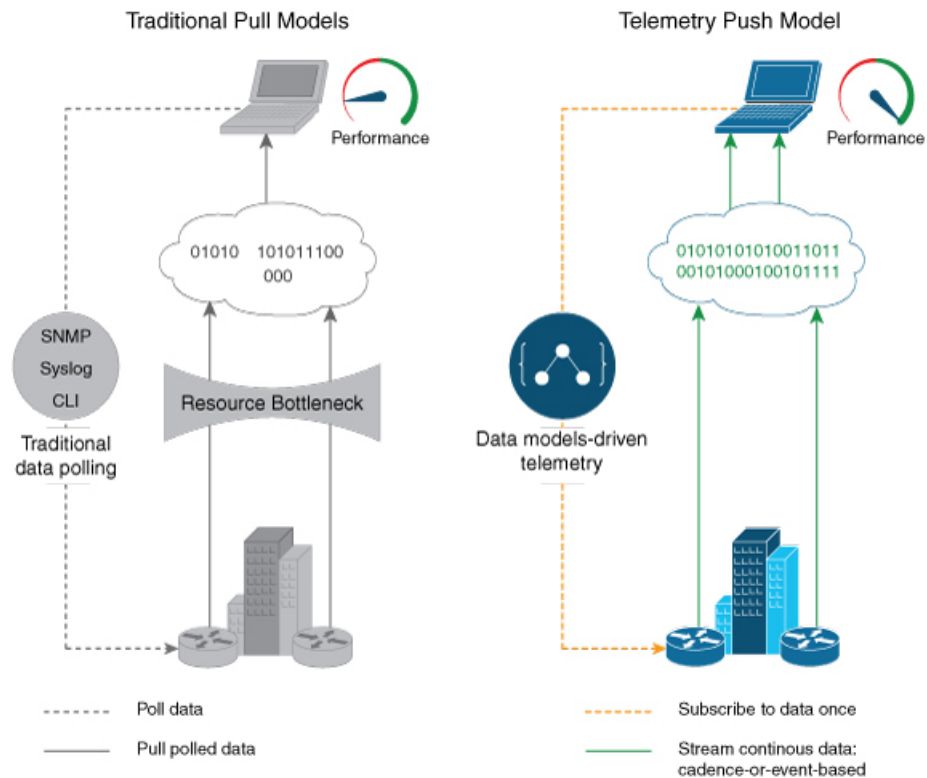

Watch this [video](#) to see how telemetry data can unlock the intelligence of data in your network to proactively predict and troubleshoot issues.



Note Starting from Cisco IOS XR, Release 7.0.1, Telemetry is part of the base image (<platform>-mini-x.iso). In earlier releases, Telemetry was part of the Manageability package (<platform>-mgbl-3.0.0.0-<release>.x86_64.rpm).

This article describes the benefits of using telemetry data and the various methods to stream meaningful data from your network device:

- [Benefits of Shifting Network Monitoring from Pull Models to Telemetry Push Model](#), on page 7
- [Review Mechanisms to Stream Telemetry Data from a Router to a Destination](#), on page 7
- [Learn About the Elements that Enable Streaming Telemetry Data](#), on page 9
- [Filter Telemetry Data Using Regexp Key](#), on page 16
- [Explore the Methods to Establish a Telemetry Session](#), on page 17

Benefits of Shifting Network Monitoring from Pull Models to Telemetry Push Model

Real-time telemetry data is useful in:


- **Managing network remotely:** The primary benefit of telemetry is the ability it offers you as an end user to monitor the state of a network element remotely. After the network is deployed, you cannot be physically present at the network site to find out what works, and what is cumbersome. With telemetry, those insights can be analyzed, leveraged, and acted upon from a remote location.
- **Optimizing traffic:** When link utilization and packet drops in a network are monitored at frequent intervals, it is easier to add or remove links, re-direct traffic, modify policing, and so on. With technologies like fast reroute, the network can switch to a new path and re-route faster than the traditional SNMP poll interval mechanism. Streaming telemetry data helps in providing quick response time for faster transport of traffic.
- **Preventive troubleshooting:** Network state indicators, network statistics, and critical infrastructure information are exposed to the application layer, where they are used to enhance operational performance and to reduce troubleshooting time. The finer granularity and higher frequency of data available through telemetry enables better performance monitoring and therefore, better troubleshooting.
- **Visualizing data:** Telemetry data acts as a data lake that analytics toolchains and applications use to visualize valuable insights into your network deployments.
- **Monitoring and controlling distributed devices:** The monitoring function is decoupled from the storage and analysis functions. This decoupling helps to reduce device dependency, while providing flexibility to transform data using [pipelines](#). These pipelines are utilities that consume telemetry data, transform it, and forward the resulting content to a downstream, typically off-the-shelf, consumer. The supported downstream consumers include Apache Kafka, Influxdata, Prometheus, and Grafana.

Streaming telemetry, thus, converts the monitoring process into a Big Data proposition that enables the rapid extraction and analysis of massive data sets to improve decision-making.

Review Mechanisms to Stream Telemetry Data from a Router to a Destination

Telemetry data can be streamed using either cadence-driven or event-driven mechanisms.

Figure 2: Cadence-driven and Event-driven Telemetry

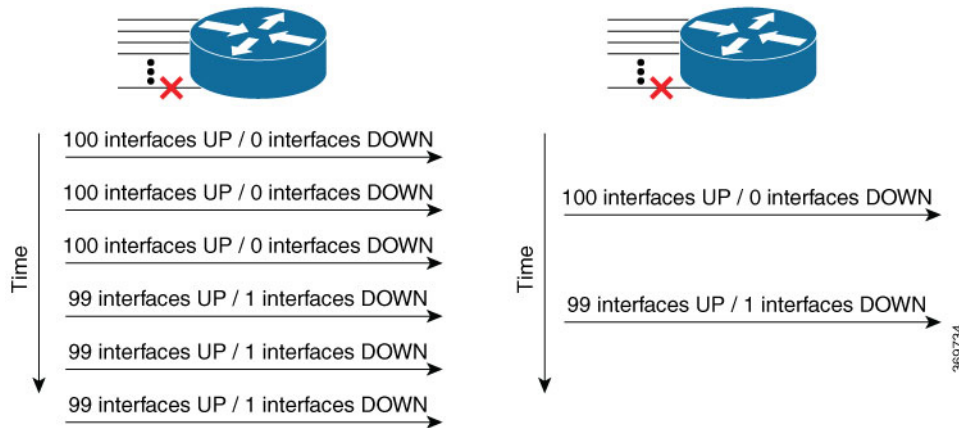


Cadence-driven Telemetry

Cadence-driven telemetry continually streams data (operational statistics and state transitions) at a configured cadence. The higher frequency of the data that is continuously streamed helps you closely identify emerging patterns in the network.

The following image shows a continuous stream of data after a configured time interval:

Figure 3: Cadence-driven Telemetry

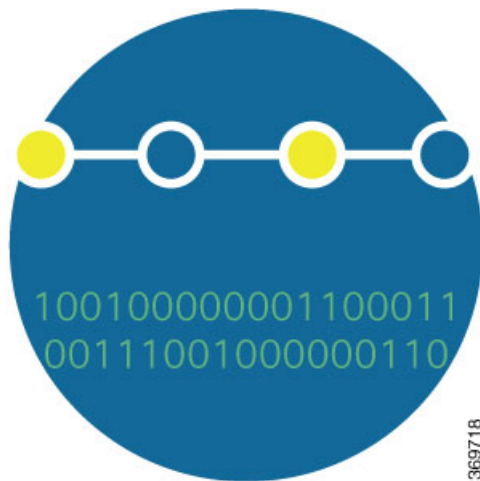


Event-driven Telemetry

Event-driven telemetry optimizes data that is collected at the receiver and streams data only when a state transition occurs and thus optimizes data that is collected at the receiver. For example, EDT streams data about interface state transitions, IP route updates, and so on.

The following image shows a stream of data after a state change:

Figure 4: Event-driven Telemetry

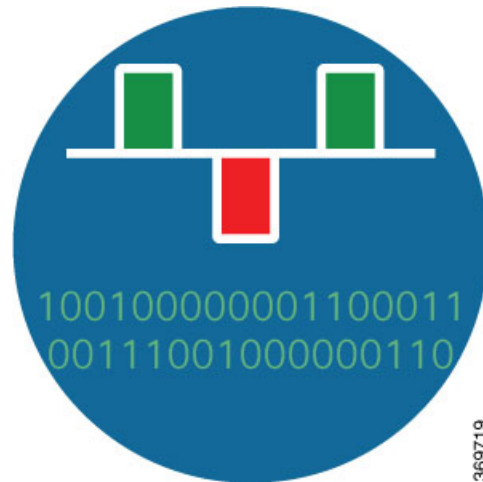

Learn About the Elements that Enable Streaming Telemetry Data

These elements are the building blocks in enabling telemetry in a network.

Sensor Path

Table 1: Feature History Table

Feature Name	Release Information	Description
Stream Digital Optical Monitoring (DOM) Data	Release 7.3.1	<p>This feature streams fiber optic transceiver parameters such as optical input or output levels, temperature, laser bias current, supply voltage, receiver power, bias threshold in real-time. This helps network operators to easily locate a fiber link failure, thereby simplifying the maintenance process, and improving overall system reliability.</p> <p>Sensor paths introduced for this feature are:</p> <p><code>Cisco IOS XR:router-qam/ports/port/info/optics-info</code></p> <p><code>Cisco IOS XR:router-optics-sensors/sensors/port/port/info</code></p>

The sensor path describes a YANG path or a subset of data definitions in a YANG data model within a container. In a YANG model, the sensor path can be specified to end at any level in the container hierarchy.

A YANG module defines a data model through the data of the router, and the hierarchical organization and constraints on that data.

YANG defines four node types. Each node has a name. Depending on the node type, the node either defines a value or contains a set of child nodes. The nodes types for data modeling are:

- leaf node - contains a single value of a specific type
- leaf-list node - contains a sequence of leaf nodes
- list node - contains a sequence of leaf-list entries, each of which is uniquely identified by one or more key leaves
- container node - contains a grouping of related nodes that have only child nodes, which can be any of the four node types

To get started with using the data models, see the *Programmability Configuration Guide*.

The following table shows few examples of sensor paths:

Table 2: Sensor Paths

Feature	Sensor Path
CPU	Cisco-IOS-XR-wdsysmon-fd-oper:system-monitoring/cpu-utilization
Memory	Cisco-IOS-XR-nto-misc-oper:memory-summary/nodes/node/summary
Interface	Cisco-IOS-XR-infra-statsd-oper:infra-statistics/interfaces/interface/latest/generic-counters Cisco-IOS-XR-infra-statsd-oper:infra-statistics/interfaces/interface/data-rate openconfig-interfaces:interfaces/interface
Optical power levels	Cisco-IOS-XR-dwdm-ui-oper:dwdm/ports/port/info/optics-info Cisco-IOS-XR-controller-optics-oper:optics-oper/optics-ports/optics-port/optics-info
Node summary	Cisco-IOS-XR-nto-misc-oper:memory-summary/nodes/node/summary
Forwarding information base (FIB)	Cisco-IOS-XR-fib-common-oper:fib-statistics/nodes/node/drops Cisco-IOS-XR-fib-common-oper:fib/nodes/node/protocols/protocol/vrfs/vrf/summary
MPLS Traffic engineering (MPLS-TE)	Cisco-IOS-XR-mpls-te-oper:mpls-te/tunnels/summary Cisco-IOS-XR-ip-rsvp-oper:rsvp/interface-briefs/interface-brief Cisco-IOS-XR-mpls-te-oper:mpls-te/fast-reroute/protectations/protection Cisco-IOS-XR-mpls-te-oper:mpls-te/signalling-counters/signalling-summary Cisco-IOS-XR-mpls-te-oper:mpls-te/p2p-p2mp-tunnel/tunnel-heads/tunnel-head
MPLS Label distribution protocol (MPLS-LDP)	Cisco-IOS-XR-mpls-ldp-oper:mpls-ldp/nodes/node/bindings-summary-all Cisco-IOS-XR-mpls-ldp-oper:mpls-ldp/global/active/default-vrf/summary Cisco-IOS-XR-mpls-ldp-oper:mpls-ldp/nodes/node/default-vrf/neighbors/neighbor

Feature	Sensor Path
Routing	Cisco-IOS-XR-clns-isis-oper:isis/instances/instance/statistics-global
	Cisco-IOS-XR-clns-isis-oper:isis/instances/instance/neighbors/neighbor
	Cisco-IOS-XR-ip-rib-ipv4-oper:rib/rib-table-ids/rib-table-id/summary-protos/summary-proto
	Cisco-IOS-XR-clns-isis-oper:isis/instances/instance/levels/level/adjacencies/adjacency
	Cisco-IOS-XR-ipv4-bgp-oper:bgp/instances/instance/instance-active/default-vrf/process-info
	Cisco-IOS-XR-ip-rib-ipv6-oper:ipv6-rib/rib-table-ids/rib-table-id/summary-protos/summary-proto



Note Use specific paths to avoid streaming data that you may not be interested. For example, if you want to stream information about only the summary of MPLS-TE, use `sensor-path`

```
Cisco-IOS-XR-mpls-te-oper:mpls-te/autotunnel/mesh/summary instead of sensor-path
Cisco-IOS-XR-mpls-te-oper:mpls-te sensor path.
```

The router streams telemetry data at predefined gather points in the data model even if `sensor-path` configuration is to an individual leaf. The gather points are collection units; collection always happens at that level for operational data.

Starting from release 7.2.1, the router supports the following `sensor-path` resolutions:

- Streaming data at the leaf-level or at the container-level under a gather point for cadence-based subscriptions.

If a subscription has multiple `sensor-paths` that resolve to the same gather point and have the same cadence and encoding, data is pushed in a single collection stream for all the leaves. For example:

```
telemetry model-driven
  sensor-group intf-stats
    sensor-path
Cisco-IOS-XR-pfi-im-cmd-oper:interfaces/interface-xr/interface/interface-statistics/full-interface-stats/bytes-sent

  sensor-path
Cisco-IOS-XR-pfi-im-cmd-oper:interfaces/interface-xr/interface/interface-statistics/full-interface-stats/bytes-received

!
subscription intf-stats
  sensor-group-id intf-stats sample-interval 10000
!
end
```

This subscription pushes one message with two leaves because the gather point `full-interface-stats` is same for both the `sensor-paths` `bytes-sent` and `bytes-received`. This grouping of the leaves happens at the subscription level. If these paths are configured under different subscriptions, data is streamed as different collections with separate messages each including one leaf `bytes-sent` or `bytes-received`.

- For event-driven subscriptions, streaming is always at the gather point in the model, even if specific leaves or leaf is configured as `sensor-path`. There is configuration to restrict streaming specific leaves for event-driven subscriptions. If this configuration is used, the `sensor-path` of the configured leaf streams data even if there is a change in one of its adjacent leaves. This indicates that even if there is no change

in value of the configured leaf, data can stream out to the collector. The collector must be set to check if the leaf value changed before taking action on the streamed data.

```
telemetry model-driven
include select-leaves-on-events
```



Note It is not recommended to configure sensor-paths with the same gather point into different subscriptions.

In the sensor path configuration, the schema node identifier can be configured with or without a leading slash. An MDT-capable device, such as a router, associates the sensor path to the nearest container path in the model. The router encodes and streams the container path within a single telemetry message. A receiver receives data about all the containers and leaf nodes at and below this container path. The router streams telemetry data, for one or more sensor-paths, at the configured frequency ([Cadence-driven Telemetry, on page 8](#)), or when an event occurs ([Event-driven Telemetry, on page 8](#)), to one or more collectors through subscribed sessions.

Subscription

A subscription binds one or more sensor paths and destinations.

The collector uses the subscription to receive updates about the state of data on the router. A subscription can consist of one or more sensor paths. The data for the paths that you have subscribed starts streaming until the session is terminated by the collector or the telemetry subscription configuration is removed to cancel the subscription.

The following example shows subscription `SUB1` that associates a sensor-group, sample interval and destination group.

```
Router(config)#telemetry model-driven
Router(config-model-driven)#subscription SUB1
Router(config-model-driven-subs)#sensor-group-id SGROUP1 sample-interval 10000
Router(config-model-driven-subs)#strict-timer
```



Note With a `strict-timer` configured for the sample interval, the data collection starts exactly at the configured time interval allowing a more deterministic behavior to stream data. In 32-bit platforms, `strict-timer` can be configured only under the subscription. Whereas, 64-bit platforms support configuration at global level in addition to the subscription level. However, configuring at the global level will affect all configured subscriptions.

```
Router(config)#telemetry model-driven
Router(config-model-driven)#strict-timer
```

Encoder

Data that is streamed from a router can be encoded using one of these formats:

- **GPB encoding:** Configuring for GPB encoding requires metadata in the form of compiled `.proto` files. A `.proto` file describes the GPB message format which is used to stream data. The `.proto` files are available at Cisco Network Telemetry Proto in Github.
 - **Compact GPB encoding:** Data is streamed in a compressed format and not in a self-descriptive format. A `.proto` file corresponding to each sensor-path must be used by the collector to decode the streamed data.
 - **Self-describing GPB encoding:** Data streamed for each sensor path is in a self-describing and ASCII text format. A single `.proto` file, `telemetry.proto`, is used by the collector to decode any sensor path data. Self-describing GPB encoding is easier to manage because it needs single `.proto` file to decode any sensor path data, even though the message size is large.
- **JSON encoding:** Data is streamed in strings of keys and its values in a human-readable format.

Transport

In the telemetry push model, the router streams telemetry data using a transport protocol. The generated data is encapsulated into the desired format using encoders.

Model-Driven Telemetry (MDT) data is streamed through these supported transport protocols:

- Google Protocol RPC (gRPC): used for both dial-in and dial-out modes.



Note gRPC protocol is not supported over Multiprotocol Label Switching (MPLS) including `explicit-null` label.

- Transmission Control Protocol (TCP): used for only dial-out mode.
- User Datagram Protocol (UDP): used for only dial-out mode. Because UDP is connectionless, the UDP destination is shown as `Active` irrespective of the state of the collector. This is not ideally suitable for a busy network. If a message is dropped by the network before it reaches the collector, the protocol does not resend the data.



Note Telemetry data is streamed out of the router using an Extensible Manageability Services Daemon (emsd) process. The data of interest is subscribed through subscriptions and streamed through gRPC, TCP or UDP sessions. However, a combination of gRPC, TCP and UDP sessions with more than 150 active sessions leads to emsd crash or process restart.

gRPC Network Management Interface

gRPC Network Management Interface (gNMI) is a gRPC-based network management protocol used to modify, install or delete configuration from network devices. It is also used to view operational data, control and generate telemetry streams from a target device to a data collection system. It uses a single protocol to manage configurations and stream telemetry data from network devices.

For the list of gNMI RPCs, see the *Programmability Configuration Guide*.

gNMI Subscription Modes

gNMI defines 3 modes for a streaming subscription that indicates how the router must return data in a subscription:

- A `SAMPLE` mode is cadence-based subscription supported for all the operational models.
- An `ON_CHANGE` mode is event-based subscription. In this mode, only the state leaf supports `on_change` events.
- A `TARGET_DEFINED` mode allows the target to determine the best type of subscription to be created on a per-leaf basis.

When a client creates a subscription specifying the `TARGET_DEFINED` mode, the target, here the router, determine the best type of subscription to be created on a per-leaf basis. If the path specified within the message refers to some leaves which are event-driven, then an `ON_CHANGE` subscription is created.



Note In Cisco IOS XR Release 7.2.1, the `TARGET_DEFINED` subscription mode is supported only for sensor paths of OpenConfig model; native model is not supported. The supported models are: OC Interfaces, OC Telemetry, OC Shell Util, OC System NTP and OC Platform.

An initial synchronization is established with all the leaves. If a new client has the same request information, then the initial synchronization is sent to all the clients connected at that point. This indicates that if multiple clients request the same subscription information, then the initial synchronization is resent even to the older connections.

The **telemetry model-driven gnmi-target-defined** command can be used to determine the cadence for the leaves (set to be cadence-driven) using the following parameters:

- **cadence-factor:** Multiplier factor for cadence of target-defined subscriptions. The range is 1 to 10. The default value is 2.
- **minimum-cadence:** Minimum cadence for target-defined subscriptions in seconds. The range is 1 to 65535. The default value is 30 seconds.

If cadence is specified as part of the gNMI request, this cadence is used for the first collection of data. Once the collection time is calculated, use the following formula to calculate the cadence.

$$\text{Cadence} = \text{Maximum}(\text{Global minimum-cadence defined}, (\text{Collection time for one collection} * \text{cadence-factor}))$$

If cadence is not specified as part of the request, the default value of 30 secs is used. This value can be modified using the following commands:

```
telemetry model-driven
gnmi-target-defined minimum-cadence 90
gnmi-target-defined cadence-factor 6
!
!
```

For more information about gNMI, see [Github](#).

gRPC Network Operations Interface

gRPC Network Operations Interface (gNOI) defines a set of gRPC-based microservices for executing operational commands on network devices. Extensible Manageability Services (EMS) gNOI is the Cisco IOS XR implementation of gNOI. gNOI uses gRPC as the transport protocol and the configuration is same as that of gRPC.

For the list of gNOI RPCs, see the *Programmability Configuration Guide*.

TLS Authentication

The gRPC protocol supports Transport Layer Security (TLS) for encrypting data. By default, model-driven telemetry uses TLS to dial-out.

When TLS is enabled, the server sends a certificate to authenticate it with the collector. The collector validates the certificate verifying which certificate authority has signed it and generates session keys to encrypt the session.

The TLS certificate must be copied at the `/misc/config/grpc/dialout/` path. If only the `protocol grpc` command is configured, by default, TLS is enabled and the hostname defaults to the IP address of the destination. In addition, in the certificate, configure the Common Name (CN) as `protocol grpc tls-hostname <>`.

The following output shows the certificate that gRPC uses to establish a dialout session:

```
Router#run
[node:]$ls -l /misc/config/grpc/dialout/
total 4
-rw-r--r-- 1 root root 4017 dialout.pem
```

To bypass the TLS option, use **grpc no-tls** command.



Note Although TLS provides secure communication between servers and clients, TLS version 1.0 may pose a security threat. You can now disable TLS version 1.0 using the **grpc tlsv1-disable** command.

Filter Telemetry Data Using Regex Key

Table 3: Feature History Table

Feature Name	Release Information	Description
Filter Telemetry Data Using Regex Keys in Sensor Paths	Release 7.4.1	Streaming huge telemetry data can create congestion in the network. With this feature, you can use the regular expression (regex) keys in the sensor path configuration on the router. The keys limit the amount of data that can be streamed, thereby ensuring better bandwidth utilization.

You can stream telemetry data from your network device using sensor paths and subscriptions.

The regular expression (regex) keys are used in sensor paths to limit the amount of data getting streamed from the router. The keys can be specified for any lists in the sensor paths that are subscribed. This allows you to filter data at the source (router) instead of filtering data at the collector. Regex keys help in better bandwidth utilization because only the data of interest is streamed from the router. Regex keys are supported for native models, open-config (OC) models and events.



Note Filtering data using regex key is not supported for System admin data models.

The syntax **re** in the sensor path indicates a filtered data using regex key. The characters '*', '.', '[', ']' and '\' are supported. For example, `re'Gig.*'` matches all Gigabit interfaces.



Note Telemetry supports only the POSIX regular expressions.

Example: Regex Key Filtering on Gigabit Interfaces

The sensor path with specific keys:

```
Cisco-IOS-XR-infra-statsd-oper:infra-statistics/interfaces/interface
[interface-name='GigabitEthernet0/0/0/0']/latest/generic-counters
```

To this sensor path, apply the regex key to stream data to match GigabitEthernet0/0/0/0, GigabitEthernet0/0/0/1, GigabitEthernet0/0/0/2 interfaces:

```
Cisco-IOS-XR-infra-statsd-oper:infra-statistics/interfaces/interface
[interface-name=re'GigabitEthernet0/0/0/[0-2]']/latest/generic-counters
```

Example: Regex Key Filtering on IP addresses

The sensor path with specific keys:

```
openconfig-network-instance:network-instances/network-instance/afts/ipv4-unicast/
ipv4-entry[prefix='100.100.100.1/32']/state
```


To this sensor path, apply regex keys to match all IP addresses that starts with 100.100.100. In this example, the asterix (*) entry matches a range of addresses from 1 to 256.

```
openconfig-network-instance:network-instances/network-instance/afts/ipv4-unicast/  
ipv4-entry[prefix=re'100\\.100\\.100.*']/state
```

Explore the Methods to Establish a Telemetry Session

A telemetry session can be initiated using: either the dial-out mode or the dial-in mode. Although the modes to establish a telemetry session are different, both modes use the same data model and stream the same data.

Dial-Out Mode

In a *dial-out* mode, the router dials out to the receiver to establish a subscription-based telemetry session. Because the router initiates the connection, there is no need to manage the ports for inbound traffic. In this default mode of operation, the protocols you use to establish a session gives you the flexibility to chose between simplicity (TCP) and security (gRPC). A simple protocol requires only accessibility to the socket on the collector. A secure protocol, additionally, offers security capabilities to authenticate and encrypt the session. You can, therefore, secure your collector, and establish a much advanced method of communication with the router. If the connection between the router and the destination is lost, the router re-establishes the connection with the destination and continues to push data again. However, data transmitted during the time of reconnection is lost.

To explore the dial-out mode, and to create a dial-out session, see [Establish a Model-Driven Telemetry Session from a Router to a Collector, on page 19](#).

Dial-In Mode

In a *dial-in* mode, a collector dials in to the router, and subscribes dynamically to one or more sensor paths specified in a subscription. The router is open for connections from the collector. This mode is useful to establish a single channel of communication with the router. Because the collector establishes the session, there is no need to create destinations in the configuration. Additionally, the protocol (gRPC) used to establish a session provides advanced security capabilities to authenticate and encrypt the session. If the connection between the router and the collector is lost, the session is cancelled. The collector must reconnect to the router to restart streaming data. Only gRPC supports dial-in session.

To explore the dial-in mode, and to create a dial-in session, see [Establish a Model-Driven Telemetry Session from a Collector to a Router, on page 29](#).

Identify the Telemetry Session Suitable for Your Network

The transport protocols and encoding formats in your network help you determine which mode is suitable for your needs. The encoding efficiency is determined by the space that data occupies on the wire, memory utilization, and the amount of data that you plan to stream from the router.

- Use TCP dial-out mode if you plan to stream telemetry data using a simple setup with a single router and collector. It is simple to configure and does not require extensive knowledge about protocols. It removes the need to manage ports for inbound connections.

- Use gRPC dial-out mode if your setup involves scaling out to many devices or needs encryption of your data. This mode removes the need to manage ports for inbound connections.
- Use gRPC dial-in mode if you are already using gRPC in your network and you want your sessions to be dynamic without having the data streamed to fixed destinations. This mode is convenient if you prefer a centralized way configuring your network and requesting operational data.



CHAPTER 4

Establish a Model-Driven Telemetry Session from a Router to a Collector

Streaming telemetry is a new paradigm in monitoring the health of a network. It provides a mechanism to efficiently stream configuration and operational data of interest from Cisco IOS XR routers. This streamed data is transmitted in a structured format to remote management stations for monitoring and troubleshooting purposes.

With telemetry data, you create a data lake. Analyzing this data, you proactively monitor your network, monitor utilization of CPU and memory, identify patterns, troubleshoot your network in a predictive manner, and devise strategies to create a resilient network using automation.

Telemetry works on a [Subscription](#) model where you subscribe to the data of interest in the form of [Sensor Path](#). The sensor paths describes [OpenConfig data models](#) or native Cisco data models. You can access the [OpenConfig](#) and [Native](#) data models for telemetry from Github, a software development platform that provides hosting services for version control. You choose who initiates the subscription by establishing a telemetry session between the router and the receiver. The session is established using either a [Dial-Out Mode](#) or a [Dial-In Mode](#), described in the [Scale-Up Your Network Monitoring Strategy Using Telemetry](#) article.




Note Watch this [video](#) to discover the power of real-time network management using model-driven telemetry.

This article describes the dial-out mode where the router dials out to the receiver to establish a telemetry session. In this mode, destinations and sensor-paths are configured and bound together into one or more subscriptions. The router continually attempts to establish a session with each destination in the subscription, and streams data to the receiver. The dial-out mode of subscriptions is persistent. Even when a session terminates, the router continually attempts to re-establish a new session with the receiver at regular intervals.

The following image shows a high-level overview of the dial-out mode:

Figure 5: Dial-Out Mode

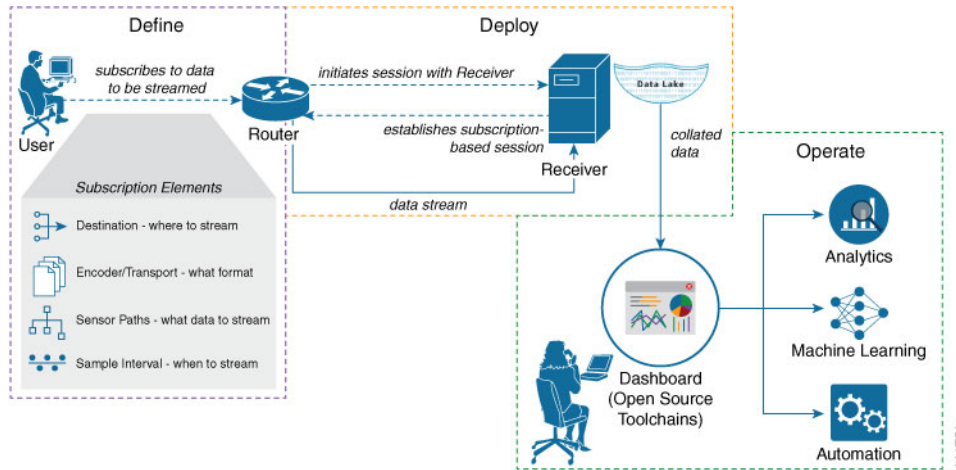

This article describes, with a use case that illustrates the monitoring of CPU utilization, how streaming telemetry data helps you gain better visibility of your network, and make informed decisions to stabilize your network.



Tip You can programmatically configure a dial-out telemetry session using `openconfig-telemetry.yang` OpenConfig data model. To get started with using data models, see the *Programmability Configuration Guide*.

- [Monitor CPU Utilization Using Telemetry Data to Plan Network Infrastructure, on page 20](#)

Monitor CPU Utilization Using Telemetry Data to Plan Network Infrastructure

The use case illustrates how, with the [Dial-Out Mode](#), you can use telemetry data to proactively monitor CPU utilization. Monitoring CPU utilization ensures efficient storage capabilities in your network. This use case describes the tools used in the open-sourced collection stack to store and analyse telemetry data.



Note Watch this [video](#) to see how you configure model-driven telemetry to take advantage of data models, open source collectors, encodings and integrate into monitoring tools.

Telemetry involves the following workflow:

- **Define:** You define a subscription to stream data from the router to the receiver. To define a subscription, you create a destination-group and a sensor-group.
- **Deploy:** The router establishes a subscription-based telemetry session and streams data to the receiver. You verify subscription deployment on the router.
- **Operate:** You consume and analyse telemetry data using open-source tools, and take necessary actions based on the analysis.

Before you begin

Make sure you have L3 connectivity between the router and the receiver.

Define a Subscription to Stream Data from Router to Receiver

Create a subscription to define the data of interest to be streamed from the router to the destination.

Step 1

Create one or more destinations to collect telemetry data from a router. Define a destination-group to contain the details about the destinations. Include the destination address (ipv4 or ipv6), or FQDN, port, transport, and encoding format in the destination-group.

Example:**Create a destination-group using data model**

This example uses the native data model `Cisco-IOS-XR-um-telemetry-model-driven-cfg.yang`.

```
<rpc xmlns="urn:ietf:params:xml:ns:netconf:base:1.0" message-id="101">
  <get-config>
    <source>
      <candidate/>
    </source>
    <filter>
      <telemetry-model-driven
xmlns="http://cisco.com/ns/yang/Cisco-IOS-XR-um-telemetry-model-driven-cfg">
        <destination-groups>
          <destination-group>
            <destination-id>CPU-Health</destination-id>
            <ipv4-destinations>
              <ipv4-destination>
                <ipv4-address>172.0.0.0</ipv4-address>
                <destination-port>57500</destination-port>
                <encoding>self-describing-gpb</encoding>
                <protocol>
                  <protocol>tcp</protocol>
                </protocol>
              </ipv4-destination>
            </ipv4-destinations>
          </destination-group>
        </destination-groups>
      </telemetry-model-driven>
    </filter>
  </get-config>
</rpc>
```

Create a destination group using CLI

```
##Configuration with tls-hostname##
Router(config)#telemetry model-driven
Router(config-model-driven)#destination-group CPU-Health
Router(config-model-driven-dest)#address family ipv4 172.0.0.0 port 57500
Router(config-model-driven-dest-addr)#encoding self-describing-gpb
Router(config-model-driven-dest-addr)#protocol tcp
Router(config-model-driven-dest-addr)#commit
```

where -

- CPU-Health is the name of the destination-group

- 172.0.0.0 is the IP address of the destination where data is to be streamed

Note To avoid hard-coding IP address, the router can choose any of the configured ipv4 or ipv6 address using domain name service. If an established connections fails, the router connects to another resolved IP address, and streams data to that IP address.

- 57500 is the port number of the destination
- self-describing-gpb is the format in which data is encoded and streamed to the destination
- tcp is the protocol through which data is transported to the destination.

The destination for dial-out configuration supports IP address (Ipv4 or IPv6), and fully qualified domain name (FQDN) using domain name services (DNS). To use FQDN, you must assign IP address to the domain name. The domain name is limited to 128 characters. If DNS lookup fails for the provided domain name, the internal timer is activated for 30 sec. With this, the connectivity is continually tried every 30 sec until the domain named is looked-up successfully. DNS provides an address list depending on the address-family being requested. For example, on the router, the IP address for domain name is set using the following commands for ipv4 and ipv6 respectively:

```
domain ipv4 host abcd 172.x.x.1 172.x.x.2
```

```
domain ipv6 host abcd fd00:xx:xx:xx:1::1 fd00:xx:xx:xx:1::3
```

Step 2

Specify the subset of the data that you want to stream from the router using sensor paths. The [Sensor Path](#) represents the path in the hierarchy of a YANG data model. Create a sensor-group to contain the sensor paths.

Example:

Create a sensor-group for CPU utilization using data model

```
<rpc xmlns="urn:ietf:params:xml:ns:netconf:base:1.0" message-id="101">
  <edit-config>
    <target>
      <candidate/>
    </target>
    <config>
      <telemetry-model-driven
xmlns="http://cisco.com/ns/yang/Cisco-IOS-XR-um-telemetry-model-driven-cfg">
        <sensor-groups>
          <sensor-group>
            <sensor-group-identifier>Monitor-CPU</sensor-group-identifier>
            <sensor-paths>
              <sensor-path>

<telemetry-sensor-path>Cisco-IOS-XR-wdsysmon-fd-oper:system-monitoring/cpu-utilization</telemetry-sensor-path>

              </sensor-path>
            </sensor-paths>
          </sensor-group>
        </sensor-groups>
      </telemetry-model-driven>
    </config>
  </edit-config>
</rpc>
```

Create a sensor-group for CPU utilization using CLI

```
Router(config)#telemetry model-driven
Router(config-model-driven)#sensor-group Monitor-CPU
Router(config-model-driven-snsr-grp)# sensor-path
Cisco-IOS-XR-wdsysmon-fd-oper:system-monitoring/cpu-utilization
Router(config-model-driven-snsr-grp)# commit
```

where -

- `Monitor-CPU` is the name of the sensor-group
- `Cisco-IOS-XR-wdsysmon-fd-oper:system-monitoring/cpu-utilization` is the sensor path from where data is streamed.

Step 3 Subscribe to telemetry data that is streamed from a router. A [Subscription](#) binds the destination-group with the sensor-group and sets the streaming method. The streaming method can be [Cadence-driven Telemetry](#) or [Event-driven Telemetry](#).

Example:

Note The configuration for event-driven telemetry is similar to cadence-driven telemetry, with only the sample interval as the differentiator. Configuring the sample interval value to 0, zero, sets the subscription for event-driven telemetry, while configuring the interval to any non-zero value sets the subscription for cadence-driven telemetry.

Create a subscription using data model

```
<rpc xmlns="urn:ietf:params:xml:ns:netconf:base:1.0" message-id="101">
  <edit-config>
    <target>
      <candidate/>
    </target>
    <config>
      <telemetry-model-driven
xmlns="http://cisco.com/ns/yang/Cisco-IOS-XR-um-telemetry-model-driven-cfg">
        <subscriptions>
          <subscription>
            <subscription-identifier>CPU-Utilization</subscription-identifier>
            <sensor-profiles>
              <sensor-profile>
                <sensorgroupid>Monitor-CPU</sensorgroupid>
                <sample-interval>30000</sample-interval>
              </sensor-profile>
            </sensor-profiles>
            <destination-profiles>
              <destination-profile>
                <destination-id>CPU-Health</destination-id>
              </destination-profile>
            </destination-profiles>
            <source-interface>Interface1</source-interface>
          </subscription>
        </subscriptions>
      </telemetry-model-driven>
    </config>
  </edit-config>
</rpc>
```

Create a subscription using CLI

```
Router(config)#telemetry model-driven
Router(config-model-driven)#subscription CPU-Utilization
Router(config-model-driven-subs)#sensor-group-id Monitor-CPU sample-interval 30000
Router(config-model-driven-subs)#destination-id CPU-Health
Router(config-model-driven-subs)#source-interface Interface1
Router(config-model-driven-subs)#commit
```

where -

- `CPU-Utilization` is the name of the subscription

- `Monitor-CPU` is the name of the sensor-group
- `CPU-Health` is the name of the destination-group
- `Interface1` is the source interface that is used for establishing the telemetry session. If both the VRF and source interface are configured, the source interface must be in the same VRF as the one specified in the destination group.
- `30000` is the sample interval in milliseconds. The sample interval is the time interval between two streams of data. In this example, the sample interval is 30000 milliseconds or 30 seconds.

Verify Deployment of the Subscription

The router dials out to the receiver to establish a session with each destination in the subscription. After the session is established, the router streams data to the receiver to create a data lake.

You can verify the deployment of the subscription on the router.

Step 1 View the model-driven telemetry configuration on the router.

Example:

```
Router#show running-config telemetry model-driven
telemetry model-driven
destination-group CPU-Health
address-family ipv4 172.0.0.0 port 57500
encoding self-describing-gpb
protocol tcp
!
sensor-group Monitor-CPU
sensor-path
Cisco-IOS-XR-wdsysmon-fd-oper:system-monitoring/cpu-utilization
!
subscription CPU-Utilization
sensor-group-id Monitor-CPU sample-interval 30000
destination-id CPU-Health
source-interface GigabitEthernet0/0/0/0
!
!
```

Step 2 Verify the state of the subscription. An `Active` state indicates that the router is ready to stream data to the receiver based on the subscription.

Example:

```
Router# show telemetry model-driven subscription CPU-Utilization

Subscription: CPU-Utilization
-----
State: NA
Source Interface: GigabitEthernet0_0_0_0( 0x0)
Sensor groups:
Id: Monitor-CPU
Sample Interval: 30000 ms
Sensor Path: Cisco-IOS-XR-wdsysmon-fd-oper:system-monitoring/cpu-utilization
Sensor Path State: Resolved

Destination Groups:
```



```
Group Id: CPU-Health
  Destination IP:      172.0.0.0
  Destination Port:   57500
  Encoding:           self-describing-gpb
  Transport:          tcp
  State:              NA
  No TLS

Collection Groups:
-----
No active collection groups
```

The router streams data to the receiver using the subscription-based telemetry session and creates a data lake in the receiver.

Operate on Telemetry Data for In-depth Analysis of the Network

You can start consuming and analyzing telemetry data from the data lake using an open-sourced collection stack. This use case uses the following tools from the collection stack:

- Pipeline is a lightweight tool used to collect data. You can download [Network Telemetry Pipeline](#) from Github. You define how you want the collector to interact with routers and where you want to send the processed data using `pipeline.conf` file.
- Telegraph (plugin-driven server agent) and InfluxDB (a time series database (TSDB)) stores telemetry data, which is retrieved by visualization tools. You can download [InfluxDB](#) from Github. You define what data you want to include into your TSDB using the `metrics.json` file.
- [Grafana](#) is a visualization tool that displays graphs and counters for data streamed from the router.

In summary, Pipeline accepts TCP and gRPC telemetry streams, converts data and pushes data to the InfluxDB database. Grafana uses the data from InfluxDB database to build dashboards and graphs. Pipeline and InfluxDB may run on the same server or on different servers.

Consider that the router is streaming data of approximately 350 counters every 5 seconds, and Telegraf requests information from the Pipeline at 1 second intervals. The CPU usage is analysed in three stages using:

- a single router to get initial values
- two routers to find the difference in values and understand the pattern
- five routers to arrive at a proof-based conclusion

This helps you make informed business decisions about deploying the infrastructure; in this case, the CPU.

Step 1 Start Pipeline, and enter your router credentials.

Note The IP address and port that you specify in the destination-group must match the IP address and port on which Pipeline is listening.

Example:

```
$ bin/pipeline -config pipeline.conf
```

```

Startup pipeline
Load config from [pipeline.conf], logging in [pipeline.log]

CRYPT Client [grpc_in_mydmtrouter], [http://172.0.0.0:5432]
  Enter username: <username>
  Enter password: <password>
  Wait for ^C to shutdown

```

Step 2 In the Telegraph configuration file, add the following values to read the metrics about CPU usage.

Example:

```

[[inputs.cpu]]
  ## Whether to report per-cpu stats or not
  percpu = true
  ## Whether to report total system cpu stats or not
  totalcpu = true
  ## If true, collect raw CPU time metrics.
  collect_cpu_time = false
  ## If true, compute and report the sum of all non-idle CPU states.
  report_active = false

```


Step 3 Use Grafana to create a dashboard and visualize data about CPU usage.

One router

The router pushes the counters every five seconds.

All CPU cores are loaded equally, and there are spikes up to approximately 10 or 11 percent.


Figure 6: CPU Usage Graph with a Single Router

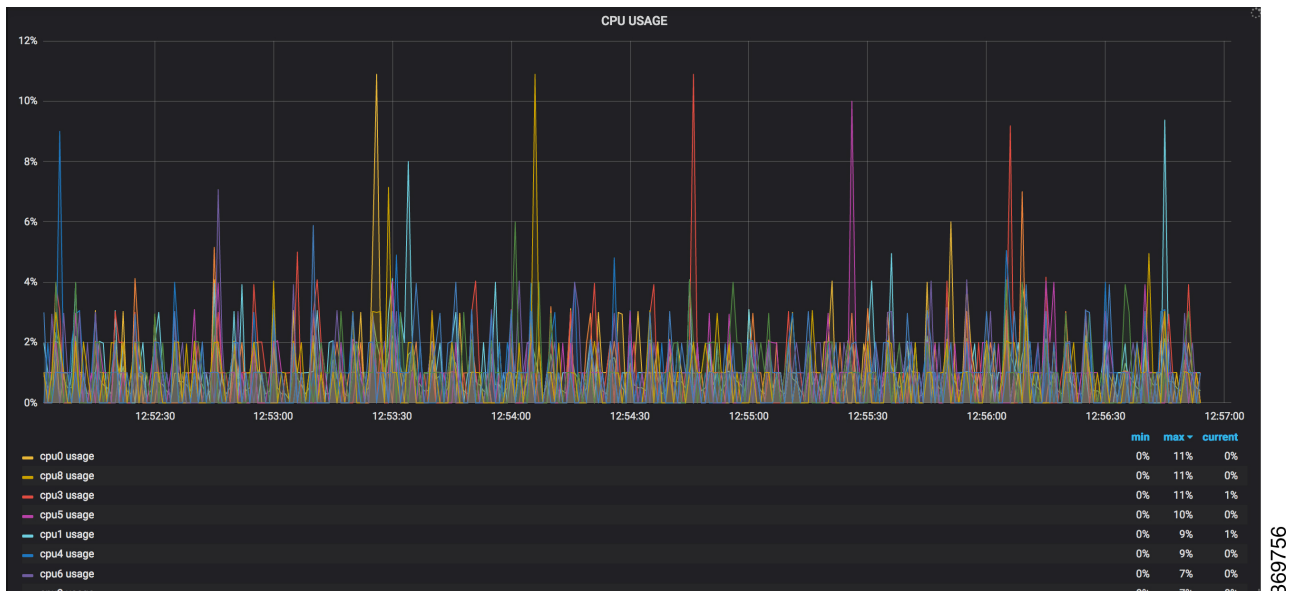

Two routers

The second router is added at 14:00 in the timeline, and shows an increase in the spikes to around 25 percent with midpoint value at 15 percent.

Figure 7: CPU Usage Graph with Two Routers

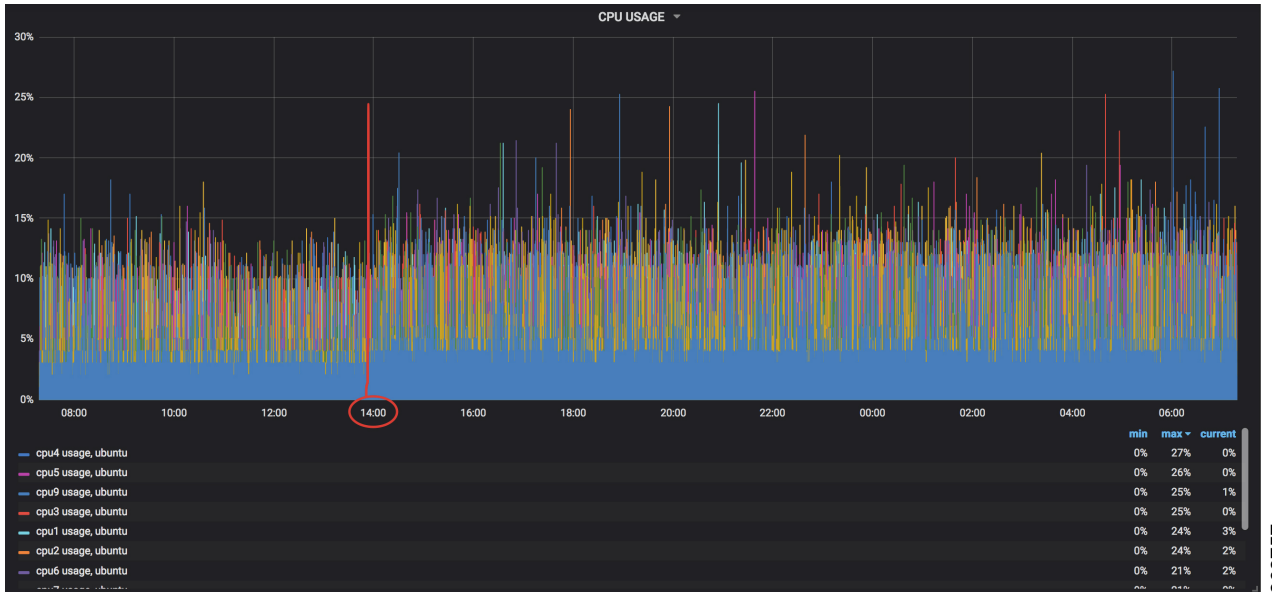


369757

Five routers

With five routers, the spikes peak upto approximately 40 percent with midpoint in the range of 22 to 25 percent.

Figure 8: CPU Usage Graph with Five Routers

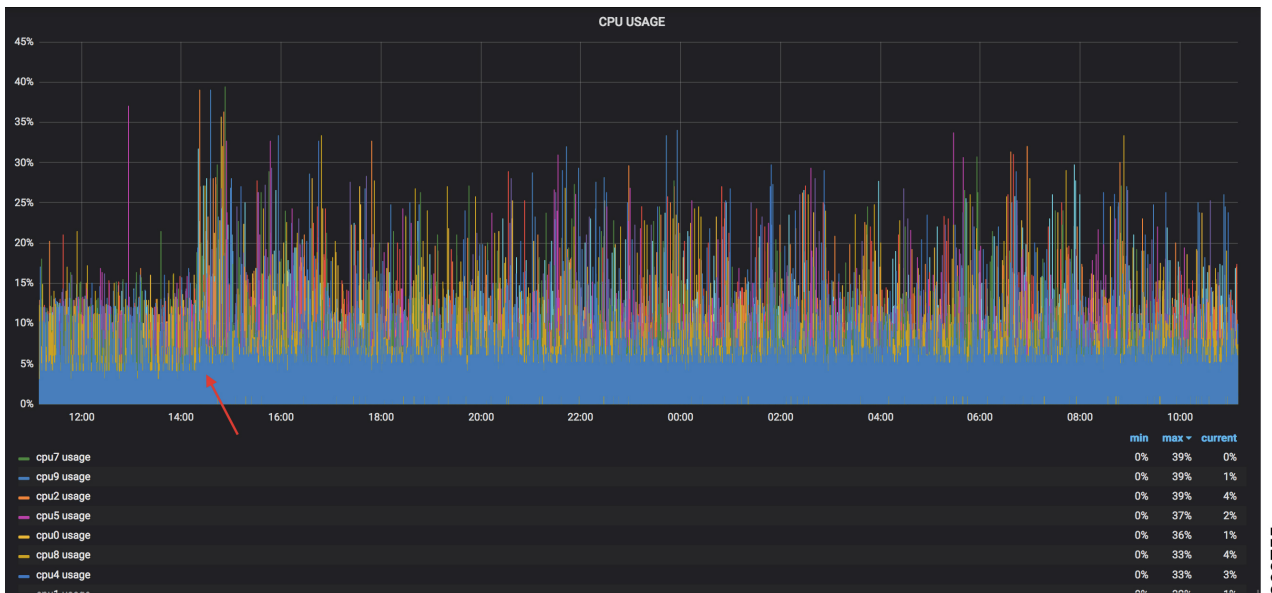

369755

In conclusion, telemetry data shows that the processes are balanced almost equally across the CPU cores. There is no linear increase on a subset of cores. This analysis helps in planning the CPU utilization based on the number of counters that you stream.



CHAPTER 5

Establish a Model-Driven Telemetry Session from a Collector to a Router

Streaming telemetry is a new paradigm in monitoring the health of a network. It provides a mechanism to efficiently stream configuration and operational data of interest from Cisco IOS XR routers. This streamed data is transmitted in a structured format to remote management stations for monitoring and troubleshooting purposes.

With telemetry data, you create a data lake. Analyzing this data, you proactively monitor your network, monitor utilization of CPU and memory, identify patterns, troubleshoot your network in a predictive manner, and devise strategies to create a resilient network using automation.

Telemetry works on a [Subscription](#) model where you subscribe to the data of interest in the form of [Sensor Path](#). The sensor paths describes [OpenConfig data models](#) or native Cisco data models. You can access the [OpenConfig](#) and [Native](#) data models for telemetry from Github, a software development platform that provides hosting services for version control. You choose who initiates the subscription by establishing a telemetry session between the router and the receiver. The session is established using either a [Dial-Out Mode](#) or [Dial-In Mode](#), described in the [Scale-Up Your Network Monitoring Strategy Using Telemetry](#) article.




Note Watch this [video](#) to discover the power of real-time network management using model-driven telemetry.

This article describes the dial-in mode where a receiver dials in to the router to establish a telemetry session. In this mode, the receiver dials in to the router, and subscribes dynamically to one or more sensor paths specified in a subscription. The router streams telemetry data through the same session that is established by the receiver. The dial-in mode of subscriptions is dynamic. This dynamic subscription terminates when the receiver cancels the subscription or when the session terminates.

The following image shows a high-level overview of the dial-in mode:

Figure 9: Dial-In Mode

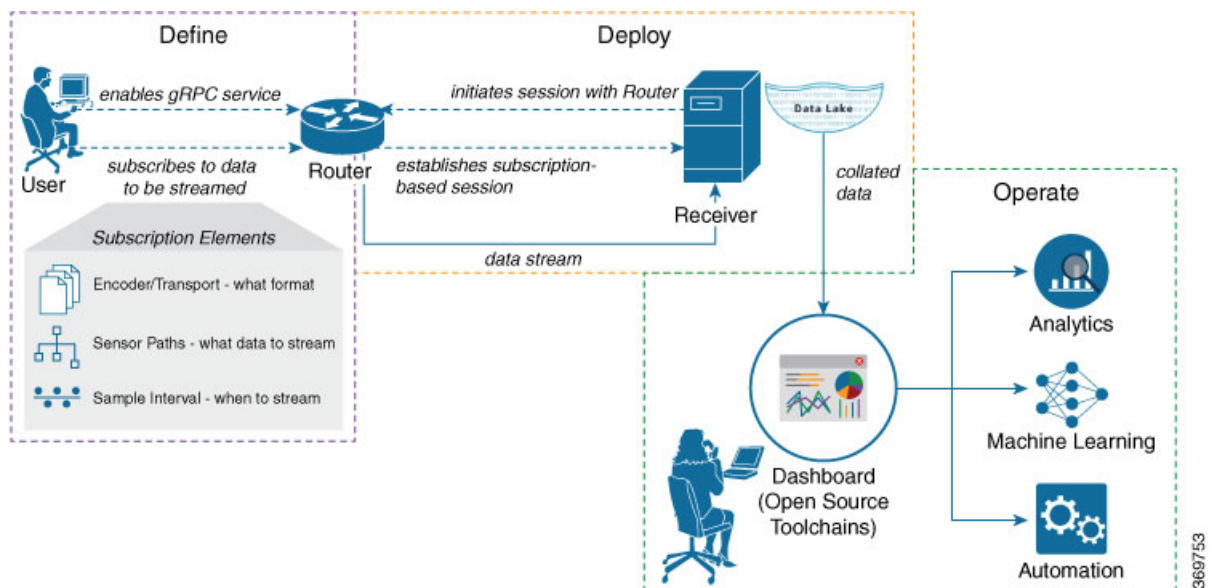

This article describes, with a use case that illustrates the simultaneous monitoring of various parameters in the network, how streaming telemetry data helps you gain better visibility of the network, and make informed decisions to stabilize it.

**YANG Data Model**

You can programmatically configure a dial-in telemetry session using `openconfig-telemetry.yang` OpenConfig data model. To get started with using data models, see the *Programmability Configuration Guide*.

- [Monitor Network Parameters Using Telemetry Data for Proactive Analysis, on page 30](#)

Monitor Network Parameters Using Telemetry Data for Proactive Analysis

The use case illustrates how, with the [Dial-In Mode](#), you can use telemetry data to stream various parameters about your network. You use this data for predictive analysis where you monitor patterns, and proactively troubleshoot issues. This use case describes the tools used in the open-sourced collection stack to store and analyse telemetry data.



Note Watch this [video](#) to see how you configure model-driven telemetry to take advantage of data models, open source collectors, encodings and integrate into monitoring tools.

Telemetry involves the following workflow:

- **Define:** You define a subscription to stream data from the router to the receiver. To define a subscription, you create a sensor-group.

- **Deploy:** The receiver initiates a session with the router and establishes a subscription-based telemetry session. The router streams data to the receiver. You verify subscription deployment on the router.
- **Operate:** You consume and analyse telemetry data using open-source tools, and take necessary actions based on the analysis.

Before you begin

Ensure you meet these dependencies:

- Make sure you have L3 connectivity between the router and the receiver.
- Enable gRPC server on the router to accept incoming connections from the receiver.

```
Router#configure
Router (config) #grpc
Router (config-grpc) #port <port-number>
Router (config-grpc) #commit
```

The port-number ranges from 57344 to 57999. If a port number is unavailable, an error is displayed.

Define a Subscription to Stream Data from Router to Receiver

Create a subscription to define the data of interest to be streamed from the router to the destination.

Step 1

Specify the subset of the data that you want to stream from the router using sensor paths. The [Sensor Path](#) represents the path in the hierarchy of a YANG data model. This example uses the native data model

Cisco-IOS-XR-um-telemetry-model-driven-cfg.yang. Create a sensor-group to contain the sensor paths.

Example:

```
sensor-group health
  sensor-path Cisco-IOS-XR-wdsysmon-fd-oper:system-monitoring/cpu-utilization
  sensor-path Cisco-IOS-XR-nto-misc-oper:memory-summary/nodes/node/summary
  sensor-path Cisco-IOS-XR-shellutil-oper:system-time/uptime
!
sensor-group interfaces
  sensor-path
Cisco-IOS-XR-infra-statsd-oper:infra-statistics/interfaces/interface/latest/generic-counters
  sensor-path Cisco-IOS-XR-pfi-im-cmd-oper:interfaces/interface-summary
!
sensor-group optics
  sensor-path Cisco-IOS-XR-controller-optics-oper:optics-oper/optics-ports/optics-port/optics-info
!
sensor-group routing
  sensor-path Cisco-IOS-XR-clns-isis-oper:isis/instances/instance/levels/level/adjacencies/adjacency

  sensor-path Cisco-IOS-XR-clns-isis-oper:isis/instances/instance/statistics-global
  sensor-path
Cisco-IOS-XR-ip-rib-ipv4-oper:rib/vrfs/vrf/afs/af/safs/saf/ip-rib-route-table-names/ip-rib-route-table-name/protocol/isis/as/information

  sensor-path Cisco-IOS-XR-ipv4-bgp-oper:bgp/instances/instance/instance-active/default-vrf/process-info

!
sensor-group mpls-te
  sensor-path Cisco-IOS-XR-mpls-te-oper:mpls-te/tunnels/summary
  sensor-path Cisco-IOS-XR-ip-rsvp-oper:rsvp/interface-briefs/interface-brief
```

```
sensor-path Cisco-IOS-XR-ip-rsvp-oper:rsvp/counters/interface-messages/interface-message
!
```

Step 2 Subscribe to telemetry data that is streamed from a router. A [Subscription](#) binds the sensor-group, and sets the streaming method. The streaming method can be [Cadence-driven Telemetry](#) or [Event-driven Telemetry](#). Separating the sensor-paths into different subscriptions enhances the efficiency of the router to retrieve operational data at scale.

Example:

Note The configuration for event-driven telemetry is similar to cadence-driven telemetry, with only the sample interval as the differentiator. Configuring the sample interval value to 0 (zero), sets the subscription for event-driven telemetry, while configuring the interval to any non-zero value sets the subscription for cadence-driven telemetry.

```
subscription health
  sensor-group-id health strict-timer
  sensor-group-id health sample-interval 30000
!
subscription interfaces
  sensor-group-id interfaces strict-timer
  sensor-group-id interfaces sample-interval 30000
!
subscription optics
  sensor-group-id optics strict-timer
  sensor-group-id optics sample-interval 30000
!
subscription routing
  sensor-group-id routing strict-timer
  sensor-group-id routing sample-interval 30000
!
subscription mpls-te
  sensor-group-id mpls-te strict-timer
  sensor-group-id mpls-te sample-interval 30000
!
```

Verify Deployment of the Subscription

The receiver dials into the router to establish a dynamic session based on the subscription. After the session is established, the router streams data to the receiver to create a data lake.

You can verify the deployment of the subscription on the router.

Verify the state of the subscription. An `Active` state indicates that the router is ready to stream data to the receiver based on the subscription.

Example:

```
Router#show telemetry model-driven subscription
Thu Jan 16 09:48:14.293 UTC
Subscription: health                               State: Active
-----
Sensor groups:
  Id              Interval (ms)   State
health           30000           Resolved
```



```

Subscription: optics                               State: NA
-----
  Sensor groups:
  Id           Interval (ms)      State
  optics       30000             Resolved

Subscription: mpls-te                             State: NA
-----
  Sensor groups:
  Id           Interval (ms)      State
  mpls-te     30000             Resolved

Subscription: routing                             State: NA
-----
  Sensor groups:
  Id           Interval (ms)      State
  routing     30000             Resolved

Subscription: interfaces                           State: NA
-----
  Sensor groups:
  Id           Interval (ms)      State
  interfaces  30000             Resolved

Subscription: CPU-Utilization                       State: NA
-----
  Sensor groups:
  Id           Interval (ms)      State
  Monitor-CPU 30000             Resolved

Destination Groups:
Id           Encoding      Transport  State  Port  Vrf  IP
CPU-Health  self-describing-gpb tcp        NA     57500 172.0.0.0
No TLS

```

The router streams data to the receiver using the subscription-based telemetry session and creates a data lake in the receiver.

Operate on Telemetry Data for In-depth Analysis of the Network

You can start consuming and analyzing telemetry data from the data lake using an open-sourced collection stack. This use case uses the following tools from the collection stack:

- Pipeline is a lightweight tool used to collect data. You can download [Network Telemetry Pipeline](#) from Github. You define how you want the collector to interact with routers, and where you want to send the processed data using `pipeline.conf` file.
- Telegraph or InfluxDB is a time series database (TSDB) that stores telemetry data, which is retrieved by visualization tools. You can download [InfluxDB](#) from Github. You define what data you want to include into your TSDB using the `metrics.json` file.
- [Grafana](#) is a visualization tool that displays graphs and counters for data streamed from the router.

In summary, Pipeline accepts TCP and gRPC telemetry streams, converts data and pushes data to the InfluxDB database. Grafana uses the data from InfluxDB database to build dashboards and graphs. Pipeline and InfluxDB may run on the same server or on different servers.

Consider that the router is monitored for the following parameters:

- Memory and CPU utilization
- Interface counters and interface summary
- Transmitter and receiver power levels from optic controllers
- ISIS route counts and ISIS interfaces
- BGP neighbours, path count, and prefix count
- MPLS-TE tunnel summary
- RSVP control messages and bandwidth allocation for each interface

Step 1 Start Pipeline from the shell, and enter your router credentials.

Example:

```
$ bin/pipeline -config pipeline.conf
```

```
Startup pipeline
```

```
Load config from [pipeline.conf], logging in [pipeline.log]
```

```
CRYPT Client [grpc_in_myndtrouter], [http://172.0.0.0:5432]
```

```
Enter username: <username>
```

```
Enter password: <password>
```

```
Wait for ^C to shutdown
```

The streamed telemetry data is stored in InfluxDB.


Step 2 Use Grafana to create a dashboard and visualize the streamed data.

Figure 10: Visual Analysis of Network Health using Telemetry Data



369765

Figure 11: Visual Analysis of System Monitoring using Telemetry Data

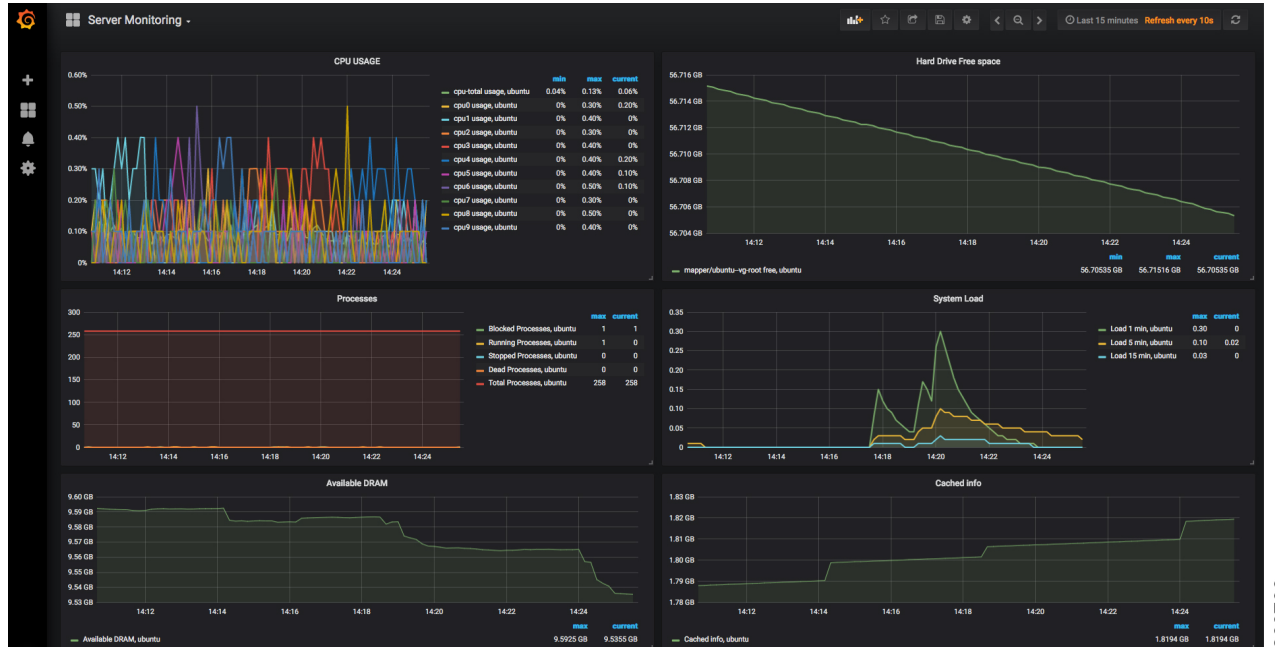

In conclusion, telemetry data shows that various parameters of the network can be monitored simultaneously. This data is streamed in near real-time without affecting the performance of the network. With this data, you gain better visibility into your network.



CHAPTER 6

Build Intelligence on the Router Using AI-Driven Telemetry

Table 4: Feature History Table

Feature Name	Release Information	Description
AI-driven telemetry (ADT)	Release 7.3.1	<p>This feature leverages machine learning to detect and retrieve important network-state changes on the router. Relevant data is filtered and exported to the network management system for analysis or troubleshooting purposes.</p> <p>ADT significantly simplifies the configuration of streaming telemetry, and you are no longer required to manually choose sensor paths or tune the cadence at which counters have to be collected.</p>

Cisco IOS XR offers a rich set of sensor paths that help you stream telemetry data about your network using [Establish a Model-Driven Telemetry Session from a Router to a Collector](#). However, this rich offering of sensor paths leads to the following questions:

- Which sensor paths do I have to subscribe to?
- When do I know that the state of the system has changed, and which parameters do I look for troubleshooting purposes?
- How do I map between my router configuration and the sensor paths that I must monitor?
- Can I get the state changes in an automated, unsupervised, and data-driven way?
- Can I automatically filter a small set of sensor paths that properly portray an event?

AI-Driven Telemetry (ADT) is the answer to all these questions.

This article describes ADT, a component of the Cisco IOS XR operating system. ADT leverages machine learning (ML) and artificial intelligence (AI) to detect and describe important state changes on the router, and export only the relevant data using telemetry.

ADT eases streaming telemetry data and does not require the complex configurations of MDT. MDT supports streaming telemetry data at a configured [Cadence-driven Telemetry](#), or when an [Event-driven Telemetry](#) occurs in the network. However, with MDT, not all telemetry data can be exported by the router at high frequencies. You must choose and subscribe to only a subset of the available information. Data availability does not mean that the data is easily consumable. You may miss some events generated within a cadence duration, either because you did not subscribe to the appropriate sensor paths or data models, or because the sampling rate was too coarse. On the other hand, you may be overwhelmed with redundant information, because a single event is represented through a large set of correlated counters.

ADT provides data-correlation and filtering on the router so that the router exports only the relevant data to network management systems (NMS). ADT correlates data by detecting important state changes on the router using a multivariate, unsupervised machine learning approach. ADT significantly simplifies the configuration of streaming telemetry. You are not required to choose the set of sensor paths (counters) to collect from the system, nor tune the cadence. ADT describes a change in the state of the router by choosing a small set of representative counters that best portray the change. The results of ADT change detection and description are provided as event-driven streaming telemetry using YANG model.

Consider a scenario where a bidirectional forwarding detection (BFD) session is enabled. Ideally, the system must filter a set of counters that are related to BFD. ADT uses automated feature selection process, wherein, in addition to streaming BFD-related counters, ADT might also highlight counters related to CPU. This is because BFD changes can trigger route re-calculation and eventually CPU occupancy. This shows that ADT learns the associated configuration in a system, and streams a representative set of sensor paths that get impacted with the state change. So, the use cases for ADT falls under a broad spectrum where any event that causes fluctuation at the interface-level traffic is detected in an unsupervised manner.

With this streamed telemetry data, a data lake is created at the collector. Analyzing this data, you proactively monitor your network, identify patterns, troubleshoot your network in a predictive manner, and devise strategies to create a resilient network using automation.

- [Key Components, on page 38](#)
- [Processing Telemetry Data on the Router to Analyze Traffic Changes, on page 39](#)

Key Components

ADT comprises of the following key components:

- **Collector:** Collects all data from the router to provide a comprehensive view of the system. This function is synonymous to MDT.
- **Detector:** Prepares the collected data, remove redundancies, and detect changes to provide a macroscopic view of the system unlike Event Driven Telemetry (EDT). The detector learns how the sensor paths evolve to depend on each other and monitors changes at the system level. This learning about dependencies is unsupervised, multi-variate and adaptive to the data stream.
- **Selector:** Chooses a small, representative subset of the set of counters that best portrays events that are detected by the Detector using AI and unsupervised ML.
- **Exporter:** Streams the selected sensor paths using the ADT YANG data model to the MDT infrastructure. The ADT data model supports EDT where data is streamed only when an event in the system is detected. With sample interval 0, there is no overhead due to high frequency push.

Processing Telemetry Data on the Router to Analyze Traffic Changes


The use case illustrates how, with the AI-driven telemetry (ADT), you can use telemetry data to monitor events in the network. Monitoring the events ensures efficient network management. This use case describes the tools that are used in the open-sourced collection stack to store and analyse telemetry data.



Note Watch this [video](#) to see how you configure model-driven telemetry to take advantage of data models, Open Source collectors, encodings, and integrate into monitoring tools.

Telemetry involves the following workflow:

Figure 12: AI-Driven Telemetry

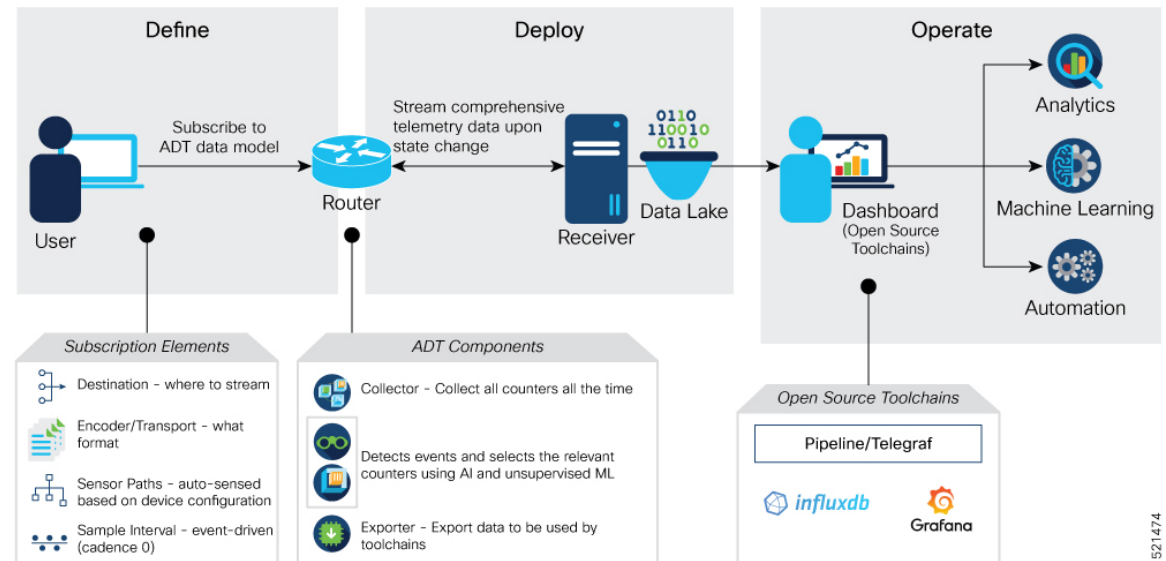

521474

- **Define:** You define a subscription to stream data from the router to the receiver. To define a subscription, you create a destination-group and a sensor-group.
- **Deploy:** The router establishes a subscription-based telemetry session and streams data to the receiver. You verify subscription deployment on the router.
- **Operate:** You consume and analyze telemetry data using Open Source tools, and take necessary actions based on analysis.

Before you begin

Make sure you have L3 connectivity between the router and the receiver for external traffic.

Define a Subscription to Stream ADT Events from Router to Receiver

Create a subscription to define the data of interest to be streamed from the router to the destination.

Step 1 Enable telemetry on the router.

Example:

```
Router(config)#telemetry model-driven
Router(config)#commit
```

Step 2 Enable ADT on the router.

Example:

```
Router(config)#adt enable
Router(config)#commit
```

Once ADT is enabled, it monitors a set of sensor paths that are derived from the configuration on the router. ADT learns these sensor paths in an unsupervised machine learning approach.

Note The `Cisco-IOS-XR-adt-config-cfg.yang` YANG data model can be used to configure ADT using NETCONF protocol.

```

container adt-config {
  description "Container Schema adt configuration";

  container enable-feature {
    presence "CLI submode compatibility.";
    description "Enable adt feature";

    container input {
      description "Sources for ADT collector";

      container mdt {
        description "MDT config for collector";

        container mdt-sensor-group-ids {
          description "MDT sensor groups";

          list mdt-sensor-group-id {
            key "groupname";
            description "MDT sensor group id";
            leaf groupname {
              type xr:Cisco-ios-xr-string;
              description "Mdt Sensor Group name";
            }
          }
        }
      }
    }
  }
}

```

The following example shows the basic configuration to enable ADT using data model.

```

<config>
  <adt-config xmlns="http://cisco.com/ns/yang/Cisco-IOS-XR-adt-config-cfg">
    <enable-feature/>
  </adt-config>
</config>

```

To disable ADT, use the following operation:

```

<config>
  <adt-config xmlns="http://cisco.com/ns/yang/Cisco-IOS-XR-adt-config-cfg">
    <enable-feature xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0"
nc:operation="delete"/>
  </adt-config>
</config>

```

Step 3 Create one or more destinations to collect telemetry data from a router. Define a destination-group to contain the details about the destinations. Include the destination address (IPv4 or IPv6) or fully qualified domain name (FQDN), port, transport, and encoding format in the destination-group.

Example:

```

Router(config)#telemetry model-driven
Router(config-model-driven)#destination-group ADT-DESTINATION
Router(config-model-driven-dest)#address family ipv4 172.0.0.0 port 57500
Router(config-model-driven-dest-addr)#encoding self-describing-gpb
Router(config-model-driven-dest-addr)#protocol tcp

```

Where -

- `ADT-DESTINATION` is the name of the destination-group
- `172.0.0.0` is the IP address of the destination where data is to be streamed

Note To avoid hardcoding IP address, the router can choose any of the configured IPv4 or IPv6 address using domain name service. If an established connection fails, the router connects to another resolved IP address, and streams data to that IP address.

- `57500` is the port number of the destination
- `self-describing-gpb` is the format in which data is encoded and streamed to the destination. For the supported formats, see [Encoder, on page 12](#).
- `tcp` is the protocol through which data is transported to the destination. For the supported protocols, see [Transport, on page 13](#).

Step 4 Specify the subset of the data that you want to stream from the router using sensor paths. The [Sensor Path](#) represents the path in the hierarchy of a YANG data model. Create a sensor-group to contain the sensor paths.

Example:

```
Router(config)#telemetry model-driven
Router(config-model-driven)#sensor-group ADT-EVENT
Router(config-model-driven-snsr-grp)#sensor-path Cisco-IOS-XR-adt-oper:adt/adt-output
```

Where -

- `ADT-EVENT` is the name of the sensor-group
- `Cisco-IOS-XR-adt-oper:adt/adt-output` is the sensor path from where data is streamed.

Note The following example shows how to add a custom sensor group using data model.

```
<config>
  <adt-config xmlns="http://cisco.com/ns/yang/Cisco-IOS-XR-adt-config-cfg">
    <enable-feature>
      <input>
        <mdt>
          <mdt-sensor-group-ids>
            <mdt-sensor-group-id>
              <groupname> QOS_VOQ </groupname>
            </mdt-sensor-group-id>
          </mdt-sensor-group-ids>
        </mdt>
      </input>
    </enable-feature>
  </adt-config>
</config>
```

Step 5 Subscribe to telemetry data that is streamed from a router. A [Subscription](#) binds the destination-group with the sensor-group and sets the streaming method. The streaming method can be [Cadence-driven Telemetry](#) or [Event-driven Telemetry](#). ADT is event-driven; subscriptions are defined with 0 (zero) cadence.

Example:

```
Router(config)#telemetry model-driven
Router(config-model-driven)#subscription ADT-SUBSCRIPTION
```

```
Router(config-model-driven-sub)#sensor-group-id ADT-EVENT sample-interval 0
Router(config-model-driven-sub)#destination-id ADT-DESTINATION
Router(config-model-driven-sub)#source-interface Interface1
```

Where -

- ADT-SUBSCRIPTION is the name of the subscription
- ADT-EVENT is the name of the sensor-group
- ADT-DESTINATION is the name of the destination-group
- Interface1 is the source interface that is used for establishing the telemetry session. If both the VRF and source interface are configured, the source interface must be in the same VRF as the one specified in the destination-group.
- 0 is the sample interval.

Running Configuration

```
adt enable
!
telemetry model-driven
 destination-group ADT-DESTINATION
  destination 172.0.0.0 port 57500
  encoding self-describing-gpb
  protocol tcp
!
!
 sensor-group ADT-EVENT
  sensor-path Cisco-IOS-XR-adt-oper:adt/adt-output
!
 subscription ADT-SUBSCRIPTION
  sensor-group-id ADT-EVENT sample-interval 0
  destination-id ADT-DESTINATION
!
!
```

Alternate Method: Configure ADT Using YANG Data Model

The above ADT configuration using CLI can also be configured using YANG data model `Cisco-IOS-XR-adt-config-cfg.yang`. You can obtain the data model from [Github](#).

```
<config>
  <adt-config xmlns="http://cisco.com/ns/yang/Cisco-IOS-XR-adt-config-cfg">
    <enable-feature/>
  </adt-config>
</config>
```

Verify Deployment of the Subscription

The router dials out to the receiver to establish a session with each destination in the subscription. After the session is established, the router streams data to the receiver to create a data lake.

ADT operational models are classified into three categories:

- **ADT events:** This model defines how ADT generates output to describe an event using `Cisco-IOS-XR-adt-oper:adt/adt-output` sensor path.

- **ADT subscriptions:** This model exports the sensor paths that are monitored by ADT and the cadence at which each path is monitored using `Cisco-IOS-XR-adt-oper:adt/subscription-info` sensor path.

```

Router#show adt subscription details
Wed Feb  3 14:51:39.444 IST
ADT SUBSCRIPTION  Details
[Subscription ID, Cadence(in seconds), (E)xplicit/(I)mPLICIT] Sensor Path
*Subscription ID = 0: Not enough system resources to subscribe

Active Groups : 2

    Group: QOS_VOQ
    -----
    [300000028,  20, E]
Cisco-IOS-XR-qos-ma-oper:qos/interface-table/interface/output/service-policy-names/service-policy-instance/statistics
    [300000027,  20, E]
Cisco-IOS-XR-firewall-bcm-dpa-npu-stats-oper:dpa/stats/nodes/node/npu-numbers/npu-number/display/base-numbers/base-number

    Group: implicit
    -----
    [300000001,  60, I]
Cisco-IOS-XR-telemetry-model-driven-oper:telemetry-model-driven/subscriptions/subscription
    [300000002,  40, I]
Cisco-IOS-XR-wdsysmon-fd-oper:system-monitoring/cpu-utilization
    [300000003,  40, I] Cisco-IOS-XR-nto-misc-oper:memory-summary/nodes/node/summary
    [300000004,  40, I]
Cisco-IOS-XR-procmon-oper:processes-memory/nodes/node[node-name="0/FP0/CPU0"]/process-ids/process-id[process-id="8893"]
    [300000005,  20, I]
Cisco-IOS-XR-pfi-im-cmd-oper:interfaces/node-type-sets/node-type-set/interface-summary
    [300000006,  20, I]
Cisco-IOS-XR-infra-stats-oper:infra-statistics/interfaces/interface[interface-name=".*(GigE|Ethernet).*"]/latest/generic-counters
    [300000007,  20, I] Cisco-IOS-XR-ipv6-io-oper:ipv6-io
    [300000008,  20, I] Cisco-IOS-XR-ip-iarm-v6-oper:ipv6arm/router-id

----- Truncated for Brevity -----

```

- **ADT statistics:** This model reports health statistics of ADT system using `Cisco-IOS-XR-adt-oper:adt/statistics` sensor path.

In this example, the output is shown for ADT events. ADT event can have one or more events reported.

- Each event contains:
 - An event identifier
 - The time-stamp of the event
 - A short description of the event
 - List of sensors that changed their behavior during the event
- Each sensor path exported contains:
 - Tags which define the scope of the sensor path
 - List of value, timestamp pair containing samples of the sensor output before and after the event.

Step 1 View the generated events.

Example:

Following is a snippet of ADT event output, generated by traffic change.

```

"node_id_str": "PE4",
"subscription_id_str": "app_1887_75f00000001",
"encoding_path": "Cisco-IOS-XR-adt-oper:adt/adt-output",
"collection_id": "9569581",
"collection_start_time": "1607525488535",
"msg_timestamp": "1607525488556",
"data_json": [
  {
    "timestamp": "1607525488552",
    "keys": [],
    "content": {
      "adt-event": [
        {
          "event-id": 123,
          "change-description": "Traffic",
          "timestamp": "1607431905419",
          "change": [
            {
              "sensor-path":
"Cisco-IOS-XR-infra-statsd-oper:infra-statistics/interfaces/interface/latest/generic-counters/bytes-received",

              "sensor-path-tags": "interface-name=GigabitEthernet0/3/0/19",
              "data": [
                {
                  "value": {
                    "value-type": 8,
                    "val-counter64": "62808023132655"
                  },
                  "timestamp": "1607431545418"
                },
                ...
                {
                  "value": {
                    "value-type": 8,
                    "val-counter64": "62869633436614"
                  },
                  "timestamp": "1607432235421"
                },
                {
                  "value": {
                    "value-type": 8,
                    "val-counter64": "62872314602090"
                  },
                  "timestamp": "1607432265421"
                }
              ]
            }
          ]
        }
      ]
    }
  },
  "collection_end_time": "1607525488556"

```

The router streams data to the receiver upon state change using the subscription-based telemetry session. A data lake is created at the receiver.

See the ADT events.

```
Router#show adt events
-----
| Number of Events :      5 |
-----
| Event id |          Timestamp | Description |
-----
|    119 | Tue 2020-12-01 13:41:56:141 |          Traffic |
|    120 | Thu 2020-12-03 19:36:14:937 | Addressing & Reachability |
|    121 | Thu 2020-12-03 20:00:48:015 | Addressing & Reachability |
|    122 | Sun 2020-12-06 17:09:57:994 |          Traffic |
|    123 | Tue 2020-12-08 18:21:45:419 |          Traffic |
-----
```

Step 2 See the details of events.

Example:

In this example, the details of event 123 are displayed.

```
Router#show adt events id 123 detail
Event Id      : 123
Timestamp     : Tue 2020-12-08 18:21:45:419
Description   : Traffic
Number of Sensor paths : 1
Sensor Path   :
Cisco-IOS-XR-infra-statsd-oper:infra-statistics/interfaces/interface/latest/generic-counters/bytes-received

Sensor Path Tags : interface-name=GigabitEthernet0/3/0/19
Message          :
  Number of entries in list: 25
  Value : [ 62808023132655, 62810701566605, 62813380497605, 62816056633805,
            62818733833405, 62821412539395, 62824092600551, 62826773125641,
            62829461449196, 62832132687840, 62834805072011, 62837462182289,
            62840165873427, 62842846468785, 62845523517431, 62848199893619,
            62852053505122, 62853557475735, 62856237814551, 62858917998694,
            62861594969436, 62864275943572, 62866948687442, 62869633436614,
            62872314602090, ]
  First Timestamp : Tue 2020-12-08 18:15:45:418 [1607431545418]
  Last Timestamp  : Tue 2020-12-08 18:27:45:421 [1607432265421]
```

ADT event lists 25 sample values of data that are reported by sensor paths before and after the event. So, 25 data points help us describe a particular event and its associated sensor path.

Operate on Telemetry Data for In-Depth Analysis of the Network

You can start consuming and analysing telemetry data from the data lake using an open-sourced collection stack. This use case uses the following tools from the collection stack:

- Pipeline is a lightweight tool that is used to collect data. You can download [Network Telemetry Pipeline](#) from Github. You define how you want the collector to interact with routers and where you want to send the processed data using `pipeline.conf` file.

- Telegraph (plugin-driven server agent) and InfluxDB (time series database (TSDB)) stores telemetry data, which is retrieved by visualization tools. You can download [InfluxDB](#) from Github. You define what data you want to include into your TSDB using the `metrics.json` file.
- [Grafana](#) is a visualization tool that displays graphs and counters for data that is streamed from the router.

In summary, Pipeline accepts TCP and gRPC telemetry streams, converts data and pushes data to the InfluxDB database. Grafana uses the data from the InfluxDB database to build dashboards and graphs. Pipeline and InfluxDB may run on the same server or on different servers.

Consider that the router is streaming data on an event change, and Telegraf requests information from the Pipeline at 1-second intervals.

Step 1 Start Pipeline, and enter your router credentials.

Note The IP address and port that you specify in the destination-group must match the IP address and port on which Pipeline is listening.

Example:

```
$ bin/pipeline -config pipeline.conf

Startup pipeline
Load config from [pipeline.conf], logging in [pipeline.log]

CRYPT Client [grpc_in_mydmtrouter], [http://172.0.0.0:5432]
Enter username: <username>
Enter password: <password>
Wait for ^C to shutdown
```


Step 2 In the Telegraph configuration file, add the following values to read the metrics about CPU usage.

Example:

```
[[inputs.cpu]]
  ## Whether to report per-cpu stats or not
  percpu = true
  ## Whether to report total system cpu stats or not
  totalcpu = true
  ## If true, collect raw CPU time metrics.
  collect_cpu_time = false
  ## If true, compute and report the sum of all non-idle CPU states.
  report_active = false
```


Step 3 Use Grafana to create a dashboard and visualize data.

Figure 13: Visual Analysis of the Interfaces Impacted Due to Traffic Change Using Telemetry Data

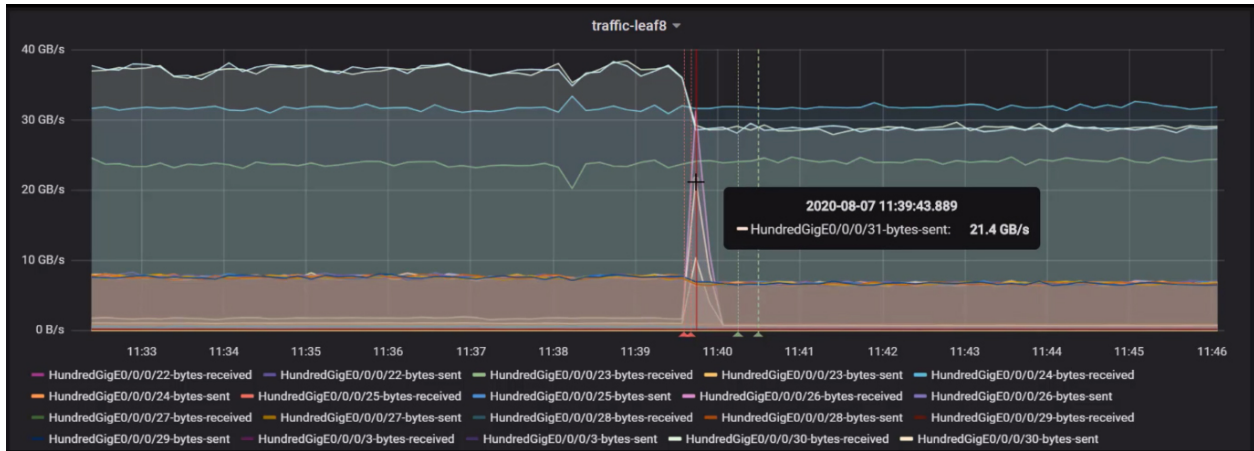

Further, narrow down to view the impact on individual interfaces. In this example, the bytes received for interfaces HundredGigE0/0/0/30 and HundredGigE0/0/0/31 are visualized and analysed.

Figure 14: Visual Analysis of System Monitoring on Two Interfaces Using Telemetry Data

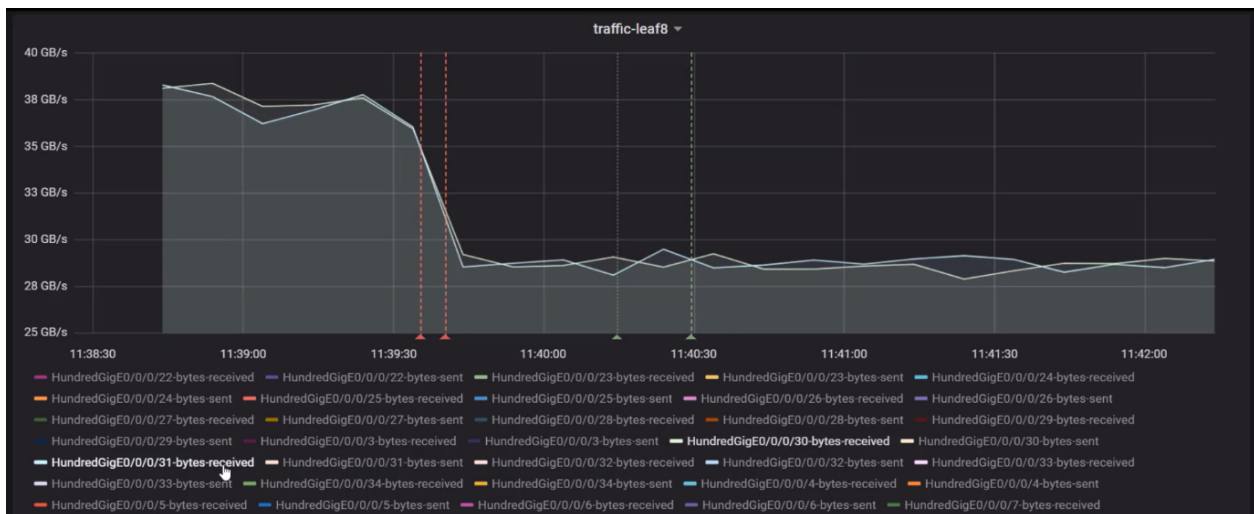

In conclusion, until the point where an event occurred, there is relatively no change. When an event is detected, there is significant drop in traffic on few interfaces and a peak on few other interfaces. ADT predicted these changes in the interfaces accurately using the associated sensor paths that it learned using AI and unsupervised ML from the router's configuration.



CHAPTER 7

Enhancements to Streaming Telemetry

This section provides an overview of the enhancements made to streaming telemetry data.

- [Hardware Timestamp](#), on page 49
- [Stream QoS Statistics Telemetry Data](#), on page 51
- [Enhanced Syslog Notifications for Unresolved Line Card Forwarding Paths](#), on page 56
- [Target-Defined Mode for Cached Generic Counters Data](#), on page 57
- [gNMI Dial-Out via Tunnel Service](#), on page 60
- [Stream Telemetry Data about PBR Decapsulation Statistics](#), on page 63

Hardware Timestamp

Table 5: Feature History Table

Feature Name	Release Information	Description
Hardware Timestamp	Release 7.3.1	<p>Whenever periodic statistics are streamed, the collector reads the data from its internal cache, instead of fetching the data from the hardware.</p> <p>When the data is read from the cache, the rate at which data is processed shows spikes because the timestamp from the collector is off by several seconds. With hardware timestamping, the inconsistencies that are observed when reading data from the cache file is removed.</p>

Whenever periodic stats are streamed, the collector reads the stats from its internal cache, instead of fetching the stats from the hardware. When the data is read from the sensor paths of Stats manager cache, the rate calculation shows spikes. This behavior is due to the timestamp from the collector that is off by several seconds. Therefore, timestamp of some other collector takes precedence because timestamps of collectors are not in synchronization with the current timestamp. This is observed when there are multiple collectors providing stats updates for the same interface.

The YANG data model for Stats manager `Cisco-IOS-XR-infra-statsd-oper.yang` is enhanced to enable the collector to read periodic stats data from the router using hardware timestamp.

The hardware timestamp is taken into account when a primary collector (for generic or proto stats) provides stats updates from the hardware to the Stats manager. With hardware timestamping in rate computation while streaming periodic stats, the spikes due to the timestamp issue is resolved.

The hardware timestamp is updated only when the collector attempts to read the counters from hardware. Else, the value remains 0. The latest stats can be streamed at a minimum cadence of 10 seconds and periodic stats at a cadence of 30 seconds. The support is available only for physical interfaces and subinterfaces, and bundle interface and subinterfaces.

When there is no traffic flow on protocols for an interface, the hardware timestamp for the protocols is published as 0. This is due to non-synchronized timestamps sent by the collector for protocols in traffic as compared to non-traffic scenarios.

A non-zero value is published for protocols that have stats published by a primary collector for both traffic and non-traffic scenarios.



Note The hardware timestamp is supported only for primary collectors. When the hardware has no update, the timestamp will be same. However generic counters are computed for primary and non-primary collectors. The non-primary collectors show the latest stats, but not the timestamp.

When the counters are cleared for an interface using **clear counters interface** command, all counter-related data including the timestamps for the interface is cleared. After all counter values are cleared and set to 0, the last data time is updated only when there is a request for it from a collector. For example, last data time gets updated from a collector:

```
Router#:Aug 7 09:01:08.471 UTC: statsd_manager_1[168]: Updated last data time for ifhandle
0x02000408,
stats type 2 from collector with node 0x100, JID 250, last data time 1596790868.
INPUT: last 4294967295 updated 1596469986. OUTPUT: last 4294967295 updated 1596469986
```

All other counter values and hardware timestamp are updated when the counters are fetched from the hardware. In this case, all counters including the hardware timestamp is 0:

```
{"node_id_str":"MGBL_MTB_5504","subscription_id_str":"app_TEST_200000001",
"encoding_path":"Cisco-IOS-XR-infra-statsd-oper:infra-statistics/interfaces/interface/cache/generic-counters",
"collection_id":"7848",
"collection_start_time":"1596790879567",
"msg_timestamp":"1596790879571","data_json":
[{"timestamp":"1596790879570","keys":[{"interface-name":"FortyGigE0/1/0/11"}],
"content":{"packets-received":"0","bytes-received":"0","packets-sent":"0",
"bytes-sent":"0","multicast-packets-received":"0","broadcast-packets-received":"0",
"multicast-packets-sent":"0","broadcast-packets-sent":"0","output-drops":0,"output-queue-drops":0,
"input-drops":0,"input-queue-drops":0,"runt-packets-received":0,"giant-packets-received":0,
"throttled-packets-received":0,"parity-packets-received":0,"unknown-protocol-packets-received":0,
"input-errors":0,"crc-errors":0,"input-overruns":0,"framing-errors-received":0,"input-ignored-packets":0,
"input-aborts":0,"output-errors":0,"output-underruns":0,"output-buffer-failures":0,"output-buffers-swapped-out":0,
"applique":0,"resets":0,"carrier-transitions":0,"availability-flag":0,
"last-data-time":"1596790868","hardware-timestamp":"0",
"seconds-since-last-clear-counters":15,"last-discontinuity-time":1596469946,"seconds-since-packet-received":0,
"seconds-since-packet-sent":0}}],"collection_end_time":"1596790879571"}
```

Stream QoS Statistics Telemetry Data

Table 6: Feature History Table

Feature Name	Release Information	Description
Stream QoS Statistics Telemetry Data	Release 7.3.3	<p>You can use the <code>Cisco-IOS-XR-qos-ma-oper.yang</code> data model to stream telemetry data on QoS statistics from the route processor (RP). The bundle statistics are now stored in the RP, where data is persistent, and its retrieval is unaffected by bundle member or line card failure.</p> <p>In earlier releases, QoS statistics was stored on line cards, and any bundle member or line card failure caused loss of statistics data.</p>

You can collect QoS statistics for physical, virtual, bundle interfaces and subinterfaces using a push mechanism where data is streamed out of the router at a cadence. You can also collect data about ingress, egress policy-map statistics and VoQ statistics of an egress policy-map. When data is collected from the hardware, the statistics data is time-stamped.

To enable the feature, use the **hw-module profile qos qos-stats-push-collection** command in XR Config mode. You must reload the router for the configuration to take effect. To clear the QoS statistics on an interface, use **clear qos counters interface *interface name*** command in XR Exec mode. To clear the statistics for all interfaces, use **clear qos counters interface all** command.



Note When the counters are cleared, the counters for SNMP statistics are also cleared.

For more information on modular QoS on link bundles, see *Modular QoS Command Reference for Cisco 8000 Series Routers*.

With this release, the interface statistics can be displayed using `Cisco-IOS-XR-qos-ma-oper.yang` data model. You can stream telemetry data from the sensor path:

```
Cisco-IOS-XR-qos-ma-oper:qos/interface-table/interface/input/service-policy-names/service-policy-instance/statistics
```

```
Cisco-IOS-XR-qos-ma-oper:qos/interface-table/interface/output/service-policy-names/service-policy-instance/statistics
```

```
Cisco-IOS-XR-qos-ma-oper:qos/interface-table/interface[interface-name<interface-name>]/input/service-policy-names/service-policy-instance[service-policy-name<egress>]/statistics
```

```
Cisco-IOS-XR-qos-ma-oper:qos/interface-table/interface[interface-name<interface-name>]/output/service-policy-names/service-policy-instance[service-policy-name<egress>]/statistics
```



Note This feature is not supported for all rate counters like matched-rate, transmitted-rate, dropped-rate in the QoS statistics. The bundle member statistics, location-based SPI statistics, sensor path for bundle members statistics, are not supported.

The following steps show the configuration to stream data about bundle statistics to the collector.

Step 1 Configure QoS on link bundles.

Example:

QoS Profile:

```
Router(config)# hw-module profile qos qos-stats-push-collection
Wed Dec 22 06:35:48.251 UTC
In order to activate this new qos profile, you must manually reload the chassis/all line cards
Router(config)#commit
```

Class-map:

```
Router(config)#class-map TC3
Router(config-cmap)#match traffic-class 1
Router(config-cmap)#commit
```

Policy-map:

```
Router(config)#policy-map egress
Router(config-pmap)#class TC3
Router(config-pmap-c)#shape average 1 mbps
Router(config-pmap-c)#commit
```

Step 2 Attach the service policy to an interface.

Example:

```
Router(config)#int hundredGigE 0/0/1/0.5
Router(config-if)#service-policy output egress
Router(config-if)#commit
```

Step 3 Configure telemetry subscription.

Example:

```
Router#show run telemetry model-driven
Wed Dec 22 10:27:10.846 UTC
telemetry model-driven
  destination-group destination-4
    address-family ipv4 5.16.4.114 port 51023
    encoding json
    protocol grpc no-tls
  !
!
  sensor-group qos-grp
    sensor-path Cisco-IOS-XR-qos-ma-oper:qos/interface-table/interface
      [interface-name=HundredGigE0/0/1/0.5]/output/service-policy-names/service-policy-instance
      [service-policy-name=egress]/statistics
  !
subscription qos-subs
  sensor-group-id qos-grp sample-interval 10000
  destination-id destination-4
```

!
!

Verification

Verify the QoS telemetry configuration.

Policy Map:

```
Router#show policy-map pmap-name egress detail
Wed Dec 22 06:50:53.779 UTC
class-map match-any TC3
  match traffic-class 1
end-class-map
!
policy-map egress
  class TC3
    shape average 1 mbps
  !
  class class-default
  !
end-policy-map
!
```

Statistics Data:

```
Router#show policy-map interface HundredGigE0/0/1/0.5 output
Wed Dec 22 08:29:18.603 UTC

HundredGigE0/0/1/0.5 output: egress

Class TC3
  Classification statistics          (packets/bytes)    (rate - kbps)
  Matched                          :          55563/55563000      0
  Transmitted                       :          55401/55401000      0
  Total Dropped                     :           162/162000         0
  Queueing statistics
  Queue ID                          :          1377
  High watermark (Unknown)
  Inst-queue-len (Unknown)
  Avg-queue-len (Unknown)
  Taildropped(packets/bytes)        :          162/162000
  Queue(conform)                   :              0/0              0
  Queue(exceed)                    :              0/0              0
Class class-default
  Classification statistics          (packets/bytes)    (rate - kbps)
  Matched                          :          1077710/1077710000    0
  Transmitted                       :          1077710/1077710000    0
  Total Dropped                     :              0/0              0
  Queueing statistics
  Queue ID                          :          1376
  High watermark (Unknown)
  Inst-queue-len (Unknown)
  Avg-queue-len (Unknown)
  Taildropped(packets/bytes)        :              0/0
  Queue(conform)                   :              0/0              0
  Queue(exceed)                    :              0/0              0
Policy Bag Stats time: 1637137751027 [Local Time: 12/22/21 08:29:11.027]
```

QoS Statistics Using Telemetry:

The sample output shows the telemetry data streamed from the router:

```
{
  "node_id_str": "R1",
  "subscription_id_str": "qos-subs",
  "encoding_path":
  "Cisco-IOS-XR-qos-ma-oper:qos/interface-table/interface/output/service-policy-names/service-policy-instance/statistics",

  "collection_id": "21226",
  "collection_start_time": "1637144915201",
  "msg_timestamp": "1637144915203",
  "data_json": [
    {
      "timestamp": "1637144891032",
      "keys": [
        {
          "interface-name": "HundredGigE0/0/1/0.5"
        },
        {
          "service-policy-name": "egress"
        }
      ],
      "content": {
        "policy-name": "egress",
        "state": "active",
        "class-stats": [
          {
            "counter-validity-bitmask": "270532608",
            "class-name": "TC3",
            "cac-state": "unknown",
            "general-stats": {
              "transmit-packets": "239519",
              "transmit-bytes": "239519000",
              "total-drop-packets": "798",
              "total-drop-bytes": "798000",
              "total-drop-rate": 0,
              "match-data-rate": 0,
              "total-transmit-rate": 0,
              "pre-policy-matched-packets": "240317",
              "pre-policy-matched-bytes": "240317000"
            },
            "queue-stats-array": [
              {
                "queue-id": 1377,
                "tail-drop-packets": "798",
                "tail-drop-bytes": "798000",
                "queue-drop-threshold": 0
              }
            ]
          }
        ],
        "forced-wred-stats-display": false,
        "random-drop-packets": "0",
        "random-drop-bytes": "0",
        "max-threshold-packets": "0",
        "max-threshold-bytes": "0",
        "conform-packets": "0",
        "conform-bytes": "0",
        "exceed-packets": "0",
        "exceed-bytes": "0",
        "conform-rate": 0,
        "exceed-rate": 0
      }
    },
    {
      "counter-validity-bitmask": "270532608",
      "class-name": "class-default",
    }
  ]
}
```

```

        "cac-state": "unknown",
        "general-stats": {
            "transmit-packets": "4661952",
            "transmit-bytes": "4661952000",
            "total-drop-packets": "0",
            "total-drop-bytes": "0",
            "total-drop-rate": 0,
            "match-data-rate": 0,
            "total-transmit-rate": 0,
            "pre-policy-matched-packets": "4661952",
            "pre-policy-matched-bytes": "4661952000"
        },
        "queue-stats-array": [
            {
                "queue-id": 1376,
                "tail-drop-packets": "0",
                "tail-drop-bytes": "0",
                "queue-drop-threshold": 0,
                "forced-wred-stats-display": false,
                "random-drop-packets": "0",
                "random-drop-bytes": "0",
                "max-threshold-packets": "0",
                "max-threshold-bytes": "0",
                "conform-packets": "0",
                "conform-bytes": "0",
                "exceed-packets": "0",
                "exceed-bytes": "0",
                "conform-rate": 0,
                "exceed-rate": 0
            }
        ],
        "satisfid": 0,
        "policy-timestamp": "1637144891032"
    },
    "collection_end_time": "1637144915203"
}

```

Enhanced Syslog Notifications for Unresolved Line Card Forwarding Paths

Table 7: Feature History Table

Feature Name	Release Information	Description
Enhanced Syslog Notifications for Unresolved Line Card Forwarding Paths	Release 7.5.2 Release 7.3.3	This feature notifies you of Line Card and Route Processor paths not resolving in the Forwarding Information Base. Both Model-Driven Telemetry (MDT) and Event Driven Telemetry (EDT) notifications are supported. In earlier releases, notifications for route processors were supported. This feature provides for improved diagnostics.

Telemetry now supports syslog notification from line cards. This is in addition to the existing notification support from route processors. You will be notified of line card and route processor paths not resolving in the Forwarding Information Base (FIB), through MDT and EDT notifications.

MDT is configured for cadence-based telemetry, while EDT is configured for event-based notification. Notifications are generated only when the device goes into error or OOR state, and during device recovery. Errors and OOR are tracked for a device as a whole, and not for individual nodes. The IPv4 Error, IPv6 Error, IPv4 OOR, and IPv6 OOR telemetry notifications are supported.

The following notification is an example of IPv4 error state, if a line card and route processor paths do not resolve in the FIB:

```
GPB(common) Message
[5.13.9.177:38418(PE1)/Cisco-IOS-XR-fib-common-oper:oc-aft-l3/protocol/ipv4/error/state msg
 len: 168]
{
  "Source": "5.13.9.177:38418",
  "Telemetry": {
    "node_id_str": "PE1",
    "subscription_id_str": "Sub2",
    "encoding_path": "Cisco-IOS-XR-fib-common-oper:oc-aft-l3/protocol/ipv4/error/state",

    "collection_id": 243,
    "collection_start_time": 1637858634881,
    "msg_timestamp": 1637858634881,
    "collection_end_time": 1637858634883
  },
  "Rows": [
    {
      "Timestamp": 1637858634882,
      "Keys": null,
      "Content": {
        "is-in-error-state": "true"
      }
    }
  ]
}
```




Note The parameters denote "Content": {"is-in-error-state": "true"} that the system is in error state.

The following notification is an example of IPv4 OOR, if a line card and route processor are in OOR state:

```
GPB (common) Message
[5.13.9.177:50146 (PE1) /Cisco-IOS-XR-fib-common-oper:oc-aft-13/protocol/ipv4/oor/state msg
len: 163]
{
  "Source": "5.13.9.177:50146",
  "Telemetry": {
    "node_id_str": "PE1",
    "subscription_id_str": "Sub1",
    "encoding_path": "Cisco-IOS-XR-fib-common-oper:oc-aft-13/protocol/ipv4/oor/state",
    "collection_id": 11,
    "collection_start_time": 1637815892624,
    "msg_timestamp": 1637815892624,
    "collection_end_time": 1637815892626
  },
  "Rows": [
    {
      "Timestamp": 1637815892625,
      "Keys": null,
      "Content": {
        "is-in-oor-state": "true"
      }
    }
  ]
}
```



Note The parameters denote "Content": {"is-in-oor-state": "true"} that the system is in OOR state.

Target-Defined Mode for Cached Generic Counters Data

Table 8: Feature History Table

Feature Name	Release Information	Description
Target-Defined Mode for Cached Generic Counters Data	Release 7.5.1	<p>This feature streams telemetry data for cached generic counters using a TARGET_DEFINED subscription. This subscription ensures that any change to the cache streams the latest data to the collector as an event-driven telemetry notification.</p> <p>This feature introduces support for the following sensor path:</p> <pre>Cisco-IOS-XR-infra-statsd-oper:infra- statistics/interfaces/interface/cache/generic-counters</pre>

Streaming telemetry pushes the subscribed data from the router to one or more collectors. The telemetry infrastructure retrieves the data from the system database when you send a subscription request. Based on the subscription request or the telemetry configuration the cached generic counters data can be retrieved periodically based on the sample-interval. Data, such as interface statistics, is cached and refreshed at certain intervals. The `TARGET_DEFINED` subscription mode can be used to retrieve data when the cache gets updated, and is not based on a timer.

The application can register as a data producer with the telemetry library and the SysdB paths it supports. One of the data producers, Statsd, uses the library with a `TARGET_DEFINED` subscription mode. As part of this mode, the producer registers the sensor paths. The statistics infrastructure streams the incremental updates for statsd cache sensor path

`Cisco-IOS-XR-infra-statsd-oper:infra-statistics/interfaces/interface/cache/generic-counters`. With this path in the subscription, whenever cache is updated, the statsd application pushes the updates to the telemetry daemon. The daemon sends these incremental updates to the collector. The cache updates are pushed for physical interfaces, physical subinterfaces, bundle interfaces, and bundle subinterfaces. You can subscribe to the sensor path for the cached generic counters with `TARGET_DEFINED` mode instead of the sensor path for the latest generic counters
(`Cisco-IOS-XR-infra-statsd-oper:infra-statistics/interfaces/interface/latest/generic-counters`) to reduce the system load.

Configure the router to stream telemetry data from cache for generic counters using the following instructions:

Create a `TARGET_DEFINED` subscription mode for cached generic counters using one of the two options:

- **Option 1:** gRPC Network Management Interface (gNMI) subscribe request

```
{
  "name": "SubscribeRequest",
  "subscribe": {
    "prefix": {"origin":
      "Cisco-IOS-XR-infra-statsd-oper"
    },
  },
  "mode": "STREAM", "encoding": "PROTO", "updates_only": "false",
  "subscription": [
    { "path": {"elem": [ {"name": "infra-statistics"},
      {"name": "interfaces"},
      {"name": "interface"},
      {"name": "cache"},
      {"name": "generic-counters"}
    ]}
  ],
  "mode": "TARGET_DEFINED"
}
}
```

- **Option 2:** Model-driven telemetry configuration for non-gNMI requests

```
Router(config)#telemetry model-driven
Router(config-model-driven)#subscription sub1
Router(config-model-driven-subs)#sensor-group-id grp1 mode target-defined
Router(config-model-driven-subs)#source-interface Interface1
Router(config-model-driven-subs)#commit
```

After the subscription is triggered, updates to the stats cache are monitored. The statsd application pushes the cached generic counters to the client (collector).

View the number of incremental updates for the sensor path.

```
Router#show telemetry model-driven subscription .*
Fri Nov 12 23:36:27.212 UTC
Subscription: GNMI__16489080148754121540
-----
Collection Groups:
-----
  Id: 1
  Sample Interval:      0 ms    (Incremental Updates)
  Heartbeat Interval:   NA
  Heartbeat always:    False
  Encoding:             gnmi-proto
  Num of collection:    1
  Incremental updates: 12
  Collection time:      Min:      5 ms Max:      5 ms
  Total time:          Min:      6 ms Avg:      6 ms Max:      6 ms
  Total Deferred:      1
  Total Send Errors:    0
  Total Send Drops:     0
  Total Other Errors:   0
  No data Instances:    0
  Last Collection Start:2021-11-12
                        23:34:27.1362538876 +0000
  Last Collection End:  2021-11-12  23:34:27.1362545589
                        +0000
  Sensor Path:         Cisco-IOS-XR-infra-statsd-oper:infra-statistics/interfaces/
                        interface/cache/generic-counters
```

In this example, the incremental updates of 12 indicates that the cache is updated 12 times.

You can also retrieve the detailed operational data about the subscription using the following command. In this example, `statsd-target` is the subscription name.

```
Router#show telemetry model-driven subscription statsd-target internal
Fri Nov 12 08:51:16.728 UTC
Subscription: statsd-target
-----
State: ACTIVE
Sensor groups:
Id: statsd
Sample Interval: 0 ms (Incremental Updates)
Heartbeat Interval: NA
Sensor Path: Cisco-IOS-XR-infra-statsd-oper:infra-statistics/interfaces/interface/cache/
              generic-counters
Sensor Path State: Resolved

Destination Groups:
Group Id: statsd-target
Destination IP: 192.0.2.1
Destination Port: 56000
Encoding: json
Transport: grpc
State: Active
TLS : False
Total bytes sent: 623656
Total packets sent: 13
Last Sent time: 2021-08-16 08:51:15.1304821089 +0000

Collection Groups:
-----
  Id: 2
  Sample Interval: 0 ms (Incremental Updates)
  Heartbeat Interval: NA
  Heartbeat always: False
```

```

Encoding: json
Num of collection: 1
Incremental updates: 3
Collection time: Min: 94 ms Max: 94 ms
Total time: Min: 100 ms Avg: 100 ms Max: 100 ms
Total Deferred: 0
Total Send Errors: 0
Total Send Drops: 0
Total Other Errors: 0
No data Instances: 0
Last Collection Start:2021-08-16 08:51:04.1293895665 +0000
Last Collection End: 2021-08-16 08:51:04.1293996284 +0000

```

The sample interval of 0 indicates that the data is streamed whenever an event occurs. Here, the event represents the updates to the cache state.

Related Commands:

- `show tech telemetry model-driven`
- `show running-config telemetry model-driven`
- `show telemetry producers trace producer name info`
- `show telemetry producers trace producer name err`

gNMI Dial-Out via Tunnel Service

Table 9: Feature History Table

Feature Name	Release Information	Description
gNMI Dial-Out via Tunnel Service	Release 7.5.1	<p>This feature uses the tunnel service to allow the router (tunnel client) to dial out to a collector (tunnel server). After the session is established, the server-client switch directions where a server can act as a client to request gNMI services without altering the gNMI semantics. With this feature, the management software automatically learns when a new device is introduced in the network.</p> <p>This feature introduces the keyword tunnel to the grpc command.</p>

gNMI supports a dial-in session where a client connects to the router via gRPC server with the gNMI specification. This feature introduces support to use a tunnel service for gNMI dial-out connections based on the recommendation from OpenConfig forum.

With the gNMI dial-out through tunnel service, the router (tunnel client) dials out to a collector (tunnel server). Once the session is established, the tunnel server can act as a client and request gNMI services and gNMI Subscribe RPCs over the tunnel session. This feature allows a change in direction of session establishment

and data collection without altering the gNMI semantics. Using gRPC tunnel dial-out session, the router initiates the connection to external collector so that the management software is automatically aware when a new device is introduced into the network.

For more information about gNMI dial-out via gRPC tunnel, see the [Github](#) repository.



Note Only the gNMI Subscribe RPC over the tunnel is supported.



Note The tunnel service supports only Transport Layer Security (TLS) session.

Perform the following steps to configure gNMI dial-out via tunnel service:

Step 1 Configure a third-party application (TPA) source address. This address sets a source hint for Linux applications, so that the traffic originating from the applications can be associated to any reachable IP (IPv4 or IPv6) address on the router.

Example:

```
Router(config)#tpa
Router(config)#vrf default
Router(config-vrf)#address-family ipv4
Router(config-vrf)#update-source dataports TenGigE0/6/0/0/1
```

A default route is automatically gained in the Linux shell.

Step 2 Configure the gNMI tunnel service on the router.

Example:

```
Router(config)#grpc tunnel destination ipv4
port 59510 source-interface TenGigE0/6/0/0/1 target Target-1 vrf default
```

Where—

- source-interface: Source ethernet interface
- target: Target name to register the tunnel service
- vrf: Virtual Routing and Forwarding (VRF) instance for the dial-out session. If VRF and source-interface are configured, VRF takes precedence over the source-interface.

Step 3 Verify that the gRPC tunnel configuration is successful on the router.

Example:

```
Router#show run grpc
Wed Nov 24 19:37:21.015 UTC
grpc
  port 57500
  no-tls
  tunnel
    destination 5.0.0.2 port 59510
    target Target-1
    source-interface GigabitEthernet0/0/0/1
  !
  destination 2002::1:2 port 59510
  source-interface GigabitEthernet0/0/0/0
```

```

!
destination 192.0.0.1 port 59500
!
destination 192.0.0.1 port 59600
!
!
!

```

Step 4 View the status of tunnel destination.

Example:

```

Router#show grpc tunnel sessions
Wed Nov 24 19:41:38.863 UTC
5.0.0.2:59510
Target:          Target-1
Status:          Not connected
Error:           Source Interface is down
Source interface: GigabitEthernet0/0/0/1
Source address:  5.0.0.1
Source VRF:      default

[2002::1:2]:59510
Target:          Target-2
Status:          Connected
Source interface: GigabitEthernet0/0/0/0
Source address:  2002::1:1
Source VRF:      default
Last Connected:  2021-11-24 19:41:23

192.168.122.1:59500
Target:          Target-2
Status:          Connected
Last Connected:  2021-11-24 19:40:15

192.168.122.1:59600
Target:          Target-2
Status:          Not connected
Error:           cert missing /misc/config/grpc/192.0.0.1:59600.pem
Last Attempted:  2021-11-24 19:41:15

```

Step 5 Copy the public certificate for the collector to `/misc/config/grpc/<ip-addr>:<port>.pem` directory. The router uses this certificate to verify the tunnel server, and establish a dial-out session.

Step 6 Run the collector.

Stream Telemetry Data about PBR Decapsulation Statistics

Table 10: Feature History Table

Feature Name	Release Information	Description
Stream Telemetry Data about PBR Decapsulation Statistics	Release 7.3.2	This feature streams telemetry data about header decapsulation statistics for traffic that uses the Policy-Based Routing (PBR) functionality to bypass a routing table lookup for egress. You use the <code>Cisco-IOS-XR-infra-policymgr-oper.yang</code> data model to capture the decapsulation data for Generic Routing Encapsulation (GRE) and Generic UDP Encapsulation (GUE) tunneling protocols. Decapsulation data helps you understand if all encapsulated packets are decapsulated and alerts you to issues if there is a mismatch in the number of packets.

You can stream telemetry data about PBR decapsulation statistics for GRE and GUE encapsulation protocols that deliver packets using IPv4 or IPv6. The encapsulated data has source and destination address that must match with the source and destination address in the classmap. Both encapsulation and decapsulation interfaces collect statistics periodically. The statistics can be displayed on demand using **show policy-map type pbr [vrf vrf-name] address-family ipv4/ipv6 statistics** command. For more information on PBR-based decapsulation, see *Interface and Hardware Component Configuration Guide for Cisco 8000 Series Routers*.

With this release, the decapsulation statistics can be displayed using

`Cisco-IOS-XR-infra-policymgr-oper.yang` data model and telemetry data. You can stream telemetry data from the sensor path:

```
Cisco-IOS-XR-infra-policymgr-oper:policy-manager/global/policy-map/policy-map-types/policy-map-type/vrf-table/vrf/afi-table/afi/stats
```

The following steps show the PBR configuration and the decapsulation statistics that is streamed as telemetry data to the collector.

Step 1 Check the running configuration to view the configured PBR per VRF.

Example:

```
Router#show running-config
Building configuration...
!! IOS XR Configuration 0.0.0
!!
vrf vrf1
 address-family ipv4 unicast
 !
 address-family ipv6 multicast
 !
```

```

!
netconf-yang agent
  ssh
!
!
class-map type traffic match-all cmap1
  match protocol gre
  match source-address ipv4 161.0.1.1 255.255.255.255
  match destination-address ipv4 161.2.1.1 255.255.255.255
end-class-map
!
policy-map type pbr gre-policy
  class type traffic cmap1
  decapsulate gre
  !
  class type traffic class-default
  !
end-policy-map
!
interface GigabitEthernet0/0/0/1
  vrf vrf1
  ipv4 address 2.2.2.2 255.255.255.0
  shutdown
!
vrf-policy
  vrf vrf1 address-family ipv4 policy type pbr input gre-policy
!
end

```

Step 2 View the output of the VRF statistics.

Example:

```
Router#show policy-map type pbr vrf vrf1 addr-family ipv4 statistics
```

```

VRF Name:      vrf1
Policy-Name:   gre-policy
Policy Type:   pbr
Addr Family:   IPv4

Class:      cmap1
  Classification statistics      (packets/bytes)
    Matched      :      13387587/1713611136
  Transmitted statistics      (packets/bytes)
    Total Transmitted      :      13387587/1713611136

Class:      class-default
  Classification statistics      (packets/bytes)
    Matched      :      0/0
  Transmitted statistics      (packets/bytes)
    Total Transmitted      :      0/0

```

After you have verified that the statistics are displayed correctly, stream telemetry data and check the streamed data at the collector. For more information about collectors, see *Operate on Telemetry Data for In-depth Analysis of the Network* section in the [Monitor CPU Utilization Using Telemetry Data to Plan Network Infrastructure, on page 20](#) chapter.

```

ios.0/0/CPU0/ $ mdt_exec -s Cisco-IOS-XR-infra-policymgr-oper:policy-manager
/global/policy-map/policy-map-types/policy-map-type/vrf-table/vrf/afi-table/afi/stats -c 100
{"node_id_str":"ios","subscription_id_str":"app_TEST_200000001","encoding_path":
"Cisco-IOS-XR-infra-policymgr-oper:policy-manager/global/policy-map/policy-map-types/policy-map-type
/vrf-table/vrf/afi-table/afi/stats","collection_id":"1","collection_start_time":"1601361558157",
"msg_timestamp":"1601361559179","data_json":[{"timestamp":"1601361559178","keys":{"type":"ipv6"},
{"vrf-name":"vrf_gue_ipv4"}, {"type":"ipv4"}],"content":{"pmap-name":"gre-policy","vrf-name":
"vrf1","appln-type":2,"addr-family":1,"rc":0,"plmgr-vrf-stats":[{"pmap-name":"gre-policy",

```



```
"cmap-stats-arr": [{"cmap-name": "cmap1", "matched-bytes": "1713611136", "matched-packets": "13387587",  
"transmit-bytes": "1713611136", "transmit-packets": "13387587"}]}],  
"collection_end_time": "1601361559183"}  
----- snipped for brevity -----
```
