



Configuring VXLAN BGP EVPN

This chapter contains the following sections:

- [Information About VXLAN BGP EVPN, on page 1](#)
- [Configuring VXLAN BGP EVPN, on page 4](#)
- [Configuring Anycast Gateway for VXLAN Routing, on page 6](#)
- [Configuring the NVE Interface and VNIs, on page 6](#)
- [Configuring BGP on the VTEP, on page 7](#)
- [Configuring RD and Route Targets for VXLAN Bridging, on page 8](#)
- [Configuring BGP for EVPN on the Spine, on page 8](#)
- [Disabling VXLANs, on page 9](#)
- [Duplicate Detection for IP and MAC Addresses, on page 10](#)
- [Verifying the VXLAN Configuration, on page 11](#)
- [Example of VXLAN BGP EVPN \(EBGP\), on page 12](#)
- [Example of VXLAN BGP EVPN \(IBGP\), on page 23](#)
- [Example Show Commands, on page 31](#)

Information About VXLAN BGP EVPN

Guidelines and Limitations for VXLAN BGP EVPN

VXLAN BGP EVPN has the following guidelines and limitations:

- SVI and sub-interfaces as core links are not supported along with Layer 2 GW configurations.
- In a VXLAN EVPN setup, border leaves must use unique route distinguishers, preferably using **auto rd** command. It is not supported to have same route distinguishers in different border leaves.
- ARP suppression is only supported for a VNI if the VTEP hosts the First-Hop Gateway (Distributed Anycast Gateway) for this VNI. The VTEP and the SVI for this VLAN have to be properly configured for the distributed anycast gateway operation, for example, global anycast gateway MAC address configured and anycast gateway feature with the virtual IP address on the SVI.
- The **show** commands with the **internal** keyword are not supported.
- DHCP snooping (Dynamic Host Configuration Protocol snooping) is not supported on VXLAN VLANs.

- SPAN for VXLAN uplink interface is not supported.
- ACLs are not supported on Layer 3 uplinks for VXLAN traffic.
- ACLs and PACLS are not supported for VXLAN VLANs.
- QoS classification is not supported for VXLAN VLANs.
- Uplink ports can be of type Layer 3 interface, sub-interface, or a Layer 3 port-channel interface. However with Layer 2 GW sub-interface uplink ports are not supported.
- For EBGp, it is recommended to use a single overlay EBGp EVPN session between loopbacks.
- Bind NVE to a loopback address that is separate from other loopback addresses that are required by Layer 3 protocols. A best practice is to use a dedicated loopback address for VXLAN.
- VXLAN BGP EVPN does not support an NVE interface in a non-default VRF.
- It is recommended to configure a single BGP session over the loopback for an overlay BGP session.
- The VXLAN UDP port number is used for VXLAN encapsulation. For Cisco Nexus NX-OS, the UDP port number is 4789. It complies with IETF standards and is not configurable.
- VXLAN does not support co-existence with the MPLS feature.
- VXLAN with Layer 3 VPN is not supported.
- VXLAN with ingress replication is not supported.
- MLD snooping is not supported on VXLAN VLANs.
- DHCP snooping is not supported on VXLAN VLANs.

Considerations for VXLAN BGP EVPN Deployment

- A loopback address is required when using the **source-interface config** command. The loopback address represents the local VTEP IP.
- To establish IP multicast routing in the core, IP multicast configuration, PIM configuration, and RP configuration is required.
- VTEP to VTEP unicast reachability can be configured through any IGP/BGP protocol.
- As a best practice when changing the IP address of a VTEP device, enter the **shut** command on the loopback interface used by the NVE interface and then enter the **no shut** command before changing the IP address.
- Every tenant VRF needs a VRF overlay VLAN and SVI for VXLAN routing.

Network Considerations for VXLAN Deployments

- MTU Size in the Transport Network

Due to the MAC-to-UDP encapsulation, VXLAN introduces 50-byte overhead to the original frames. Therefore, the maximum transmission unit (MTU) in the transport network needs to be increased by 50 bytes. If the overlays use a 1500-byte MTU, the transport network needs to be configured to accommodate

1550-byte packets at a minimum. Jumbo-frame support in the transport network is required if the overlay applications tend to use larger frame sizes than 1500 bytes.

- ECMP and LACP Hashing Algorithms in the Transport Network

As described in a previous section, Cisco Nexus 3600 platform switches introduce a level of entropy in the source UDP port for ECMP and LACP hashing in the transport network. As a way to augment this implementation, the transport network uses an ECMP or LACP hashing algorithm that takes the UDP source port as an input for hashing, which achieves the best load-sharing results for VXLAN encapsulated traffic.

- Multicast Group Scaling

The VXLAN implementation on Cisco Nexus 3600 platform switches uses multicast tunnels for broadcast, unknown unicast, and multicast traffic forwarding. Ideally, one VXLAN segment mapping to one IP multicast group is the way to provide the optimal multicast forwarding. It is possible, however, to have multiple VXLAN segments share a single IP multicast group in the core network. VXLAN can support up to 16 million logical Layer 2 segments, using the 24-bit VNID field in the header. With one-to-one mapping between VXLAN segments and IP multicast groups, an increase in the number of VXLAN segments causes a parallel increase in the required multicast address space and the amount of forwarding states on the core network devices. At some point, multicast scalability in the transport network can become a concern. In this case, mapping multiple VXLAN segments to a single multicast group can help conserve multicast control plane resources on the core devices and achieve the desired VXLAN scalability. However, this mapping comes at the cost of suboptimal multicast forwarding. Packets forwarded to the multicast group for one tenant are now sent to the VTEPs of other tenants that are sharing the same multicast group. This causes inefficient utilization of multicast data plane resources. Therefore, this solution is a trade-off between control plane scalability and data plane efficiency.

Despite the suboptimal multicast replication and forwarding, having multiple-tenant VXLAN networks to share a multicast group does not bring any implications to the Layer 2 isolation between the tenant networks. After receiving an encapsulated packet from the multicast group, a VTEP checks and validates the VNID in the VXLAN header of the packet. The VTEP discards the packet if the VNID is unknown to it. Only when the VNID matches one of the VTEP's local VXLAN VNIDs, does it forward the packet to that VXLAN segment. Other tenant networks will not receive the packet. Thus, the segregation between VXLAN segments is not compromised.

Considerations for the Transport Network

The following are considerations for the configuration of the transport network:

- On the VTEP device:
 - Enable and configure IP multicast.
 - Create and configure a loopback interface with a /32 IP address.
 - Enable IP multicast on the loopback interface.
 - Advertise the loopback interface /32 addresses through the routing protocol (static route) that runs in the transport network.
 - Enable IP multicast on the uplink outgoing physical interface.
- Throughout the transport network:

- Enable and configure IP multicast.

BGP EVPN Considerations for VXLAN Deployment

Configuring VXLAN BGP EVPN

Enabling VXLAN

Enable VXLAN and the EVPN.

Procedure

| | Command or Action | Purpose |
|---------------|---------------------------------|--|
| Step 1 | <code>feature vn-segment</code> | Enable VLAN-based VXLAN |
| Step 2 | <code>feature nv overlay</code> | Enable VXLAN |
| Step 3 | <code>nv overlay evpn</code> | Enable the EVPN control plane for VXLAN. |

Configuring VLAN and VXLAN VNI

Procedure

| | Command or Action | Purpose |
|---------------|---------------------------------------|--|
| Step 1 | <code>vlan <i>number</i></code> | Specify VLAN. |
| Step 2 | <code>vn-segment <i>number</i></code> | Map VLAN to VXLAN VNI to configure Layer 2 VNI under VXLAN VLAN. |

Configuring VRF for VXLAN Routing

Configure the tenant VRF.

Procedure

| | Command or Action | Purpose |
|---------------|--|---------------------------------------|
| Step 1 | <code>vrf context <i>vxlan</i></code> | Configure the VRF. |
| Step 2 | <code>vni <i>number</i></code> | Specify VNI. |
| Step 3 | <code>rd auto</code> | Specify VRF RD (route distinguisher). |
| Step 4 | <code>address-family ipv4 unicast</code> | Configure address family for IPv4. |

| | Command or Action | Purpose |
|--------|--|--|
| Step 5 | <code>route-target both auto</code> | Note Specifying the auto option is applicable only for IBGP. Manually configured route targets are required for EBGP. |
| Step 6 | <code>route-target both auto evpn</code> | Note Specifying the auto option is applicable only for IBGP. Manually configured route targets are required for EBGP. |
| Step 7 | <code>address-family ipv6 unicast</code> | Configure address family for IPv6. |
| Step 8 | <code>route-target both auto</code> | Note Specifying the auto option is applicable only for IBGP. Manually configured route targets are required for EBGP. |
| Step 9 | <code>route-target both auto evpn</code> | Note Specifying the auto option is applicable only for IBGP. Manually configured route targets are required for EBGP. |

Configuring SVI for Hosts for VXLAN Routing

Configure the SVI for hosts.

Procedure

| | Command or Action | Purpose |
|--------|--|-------------------------|
| Step 1 | <code>vlan <i>number</i></code> | Specify VLAN |
| Step 2 | <code>interface <i>vlan-number</i></code> | Specify VLAN interface. |
| Step 3 | <code>vrf member <i>vlan-number</i></code> | Configure SVI for host. |
| Step 4 | <code>ip address <i>address</i></code> | Specify IP address. |

Configuring VRF Overlay VLAN for VXLAN Routing

Procedure

| | Command or Action | Purpose |
|--------|---------------------------------|---------------|
| Step 1 | <code>vlan <i>number</i></code> | Specify VLAN. |

| | Command or Action | Purpose |
|--------|---------------------------------------|---------------------|
| Step 2 | <code>vn-segment <i>number</i></code> | Specify vn-segment. |

Configuring VNI Under VRF for VXLAN Routing

Configures a Layer 3 VNI under a VRF overlay VLAN. (A VRF overlay VLAN is a VLAN that is not associated with any server facing ports. All VXLAN VNIs that are mapped to a VRF, need to have their own internal VLANs allocated to it.)

Procedure

| | Command or Action | Purpose |
|--------|---------------------------------------|----------------------------------|
| Step 1 | <code>vrf context <i>vxlan</i></code> | Create a VXLAN Tenant VRF |
| Step 2 | <code>vni <i>number</i></code> | Configure Layer 3 VNI under VRF. |

Configuring Anycast Gateway for VXLAN Routing

Procedure

| | Command or Action | Purpose |
|--------|---|---|
| Step 1 | <code>fabric forwarding anycast-gateway-mac <i>address</i></code> | Configure distributed gateway virtual MAC address Note One virtual MAC per VTEP Note All VTEPs should have the same virtual MAC address |
| Step 2 | <code>fabric forwarding mode anycast-gateway</code> | Associate SVI with anycast gateway under VLAN configuration mode. |

Configuring the NVE Interface and VNIs

Procedure

| | Command or Action | Purpose |
|--------|---|---|
| Step 1 | <code>interface <i>nve-interface</i></code> | Configure the NVE interface. |
| Step 2 | <code>host-reachability protocol bgp</code> | This defines BGP as the mechanism for host reachability advertisement |

| | Command or Action | Purpose |
|--------|---|---|
| Step 3 | member vni <i>vni</i> associate-vrf | Add Layer-3 VNIs, one per tenant VRF, to the overlay. Note Required for VXLAN routing only. |
| Step 4 | member vni <i>vni</i> | Add Layer 2 VNIs to the tunnel interface. switch# member vni 900001 associate-vrf |
| Step 5 | mcast-group <i>address</i> | Configure the mcast group on a per-VNI basis |

Configuring BGP on the VTEP

Procedure

| | Command or Action | Purpose |
|---------|---|--|
| Step 1 | router bgp <i>number</i> | Configure BGP. |
| Step 2 | router-id <i>address</i> | Specify router address. |
| Step 3 | neighbor <i>address</i> remote-as <i>number</i> | Define MP-BGP neighbors. Under each neighbor define l2vpn evpn. |
| Step 4 | address-family ipv4 unicast | Configure address family for IPv4. |
| Step 5 | address-family l2vpn evpn | Configure address family Layer 2 VPN EVPN under the BGP neighbor. Note Address-family ipv4 evpn for vxlan host-based routing |
| Step 6 | (Optional) Allowas-in | Allows duplicate AS numbers in the AS path. Configure this parameter on the leaf for eBGP when all leaves are using the same AS, but the spines have a different AS than leaves. |
| Step 7 | send-community extended | Configures community for BGP neighbors. |
| Step 8 | vrf <i>vrf-name</i> | Specify VRF. |
| Step 9 | address-family ipv4 unicast | Configure address family for IPv4. |
| Step 10 | advertise l2vpn evpn | Enable advertising EVPN routes. |
| Step 11 | address-family ipv6 unicast | Configure address family for IPv6. |
| Step 12 | advertise l2vpn evpn | Enable advertising EVPN routes. |

Configuring RD and Route Targets for VXLAN Bridging

Procedure

| | Command or Action | Purpose |
|---------------|---------------------------------------|---|
| Step 1 | <code>evpn</code> | Configure VRF. |
| Step 2 | <code>vni number l2</code> | Note Only Layer 2 VNIs need to be specified. |
| Step 3 | <code>rd auto</code> | Define VRF RD (route distinguisher) to configure VRF context. |
| Step 4 | <code>route-target import auto</code> | Define VRF Route Target and import policies. |
| Step 5 | <code>route-target export auto</code> | Define VRF Route Target and export policies. |

Configuring BGP for EVPN on the Spine

Procedure

| | Command or Action | Purpose |
|---------------|--|--|
| Step 1 | <code>route-map permitall permit 10</code> | Configure route-map. Note The route-map keeps the next-hop unchanged for EVPN routes. <ul style="list-style-type: none"> • Required for eBGP. • Optional for iBGP. |
| Step 2 | <code>set ip next-hop unchanged</code> | Set next-hop address. Note The route-map keeps the next-hop unchanged for EVPN routes. <ul style="list-style-type: none"> • Required for eBGP. • Optional for iBGP. |
| Step 3 | <code>router bgp autonomous system number</code> | Specify BGP. |
| Step 4 | <code>address-family l2vpn evpn</code> | Configure address family Layer 2 VPN EVPN under the BGP neighbor. |

| | Command or Action | Purpose |
|---------|--|---|
| Step 5 | retain route-target all | Configure retain route-target all under address-family Layer 2 VPN EVPN [global]. Note Required for eBGP. Allows the spine to retain and advertise all EVPN routes when there are no local VNI configured with matching import route targets. |
| Step 6 | neighbor address remote-as number | Define neighbor. |
| Step 7 | address-family l2vpn evpn | Configure address family Layer 2 VPN EVPN under the BGP neighbor. |
| Step 8 | disable-peer-as-check | Disables checking the peer AS number during route advertisement. Configure this parameter on the spine for eBGP when all leafs are using the same AS but the spines have a different AS than leafs. Note Required for eBGP. |
| Step 9 | send-community extended | Configures community for BGP neighbors. |
| Step 10 | route-map permitall out | Applies route-map to keep the next-hop unchanged. Note Required for eBGP. |

Disabling VXLANs

Procedure

| | Command or Action | Purpose |
|--------|--|---|
| Step 1 | configure terminal | Enters configuration mode. |
| Step 2 | no nv overlay evpn | Disables EVPN control plane. |
| Step 3 | no feature vn-segment-vlan-based | Disables the global mode for all VXLAN bridge domains |
| Step 4 | no feature nv overlay | Disables the VXLAN feature. |
| Step 5 | (Optional) copy running-config startup-config | Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration. |

Duplicate Detection for IP and MAC Addresses

Cisco NX-OS supports duplicate detection for IP and MAC addresses. This enables the detection of duplicate IP or MAC addresses based on the number of moves in a given time-interval (seconds).

The default is 5 moves in 180 seconds. (Default number of moves is 5 moves. Default time-interval is 180 seconds.)

- For IP addresses:
 - After the 5th move within 180 seconds, the switch starts a 30 second lock (hold down timer) before checking to see if the duplication still exists (an effort to prevent an increment of the sequence bit). This 30 second lock can occur 5 times (this means 5 moves in 180 seconds for 5 times) before the switch permanently locks or freezes the duplicate entry.
- For MAC addresses:
 - After the 5th move within 180 seconds, the switch starts a 30 second lock (hold down timer) before checking to see if the duplication still exists (an effort to prevent an increment of the sequence bit). This 30 second lock can occur 3 times (this means 5 moves in 180 seconds for 3 times) before the switch permanently locks or freezes the duplicate entry.

The following are example commands to help the configuration of the number of VM moves in a specific time interval (seconds) for duplicate IP-detection:

| Command | Description |
|---|--|
| <pre>switch(config)# fabric forwarding ? anycast-gateway-mac dup-host-ip-addr-detection</pre> | Available sub-commands: <ul style="list-style-type: none"> • Anycast gateway MAC of the switch. • To detect duplicate host addresses in n seconds. |
| <pre>switch(config)# fabric forwarding dup-host-ip-addr-detection ? <1-1000></pre> | The number of host moves allowed in n seconds. The range is 1 to 1000 moves; default is 5 moves. |
| <pre>switch(config)# fabric forwarding dup-host-ip-addr-detection 100 ? <2-36000></pre> | The duplicate detection timeout in seconds for the number of host moves. The range is 2 to 36000 seconds; default is 180 seconds. |
| <pre>switch(config)# fabric forwarding dup-host-ip-addr-detection 100 10</pre> | Detects duplicate host addresses (limited to 100 moves) in a period of 10 seconds. |

The following are example commands to help the configuration of the number of VM moves in a specific time interval (seconds) for duplicate MAC-detection:

| Command | Description |
|--|--|
| <pre>switch(config)# l2rib dup-host-mac-detection ? <1-1000> default</pre> | Available sub-commands for L2RIB: <ul style="list-style-type: none"> • The number of host moves allowed in n seconds. The range is 1 to 1000 moves. • Default setting (5 moves in 180 in seconds). |
| <pre>switch(config)# l2rib dup-host-mac-detection 100 ? <2-36000></pre> | The duplicate detection timeout in seconds for the number of host moves. The range is 2 to 36000 seconds; default is 180 seconds. |
| <pre>switch(config)# l2rib dup-host-mac-detection 100 10</pre> | Detects duplicate host addresses (limited to 100 moves) in a period of 10 seconds. |

Verifying the VXLAN Configuration


To display the VXLAN configuration information, enter one of the following commands:

| Command | Purpose |
|--|---|
| show tech-support vxlan | Displays related VXLAN tech-support information. |
| show logging level nve | Displays logging level. |
| show tech-support nve | Displays related NVE tech-support information. |
| show tech-support vxlan-evpn | Displays related VXLAN EVPN tech-support information. |
| show tech-support vxlan platform | Displays VXLAN platform related tech-support information. |
| show run interface nve | Displays NVE overlay interface configuration. |
| show nve interface | Displays NVE overlay interface status. |
| show nve peers | Displays NVE peer status. |
| show nve peers <i>peer_IP_address</i> interface <i>interface_ID</i> counters | Displays per NVE peer statistics. |
| clear nve peers <i>peer_IP_address</i> interface <i>interface_ID</i> counters | Clears per NVE peer statistics. |
| show nve vni | Displays VXLAN VNI status. |
| show nve vxlan-params | Displays VXLAN parameters, such as VXLAN destination or UDP port. |

Example of VXLAN BGP EVPN (EBGP)

An example of a VXLAN BGP EVPN (EBGP):

Figure 1: VXLAN BGP EVPN Topology (EBGP)

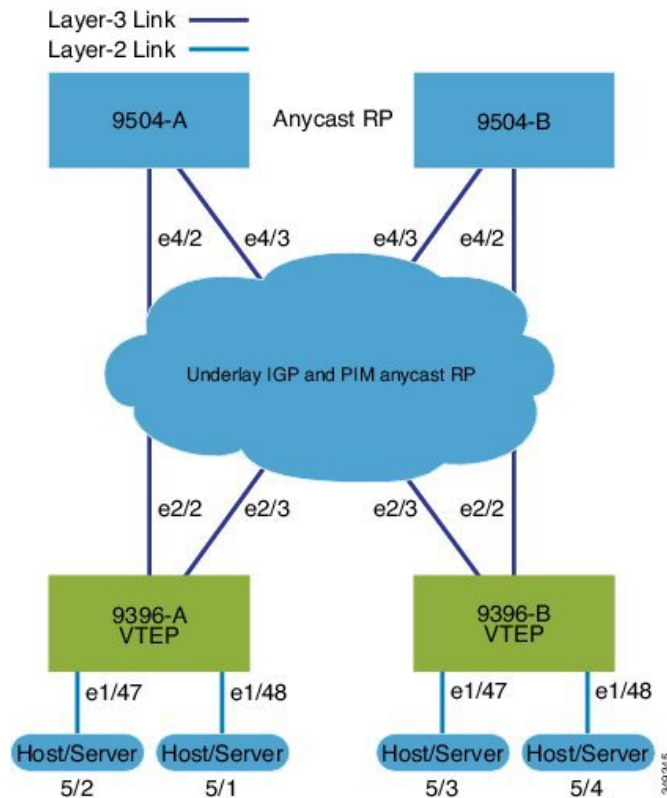

EBGP between Spine and Leaf

- Spine (9504-A)

- Enable the EVPN control plane

```
nv overlay evpn
```

- Enable the relevant protocols

```
feature bgp
feature pim
```

- Configure Loopback for local VTEP IP, and BGP

```
interface loopback0
 ip address 10.1.1.1/32
 ip pim sparse-mode
```

- Configure Loopback for Anycast RP

```
interface loopback1
```

```
ip address 100.1.1.1/32
ip pim sparse-mode
```

- Configure Anycast RP

```
ip pim rp-address 100.1.1.1 group-list 225.0.0.0/8
ip pim rp-candidate loopback1 group-list 225.0.0.0/8
ip pim log-neighbor-changes
ip pim ssm range 232.0.0.0/8
ip pim anycast-rp 100.1.1.1 10.1.1.1
ip pim anycast-rp 100.1.1.1 20.1.1.1
```

- Configure route-map used by EBGp for Spine

```
route-map permitall permit 10
set ip next-hop unchanged
```

- Enable OSPF for underlay routing

```
router ospf 1
log-adjacency-changes detail
```

- Configure interfaces for Spine-leaf interconnect

```
interface Ethernet4/2
ip address 192.168.1.42/24
ip pim sparse-mode
no shutdown

interface Ethernet4/3
ip address 192.168.2.43/24
ip pim sparse-mode
no shutdown
```

- Configure the BGP overlay for the EVPN address family.

```
router bgp 100
router-id 10.1.1.1
address-family l2vpn evpn
next-hop route-map permitall
retain route-target all
neighbor 30.1.1.1 remote-as 200
update-source loopback0
ebgp-multihop 3
address-family l2vpn evpn
disable-peer-as-check
send-community extended
route-map permitall out
neighbor 40.1.1.1 remote-as 200
update-source loopback0
ebgp-multihop 3
address-family l2vpn evpn
disable-peer-as-check
send-community extended
route-map permitall out
```

- Configure the BGP underlay.

```
neighbor 192.168.1.43 remote-as 200
```

```

address-family ipv4 unicast
  allowas-in
  disable-peer-as-check

```

- Spine (9504-B)

- Enable the EVPN control plane and the relevant protocols

```

feature telnet
feature nxapi
feature bash-shell
feature scp-server
nv overlay evpn
feature bgp
feature pim
feature lldp

```

- Configure Anycast RP

```

ip pim rp-address 100.1.1.1 group-list 225.0.0.0/8
ip pim rp-candidate loopback1 group-list 225.0.0.0/8
ip pim log-neighbor-changes
ip pim ssm range 232.0.0.0/8
ip pim anycast-rp 100.1.1.1 10.1.1.1
ip pim anycast-rp 100.1.1.1 20.1.1.1
vlan 1-1002
route-map permitall permit 10
  set ip next-hop unchanged

```

- Configure interfaces for Spine-leaf interconnect

```

interface Ethernet4/2
  ip address 192.168.4.42/24
  no shutdown

interface Ethernet4/3
  ip address 192.168.3.43/24
  no shutdown

```

- Configure Loopback for local VTEP IP, and BGP

```

interface loopback0
  ip address 20.1.1.1/32

```

- Configure the BGP overlay for the EVPN address family.

```

router bgp 100
  router-id 20.1.1.1
  address-family l2vpn evpn
    retain route-target all
  neighbor 30.1.1.1 remote-as 200
  update-source loopback0
  ebgp-multihop 3
  address-family l2vpn evpn
    disable-peer-as-check
    send-community extended
    route-map permitall out
  neighbor 40.1.1.1 remote-as 200

```

```

ebgp-multihop 3
address-family l2vpn evpn
  disable-peer-as-check
  send-community extended
  route-map permitall out

```

- Configure the BGP underlay.

```

neighbor 192.168.1.43 remote-as 200
  address-family ipv4 unicast
  allowas-in
  disable-peer-as-check

```

- Leaf (9396-A)

- Enable the EVPN control plane

```

nv overlay evpn

```

- Enable the relevant protocols

```

feature bgp
feature interface-vlan
feature dhcp

```

- Enable VxLAN with distributed anycast-gateway using BGP EVPN

```

feature vn-segment-vlan-based
feature nv overlay
fabric forwarding anycast-gateway-mac 0000.2222.3333

```

- Enable PIM RP

```

ip pim rp-address 100.1.1.1 group-list 225.0.0.0/8

```

- Configure Loopback for BGP

```

interface loopback0
  ip address 30.1.1.1/32

```

- Configure Loopback for local VTEP IP

```

interface loopback1
  ip address 50.1.1.1/32

```

- Configure interfaces for Spine-leaf interconnect

```

interface Ethernet2/2
  no switchport
  load-interval counter 1 5
  ip address 192.168.1.22/24
  no shutdown

```

```

interface Ethernet2/3
  no switchport
  load-interval counter 1 5

```

```
ip address 192.168.3.23/24
no shutdown
```

- Create the VRF overlay VLAN and configure the vn-segment.

```
vlan 101
  vn-segment 900001
```

- Configure VRF overlay VLAN/SVI for the VRF

```
interface Vlan101
  no shutdown
  vrf member vxlan-900001
```

- Create VLAN and provide mapping to VXLAN

```
vlan 1001
  vn-segment 2001001
vlan 1002
  vn-segment 2001002
```

- Create VRF and configure VNI

```
vrf context vxlan-900001
  vni 900001
```



Note The **rd auto** and **route-target** commands are automatically configured unless one or more are entered as overrides.

```
rd auto
address-family ipv4 unicast
  route-target import 65535:101 evpn
  route-target export 65535:101 evpn
  route-target import 65535:101
  route-target export 65535:101
address-family ipv6 unicast
  route-target import 65535:101 evpn
  route-target export 65535:101 evpn
  route-target import 65535:101
  route-target export 65535:101
```

- Create server facing SVI and enable distributed anycast-gateway

```
interface Vlan1001
  no shutdown
  vrf member vxlan-900001
  ip address 4.1.1.1/24
  ipv6 address 4:1:0:1::1/64
  fabric forwarding mode anycast-gateway
  ip dhcp relay address 192.168.100.1 use-vrf default

interface Vlan1002
  no shutdown
  vrf member vxlan-900001
  ip address 4.2.2.1/24
```



```

ipv6 address 4:2:0:1::1/64
fabric forwarding mode anycast-gateway

```



Note You can choose either of the following two options for creating the NVE interface. Use Option 1 for a small number of VNIs. Use Option 2 to configure a large number of VNIs.

Create the network virtualization endpoint (NVE) interface

Option 1

```

interface nve1
  no shutdown
  source-interface loopback1
  host-reachability protocol bgp
  member vni 10000 associate-vrf
  mcast-group 224.1.1.1
  member vni 10001 associate-vrf
  mcast-group 224.1.1.1
  member vni20000
  suppress-arp
  mcast-group 225.1.1.1
  member vni 20001
  suppress-arp
  mcast-group 225.1.1.1

```

Option 2

```

interface nve1
  no shutdown
  source-interface loopback 1
  host-reachability protocol bgp
  global suppress-arp
  global mcast-group 224.1.1.1 L3
  global mcast-group 255.1.1.1 L2
  member vni 10000 associate-vrf
  member vni 10001 associate-vrf
  member vni 10002 associate-vrf
  member vni 10003 associate-vrf
  member vni 10004 associate-vrf
  member vni 10005 associate-vrf
  member vni 20000
  member vni 20001
  member vni 20002
  member vni 20003
  member vni 20004
  member vni 20005

```

- Configure interfaces for hosts/servers.

```

interface Ethernet1/47
  switchport access vlan 1002
interface Ethernet1/48
  switchport access vlan 1001

```

- Configure BGP

```

router bgp 200
router-id 30.1.1.1
 neighbor 10.1.1.1 remote-as 100
   update-source loopback0
   ebgp-multihop 3
   allowas-in
   send-community extended
 address-family l2vpn evpn
   allowas-in
   send-community extended
 neighbor 20.1.1.1 remote-as 100
   update-source loopback0
   ebgp-multihop 3
   allowas-in
   send-community extended
 address-family l2vpn evpn
   allowas-in
   send-community extended
vrf vxlan-900001

   advertise l2vpn evpn

```



Note The following commands in EVPN mode do not need to be entered.

```

evpn
 vni 2001001 l2
 vni 2001002 l2

```



Note The **rd auto** and **route-target auto** commands are automatically configured unless one or more are entered as overrides.

```

rd auto
route-target import auto
route-target export auto

router bgp 200
router-id 30.1.1.1
 neighbor 10.1.1.1 remote-as 100
   update-source loopback0
   ebgp-multihop 3
   allowas-in
   send-community extended
 address-family l2vpn evpn
   allowas-in
   send-community extended
 neighbor 20.1.1.1 remote-as 100
   update-source loopback0
   ebgp-multihop 3
   allowas-in
   send-community extended
 address-family l2vpn evpn
   allowas-in
   send-community extended
vrf vxlan-900001

```



Note The following **advertise** command is optional.

```
advertise l2vpn evpn
```



Note The **rd auto** and **route-target** commands are automatically configured unless one or more are entered as overrides.



Note The following EVPN mode commands are optional.

```
evpn
vni 2001001 12
vni 2001002 12
```

- Leaf (9396-B)

- Enable the EVPN control plane functionality and the relevant protocols

```
feature telnet
feature nxapi
feature bash-shell
feature scp-server
nv overlay evpn
feature bgp
feature pim
feature interface-vlan
feature vn-segment-vlan-based
feature lldp
feature nv overlay
```

- Enable VxLAN with distributed anycast-gateway using BGP EVPN

```
fabric forwarding anycast-gateway-mac 0000.2222.3333
```

- Create the VRF overlay VLAN and configure the vn-segment

```
vlan 1-1002
vlan 101
vn-segment 900001
```

- Create VLAN and provide mapping to VXLAN

```
vlan 1001
vn-segment 2001001
vlan 1002
vn-segment 2001002
```

- Create VRF and configure VNI

```
vrf context vxlan-900001
vni 900001
```



Note The following commands are automatically configured unless one or more are entered as overrides.

```
rd auto
address-family ipv4 unicast
  route-target import 65535:101 evpn
  route-target export 65535:101 evpn
  route-target import 65535:101
  route-target export 65535:101
address-family ipv6 unicast
  route-target import 65535:101 evpn
  route-target export 65535:101 evpn
  route-target import 65535:101 evpn
  route-target export 65535:101 evpn
```

- Configure internal control VLAN/SVI for the VRF

```
interface Vlan1

interface Vlan101
  no shutdown
  vrf member vxlan-900001
```

- Create server facing SVI and enable distributed anycast-gateway

```
interface Vlan1001
  no shutdown
  vrf member vxlan-900001
  ip address 4.1.1.1/24
  ipv6 address 4:1:0:1::1/64
  fabric forwarding mode anycast-gateway

interface Vlan1002
  no shutdown
  vrf member vxlan-900001
  ip address 4.2.2.1/24
  ipv6 address 4:2:0:1::1/64
  fabric forwarding mode anycast-gateway
```

- Create the network virtualization endpoint (NVE) interface



Note You can choose either of the following two procedures for creating the NVE interface. Use Option 1 for a small number of VNIs. Use Option 2 to configure a large number of VNIs.

Option 1

```
interface nve1
```

```

no shutdown
source-interface loopback1
host-reachability protocol bgp
member vni 10000 associate-vrf
mcast-group 224.1.1.1
member vni 10001 associate-vrf
mcast-group 224.1.1.1
member vni20000
suppress-arp
mcast-group 225.1.1.1
member vni 20001
suppress-arp
mcast-group 225.1.1.1

```

Option 2

```

interface nve1
no shutdown
source-interface loopback 1
host-reachability protocol bgp
global suppress-arp
global mcast-group 224.1.1.1 L3
global mcast-group 255.1.1.1 L2
member vni 10000 associate-vrf
member vni 10001 associate-vrf
member vni 10002 associate-vrf
member vni 10003 associate-vrf
member vni 10004 associate-vrf
member vni 10005 associate-vrf
member vni 20000
member vni 20001
member vni 20002
member vni 20003
member vni 20004
member vni 20005

```

- Configure interfaces for hosts/servers

```

interface Ethernet1/47
switchport access vlan 1002

interface Ethernet1/48
switchport access vlan 1001

```

- Configure interfaces for Spine-leaf interconnect

```

interface Ethernet2/1

interface Ethernet2/2
no switchport
load-interval counter 1 5
ip address 192.168.4.22/24
ip pim sparse-mode
no shutdown

interface Ethernet2/3
no switchport
load-interval counter 1 5
ip address 192.168.2.23/24
ip pim sparse-mode

```

```
no shutdown
```

- Configure Loopback for BGP

```
interface loopback0
 ip address 40.1.1.1/32
```

- Configure Loopback for local VTEP IP

```
interface loopback1
 ip address 51.1.1.1/32
 ip pim sparse-mode
```

- Configure BGP

```
router bgp 200
router-id 40.1.1.1
 neighbor 10.1.1.1 remote-as 100
  update-source loopback0
  ebgp-multihop 3
  allowas-in
  send-community extended
  address-family l2vpn evpn
  allowas-in
  send-community extended
 neighbor 20.1.1.1 remote-as 100
  update-source loopback0
  ebgp-multihop 3
  allowas-in
  send-community extended
  address-family l2vpn evpn
  allowas-in
  send-community extended
 vrf vxlan-900001
```



Note The following **advertise** command is optional.

```
advertise l2vpn evpn
```




Note The **rd auto** and **route-target** commands are optional unless you want to use them to override the **import** or **export** options.

```
evpn
 vni 2001001 12
  rd auto
  route-target import auto
  route-target export auto
 vni 2001002 12
  rd auto
  route-target import auto
  route-target export auto
```

Example of VXLAN BGP EVPN (IBGP)

An example of a VXLAN BGP EVPN (IBGP):

Figure 2: VXLAN BGP EVPN Topology (IBGP)

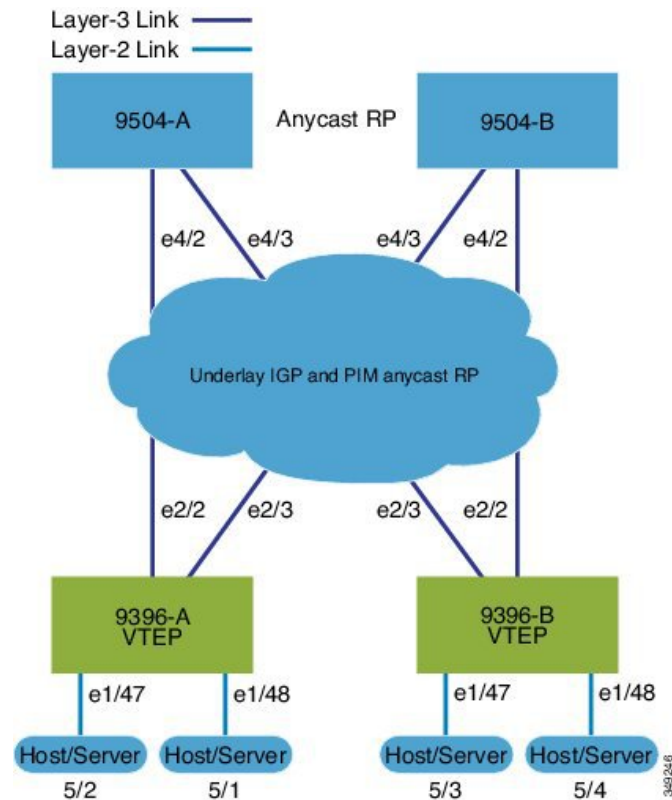

IBGP between Spine and Leaf

- Spine (9504-A)
 - Enable the EVPN control plane


```
nv overlay evpn
```
 - Enable the relevant protocols


```
feature ospf
feature bgp
```
 - Configure Loopback for local VTEP IP, and BGP


```
interface loopback0
ip address 10.1.1.1/32
ip router ospf 1 area 0.0.0.0
```
 - Enable OSPF for underlay routing

```
router ospf 1
```

- Configure interfaces for Spine-leaf interconnect

```
interface Ethernet4/2
 ip address 192.168.1.42/24
 ip router ospf 1 area 0.0.0.0
 no shutdown
```

```
interface Ethernet4/3
 ip address 192.168.2.43/24
 ip router ospf 1 area 0.0.0.0
 no shutdown
```

- Configure BGP

```
router bgp 65535
router-id 10.1.1.1
 neighbor 30.1.1.1 remote-as 65535
  update-source loopback0
  address-family l2vpn evpn
  send-community both
  route-reflector-client
 neighbor 40.1.1.1 remote-as 65535
  update-source loopback0
  address-family l2vpn evpn
  send-community both
  route-reflector-client
```

- Spine (9504-B)

- Enable the EVPN control plane and the relevant protocols

```
feature telnet
feature nxapi
feature bash-shell
feature scp-server
nv overlay evpn
feature ospf
feature bgp
feature lldp
```

- Configure interfaces for Spine-leaf interconnect

```
interface Ethernet4/2
 ip address 192.168.4.42/24
 ip router ospf 1 area 0.0.0.0
 no shutdown
```

```
interface Ethernet4/3
 ip address 192.168.3.43/24
 ip router ospf 1 area 0.0.0.0
 no shutdown
```

- Configure Loopback for local VTEP IP, and BGP

```
interface loopback0
 ip address 20.1.1.1/32
```



```
ip router ospf 1 area 0.0.0.0
```

- Configure Loopback for Anycast RP

```
interface loopback1
ip address 100.1.1.1/32
ip router ospf 1 area 0.0.0.0
```

- Enable OSPF for underlay routing

```
router ospf 1
```

- Configure BGP

```
router bgp 65535
router-id 20.1.1.1
neighbor 30.1.1.1 remote-as 65535
update-source loopback0
address-family l2vpn evpn
send-community both
route-reflector-client
neighbor 40.1.1.1 remote-as 65535
update-source loopback0
address-family l2vpn evpn
send-community both
route-reflector-client
```

- Leaf (9396-A)

- Enable the EVPN control plane

```
nv overlay evpn
```

- Enable the relevant protocols

```
feature ospf
feature bgp
feature interface-vlan
```

- Enabling OSPF for underlay routing

```
router ospf 1
```

- Configure Loopback for local VTEP IP, and BGP

```
interface loopback0
ip address 30.1.1.1/32
ip router ospf 1 area 0.0.0.0
```

- Configure interfaces for Spine-leaf interconnect

```
interface Ethernet2/2
no switchport
ip address 192.168.1.22/24
ip router ospf 1 area 0.0.0.0
```

```

no shutdown

interface Ethernet2/3
no switchport
ip address 192.168.3.23/24
ip router ospf 1 area 0.0.0.0
no shutdown

```

- Create overlay VRF VLAN and configure vn-segment

```

vlan 101
vn-segment 900001

```

- Configure VRF overlay VLAN/SVI for the VRF

```

interface Vlan101
no shutdown
vrf member vxlan-900001

```

- Create VLAN and provide mapping to VXLAN

```

vlan 1001
vn-segment 2001001
vlan 1002
vn-segment 2001002

```

- Create VRF and configure VNI

```

vrf context vxlan-900001
vni 900001

```



Note The **rd auto** and **route-target** commands are automatically configured unless one or more are entered as overrides.

```

rd auto
address-family ipv4 unicast
route-target both auto
route-target both auto evpn
address-family ipv6 unicast
route-target both auto
route-target both auto evpn

```

- Create server facing SVI and enable distributed anycast-gateway

```

interface Vlan1001
no shutdown
vrf member vxlan-900001
ip address 4.1.1.1/24
ipv6 address 4:1:0:1::1/64
fabric forwarding mode anycast-gateway

```

```

interface Vlan1002
no shutdown
vrf member vxlan-900001
ip address 4.2.2.1/24
ipv6 address 4:2:0:1::1/64
fabric forwarding mode anycast-gateway

```



Note You can choose either of the following two options for creating the NVE interface. Use Option 1 for a small number of VNIs. Use Option 2 to configure a large number of VNIs.

Create the network virtualization endpoint (NVE) interface

Option 1

```
interface nve1
  no shutdown
  source-interface loopback0
  host-reachability protocol bgp
  member vni 900001 associate-vrf
  member vni 2001001
    suppress-arp
    mcast-group 225.4.0.1
  member vni 2001002
    suppress-arp
    mcast-group 225.4.0.1
```

Option 2

```
Interface nve1
  source-interface loopback 1
  host-reachability protocol bgp
  global suppress-arp
  global mcast-group 255.1.1.1 L2
  global mcast-group 255.1.1.2 L3
  member vni 10000
  member vni 20000
  member vni 30000
```

• Configure BGP

```
router bgp 65535
router-id 30.1.1.1
  neighbor 10.1.1.1 remote-as 65535
    update-source loopback0
    address-family l2vpn evpn
      send-community both
  neighbor 20.1.1.1 remote-as 65535
    update-source loopback0
    address-family l2vpn evpn
      send-community both
vrf vxlan-900001
  address-family ipv4 unicast
    advertise l2vpn evpn
```



Note The following commands in EVPN mode do not need to be entered.

```
evpn
  vni 2001001 12
  vni 2001002 12
```



Note The **rd auto** and **route-target auto** commands are automatically configured unless one or more are entered as overrides.

```
rd auto
  route-target import auto
  route-target export auto
```



Note The **rd auto** and **route-target** commands are automatically configured unless you want to use them to override the **import** or **export** options.



Note The following EVPN mode commands are optional.

```
evpn
  vni 2001001 12
    rd auto
    route-target import auto
    route-target export auto
  vni 2001002 12
    rd auto
    route-target import auto
    route-target export auto
```

- Leaf (9396-B)

- Enable the EVPN control plane functionality and the relevant protocols

```
feature telnet
feature nxapi
feature bash-shell
feature scp-server
nv overlay evpn
feature ospf
feature bgp
feature interface-vlan
feature vn-segment-vlan-based
feature lldp
feature nv overlay
```

- Enable VxLAN with distributed anycast-gateway using BGP EVPN

```
fabric forwarding anycast-gateway-mac 0000.2222.3333
```

- Create overlay VRF VLAN and configure vn-segment

```
vlan 1-1002
vlan 101
  vn-segment 900001
```

- Create VLAN and provide mapping to VXLAN

```
vlan 1001
  vn-segment 2001001
vlan 1002
  vn-segment 2001002
```

- Create VRF and configure VNI

```
vrf context vxlan-900001
  vni 900001
```



Note The **rd auto** and **route-target** commands are automatically configured unless you want to use them to override the **import** or **export** options.

```
rd auto
  address-family ipv4 unicast
    route-target both auto
    route-target both auto evpn
  address-family ipv6 unicast
    route-target both auto
    route-target both auto evpn
```

- Configure internal control VLAN/SVI for the VRF

```
interface Vlan101
  no shutdown
  vrf member vxlan-900001
```

- Create server facing SVI and enable distributed anycast-gateway

```
interface Vlan1001
  no shutdown
  vrf member vxlan-900001
  ip address 4.1.1.1/24
  ipv6 address 4:1:0:1::1/64
  fabric forwarding mode anycast-gateway

interface Vlan1002
  no shutdown
  vrf member vxlan-900001
  ip address 4.2.2.1/24
  ipv6 address 4:2:0:1::1/64
  fabric forwarding mode anycast-gateway
```



Note You can choose either of the following two command procedures for creating the NVE interfaces. Use Option 1 for a small number of VNIs. Use Option 2 to configure a large number of VNIs.

Create the network virtualization endpoint (NVE) interface

Option 1

```
interface nve1
```

```

no shutdown
source-interface loopback0
host-reachability protocol bgp
member vni 900001 associate-vrf
member vni 2001001
    suppress-arp
    mcast-group 225.4.0.1
member vni 2001002
    suppress-arp
    mcast-group 225.4.0.1

```

Option 2

```

Interface nvel
source-interface loopback0
host-reachability protocol bgp
global suppress-arp
global mcast-group 255.4.0.1
member vni 900001
member vni 2001001

```

- Configure interfaces for hosts/servers

```

interface Ethernet1/47
switchport access vlan 1002

interface Ethernet1/48
switchport access vlan 1001

```

- Configure interfaces for Spine-leaf interconnect

```

interface Ethernet2/1

interface Ethernet2/2
no switchport
ip address 192.168.4.22/24
ip router ospf 1 area 0.0.0.0
no shutdown

interface Ethernet2/3
no switchport
ip address 192.168.2.23/24
ip router ospf 1 area 0.0.0.0
no shutdown

```

- Configure Loopback for local VTEP IP, and BGP

```

interface loopback0
ip address 40.1.1.1/32
ip router ospf 1 area 0.0.0.0

```

- Enabling OSPF for underlay routing

```

router ospf 1

```

- Configure BGP

```

router bgp 65535

```

```

router-id 40.1.1.1
 neighbor 10.1.1.1 remote-as 65535
   update-source loopback0
   address-family l2vpn evpn
     send-community both
 neighbor 20.1.1.1 remote-as 65535
   update-source loopback0
   address-family l2vpn evpn
     send-community both
 vrf vxlan-900001
   address-family ipv4 unicast
   advertise l2vpn evpn
 evpn
 vni 2001001 12
   rd auto
   route-target import auto
   route-target export auto
 vni 2001002 12
   rd auto
   route-target import auto
   route-target export auto

```



Note The **rd auto** and **route-target** commands are optional unless you want to use them to override the **import** or **export** options.

```

evpn
 vni 2001001 12
   rd auto
   route-target import auto
   route-target export auto
 vni 2001002 12
   rd auto
   route-target import auto
   route-target export auto

```

Example Show Commands

- **show nve peers**

```

9396-B# show nve peers
Interface Peer-IP Peer-State
-----
nve1      30.1.1.1      Up

```

- **show nve vni**

```

9396-B# show nve vni
Codes: CP - Control Plane      DP - Data Plane
      UC - Unconfigured        SA - Suppress ARP

Interface VNI      Multicast-group  State Mode Type [BD/VRF]      Flags
-----
nve1      900001           n/a              Up   CP   L3 [vxlan-900001]
nve1      2001001          225.4.0.1       Up   CP   L2 [1001]          SA

```

```
nve1      2001002  225.4.0.1      Up    CP    L2 [1002]      SA
```

• show vxlan interface

```
9396-B# show vxlan interface
Interface      Vlan    VPL Ifindex    LTL      HW VP
=====
Eth1/47       1002   0x4c07d22e    0x10000  5697
Eth1/48       1001   0x4c07d02f    0x10001  5698
```

• show bgp l2vpn evpn summary

```
leaf3# show bgp l2vpn evpn summary
BGP summary information for VRF default, address family L2VPN EVPN
BGP router identifier 40.0.0.4, local AS number 10
BGP table version is 60, L2VPN EVPN config peers 1, capable peers 1
21 network entries and 21 paths using 2088 bytes of memory
BGP attribute entries [8/1152], BGP AS path entries [0/0]
BGP community entries [0/0], BGP clusterlist entries [1/4]

Neighbor      V    AS MsgRcvd MsgSent  TblVer  InQ  OutQ  Up/Down
State/PfxRcd
40.0.0.1      4    10   8570   8565    60    0    0    5d22h 6
```

• show bgp l2vpn evpn

```
leaf3# show bgp l2vpn evpn
BGP routing table information for VRF default, address family L2VPN EVPN
BGP table version is 60, local router ID is 40.0.0.4
Status: s-suppressed, x-deleted, S-stale, d-dampened, h-history, *-valid,
>-best
Path type: i-internal, e-external, c-confed, l-local, a-aggregate, r-redist,
I-injected
Origin codes: i - IGP, e - EGP, ? - incomplete, | - multipath, & - backup

Network      Next Hop      Metric    LocPrf    Weight Path
Route Distinguisher: 40.0.0.2:32868
*>i[2]:[0]:[10001]:[48]:[0000.8816.b645]:[0]:[0.0.0.0]/216
40.0.0.2      100          0 i
*>i[2]:[0]:[10001]:[48]:[0011.0000.0034]:[0]:[0.0.0.0]/216
40.0.0.2      100          0 i
```

• show l2route evpn mac all

```
leaf3# show l2route evpn mac all
Topology      Mac Address    Prod  Next Hop (s)
-----
101          0000.8816.b645 BGP   40.0.0.2
101          0001.0000.0033 Local  Ifindex 4362086
101          0001.0000.0035 Local  Ifindex 4362086
101          0011.0000.0034 BGP   40.0.0.2
```

• show l2route evpn mac-ip all

```
leaf3# show l2route evpn mac-ip all
Topology ID Mac Address    Prod Host IP      Next Hop (s)
```



```
-----  
101      0011.0000.0034 BGP 5.1.3.2          40.0.0.2  
102      0011.0000.0034 BGP 5.1.3.2          40.0.0.2
```

