

# **Configuring BGP Large Community**

- Restrictions for the BGP Large Community, on page 1
- Information About the BGP Large Community Feature, on page 1
- How to Configure the BGP Large Community, on page 2
- Configuration Example: BGP Large Community, on page 10
- Feature History for BGP Large Community, on page 11

# **Restrictions for the BGP Large Community**

When large communities are specified in commands, they are specified as three non-negative decimal integers separated by colons. For example as 1:2:3. Each integer is stored in 32 bits. The possible range for each integer is four octet decimal which can be from 0 to 4294967295.

# **Information About the BGP Large Community Feature**

The BGP large communities attribute provides the capability for tagging routes and modifying BGP routing policy on routers. BGP large communities can be appended or removed selectively on the large community attribute as the route travels from router to router. The BGP large communities are similar attributes to BGP communities, but with a twelve octet size. However, there are no well-known large communities as in communities. The BGP large communities are also split logically into a 4 octet Global Administrator field and a 8 octet Local Administrator field. A 4 octet Autonomous System can fit into the Global Administrator field.

For more information on BGP large community, see the rfc8092 document.

## **Large Community Lists**

A BGP large community list is used to create groups of large communities which can be used in a match clause of a route map. You can use the large communities to control the routing policy. Routing policy allows you to filter the routes you receive or advertise, or modify the attributes of the routes you receive or advertise. You can also use a large community list to set or delete the large communities selectively.

- Standard large community lists are used to specify large communities.
- Expanded large community lists are used to specify large communities using a regular expression.

A large community list can be either named or numbered and standard or expanded. All the rules of numbered large community lists apply to named large community lists, except that there is no limit on the number of named community lists that can be configured.




Note

A maximum of 100 numbered standard large community lists and 100 numbered expanded large community lists can be configured. A named large community list does not have this limitation.

## **BGP Large Community Attribute**

In an BGP large community, the community value is encoded as a 12 octet number. The following image displays the syntax of the large community attribute.

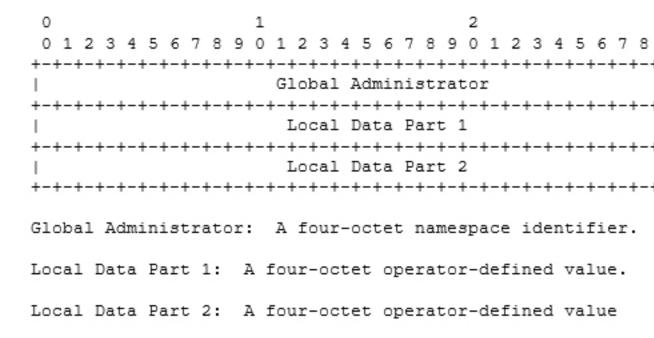

# **How to Configure the BGP Large Community**

The following sections provide configuration information about BGP large community.

## **Enabling BGP Large Community**

To enable the large-communities, perform the following steps.

#### **SUMMARY STEPS**

- 1. configure terminal
- **2.** router bgp autonomous-system-number

- **3. neighbor** *IP address* **remote-as** *autonomous-system-number*
- 4. address-family { ipv4 | ipv6 | 12vpn | nsap {unicast | multicast }}
- 5. neighbor IP address activate
- $\textbf{6.} \quad \textbf{neighbor} \ \textit{IP address} \ \ \textbf{send-community} \quad \{\textbf{both} \ | \ \textbf{extended} \ | \ \textbf{standard}\}$
- 7. exit
- 8. end

	Command or Action	Purpose	
Step 1	configure terminal	Enters global configuration mode.	
	Example:		
	Device# configure terminal		
Step 2	router bgp autonomous-system-number  Example:	Enables BGP and assigns the AS number to the local BGP speaker. The AS number can be a 16-bit integer or a 32-bit integer in the form of a higher 16-bit decimal number and	
	Device(config)# router bgp 64496	a lower 16-bit decimal number.	
Step 3	neighbor IP address remote-as autonomous-system-number	Enters global address family configuration mode. This command triggers an automatic notification and session	
	Example:	reset for all BGP neighbors.	
	Device(config-router)# neighbor 209.165.201.1 remote-as 100		
Step 4	address-family { ipv4   ipv6   l2vpn   nsap {unicast   multicast }}	Enters global address family configuration mode. This command triggers an automatic notification and session	
	Example:	reset for all BGP neighbors.	
	Device(config-router-neighbor) # address-family ipv4 multicast	Note It also supports other available address families.	
Step 5	neighbor IP address activate	Enters global address family configuration mode and	
	Example:	activates the BGP neighbor.	
	Device(config-router)# neighbor 209.165.201.1 activate		
Step 6	neighbor IP address send-community {both   extended   standard}	Configures the router to send the large-community attribute to the neighbor 209.165.201.1.	
	Example:	Both—Sends both the extended large community and standard large community attributes to the neighbor.	
	Device(config-router-neighbor-af)# neighbor 209.165.201.1 send-community standard	Extended—Sends the extended community attribute to the neighbor.	

	Command or Action	Purpose
		Standard—Sends large community and also (regular) community attribute to the neighbor.
Step 7	exit	Exits address-family mode and router configuration mode
	Example:	and enters global configuration mode.
	Device(config-router)# exit Device(config-router)# exit	
Step 8	end	Exits configuration mode and enters privileged EXEC mode.
	Example:	
	Device(config)# end	

# Configuring Route-map with Large Community Lists and Matching a Large Community

To match a BGP large community, perform the following steps.

#### **SUMMARY STEPS**

- 1. configure terminal
- **2.** route-map map-tag [permit | deny] [sequence number]
- **3.** match large-community {name | numbered }
- 4. exit
- **5.** route-map map-tag [permit | deny] [sequence number]
- **6.** match large-community {name | numbered } exact match
- **7**. end

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 2	route-map map-tag [permit   deny] [sequence number]  Example:	Enters the route-map configuration mode and defines the conditions for routes from one routing protocol into another.
	Device(config)# route-map test permit 10	
Step 3	match large-community {name   numbered }	Matches a large-community lists. Defines the rules for an entry in the large-community lists and ensures that all the
	Example:	one in the large community note and ensures that an

	Command or Action	Purpose
	Device(config-route-map)# match large-community 1	large communities matches the large communities in the routes.
Step 4	<pre>exit Example: Device(config-router)# exit</pre>	Exits router configuration mode and enters global configuration mode.
Step 5	<pre>route-map map-tag [permit deny][sequence number] Example:  Device(config) # route-map test permit 10</pre>	Enters the route-map configuration mode and defines the conditions for routes from one routing protocol into another.
Step 6	<pre>match large-community {name   numbered } exact match Example:  Device(config-route-map) # match large-community 1     exact-match</pre>	Matches a large-community lists. Defines the rules for an entry in the large-community lists and ensures that all the large communities matches the large communities in the routes. The key word exact-match indicates that an exact match is required to match a BGP large community.
Step 7	<pre>end Example: Device(config-route-map)# end</pre>	Exits route map configuration mode and enters privileged EXEC mode.

# **Defining BGP Large Community List**

To define the BGP large community list, perform the following steps. BGP large community supports named and numbered community lists.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3. ip large-community-list** {standard-list-number | **standard** standard-list-name } {**deny** | **permit**} community-number large-community
- **4. ip large-community-list** {*expanded-list number* | **expanded** *expanded-list-name*} {**deny** | **permit**} *regexp*
- 5. exit
- 6. end

	Command or Action	Purpose
Step 1	enable	Enables higher privilege levels, such as privileged EXEC
	Example:	mode.

	Command or Action	Purpose
	Device> enable	Enter your password if prompted.
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	ip large-community-list {standard-list-number   standard standard-list-name } {deny   permit} community-number large-community	Defining the large community based on the standard list number. If you attempt to configure more than 6 communities, the trailing communities that exceed the limit
	Example:	are not processed or saved to the running configuration file.
	Numbered Large-community List	
	<pre>ip large-community-list 1 permit 1:2:3 5:6:7 ip large-community-list 1 permit 4123456789:4123456780:4123456788</pre>	
	Named Large-community List	
	<pre>ip large-community-list standard LG_ST permit 1:2:3 5:6:7 ip large-community-list standard LG_ST permit 4123456789:4123456780:4123456788</pre>	
Step 4	ip large-community-list {expanded-list number   expanded expanded-list-name} {deny   permit} regexp	Defines the large communities based on regular express and matches according to Cisco's regular expression
	Example:	implementation.
	Numbered Extended Large-community List	
	<pre>ip large-community-list 100 permit ^5:.*:7\$ ip large-community-list 100 permit ^5:.*:8\$</pre>	
	Named Extended Large-community List	
	<pre>ip large-community-list expanded LG_EX permit ^5:.*:7\$ ip large-community-list expanded LG_EX permit ^5:.*:8\$</pre>	
Step 5	exit	Exits router configuration mode and enters global configuration mode.
	Example:	
	Device(config-router)# exit	
Step 6	end	Exits route map configuration mode and enters privileged
	Example:	EXEC mode.
	Device(config)# end	

## **Configuring the Route-map to Set BGP Large Communities**

To set the large-communities, perform the following steps.

#### **SUMMARY STEPS**

- 1. configure terminal
- **2.** route-map map-tag [permit | deny] [sequence number]
- **3.** set large-community {none | {xx:yy:zz }}
- 4. exit
- **5.** route-map map-tag [permit | deny] [sequence number]
- **6.** set large-community  $\{none \mid \{xx:yy:zz \mid additive \}\}$
- 7 end

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 2	route-map map-tag [permit   deny] [sequence number]  Example:	Enters the route-map configuration mode and specifies a set of large communities to a route.
	Device(config)# route-map foo permit 10	
Step 3	set large-community {none   {xx:yy:zz }}  Example:	A route-map set statement is used to set large communities in a route. It can specify a set of large communities to a route.
	Device(config-route-map) # set large-community 1:2:3 5:6:7	
Step 4	exit Example:	Exits router configuration mode and enters global configuration mode.
	Device(config-router)# exit	
Step 5	route-map map-tag [permit   deny] [sequence number]  Example:	Enters the route-map configuration mode and specifies a set of large communities to a route.
	Device(config)# route-map foo permit 10	
Step 6	set large-community {none   {xx:yy:zz   additive }}  Example:	A route-map set statement is used to set large communities in a route. It can specify a set of large communities to a route. Also, the keyword additive adds the large communities without removing the existing large
	Device(config-route-map) # set large-community 1:2:3 5:6:7 additive	communities.

	Command or Action	Purpose
Step 7	end	Exits route map configuration mode and enters privileged
	Example:	EXEC mode.
	Device(config-route-map)# end	

# **Deleting Large Communities**

To delete BGP large communities, perform the following steps.

#### **SUMMARY STEPS**

- 1. configure terminal
- **2.** route-map map-tag [permit | deny] [sequence number]
- 3. set large-comm-list community-list-name delete
- 4. exit
- 5. end

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 2	route-map map-tag [permit deny][sequence number]	
	Example:	conditions for redistributing routes from one routing protocol into another.
	Device(config)# route-map test permit 10	
Step 3	set large-comm-list community-list-name delete	Deletes the large-communities based on
	Example:	large-community-list matches.
	Device(config-route-map)# set large-comm-list 1	
	<pre>delete Device(config-route-map)#</pre>	
Step 4	exit	Exits router configuration mode and enters global
	Example:	configuration mode.
	Device(config-router)# exit	
Step 5	end	Exits route map configuration mode and enters privileged
	Example:	EXEC mode.
	Device(config-route-map)# end	

## Verifying the Configuration of the BGP Large Community

To verify the BGP large community, use the following command. This example shows a list of routes that contain all of the large communities given in the command. The listed routes may contain additional large communities.

```
Device# show bgp large-community 1:2:3 5:6:7
BGP table version is 17, local router ID is 1.1.1.3
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
             r RIB-failure, S Stale, m multipath, b backup-path, f RT-Filter,
             x best-external, a additional-path, c RIB-compressed,
Origin codes: i - IGP, e - EGP, ? - incomplete
RPKI validation codes: V valid, I invalid, N Not found
                   Next Hop
    Network
                                       Metric LocPrf Weight Path
*>i 5.5.5.5/32
                                        0 100 0 ?
                   1.1.1.2
                   1.1.1.2
                                            0
                                                 100
                                                          0 ?
```

This example displays the listed routes that contain only the given large communities when you add the keyword exact-match in configuration.

In these examples, the routes 5.5.5.5/32 and 5.5.5.6/32 contain both the large communities 1:2:3 and 5:6:7. The route 5.5.5.6/32 contains some additional large communities.

This example displays a large-community list.

```
Device#show ip largecommunity-list 20
Large Community standard list 20
permit 1:1:2

Device#show bgp large-community-list 20
Large Community standard list 20
permit 1:1:2
```

## **Troubleshooting Large Communities**

**Memory Display** 

To debug the large communities, use **debug ip bgp update** command.

```
Device#debug ip bgp update

*Mar 10 23:25:01.194: BGP(0): 192.0.0.1 rcvd UPDATE w/ attr: nexthop 192.0.0.1, origin ?, metric 0, merged path 1, AS_PATH , community 0:44 1:1 2:3, large-community 3:1:244 3:1:245 *Mar 10 23:25:01.194: BGP(0): 192.0.0.1 rcvd 5.5.5.1/32 *Mar 10 23:25:01.194: BGP(0): Revise route installing 1 of 1 routes for 5.5.5.1/32 -> 192.0.0.1(global) to main IP table
```

The show ip bgp summary command displays large-community memory information.

```
Device #show ip bgp summary
BGP router identifier 1.1.1.1, local AS number 1
BGP table version is 3, main routing table version 3
2 network entries using 496 bytes of memory
2 path entries using 272 bytes of memory
1/1 BGP path/bestpath attribute entries using 288 bytes of memory
1 BGP community entries using 40 bytes of memory
2 BGP large-community entries using 96 bytes of memory
O BGP route-map cache entries using O bytes of memory
O BGP filter-list cache entries using O bytes of memory
BGP using 1096 total bytes of memory
BGP activity 3/1 prefixes, 3/1 paths, scan interval 60 secs
2 networks peaked at 13:04:52 Mar 11 2020 EST (00:07:25.579 ago)
              V
                        AS MsgRcvd MsgSent TblVer InQ OutQ Up/Down State/PfxRcd
192.0.0.2
                          2 1245 1245 3 0 0 18:47:56
```

# **Configuration Example: BGP Large Community**

The following example shows how to configure route-maps using large-communities.

A route-map set statement is used to set the large communities in a route. It can specify a set of large communities to a route.

The *additive* keyword adds the large communities without removing the existing large communities (for standard large community-lists only).

#### **Setting Large Communities**

This example shows how to set large communities.

```
route-map foo permit 10
  set large-community 1:2:3 5:6:7

route-map foo2 permit 10
  set large-community 1:2:3 5:6:7 additive
```

#### **Matching Large Communities**

This example shows how to match large communities.

```
route-map foo permit 10
match large-community 1
route-map foo2 permit 10
match large-community 1 exact-match
```

#### **Deleting Large Communities**

This example shows how to delete a large community.

```
route-map foo
  set large-comm-list 1 delete
```

#### **Numbered Standard Large Community List**

This example shows how to configure a numbered large community list.

```
ip large-community-list 1 permit 1:2:3 5:6:7
ip large-community-list 1 permit 4123456789:4123456780:4123456788
```

#### Named Standard Large Community List

This example shows how to configure a named standard large community list.

```
ip large-community-list standard LG_ST permit 1:2:3 5:6:7
ip large-community-list standard LG_ST permit 4123456789:4123456780:4123456788
```

#### **Numbered Expanded Large Community List**

This example shows how to configure a numbered expanded large community list.

```
ip large-community-list 100 permit ^5:.*:7$
ip large-community-list 100 permit ^5:.*:8$
```

#### Named Expanded Large Community List

This example shows how to configure a named expanded large community list.

```
ip large-community-list expanded LG_EX permit ^5:.*:7$
ip large-community-list expanded LG_EX permit ^5:.*:8$
```

# **Feature History for BGP Large Community**

This table provides release and related information for the features explained in this module.

These features are available on all the releases subsequent to the one they were introduced in, unless noted otherwise.

Release	Feature	Feature Information
Cisco IOS XE Bengaluru 17.4.1	BGP Large Community	The BGP large communities attribute provides the capability for tagging routes and modifying BGP routing policy on routers. They are similar attributes to BGP communities, but with a twelve octet size.

Use the Cisco Feature Navigator to find information about platform and software image support. To access Cisco Feature Navigator, go to https://cfnng.cisco.com/.

Feature History for BGP Large Community