



# **GQAM Software Version 3.1.9**

## Release Notes and Installation Instructions



# Please Read

## Important

Please read this entire guide. If this guide provides installation or operation instructions, give particular attention to all safety statements included in this guide.

# Notices

## Trademark Acknowledgements

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at [www.cisco.com/go/trademarks](http://www.cisco.com/go/trademarks).

Third party trademarks mentioned are the property of their respective owners.

The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1009R)

## Publication Disclaimer

Cisco Systems, Inc. assumes no responsibility for errors or omissions that may appear in this publication. We reserve the right to change this publication at any time without notice. This document is not to be construed as conferring by implication, estoppel, or otherwise any license or right under any copyright or patent, whether or not the use of any information in this document employs an invention claimed in any existing or later issued patent.

## Copyright

© 2006, 2012 Cisco and/or its affiliates. All rights reserved. Printed in the United States of America.

Information in this publication is subject to change without notice. No part of this publication may be reproduced or transmitted in any form, by photocopy, microfilm, xerography, or any other means, or incorporated into any information retrieval system, electronic or mechanical, for any purpose, without the express permission of Cisco Systems, Inc.

# Contents

<b>About This Guide</b>	<b>v</b>
<b>Chapter 1 Introducing GQAM Software Version 3.1.9</b>	<b>1</b>
Why Choose This Release? .....	2
What Are the Site Requirements? .....	5
What's Fixed?.....	7
Known Issues.....	9
CA Descriptor and VOD Sessions .....	10
<b>Chapter 2 Upgrading the Software</b>	<b>11</b>
Upgrade Process Overview .....	12
Verify the Current Software Version on the DNCS .....	16
Back Up the Current GQAM Configuration File.....	19
Install GQAM Software onto the DNCS.....	20
Establish a Download Sequence .....	23
Download Software to the GQAM Modulators .....	25
<b>Chapter 3 Customer Information</b>	<b>33</b>
<b>Appendix A Verify the Install Package Exists on the DNCS</b>	<b>35</b>
Check for the Install Tool on the DNCS .....	36
<b>Appendix B Load Multiple Versions of GQAM Code</b>	<b>37</b>
Loading Multiple Versions of GQAM Code .....	38
<b>Appendix C Roll Back to the Previous Version of GQAM Software</b>	<b>39</b>
Restore the Previous Version of GQAM Software .....	40



# About This Guide

## Introduction

This document provides information and procedures for upgrading a Model D9479 Gigabit Quadrature Amplitude Modulation (QAM) Modulator (GQAM) to GQAM software version 3.1.9. This document also includes a description of the new features and change requests (CRs) implemented in this release.

## Scope

This document provides instructions for upgrading the Model D9479 GQAM Modulator with GQAM software version 3.1.9. It does not provide instructions for installing a GQAM in your headend.

**Note:** For instructions to install a GQAM in your headend or for a complete description of GQAM features, refer to the *Gigabit QAM Modulator Model D9479 Hardware Installation and Operation Guide*.

## Audience

System operators or Cisco engineers who are responsible for installing the GQAM software onto a GQAM should read this publication.

## Document Version

This is the second release of this document.



# 1

---

## Introducing GQAM Software Version 3.1.9

### Introduction

This chapter lists the requirements for upgrading the Model D9479 GQAM Modulator with GQAM software version 3.1.9 and includes several feature enhancements and performance improvements over previous releases of GQAM software. These enhancements and improvements are described in the change requests (CRs) implemented in this release. For additional details, go to *What's Fixed?* (on page 7).

### In This Chapter

- Why Choose This Release? ..... 2
- What Are the Site Requirements? ..... 5
- What's Fixed? ..... 7
- Known Issues ..... 9
- CA Descriptor and VOD Sessions ..... 10

## Why Choose This Release?

### Overview

GQAM software version 3.1.9 is designed to be installed on a GQAM. After the software is installed and the modulator is active, it provides additional support for sites that deploy video-on-demand (VOD), *anything-On-Demand* (xOD), and other standard or interactive broadcast services.

**Note:** For a complete description of the GQAM, refer to the *Gigabit QAM Modulator Model D9479 Hardware Installation and Operation Guide*.

This section includes the features supported in GQAM software version 3.1.9.

### New Features

#### Introduction

This section provides descriptions of the major new features supported in GQAM software version 3.1.9.

#### Switched Digital Video Optimizes Bandwidth Utilization

GQAM software version 3.1.9 supports Switched Digital Video (SDV). SDV is a technology that allows cable operators to recover bandwidth from infrequently-viewed channels. Instead of sending all channels to the set-top boxes, lightly viewed channels are put into a switching pool and only sent to the set-top boxes when viewers tune to them. With SDV, service providers can recapture access network bandwidth by delivering selected services only where and when users are actively requesting service.

The advent of SDV technology promises to fundamentally change the way the industry delivers digital entertainment. With SDV, popular content is broadcast continuously, while less popular content is held back and transmitted only upon request. Unlike VOD, with SDV (after the content is transmitted) that stream is shared by any subsequent viewers requesting the same content within the same service group. SDV gives service providers the ability to offer a wider variety of programming while managing HFC network bandwidth in a sustainable way. SDV offers these benefits in a manner that is transparent to the consumer.

Implementation of SDV in the Cisco DBDS network ensures efficient sharing of GQAM bandwidth between VOD and SDV services.

**Important!**

- Cisco's implementation of SDV requires a system operating with SR 2.7, SR 3.7, or SR 4.2 (or later).
- SDV is an optional feature for the DNCS that must be purchased and installed separately.
- When SDV is enabled, a new screen **SDB Session Count** is enabled on the GQAM front panel LCD.

**Note:** SDV also utilizes the functionality of Netcrypt Bulk Encryptors to operate efficiently.

**Direct Pass Through of Encrypted Third-Party VOD Streams in an Overlay Environment**

GQAM software version 3.1.9 supports direct pass through of encrypted third-party VOD streams in an Overlay environment. An Overlay environment uses Cisco DBDS technology to create a network in which different conditional access (CA) systems can coexist. Overlay technology assumes that a PowerKEY DBDS network will be “laid over” an existing, but different, cable network. In this scenario, GQAM software version 3.1.9 supports direct pass through of encrypted third-party VOD streams.

**Provision the GbE Port From the DNCS**

GQAM software version 3.1.9 enables users to provision the IP address of the GbE port from the DNCS Administrative Console. Earlier versions of GQAM software did not support GbE port provisioning from the DNCS. Instead, you were required to manually provision the port as described in the technical bulletin *Provisioning the Gigabit Ethernet Port on the Gigabit QAM Modulator* (part number 4002333, published February 2004).

**Important:**

- This feature requires a system that is running SR 2.5, SR 3.5, or SR 4.0 SP1 or later.
- GQAM software version 3.1.9 also allows users to generate or respond to an ICMP (Internet Control Message Protocol) echo request (PING) on the Gigabit Ethernet (GbE) port.

**Note:** For assistance using the DNCS to provision the IP address of the GbE port, refer to the *DNCS Online Help* for your system.

### Full Shared Key Support for Encrypted VOD in an Overlay Environment

GQAM software version 3.1.9 provides full shared key support for encrypted VOD in an Overlay environment. Full shared key support enables GQAMs to operate in a mode where on-demand content is encrypted using methods compatible with legacy (third-party) conditional access (CA) systems. This mode is enabled during session creation and remains in effect until the session is deleted. Content that is protected using this mode will not be viewable by devices with integrated QAM demodulators (such as TVs with QAM tuners) that are able to display clear digital content.

### Support for Multiflow/Multicast

With the release of SR 4.2, Cisco takes single-flow multicasting one step further by offering support for multiflow/multicast. GQAM software version 3.1.9 provides support for this new feature. Multiflow/multicast represents Cisco's implementation of the Advanced DOCSIS Set-top Gateway (ADSG) standard and allows service providers to harness the power of DOCSIS to provide additional services and programming to customers.

**Important!** GQAM software version 3.1.9 also continues support for **GQAM IP multicast input**, which was introduced in previous system releases. GQAM IP multicast input allows system operators to use GQAMs to join an IP multicast service or source to obtain and broadcast content to digital set-tops in different formats (simulcast). Basically, this feature allows different GQAMs to use the same IP content source.

### Support for IGMPv3 Host Signaling

GQAM software version 3.1.9 provides support for Internet Group Management Protocol version 3 (IGMPv3) host signaling. IGMPv3 introduces the ability for hosts to signal group membership with filtering capabilities with respect to sources. IGMPv3 can operate with both Internet Standard Multicast (ISM) and Source Specific Multicast (SSM).

IGMPv3 lets systems on a physical network know which hosts belong to which multicast groups. This information is required by the multicast routers so they know which multicast datagrams to forward onto which interfaces thereby facilitating multicasting.

## What Are the Site Requirements?

### System Release Compatibility and Prerequisites

This GQAM software can be installed on a DBDS that is running one of the following system releases and DNCS application versions:

- SR 2.2/SR 3.2 with Service Pack 3 (or later)
- SR 2.5/SR 3.5/4.0 and associated Service Packs
- SR 2.7/SR 3.7/SR 4.2

For a complete configuration listing, or to upgrade your system, contact Cisco Services.

### Cisco Application Platform Release Dependencies

The following table shows the application platform release dependencies for the GQAM software.

**Important!** Failure to have the correct application platform software *or later* installed on your system *prior* to installing the GQAM software can result in video freezing and black screens when using VOD or xOD applications.

Set-Top Platform	Operating System (OS)	SARA*	PowerKEY Version
Explorer 8300 DVR v. 1.3.1a17 (or later)	OS 6.14.10.1	1.87.14.1	3.7.5
Explorer 8000/8010 DVR v. 1.3.1a17 (or later)	OS 6.12.7.1	1.87.13.1	3.7.5
Explorer 3250HD MR4 P1 (or later)	OS 3.12.8.1	1.57.8.1	3.7.5
Explorer 2xxx, 31xx, 3200, 3100HD	OS 3.10.9	1.54.23.1	1.0.6.20 (Explorer 2000s) 1.0.7 (all others)

\* Cisco Resident Application

**Important!** If you are not using the Cisco Resident Application, contact your resident application provider to verify that you have the most recent version.

## Software Components

GQAM software version 3.1.9 includes the following application and boot codes:

- GQAM Host Application code 3.1.9
- GQAM Host Boot code 3.1.9
- GQAM Input Application code 3.1.9
- GQAM Input Boot code 3.1.9
- GQAM Output Application code 3.1.9
- GQAM Output Boot code 3.1.9
- RF Application code 2.5

## Hardware Supported

GQAM 3.1.9 supports only the Model D9479 GQAM.

## When to Perform the Upgrade

To reduce the impact of service interruptions, perform the upgrade during a scheduled maintenance window.

# What's Fixed?

## Implemented CRs

This section provides a description of the CRs implemented in GQAM software version 3.1.9 for issues found in GQAM 1.2 and earlier.

### **GQAMs No Longer Insert a CA Descriptor on a Clear Session During a PMT Update**

Previously, GQAMs inserted the conditional access (CA) descriptor into the PMT, whether the stream was encrypted or not. Now the CA descriptor is inserted only into encrypted video streams. **CR 54993** corrected this issue.

### **VOD Sessions No Longer Go to Black and White**

**CR 56432** corrected this issue.

### **Third-Party Device No Longer Causes GQAMs to Reboot**

**CR 56435** corrected this issue.

### **GQAMs Now Process Variable Bit Rate Streams Correctly**

Highly variable bit rates streams were causing glue frame events and dropped packets. GQAMs now process highly variable bit rates streams correctly.

**CR 56899** corrected this issue.

### **DC Power Levels Now Display Correctly**

Previously, power levels reported by simple network monitoring protocol (SNMP) on the craft port were incorrect causing false alarms to be seen on SNMP monitoring agents. DC power levels now display correctly. **CR 57474** corrected this issue.

### **Underflow Alarms Now Reported Correctly**

Previously, underflow alarms were not reported correctly when the session data rate dropped to 0 for sessions configured on the GbE interface of the GQAM. Underflow alarms are now reported correctly. **CR 58889** corrected this issue.

### **Macroblocking No Longer Occurs on GQAM High Definition Sessions**

Previously, macroblocking would occur intermittently on GQAM high definition (HD) sessions with long program clock reference (PCR) intervals. Macroblocking no longer occurs on these sessions. **CR 59079** corrected this issue.

**Unintentional Momentary Activation of GQAM RF Following Reboots No Longer Occurs**

Previously, the GQAM momentarily activated muted RF frequencies for approximately 10 seconds following a soft reboot or upgrade. Additionally, newly-muted carriers activated for approximately 10 seconds following any type of reboot. **CRs 60817** and **60961** corrected this issue.

## Known Issues

This section describes known issues found during the testing of GQAM software version 3.1.9. A resolution to these issues is currently in development at Cisco.

### **Session Program Alarms May Not Clear Correctly**

Prolonged periods of poor ASI signal levels at the input of the GQAM may result in invalid “PMT update” alarms reported by the GQAM. **CR 58391** addresses this issue.

### **Intermittent Macroblocking May Occur on Music Choice Sessions**

Intermittent macroblocking of video streams may be observed on fully-utilized QAM modulator ports when Music Choice sessions are present and created with provisioned data rates below 250 Kbps.

**Workaround:** To avoid this potential issue, create Music Choice sessions with provisioned data rates great than 251 Kbps. **CR 64910** addresses this issue.

## CA Descriptor and VOD Sessions

### Overview

Versions of GQAM software prior to software version 1.0.6 inserted the PowerKEY Conditional Access (CA) descriptor into the Program Map Table (PMT) for unencrypted on-demand content. If the Digital Home Communications Terminal (DHCT) operating system (OS) found the CA descriptor in the PMT, the OS started the PowerKEY decryptor.

The PowerKEY scheduler within the DHCT then prioritized Entitlement Control Messages (ECMs) by waiting until an ECM was processed before allowing any other CA messages or requests to be processed.

### Background

During this waiting period, when no ECMs were delivered, non-ECM requests (for example, a request for a Multi-Room DVR session), remained in the queue and were not processed until the PowerKEY decryptor was stopped. Therefore, no Multi-Room DVR sessions could be established while the Multi-Room DVR server was streaming unencrypted VOD.

### Solution

GQAM software version 3.1.9 carries forward the modification from GQAM software version 1.0.6 to insert the CA descriptor only for encrypted sessions, including those that will be encrypted after interactive session key (ISK) setup. Consequently, the OS now correctly detects the encryption status of the stream. Detecting the encryption status enables sessions (including VOD and Multi-Room DVR sessions) to be established correctly on a Multi-Room server.

# 2

## Upgrading the Software

### Introduction

This chapter describes how to upgrade the Model D9479 GQAM Modulator with GQAM software version 3.1.9.

### In This Chapter

- Upgrade Process Overview ..... 12
- Verify the Current Software Version on the DNCS ..... 16
- Back Up the Current GQAM Configuration File ..... 19
- Install GQAM Software onto the DNCS..... 20
- Establish a Download Sequence ..... 23
- Download Software to the GQAM Modulators ..... 25

## Upgrade Process Overview

### Before You Begin

Before you upgrade to GQAM 3.1.9, be sure that your system meets the criteria specified in *System Release Compatibility and Prerequisites* (on page 5) and *Cisco Application Platform Release Dependencies* (on page 5).

If you will not be downloading the GQAM software from the Cisco File Transfer Protocol (FTP) site, make sure that you have obtained the CD, **GQAM Software V3.1.9**, part number 4013647.

### Time to Complete

When upgrading GQAMs with the new software, consider the following tasks and the amount of time required for each:

- Completing pre-upgrade tasks takes from 30 to 45 minutes.
- If you are upgrading from an FTP site, allow an additional 10 to 15 minutes to download the software from the FTP site. The speed of the connection and the size of the files will determine the actual download time.
- Downloading new software to the GQAM takes approximately 8 minutes for each modulator.
- For GQAMs that carry broadcast sessions, the DNCS will restart the sessions after the GQAMs load new software.
- For GQAMs that carry VOD sessions, only those sessions that are determined to be active will be restarted. Since subscribers may tune away when the GQAM reboots, the total number of recovered sessions may not match the original number of sessions on the GQAMs.

**Note:** It is not necessary to rebuild non-VOD sessions on the GQAMs that you upgrade. The non-VOD sessions are rebuilt automatically after the new software is downloaded to the GQAM.

### Subscriber Impact

When GQAMs are reset (rebooted) during the upgrade, the services they carry are interrupted. DHCTs will show a frozen picture or black screen until the upgrade is complete and the DNCS has restarted all of the active sessions on the GQAM.

## Impact of TVs with QAM Tuners

When upgrading GQAMs to new releases of software, you must reset the GQAMs in order for the devices to download the new software from the DNCS. When the software download is complete, the DNCS then recreates any broadcast sessions that were active on the GQAMs. The DNCS also activates encryption for any secure services that were running on the GQAMs.

An increasing number of TVs are being manufactured and sold with QAM tuners that can access services that are not properly encrypted. Therefore, as a part of the upgrade process, we encourage you to verify that the DNCS re-establishes encryption for *all* secure services on the upgraded GQAMs. This extra step ensures that no GQAM that may be carrying content inappropriate for children can be viewed inadvertently when using a TV that is equipped with a QAM tuner. For additional information, refer to the following procedures:

- *Verifying the Functionality of GQAM Modulators That Carry Broadcast Sessions* (on page 31)
- *Verifying the Functionality of GQAM Modulators That Carry xOD or VOD Sessions* (on page 32)

## Process Overview

This section provides an overview of the process required to upgrade to GQAM 3.1.9.

**Important!** You should only upgrade GQAMs to new releases of software if your network is running in a healthy state (for example, a system can boot and stage set-tops). If your network is not in a healthy state, you should not upgrade to the new release of software unless the new release contains a remedy to your system issue.



### CAUTION:

If you are upgrading more than one GQAM, download the new software to one modulator group (for example, all modulators in a single rack or hub) and verify its functionality before attempting to download the software to another modulator group. Verifying the functionality of one modulator group at a time enables you to better isolate any failures that may occur and enables you to minimize service interruptions.

### Pre-Upgrade Tasks

**Important!** Performing the pre-upgrade tasks will not impact system performance.

- 1 Verify that the install tool (install.pkg) exists on the DNCS.

**Note:** For procedures on how to check for the install.pkg tool, see *Verify That the Install Package Exists on the DNCS* (on page 35).

- 2 Determine the configuration (config) files currently in use on your system.
- 3 Verify the software version associated with the configuration files.

## Chapter 2 Upgrading the Software

- 4 Make a backup copy of the *current* GQAM configuration file.
- 5 If you are upgrading more than one GQAM, establish an order for upgrading the modulators.
- 6 Install the GQAM software onto the DNCS from either the Cisco FTP site or a CD.



### CAUTION:

Installing GQAM software version 3.1.9 may overwrite the existing IP addresses for the GQAM GbE ports. Therefore, you must locate and write down the IP addresses of the GQAM GbE ports provisioned on your system for the GQAMs that you are planning to upgrade.

- 7 Follow these steps to locate and write down the IP addresses of the GQAM GbE ports provisioned on your system that you are planning to upgrade.
  - a On the front panel of each GQAM you are planning to upgrade, press the **Options** button ten times. The GbE IP address appears.
  - b Write down the GbE IP address for each GQAM you are planning to upgrade.

**Important!** Be sure to match each GbE IP address with the correct GQAM.
  - c Verify that the GbE IP addresses defined in the Set Up GQAM GUI on the DNCS match the IP addresses that display on the front panel LCD screen of each corresponding GQAM you are planning to upgrade.
- 8 Do the GbE IP addresses match?
  - If **yes**, go to step 6.
  - If **no**, change the GbE port IP addresses in the Set Up GQAM GUI to match the IP addresses shown on the front panel LCD screen for each corresponding GQAM you are planning to upgrade. Then, go to step 6.

**Note:** If your GQAM will carry VOD sessions, documenting current sessions is not necessary. VOD sessions are set up as needed when a DHCT requests a session.

### Upgrade Tasks

**Important!** Performing the upgrade tasks will result in a temporary loss of service as GQAMs are reset.

- 1 Download the new software to the GQAMs.
- 2 If the GQAMs you are upgrading currently carry broadcast sessions, determine the sessions that are running on those modulators you plan to upgrade. This will allow you to verify that these sessions are rebuilt after the new software is downloaded to the modulators.
- 3 Verify that the upgraded GQAM is functioning properly.

**Important!** Read and follow the directives contained in *Impact of TVs with QAM Tuners* (on page 13).

## Upgrade Process Overview

- 4 After the upgrade is complete, generate a Doctor Report using the `-av` option to verify system stability and functionality.
- 5 Perform System Validation Tests for your system release version.

## Verify the Current Software Version on the DNCS

### Introduction

Before attempting to upgrade to GQAM 3.1.9, verify the number of configuration files in use and what GQAM software version is associated with each configuration file.

On occasion, for testing purposes, the configuration file for a test device or a set of test devices is changed to a non-standard value (for example `gqam111.config` instead of `gqam.config`). If your site has been involved in this type of testing (and you are now ready to use the released code again), you should update the configuration file setting for your test units to reflect the default values.

**Note:** The default configuration file for the GQAM is `/tftpboot/gqam.config`.

Failure to correct a unit from using a unique configuration will result in the unit remaining in the uniquely-specified configuration. Specifically, it will not load the new code and it will continue to load the code specified in the unique configuration file.

In extremely rare cases, the configuration file may have been specified in or may need to be specified in the `/etc/bootptab` file. In the event that a headend device fails to load the code you intended it to receive, you should check to see if a unique file was specified either through the DNCS GUI or in the `/etc/bootptab` file before contacting Cisco Services for assistance.

### Checking for Multiple Config Files

- 1 From the DNCS Administrative Console, click **Utilities** and click **xterm**. The xterm window opens.
- 2 Type `dbaccess dnscsdb <<%` and press **Enter**.
- 3 Type `unload to gqamdata select qam_name, configfile from pdcaqam where modeltype=3;` and press **Enter**.
- 4 Type `%` and press **Enter**. A result, similar to the following output, appears.

```
Database selected.  
5 row(s) unloaded.  
Database closed.
```

- 5 Type **more qqamdata** and press **Enter**. A result, similar to the following output, appears.

```
> more qqamdata
BCASTGQAM1|qqam.config
VODMQAM1|qqam.config|
BCASTQAM2|qqam.config|
BCASTQAM3|qqam.config|
VODMQAM|qqam.test|
```

Notice that two different config files exist

- 6 Did more than one config file appear?
- If **yes**, keep the xterm window open and go to step 7.
  - If **no**, go to *Checking the Software Version Associated with the config File* (on page 18).
- 7 Do you need to continue to run different versions of GQAM software on some GQAMs in your network?
- If **yes**, refer to *Load Multiple Versions of GQAM Code* (on page 37).
  - If **no**, go to step 8.
- 8 Update the GQAMs to use the same config file by performing the following steps:
- a From the DNCS Administrative Console, click **Element Provisioning** and click **QAM**. The QAM List window opens.
  - b Select the GQAM, click **File** and select **Open**. The Set Up GQAM window opens.
  - c Click **Advanced Parameters** and modify the configuration file, as needed.
- 9 Go to *Checking the Software Version Associated with the config File* (on page 18).

## Checking the Software Version Associated with the config File

- 1 From the xterm window, type `cd /tftpboot` and press **Enter**. The tftpboot directory becomes the working directory.
- 2 For each unique config file identified in *Checking for Multiple config Files* (on page 16), type `grep Appl <config file name>` and press **Enter**.

**Example:** `grep Appl gqam.config`

**Result:** A result, similar to the following output, appears.

```
flame:/export/home/dncs$ >cd /tftpboot
flame:/tftpboot$ >grep Appl gqam.config
# if the file path/name in ApplCodePath is different than it was
# ApplCodePath should contain a string indicating the path and
# Example: ApplCodePath = [pathname/filename]
AppCodePath = gqam_app_3_1_6.bin
flame:/tftpboot$ >
```

Indicates v3.1.6 code is in use  
with the gqam.config file

- 3 Is the proper version of software installed?
  - If **yes**, type `exit` and press **Enter**.
  - If **no**, go to *Back Up the Current GQAM Configuration File* (on page 19).

# Back Up the Current GQAM Configuration File

## Introduction

Before installing the new GQAM software, make a backup file of the config file currently installed on the DNCS by completing the following steps.



### CAUTION:

Do not install new software until you have created a backup of the configuration file currently installed on your system. Having a backup file will enable you to restore the previous version of GQAM software in the unlikely event of a failure.

Restore the previous version of software to your system only when recommended by Cisco Services.

## Backing Up the Current GQAM Configuration File

- 1 Follow these instructions to log on to the xterm window as **root** user.
  - a Type **su -** and press **Enter**. The **password** prompt appears.
- 2 Type the root password and press **Enter**. Type **cd /tftpboot** and press **Enter** to access the tftpboot directory.
- 3 Type **pwd** and press **Enter**. The /tftpboot directory name appears and indicates that you are in the correct directory.
- 4 Copy the current configuration file to a backup file.

**Example:** Type **cp -p gqam.config gqam.config.old** and press **Enter**.

**Note:** If you are using a non-standard config file (for example, gqam.test), substitute that config file name for gqam.config.

**Result:** A copy of the gqam.config file (or the file name you specified), which contains configuration settings, is saved to a configuration file named gqam.config.old.
- 5 Remain logged in as root user and go to *Install GQAM Software onto the DNCS* (on page 20).

## Install GQAM Software onto the DNCS

### Introduction

This section describes how to install the new software onto the DNCS. Software is installed from either of the following locations:

- GQAM Software V3.1.9 CD, part number 4013647. Go to *Installing the GQAM Software from a CD* (on page 20).
- Cisco's FTP server. Go to *Installing the GQAM Software from the Cisco FTP Server* (on page 21).

### Installing the GQAM Software from a CD

- 1 Insert the **GQAM Software V3.1.9** CD into the CD-ROM drive of the DNCS.
- 2 Did the File Manager window display?
  - If **yes**, the CD mounted successfully.
  - If **no**, type **df -k** to determine where the CD is mounted and then go to step 3.
- 3 Is `/cdrom` listed in the output?
  - If **yes**, go to step 4.
  - If **no**, contact Cisco Services.
- 4 From the xterm window where you are logged in as root, type **cd /cdrom/cdrom0** and press **Enter** to access the `cdrom0` directory.
- 5 Type **/usr/sbin/install\_pkg** and press **Enter**.

#### Results:

- The system lists the packages that will be installed.
  - A confirmation message appears asking you to confirm that you want to proceed with the installation.
- 6 Type **y** and press **Enter** to start the installation. When the installation is complete, the system displays a message stating that the installation was successful and a prompt for the root user appears.

**Note:** The installation should take less than 30 seconds.
  - 7 Was the installation successful?
    - If **yes**, go to step 8.
    - If **no**, contact Cisco Services.
  - 8 From the xterm window where you are logged in as root, type **exit** and press **Enter**. You are logged out as root user.

- 9 Complete one of the following steps:
  - a **If the File Manager is present:** From the File Manager window, click **File** and select **Eject**. The CD is ejected from the CD drive and the File Manager window closes.
  - b **If the File Manager is not present:** From an xterm window, type the following command: **cd /.; eject; exit**. The CD is ejected from the CD drive.
- 10 Type **exit** and press **Enter** to close the xterm window.
- 11 Go to *Establish a Download Sequence* (on page 23).

## Installing the GQAM Software from the Cisco FTP Server

### Creating the Directory

- 1 From the xterm window where you are logged in as root, type **cd /export/home/dncs/download** and press **Enter**. The /export/home/dncs/download directory becomes the working directory.  
**Important!** If this directory does *not* exist, use the **mkdir** command to create it. Then, repeat step 1.
- 2 Type **mkdir GQAM31** and press **Enter**. The system creates a subdirectory called GQAM31 in the /export/home/dncs/download directory.
- 3 Type **cd GQAM31** and press **Enter** to access the GQAM31 directory.
- 4 Go to *Obtaining the GQAM Software File* (on page 21).

### Obtaining the GQAM Software File

- 1 Log on to the Cisco FTP server.  
**Notes:**
  - The address of the server is **ftp.sciatl.com** or **192.133.243.133**.  
**Note:** The address for the Cisco FTP server is subject to change. If you are unable to reach the FTP server, please contact Cisco Services for the latest address.
  - The username is **anonymous**.
  - The password is the email address of the person logging in.
- 2 Choose one of the following options to navigate to the directory in which the file is located:
  - If you are *outside* of Cisco's firewall, type **cd /pub/scicare/RELEASED/GQAM**
  - If you are *inside* of Cisco's firewall, type **cd /external\_pub/scicare/RELEASED/GQAM**
- 3 Type **bin** and press **Enter**. The system sets the ftp transfer mode to binary.

## Chapter 2 Upgrading the Software

- 4 Type **hash** and press **Enter**. The system configures itself to display hash marks that show file-transfer progress.
- 5 Type **prompt** and press **Enter**. An **Interactive mode Off** message appears.
- 6 Type **mget \*** and press **Enter**. The system begins copying files into the `/export/home/dnsc/download/gqam` directory on your DNCS.
- 7 Type **bye** and press **Enter** to log out of the Cisco FTP server.
- 8 Go to *Decompressing and Extracting the File* (on page 22).

### Decompressing and Extracting the File

- 1 From the xterm window, type **gzip -d GQAM31.tar.gz** and press **Enter**. The system decompresses the GQAM software file.
- 2 Type **tar xvf GQAM31.tar** and press **Enter**. The system extracts the individual files.
- 3 Go to *Installing GQAM Software* (on page 22).

### Installing GQAM Software

- 1 From the xterm window where you are logged in as root, type **/usr/sbin/install\_pkg** and press **Enter**.

#### Results:

- The system lists the packages that will be installed.
  - A confirmation message appears asking you to confirm that you want to proceed with the installation.
- 2 Type **y** and press **Enter** to start the installation.  
**Note:** The installation should take less than 30 seconds.
  - 3 Did a message appear indicating that the installation was successful?
    - If **yes**, go to step 4.
    - If **no**, contact Cisco Services.
  - 4 Use the UNIX **rm -rfi** command to remove the following file and directory:
    - GQAM31.tar (file)
    - SAIGQAM (directory)

**Example:** Type **rm -rf SAIgqam GQAM31.tar** and press **Enter**.

**Result:** A confirmation question message appears asking you to confirm the removal.

- 5 Type **exit** and press **Enter** to log out as root user.
- 6 Type **exit** and press **Enter** to close the xterm window.
- 7 Go to *Establish a Download Sequence* (on page 23).

# Establish a Download Sequence

## Establishing a Sequence for Downloading Software onto Each GQAM

The order in which you download new software onto GQAMs allows you to verify that the download is successful before proceeding. Follow these guidelines to establish an order in which to download the new software to GQAMs. The method that you follow depends on the type of sessions that the modulator carries (xOD/VOD sessions or broadcast sessions).



### CAUTION:

**If you are downloading new software to more than one GQAM modulator group, download the software to one modulator group (for example, all modulators in a single rack or hub) and verify its functionality before attempting to download software to another modulator group. Verifying the functionality of one modulator group at a time enables you to better isolate any failures that may occur.**

### xOD/VOD Sessions

When upgrading GQAMs that carry xOD or VOD sessions, we suggest that you upgrade all modulators in one hub and verify the functionality of those modulators before upgrading modulators in another hub.

Use the following guidelines to determine the order in which to upgrade modulators within a hub:

- 1 If any GQAMs act as spares, download the software on these modulators first.
- 2 If your system does not have a spare GQAM, download the software on the modulator carrying the fewest number of sessions.
- 3 Continue downloading the software to modulators by working your way up to the modulator carrying the most sessions.

### Broadcast Sessions

When upgrading GQAMs that carry broadcast sessions, upgrade the modulators in one hub, four modulators at a time, and verify their functionality before proceeding to other GQAMs in the hub.

Use the following guidelines to determine the order in which to upgrade modulators:

- 1 If any GQAMs act as spares, download the software on these modulators first.
- 2 If your system does not have a spare GQAM, download the software on the modulator carrying sessions that are least viewed.

- 3 If you have GQAMs that carry BFS sessions, download the software to the BFS GQAM first.
- 4 Continue downloading the software to modulators in this hub by working your way up to the modulator carrying sessions that are most frequently viewed.

## What's Next?

### xOD/VOD Sessions

If all of your GQAMs carry xOD or VOD sessions, you are ready to begin downloading the new software to the GQAMs. Go to *Download Software to the GQAM Modulators* (on page 25).

**Note:** Because xOD and VOD sessions are not pre-configured, but are set up as needed when a subscriber requests them, generating a list of existing sessions is not necessary.

### Broadcast Sessions

If you have GQAMs that carry broadcast sessions, use Cisco's Report Writer to view the Channels, Sources & Sessions Report. This report lists the existing broadcast sessions in your system along with the channels and sources in your system that each modulator currently carries.

The Channels, Sources & Sessions Report lists each *display channel* (channel number) in the system. The report also displays information about the *carriage* of each channel (how the channel is transmitted on the DBDS). The report maps each source to the transport device used to deliver the source (analog frequency on GQAMs).

Generating this report helps you to determine which sessions/services are carried by each GQAM. This report also helps you to verify that these sessions are successfully rebuilt after the new software is downloaded to the GQAM.

You can also use the DNCS Session List to determine the existing broadcast sessions in your system.

**Important!** Refer to the *DNCS Report Writer Version 3.5 User's Guide* or the *DNCS Online Help* for your system for further assistance.

# Download Software to the GQAM Modulators

## Introduction

To download the new software to GQAMs, you must first reset (reboot) the modulators using one of the following methods:

- DNCS GUI
- auditQam utility
- Front panel of the GQAM



### CAUTION:

All active sessions on the GQAM will be interrupted when the modulator is reset. DHCTs downstream of the modulator will lose their ability to display services until sessions are reestablished.

**Important!** Use the procedure for *Preparing to Monitor Remote GQAM Resets* (on page 26) when resetting GQAMs from the DNCS GUI or when using an auditQam script to reset multiple GQAMs.

After the modulators reset, the software is downloaded from the DNCS to the modulators and existing sessions are reestablished.

## Important Note Regarding the auditQam Utility

If you are using the auditQam utility to reset your GQAMs, your system must be operating SR 4.0 SP1 or later.

## Which Reset Method to Use

Choose one of the following methods to reset your GQAMs:

- To reset modulators through the DNCS GUI, go to *Preparing to Monitor Remote GQAM Resets* (on page 26).
- To reset modulators using the auditQam utility, go to *Preparing to Monitor Remote GQAM Resets* (on page 26).
- To reset modulators through the front panel, go to *Physically Resetting the GQAM Modulator* (on page 30).

**Note:** Resetting GQAMs from the DNCS GUI or from the front panel can be time-consuming. If you have a number of modulators to reset, consider using the auditQam utility.

## Preparing to Monitor Remote GQAM Resets

- 1 From the xterm window, type `cd /dvs/dnCS/tmp` and press **Enter** to access the TMP directory.
- 2 Type `ls -ltr boot*` and press **Enter**. A list of files starting with "boot" appears in the xterm window.
- 3 Locate the current `bootpd.xxx` file name.  
**Note:** This will be the `bootpd.xxx` file with the highest number and/or the most recent date.
- 4 Type `tail -f bootpd.xxx | awk '/GQAM/'` to show the last GQAM to reboot.
- 5 As you reset GQAMs (in the QAM List window or using the `auditqam` utility), monitor the `bootpd` file to verify that each GQAM reset.  
**Note:** The `bootpd` file will roll over to the next log as it grows. If logging stops, repeat steps 2 through 4 to see if a new log file is being used.
- 6 Go to one of the following sections, as desired:
  - *Resetting the GQAM Modulator Through the DNCS GUI* (on page 26)
  - *Resetting GQAM Modulators Through the `auditQam` Utility* (on page 28)

## Resetting the GQAM Modulator Through the DNCS GUI

This section describes how to reset GQAMs in order to load new software. Use the *Preparing to Monitor Remote GQAM Resets* (on page 26) procedure before resetting GQAMs through the DNCS GUI.




### CAUTION:

All active sessions on the GQAM will be interrupted when the modulator is reset. DHCTs downstream of the modulator will lose their ability to display services until sessions are reestablished.

- 1 If you have not already done so, provision the modulator on the DNCS.  
**Note:** For instructions to provision the GQAM, refer to *Gigabit QAM Modulator Model D9479 Hardware Installation and Operation Guide*.
- 2 From the DNCS Administrative Console, click the **DNCS** tab, click the **Element Provisioning** tab, and then click **QAM**. The QAM List window opens.
- 3 Based on the order you determined earlier, select the GQAM that you want to reset by highlighting it in the QAM List window.  
**Important!** Although each GQAM that has been provisioned is listed sixteen times, select only one of the sixteen modulators listed.

**Example:** The following diagram shows an example of a GQAM selected in the QAM List window.

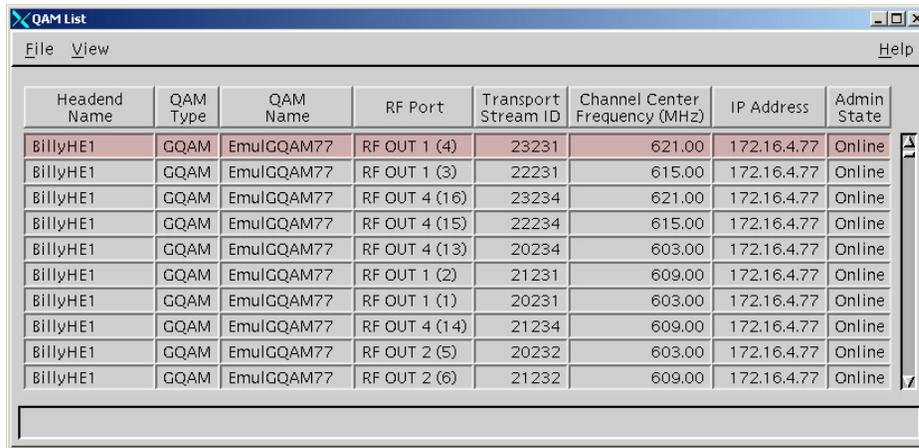

Headend Name	QAM Type	QAM Name	RF Port	Transport Stream ID	Channel Center Frequency (MHz)	IP Address	Admin State
BillyHE1	GQAM	EmulGQAM77	RF OUT 1 (4)	23231	621.00	172.16.4.77	Online
BillyHE1	GQAM	EmulGQAM77	RF OUT 1 (3)	22231	615.00	172.16.4.77	Online
BillyHE1	GQAM	EmulGQAM77	RF OUT 4 (16)	23234	621.00	172.16.4.77	Online
BillyHE1	GQAM	EmulGQAM77	RF OUT 4 (15)	22234	615.00	172.16.4.77	Online
BillyHE1	GQAM	EmulGQAM77	RF OUT 4 (13)	20234	603.00	172.16.4.77	Online
BillyHE1	GQAM	EmulGQAM77	RF OUT 1 (2)	21231	609.00	172.16.4.77	Online
BillyHE1	GQAM	EmulGQAM77	RF OUT 1 (1)	20231	603.00	172.16.4.77	Online
BillyHE1	GQAM	EmulGQAM77	RF OUT 4 (14)	21234	609.00	172.16.4.77	Online
BillyHE1	GQAM	EmulGQAM77	RF OUT 2 (5)	20232	603.00	172.16.4.77	Online
BillyHE1	GQAM	EmulGQAM77	RF OUT 2 (6)	21232	609.00	172.16.4.77	Online

4 Click **File** and then select **Reset**. The Question window opens and asks you to confirm the reset of the GQAM.

5 Click **Yes**. The QAM List window displays the following message:  
**The reset request has been received by QAM modulator <Name of GQAM>**

**Notes:**

- The <Name of GQAM> represents the name of the modulator you just reset.
- It may take up to 8 minutes for each modulator to reset

6 Do you see the IP address for the GQAM you reset in the bootpd log file?

- If **yes**, continue with this procedure.
- If **no**, call Cisco Services.

**Note:** For details about IP addresses in the bootpd log file, go to *Preparing to Monitor Remote GQAM Resets* (on page 26).

7 Repeat steps 3 through 6 for up to three additional modulators, and then go to step 8.

**Important!** Never reset more than four modulators at once, or you may cause GQAMs to have to retry downloads due to traffic congestion on the network.

8 Choose one of the following options and then go to step 9 of this procedure.

- For GQAMs that carry broadcast sessions, go to *Verifying the Functionality of GQAM Modulators That Carry Broadcast Sessions* (on page 31).
- For GQAMs that carry xOD or VOD sessions, go to *Verifying the Functionality of GQAM Modulators That Carry xOD or VOD Sessions* (on page 32).

- 9 Do you have additional modulators to reset?
  - If **yes**, repeat steps 3 through 8.
  - If **no**, go to step 10.
- 10 Click **File** and select **Close** to close the QAM List window.

## Resetting GQAM Modulators Through the auditQam Utility

The *reset* option of the auditQam utility allows you to reset the GQAM from the command line of the DNCS, a process that is usually quicker than resetting the modulator through the DNCS GUI or modulator panel.

You can use one of the following two methods to reset the GQAM using auditQam:

- Reset a single GQAM by typing the IP address of the modulator as an argument to the **auditQam -reset** command
- Reset more than one GQAM by creating a script that includes a reset command for each modulator. The script includes a delay value that resets each GQAM over a period of time.

**Note:** Instructions and guidelines for both situations are provided in this section.

### Resetting One GQAM

- 1 If necessary, open an xterm window on the DNCS.
- 2 Type the following command and press **Enter**:  
**auditQam -reset [GQAM ip address]**  
**Result:** The system shuts down and reinitializes the modulator.  
**Note:** The system also performs an audit to ensure that the session list for the modulator matches the session list from the DNCS.
- 3 Do you see the IP address for the GQAM you reset in the bootpd log file?
  - If **yes**, continue with this procedure.
  - If **no**, call Cisco Services.
- 4 Select one of the following options:
  - For GQAMs that carry broadcast sessions, go to *Verifying the Functionality of GQAM Modulators That Carry Broadcast Sessions* (on page 31).
  - For GQAMs that carry xOD or VOD sessions, go to *Verifying the Functionality of GQAM Modulators That Carry xOD or VOD Sessions* (on page 32).

## Resetting More Than One GQAM

When performing an upgrade, you may not want to manually reset hundreds of modulators from the DNCS GUI. To save time, you can create a script that resets the GQAMs. Refer to the following example for a sample script.

**Important!** Resetting the GQAM interrupts all active sessions on the GQAM for up to 10 minutes. Complete this task during a maintenance period whenever possible.

This sample script will execute the following functions:

- Reset four GQAMs
- After 8 minutes (480 seconds), reset another set of four GQAMs

**Important!** Use the procedure for *Preparing to Monitor Remote GQAM Resets* (on page 26) when using an auditQam script to reset multiple GQAMs.

**Note:** You can save and re-use this script each time you need to reboot your GQAMs.

```
auditQam -reset 123.123.123.123
sleep 1
auditQam -reset 123.123.123.124
sleep 1
auditQam -reset 123.123.123.125
sleep 1
auditQam -reset 123.123.123.126
sleep 480
# end of first set
auditQam -reset 123.123.123.127
sleep 1
auditQam -reset 123.123.123.128
sleep 1
auditQam -reset 123.123.123.129
sleep 1
auditQam -reset 123.123.123.130
sleep 480
# end of second set
```

After resetting the GQAMs, select one of the following options:

- For GQAMs that carry broadcast sessions, go to *Verifying the Functionality of GQAM Modulators That Carry Broadcast Sessions* (on page 31).
- For GQAMs that carry xOD or VOD sessions, go to *Verifying the Functionality of GQAM Modulators That Carry xOD or VOD Sessions* (on page 32).

## Physically Resetting the GQAM Modulator

- 1 Record the Session Count and the Program Count for your GQAMs by completing the following steps:  
**Note:** Skip this step for any GQAM that is used for video-on-demand (VOD).
  - a Press the **Options** button on the front panel until the **Session Count** total appears.
  - b Record the Session Count on a piece of paper.  
**Note:** Press the **RF Select** button to access each component of the GQAM.
  - c Press the **Options** button on the front panel until the **Program Count** total appears.
  - d Record the Program Count on a piece of paper.  
**Note:** Press the **RF Select** button to access each component of the GQAM.
  - e Repeat steps a) through d) for each GQAM in your system.
- 2 Reset the GQAM by turning off and then back on the power switch located on the rear panel.  
**Note:** If it is difficult to reach the power switch, you can reset the modulators by pressing the **Options** button on the front panel until the Reset option appears.
- 3 Repeat steps 1 and 2 for up to three additional modulators.  
**Important!** Never reset more than four modulators at once, or you may overload the DNCS.
- 4 Repeat step 1 to record the current Session and Program Count totals for each modulator that you reset. Then, go to step 5.
- 5 Does the Session Count and Program Count recorded in step 1 and step 4 match?  
**Note:** Skip this step for any GQAM that is used for video-on-demand (VOD).
  - If **yes**, go to *Verifying the Functionality of GQAM Modulators That Carry Broadcast Sessions* (on page 31). Then, go to step 6 of this procedure.
  - If **no**, contact Cisco Services.
- 6 Do you have additional modulators to reset?
  - If **yes**, repeat steps 2 through 5 until each modulator has been reset, and then go to *Verifying the Functionality of GQAM Modulators That Carry xOD or VOD Sessions* (on page 32).
  - If **no**, go to *Verifying the Functionality of GQAM Modulators That Carry xOD or VOD Sessions* (on page 32).

## Verifying the Functionality of GQAM Modulators That Carry Broadcast Sessions

- 1 Access a DHCT that is connected downstream to one GQAM.
- 2 Refer to the Channels, Sources & Sessions Report that you generated and saved in *Broadcast Sessions* (on page 24) to verify restored GQAM channels and sessions.
- 3 Tune the DHCT to each channel listed in the report for each GQAM that you reset and upgraded.
- 4 Are all channels listed for the GQAMs that you reset accessible from the DHCT?
  - If **yes**, go to step 5.
  - If **no**, do *not* attempt to upgrade the software for any additional GQAM. Contact Cisco Services.
- 5 For those GQAMs that carry content inappropriate for children, Cisco recommends that you verify encryption using one of the following methods:
  - Using a set-top that is authorized for all services, tune one by one to each service and check the PowerKEY Information diagnostic screen (page 6). If the Prog Stat and Prog Entitle fields are zero (0x00), then the program is in the clear. If these fields are non-zero, then the program is encrypted.
  - Verify that the program count is correct on the GQAMs that carry inappropriate content is correct before and after the reset.
  - Using a QAM tuner television, tune to the respective channels and verify that inappropriate content is not viewable.
- 6 Is the content viewable?
  - If **yes**, stop and then restart (bounce) the qamManager process on the DNCS, and repeat step 5. If the content continues to be viewable, contact Cisco Services. Then, go to step 7.
  - If **no**, go to step 7.
- 7 Have you completed resetting your GQAMs?
  - If **yes**, go to step 8.
  - If **no**, return to the procedure you are using to reset your GQAMs.
- 8 Generate a Doctor Report using the **-av** option to verify system stability and functionality.

**Note:** For further instructions on running the Doctor Report, refer to the chapter titled **Analyze System Configuration With the Doctor Report** in the *DBDS Utilities Installation Instructions and DNCS Utilities User's Guide*.
- 9 Do new or unexpected errors appear in the Doctor Report?
  - If **yes**, contact Cisco Services.
  - If **no**, go to step 10.

- 10 Perform the System Validation Tests found in the installation and upgrade documentation for your system release version to verify the functionality and performance of the set-tops in your system.
- 11 Over the next few days, check the individual modulators to verify that they received the new code.

## Verifying the Functionality of GQAM Modulators That Carry xOD or VOD Sessions

Sessions that exist on xOD or VOD GQAMs that were upgraded will be interrupted and, in most cases, will recover. If the sessions do not recover, choose one of the following options:

- Exit the xOD or VOD application (stop the xOD or VOD program), and then restart the application and the xOD or VOD stream by resuming the playback of the “in progress” purchase.
- Change to a different channel, and then back to the previous channel. Restart the application and the xOD or VOD stream by resuming the playback of the “in progress” purchase.

**Note:** This procedure will vary depending on the application you are using.

**Important!** Due to load balancing and traffic, it is difficult to determine if all GQAMs are functioning properly. For this reason, you should monitor these modulators for a few days following this upgrade to verify that Session and Program Counts are increasing and/or decreasing (whichever is applicable) as new xOD or VOD sessions are created.

**Note:** After the upgrade is complete, perform the System Validation Tests found in the installation and upgrade documentation for your system release version to verify the functionality and performance of the set-tops in your system. If new or unexpected errors occur, contact Cisco Services.

# 3

## Customer Information

### **If You Have Questions**

If you have technical questions, call Cisco Services for assistance. Follow the menu options to speak with a service engineer.

Access your company's extranet site to view or order additional technical publications. For accessing instructions, contact the representative who handles your account. Check your extranet site often as the information is updated frequently.



# A

---

## Verify the Install Package Exists on the DNCS

For system releases that do not include the pre-packaged install tool, we recommend that you verify whether or not the tool exists on your DNCS; because, the tool is required to load new software onto the DNCS. This appendix provides procedures for checking for the install tool, as well as procedures for retrieving it from the Cisco FTP site.

### In This Appendix

- Check for the Install Tool on the DNCS ..... 36

## Check for the Install Tool on the DNCS

### Checking for install.pkg on the DNCS

**Important!** If you are using SR 2.7/3.7/4.2, this procedure is not required because the install tool (install.pkg) is pre-packaged within the software.

- 1 From an xterm window, type **cd /usr/sbin** and press **Enter**.
- 2 Type **ls** and press **Enter**.
- 3 Is the install.pkg file present on the DNCS?
  - If **yes**, resume your installation procedures.
  - If **no**, go to step 4.
- 4 Log on to Cisco's FTP server.

**Notes:**

- The address of the server is **ftp.sciatl.com** or **192.133.243.133**.  
**Note:** The address for the Cisco FTP server is subject to change. If you are unable to reach the FTP server, please contact Cisco Services for the latest address.
  - The username is **anonymous**.
  - The password is the email address of the person logging in.
- 5 Choose one of the following options to navigate to the directory in which the file is located:
    - If you are *inside* of Cisco's firewall, type **cd /external\_pub/scicare/RELEASED/SR2.2Patches**.
    - If you are *outside* of Cisco's firewall, type **cd /pub/scicare/RELEASED/SR2.2Patches**.
  - 6 Type **bin** and press **Enter**. The system sets the ftp transfer mode to binary.
  - 7 Type **hash** and press **Enter**. The system configures itself to display hash marks that show file-transfer progress.
  - 8 Type **get install\_pkg** and press **Enter**. The system begins copying files into the /export/home/dnCS/download/directory on your DNCS.
  - 9 Type **get install\_pkg README\_3.0.1.3p2EP1.txt**. The system begins copying files into the /export/home/dnCS/download/directory on your DNCS.
  - 10 Type **bye** and press **Enter** to log out of Cisco's FTP server.
  - 11 Continue with the installation procedures.

# B

---

## Load Multiple Versions of GQAM Code

The recommended upgrade process for GQAMs is based on a goal of getting all the units upgraded within a short period of time (typically one day). In some cases a site may choose to upgrade the GQAMs over time or may desire to load a unique version of code onto a single GQAM for extended testing. This appendix describes how to accomplish either of these goals.

### In This Appendix

- Loading Multiple Versions of GQAM Code ..... 38

## Loading Multiple Versions of GQAM Code

**Note:** If you need to determine which config files are being used by each GQAM, refer to *Checking for Multiple config Files* (on page 16) for details. For this procedure, we will assume that `gqam.config` is the current configuration file.

- 1 Go to the `/tftpboot` directory on the DNCS and rename the current `gqam.config` file as **gqam.current**.
  - 2 Install the new version of GQAM software that you intend to use using Install GQAM Software onto the DNCS.
  - 3 From the `/tftpboot` directory on the DNCS, rename the new `gqam.config` file as **gqam.new**.
  - 4 From the `/tftpboot` directory on the DNCS, rename the original backup file (for example, rename `gqam.current` to `gqam.config`).
  - 5 From the QAM List window on the DNCS, open the entry for the GQAM that should download the new code.
  - 6 Click the **Advanced Parameters** tab, and change the configuration file name from `gqam.config` to **gqam.new**.
  - 7 Click **Apply**.
  - 8 From the QAM List window on the DNCS, reset the GQAM that you want to download the new code.
  - 9 Repeat steps 6 through 8 for each GQAM that you want to download the new code.
  - 10 When you are ready to load code to all of your GQAMs, perform one of the following sets of steps:
    - **Preferred Approach**
      - i Go to the `/tftpboot` directory and rename `gqam.new` as **gqam.config**.
      - ii From the QAM List window on the DNCS, reset all the GQAMs that are using the `gqam.config` file.
      - iii From the QAM List window on the DNCS, change the configuration file value for all GQAMs that currently use `gqam.new` to **gqam.config**. These units do not need to be reset.
    - **Alternative Approach**
      - i From the QAM List window, change the configuration file value for all modulators using `gqam.config` to use **gqam.new**.
      - ii Reset the changed GQAMs.
- Note:** Units that were already using `gqam.new` as their configuration file do not need to be reset.

# C

## Roll Back to the Previous Version of GQAM Software

This appendix contains instructions for restoring the previous version of GQAM software should you encounter problems after upgrading to GQAM 3.1.9. Follow the instructions in this appendix only after Cisco Services directs you to restore the previous version of software.

**Important!** If after downloading GQAM 3.1.9 you encounter problems, contact Cisco Services for assistance. In the event that Cisco directs you to download the previous version of software to GQAMs, follow the procedures in this appendix while working with Cisco Services.

### In This Appendix

- Restore the Previous Version of GQAM Software ..... 40

## Restore the Previous Version of GQAM Software

### Introduction

Contact Cisco Services if you notice that the system is reacting adversely after installing or upgrading to GQAM 3.1.9. If Cisco Services recommends restoring the previous GQAM software version, use the instructions in this section to assist you.



**CAUTION:**

Contact Cisco Services before attempting to restore the previous GQAM software version.

### Restoring the Previous GQAM Software Version

**Note:** To restore the previous GQAM executable files, restore the configuration backup file that you saved in *Backing Up the Current GQAM Configuration File* (on page 19).

- 1 Open an xterm window on the DNCS and log on as the **root** user. The root prompt appears.
- 2 Type **cd /tftpboot** and press **Enter**. The root prompt appears.
- 3 Type **pwd** and press **Enter**. The text `/tftpboot` appears at the prompt. This text indicates you are in the correct directory.
- 4 Type **cp -p gqam.config gqam.config.yyy** and press **Enter**. The configuration file named `gqam.config`, which contains GQAM version 3.1.9 configuration settings, is saved to a file named `gqam.config.yyy`.

**Note:** The `yyy` represents the GQAM software version number you just installed.

- 5 Type **cp -p gqam.config.old gqam.config** and press **Enter**. The configuration file named `gqam.config.old`, which contains the previous list of GQAM configuration files, is copied to a configuration file named `gqam.config`.
- 6 Type **ls -l** and press **Enter**. A list of files displays. The files **gqam.config.old**, **gqam.config**, and **gqam.config.bakyyy** appear in the list.

**Note:** The "l" used in `ls` and `-l` is a lowercase letter L.

- 7 Confirm that the date and size of **gqam.config** matches those of **gqam.config.old**.
- 8 Type **exit** and press **Enter**.
- 9 Download the previous version of software to GQAMs by rebooting the modulators. For detailed procedures, go to *Download Software to the GQAM Modulators* (on page 25).





Cisco Systems, Inc.  
5030 Sugarloaf Parkway, Box 465447  
Lawrenceville, GA 30042

678 277-1120  
800 722-2009  
[www.cisco.com](http://www.cisco.com)

This document includes various trademarks of Cisco Systems, Inc. Please see the Notices section of this document for a list of the Cisco Systems, Inc. trademarks used in this document.

Product and service availability are subject to change without notice.

© 2006, 2012 Cisco and/or its affiliates. All rights reserved.

April 2012 Printed in USA

Part Number 4011763 Rev B