



## **Cisco Service Control for Managing Remote Cable MSO Links Solution Guide**

Release 3.7.x  
August 16, 2013

**Americas Headquarters**  
Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA  
<http://www.cisco.com>  
Tel: 408 526-4000  
800 553-NETS (6387)  
Fax: 408 527-0883

Text Part Number: OL-24162-06

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: [www.cisco.com/go/trademarks](http://www.cisco.com/go/trademarks). Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

*Cisco Service Control for Managing Remote Cable MSO Links Solution Guide*  
© 2011-2013 Cisco Systems, Inc. All rights reserved.



# CONTENTS

## About this Guide xi

Introduction xi

Document Revision History xii

Organization xiii

Conventions xiv

Obtaining Documentation and Submitting a Service Request xv

---

## CHAPTER 1

### Remote Cable MSO Links Solution Overview 1-1

Overview 1-1

Solution Overview 1-2

---

## CHAPTER 2

### DOCSIS 3.0 Support for Remote Cable MSO Links Solution 2-1

Introduction 2-1

IPDR LEG 2-1

Feature Overview 2-3

Downstream Bonding of Multiple Channels 2-3

Bandwidth Control Enhancements 2-4

Upstream Bonding of Multiple Channels 2-5

Upstream Logical Channels 2-5

Overlapped Bonding Groups 2-7

Example: 2-7

Bonding Groups with Multiple Primary Channels 2-8

Dynamic Channel Change of Cable Modem 2-10

Support for Non-Cisco CMTS 2-10

Mapping of Cable Modems Through DHCP Sniffing 2-11

Detecting 3.0 Modems 2-11

Mapping of Cable Modems Through Internet Protocol Details Report (IPDR) Streaming Protocol 2-11

Detecting 3.0 Modems 2-11

---

## CHAPTER 3

### Learning the Interface Topology and Association 3-1

Introduction 3-1

Learning the Interface Topology 3-1

Learning the Interface Association 3-3

Dynamic giaddr Learning 3-3  
 Managing Control and Reporting 3-6  
 VLM Device Learning—Limitations 3-7

**CHAPTER 4**

**Configuring the Remote Cable MSO Links Solution 4-1**

Introduction 4-1  
 Solution Topology 4-2  
     CMTS Device Compatibility 4-3  
 Prerequisites 4-4  
 Configuring the Solution 4-5  
     Configuring Virtual Links Global Controllers 4-5  
         How to Add Global Controllers 4-9  
         How to Add Global Controllers Inside Virtual Link 4-11  
         How to Edit Package Subscriber BWCs 4-13  
     Applying Service Configurations to SCE Platforms 4-15  
     Configuring the Virtual Links Manager 4-16

**CHAPTER 5**

**Managing the Remote Cable MSO Links Solution 5-1**

Introduction 5-1  
 Virtual Link Names 5-2  
 Monitoring Using the p3vlink Utility 5-3  
     p3vlink Utility Examples 5-7  
 Monitoring Virtual Links Using the SCE CLI 5-13  
     virtual-links Command Examples 5-15  
 Monitoring Virtual Links Using the Reporter 5-17  
     Creating a New Report Instance Using Cisco Insight 5-17  
     Creating a New Report Instance Using SCA Reporter 5-18

**CHAPTER 6**

**Troubleshooting the Remote Cable MSO Links Solution 6-1**

Introduction 6-1  
 Subscriber Complaints 6-2  
     Verifying that the Correct Policy Is Enforced on a Specific Subscriber 6-2  
     Verifying That the Distribution of Subscribers to the Virtual Link Is Correct 6-5  
 Inaccurate, Unavailable, or Missing Reports Information for a Specific CMTS Interface 6-6  
     Verifying That the VLM Updates the Collection Manager 6-6  
 SCE Is Congested, But Connected CMTSs Are Not Congested 6-9  
     Verifying That No Subscriber Is Associated with the Default Virtual Link 6-9

Userlog Messages	6-12
Userlog Error Messages	6-12
Userlog Warning Messages	6-13
Userlog Information Messages	6-15





## About this Guide

---

Revised: August 16, 2013, OL-24162-06

## Introduction

This *Cisco Service Control for Managing Remote Cable MSO Links Solution Guide* describes the use of a Cisco Service Control solution in a cable environment to optimize traffic on remote links. It describes the setup of a solution that uses the Virtual Link Manager (VLM) to enable traffic optimization of remote links, and the monitoring of that solution after deployment.

This guide assumes a basic familiarity with the concept of the Cisco Service Control solution, the Cisco Service Control Engine (SCE) platforms, and related components.

# Document Revision History

Table 1 records changes to this document.

**Table 1**      **Document Revision History**

Revision	Cisco Service Control Release and Date	Change Summary
OL-24162-06	Release 3.7.x August 16, 2013	Updated the “ <a href="#">VLM Device Learning—Limitations</a> ” section on page 3-7.
OL-24162-05	Release 3.7.x May 10, 2013	Updated the “ <a href="#">Configuring Virtual Links Global Controllers</a> ” section on page 4-5.
OL-24162-05	Release 3.7.x July 24, 2012	Updated the following Chapters: <ul style="list-style-type: none"> <li>• <a href="#">Chapter 6, “Troubleshooting the Remote Cable MSO Links Solution.”</a></li> <li>• <a href="#">Chapter 3, “Learning the Interface Topology and Association.”</a></li> </ul>
OL-24162-05	Release 3.7.x March 22, 2012	Updated the following sections: <ul style="list-style-type: none"> <li>• Updated Chapter 4 with information about the ipdr.cfg and vlink.cfg configuration files, in the “<a href="#">Configuring the Virtual Links Manager</a>” section on page 4-16</li> </ul>
OL-24162-04	Release 3.7.x February 29, 2012	Improved the quality of the user documentation by adding customer and internal feedback.
OL-24162-03	Release 3.7.x January 06, 2012	Updated with information pertaining to the new features for Release 3.7.2.
OL-24162-02	Release 3.7.x December 14, 2011	Updated with information pertaining to the new features of Cisco Subscriber Manager Release 3.7.1.
OL-24162-01	Release 3.7.x June 13, 2011	First version of this document.



# Organization

Table 2 presents the organization of this guide.

**Table 2 Document Organization**

Section	Title	Description
Chapter 1	<a href="#">Remote Cable MSO Links Solution Overview</a>	Provides an overview of the Remote Cable MSO Solution.
Chapter 2	<a href="#">DOCSIS 3.0 Support for Remote Cable MSO Links Solution</a>	Describes the Cisco Service Control for Managing Remote Cable MSO Links Solution is enhanced with new features that are consistent with DOCSIS 3.0 specifications.
Chapter 3	<a href="#">Learning the Interface Topology and Association</a>	Describes learning of interface topology and association of the remote cable MSO links solution.
Chapter 4	<a href="#">Configuring the Remote Cable MSO Links Solution</a>	Describes: <ul style="list-style-type: none"> <li>• Basic topology for managing remote cable MSO links and the high-level steps to configure the solution</li> <li>• Prerequisites for configuring a solution that uses traffic optimization on remote links with the VLM</li> <li>• Configuring the VLM by using the configuration files contained in the Subscriber Manager installation</li> </ul>
Chapter 5	<a href="#">Managing the Remote Cable MSO Links Solution</a>	Describes the three monitoring mechanisms that you can use to monitor the traffic optimization on remote links solution.
Chapter 6	<a href="#">Troubleshooting the Remote Cable MSO Links Solution</a>	Describes several problem scenarios that you may encounter when using the solution.

# Conventions

Table 3 lists the conventions used in this guide.

**Table 3**      **Conventions**

Convention	Indication
<b>bold font</b>	Commands and keywords and user-entered text appear in <b>bold font</b> .
<i>italic font</i>	Document titles, new or emphasized terms, and arguments for which you supply values are in <i>italic font</i> .
[ ]	Elements in square brackets are optional.
{ x   y   z }	Required alternative keywords are grouped in braces and separated by vertical bars.
[ x   y   z ]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	Nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
courier font	Terminal sessions and information the system displays appear in <code>courier font</code> .
< >	Nonprinting characters such as passwords are in angle brackets.
[ ]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.



## Note

Means *reader take note*.



## Tip

Means *the following information will help you solve a problem*.



## Caution

Means *reader be careful*. In this situation, you might perform an action that could result in equipment damage or loss of data.



## Timesaver

Means *the described action saves time*. You can save time by performing the action described in the paragraph.



## Warning

**Means *reader be warned*. In this situation, you might perform an action that could result in bodily injury.**

# Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS version 2.0.





# CHAPTER 1

## Remote Cable MSO Links Solution Overview

Revised: March 22, 2012, OL-24162-06

### Overview


In cable multiple service operator (MSO) networks, the SCE is inserted in a location upstream of the cable modem termination system (CMTS), which is the first IP hop in the MSO network. In this location, the SCE is often used to implement fair use policies (FUP) and perform congestion mitigation. MSOs work to ensure that the existing network infrastructure is used optimally by using the SCE to enforce fairness between the different subscribers when the network is in a state of congestion.

The bandwidth of the radio frequency interfaces of the CMTS ranges from several megabits per second (Mb/s) to tens of Mb/s. The CMTS aggregates these interfaces into higher bandwidth upstream links, typically 1 gigabit per second (Gb/s), where the SCE is connected.

Cable modems which are connected to the hybrid fiber-coaxial (HFC) cable downstream connection of the CMTS are associated with CMTS interfaces. The CMTS interfaces can be termed upstream or downstream upon bootup or dynamically (depending on the direction of traffic flow) when you use some load balancing algorithms.

Figure 1-1 shows a typical deployment topology of an SCE in an MSO network.

Figure 1-1 SCE Deployed in MSO Network

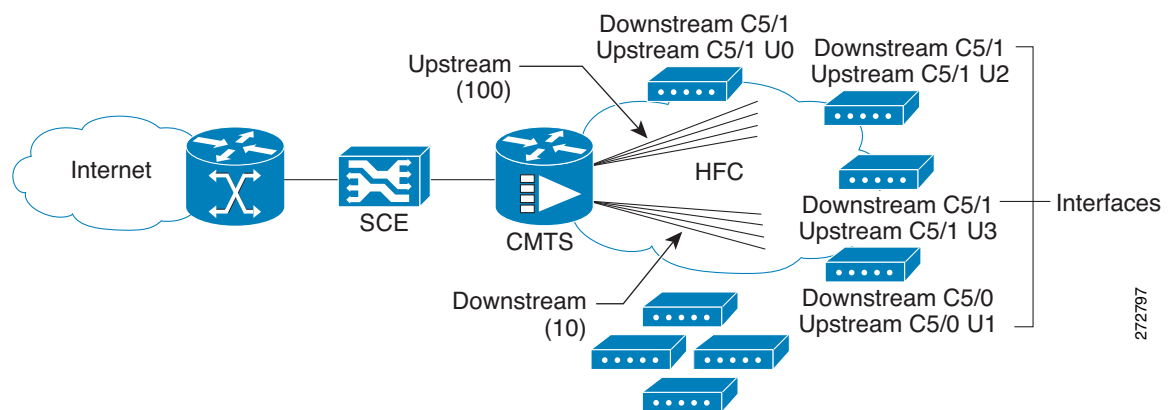

# Solution Overview

As part of the Remote Cable MSO Links solution, the Virtual Link Manager (VLM) makes the SCE aware of the interface association of subscribers (cable modems) and accounts for and controls aggregate traffic in the context of a physical interface (CMTS upstream or downstream). This awareness allows the SCE to perform congestion mitigation at the level of the CMTS physical interface.

The solution is required to manage a large number of subscribers, each of which is connected to the CMTS and through it to the SCE. Within the CMTS, subscribers are connected to shared radio frequency interfaces, where they use the Data-Over-Cable Service Interface Specifications (DOCSIS) MAC layer to transport their traffic. The shared radio frequency interfaces are termed upstream and downstream.


CMTS upstream and downstream interfaces are aggregated through the CMTS interface toward the core of the network, and eventually end in one or several physical interfaces that are connected to the SCE, which monitors and controls traffic.

MSOs use the SCE to prioritize traffic within each of the CMTS radio frequency interfaces when traffic is congested. Cisco Service Control provides a virtual link concept that allows MSOs to monitor and control traffic for each interface.

Although it is possible to prioritize traffic by allocating packages to pairs of interfaces, this process is time consuming. The virtual links approach simplifies the model. Each virtual link is monitored and controlled separately within the Cisco Service Control solution, while virtual link provisioning is performed through the SCE CLI. The policy remains simple, and reflects only per-subscriber tiering.

Figure 1-2 shows traffic traveling through the SCE that is mapped into SCE virtual links, which reflect the CMTS physical interfaces. Monitoring and control are performed in the context of the virtual links.

**Figure 1-2** Traffic Traversing SCE that Is Mapped to SCE Virtual Links

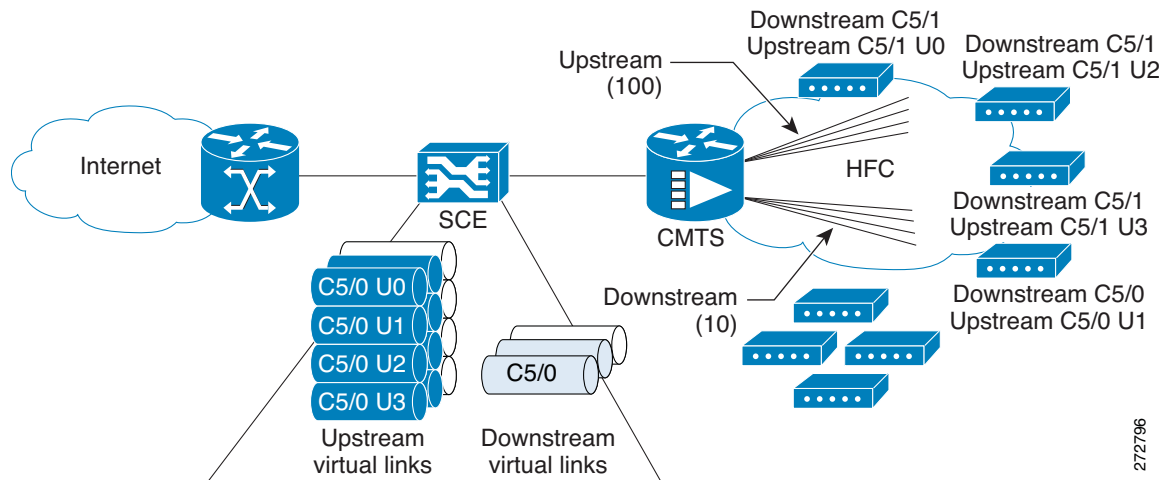

272796

The Cisco Service Control solution provides the VLM to automate many of the configuration actions that the network administrator ordinarily performs, including:

- Provisioning virtual-link maps for each SCE based on the interface maps of the CMTSs that provide network access.
- Configuring bandwidth values for the virtual links based on the CMTS interface speed values. These values tend to change regularly as part of cable plant maintenance, or automatically as part of spectrum management. These changes must be traced and acted upon by the network administrator.
- Building the Subscriber Manager virtual-link mapping configuration.

The virtual-link mapping configuration defines the mapping between the following:

- DHCP options that define the subscribers interface associations that are extracted from the DHCP acknowledge message
- From IPDR message the subscriber interface associations are retrieved by using CM-STATUS and SAMIS TYPE-1 templates.
- Corresponding virtual links ID







## CHAPTER 2

# DOCSIS 3.0 Support for Remote Cable MSO Links Solution

---

Revised: March 22, 2012, OL-24162-06

## Introduction

The Cisco Service Control for Managing Remote Cable MSO Links Solution is enhanced with new features that are consistent with DOCSIS 3.0 specifications.

The solution includes support for the following features:

- Downstream bonding of multiple channels—multiple channels are bonded to a single, virtual interface to provide higher bandwidth to the cable modems.
- Upstream bonding of multiple channels—multiple channels are bonded to a single, virtual interface to provide higher bandwidth for the cable modems in the upstream direction.
- Multiple Primary Channels—supports multiple primary channels defined under a VLINK in downstream direction.
- Overlapped Bonding Groups—supports configurations where in a single channel can be part of more than one bonding group.
- Dynamic Channel Change of Cable Modems—enables effective control of channels and VLINK utilization by identifying dynamic channel changes of cable modems.
- Support for non-Cisco CMTS—supports Arris CMTS.

## IPDR LEG

IPDR LEG supports these features additionally:

- IPDR LEG enables SCE to support the multiple primary channels in bonding groups, dynamic channel changes of cable modems, and support for non-Cisco CMTSs (Only Arris CMTSs).
- IPDR enables CMTSs to send per-subscriber records to IPDR database. These records are used for reporting and billing purposes.

The IPDR record includes the required information for mapping cable modems and CPEs to virtual links.

The CMTS generates periodic and event based IPDR records for each cable modem. This record includes the IP address of the cable modem and CPEs.

If you configure CMTS to generate IPDR records periodically, by default, CMTS generates the records every 15 minutes.

Since the records are generated on event or periodically for all the cable modems, the IPDR reports support dynamic changes of cable modems between QAM channels. The IPDR LEG gets these IPDR reports and updates the dynamic channel changes.

**Note**

---

IPDR LEG does not support dynamic device learning.

---

For details on IPDR LEG, see the *Cisco Service Control Management Suite Subscriber Manager LEGs User Guide*.

## Feature Overview

- [Downstream Bonding of Multiple Channels, page 2-3](#)
- [Upstream Bonding of Multiple Channels, page 2-5](#)
- [Upstream Logical Channels, page 2-5](#)
- [Overlapped Bonding Groups, page 2-7](#)
- [Bonding Groups with Multiple Primary Channels, page 2-8](#)
- [Dynamic Channel Change of Cable Modem, page 2-10](#)
- [Support for Non-Cisco CMTS, page 2-10](#)


## Downstream Bonding of Multiple Channels

The DOCSIS 3.0 downstream bonding enables high-speed broadband access and helps cable operators offer more bandwidth-intensive services by adding one or more additional downstream quadrature amplitude modulation (QAM) channels to the standard broadband DOCSIS system. This new set of downstream (DS) channels is grouped into one larger channel, known as a bonded channel.

With wideband data services, multiple DS channels are aggregated into a single logical wideband channel (bonding group) that delivers higher bandwidth to the wideband cable modem when compared to DOCSIS 2.0 technology. This aggregation of the DS channels is referred to as channel bonding. Data rates in this virtual channel range from hundreds of megabits to potentially gigabits per second, creating more available bandwidth in the network.

Figure 2-1 presents a simplified view of the Cisco DOCSIS 3.0 downstream solution.

**Figure 2-1 DOCSIS 3.0 Downstream Solution**

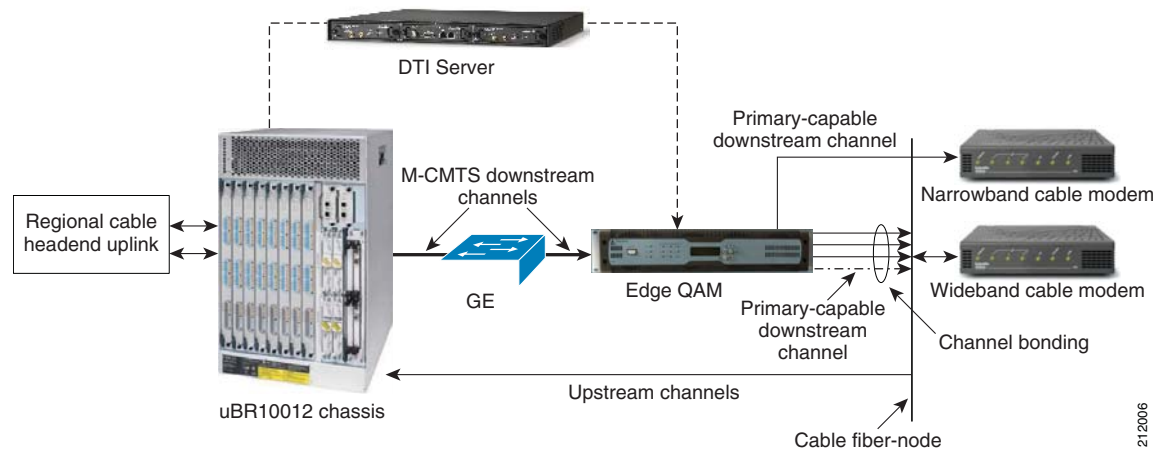

The DS channels are used either as primary channels (used for both broadband and narrowband channels) or secondary channels (used only for wideband channels), or both. The solution provides narrowband data services to support DOCSIS 1.x or 2.0 modems and wideband data services to support DOCSIS 3.0 modems over existing HFC networks and allows DOCSIS 1.x or 2.0 and DOCSIS 3.0 modems to share the same DS channel.

A maximum of eight channel bonding groups are supported.

The Cisco wideband CMTS uses one or more external edge QAM (EQAM) devices. The EQAM device is a network element in a separate chassis from the CMTS. The EQAM device has two or more Gigabit Ethernet input interfaces that connect to a wideband shared port adapters (SPA). For output, the EQAM device has multiple QAM modulators and RF converters that connect to an HFC network. The EQAM device accepts MPEG over IP on its Gigabit Ethernet interfaces and routes the services to its QAM RF outputs.

The enhanced Cisco Service Control solution leverages the SCE bandwidth control and reporting capabilities to monitor and control the CMTS resources at the QAM level. Multiple QAMs are aggregated into a virtual group (bundle group). The bandwidth allocation for different modems are done both on the CMTS and the EQAM. The EQAM minimizes the packets waiting in queue for each channel.

The EQAM manages the queues differently for legacy and 3.0 modems:

- All traffic to the legacy modems are routed through the primary narrowband channel queue.
- Traffic to 3.0 modems are routed through the shortest possible queue.

This feature is supported on Cisco uBR-MC3GX60V Broadband Processing Engine (BPE). The Cisco uBR-MC3GX60V Broadband Processing Engine (BPE) is a high-capacity, DOCSIS 3.0-capable line card for the Cisco uBR10012 Universal Broadband Router. Each line card supports 72 DOCSIS downstream and 60 upstream channels. For details about the line card, see the product datasheet on Cisco.com at the URL

[http://www.cisco.com/en/US/prod/collateral/modules/ps4969/ps11291/data\\_sheet\\_c78-642540.html](http://www.cisco.com/en/US/prod/collateral/modules/ps4969/ps11291/data_sheet_c78-642540.html)

## Bandwidth Control Enhancements

The enhancements to the SCE bandwidth control include:

- Support for wideband channels—A two-level virtual link hierarchy is created to support the wideband channels. The wideband channels are associated with the Aggregate Global Control (AGC) that provides a constant output signal despite variations in input signal strength. Wideband channels are associated with three AGCs in a two-level hierarchy. The top-level AGC is dynamic and the lower-level AGCs are equivalent to the existing AGCs. At the lower level, all the 3.0 modems for wideband are aggregated into one AGC. The other AGC contains both legacy and 3.0 modems.

The committed information rate (CIR) and peak information rate (PIR) parameters are derived from the CMTS and QAM configurations.

For the example, consider a wideband channel that includes three channels. One of the three channels is a primary channel (narrowband) and contains a mix of legacy and 3.0 cable modems. If 20 percentage bandwidth of the narrowband channel is allocated to 3.0 cable modems, the CIR and PIR values are calculated as:

Each QAM rate -  $X = 30 \text{ Mb}$

Percentage bandwidth allocated for 3.0 cable modems = 20 percentage



### Note

For Arris CMTS, SCE does not support bandwidth percentage share for DOCSIS 3.0 cable modem.

Table 2-1 lists the CIR and PIR values of the 3.0 cable modems with 20 percentage bandwidth of narrowband channel allocation.

**Table 2-1** CIR and PIR Values

AGC Name	CIR	PIR
Wideband-Cable1/0/0:0 (top level)	0	90 Mb (3X)
Wideband-Cable1/0/0:0_P	24 Mb (0.8X)	30 Mb (X)
Wideband-Cable1/0/0:0_W	20	90 Mb (3X)

- Subscriber fairness within virtual links—To enforce subscriber fairness within the virtual links, the bandwidth is first allocated between the subscribers based on their RP level, followed by the services of each subscriber.
- Application limitation within virtual links—SCE limits specific applications within the virtual link without losing control over the traffic.
- Enabling global control with CMTS-awareness solution.

## Upstream Bonding of Multiple Channels

CMTS supports upstream channel bonding to provide higher bandwidth for the cable modems in the upstream direction.

The Upstream channel bonding is similar to the downstream channel bonding explained earlier. However, the Upstream VLINK to channel mapping considers only the total bandwidth available from the configured channels for PIR and CIR computation.

A maximum of eight channel bonding groups are supported.

## Upstream Logical Channels

The concept of a logical channel refers to the time-division multiplexing (TDM) of the same radio frequency (RF) spectrum allocated to one physical upstream port. All logical upstream channels defined within a physical upstream port share the same upstream RF spectrum or the bandwidth.

Using the Logical Channel Support feature, cable system operators can segment and time-multiplex one spectrum for supporting the legacy modems, near and far modems, and new DOCSIS 3.0 modems with various service levels.

CMTS supports upstream logical channels for better bandwidth management. The bandwidth of the physical channel is divided between logical channels. But, the bandwidth of one logical channel is always equal to the bandwidth of the physical channel.

In the following example, the MAC domain have five upstream channels, each split into two logical channels. The domain also has two bonding groups and the logical channels are grouped.

```
CMTS: 10.52.206.2
Mac Domain - Cable 5/0/0 (ifIndex 1780)
  US 0 (BW: 2000)
    US 0.0 (BW 2000) (ChId 13)
    US 0.1 (BW 500) (ChId 14)
  US 1 (BW: 1500)
    US 1.0 (BW 1500) (ChId 15)
    US 1.1 (BW 1000) (ChId 16)
  US 2 (BW 2500)
    US 2.0 (BW 2500) (ChId 17)
    US 2.1 (BW 1500) (ChId 18)
  US 3 (BW 3000)
    US 3.0 (BW 3000) (ChId 19)
    US 3.1 (BW 500) (ChId 20)
  US 4 (BW 2500)
    US 4.0 (BW 2500) (ChId 21)
    US 4.1 (BW 1000) (ChId 22)

BG -131 : 13, 15, 18, 22
BG -132 : 14, 16, 18, 21
```

In this example, upstream channel 3 (US 3) is not part of any bonding group and the channel is not overlapped. Channel 18 is overlapped in bonding group 131 and 132.

Example of VLINK configuration for this upstream logical channel configuration:

```
virtual index=1, name=codc_Cable5/0/0-US3, pir= 3000, cir=16, al=5, dynamic agc index=1
channel index=1, name=codc_Cable5/0/0-US3, pir=3000, cir=16, al=5, agc index=1

virtual index=2, name=codc_Cable5/0/0-US, pir= 8500 (2000+1500+2500+2500) , cir=16, al=5,
dynamic agc index=2

channel index=3, name=codc_Cable5/0/0-US0, pir=2000, cir=16, al=5, agc index=3
channel index=4, name=codc_Cable5/0/0-US1, pir=1500, cir=16, al=5, agc index=4
channel index=5, name=codc_Cable5/0/0-US2, pir=2500, cir=16, al=5, agc index=5
channel index=6, name=codc_Cable5/0/0-US4, pir=2500, cir=16, al=5, agc index=6
channel index=7, name=codc_Cable5/0/0-BG-131, pir=6000 (2000+1500+1500+1000), cir=16,
al=5, agc index=7
channel index=8, name=codc_Cable5/0/0-BG-132, pir=5500 (500+1000+1500+2500), cir=16,
al=5, agc index=8
```

This is the mapping table for this upstream logical channel configuration:

```
10.52.206.2_1780_13=3
10.52.206.2_1780_14=3
10.52.206.2_1780_15=4
10.52.206.2_1780_16=4
10.52.206.2_1780_17=5
10.52.206.2_1780_18=5
10.52.206.2_1780_19=1
10.52.206.2_1780_20=1
10.52.206.2_1780_21=6
10.52.206.2_1780_22=6
10.52.206.2_1780_13151822=7
10.52.206.2_1780_14161821=8
```

## Overlapped Bonding Groups

In Overlapped Bonding Groups, a single channel can be part of more than one bonding group.

If channels are overlapped across the bonding groups, the SCE models those bonding groups under the same VLINK. If the channels are not overlapped, then the SCE models those bonding groups as separate VLINK.

The computation of the PIR and the CIR values for the VLINK and Channels are done by retrieving the percentage of channel BW allocated to DOCSIS 3.0 traffic that are part of overlapped bonding groups and also the percentage that is allocated to DOCSIS 2.0 traffic from those channels.



Note

---

Channels and Bonding Groups that are overlapped across MAC domains are not supported.

---

### Example:

In this example, taken from the SNMP output, the Downstream bonding group and the overlapped bonding groups are shown. There are 4 bonding groups—the first two are mapped to 5/0/0 and another two are mapped to 6/0/0. Channel 2 and 3 are overlapped.

```
Cable5/0/0-downstream
 35: ifDescr(2).1121 (octet string) Wideband-Cable1/0/0:0
      Modular-Cable1/0/0:0
      Modular-Cable1/0/0:2
      Modular-Cable1/0/0:3
 36: ifDescr(2).1122 (octet string) Wideband-Cable1/0/0:1
      Modular-Cable1/0/0:1
      Modular-Cable1/0/0:2
      Modular-Cable1/0/0:3

Cable6/0/0-downstream
 37: ifDescr(2).1123 (octet string) Wideband-Cable1/0/0:2
      Modular-Cable1/0/0:4
 38: ifDescr(2).1124 (octet string) Wideband-Cable1/0/0:3
      Modular-Cable1/0/0:5
```

These are the list of channels and radio frequency bandwidth allocation for each channel on each wideband interface:

```
1121.1005.0 (gauge) 25 (25% of ifSpeed 4750) 6650
1121.1005.2 (gauge) 50 (50% of ifSpeed 9500) 13300
1121.1005.3 (gauge) 20 (20% of ifSpeed 3800) 5320
1122.1005.1 (gauge) 50 (50% of ifSpeed 9500) 13300
1122.1005.2 (gauge) 50 (50% of ifSpeed 9500) 13300
1122.1005.3 (gauge) 20 (20% of ifSpeed 3800) 5320
1123.1005.4 (gauge) 25
1124.1005.5 (gauge) 50
```

The following example provides details of the logic for IPDR and DHCP mapping:

```
- virtual index=1, name=Cable5/0/0-downstream, pir= 76000 , cir=16, al=5, dynamic agc
index=1
- channel index=1, name=Cable5/0/0-downstream-L0, pir=19000, cir=14250, al=5, agc index=2
- channel index=2, name=Cable5/0/0-downstream-L1, pir=19000, cir=9500, al=5, agc index=3
- channel index=3, name=Cable5/0/0-downstream-L2, pir=19000, cir=16, al=5, agc index=4
- channel index=4, name=Cable5/0/0-downstream-L3, pir=19000, cir=11400, al=5, agc index=5
- channel index=8, name=Cable5/0/0-downstream-W0, pir=57000, cir=18050, al=5, agc index=9
- channel index=9, name=Cable5/0/0-downstream-W1, pir=57000, cir=22800, al=5, agc index=10
- channel index=7, name=Cable5/0/0-downstream-W, pir=76000, cir=40850, al=5, agc index=8
```

## Bonding Groups with Multiple Primary Channels

To support backward compatibility, the individual channels in the bonding groups can be used in parallel by legacy cable modems that work in earlier versions of DOCSIS. In this mode, there is a mix of legacy cable modems and DOCSIS 3.0 cable modems working on the same channels.

Primary channels of a CMTS are those channels that are capable of supporting legacy or DOCSIS 2.0 modems.


Channels that are configured to support legacy or DOCSIS 2.0 cable modems must be configured as Primary Channel. Also, each bonding group must include at least one channel that is defined as a Primary Channel.

The basic SCE - CMTS integration supports only a single Primary channel for each bonding group. The basic integration supports a mix of DOCSIS 2.0 and DOCSIS 3.0 cable modems on the primary channel but it is limited to single channel on each bonding group. The main reason for the single primary limitation is the DHCP protocol. The SCE - CMTS integration contains SNMP polling to get the CMTS configuration and DHCP sniffing for mapping of cable modem to virtual link inside the SCE. The CMTSs report, through the DHCP protocol, about single Primary channel only.

With the IPDR LEG, SCE supports multiple primary channels. The IPDR records includes the required information for mapping cable modems and CPEs to virtual links. A maximum of eight channels bonded (BG with 8 channels) are supported.

The SCE supports bonding groups by creation of virtual-links hierarchy. Figure 2- describes the SCE configuration to support bonding groups. The bonding group is associated with aggregate global controller (AGC) in the top level. Under the top-level AGC, there is one AGC that aggregates all the DOCSIS 3.0 cable modems in the bonding group, and another AGC for the DOCSIS 2.0 cable modems. From release 3.7.0, if there are more than one primary channel in the bonding group, a legacy AGC is created for each primary channel. For example, in Figure 2-2 there are two primary channels and two corresponding legacy AGCs.

**Figure 2-2 Bonding Group With Two Primary Channels**

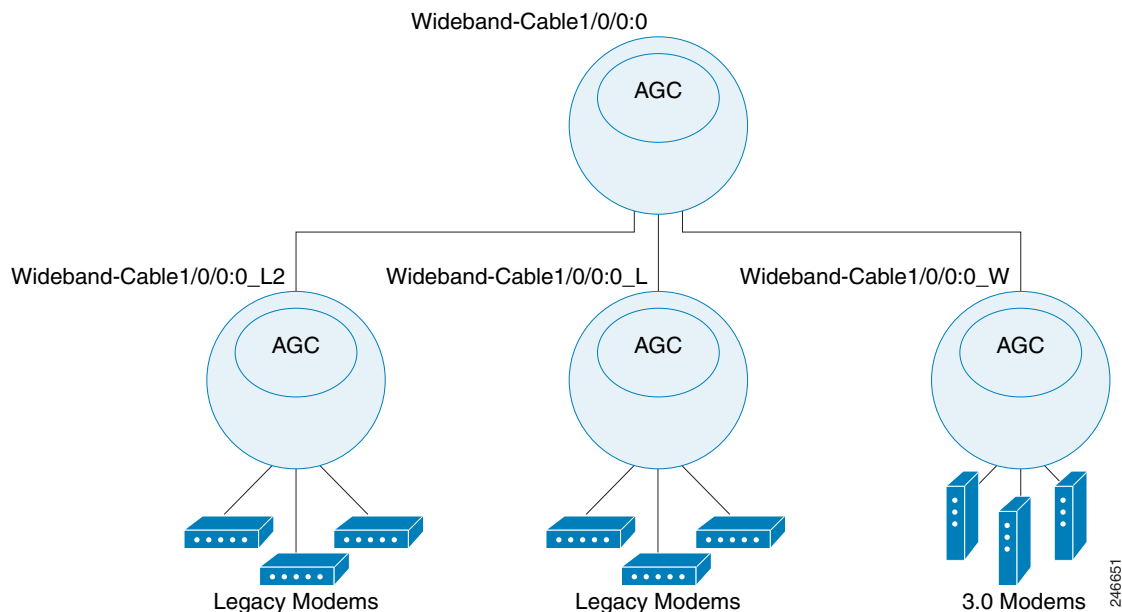



In a multiple primary channels scenario, the specific mapping is required only for the DOCSIS 2.0 cable modems since they are limited to the specific physical channel. DOCSIS 3.0 cable modems can generate traffic over all channels.

The exact primary channel can be identified by the IPDR messages. In this example, 13 is the downstream channel index and 3 is the upstream channel index.

```
<CmMacAddr>MAC-ADD:00-00-00-18-9b-8d-fc-cd</CmMacAddr>  
<CmIpv4Addr>IP_V4:10.12.150.138</CmIpv4Addr>  
<CmtsMdIfName>'Cable6/0/0'</CmtsMdIfName>  
<CmtsMdIfIndex>1031</CmtsMdIfIndex>  
<CmtsRcsId>13</CmtsRcsId>  
<CmtsTcsId>3</CmtsTcsId>
```

## Dynamic Channel Change of Cable Modem

For load balancing the cable modems on the available interfaces, a CMTS can dynamically change the channels assigned to a cable modem. During a dynamic channel change, a cable modem does not process a new DHCP login process.



### Note

Dynamic Channel Change using the **dcc** command does not work in versions earlier than Cisco IOS Release 12.2S.

If enabled, SCE uses IPDR LEG to identify the channel changes.

IPDR messages are generated by CMTS for each cable modem when the modem gets associated with different channels on the CMTS. This IPDR message includes information on the channel assigned to the cable modem. The VLM monitors the channels and updates the cable modem to virtual link mapping when a channel changes.

IPDR LEG registers CM Registration and DOCSIS Type templates and looks for the corresponding IPDR messages from the CM-STATUS and SAMIS TYPE-1 type templates.

This is an example of the IPDR message:

```
<CmMacAddr>00-00-00-18-9b-8d-fc-cd</CmMacAddr>
<CmIpv4Addr>IP_V4:10.12.150.138</CmIpv4Addr>
<CmtsMdIfName>'Cable6/0/0'</CmtsMdIfName>
<CmtsMdIfIndex>1031</CmtsMdIfIndex>
<CmtsRcsId>53</CmtsRcsId>
<CmtsTcsId>3</CmtsTcsId>

<CMTSupIfName>'Ca7/0/0-upstream1'</CMTSupIfName>
<CMTSdownIfName>'Ca7/0/0-downstream'</CMTSdownIfName>
```

In the above example 53 is the downstream channel index and 3 is the upstream channel index in which the cable modem (00-00-00-18-9b-8d-fc-cd) is associated with the CMTS.

The CMTS sends IPDR messages for each cable modem association and channel changes to the collector. The IPDR LEG gets the mapping of the latest channel changes and updates the SCE.

## Support for Non-Cisco CMTS

Starting from SCE 3.7.0, Cisco SCE supports integration of non-Cisco CMTSs in an SCE-CMTS integration scenario. For the integration, SCE uses the IPDR LEG.

The structure of the DHCP messages varies between various CMTS vendors, but the IPDR records or messages are defined as part of the DOCSIS standard and are identical over all the vendors.

For non-Cisco CMTS, The VLM supports SNMP polling to get the CMTS configuration from these CMTS.

## Mapping of Cable Modems Through DHCP Sniffing

The narrowband channels are updated in the IfIndex in option 82, where the IfIndex is used for both legacy and 3.0 modems. In SCE, wideband channels are associated with three AGCs in a two-level hierarchy and the mapping of the modems to appropriate AGCs depends on these factors:

- In the VLM mapping table, the modems are mapped from the narrowband IfIndex to the wideband group.
- Modems are linked to the appropriate AGC based on their type.

### Detecting 3.0 Modems

The legacy and 3.0 modems are distinguished based on the information in the bootfile. The operators use the bootfile name to identify the modem type and the service package for the subscriber. The service packages are used to map the modems to the right VLM.

The bootfile name is configured using these options:

- Option 67 in DHCP is called the *Bootfile name*, the information configured in this field is extracted and sent to the DHCP sniffer.
- DHCP header contains a field called *Bootfile name* in the DHCP header.

DHCP login event generator (LEG) includes regular expression capabilities that are used to configure specific information in the Bootfile name, which is used for mapping.

The VLM extracts the DHCP sniffer query results indicating the modem type (legacy or 3.0). Based on the DHCP sniffer output, VLM maps the modems to either primary or secondary channels.

## Mapping of Cable Modems Through Internet Protocol Details Report (IPDR) Streaming Protocol

Whenever a legacy modem registers with a CMTS, the modem sends a CM REG TYPE IPDR message which contains CmtsTcsId and CmtsRcsId. These IDs are used for upstream and downstream index mapping.

For a DOCSIS 3.0 modem, mappings are updated on receiving a periodic SAMIS TYPE1 message from the CMTS for a modem. The value of ServiceFlowChSet in the message is used for mapping the upstream and downstream indices.

### Detecting 3.0 Modems

The value of ServiceFlowChSet in the SAMIS TYPE1 message is used to detect a DOCSIS 3.0 modem. If the value is greater than 255, then it is a DOCSIS 3.0 modem; else it is a legacy modem.





## CHAPTER 3

# Learning the Interface Topology and Association

---

Revised: August 16, 2013, OL-24162-06

## Introduction

This chapter describes learning of interface topology and association of the remote cable MSO links solution.

## Learning the Interface Topology

To control and report traffic in the context of a remote interface, you must map the topology in terms of the available CMTS interfaces and their associated bandwidth. This map must include keys that the SCE uses to associate subscriber traffic with specific interfaces.

The SCE learns the interface topology by retrieving the CMTS configuration by using the Simple Network Management Protocol (SNMP) and converting the configuration to a virtual links map. Virtual links are provisioned to the relevant SCEs.

VLM queries the CMTS device and learns the upstream and downstream channels, their names, and their rates. VLM supports multiple primary channels for each wideband group. For primary channels within a wideband group, VLM queries the CMTS for resource allocation that is reserved for legacy modems.

For downstream channels, VLM obtains the mapping information of the channels to wideband groups. For the wideband channels, VLM extracts the:

- Wideband to narrowband mapping to detect a primary channel
- Wideband name from the Interface MIB
- Mapping of channels that belong to the wideband group and their rates to calculate the wideband rate

The parameters for the primary and secondary channels include:

- PIR
- CIR

Table 3-1 lists the parameters and their values for primary and secondary channels and the dynamic AGCs.

**Table 3-1** *Parameter Values*

<b>Parameters</b>	<b>Values for Primary Channels</b>	<b>Values for Secondary Channels</b>	<b>Values for Dynamic AGC</b>
PIR	The values are extracted from the interface rate of the primary channel of the wideband.	The values are extracted from the total rate of the wideband channel.	The values are extracted from the total rate of the wideband channel.
CIR	The values are calculated from the CMTS configurations.	CIR = 0	CIR = 0

# Learning the Interface Association

Interface association awareness is achieved through DHCP integration. The CMTS IP (specifically, the Relay-Agent IP, or giaddr) is part of the DHCP dialog and upstream and downstream interface IDs are included in the **Relay-Agent** option (for example, option 82 [encoded in suboption 1, the circuit ID]). This information allows the SCE to uniquely identify upstream and downstream interfaces to which a subscriber is mapped, even in cases in which more than one CMTS is connected to an SCE.

The Cisco Subscriber Manager learns the interfaces automatically from the CMTSs and provisions the Vlinks to the Cisco SCE on the following events:

- Each configured device query interval
- Manual device query
- Re-sync with Cisco SCE
- Applying policy on Cisco SCE
- Cisco Subscriber Manager restart
- Cisco Subscriber Manager load configuration
- Cisco SCE reload

During these events, the Cisco Subscriber Manager creates new Vlinks learnt from the CMTSs, updates the existing Vlinks if the SM observed any changes, and removes the unwanted Vlinks to make sure that the SM has synchronized completely with the CMTS interfaces to reserve the unused Vlinks for the new interfaces. During this process, the Cisco Subscriber Manager removes all Vlinks created directly in an SCE using CLI or any other source without the knowledge of the Cisco Subscriber Manager.

**Note**

---

If multiple CMTS devices connected to an SCE have the same SNMP SysName, the VLM fails to identify the duplication and this results in unpredictable behavior.

---

The SCE DHCP sniffer LEG extracts the CMTS IP and reports it to the Subscriber Manager, which performs the appropriate virtual-link association, allowing the SCE to manage the traffic correctly.

Wideband channels are associated with three AGCs in a two-level hierarchy and the cable modems are mapped to their respective AGCs. For information on the AGC mapping, see the [“Bandwidth Control Enhancements”](#) section on page 2-4 and the [“Mapping of Cable Modems Through DHCP Sniffing”](#) section on page 2-11.

## Dynamic giaddr Learning

When the VLM queries the CMTS device, it reads all the IP addresses from the CMTS device IP table and creates the mapping table that is used to map IP addresses to the CMTS device to which they are related. Many of the IP addresses that are read from the CMTS device are not used by subscribers, which can cause the mapping table to become too large and unmanageable. To prevent this, the VLM dynamically selects and releases the giaddr values from the IP table. VLM ignores IP addresses that starts with 127 because these IP addresses are considered as the loop back IP addresses.

When a subscriber logs in, the CMTS device appends the giaddr to the DHCP transaction. For a giaddr that is new to the DHCP LEG (or an existing giaddr that was not used during previous logins):

- If the login giaddr value is known to the VLM (related to one of the CMTS devices), the VLM updates the DHCP LEG with the policy mapping table related to the login giaddr value.

- If the login giaddr value is unknown to VLM (if the IP is not related to any device in the VLM), the VLM opens the SNMP connection using the login giaddr value as an IP address, and queries the SNMP connection to get the device host-name (sysName OID):
  - If a device exists with the same host-name, it indicates that a new IP was added to the device:
- The VLM queries the device to learn the new updates
- The VLM updates the policy mappings based on the query output and updates the LEG
- Login operations continue on the device
  - If the device host-name is invalid, it indicates one of these causes:
- Device is not configured as expected (sysName MIB value is not set).
- Device was not intended to be part of the VLM solution.
- Subscriber is logged in without a virtual link policy mapping.
  - If the device host name is valid, the name is new to the VLM, and the dynamic device feature is enabled:
- VLM creates a new device by using the device host-name.
- Login operations using the same giaddr value are blocked by the LEG.
- VLM starts querying the new device and updates its policy mappings accordingly.
- Login operations continue on the device.

From Service Control Application for Broadband Release 3.6.5, for a static device configuration, you can disable learning new giaddr during login. After you disable learning new giaddr, if the Subscriber Manager identifies that the relay agent does not belong to any known CMTS, the SM continues to log in instead of doing a query. During periodic queries, the SM continues to learn new giaddrs. To disable learning new giaddr during login, set `enable_dynamic_giaddrs_learning` to false.

- For giaddr that is known to the DHCP LEG (or an existing giaddr that was in use during the previous logins):
  - If the policy mappings are found, a subscriber is created by using the policy mappings.
  - During a login operation, if the policy mappings are not found:
- All login operations related to the device that belongs to the giaddr are put on hold by the DHCP LEG.
- Based on the giaddr value received from DHCP, the VLM identifies the device associated with the giaddr, and queries the device.
- After the query is completed, the policy mappings are updated in the LEG.




---

**Note** When the VLM queries a device, all login operations of the affected device are stored in a queue. After completing the query operations, the login process resumes and there is no loss of login operations. Each subscriber is logged in with their respective mappings.

---

- VLM defines a lease time for each dynamic giaddr. If no further login operations occur during the lease time period:
  - VLM removes the giaddr from its list of giaddr values.
  - IP value is no longer a giaddr in the CMTS device (when performing `p3vlink --show-device -d <device>`, the giaddr attribute does not contain the removed IP).
  - LEG removes the entries from the mapping table that are related to the giaddr.



- For each subscriber, the VLM checks if the subscriber giaddr custom property is the same as the removed giaddr and if so, changes the property to be the IP address of the CMTS device.

This example shows the current details of a subscriber:

```
p3subs --show -s lynn_jones
Name:          lynn_jones
Domain:        subscribers
Mappings:
    IP: 1.1.1.13/32
Properties:
    downVlinkId=7    Name=device1_1_Cmts8/1-downstream1
    upVlinkId=4      Name=device1_1_Cmts8/1-upstream1
Custom Properties:
    giaddr=1.1.1.1
Command terminated successfully
```

If the IP address 1.1.1.1 is the removed giaddr and 2.2.2.2 is the CMTS device IP address, the result of the lease time operation is as follows:

```
p3subs --show -s lynn_jones

Name:          lynn_jones
Domain:        subscribers
Mappings:
    IP: 1.1.1.13/32
Properties:
    downVlinkId=7    Name=device1_1_Cmts8/1-downstream1
    upVlinkId=4      Name=device1_1_Cmts8/1-upstream1
Custom Properties:
    giaddr=2.2.2.2
Command terminated successfully
```

- When a CMTS device reboots, the CMTS allocates new ifIndex values for the interfaces, specifically when the downstream ifIndex values are changed and the VLM mappings are no longer synchronized. The VLM monitors the upstream and downstream parameters of option 82 and compares the values against the mapping tables. If a mismatch is found in the DHCP transaction parameters, VLM initiates a synchronization process with the CMTS device. During this process:
  - DHCP transactions of the affected CMTS device are placed on hold. The VLM buffer can store 100,000 DHCP events per CMTS.
  - LEG queues up the subscriber login request.
  - On completion of device query operation, the VLM notifies the LEG.
  - LEG removes the stored messages in the queue and restarts the login operation.
  - DHCP transactions of any newly detected CMTS device are stored in the queue until VLM queries the new CMTS information.

# Managing Control and Reporting

SCE virtual links emulate the physical interfaces of the CMTSs and the VLM provisions the links with the bandwidth required to control the traffic:

1. For each CMTS physical interface (either upstream or downstream), the VLM creates a virtual link on the SCE.
2. VLM maps traffic that travels from a subscriber that is associated with this interface to the virtual link.
3. To create the proper association of subscribers to virtual links, the VLM creates a mapping between the DHCP information (CMTS-ID, upstream-ID, downstream-ID) and the virtual link IDs.
  - VLM creates a channel and an upstream virtual link for every upstream-ID on a CMTS.
  - VLM creates a legacy channel or wideband and legacy channels for a downstream virtual link for every downstream-ID on a CMTS.

Subscriber management logic is required to associate subscribers with their upstream and downstream virtual links based on the attributes that the DHCP LEG extracts from the DHCP traffic.

For a downstream virtual link, the Subscriber Manager login determines if the subscriber is associated with legacy or wideband cable modems. Depending on the modem types, subscribers are mapped either to wideband or legacy (primary) channels:

- Subscribers with wideband cable modems are mapped to the wideband channel beneath the VLink.
- Subscribers with legacy modems are mapped to legacy channels beneath the VLink.

In addition to the virtual links association, the subscriber is also assigned a package. In terms of bandwidth management, you can use only schemes that use one virtual-link-controller per direction; therefore, you should design the bandwidth controller architecture (committed information rate, peak information rate, and assurance level) accordingly.

## VLM Device Learning—Limitations

These limitations are applicable to the VLM device learning feature:

- The VLM device learning does not support static bandwidth sharing if the wideband channel or bonding group is configured by using the **no cable dynamic-bw-sharing** command.
- The VLM device learning does not support overlapping same set of channels under a MAC domain.
- The VLM device learning does not support channels and bonding groups that overlap across MAC domains.
- The VLM device learning does not learn Dynamic Bonding Group configuration.
- While learning the RF channel width of a wideband, the Cisco Subscriber Manager checks for the entPhysicalName of the card. The Cisco Subscriber Manager expects the entPhysicalName value to be in the format *SPA bay <slot>/<subslot>* or *Cable<slot>/<subslot>-RF<rf-port>*, or includes *3GX60*. Based on the card type, the interface descriptor (ifDescr) is derived. You can change the default format of the ifDescr value in the Vlink configuration file vlink.cfg. For the ifDescr matching, the port information must be in the format *<slot/subslot/port>*, in the same order and as a single string. The channel number can be any where based on the format configured in the vlink.cfg file.
- The VLM device learning may fail if there is an overlap of the IP address learned from ipAddrTable across all configured CMTS. The IP address overlapping between CMTS is usually observed in MPLS VPN based network deployments where virtual routing and forwarding (VRF) is used.
- The VLM device learning feature does not support modular or integrated interfaces that are directly associated to a Mac domain; it only supports interfaces associated through a bonding group.
- The VLM does not learn the bandwidth sharing of upstream channels that overlap the wideband interfaces.





## CHAPTER 4

# Configuring the Remote Cable MSO Links Solution

---

Revised: May 10, 2013, OL-24162-06

## Introduction


This chapter describes:

- Basic topology for managing remote cable MSO links and the high-level steps to configure the solution—[Solution Topology, page 4-2](#)
- Prerequisites for configuring a solution that uses traffic optimization on remote links with the VLM—[Prerequisites, page 4-4](#)
- Configuring the VLM by using the configuration files contained in the Subscriber Manager installation—[Configuring the Solution, page 4-5](#)

# Solution Topology

Figure 4-1 shows a system that can be configured for managing remote cable MSO links.

Figure 4-1 Traffic Optimization on Remote Links Topology

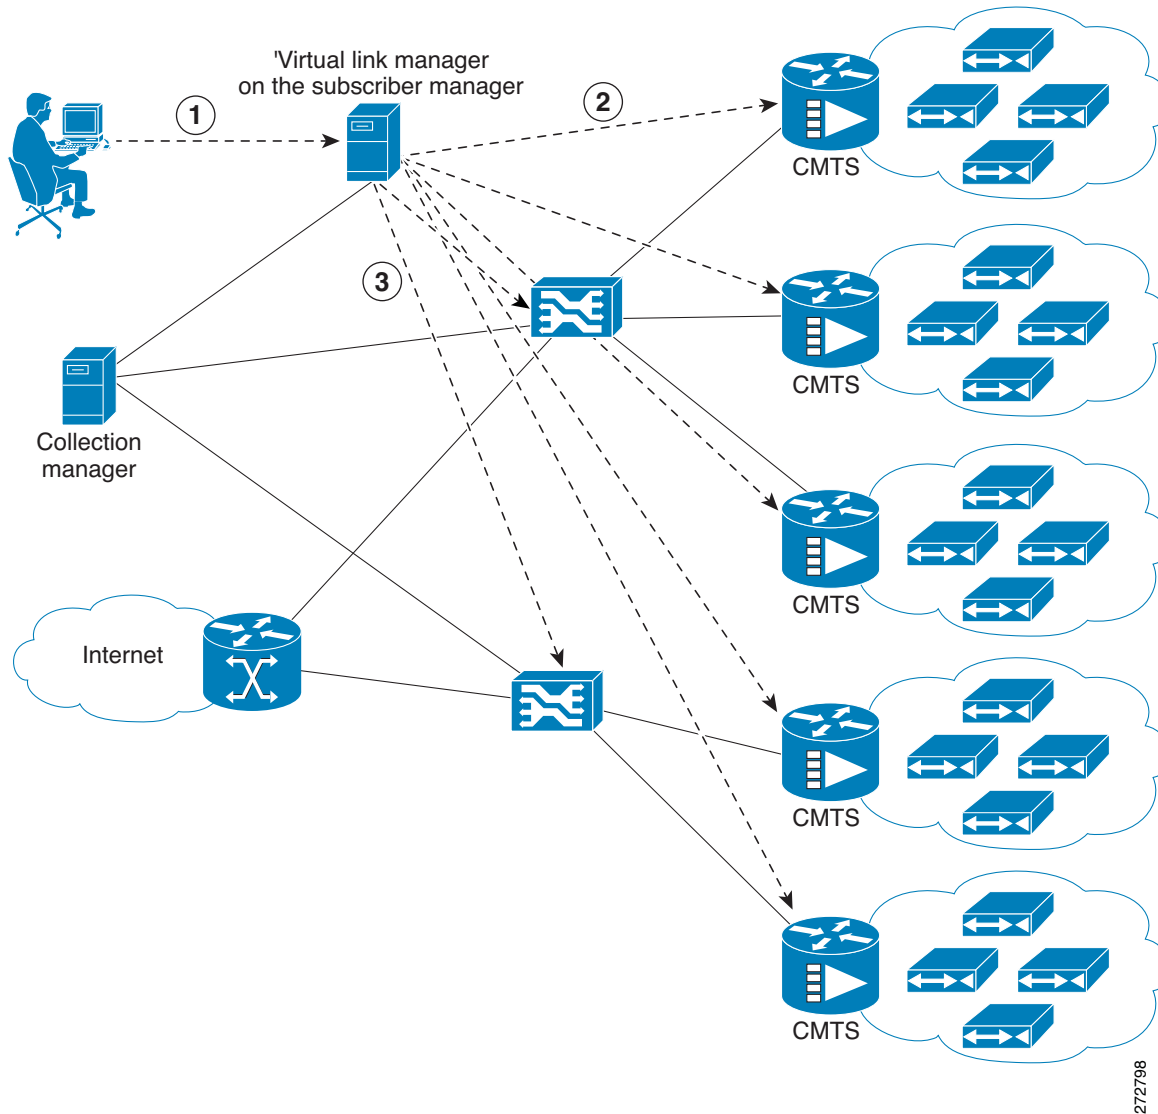

## Note

Using a Collection Manager is optional and is not required for the solution to work. However, if you do not use a Collection Manager, the reports provided by the Service Control Application Reporter (SCA Reporter) can be selected only by the virtual link index and not by the virtual link name.

To work with the Collection Manager, you must associate the Collection Manager with the SCE and also with the Subscriber Manager. However, it is not mandatory to associate the Collection Manager with the Subscriber Manager. In this case, the Collection Manager receives the Raw Data Records (RDRs) but does not automatically receive the index to the vlink name mappings.

272798

The operator configures the IP addresses of the CMTS devices, the SCEs, the Collection Manager, and their interrelations on the SM (1). The SM queries each CMTS device through SNMP to determine its sysname, interfaces, and their corresponding interface speeds (2). The SM provisions the SCE virtual links (3).

## CMTS Device Compatibility

This traffic optimization on remote links solution supports these devices at present:

- Cisco CMTS Universal Broadband Router (uBR)
  - uBR10K
  - uBR7246
- Non-Cisco CMTS
  - Arris CMTS

To use other CMTS devices, you must ensure that these conditions are met:

- Upstream and downstream interface IDs are encoded as part of option 82, sub option 1 (the circuit ID) and appears in the DHCPACK message.
- CM-MAC, which is used as the Subscriber-ID, is encoded as option 82, suboption 2 (the remote ID) and appears in the DHCPACK message.
- DHCP traffic flows through the SCE.
- To use Cisco CMTS and non-Cisco CMTS devices for IPDR, you must ensure that these conditions are also met:
  - The Upstream IDs are retrieved or identified by using CmtsIpv4Addr, CmtsMdIfIndex and CmtsTcsId fields, which is a part of CM registration IPDR messages.
  - The Downstream IDs are retrieved or identified by using CmtsIpv4Addr, CmtsMdIfIndex and CmtsRcsId fields, which is a part of CM registration IPDR messages.
  - The Cable Modem MAC address, which is used as Subscriber-ID, is retrieved or identified by CmmacAddress field that is a part of the Cable Modem Registration IPDR messages.

Traffic optimization on the remote links solution uses DOCSIS MIBs and standard MIBs.

# Prerequisites

Before you set up the managing remote cable MSO links solution, you must complete these tasks:

- Install Release 3.7.0 onto the Subscriber Manager, Collection Manager (optional), and SCE.
- Install the Cisco SCA BB (the Engage pqi file) on the SCEs used in the solution. See the “How to Install PQI Files on SCE Devices” section in “Using the Network Navigator” chapter, of *Cisco Service Control Application for Broadband User Guide*.



# Configuring the Solution

This section describe how to configure the solution.

## Configuring Virtual Links Global Controllers

- Step 1** Start the SCA BB console by choosing **Start > All Programs > Cisco SCA > SCA BB Console 3.7.0 > SCA BB Console 3.7.0**.

The Cisco Service Control SCA BB Console splash screen appears. After the Console loads, the main window of the Console appears. The first time that you launch the Console, the Welcome view is open in the main window.

- Step 2** To close the Welcome view, click **Go to the console**. The Welcome view closes. The Network Navigator tool is open in the Console.


- Step 3** From the Console main menu, choose **Tools > Service Configuration Editor**.

If no service configurations are open when you open the Service Configuration Editor tool, a No Service Configuration Is Open dialog box appears:

- To create a new service configuration, click **Yes**. A New Service Configuration Settings dialog box appears.
- Select an operational mode for the service configuration.
- Click **OK**.

The new service configuration is added to the Console window (Figure 4-2) that becomes the active service configuration.


**Figure 4-2** Console Window

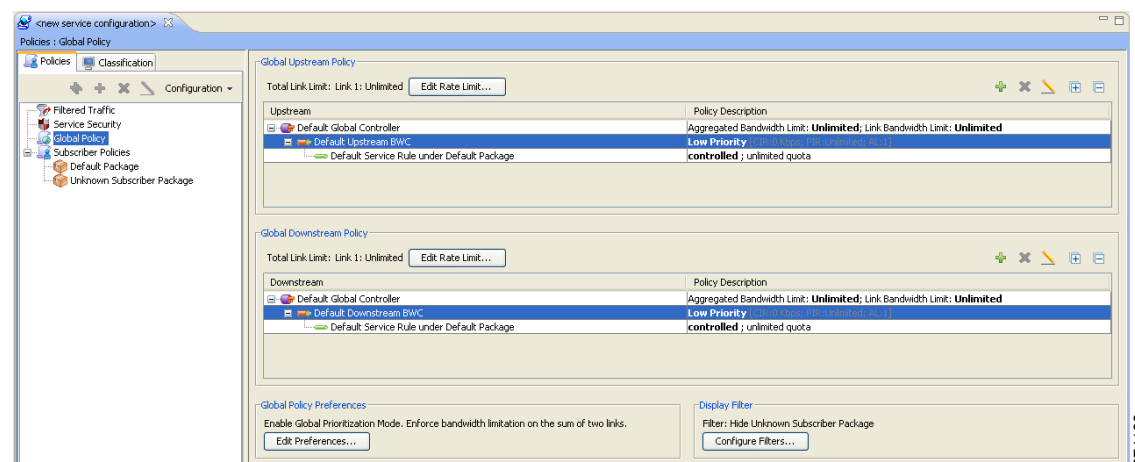

274129

- Step 4** In the Global Policy Preferences area, click **Edit Preferences**.  
The Global Controllers mode dialog box appears (Figure 4-3).

**Figure 4-3 Global Controllers Mode Dialog Box**

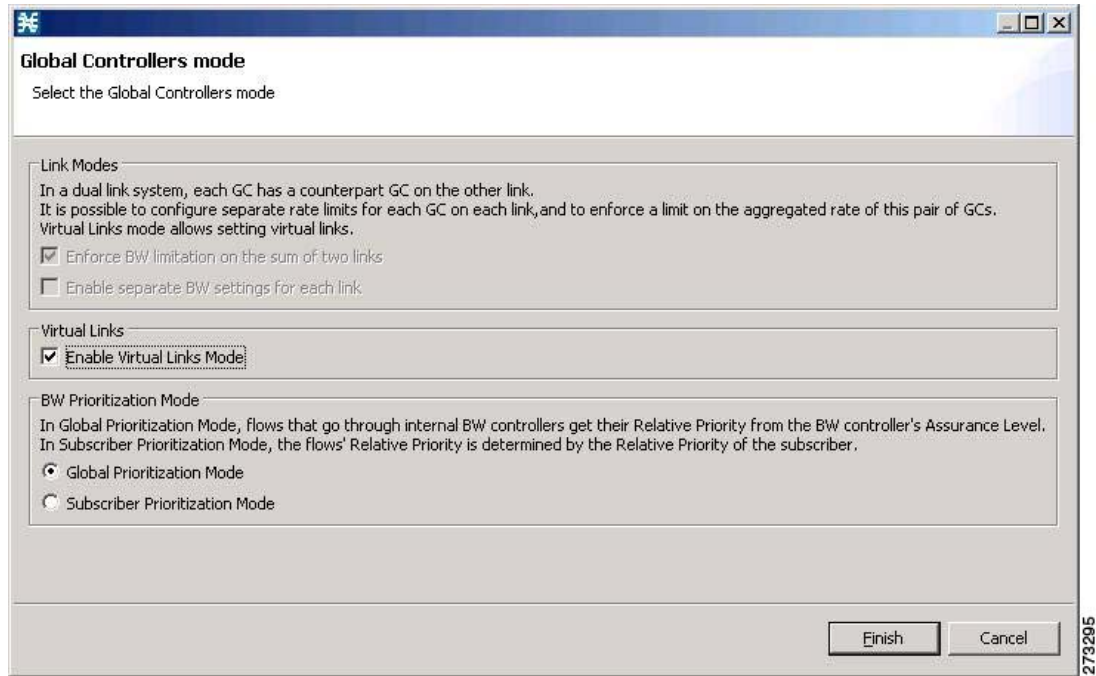

**Note**

By default, the Virtual Link Mode works only in Subscriber Prioritization Mode.

- Step 5** Check the **Enable Virtual Links Mode** check box.  
The Apply Template rate limits to all Virtual Links? dialog box appears (Figure 4-4).

**Figure 4-4 Virtual Links? Dialog Box**



- Step 6** Click **Reset all Virtual Links to Template rate limits** when you change the number of Global Controllers.


If you are applying the template for the first time, always select Rest all Virtual Links. Whenever the template is getting changed with respect to the AGC and the BWC, then use **Reset all Virtual Links to Template rate limits**. Otherwise, to retain the modified template, use the **Keep Virtual Link rate limits unchanged**.

Click **Keep Virtual Link rate limits unchanged** to retain the current Virtual Links rate limits. Only the defined virtual link is set to the new template rate limit.

**Step 7** Click **Finish**.

The new service configuration window appears (Figure 4-5).

**Figure 4-5** New Service Configuration Window

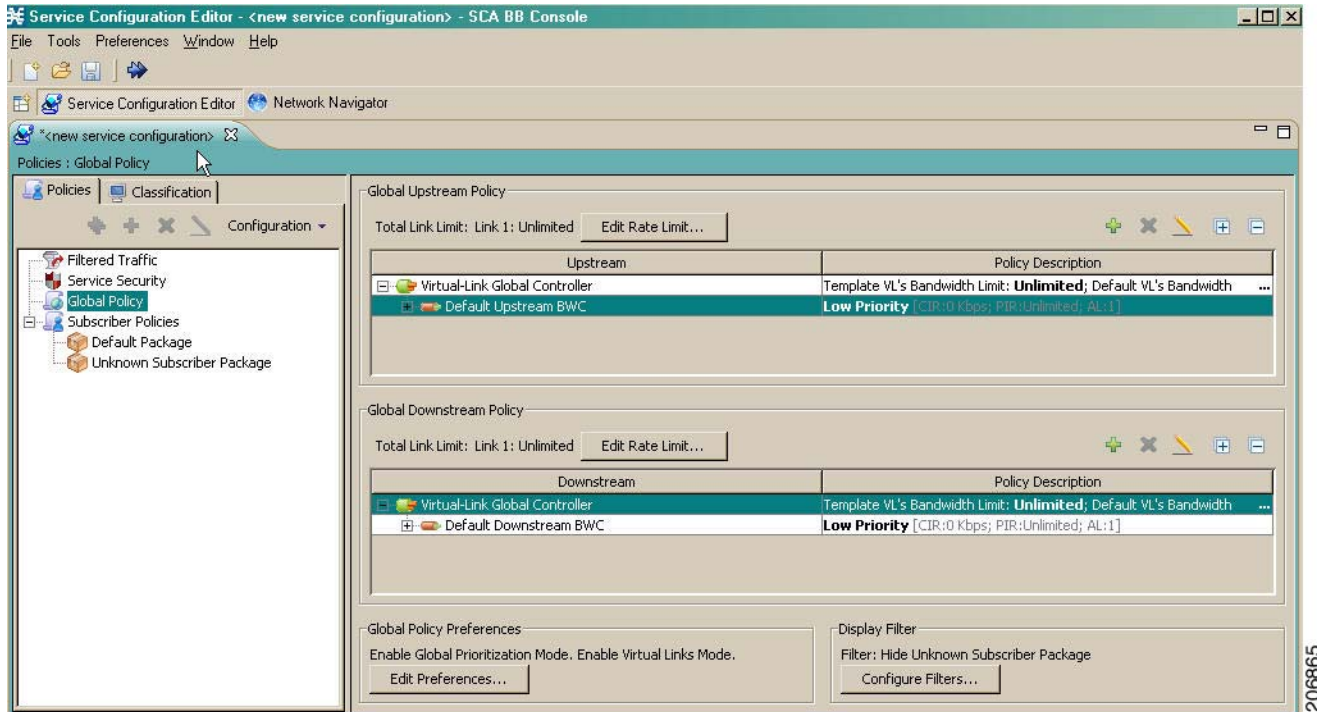

For more information on the Service Configuration Editor, see the *Cisco Service Control Application for Broadband User Guide*.

Virtual link global controllers can be added, edited, and deleted in the same way as regular global controllers. For more information, see these sections:

- [How to Add Global Controllers](#), page 4-9
- [How to Add Global Controllers Inside Virtual Link](#), page 4-11
- [How to Edit Package Subscriber BWCs](#), page 4-13

## How to Add Global Controllers

**Note**


You can edit the default global controller settings, however, the default instance of global controller cannot be deleted.

**Step 1**

In the Policies tab, click **Global Policy**.


The Global Bandwidth Settings dialog box is displayed in the right (Rule) pane.

**Step 2**

Above the area (Upstream or Downstream) of the desired interface, click the **Add**  icon.

The Select Addition mode dialog box appears (Figure 4-6).

**Figure 4-6** Select Addition Mode

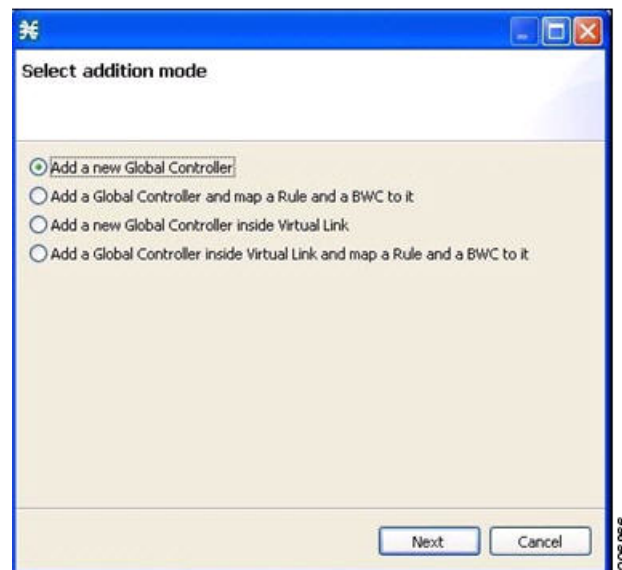**Step 3**

To add a new global controller, click the **Add a new Global Controller** radio button.

**Step 4** Click **Next**.

The Global Controller Settings dialog box appears. See [Figure 4-7](#).



**Note**

The display in [Figure 4-7](#) depends on the global controller mode setting.

**Figure 4-7 Upstream Global Controller Settings**

**Global Controller Settings**

Global Controller must have a gcNameText

Name:

The global controller enforces a L1 rate limit on traffic that is mapped to it. The global controller can enforce an aggregate rate limit across all SCE links, as well as a separate rate limit per SCE link.

**Aggregate Global Controller**

The global controller can enforce a different rate limit per time frame.

The same rate limit for all time frames

A different rate limit per time frame

**Single Rate Limit (Kbps)**

Global Controller	Rate Limit
Aggregate	Unlimited

**Per Link Global Controller**

The global controller can enforce a different rate limit per time frame.

The same rate limit for all time frames

A different rate limit per time frame

**Single Rate Limit (Kbps)**

Global Controller	Rate Limit
For all Links	Unlimited

OK Cancel

2017/2019

**Step 5** In the **Name** field, enter a meaningful name.

**Step 6** Edit the maximum bandwidth of the aggregate and per link global controller rate limits.

**Step 7** Click **OK**.

Your changes are saved.

The Global Controller Settings dialog box closes.

## How to Add Global Controllers Inside Virtual Link


You can create AGCs inside a virtual link global controller.

**Note**

You can edit the default global controller settings, however, the default instance of global controller cannot be deleted.


**Step 1** In the Policies tab, click **Global Policy**.

The Global Bandwidth Settings dialog box is displayed in the right (Rule) pane.

**Step 2** Above the area (Upstream or Downstream) of the desired interface, click the **Add**  icon.

The Select addition mode dialog box appears ([Figure 4-8](#)).

**Figure 4-8** *Select Addition Mode*

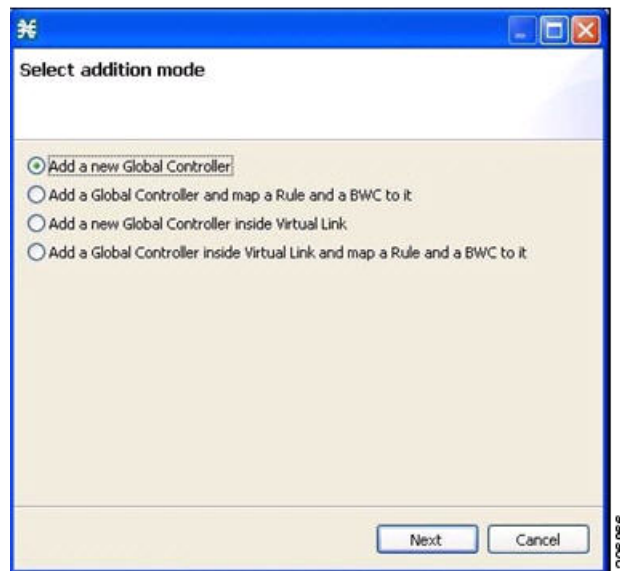

**Step 3** To add a new global controller within a virtual link, click the **Add a new Global Controller inside Virtual Link** radio button.

**Step 4** Click **Next**.

The Global Controller Settings dialog box appears. See [Figure 4-9](#).



**Note**

The display in [Figure 4-9](#) depends on the global controller mode setting.

**Figure 4-9 Upstream Global Controller Settings**

**Global Controller Settings**  
Configure the rate limit that this global controller should enforce.

Name:

The global controller enforces a L1 rate limit on traffic that is mapped to it. The global controller enforces an aggregate rate limit across all SCE links belonging to the same virtual link.

In virtual links mode, rate limits for each virtual link are provisioned dynamically to the SCE, yet 'Template' and 'Default' values allow static provisioning:  
 'Template' rate limits apply to newly-created virtual links.  
 'Default' rate limits apply to the default virtual link (virtual link 0).

**Template Virtual Link**

The global controller can enforce a different rate limit per time frame.

The same rate limit for all time frames  
 A different rate limit per time frame

**Single Rate Limit (Kbps)**

Virtual Link	Rate Limit
Template	Unlimited

**Default Virtual Link**

The global controller can enforce a different rate limit per time frame.

The same rate limit for all time frames  
 A different rate limit per time frame

**Single Rate Limit (Kbps)**

Virtual Link	Rate Limit
Default	Unlimited

OK Cancel

**Step 5** In the **Name** field enter a meaningful name.

**Step 6** Edit the maximum bandwidth of the template and the default values rate limit


**Step 7** Click **OK**.

Your changes are saved.


The Global Controller Settings dialog box closes.





## How to Edit Package Subscriber BWCs

- Step 1** In the Policies tab, click **Global Policy**.  
The Global Bandwidth Settings dialog box is displayed in the right (Rule) pane.
- Step 2** In the right (Rule) pane, select a BWC and click the **Edit**  icon.  
The Package Settings dialog box appears.
- Step 3** In the Package Settings dialog box, click the **Subscriber BW Controllers** tab.  
The Subscriber BW Controllers tab opens. See [Figure 4-10](#).

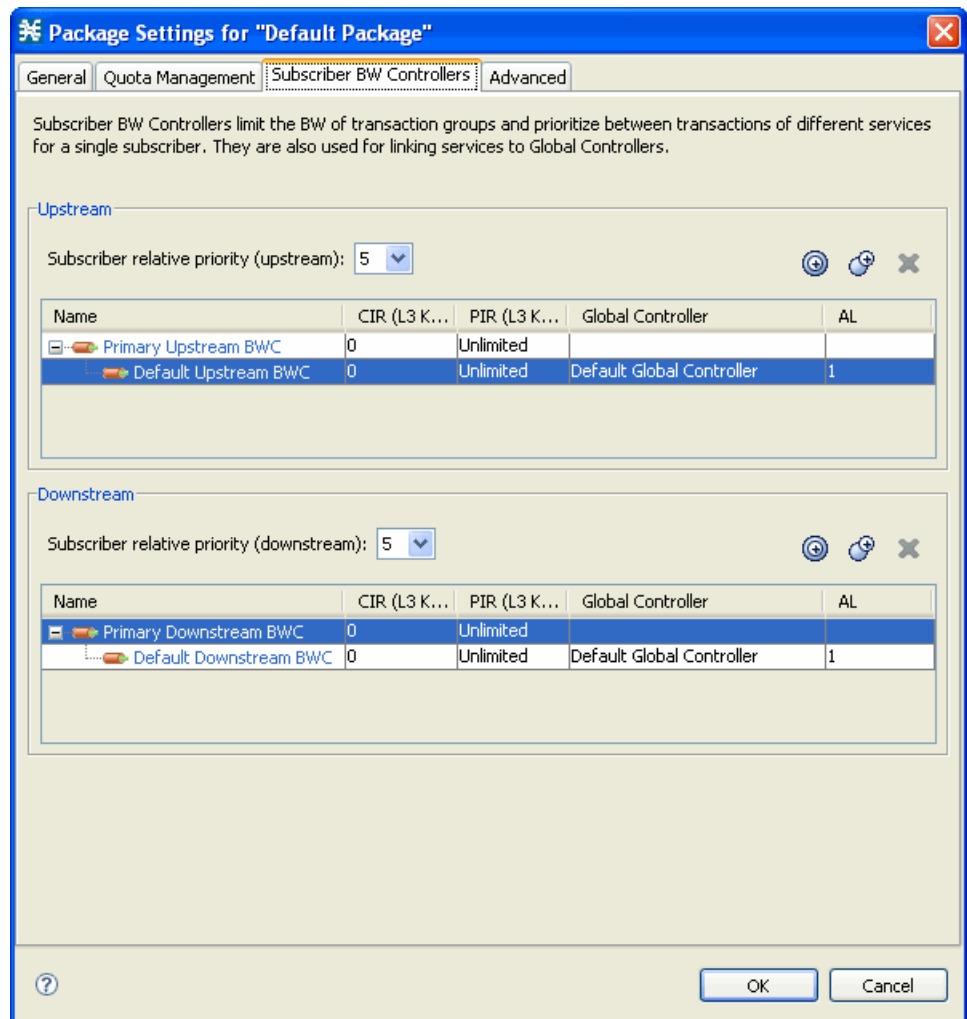
**Figure 4-10** Subscriber BW Controllers Tab



- Step 4** Set your requirements for upstream bandwidth control in the Upstream area of the dialog box.
- a. Select a value from the Subscriber relative priority drop-down list.
  - b. Set the parameters for the Primary Upstream BWC.
    - In the CIR field, enter the BWC CIR in Kbps.
    - In the PIR field, select **Unlimited** from the drop-down list, or enter the BWC PIR in Kbps.
  - c. To add BWCs to the package, click the **Add a sub BW Controller**  icon once for each additional BWC.
  - d. To add Extra BWCs to the package, click the **Add an extra BW Controller**  icon once for each additional BWC.
  - e. Set the parameters for each BWC (including the Primary and Default BWCs).
    - (Optional) In the Name field, enter a meaningful name for each BWC. (You cannot rename the Primary or Default BWCs.)
    - In the CIR field, enter a value for the BWC CIR in Kbps.
    - In the PIR field, select **Unlimited** from the drop-down list, or enter a value for the BWC PIR in Kbps.
    - To set the global controller with which this BWC is associated, click in the Global Controller cell of the BWC, and then click the **Browse** button that appears.

The Select a Global Controller dialog box appears. See [Figure 4-11](#).

**Figure 4-11** Select a Global Controller Dialog Box

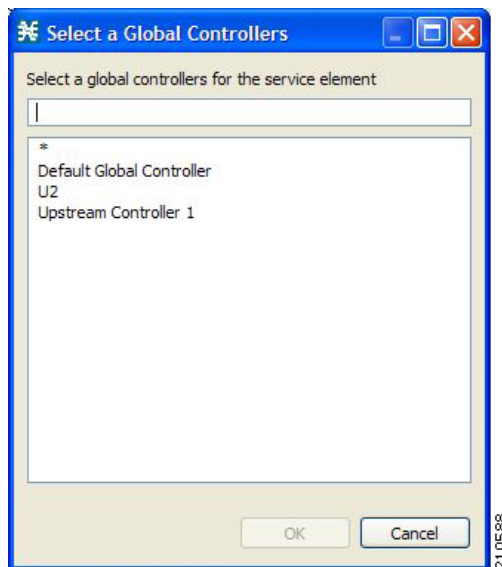

- Select a global controller and click **OK**.
- Select a value from the AL drop-down list.

**Step 5** Repeat [Step 3](#) for downstream bandwidth control in the Downstream area of the dialog box.

**Step 6** Click **OK**.

The Package Settings dialog box closes.

All changes to the BWC settings are saved.

---

## Applying Service Configurations to SCE Platforms

**Step 1** Using the Network Navigator tool, in the Site Manager tree, right-click an SCE device. A popup menu appears.

**Step 2** From the menu, choose **Apply Service Configuration**.

The Choose Policy dialog box appears, listing all service configurations that are open in the Service Configuration Editor.



**Note**

If only one service configuration is open in the Service Configuration Editor, a Password Management dialog box appears. Go to [Step 5](#).

---



**Note**

If the open policy is a virtual links policy, the Apply Template Virtual Links Values dialog box prompts you to apply the template virtual links value to the existing virtual links. Go to [Step 4](#).

---

**Step 3** Select a service configuration from the list.

**Step 4** Click **OK**.

To apply the template virtual links value to the existing virtual links, click **Yes**.

A Password Management dialog box appears.

**Step 5** Enter the appropriate password.

**Step 6** Click **Apply**.

The Password Management dialog box closes. An Applying service configuration to SCE progress bar appears. The service configuration is applied to the selected SCE platform.

---

## Configuring the Virtual Links Manager

**Step 1** On the Subscriber Manager machine, open the p3sm.cfg configuration file, which is located in the ~pcube/sm/server/root/config/ directory.

For details about making configuration changes in the p3sm.cfg file, see the “Configuration Files Options” chapter of *Cisco Service Control Management Suite Subscriber Manager User Guide*.

- a. Create a section for any SCE devices and define the IP address and optionally the port values of the SCE devices. This example shows the SCE sections created for two SCE devices named SCE1 and SCE2:

```
[SCE.SCE1]
ip=209.165.201.2
[SCE.SCE2]
ip=209.165.201.3
```

- b. (Optional) Create a section for the Collection Manager and define the IP address and the connected SCE devices. Defining the Collection Manager port value is optional; if a value is not defined, the default value of 14375 is used.

The following example shows the Collection Manager section created that receives the RDRs for two SCE devices named SCE1 and SCE2:

```
[CM.CM1]
ip=209.165.202.129
port=14375
sce_list=SCE1,SCE2
```



**Note** Using a Collection Manager is optional and is not required for the solution to work. However, if you do not use a Collection Manager, all the virtual link reports can be selected only by the virtual link index and not by the virtual link name.

**Step 2** Save and close the p3sm.cfg configuration file.

**Step 3 to Step 6** are applicable only to DHCP Sniffer LEG configuration. If you are using IPDR LEG, proceed to **Step 7**. **Step 7** and **Step 8** are applicable only to IPDR LEG.

**Step 3** (Only for DHCP Sniffer LEG) On the Subscriber Manager machine, open the dhcpsnif.cfg configuration file, which is located in the ~pcube/sm/server/root/config/ directory.

For details about making configuration changes in the dhcpsnif.cfg file, see the “SCE-Sniffer DHCP LEG” section in “Configuring the SCE-Sniffer DHCP LEG” chapter of *Cisco SCMS SM LEGs User Guide*.

- a. In the [SCE-Sniffer DHCP LEG] section, set the start value to **yes**.

```
[SCE-Sniffer DHCP LEG]
start=yes
```

All the other values can be left at the default values.

- b. In the [Subscriber ID] section, set the dhcp\_option to the DHCP option that contains the subscriber ID and set the dhcp\_option\_type to binary. For example:

```
[Subscriber ID]
dhcp_option=82:2
dhcp_option_type=binary
```

All the other values can be left at the default values.

**Step 4** (Only for DHCP Sniffer LEG) Save and close the `dhcpsnif.cfg` configuration file.

**Step 5** (Only for DHCP Sniffer LEG) On the Subscriber Manager machine, open the `dhcp_pkg.cfg` configuration file, which is located in the `~pcube/sm/server/root/config/` directory.

For details about modifying configuration in the `dhcp_pkg.cfg` file, see the “SCE-Sniffer DHCP LEG” section, in “Configuring the SCE-Sniffer DHCP LEG” chapter of *Cisco SCMS SM LEGs User Guide*.

a. Define a downstream virtual link policy by setting the parameters:

```
[DHCP.Policy.VirtualLinkDownstream]
policy_property_name=downVLinkId
options_order_for_policy_name=giaddr,82:1
options_type=integer,binary
allow_login_with_no_policy=true
use_default=false
default_policy=0
```




---

**Note** Do not define the `mapping_table` parameter.

---

b. Define an upstream virtual link policy by setting the parameters:

```
[DHCP.Policy.VirtualLinkUpstream]
policy_property_name=upVLinkId
options_order_for_policy_name=giaddr,82:1
options_type=integer,binary
allow_login_with_no_policy=true
use_default=false
default_policy=0
```




---

**Note** Do not define the `mapping_table` parameter.

---

c. Detect if the subscriber is related to the DOCSIS 3.0 wideband interface

- The attribute related to `[DHCP.Policy.VirtualLinkUpstream]` and `[DHCP.Policy.VirtualLinkDownstream]` parameters is `docsis_3_cm_detection`. The value of attribute is `Modem_Type.DOCSIS3.0`.




---

**Note** It is mandatory to enter values for the `Modem_Type.DOCSIS3.0` field.

---

```
docsis_3_cm_detection=Modem_Type.DOCSIS3
```

d. Set the rules to define DHCP data coming from the DOCSIS 3.0 cable modem interface

- To identify if DOCSIS 3.0 is the cable modem type, use this parameter:

```
[Modem_Type.DOCSIS3.0]
```

This parameter has two attributes—option and option\_type.

The format of the parameter is the option number itself. But for DHCP options with sub-options, the format is the DHCP option and sub-option type separated by a colon.

For example:

```
# 43:123 or 61
(default option 67, "Boot filename")
option=67
```

- The format type of DHCP option is defined by the 'dhcp\_option' parameter. Optional values are 'binary' (binary string that is converted to an ASCII hexadecimal string) or 'string' (ASCII string). The default value is string.

```
option_type=string
```

- The parameter to define the search pattern to verify that the cable modem belongs to DOCSIS 3.0 is option\_pattern. The value for this parameter is a single regular expression pattern per dhcp\_option. If there are more than one dhcp\_option, the values for option\_pattern is a list of regular expression patterns (one pattern per option) separated by comma. The default value is 3.0.

```
option_pattern=3.0
```

**Step 6** (Only for DHCP Sniffer LEG) Save and close the dhcp\_pkg.cfg configuration file.



**Note**

---

When the VLM is activated, the DHCP sniffer adds a custom property to each subscriber with the value of the giaddr option, which is one of the CMTS IP addresses.

---

**Step 7** (Only for IPDR LEG) Configure the file <pcube>/sm/server/root/config/ipdr.cfg.

CM Mac Address will be the default Subscriber ID. The CMTS Name should be mapped to the CMTS Name configured in vlink.cfg.

IPDR LEG supports both static and dynamic mappings. If there are any conflicts, dynamic mappings learnt from the CMTS will be considered for subscriber association. The start parameter in the IPDR LEG configuration section defines whether the VLM is enabled or disabled. The default value is “no”. If you enable VLM, the VLM starts learning the device topology defined in the configuration file and starts the dynamic VLINK assignments on the relevant SCEs. You must manually create the VLINKs and AGCs in the SCE, for the static mappings you configure in the ipdr.cfg.

This is an example of the configuration:

```
[IPDR LEG]
start=yes
log_failures=yes
log_all=no
# Enable the below option to log the receiving IPDR messages
# (Default value: false)
# log_subs_details=false

# Enable the below option to log the mapping table information
# (Default value: false)
# log_mapping_table=false

# Enable the below option to log the subscribers who are partially logging in
# (Default value: false)
# log_login_partial_subs=false

cm_mode=no

#CM Mac Address will be the default Subscriber ID
[IPDR.Subscriber ID]
fields=CmmacAddress

[IPDR.Field.CmmacAddress]
ipdr_key=CmMacAddr
ipdr_key_type=string

#Configure IPDR Exporter
# [IPDR.Exporter.<CMTS NAME>]
# The CMTS Name should mapped to the CMTS Name configured in vlink.cfg

[IPDR.Exporter.CMTS1]
start_exporter=yes
exporter_connection_type=active
connection_time_out=100
keep_alive=15
port=4737
# Configure the sesion ids specified in the exporter.
#session_id=<session_id>,<session_id>
session_id=2,3,4
```

**Step 8** (Only for IPDR LEG) If the host entry is not added in the Subscriber Manager, then add the IPDR Collector IP address to the ipdr.cfg.

Example:

```
CMTS(config)# ipdr collector dt-sm-linux 10.78.242.22
```

**Step 9** On the Subscriber Manager machine, open the vlink.cfg configuration file, which is located in the ~pcube/sm/server/root/config/ directory.

a. In the [General] section, configure these parameters:

- start—Setting the start parameter to yes instructs the Subscriber Manager to start the VLM when the Subscriber Manager starts. Possible values for this parameter are yes and no.




---

**Note** When the start parameter is set to no, the data stored in the database for all CMTS devices is deleted.

---

- monitoring\_period—Determines the interval in minutes at which the VLM queries the CMTS devices for any interface changes. Setting this parameter to 0 stops the VLM querying the CMTS devices, but does not stop the VLM. The default value is 60.
- ignore\_duplicate\_ip—Determines the percentage of the speed for each device to be used for the corresponding VLink Peak Information Rate (PIR). The default value is false. Possible values can be either true or false.
- upstream\_vlink\_factor—Determines the percentage of the interface bandwidth that the SCE allows to be sent from the CMTS device to the Internet. The default value is 95.
- downstream\_vlink\_factor—Determines the percentage of the interface bandwidth that the SCE allows to be sent from the Internet to the CMTS device. The default value is 95.




---

**Note** When defining the upstream\_vlink\_factor and downstream\_vlink\_factor parameters, take precaution. Setting a very low value causes wastage of bandwidth capacity. Setting a very high value causes data loss because of dropped packets.

---




---

**Note** Whenever you change the default values of upstream\_vlink\_factor and downstream\_vlink\_factor, you must manually resync the vlink information by using the **p3vlink --resync-all** command to reflect the changes on all SCEs.

---

- log\_all—Setting the log\_all parameter to true causes the system to dump log messages to the user log.
- upstream\_global\_controller\_list—Determines the list of non default upstream global controllers, which are defined in the template and managed by VLM.
- downstream\_global\_controller\_list—Determines the list of non default downstream global controllers, which are defined in the template and managed by VLM.

For more information, see the [“Configuring Virtual Links Global Controllers”](#) section on page 4-5.




---

**Note** Every global controller defined in the configuration file should exist in the policy configuration.

---

- upstream\_global\_controller\_pir\_percentage—(Optional) Determines the percentage of the PIR values of the wideband interfaces. One or more PIR values can be configured, each value corresponds to the global controller that belongs to the global controller list.





**Note** If the PIR values are not configured, then the default PIR values are used to determine the percentage.

- `downstream_global_controller_pir_percentage`—(Optional) Determines the percentage of the PIR values of the wideband interfaces. One or more PIR values can be configured, each value corresponds to the global controller that belongs to the global controller list.
- `enable_dynamic_giaddr_learning`—(Optional) Avoids learning new giaddrs during log in. If this value is set to false, if SM identifies during the login that the relay agent does not belong to a known CMTS, SM ignores the query and continues with the login. This functionality is applicable only for static device configuration. The default value is true.
- `general_default_cli_integrated`— Defines a default integrated CLI that is executed in the device. The default value is `show controllers Integrated-Cable card ? association`.
- `general_default_cli_modular`— Defines a default modular CLI that is executed in the device. The default value is `show hw-module bay ? config wideband-channel`.
- `general_default_cli_3g_60`—Defines a default 3G60 CLI that is executed in the device. The default value is `show controllers Modular-Cable card ? association`.
- `encrypt_cmts_credentials`— Defines whether the CMTS credentials are encrypted or plaintext. The default values is true.
- `num_of_retry_attempts_for_device_login`— Defines the maximum number of times the VLM must try to connect to the device. The default value is 3.
- `wait_for_device_uptime`—Defines the minimum period to wait after the device is restarted, in minutes. Virtual Link Manager checks the sysUpTime of the Device before starting the query, If it is less than the configured value, then the query to that device is ignored. Valid range is from 0 to 60. The default value is 0.
- `access_timeout_for_device_login`— Defines the number access timeout in milliseconds. The default value is 10000 milliseconds. If the maximum number of retry attempts is five, and the interval between retrying connections is three minutes or less, the VLM server tries to connect to the device five times with an interval of three minutes between each attempt. The VLM server does not try to connect after 15 minutes.



**Note** Setting `log_all` to true can cause performance degradation.

This example shows the [General] section of the `vlink.cfg` configuration file:

```
[General]
start=true
monitoring_period=60
upstream_vlink_factor=95
downstream_vlink_factor=95
log_all=false
upstream_global_controller_list=agc_a, agc_b
downstream_global_controller_list=agc_d, agc_e
upstream_global_controller_pir_percentage=80,90
downstream_global_controller_pir_percentage=85,85
enable_dynamic_giaddr_learning=true
encrypt_cmts_credentials=true
num_of_retry_attempts_for_device_login=3
access_timeout_for_device_login=10000
```

- b. Modify the SCE container such that it loads all SCE IP addresses specified in vlink.cfg as sceIPs in cache. This confirms that VLM integration is done for the DHCP packets only if the packets comes from those SCEs that are part of the VLM configuration (vlink.cfg).
- c. For each CMTS device, configure a [Device.<device name>] section with these parameters:

**Note**


---

<device name> of the section is used as part of the virtual link name for all virtual links associated with this CMTS device. The name of the CMTS device also appears in the reporter.

---

- device\_type—Specifies whether CMTS device is a Cisco CMTS or a non-Cisco CMTS. Possible values are, cisco and arris. The default value is cisco.
- ip—Specifies the IP address of the CMTS device.
- sce\_name—Specifies the name of the SCE to which the CMTS device is connected. This must match an SCE section defined in the p3sm.cfg configuration file.
- ignore\_upvlink\_ids—Specifies the configured UpVlink IDs to be ignored by the Cisco Subscriber Manager while removing the IDs from Cisco SCE. Users should ensure that the configured IDs are not assigned to any of the channels or virtual links by the Subscriber Manager and not provisioned to Cisco SCE. The VLink ID value must be an integer. The values can be separated by a comma (,) or can be a range of values separated by an en dash (-) can be mentioned, as shown in the following example:

```
ignore_upvlink_ids= 11,12,15-20
```

- ignore\_downvlink\_ids—Specifies the configured DownVlink IDs to be ignored by the Subscriber Manager while removing the IDs from Cisco SCE. Users should ensure that the configured ID's are not assigned to any of the channels or virtual links by the Subscriber Manager and not provisioned to Cisco SCE. The VLink ID value must be an integer. The values can be separated by a comma (.). Alternatively, a range of values can be separated by an en dash (-) as shown in the following example:

```
ignore_downvlink_ids= 5-15
```

- upstream\_vlink\_factor—(Optional) Determines the percentage of the interface bandwidth that the SCE allows to be sent from this CMTS device to the Internet. Setting this parameter overrides the setting in the [General] section. If it is not configured, the value defined in the [General] section is used. The default value is 95.
- downstream\_vlink\_factor—(Optional) Determines the percentage of the interface bandwidth that the SCE allows to be sent from the Internet to this CMTS device. Setting this parameter overrides the setting in the [General] section. If it is not configured, the value defined in the [General] section is used. The default value is 95.
- log\_all—Setting the log\_all parameter to true causes the system to dump log messages to the user log for this CMTS device. If the log\_all parameter in the [General] section is true, setting this parameter to false has no effect; if the log\_all parameter in the [General] section is false, setting this parameter to true enables logging for operations related only to this CMTS device; such as, CMTS device creation and deletion.
- upstream\_global\_controller\_list—(Optional) Determines the list of non default upstream global controllers, which are defined in the template and managed by the VLM. If it is not configured, the value defined in the [General] section is used.
- downstream\_global\_controller\_list—(Optional) Determines the list of non default downstream global controllers, which are defined in the template and managed by the VLM. If it is not configured, the value defined in the [General] section is used.




---

**Note** Every global controller defined in the configuration file should exist in the policy configuration.

---

- `upstream_global_controller_pir_percentage`—(Optional) Determines the percentage of the PIR values of the wideband interfaces. One or more PIR values can be configured, each value corresponds to the global controller that belongs to the global controller list. If it is not configured, the value defined in the [General] section is used.




---

**Note** If the PIR values are not configured, then the default PIR values are used to determine the percentage.

---

- `downstream_global_controller_pir_percentage`—(Optional) Determines the percentage of the PIR values of the wideband interfaces. One or more PIR values can be configured, each value corresponds to the global controller that belongs to the global controller list. If it is not configured, the value defined in the [General] section is used.
- `snmp_community`—Specifies the SNMP community value for the VLM to communicate with the CMTS device. The default value is public.
- `giaddr_external`—For each `giaddr` value, the VLM creates a policy mapping table in the DHCP LEG without waiting for a login from the `giaddr` values. Use this parameter to insert `giaddr` values to the mapping table that the VLM created after querying the CMTS device. Use a comma “,” delimiter between IP addresses. The default value for this parameter is empty.
- `giaddr_replace`—Specifies whether the VLM uses the IP addresses defined in the `giaddr_external` parameter as the only `giaddr` list of the CMTS device. When this parameter is set to no, the VLM uses the IP addresses defined in `giaddr_external` and the `giaddr` list that is found when querying the CMTS device as the CMTS `giaddr` list. Possible values for this parameter are yes and no. The default value is no.
- `giaddr_remove`—Removes a list of IPs from the mapping table that the VLM created after querying the CMTS device. For each `giaddr` value, the VLM creates a policy mapping table in the DHCP LEG without waiting for a login from the `giaddr` values. Use a comma “,” delimiter between the IP addresses.
- `cli_integrated`—Defines an optional value the VLM uses to communicate with the device. This attribute loads the `general_default_cli_integrated` property in general section. The default value is show controllers Integrated-Cable card ? association.

For parsing the CLI, the output of wideband to bonding group mapping is expected to be in a specific format. The line with wideband to bonding group information must start with “Wideband-Cable”. After the wideband cable, the `ifDescription` and the bonding group ID separated by a space. For example, Wideband-Cable1/1/0:0 33, Wideband-Cable7/1/0:0 1057.

- `cli_modular`—Defines an optional value the VLM uses to communicate with the device. This attribute loads the `general_default_cli_modular` property in general section. The default value is show hw-module bay ? config wideband-channel.
- `cli_3g60`

This attribute overloads the `general_default_cli_3g_60` property in general section. The default value is show controllers Modular-Cable card ? association.

This example shows the [Device.<device name>] section of the vlink.cfg configuration file:

```
[Device.CMTS1]
ip=192.0.2.10
sce_name=SCE1
ignore_upvlink_ids=11,12,15-20
ignore_downvlink_ids=5-15
log_all=false
upstream_global_controller_list=agc_a, agc_b
downstream_global_controller_list=agc_d, agc_e
upstream_global_controller_pir_percentage=80,90
downstream_global_controller_pir_percentage=85,85
```

For parsing the CLI, the output of wideband to bonding group mapping is expected to be in a specific format. The line with wideband to bonding group information must start with “Wideband-Cable”. After the wideband cable, the ifDescription and the bonding group ID separated by a space. For example, Wideband-Cable1/1/0:0 33, Wideband-Cable7/1/0:0 1057.

- d. To support DOCSIS 3.0 channel in Cisco devices, VLM queries the devices for bonding group association by using Telnet or SSH. To query the devices, VLM requires the device credentials. To provide the VLM with device credentials, complete the next two steps:
  - Create an input CSV file, (for example, import.csv), with values in the format CMTS\_IP,username,password,enable\_password,protocol,port with separate line for each device.
  - Import the credentials to VLM by using the **p3vlink --import-cmts-details** CLU.

If the credentials are wrong, or if the device is not reachable on the configured port using the configured protocol, then the VLINK for DOCSIS 3.0 interfaces is not created and the CMTS supports only DOCSIS 2.0.

This example shows a sample input CSV file with 2 devices configured.

```
#cmtsip,username,loginpass,enablepass,protocol,port
10.52.26.22,cisco,cisco,cisco,telnet,23
10.52.26.21,cisco,cisco,cisco,telnet,23
```

If there is no enable password, the enable\_password field can be “0”.

- e. Configure a device template that enables the users to define the dynamic device behavior. For more information on creating dynamic device, see [“Dynamic giaddr Learning” section on page 3-3](#).

The required parameters are:

- start—Setting the start parameter to yes instructs the VLM to create a dynamic device template. Possible values for this parameter are yes and no.
 

If start is set to false, the VLM does not create a dynamic device. Changing the start value from true to false, disables the creation of dynamic device and the VLM deletes all the dynamic devices and their relevant data from the database.
- log\_all—Setting the log\_all parameter to true causes the system to dump log messages to the user log for this CMTS device. If the log\_all parameter in the [General] section is true, setting this parameter to false has no effect; if the log\_all parameter in the [General] section is false, setting this parameter to true enables logging for operations related only to this CMTS device, such as, CMTS device creation and deletion.
- snmp\_port—(Optional) Specifies the SNMP port value for the VLM to communicate with the CMTS device. The default value is 161.
- snmp\_community—(Optional) Specifies the SNMP community value for the VLM to communicate with the CMTS device. The default value is public.



---

**Note** The ip and sce\_name are not defined; they are retrieved from the DHCP data during login operations. IPDR LEG does not support this feature.

---

**Step 10** Save and close the vlink.cfg configuration file.

**Step 11** Load the configuration to the SM by running this command as the user pcube on the SM machine from the bin directory:

```
>p3sm --load-config
```

---





## CHAPTER 5

# Managing the Remote Cable MSO Links Solution

---

Revised: March 22, 2012, OL-24162-06

## Introduction

This chapter describes the three monitoring mechanisms that you can use to monitor the traffic optimization on remote links solution:

- p3vlink command line utility (CLU)
- SCE command line interface (CLI)
- Reporter tool virtual links report template group

## Virtual Link Names

Each virtual link represents a single interface on the CMTS device and the virtual link name comprises the CMTS device name and the interface name. The virtual links are named according to the following naming convention:

<Device name>\_<Interface name>

- <Device name>—This portion of the name is set when configuring the CMTS in the vlink.cfg configuration file.
- <Interface name>—This portion of the name identifies the specific CMTS interface including the direction and the interface index. This information is how the CMTS describes the interface internally and it is retrieved from the CMTS device by using SNMP.
  - The direction portion of the virtual link name indicates the virtual link direction. Values can be upstream or downstream.
  - The interface index indicates the specific interface on the CMTS of the virtual link.

This is a sample virtual link name for a CMTS device named Device-1:

```
Device-1_CMTS1/0-upstream 1
```

If a downstream virtual link contains two channels, then the virtual link names are displayed as:

<Device name>\_<Interface name>-L<index of the primary channel>

or

<Device name>\_<Interface name>-W



# Monitoring Using the p3vlink Utility

The p3vlink utility provides the ability to show virtual link configurations and metrics related to the virtual links. The command format is:

```
p3vlink OPERATION [OPTIONS]
```

Table 5-1 and Table 5-2 lists the p3vlink operations and options, respectively.

**Table 5-1** p3vlink Operations

Operation	Description	Notes
<b>--show</b>	Displays the current general configuration, CMTS device list, and CMTS device information.	—
<b>--show-device</b>	Displays general configuration of the specified CMTS device that is known to the VLM. This includes non-Cisco CMTS devices also.  To specify the CMTS device, use the <b>-d</b> option.  To show all the links related to the CMTS device, specify the <b>--detail</b> option.	—
<b>--resync</b>	Gets all the SCE virtual link configurations and sends it to the SCE, SCE-Sniffer DHCP LEG, and CM.  To specify the SCE, use the <b>-n SCE_NAME</b> option.  To specify a Collection Manager, use the <b>-n CM_NAME</b> option. In this case, the VLM gets all the SCE virtual links that are related to the specified Collection Manager and sends the data to the Collection Manager.	This is a nonblocking command. Query operation and synchronization operation are activated in the background.
<b>--resync-all</b>	Gets all the SCE virtual link configurations for each SCE and sends them to the SCE, SCE-Sniffer DHCP LEG, and Collection Manager.	This is a nonblocking command. Query operation and synchronization operation are activated in the background.
<b>--start-query</b>	Starts the on demand query operation (and the CMTS device synchronization operation) for one CMTS device or more separated by “,”.  To specify the CMTS device to be queried, use the <b>-d &lt;device name&gt;</b> option.	This is a nonblocking command. Query operation and synchronization operation is activated in the background.

Table 5-1 p3vlink Operations (continued)

Operation	Description	Notes
<b>--show-vlinks</b>	Shows the virtual links, virtual link indexes, and bonding group information related to the specified SCE.  to specify the SCE, use the <b>-n &lt;SCE name&gt;</b> option.  (Optional) To specify the prefix of the virtual links that you want this command to show, use the <b>--prefix=&lt;vlink prefix&gt;</b> option.	—
<b>--show-vlink-data</b>	Shows all the data related to the specified link.  To specify the vlink, use one of these options: <b>--vlink-name=&lt;name&gt;</b> <b>--vlink-id=&lt;id&gt;</b> , <b>--ne-name</b> , and <b>--direction</b>	—
<b>--show-vlink-mappings</b>	Shows the upstream and downstream vlink mappings that the virtual link manager learnt from all configured CMTSS.	—

Table 5-1 p3vlink Operations (continued)

Operation	Description	Notes
--show-subs	<p>This command has four uses:</p> <ul style="list-style-type: none"> <li>• Shows all subscribers connected to a specific CMTS device. <ul style="list-style-type: none"> <li>– To specify the CMTS device, use the <b>-d &lt;device name&gt;</b> option.</li> <li>– (Optional) To specify the virtual link ID, use the <b>--vlink-id=&lt;id&gt;</b> option.</li> <li>– (Optional) To specify the virtual link direction, use the <b>--direction=&lt;up/down&gt;</b> option.</li> <li>– (Optional) To specify the prefix of the virtual links that you want this command to show, use the <b>--prefix=&lt;vlink prefix&gt;</b> option.</li> </ul> </li> <li>• Shows all subscribers connected to a specific CMTS device interface, or related to a specific CMTS device. <ul style="list-style-type: none"> <li>– To show all subscribers related to the vlink, use <b>--vlink-name=&lt;name&gt;</b>.</li> </ul> <p>Because each vlink represents one CMTS device interface, this command enables you to see all subscribers traveling from a specific CMTS device interface.</p> </li> <li>• Shows the bonding group if the cable modems are DOCSIS 3.0 modems.</li> <li>• Shows the channelID, all subscribers who are associated to this channelID, and the direction of the channel, when the DOCSIS 2.0 modem is assigned to a single primary channel. <ul style="list-style-type: none"> <li>– To show the channel ID and the direction of the channel, use <b>--channel-name=&lt;channel name&gt;</b>.</li> </ul> </li> </ul>	<p>This command retrieves subscribers whose giaddr attribute is one of the CMTS devices giaddr attributes.</p> <p>The result can be filtered by using:</p> <ul style="list-style-type: none"> <li>• Prefix (first use only)</li> <li>• Vlink-id (first use only)</li> <li>• Direction</li> </ul>
--remove-device	<p>Removes a dynamic device from the VLM.</p> <p>To specify the CMTS device, use the <b>-d &lt;device name&gt;</b> option.</p>	<p>After the device is removed, VLM deletes all virtual links related to the device from the SCE. The subscribers of the affected device are logged in with default vlink mappings.</p>

Table 5-1 p3vlink Operations (continued)

Operation	Description	Notes
<b>--enable-logging -d</b> <device name>	Enables login on a specific device. To specify the CMTS device, use the <b>-d</b> <device name> option.	This command sets the log_all flag related to the device to true.  During load-config and SM restart operations, the value of log_all is reset to the value defined in the configuration file.
<b>--disable-logging -d</b> <device name>	Disables login on a specific device. To specify the CMTS device, use the <b>-d</b> <device name> option.	This command sets the log_all flag related to the device to false.  During load-config and SM restart operations, the value of log_all is reset to the value defined in the configuration file.
<b>--import-cmts-details</b> <b>--file-name=</b> <Complete path of the file>	Imports the CMTS credentials from a file.	This command imports the device credentials to VLM.  The device credentials are imported from the file mentioned in the --file-name. After importing, creates a CSV file in encrypted format.

Table 5-2 p3vlink Options

SM Option	Abbreviation	Description
<b>--ne-name=NAME</b>	<b>-n</b> NAME	Specifies the logical name of the SCE platform or CM.
<b>--device=DEVICE</b>	<b>-d</b> DEVICE	Specifies the logical name of the CMTS device.
<b>--direction=up/down</b>	—	Specifies the direction of the virtual link.
<b>--prefix=vlink prefix</b>	—	Specifies the virtual link prefix.
<b>--vlink-name=vlink name</b>	—	Specifies the virtual link name.
<b>--vlink-id</b>	—	Specifies the index of the virtual link.
<b>--detail</b>	—	(Optional) To display additional information, use this option with the <b>--show-device</b> operation.
<b>--channel-name=NAME</b>	—	Specifies the channel name. To list the subscribers on a specific channel, use this option with the <b>--show-subs</b> operation.
<b>--file-name=</b> <Complete path of the file>	—	Specifies the complete path of the input file to import the device credentials, Used with <b>--import-cmts-details</b> operation.

## p3vlink Utility Examples

To show the CMTS device general configuration, CMTS device list, and CMTS device information:

```
p3vlink --show
```

```
General data:
```

```
-----
```

```
Start:                               Yes
Monitor Every:                        60 minutes
BW Up Factor                          95
BW Down Factor                        95
Next query operation:                 Wed Nov 05 08:40:33 IST 2008
Next ip removal operation:            Wed Nov 12 10:40:11 IST 2008
Enable Device Learning:               true
Upstream Global Controllers:          None
Downstream Global Controllers:        None
```

```
Device list
```

```
-----
```

```
1) Name: device, Host Name: Paris, Type Static, Query state: Completed, Last
successful query: Wed Nov 05 08:39:35 IST 2008
```

```
Command terminated successfully
```

```
>
```

To show the general configuration of a specified CMTS device:

```
p3vlink --show-device -d CMTS1 --detail
```

```
Name:                                CMTS1
Host Name:                            Paris
IP:                                    192.0.2.10
Type:                                  Static
SCE Related:                          sce0
Upstream factor:                       95
Downstream factor:                     95
Last success Query:                   Thu Jun 19 17:54:48 IDT 2008
Last Query Attempt:                   Thu Jun 19 17:54:48 IDT 2008
Last Query Status:                     Completed
Sync state with SCE:                   done
Sync state with CM:                    done
Giaddr List:                           127.0.0.1
Upstream Global Controllers:            None
Downstream Global Controllers:          <GC Name>=<GC Value>,<GC Name>=<GC Value>...
isLogAll:                               true
Num of up interfaces:                   6
Num of down interfaces:                  2
```

```
VLink Information:
```

```
1) Name: CMTS1_Cmts0/0-upstream2, Vlink Id: 1, Direction UP, PIR 5000 kbps.
2) Name: CMTS1_Cmts0/0-downstream1, Vlink Id:1, Direction DOWN, PIR 10000 kbps
   Channel Name: <vlink Name>-W, index <value>, PIR <value> kpbs, CIR <value> kpbs
   Channel Name: <vlink Name>-L<channel index>, index <value>, PIR <value> kpbs, CIR
<value> kpbs
3) Name: CMTS1_Cmts0/0-upstream3, Vlink Id:2, Direction UP, PIR 10000 kbps.
4) Name: CMTS1_Cmts1/0-downstream1, Vlink Id:2, Direction DOWN, PIR 20000 kbps.
5) Name: CMTS1_Cmts0/0-upstream1, Vlink Id:3, Direction UP, PIR 10000 kbps.
6) Name: CMTS1_Cmts1/0-upstream2, Vlink Id:4, Direction UP, PIR 20000 kbps.
7) Name: CMTS1_Cmts1/0-upstream3, Vlink Id:5, Direction UP, PIR 20000 kbps.
8) Name: CMTS1_Cmts1/0-upstream1, Vlink Id:6, Direction UP, PIR 20000 kbps.
```

```
Command terminated successfully
```

&gt;

The output of this command includes these four information elements:

- Num of up interfaces—Summarizes the total number of upstream virtual links related to this CMTS device. *Unknown* indicates that the VLM was not able to communicate with the CMTS device.
- Num of down interfaces—Summarizes the total number of downstream virtual links related to this CMTS device. *Unknown* indicates that the VLM was not able to communicate with the CMTS device.
- Sync state with SCE:
  - Done—The SCE is fully synchronized with CMTS device information. When working in cascade mode, both the active and standby SCEs are synchronized with CMTS device data.
  - Not-done—The SCE (or one of the SCEs in cascade mode) is not synchronized with all CMTS device data. Use the **p3vlink --resync -n <sce which manages the device>** command to perform the synchronization operation.
  - Sync-in-process—When VLM detects configuration changes, the change needs to be sent to the SCE. During the update process, the VLM changes the sync state to Sync-in-process. For successful updates, the SCE sync state is set to Done, else the value is set to Not-Done.
- Sync state with Collection Manager:
  - Done—The Collection Manager is fully synchronized with CMTS device information.
  - Not-done—The CM is not synchronized with all CMTS device data. Use the **p3vlink --resync -n <sce which manages the device>** command to perform the synchronization operation.
  - N/A—The SCE to which the CMTS device belongs, is not connected to any Collection Manager.
  - Sync-in-process – When VLM detects configuration changes, the change needs to be sent to the Collection Manager. During the update process, the VLM changes the sync state to Sync-in-process. For successful updates, SCE sync state is set to Done, else the value is set to Not-Done.
- Last Query Status:
  - Not started—Query operation for the device was not started since the last SM boot.
  - Completed—Last query was completed successfully.
  - Failure—Last query failed to complete.
  - Waiting for query—Query operation is in queue waiting for resources.
  - In-query—Device is in the process of a query operation.
  - Waiting for deletion—During the last query, if no giaddr was found, the system queues up the device for deletion. This is applicable only to dynamic devices.

To show all the virtual links for a specific network element (SCE):

```
p3vlink --show-vlinks -n sc0
```

```
device0_0_Cmts0/1-downstream1, vlink id=15, direction=DOWN
device0_0_Cmts0/1-upstream1, vlink id=8, direction=UP
device0_0_Cmts0/1-upstream2, vlink id=16, direction=DOWN
device0_1_Cmts1/1-downstream1, vlink id=11, direction=DOWN
device0_1_Cmts1/1-upstream1, vlink id=6, direction=UP
device0_1_Cmts1/1-upstream2, vlink id=12, direction=DOWN
device0_2_Cmts2/1-downstream1, vlink id=25, direction=DOWN
device0_2_Cmts2/1-upstream1, vlink id=13, direction=UP
device0_2_Cmts2/1-upstream2, vlink id=26, direction=DOWN
device0_3_Cmts3/1-downstream1, vlink id=13, direction=DOWN
device0_3_Cmts3/1-upstream1, vlink id=7, direction=UP
device0_3_Cmts3/1-upstream2, vlink id=14, direction=DOWN
device0_4_Cmts4/1-downstream1, vlink id=21, direction=DOWN
device0_4_Cmts4/1-upstream1, vlink id=11, direction=UP
device0_4_Cmts4/1-upstream2, vlink id=22, direction=DOWN
device0_5_Cmts5/1-downstream1, vlink id=1, direction=DOWN
device0_5_Cmts5/1-upstream1, vlink id=1, direction=UP
device0_5_Cmts5/1-upstream2, vlink id=2, direction=DOWN
device0_6_Cmts6/1-downstream1, vlink id=9, direction=DOWN
device0_6_Cmts6/1-upstream1, vlink id=5, direction=UP
device0_6_Cmts6/1-upstream2, vlink id=10, direction=DOWN
device1_0_Cmts7/1-downstream1, vlink id=3, direction=DOWN
device1_0_Cmts7/1-upstream1, vlink id=2, direction=UP
device1_0_Cmts7/1-upstream2, vlink id=4, direction=DOWN
device1_1_Cmts8/1-downstream1, vlink id=7, direction=DOWN
device1_1_Cmts8/1-upstream1, vlink id=4, direction=UP
device1_1_Cmts8/1-upstream2, vlink id=8, direction=DOWN
device1_2_Cmts9/1-downstream1, vlink id=27, direction=DOWN
device1_2_Cmts9/1-upstream1, vlink id=14, direction=UP
device1_2_Cmts9/1-upstream2, vlink id=28, direction=DOWN
device1_3_Cmts10/1-downstream1, vlink id=23, direction=DOWN
device1_3_Cmts10/1-upstream1, vlink id=12, direction=UP
device1_3_Cmts10/1-upstream2, vlink id=24, direction=DOWN
device1_4_Cmts11/1-downstream1, vlink id=19, direction=DOWN
device1_4_Cmts11/1-upstream1, vlink id=10, direction=UP
device1_4_Cmts11/1-upstream2, vlink id=20, direction=DOWN
device1_5_Cmts12/1-downstream1, vlink id=5, direction=DOWN
device1_5_Cmts12/1-upstream1, vlink id=3, direction=UP
device1_5_Cmts12/1-upstream2, vlink id=6, direction=DOWN
device1_6_Cmts13/1-downstream1, vlink id=17, direction=DOWN
device1_6_Cmts13/1-upstream1, vlink id=9, direction=UP
device1_6_Cmts13/1-upstream2, vlink id=18, direction=DOWN
Command terminated successfully
```

To show the vlink data of a specific link:

```
p3vlink --show-vlink-data --vlink-name=device_Cmts0/0-downstream1
```

```
VLink Name: device_Cmts0/0-downstream1
VLink Id: 1
Direction: downstream
SCE Name: sce0
Device Name: device
PIR: 200000000
```

Channels related to VLink

```
<name>-L, index <index>, PIR <value>, CIR <value>
<name>-W, index <index>, PIR <value>, CIR <value>
```

Related upstream virtual links -Lists all upstream interface related to the same MAC layer as the selected downstream interface.

```
device_Cmts0/0-upstream0
device_Cmts0/0-upstream1
device_Cmts0/0-upstream2
device_Cmts0/0-upstream3
```



#### Note

If more than one vlink has the same name, this command displays the information for all the vlinks.

To show the upstream and downstream vlink mappings that the virtual link manager learnt from all configured CMTSs:

```
p3vlink --show-vlink-mappings
```

```
IPDR Vlink Mapping Tables:
=====
```

Upstream Table:

```
{10.52.206.2_1054_1=191, 10.52.206.2_1109_2=88,
10.52.206.2_1077_4=196, 10.52.206.2_1031_1=99,
10.52.206.2_1019_4=43, 10.52.206.2_1047_1=9,
10.52.206.2_1093_4=97, 10.52.206.2_1018_2=158,
10.52.206.2_1080_2=73, 10.52.206.2_1042_4=126}
```

Downstream Table:

```
{10.52.206.2_1110_185=9, 10.52.206.2_1106_169=3,
10.52.206.2_1093_153=7, 10.52.206.2_1095_161=5,
10.52.206.2_1092_149=1, 10.52.206.2_1108_177=6,
10.52.206.2_1107_173=2, 10.52.206.2_1094_157=8,
10.52.206.2_1109_181=4}
```

Command terminated successfully

To show the subscribers using virtual links:

- Use the **p3subsdb** command to list all the subscribers:

```
p3subsdb --show-all
```

```
lynn_jones
Command terminated successfully
```

- Use the **p3subs** command to show the virtual links of a particular subscriber:

```
p3subs --show -s lynn_jones
```

```
Name: lynn_jones
```



```

Domain:          subscribers
Mappings:
    IP: 1.1.1.13/32
Properties:
    downVlinkId=7   Name=device1_1_Cmts8/1-downstream1
    upVlinkId=4     Name=device1_1_Cmts8/1-upstream1
Custom Properties:
    giaddr=1.1.1.1
Command terminated successfully

```

- Use the **p3vlink** command to show the subscribers that are associated with a particular CMTS device:

```
p3vlink --show-subs -d device1_1
```

```

Subscribers related to device: device1_1 vlink-id: 4, giaddr: 1.1.1.1, direction UP
lynn_jones
Subscribers related to device: device1_1 vlink-id: 7, giaddr: 1.1.1.1, direction DOWN
lynn_jones
Command terminated successfully

```

- Use the **p3vlink** command to show the subscribers that are associated with a specific CMTS device:

```
p3vlink --show-subs -d Test0 --direction=Down --vlink-id=23
```

```

Subscribers related to device: Test0 vlink-id: 23, giaddr: 24.191.128.17, direction
DOWN0101010101060101010107
Command terminated successfully

```

- Use the **p3vlink** command to show the subscribers that are associated with a specific Vlink:

```
p3vlink --show-subs --vlink-name test1_Cmts0/0-upstream2
```

```

Subscribers related to device: test1 vlink-id: 5, giaddr: 10.78.233.149, direction UP
010101010101
1 subscriber was found
Command terminated successfully

```

- Use the **p3vlink** command to show the subscribers that are associated to a channel name:

```
p3subs --show -s sub1
```

```

Name:          sub1
Domain:        subscribers
Properties:
    downVlinkId=11   Name=local_Modular-Cable1/0/0:1-L194
    upVlinkId=11     Name=local_Cable7/0/2-upstream2
Custom Properties:
    giaddr=10.78.233.233
Command terminated successfully

```

```
p3vlink --show-subs --channel-name=local_Cable7/0/2-upstream2
```

```

Subscribers related to device: local vlink-id: 11, giaddr: 10.78.233.233, direction UP
sub1
1 subscriber was found
Command terminated successfully

```

```
p3vlink --show-subs --channel-name=local_Modular-Cable1/0/0:1-L194
```

```

Subscribers related to device: local vlink-id: 11, giaddr: 10.78.233.233, direction
DOWN
sub1

```

```
1 subscriber was found  
Command terminated successfully
```

# Monitoring Virtual Links Using the SCE CLI

The SCE provides CLI commands to monitor the virtual links in the solution.

Table 5-3 lists the virtual links CLI commands.

**Table 5-3** Virtual Links Commands

Commands	Description
Show Commands	
<code>show interface LineCard 0 virtual-links [all   changed   different-from-template]</code>	<p>Displays:</p> <ul style="list-style-type: none"> <li>All the defined virtual links, when you use the <b>all</b> option.</li> <li>Virtual links whose configurations have changed from the template, when you use the <b>changed</b> option.</li> <li>Virtual links configurations that differ from the template, when you use the <b>different-from-template</b> option.</li> </ul>
<code>show interface LineCard 0 virtual-links [status   mapping]</code>	<p>Displays the status of virtual links and updates the log with virtual links mapping.</p> <p>To display the status of the virtual link, use the <b>status</b> option.</p> <p>To update the log with virtual link mapping, use the <b>mapping</b> option.</p> <p>This is a debug command.</p>
<code>show interface LineCard 0 virtual-links template [direction [upstream   downstream]]</code>	<p>Displays the virtual link template of both upstream and downstream</p> <p>(Optional) To show only one direction, use the [<b>direction [upstream   downstream]</b>] option.</p>
<code>show interface LineCard 0 virtual-links default direction [upstream   downstream] [counter   agc-mapping]</code>	<p>Displays the default virtual link.</p> <p>(Optional) To specify the agc-mapping between virtual link and the actual agc indexes, use the <b>agc-mapping</b> option.</p> <p>(Optional) To specify the counter along with agc-mapping, enforce rate and actual rate, use the <b>counter</b> option.</p>
<code>show interface LineCard 0 virtual-links [name &lt;name&gt;   index &lt;index&gt;] direction [upstream   downstream] [counter   agc-mapping]</code>	<p>Displays the virtual link by name or index.</p> <p>To display the name or index of the virtual link, use the [<b>name &lt;name&gt;   index &lt;index&gt;</b>] option.</p> <p>(Optional) To specify the agc-mapping between virtual link and the actual agc indexes, use the <b>agc-mapping</b> option.</p> <p>(Optional) To specify the counter along with agc-mapping, enforce rate and actual rate, use the <b>counter</b> option.</p>
Add Commands	
<code>virtual-links index &lt;index&gt; direction [upstream   downstream]</code>	<p>Adds a virtual link index.</p> <p>(Optional) To specify a direction, use the [<b>direction [upstream   downstream]</b>] option.</p>

Table 5-3 Virtual Links Commands (continued)

Commands	Description
<b>virtual-links index &lt;index&gt; name &lt;name&gt; direction [upstream   downstream]</b>	Adds a virtual link index and specifies a name. To specify a name for the channel, use the <b>name</b> option. (Optional) To specify a direction, use the [ <b>direction [upstream   downstream]</b> ] option.
Remove Commands	
<b>no virtual-links index &lt;index&gt; direction [upstream   downstream]</b>	Removes a virtual link associated with the specified index and direction. To specify the index, use the <b>&lt;index&gt;</b> option. To specify the direction, use the <b>direction</b> option.
<b>no virtual-links all direction [upstream   downstream]</b>	Removes all the virtual links.
Set Commands	
<b>virtual-links index &lt;index&gt; direction [upstream   downstream] gc &lt;offset&gt; set-PIR value &lt;value&gt;</b>	Sets the virtual link index PIR values by gc-offset and direction.
Reset Commands	
<b>virtual-links index &lt;index&gt; direction [upstream   downstream] gc &lt;offset&gt; reset-PIR</b>	Resets the virtual link index PIR value by gc template offset and direction to template values.

## virtual-links Command Examples

These examples show the output from the CLI virtual links commands:

```
SCE2000#> show interface Linecard 0 virtual-links template

Virtual Link enabled
Global Virtual link Global Controller, upstream:
  name = globalGC - pir: 8000000 - cir: 0 - al: 5
  name = globalGC1 - pir: 8000000 - cir: 0 - al: 5
Virtual link Global Controller, upstream Template hierarchic:
Total bandwidth limit in Virtual-Link:
  name = Virtual-Link Global Controller - pir: 8000000,8000000,8000000,8000000 - cir: 0
  - al: 5
  name = appGC - pir: 8000000,8000000,8000000,8000000 - cir: 0 - al: 5
Global Virtual link Global Controller, downstream:
  name = globalGC1 - pir: 8000000 - cir: 0 - al: 5
Virtual link Global Controller, downstream Template hierarchic:
Total bandwidth limit in Virtual-Link:
  name = Virtual-Link Global Controller - pir: 8000000,8000000,8000000,8000000 - cir: 0
  - al: 5
  name = appGC - pir: 8000000,8000000,8000000,8000000 - cir: 0 - al: 5
  name = appGC1 - pir: 8000000,8000000,8000000,8000000 - cir: 0 - al: 5
  name = appGC2 - pir: 8000000,8000000,8000000,8000000 - cir: 0 - al: 5

SCE2000#> show interface LineCard 0 virtual-links all
```

```
Virtual Link enabled
upstream Virtual-Link:
index=1, name=virtual link 1
index=2, name=virtual link 2
index=3, name=virtual link 3
downstream Virtual-Link:
index=1, name=virtual link 1
index=2, name=virtual link 2
index=3, name=virtual link 3
```

```
SCE2000#> show interface LineCard 0 virtual-links different-from-template
```

```
Virtual Link enabled
upstream Virtual-Link:
  virtual index=1, name=virtual link 1
    channel index=1, name=virtual channel 1, pir=99999, cir=99, al=9, agc index=3
    application index=1, name=appGC-1, pir=8000000, cir=0, al=5, agc index=2
  virtual index=2, name=virtual link 2
    channel index=2, name=virtual channel 2, pir=99999, cir=99, al=9, agc index=7
    application index=1, name=appGC-2, pir=8000000, cir=0, al=5, agc index=6
downstream Virtual-Link:
  virtual index=3, name=virtual link 3
    channel index=3, name=virtual channel 3, pir=99999, cir=99, al=9, agc index=15
    application index=1, name=appGC-3, pir=8000000, cir=0, al=5, agc index=12
    application index=2, name=appGC1-3, pir=8000000, cir=0, al=5, agc index=13
    application index=3, name=appGC2-3, pir=8000000, cir=0, al=5, agc index=14
```

```
SCE8000#> show interface LineCard 0 virtual-links index 1 direction upstream agc-mapping
```

```
Virtual Link enabled
upstream Virtual-Link:
  virtual index=1, name=virtual link 1
    channel index=1, name=virtual channel 1, pir=99999, cir=99, al=9, agc index=3
    application index=1, name=appGC-1, pir=8000000, cir=0, al=5, agc index=2
```

```
SCE8000#> show interface LineCard 0 virtual-links index 1 direction upstream counter
```

```
Virtual Link enabled
```

```
upstream Virtual-Link:
```

```
  virtual index=1, name=virtual link 1  
    channel index=1, name=virtual channel 1, pir=99999, cir=99, al=9, agc index=3,  
    enforce rate=99999, actual rate=0  
    application index=1, name=appGC-1, pir=8000000, cir=0, al=5, agc index=2, enforce  
    rate=8000000, actual rate=0
```

# Monitoring Virtual Links Using the Reporter

The Cisco SCA BB includes a Reporter tool that allows you to produce reports based on the traffic analysis performed by the SCE platform. The information is sent from the SCE platform and is stored in a database. The Reporter can query and retrieve information from the database and present the results in a comprehensive range of reports.

The Reporter includes the Virtual Links Monitoring group of report templates that allow you to view statistics of bandwidth or volume of traffic used by a virtual link. The reports are provided per service usage counter for the total volume used by the virtual link. The volume consumption can be displayed per service for the virtual link. The reports are provided per channel.

Each report can be filtered to focus on a virtual link ID, a virtual link name, a virtual link direction, or a combination of the virtual link identifiers.

The Virtual Links Monitoring group includes these report templates:

- VLink Bandwidth per Service—Shows the distribution of bandwidth among the different service usage counters defined in the system for all subscribers.
- VLink Aggregated Usage Volume per Service—Shows the total volume of traffic (upstream and downstream) for each service usage counter.
- VLink Bandwidth per Package—Shows the distribution of bandwidth among the different packages defined in the system for selected vlinks.
- VLink Hourly Usage Volume per Service—Shows the distribution of volume among the different service usage counters defined in the system, grouped by hour.
- VLink Daily Usage Volume per Service—Shows the distribution of volume among the different service usage counters defined in the system, grouped by day.
- Daily Peak BW for all VLinks—Shows the daily value of the maximum bandwidth (1-hour or 2-hour average) for all virtual links.
- Total Active Subscribers per VLink—Shows the number of active subscribers for a selected vlink.
- VLink Bandwidth per Channel—Shows the distribution of bandwidth among the different channels for selected vlinks.
- Top Subscribers per VLink—Shows a list of the top subscriber volume consumption in a specific hour or day for a selected Vlink.
- Average Bandwidth per Subscribers per VLink—Shows the average bandwidth for a specific subscriber for a selected vlink.
- Accumulated Bandwidth Distribution per VLink—Shows the accumulated bandwidth distribution for a selected vlink.

## Creating a New Report Instance Using Cisco Insight


For details on creating a new report instance using Cisco Insight, see the *Cisco Insight v2 User Guide*.

## Creating a New Report Instance Using SCA Reporter

To create a new report instance using the SCA Reporter, complete these steps:

- Step 1** Go to the SCA BB console. From the Tools menu, choose **Reporter**.  
The Reporter opens and the Templates tab appears.
- Step 2** In Templates view, expand the Virtual Links Monitoring group.
- Step 3** Right-click a report instance (for example, VLink Bandwidth per Service).  
A popup menu appears.
- Step 4** From the menu, choose **New**.  
The New Report Wizard dialog box appears (Figure 5-1), allowing you to configure the new report.

**Figure 5-1** New Report Wizard Dialog Box

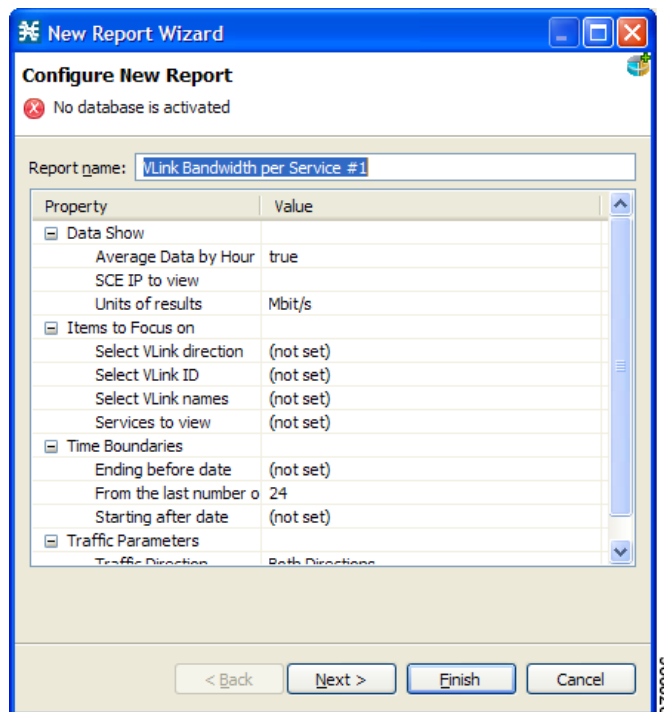

- Step 5** In the Report name field, enter the name of the report instance.  
The default report name is **VLink Bandwidth per Service #1**. (If you create another report instance from this report template, it is named **VLink Bandwidth per Service #2**, and so on. You can rename report instances.)



**Step 6** To create a report that focuses on a particular CMTS device:

- a. In the Select VLink names row, click the right column and click the **Browse** button that appears.
- b. Click the **Search** button.

In the search box, enter the name of the CMTS device with an asterisk (\*) before and after. For example, \*CMTS\_1\*.

All the virtual links that contain the string CMTS\_1 appear.

- c. Select all the results and click **OK**.

The report that focuses on the specified CMTS device is created.

---





## CHAPTER 6

# Troubleshooting the Remote Cable MSO Links Solution

---

Revised: July 24, 2012, OL-24162-06

## Introduction

This chapter describes several problem scenarios that you may encounter when using the solution. The problem scenarios and solutions are described under these sections:

- [Subscriber Complaints, page 6-2](#)
- [Inaccurate, Unavailable, or Missing Reports Information for a Specific CMTS Interface, page 6-6](#)
- [SCE Is Congested, But Connected CMTSs Are Not Congested, page 6-9](#)
- [Userlog Messages, page 6-12](#)

## Subscriber Complaints

To troubleshoot the cause of bad service to subscribers, consider these points:

- Congestion in the backbone network may cause congestion in subscriber traffic.
- Problem with the solution, such as assigning the incorrect policy to the subscriber, or an incorrect interface association, may exist.

To make sure that the problem is not with the SCE, perform these procedures:

### Verifying that the Correct Policy Is Enforced on a Specific Subscriber

**Step 1** Verify that the Subscriber Manager-SCE subscriber data is synchronized.

In the SCE, use the **show interface linecard 0 subscriber name <sub MAC>** command to verify that the upVlinkId and downVlinkId values are the same as in the **p3subs --show -s <sub MAC>** Subscriber Manager CLU output and that the subscriber package ID is as expected.

This example shows the output of the SCE show interface command:

```
SCE2000#>show interface LineCard 0 subscriber name lynn_jones

Subscriber 'lynn_jones' manager: SM
Subscriber 'lynn_jones' properties:
downVlinkId=10
monitor=0
new_classification_policy=0
packageId=0
QpLimit[0..17]=0*17,8
QpSet[0..17]=0*17,1
upVlinkId=10
.
.
.
```

This example shows the output of the Subscriber Manager show command:

```
>p3subs --show -s lynn_jones

Name:          lynn_jones
Domain:        subscribers
Mappings:
  IP: 5.101.5.129/32
Properties:
  downVlinkId=10   Name=dev0_9_if19-down
  upVlinkId=10    Name=dev0_9_if19-upstream0
Custom Properties:
  giaddr=5.101.254.105
Command terminated successfully
```

**Step 2** Verify that the Subscriber Manager-SCE virtual links data is synchronized.

Compare the output of the SCE **show interface linecard 0 virtual-links different-from-template** command with the Subscriber Manager **p3vlink --show-vlink-data --vlink-name <UpVlinkId/DownVlinkId Name>** command to make sure that the PIR configuration is correct.

**Note**

The SCE PIR value is in kilobits. You can calculate the VLM value by performing a multiplication with the relevant CMTS device factor as defined in the vlink.cfg configuration file. The CMTS device factor value appears in the output of the Subscriber Manager CLU **p3vlink --show-device -d <device-name>**.

The following example shows the output of the SCE show interface linecard command:

```
SCE2000#> show interface LineCard 0 virtual-links different-from-template

Virtual Link enabled
upstream Virtual-Link:
  virtual index=1, name=virtual link 1
    channel index=1, name=virtual channel 1, pir=99999, cir=99, al=9, agc index=3
    application index=1, name=appGC-1, pir=8000000, cir=0, al=5, agc index=2
  virtual index=2, name=virtual link 2
    channel index=2, name=virtual channel 2, pir=99999, cir=99, al=9, agc index=7
    application index=1, name=appGC-2, pir=8000000, cir=0, al=5, agc index=6
downstream Virtual-Link:
  virtual index=3, name=virtual link 3
    channel index=3, name=virtual channel 3, pir=99999, cir=99, al=9, agc index=15
    application index=1, name=appGC-3, pir=8000000, cir=0, al=5, agc index=12
    application index=2, name=appGC1-3, pir=8000000, cir=0, al=5, agc index=13
    application index=3, name=appGC2-3, pir=8000000, cir=0, al=5, agc index=14
```

This example shows the output of the **p3vlink --show-vlink-data** Subscriber Manager command:

```
p3vlink --show-vlink-data --vlink-name=device_Cmts0/0-downstream1
```

```
VLink Name: device_Cmts0/0-downstream1
VLink Id: 1
Direction: downstream
SCE Name: sce0
Device Name: device
PIR: 200000000
```

Channels related to VLink

```
<name>-L, index <index>, PIR <value>, CIR <value>
<name>-W, index <index>, PIR <value>, CIR <value>
```

Related upstream virtual links -Lists all upstream interface related to the same MAC layer as the selected downstream interface.

```
device_Cmts0/0-upstream0
device_Cmts0/0-upstream1
device_Cmts0/0-upstream2
device_Cmts0/0-upstream3
```

Command terminated successfully

This example shows the output of the **p3vlink --show-device** Subscriber Manager command:

```
p3vlink --show-device -d CMTS1 --detail
```

```
Name: CMTS1
Host Name: Paris
IP: 192.0.2.10
Type: Static
SCE Related: sce0
Upstream factor: 95
Downstream factor: 95
Last success Query: Thu Jun 19 17:54:48 IDT 2008
Last Query Attempt: Thu Jun 19 17:54:48 IDT 2008
Last Query Status: Completed
Sync state with SCE: done
Sync state with CM: done
Giaddr List: 127.0.0.1
Upstream Global Controllers: None
Downstream Global Controllers: <GC Name>=<GC Value>,<GC Name>=<GC Value>...
isLogAll: true
Num of up interfaces: 6
Num of down interfaces: 2
```

VLink Information:

- 1) Name: CMTS1\_Cmts0/0-upstream2, Vlink Id: 1, Direction UP, PIR 5000 kbps.
- 2) Name: CMTS1\_Cmts0/0-downstream1, Vlink Id:1, Direction DOWN, PIR 10000 kbps  
Channel Name: <vlink Name>-W, index <value>, PIR <value> kpbs, CIR <value> kpbs  
Channel Name: <vlink Name>-L<channel index>, index <value>, PIR <value> kpbs, CIR <value> kpbs
- 3) Name: CMTS1\_Cmts0/0-upstream3, Vlink Id:2, Direction UP, PIR 10000 kbps.
- 4) Name: CMTS1\_Cmts1/0-downstream1, Vlink Id:2, Direction DOWN, PIR 20000 kbps.
- 5) Name: CMTS1\_Cmts0/0-upstream1, Vlink Id:3, Direction UP, PIR 10000 kbps.
- 6) Name: CMTS1\_Cmts1/0-upstream2, Vlink Id:4, Direction UP, PIR 20000 kbps.
- 7) Name: CMTS1\_Cmts1/0-upstream3, Vlink Id:5, Direction UP, PIR 20000 kbps.
- 8) Name: CMTS1\_Cmts1/0-upstream1, Vlink Id:6, Direction UP, PIR 20000 kbps.

Command terminated successfully

To enforce the correct policy on a specific subscriber:

a. Monitor all CMTS device interfaces by using the Subscriber Manager **p3vlink --show-device -d NAME [--detail]** command.

b. Verify that in the output of the CLU Sync state with SCE is Done.

If Sync state with SCE is Not Done:

- View the connection state between the Subscriber Manager and the SCE by using the Subscriber Manager CLU **p3net --show -n SCE\_NAME**.
- Synchronize the SCE with the CMTS device configuration by using the Subscriber Manager CLU **p3vlink --resync -n SCE\_NAME**.

**Step 3** Verify that the VLM-CMTS data is synchronized.

Compare the virtual link names from the Subscriber Manager CLU **p3subs --show -s <sub MAC>** output with the CMTS configuration to verify that the subscriber is assigned to the correct CMTS and CMTS interface.



**Note**

The virtual link name structure is <CTMS\_NAME>\_<INTERFACE\_DESCRIPTION> and is obtained from the configuration file and the SNMP ifTable data.

Ensure that the PIR value is the same as the CMTS interface speed (as taken from the SNMP ifTable data) by comparing the virtual link PIR values from the Subscriber Manager CLU **p3vlink --show-vlink-data --vlink-name <UpVlinkId/DownVlinkId Name>** with the CMTS configuration.

To ensure that the PIR value is the same as the CMTS interface speed:

- a. Use **p3vlink --show-device -d <DEVICE\_NAME>** to verify that:
  - The monitor period is not 0.
  - The last query completed successfully. Check the user log for reasons for failure.
- b. Use **p3vlink --start-query -d <DEVICE\_NAME>** to force a start query on a specific CMTS device.

## Verifying That the Distribution of Subscribers to the Virtual Link Is Correct

**Step 1** Obtain the VLM name for a specific interface by using the **p3subs --show -s <sub MAC>** command, or build the interface name as <CTMS\_NAME>\_<INTERFACE\_DESCRIPTION>.

**Step 2** Retrieve the list of subscribers related to a specific interface and compare it with the CMTS data using the **p3vlink --show-subs --vlink-name= <UpVlinkId/DownVlinkId Name>** command:

```
p3vlink --show-subs --vlink-name test1_Cmts0/0-upstream2
```

```
Subscribers related to device: test1 vlink-id: 5, giaddr: 10.78.233.149, direction UP
010101010101
1 subscriber was found
Command terminated successfully
```

# Inaccurate, Unavailable, or Missing Reports Information for a Specific CMTS Interface

The SCA Reporter can generate per interface consumption reports that can be used to monitor the solution. The VLM updates the reporter with the interface ID to name data and the SCE sends the raw data with the interface ID (virtual link).

A problem can stem from the VLM update or from the SCE RDRs.

Two possible solutions include:

- Verifying that the SCE sends virtual link update RDRs (VLUR) to the Collection Manager. For information, see the *Cisco SCE8000 10GBE Software Configuration Guide* or the *Cisco SCE8000 GBE Software Configuration Guide*.
- Verifying that the VLM updates the Collection Manager.

## Verifying That the VLM Updates the Collection Manager

**Step 1** Verify the connectivity between the Subscriber Manager and the Collection Manager.

View the configured network elements and verify that the Collection Manager exists by using the Subscriber Manager CLU **p3net --show-all --detail** command.

View the Subscriber Manager-Collection Manager connection properties and state by using the **p3net --show -n CM\_NAME** command, and then verify that the SCE list property value contains the SCE to which the CMTS is connected.

To fix the communication problems confirm that the Subscriber Manager configuration file contains the relevant Collection Manager information:

- Check that a Collection Manager Section exists and points to the SCE section.
- Validate the Collection Manager IP and port.
- Check that the SCE is related to the Collection Manager.

See the “Information About Communication Failures” section in the “Subscriber Manager Overview” chapter of *Cisco Service Control Management Suite Subscriber Manager User Guide*.

**Step 2** Verify that the VLM and Collection Manager data is synchronized.

Verify that the synchronization state with Collection Manager is set to done using the CLU **p3vlink --show-device -d <CMTS\_NAME>** command. To view a list of configured virtual links, use the Collection Manager CLU **update\_vlinks.sh --sce=<SCE\_IP> --show** command.

To fix this problem:

- a. Force the VLM and the Collection Manager to synchronize by using the **p3vlink --resync -n <CM\_NAME>** command.
- b. For manual configuration, see *Cisco Service Control Management Suite Collection Manager User Guide* to add virtual links by using the **update\_vlinks.sh --sce=<SCE\_IP> --file=vlinks.csv** command.



This example shows the output of the **p3net --show -n** command:

```
>p3net --show -n cm0
```

```
Network Element Information:
=====
Name:                cm0
Host:                10.56.197.231
Ip:                 10.56.197.231
Port:               14375
Status:             Connection ready
Type:               Collection Manager
SCE List:           sce0
Synchronization Status: Not-done(100% failures)
Redundancy Status: Standalone
Quarantine Status:  ok
Command terminated successfully
```

This example shows the output of the **p3vlink --show-device -d** command:

```
>p3vlink --show-device -d test1
```

```
Device Name:                test1
Host Name:                  singleSimpleDevices
IP:                         10.78.233.149
Type:                       Static
SCE Related:                 sce1
Upstream factor:            95
Downstream factor:          95
Last success Query:         Fri Feb 19 14:29:11 IST 2010
Last Query Attempt:         Fri Feb 19 14:29:11 IST 2010
Last Query Status:          Completed
Sync state with SCE:        Not-done
Sync state with CM:         N/A
Giaddr List:                10.78.233.149;
Upstream Global Controllers: None
Downstream Global Controllers: None
isLogAll:                   true
Num of up interfaces:        8
Num of down interfaces:      2
Command terminated successfully
```

This example shows the output of the **update\_vlinks.sh** script:

```
./update_vlinks.sh --sce=10.56.197.232 --show
```

```
.
.
.
TIME_STAMP |          SE_IP |          VLINK_ID |  VLINK_DIRECTION |
VLINK_NAME |
-----+-----+-----+-----+-----
--+
.
.
.
2008-12-17 | 10.56.197.232 |          10 |          0 |
dev0_9_if19-upstream0 |
2008-12-17 | 10.56.197.232 |          10 |          1 |
dev0_9_if19-down |
.
.
.
```

---

# SCE Is Congested, But Connected CMTSs Are Not Congested

If the virtual link assignment is incorrect or false subscriber login operations are not handled by the correct virtual link controller, virtual links can become congested. To resolve this issue, you must confirm that there are no subscribers associated with the virtual link and also verify that the distribution of subscribers to the virtual link is as expected.

To verify that the distribution of subscribers to the virtual link is as expected, see the [“Verifying That the Distribution of Subscribers to the Virtual Link Is Correct”](#) section on page 6-5.

## Verifying That No Subscriber Is Associated with the Default Virtual Link

**Step 1** Use the SCE **show interface LineCard 0 subscriber property <upVlinkId/downVlinkId> equals 0** command to ensure that there are no subscribers associated with the default virtual link.

Subscribers in the SCE can have a virtual link ID set to 0 in several cases:

- If the giaddr list is learned automatically, a few subscribers may have this policy if they performed the first login from this giaddr. In this case, compare the results with the Subscriber Manager database.
- If a specific interface or CMTS is removed from the VLM, at some point all the subscribers associated with this interface or CMTS are set to use the default virtual link.
- No match exists in the DHCP Sniffer LEG mapping table and the LEG is configured to log in a subscriber with the default virtual link.
- If the interfaces are shut down and followed by a device query. In this case, all subscribers or cable modems associated to the interfaces that are shut down are set to use the default Vlink ID. These subscribers or cable modems are added to the primary queue of the SNMP BG process to identify the new Vlink associations. After the primary or retry queue completes its query, the subscribers get new Vlink associations.
- If a CMTS is removed from the Subscriber Manager and followed by a device query. In this case, all subscribers or cable modems associated to the removed CMTS are set to use the default Vlink ID. As the CMTS is already removed, no SNMP BG query will be performed for these subscribers.
- If a CMTS is moved from one SCE to another SCE. In this case, all subscribers or cable modems that are associated to the interfaces of the CMTS are set to use the default Vlink ID. As the CMTS is already moved to another SCE, no SNMP BG query will be performed for these subscribers. After the IPDR message is received, these subscribers will be added to the primary queue of the SNMP BG process.

The following example shows the output of the **show interface LineCard 0 subscriber property upVlinkId equals 0** command:

```
SCE2000#>show interface LineCard 0 subscriber property upVlinkId equals 0
N/A
000004650001
000004650002
000004650003
000004650004
000004650005
000004650006
000004650007
000004650008
000004650009
00000465000A
```

## ■ SCE Is Congested, But Connected CMTSS Are Not Congested

```
00000465006F
000004650070
000004650071
000004650072
000004650073
000004650074
000004650075
000004650076
000004650077
000004650078
0000046500DD
0000046500DE
0000046500DF
```

This example shows the output of the `p3dhcpsniff --show-policy --policy=upVLinkId --detail` command:

```
>p3dhcpsniff --show-policy --policy=upVLinkId --detail
```

```
Policy Name: upVLinkId
=====
separator:_
use default: false
default value: 0
allow no package: true
concat option:giaddr,
concat option:82:1,
concat option type: integer,binary
log success: true
log default success: false
Number of mappings: 400
```

```
5.101.254.100_00010000=9
5.101.254.100_00010003=10
5.101.254.100_80010000=9
5.101.254.100_80010003=10
5.101.254.101_00010000=9
5.101.254.101_00010003=10
5.101.254.101_80010000=9
5.101.254.101_80010003=10
5.101.254.102_00010000=9
5.101.254.102_00010003=10
5.101.254.102_80010000=9
5.101.254.102_80010003=10
5.101.254.103_00010000=9
5.101.254.103_00010003=10
5.101.254.103_80010000=9
5.101.254.103_80010003=10
5.101.254.104_00010000=9
5.101.254.104_00010003=10
5.101.254.104_80010000=9
5.101.254.104_80010003=10
5.101.254.105_00010000=9
5.101.254.105_00010003=10
5.101.254.105_80010000=9
5.101.254.105_80010003=10
5.101.254.106_00010000=9
5.101.254.106_00010003=10
5.101.254.106_80010000=9
```

---

# Userlog Messages

The messages that are written to the userlog are categorized based on their severity as:

- [Userlog Error Messages, page 6-12](#)
- [Userlog Warning Messages, page 6-13](#)
- [Userlog Information Messages, page 6-15](#)

These are the preconditions of the messages:

- None—Messages are sent irrespective of the value set in the config file.
- General.log\_all—Messages are sent only if the log\_all flag in the general section of the vlink.cfg file is set to true.
- Device.log\_all—Messages are sent only if the log\_all flag in the device section is set to true.

## Userlog Error Messages

[Table 6-1](#) lists the error messages that can be written to the userlog.

**Table 6-1** Userlog Error Messages

Message	Description	Precondition
Device {0} Error: Speed value {1} cannot be translated to int number.	The SNMP interface provides a non-integer value for the if speed.	None
Device {2}: Cannot create query factory class {0} from jar {1}: Error {3}	Cannot instantiate the class related to the device and responsible for the query operation.	None
Failed to send vlink message to SCE {0}	An error occurred when trying to update the SCE with vlinks. The error is specified in the umlog.	None
Failed to update CM {0} with configuration related to SCE {1}	An error occurred when trying to update the Collection Manager. The error message is specified in the umlog.	None
Clearing {0} vlink information because of the following error:\n System detected reduction in max valid vlink index in SCE <scename>, valid vlink index was '<maxVlinkIdInDb>' and it was decreased to <maxValidVlinkIndexInSce>	The VLM deleted all vlinks related to a specific SCE, because the vlink max valid index was reduced.	None
System detected reduction in max valid vlink index in SCE {0} valid vlink index was '{1}' and it was decreased to {2}	The VLM detected that the SCE max valid vlink index was reduced.	None
Failed to allocate virtual link index for interface {0} because of lack of vlink {upstream/downstream} resources in SE {name}	SCE free vlink indexes are no longer available; abort the vlink creation.	None
SCE {0}, Failed to set pir {1}, to vlink {2}, with vlink id {3}	The SCE was unable to set the PIR value on the GC. This can occur if the PIR value exceeds the MAX PIR value in the SCE.	None

**Table 6-1** Userlog Error Messages (continued)

Message	Description	Precondition
Failed to set Host Name <name> to device <DeviceName_A> since it is already occupied by device < DeviceName_B>.	Host name (MIB .1.3.6.1.2.1.1.5.0) duplication, verify that DeviceName_A has different Host Name, remove DeviceName_A, and add it again.	None
SNMP SysName {0} is illegal value for static device {1}, expecting to get {2} value.	Found unexpected sysName for static device query failure.  IP related to static device cannot be moved to other device, IP returns an unexpected sysName value (null/different than current), query operation fails.  Work Around:  Set the sysName related to the IP to the expected one and start query on the device by using <b>p3vlink -start-query</b> CLU command.  If the device IP changes, update the configuration file, load config and restart the query on the device by using the <b>p3vlink -start-query</b> CLU command.	None
Failed to communicate with device {0}, using its giaddr list {1}, number of retries={2}, timeout between retries={3} ms	Device is not responsive to the VLM using its giaddr list. Check physical connection to the device.	None
Failure in Init process; error in LEG synchronization: {0}	The VLM has a failure in the boot, vlink mapping table is not created properly, and needs to provide a support file.	None
Failure in Init process; failed to synchronize LEG with all mappings on {0} minutes	The VLM has a failure in the boot, vlink mapping table is not created properly, and needs to provide a support file.	None

## Userlog Warning Messages

Table 6-2 lists the warning messages that can be written to the userlog.

**Table 6-2** Userlog Warning Messages

Message	Description	Precondition
VLM does not have valid RPC connection to SCE {0}, aborting VLink updates in SCE.	This message is sent when the VLM tries to update the SCE with vlink information but the RPC connection is missing.	None
Starting up VLM Solution	—	None
VLM Solution is stopped, going to clear all vlink information.	—	None
System detected change in max valid vlink index in SCE '{0}', valid vlink index is increased from {1} to {2}	The VLM detected that the SCE max valid vlink index was increased.	None

Table 6-2 Userlog Warning Messages (continued)

Message	Description	Precondition
giaddr value duplication; both devices {0} and {1} are having the same ip definition {2}.	The same IP Address is assigned to two different devices.  The VLM assigns the IP to the latest device.	None
PIR size of {0} kbps is more than SCE {1} max bw size, setting vlink {2} with max sce PIR value: {3}	The device interface bandwidth is higher than the maximum bandwidth of the SCE, the VLM sets the MAX SCE bandwidth value instead.	none
SCE {0} does not support vlink functionality, aborting VLink updates in SCE	VLM tries to send message to SCE, RPC connection is available PQI is installed but VLM is disabled.  To recover from the failure, download the policy that enables Vlink support and perform VLM synchronization on the SCE.	None
VLM did not find any installed application in SCE {0}	VLM tries to send message to SCE, RPC connection is available but PQI is missing in the SCE or SCEs in cascade.  To recover from the failure, install PQI and download the policy that supports Vlink. Perform the VLM synchronization by using the <b>p3vlink –resynch operation/</b> .	None
Connection interrupts to SCE {0} while trying to download VLM data.	VLM tries to send message to SCE, RPC connection is not available.  Perform SM-SCE disconnection methodology.	None
Failed to set Host Name {0} to device {1} since it is occupied by device {2}	Failed to set hostname to a nonexisting device.  If the device is a static device, send the support file to the tech support.  If the device is dynamic, check if the device was previously deleted by the CLU command or by dynamic giaddr removal procedure.	None
Failed to create CommunityTarget to IP <IP Address>	If VLM is unable to create an SNMP session to the IP address, send the support file to Cisco support.	None
Failed to read sysName related to ip:port {0}, , number of retries={1}, timeout between retries={2} ms	VLM failed to get the sys name MIB value related to IP Address.  Validate that sysName value is set.	None
There are no giaddr related to device {0}, VLM is going to remove it from the system	VLM removes the dynamic device that does not have any giaddr related to it.	None
VLM is disabled or not supported in SCE {0}	Ensure that relevant PQI is installed in the SCE.  Ensure that the policy with vlink enabled is set in the SCE.	None
IP {0} Collision detected between Device {1} to the Device {2}, Deleting device {3} and moving its IP data to {4}.	—	None



**Table 6-2** Userlog Warning Messages (continued)

Message	Description	Precondition
Collision detected between Device {0} to the Device {1}, assigning IP {2} to device {3}.	—	None
IP {0} found in device {1} collide with main ip address related to Static Device {2}, operation aborted.	—	None

## Userlog Information Messages

Table 6-3 lists the information messages that can be written to the userlog.

**Table 6-3** Userlog Information Messages

Message	Description	Precondition
Device {0} was added to VLM	—	None
SCE {0} was added to VLM	—	None
SCE {0} was removed from VLM	—	None
<SCE Name> : Max valid vlink index is set to <value>	This value is read from the SCE. If the SCE is not available, the system uses the default value (1023).	General.log_all = true or Device.log_all = true
Add device to VLM {name} up factor={1} down factor={2} aliases={3}	Indicates that a new device was added to the VLM database.  The umlog contains the giaddr information.	Device.log_all = true
Create vlink {name} with id {1}, on device {name}	Adds vlink to the VLM.  The umlog contains the database internal data.	Device.log_all = true
delete vlink {name} with id {1}, direction-{2}, on device {name}	Removes vlink from the VLM.  The umlog contains the database internal data.	Device.log_all = true
Delete device {name}	Deletes device from the repository database.	Device.log_all = true
VLM device to remove device {0} since it does not have any giaddr.	The VLM automatically removes the Device {0} because all its giaddr were being removed by the aging mechanism.	None
Virtual Link mappings are missing for subscriber <subscriber_name>, login operation is being delayed, LEG is querying for mappings related to giaddr <ip value>.	While processing DHCP RDR, SCE DHCP SNIFFER detects that Mappings to up/down vlink id are missing.  The RDR message is stored in a queue, and the query operation is initiated.	logAll = true Or Print message every 100 occurrences
Virtual Link mappings are missing for subscriber <subscriber_name>, continue login operation with no mappings.	Perform login operation even if mappings are not found.  The VLM query on the device is complete before the message is generated.	logAll = true Or Print message every 100 occurrences

Table 6-3 Userlog Information Messages (continued)

Message	Description	Precondition
Blocking operation for mac <mac id> since vlink policy is still not set for giaddr <IP value>	If the LEG detects that policy mappings are not synchronized with the device, the login operation is blocked. After the completion of device query, the login operations continue.	logAll = true Or Print message every 100 occurrences
Device {0} changed its IP to {1}	The dynamic device changes its IP when: <ul style="list-style-type: none"> <li>• Current IP is not responsive.</li> <li>• <b>sysName</b> related to the IP is different from the one defined in the device.</li> </ul>	None
Giaddr {0} which was related to device {1} found out to be related to device {2}, VLM starts query on this device	A giaddr which was related to device {1}, is currently related to another device, system tries to query this device.	None
Device {0} was removed	Indicates that a device was removed from the VLM.	None
VLM detected new dynamic device: Device {0} is related to SCE {1}	Creates a dynamic device.	None
Dynamic Device Creation feature is being enabled	The VLM detects configuration file with Dynamic Device Configuration feature enabled.	None
Dynamic Device Creation feature is being disabled.	The VLM detects configuration file with Dynamic Device Configuration feature disabled.	None
IP Collision between Static Device {0} to the Dynamic Device {1}, The Dynamic device is replaced by the Static device.	—	None