



# Configuring IPv4 Addresses

---

**Last Updated: December 12, 2011**

This chapter contains information about, and instructions for configuring IPv4 addresses on interfaces that are part of a networking device.



**Note**

---

All further references to IPv4 addresses in this document use only IP in the text, not IPv4.

---

- [Finding Feature Information, page 1](#)
- [Information About IP Addresses, page 1](#)
- [How to Configure IP Addresses, page 11](#)
- [Configuration Examples for IP Addresses, page 23](#)
- [Where to Go Next, page 25](#)
- [Additional References, page 25](#)
- [Feature Information for IP Addresses, page 27](#)

## Finding Feature Information

Your software release may not support all the features documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the Feature Information Table at the end of this document.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to [www.cisco.com/go/cfn](http://www.cisco.com/go/cfn). An account on Cisco.com is not required.

## Information About IP Addresses

- [Binary Numbering, page 2](#)
- [IP Address Structure, page 3](#)
- [IP Address Classes, page 4](#)
- [IP Network Subnetting, page 6](#)



---

**Americas Headquarters:**  
Cisco Systems, Inc., 170 West Tasman Drive, San Jose, CA 95134-1706 USA

- [IP Network Address Assignments, page 8](#)
- [Classless Inter-Domain Routing, page 10](#)
- [Prefixes, page 10](#)

## Binary Numbering

IP addresses are 32 bits long. The 32 bits are divided into four octets (8-bits). A basic understanding of binary numbering is very helpful if you are going to manage IP addresses in a network because changes in the values of the 32 bits indicate either a different IP network address or IP host address.

A value in binary is represented by the number (0 or 1) in each position multiplied by the number 2 to the power of the position of the number in sequence, starting with 0 and increasing to 7, working right to left. The figure below is an example of an 8-digit binary number.

**Figure 1** Example of an 8-digit Binary Number

| 128           | 64            | 32            | 16            | 8             | 4             | 2             | 1             |
|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|
| $1 \cdot 2^7$ | $1 \cdot 2^6$ | $1 \cdot 2^5$ | $1 \cdot 2^4$ | $1 \cdot 2^3$ | $1 \cdot 2^2$ | $1 \cdot 2^1$ | $1 \cdot 2^0$ |
| 1             | 1             | 1             | 1             | 1             | 1             | 1             | 1             |

|       |
|-------|
| 128   |
| 64    |
| 32    |
| 16    |
| 8     |
| 4     |
| 2     |
| +     |
| 1     |
| = 255 |

186286

The figure below provides binary to decimal number conversion for 0 through 134.

**Figure 2** Binary to Decimal Number Conversion for 0 to 134

|                |                |                |                |                |
|----------------|----------------|----------------|----------------|----------------|
| 00000000 = 000 | 00011011 = 027 | 00110110 = 054 | 01010001 = 081 | 01101100 = 108 |
| 00000001 = 001 | 00011100 = 028 | 00110111 = 055 | 01010010 = 082 | 01101101 = 109 |
| 00000010 = 002 | 00011101 = 029 | 00111000 = 056 | 01010011 = 083 | 01101110 = 110 |
| 00000011 = 003 | 00011110 = 030 | 00111001 = 057 | 01010100 = 084 | 01101111 = 111 |
| 00000100 = 004 | 00011111 = 031 | 00111010 = 058 | 01010101 = 085 | 01110000 = 112 |
| 00000101 = 005 | 00100000 = 032 | 00111011 = 059 | 01010110 = 086 | 01110001 = 113 |
| 00000110 = 006 | 00100001 = 033 | 00111100 = 060 | 01010111 = 087 | 01110010 = 114 |
| 00000111 = 007 | 00100010 = 034 | 00111101 = 061 | 01011000 = 088 | 01110011 = 115 |
| 00001000 = 008 | 00100011 = 035 | 00111110 = 062 | 01011001 = 089 | 01110100 = 116 |
| 00001001 = 009 | 00100100 = 036 | 00111111 = 063 | 01011010 = 090 | 01110101 = 117 |
| 00001010 = 010 | 00100101 = 037 | 01000000 = 064 | 01011011 = 091 | 01110110 = 118 |
| 00001011 = 011 | 00100110 = 038 | 01000001 = 065 | 01011100 = 092 | 01110111 = 119 |
| 00001100 = 012 | 00100111 = 039 | 01000010 = 066 | 01011101 = 093 | 01111000 = 120 |
| 00001101 = 013 | 00101000 = 040 | 01000011 = 067 | 01011110 = 094 | 01111001 = 121 |
| 00001110 = 014 | 00101001 = 041 | 01000100 = 068 | 01011111 = 095 | 01111010 = 122 |
| 00001111 = 015 | 00101010 = 042 | 01000101 = 069 | 01100000 = 096 | 01111011 = 123 |
| 00010000 = 016 | 00101011 = 043 | 01000110 = 070 | 01100001 = 097 | 01111100 = 124 |
| 00010001 = 017 | 00101100 = 044 | 01000111 = 071 | 01100010 = 098 | 01111101 = 125 |
| 00010010 = 018 | 00101101 = 045 | 01001000 = 072 | 01100011 = 099 | 01111110 = 126 |
| 00010011 = 019 | 00101110 = 046 | 01001001 = 073 | 01100100 = 100 | 01111111 = 127 |
| 00010100 = 020 | 00101111 = 047 | 01001010 = 074 | 01100101 = 101 | 10000000 = 128 |
| 00010101 = 021 | 00110000 = 048 | 01001011 = 075 | 01100110 = 102 | 10000001 = 129 |
| 00010110 = 022 | 00110001 = 049 | 01001100 = 076 | 01100111 = 103 | 10000010 = 130 |
| 00010111 = 023 | 00110010 = 050 | 01001101 = 077 | 01101000 = 104 | 10000011 = 131 |
| 00011000 = 024 | 00110011 = 051 | 01001110 = 078 | 01101001 = 105 | 10000100 = 132 |
| 00011001 = 025 | 00110100 = 052 | 01001111 = 079 | 01101010 = 106 | 10000101 = 133 |
| 00011010 = 026 | 00110101 = 053 | 01010000 = 080 | 01101011 = 107 | 10000110 = 134 |

186286

The figure below provides binary to decimal number conversion for 135 through 255.

**Figure 3** Binary to Decimal Number Conversion for 135 to 255

|                |                |                |                |                |
|----------------|----------------|----------------|----------------|----------------|
| 10000111 = 135 | 10100010 = 162 | 10111101 = 189 | 11011000 = 216 | 11110011 = 243 |
| 10001000 = 136 | 10100011 = 163 | 10111110 = 190 | 11011001 = 217 | 11110100 = 244 |
| 10001001 = 137 | 10100100 = 164 | 10111111 = 191 | 11011010 = 218 | 11110101 = 245 |
| 10001010 = 138 | 10100101 = 165 | 11000000 = 192 | 11011011 = 219 | 11110110 = 246 |
| 10001011 = 139 | 10100110 = 166 | 11000001 = 193 | 11011100 = 220 | 11110111 = 247 |
| 10001100 = 140 | 10100111 = 167 | 11000010 = 194 | 11011101 = 221 | 11111000 = 248 |
| 10001101 = 141 | 10101000 = 168 | 11000011 = 195 | 11011110 = 222 | 11111001 = 249 |
| 10001110 = 142 | 10101001 = 169 | 11000100 = 196 | 11011111 = 223 | 11111010 = 250 |
| 10001111 = 143 | 10101010 = 170 | 11000101 = 197 | 11100000 = 224 | 11111011 = 251 |
| 10010000 = 144 | 10101011 = 171 | 11000110 = 198 | 11100001 = 225 | 11111100 = 252 |
| 10010001 = 145 | 10101100 = 172 | 11000111 = 199 | 11100010 = 226 | 11111101 = 253 |
| 10010010 = 146 | 10101101 = 173 | 11001000 = 200 | 11100011 = 227 | 11111110 = 254 |
| 10010011 = 147 | 10101110 = 174 | 11001001 = 201 | 11100100 = 228 | 11111111 = 255 |
| 10010100 = 148 | 10101111 = 175 | 11001010 = 202 | 11100101 = 229 |                |
| 10010101 = 149 | 10110000 = 176 | 11001011 = 203 | 11100110 = 230 |                |
| 10010110 = 150 | 10110001 = 177 | 11001100 = 204 | 11100111 = 231 |                |
| 10010111 = 151 | 10110010 = 178 | 11001101 = 205 | 11101000 = 232 |                |
| 10011000 = 152 | 10110011 = 179 | 11001110 = 206 | 11101001 = 233 |                |
| 10011001 = 153 | 10110100 = 180 | 11001111 = 207 | 11101010 = 234 |                |
| 10011010 = 154 | 10110101 = 181 | 11010000 = 208 | 11101011 = 235 |                |
| 10011011 = 155 | 10110110 = 182 | 11010001 = 209 | 11101100 = 236 |                |
| 10011100 = 156 | 10110111 = 183 | 11010010 = 210 | 11101101 = 237 |                |
| 10011101 = 157 | 10111000 = 184 | 11010011 = 211 | 11101110 = 238 |                |
| 10011110 = 158 | 10111001 = 185 | 11010100 = 212 | 11101111 = 239 |                |
| 10011111 = 159 | 10111010 = 186 | 11010101 = 213 | 11110000 = 240 |                |
| 10100000 = 160 | 10111011 = 187 | 11010110 = 214 | 11110001 = 241 |                |
| 10100001 = 161 | 10111100 = 188 | 11010111 = 215 | 11110010 = 242 |                |

180271

## IP Address Structure

An IP host address identifies a device to which IP packets can be sent. An IP network address identifies a specific network segment to which one or more hosts can be connected. The following are characteristics of IP addresses:

- IP addresses are 32 bits long
- IP addresses are divided into four sections of one byte (octet) each
- IP addresses are typically written in a format known as dotted decimal

The table below shows some examples of IP addresses.

**Table 1** Examples of IP Addresses

| IP Addresses in Dotted Decimal | IP Addresses in Binary              |
|--------------------------------|-------------------------------------|
| 10.34.216.75                   | 00001010.00100010.11011000.01001011 |
| 172.16.89.34                   | 10101100.00010000.01011001.00100010 |
| 192.168.100.4                  | 11000000.10101000.01100100.00000100 |

**Note**

The IP addresses in the table above are from RFC 1918, *Address Allocation for Private Internets*. These IP addresses are not routable on the Internet. They are intended for use in private networks. For more information on RFC1918, see <http://www.ietf.org/rfc/rfc1918.txt>.

IP addresses are further subdivided into two sections known as network and host. The division is accomplished by arbitrarily ranges of IP addresses to classes. For more information see RFC 791 Internet Protocol at <http://www.ietf.org/rfc/rfc0791.txt>.

## IP Address Classes

In order to provide some structure to the way IP addresses are assigned, IP addresses are grouped into classes. Each class has a range of IP addresses. The range of IP addresses in each class is determined by the number of bits allocated to the network section of the 32-bit IP address. The number of bits allocated to the network section is represented by a mask written in dotted decimal or with the abbreviation */n* where *n* = the numbers of bits in the mask.

The table below lists ranges of IP addresses by class and the masks associated with each class. The digits in bold indicate the network section of the IP address for each class. The remaining digits are available for host IP addresses. For example, IP address 10.90.45.1 with a mask of 255.0.0.0 is broken down into a network IP address of 10.0.0.0 and a host IP address of 0.90.45.1.

**Table 2** *IP Address Ranges by Class with Masks*

| Class   | Range   |
|---|---|
| A (range/mask in dotted decimal)              | <b>0</b> .0.0.0 to 127.0.0.0/8 (255.0.0.0)  |
| A (range in binary)                           | <b>00000000</b> .00000000.00000000.00000000<br>to <b>01111111</b> .00000000.00000000.00000000                                     |
| A (mask in binary)                            | 11111111.00000000.00000000.00000000/8   |
| B (range/mask in dotted decimal)              | <b>128</b> .0.0.0 to <b>191.255</b> .0.0/16 (255.255.0.0)   |
| B (range in binary)                           | <b>10000000</b> . <b>00000000</b> .00000000.00000000<br>to <b>10111111</b> . <b>11111111</b> .00000000.00000000                   |
| B (mask in binary)                            | <b>11111111</b> . <b>11111111</b> .00000000.00000000/16   |
| C (range/mask in dotted decimal)              | <b>192</b> . <b>0.0.0</b> to <b>223.255.255</b> .0/24 (255.255.255.0)   |
| C (range in binary)                           | <b>11000000</b> . <b>00000000</b> . <b>00000000</b> .00000000<br>to <b>11011111</b> . <b>11111111</b> . <b>11111111</b> .00000000 |
| C (mask in binary)                            | 11111111.11111111.11111111.00000000/24  |
| D <sup>+</sup> (range/mask in dotted decimal) | <b>224</b> . <b>0.0.0</b> to <b>239.255.255.255</b> /32<br>(255.255.255.255)  |

<sup>1</sup> Class D IP addresses are reserved for multicast applications.

| Class   | Range  |
|---|--|
| D (range in binary)                           | <b>11100000 .00000000.00000000.00000000</b><br>to <b>11101111.11111111.11111111.11111111</b> |
| D (mask in binary)                            | 11111111.11111111.11111111.11111111/32   |
| E <sup>2</sup> (range/mask in dotted decimal) | <b>240 .0.0.0</b> to <b>255.255.255.255/32</b><br>(255.255.255.255)                          |
| E (range in binary)                           | <b>11110000 .00000000.00000000.00000000</b><br>to <b>11111111.11111111.11111111.11111111</b> |
| E (mask in binary)                            | 11111111.11111111.11111111.11111111/32   |

**Note**

Some IP addresses in these ranges are reserved for special uses. For more information refer to RFC 3330, *Special-Use IP Addresses* , at <http://www.ietf.org/rfc/rfc3330.txt> .

When a digit that falls within the network mask changes from 1 to 0 or 0 to 1 the network address is changed. For example, if you change 10101100.00010000.01011001.00100010/16 to 10101100.00110000.01011001.00100010/16 you have changed the network address from 172.16.89.34/16 to 172.48.89.34/16.

When a digit that falls outside the network mask changes from 1 to 0 or 0 to 1 the host address is changed. For example, if you change 10101100.00010000.01011001.00100010/16 to 10101100.00010000.01011001.00100011/16 you have changed the host address from 172.16.89.34/16 to 172.16.89.35/16.

Each class of IP address supports a specific range of IP network addresses and IP host addresses. The range of IP network addresses available for each class is determined with the formula  $2$  to the power of the number of available bits. In the case of class A addresses, the value of the first bit in the 1st octet (as shown in the table above) is fixed at 0. This leaves 7 bits for creating additional network addresses. Therefore there are 128 IP network addresses available for class A ( $2^7 = 128$ ).

The number of IP host addresses available for an IP address class is determined by the formula  $2$  to the power of the number of available bits minus 2. There are 24 bits available in a class A addresses for IP host addresses. Therefore there are 16,777,214 IP hosts addresses available for class A ( $(2^{24}) - 2 = 16,777,214$ ).

**Note**

The 2 is subtracted because there are 2 IP addresses that cannot be used for a host. The all 0's host address cannot be used because it is the same as the network address. For example, 10.0.0.0 cannot be both a IP network address and an IP host address. The all 1's address is a broadcast address that is used to reach all hosts on the network. For example, an IP datagram addressed to 10.255.255.255 will be accepted by every host on network 10.0.0.0.

The table below shows the network and host addresses available for each class of IP address.

<sup>2</sup> Class E IP addresses are reserved for broadcast traffic.

**Table 3** Network and Host Addresses Available for Each Class of IP Address

| Class | Network Addresses      | Host Addresses |
|-------|------------------------|----------------|
| A     | 128                    | 16,777,214     |
| B     | 16,384 <sup>3</sup>    | 65534          |
| C     | 2,097,152 <sup>4</sup> | 254            |

## IP Network Subnetting

The arbitrary subdivision of network and host bits in IP address classes resulted in an inefficient allocation of IP space. For example, if your network has 16 separate physical segments you will need 16 IP network addresses. If you use 16 class B IP network addresses, you would be able to support 65,534 hosts on each of the physical segments. Your total number of supported host IP addresses is 1,048,544 (16 \* 65,534 = 1,048,544). Very few network technologies can scale to having 65,534 hosts on a single network segment. Very few companies need 1,048,544 IP host addresses. This problem required the development of a new strategy that permitted the subdivision of IP network addresses into smaller groupings of IP subnetwork addresses. This strategy is known as subnetting.

If your network has 16 separate physical segments you will need 16 IP subnetwork addresses. This can be accomplished with one class B IP address. For example, start with the class B IP address of 172.16.0.0 you can reserve 4 bits from the third octet as subnet bits. This gives you 16 subnet IP addresses  $2^4 = 16$ . The table below shows the IP subnets for 172.16.0.0/20.

**Table 4** Examples of IP Subnet Addresses using 172.16.0.0/20

| Number         | IP Subnet Addresses in Dotted Decimal | IP Subnet Addresses in Binary       |
|----------------|---------------------------------------|-------------------------------------|
| 0 <sup>5</sup> | 172.16.0.0                            | 10101100.00010000.00000000.00000000 |
| 1              | 172.16.16.0                           | 10101100.00010000.00010000.00000000 |
| 2              | 172.16.32.0                           | 10101100.00010000.00100000.00000000 |
| 3              | 172.16.48.0                           | 10101100.00010000.00110000.00000000 |
| 4              | 172.16.64.0                           | 10101100.00010000.01000000.00000000 |
| 5              | 172.16.80.0                           | 10101100.00010000.01010000.00000000 |

<sup>3</sup> Only 14 bits are available for class B IP network addresses because the first 2 bits are fixed at 10 as shown in Table 2 .

<sup>4</sup> Only 21 bits are available for class C IP network addresses because the first 3 bits are fixed at 110 as shown in Table 2 .

<sup>5</sup> The first subnet that has all of the subnet bits set to 0 is referred to as subnet 0 . It is indistinguishable from the network address and must be used carefully.



| Number | IP Subnet Addresses in Dotted Decimal | IP Subnet Addresses in Binary       |
|--------|---------------------------------------|-------------------------------------|
| 6      | 172.16.96.0                           | 10101100.00010000.01100000.00000000 |
| 7      | 172.16.112.0                          | 10101100.00010000.01110000.00000000 |
| 8      | 172.16.128.0                          | 10101100.00010000.10000000.00000000 |
| 9      | 172.16.144.0                          | 10101100.00010000.10010000.00000000 |
| 10     | 172.16.160.0                          | 10101100.00010000.10100000.00000000 |
| 11     | 172.16.176.0                          | 10101100.00010000.10110000.00000000 |
| 12     | 172.16.192.0                          | 10101100.00010000.11000000.00000000 |
| 13     | 172.16.208.0                          | 10101100.00010000.11010000.00000000 |
| 14     | 172.16.224.0                          | 10101100.00010000.11100000.00000000 |
| 15     | 172.16.240.0                          | 10101100.00010000.11110000.00000000 |

When a digit that falls within the subnetwork (subnet) mask changes from 1 to 0 or 0 to 1 the subnetwork address is changed. For example, if you change 10101100.00010000.01011001.00100010/20 to 10101100.00010000.01111001.00100010/20 you have changed the network address from 172.16.89.34/20 to 172.16.121.34/20.

When a digit that falls outside the subnet mask changes from 1 to 0 or 0 to 1 the host address is changed. For example, if you change 10101100.00010000.01011001.00100010/20 to 10101100.00010000.01011001.00100011/20 you have changed the host address from 172.16.89.34/20 to 172.16.89.35/20.



#### Timesaver

To avoid having to do manual IP network, subnetwork, and host calculations, use one of the free IP subnet calculators available on the Internet.

Some people get confused about the terms network address and subnet or subnetwork addresses and when to use them. In the most general sense the term network address means “the IP address that routers use to route traffic to a specific network segment so that the intended destination IP host on that segment can receive it”. Therefore the term network address can apply to both non-subnetted and subnetted IP network addresses. When you are troubleshooting problems with forwarding traffic from a router to a specific IP network address that is actually a subnetted network address, it can help to be more specific by referring to the destination network address as a subnet network address because some routing protocols handle

advertising subnet network routes differently from network routes. For example, the default behavior for RIP v2 is to automatically summarize the subnet network addresses that it is connected to their non-subnetted network addresses (172.16.32.0/24 is advertised by RIP v2 as 172.16.0.0/16) when sending routing updates to other routers. Therefore the other routers might have knowledge of the IP network addresses in the network, but not the subnetted network addresses of the IP network addresses.



**Tip**

The term IP address space is sometimes used to refer to a range of IP addresses. For example, “We have to allocate a new IP network address to our network because we have used all of the available IP addresses in the current IP address space”.

## IP Network Address Assignments


Routers keep track of IP network addresses to understand the network IP topology (layer 3 of the OSI reference model) of the network to ensure that IP traffic can be routed properly. In order for the routers to understand the network layer (IP) topology, every individual physical network segment that is separated from any other physical network segment by a router must have a unique IP network address.

The figure below shows an example of a simple network with correctly configured IP network addresses. The routing table in R1 looks like the table below.

**Table 5** Routing Table for a Correctly Configured Network

| Interface Ethernet 0       | Interface Ethernet 1       |
|----------------------------|----------------------------|
| 172.31.32.0/24 (Connected) | 172.31.16.0/24 (Connected) |

**Figure 4** Correctly Configured Network

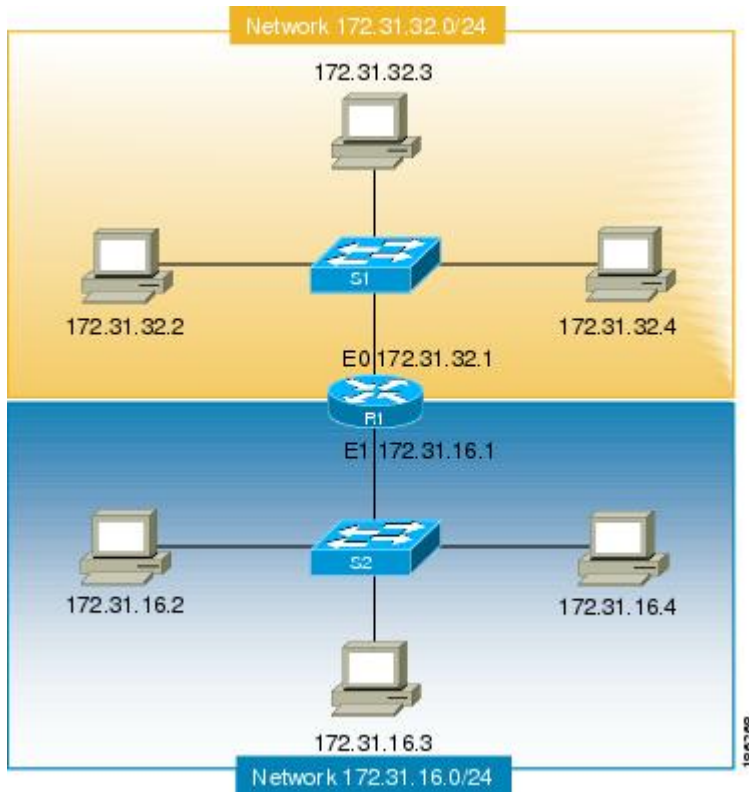




The figure below shows an example of a simple network with incorrectly configured IP network addresses. The routing table in R1 looks like the table below. If the PC with IP address 172.31.32.3 attempts to send IP traffic to the PC with IP address 172.31.32.54, router R1 cannot determine which interface that the PC with IP address 172.31.32.54 is connected to.

**Table 6 Routing Table in Router R1 for an Incorrectly Configured Network (Example 1)**

| Ethernet 0                 | Ethernet 1                 |
|----------------------------|----------------------------|
| 172.31.32.0/24 (Connected) | 172.31.32.0/24 (Connected) |

**Figure 5 Incorrectly Configured Network (Example 1)**

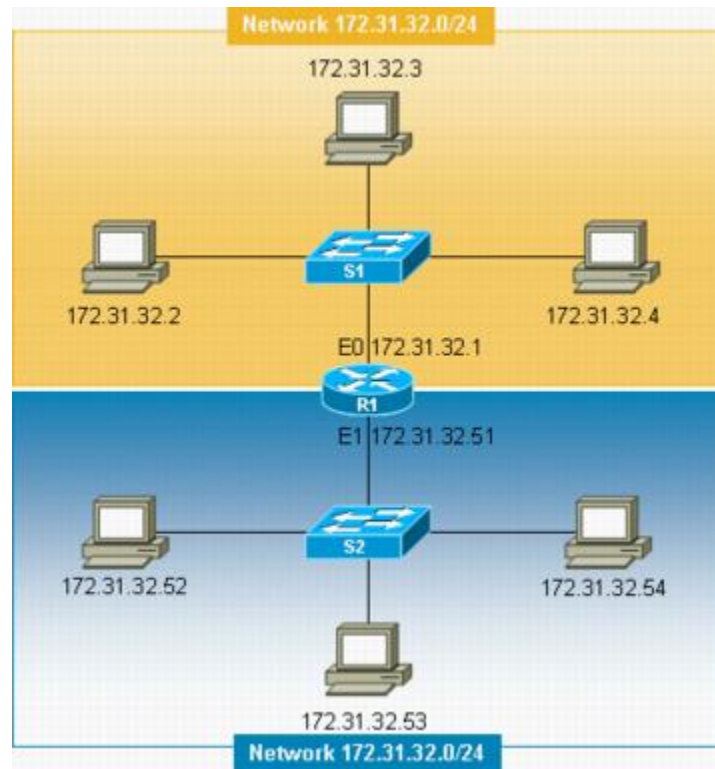


To help prevent mistakes as shown in the figure above, Cisco IOS-based networking devices will not allow you to configure the same IP network address on two or more interfaces in the router when IP routing is enabled.

The only way to prevent the mistake shown in the figure below, where 172.16.31.0/24 is used in R2 and R3, is to have very accurate network documentation that shows where you have assigned IP network addresses.

**Table 7** Routing Table in Router R1 for an Incorrectly Configured Network (Example 2)

| Ethernet 0                 | Serial 0   | Serial 1   |
|----------------------------|--|--|
| 172.16.32.0/24 (Connected) | 192.168.100.4/29 (Connected)<br>172.16.31.0/24 RIP | 192.168.100.8/29 (Connected)<br>172.16.31.0/24 RIP |

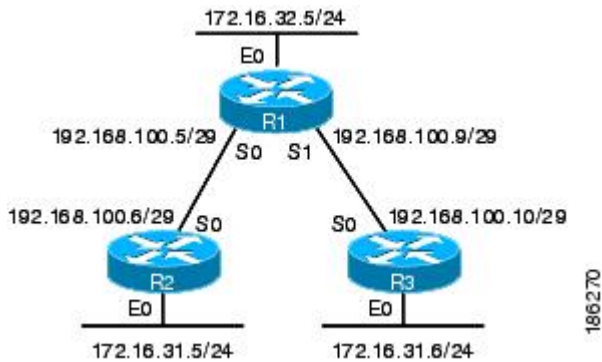**Figure 6** Incorrectly Configured Network (Example 2)

For a more thorough explanation of IP routing, see the "Related Documents" section for a list of documents related to IP routing.

## Classless Inter-Domain Routing

Due to the continuing increase in internet use and the limitations on how IP addresses can be assigned using the class structure shown in the table above, a more flexible method for allocating IP addresses was required. The new method is documented in RFC 1519 *Classless Inter-Domain Routing (CIDR): an Address Assignment and Aggregation Strategy*. CIDR allows network administrators to apply arbitrary masks to IP addresses to create an IP addressing plan that meets the requirements of the networks that they administrate.

For more information on CIDR, refer to RFC 1519 at <http://www.ietf.org/rfc/rfc1519.txt>.

## Prefixes

The term prefix is often used to refer to the number of bits of an IP network address that are of importance for building routing tables. If you are using only classful (strict adherence to A, B, and C network address boundaries) IP addresses, the prefixes are the same as the masks for the classes of addresses. For example, using classful IP addressing, a class C IP network address such as 192.168.10.0 uses a 24-bit mask (/24 or 255.255.255.0) and can also be said to have a 24-bit prefix.

If you are using CIDR, the prefixes are arbitrarily assigned to IP network addresses based on how you want to populate the routing tables in your network. For example, a group of class C IP addresses such as 192.168.10.0, 192.168.11.0, 192.168.12.0, 192.168.13.0 can be advertised as a single route to 192.168.0.0 with a 16-bit prefix (192.168.0.0/16). This results in a 4:1 reduction in the number of routes that the routers in your network need to manage.

## How to Configure IP Addresses

- [Establishing IP Connectivity to a Network by Assigning an IP Address to an Interface](#), page 11
- [Increasing the Number of IP Hosts that Are Supported on a Network by Using Secondary IP Addresses](#), page 12
- [Maximizing the Number of Available IP Subnets by Allowing the Use of IP Subnet Zero](#), page 14
- [Specifying the Format of Network Masks](#), page 16
- [Using IP Unnumbered Interfaces on Point-to-Point WAN Interfaces to Limit Number of IP Addresses Required](#), page 18
- [Using IP addresses with 31-Bit Prefixes on Point-to-Point WAN Interfaces to Limit Number of IP Addresses Required](#), page 20

## Establishing IP Connectivity to a Network by Assigning an IP Address to an Interface

Perform this task to configure an IP address on an interface.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface** *type number*
4. **no shutdown**
5. **ip address** *ip-address mask*
6. **end**

### DETAILED STEPS

| Command or Action  | Purpose  |
|--|--|
| <b>Step 1</b> <b>enable</b><br><br><b>Example:</b><br>Router> enable                         | Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul> |
| <b>Step 2</b> <b>configure terminal</b><br><br><b>Example:</b><br>Router# configure terminal | Enters global configuration mode.  |

| Command or Action  | Purpose   |
|--|---|
| <p><b>Step 3</b> <code>interface type number</code></p> <p><b>Example:</b></p> <pre>Router(config)# interface fastethernet 0/0</pre>                   | Specifies an interface and enters interface configuration mode.           |
| <p><b>Step 4</b> <code>no shutdown</code></p> <p><b>Example:</b></p> <pre>Router(config-if)# no shutdown</pre>   | Enables the interface.  |
| <p><b>Step 5</b> <code>ip address ip-address mask</code></p> <p><b>Example:</b></p> <pre>Router(config-if)# ip address 172.16.16.1 255.255.240.0</pre> | Configures the IP address on the interface.                               |
| <p><b>Step 6</b> <code>end</code></p> <p><b>Example:</b></p> <pre>Router(config-if)# end</pre>   | Exits the current configuration mode and returns to privileged EXEC mode. |

- [Troubleshooting Tips, page 12](#)

## Troubleshooting Tips

The following commands can help troubleshoot IP addressing:

- **show ip interface** --Displays the IP parameters for the interface.
- **show ip route connected** --Displays the IP networks the networking device is connected to.

## Increasing the Number of IP Hosts that Are Supported on a Network by Using Secondary IP Addresses

If you have a situation in which you need to connect more IP hosts to a network segment and you have used all of the available IP host addresses for the subnet to which you have assigned the segment, you can avoid having to readdress all of the hosts with a different subnet by adding a second IP network address to the network segment.

Perform this task to configure a secondary IP address on an interface.

**SUMMARY STEPS**

1. **enable**
2. **configure terminal**
3. **interface** *type number*
4. **no shutdown**
5. **ip address** *ip-address mask*
6. **ip address** *ip-address mask secondary*
7. **end**

**DETAILED STEPS**

| Command or Action   | Purpose   |
|---|---|
| <p><b>Step 1</b> <b>enable</b></p> <p><b>Example:</b></p> <pre>Router&gt; enable</pre>  | <p>Enables privileged EXEC mode.</p> <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul> |
| <p><b>Step 2</b> <b>configure terminal</b></p> <p><b>Example:</b></p> <pre>Router# configure terminal</pre>   | <p>Enters global configuration mode.</p>  |
| <p><b>Step 3</b> <b>interface</b> <i>type number</i></p> <p><b>Example:</b></p> <pre>Router(config)# interface fastethernet 0/0</pre>                   | <p>Specifies an interface and enters interface configuration mode.</p>  |
| <p><b>Step 4</b> <b>no shutdown</b></p> <p><b>Example:</b></p> <pre>Router(config-if)# no shutdown</pre>  | <p>Enables the interface.</p>   |
| <p><b>Step 5</b> <b>ip address</b> <i>ip-address mask</i></p> <p><b>Example:</b></p> <pre>Router(config-if)# ip address 172.16.16.1 255.255.240.0</pre> | <p>Configures the IP address on the interface.</p>  |

| Command or Action  | Purpose   |
|--|---|
| <p><b>Step 6</b> <code>ip address ip-address mask secondary</code></p> <p><b>Example:</b></p> <pre>Router(config-if)# ip address 172.16.32.1 255.255.240.0 secondary</pre> | Configures the secondary IP address on the interface.                     |
| <p><b>Step 7</b> <code>end</code></p> <p><b>Example:</b></p> <pre>Router(config-if)# end</pre>   | Exits the current configuration mode and returns to privileged EXEC mode. |

- [Troubleshooting Tips, page 14](#)
- [What to Do Next, page 14](#)

## Troubleshooting Tips

The following commands can help troubleshoot IP addressing:

- **show ip interface** --Displays the IP parameters for the interface.
- **show ip route connected** --Displays the IP networks the networking device is connected to.

## What to Do Next

If your network has two or more routers and you have already configured a routing protocol, make certain that the other routers can reach the new IP network that you assigned. You might need to modify the configuration for the routing protocol on the router so that it advertises the new network. Consult the *Cisco IOS IP Routing: Protocol-Independent Configuration Guide* for information on configuring routing protocols.

# Maximizing the Number of Available IP Subnets by Allowing the Use of IP Subnet Zero

If you are using subnetting in your network and you are running out of network addresses, you can configure your networking device to allow the configuration of subnet zero. This adds one more usable network address for every subnet in your IP addressing scheme. The table above shows the IP subnets (including subnet 0) for 172.16.0.0/20.

Perform this task to enable the use of IP subnet zero on your networking device.

**SUMMARY STEPS**

1. **enable**
2. **configure terminal**
3. **ip subnet-zero**
4. **interface** *type number*
5. **no shutdown**
6. **ip address** *ip-address mask*
7. **end**

**DETAILED STEPS**

| Command or Action  | Purpose  |
|--|--|
| <b>Step 1</b> <b>enable</b><br><br><b>Example:</b><br>Router> enable   | Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul> |
| <b>Step 2</b> <b>configure terminal</b><br><br><b>Example:</b><br>Router# configure terminal                           | Enters global configuration mode.  |
| <b>Step 3</b> <b>ip subnet-zero</b><br><br><b>Example:</b><br>Router(config)# ip subnet-zero                           | Enables the use of IP subnet zero.   |
| <b>Step 4</b> <b>interface</b> <i>type number</i><br><br><b>Example:</b><br>Router(config)# interface fastethernet 0/0 | Specifies an interface and enters interface configuration mode.  |
| <b>Step 5</b> <b>no shutdown</b><br><br><b>Example:</b><br>Router(config-if)# no shutdown                              | Enables the interface.   |



| Command or Action   | Purpose   |
|---|---|
| <b>Step 6</b> <code>ip address ip-address mask</code><br><br><b>Example:</b><br><pre>Router(config-if)# ip address 172.16.0.1 255.255.240.0</pre> | Configures the subnet zero IP address on the interface.                   |
| <b>Step 7</b> <code>end</code><br><br><b>Example:</b><br><pre>Router(config-if)# end</pre>  | Exits the current configuration mode and returns to privileged EXEC mode. |

- [Troubleshooting Tips, page 16](#)

## Troubleshooting Tips

The following commands can help troubleshoot IP addressing:

- **show ip interface** --Displays the IP parameters for the interface.
- **show ip route connected** --Displays the IP networks the networking device is connected to.

## Specifying the Format of Network Masks

By default, **show** commands display an IP address and then its netmask in dotted decimal notation. For example, a subnet would be displayed as 131.108.11.55 255.255.255.0.

You might find it more convenient to display the network mask in hexadecimal format or bit count format instead. The hexadecimal format is commonly used on UNIX systems. The previous example would be displayed as 131.108.11.55 0XFFFFFF00.

The bit count format for displaying network masks is to append a slash (/) and the total number of bits in the netmask to the address itself. The previous example would be displayed as 131.108.11.55/24.

- [Specifying the Format in Which Netmasks Appear for the Current Session, page 16](#)
- [Specifying the Format in Which Netmasks Appear for an Individual Line, page 17](#)

## Specifying the Format in Which Netmasks Appear for the Current Session

Perform this task to specify the format in which netmasks appear for the current session.

### SUMMARY STEPS

1. **enable**
2. **term ip netmask-format {bitcount | decimal | hexadecimal}**

## DETAILED STEPS

| Command or Action  | Purpose  |
|--|--|
| <b>Step 1</b> <code>enable</code><br><br><b>Example:</b><br><pre>Router&gt; enable</pre>   | Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>Enter your password if prompted.</li> </ul> |
| <b>Step 2</b> <code>term ip netmask-format {bitcount   decimal   hexadecimal}</code><br><br><b>Example:</b><br><pre>Router# term ip netmask-format hexadecimal</pre> | Specifies the format the router uses to display network masks.   |

## Specifying the Format in Which Netmasks Appear for an Individual Line

Perform this task to specify the format in which netmasks appear for an individual line.

## SUMMARY STEPS

- `enable`
- `configure terminal`
- `line vty first last`
- `term ip netmask-format {bitcount | decimal | hexadecimal}`
- `end`

## DETAILED STEPS

| Command or Action   | Purpose  |
|---|--|
| <b>Step 1</b> <code>enable</code><br><br><b>Example:</b><br><pre>Router&gt; enable</pre>                      | Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>Enter your password if prompted.</li> </ul> |
| <b>Step 2</b> <code>configure terminal</code><br><br><b>Example:</b><br><pre>Router# configure terminal</pre> | Enters global configuration mode.  |

| Command or Action  | Purpose  |
|--|--|
| <b>Step 3</b> <code>line vty first last</code><br><br><b>Example:</b><br><pre>Router(config)# line vty 0 4</pre>   | Enters line configuration mode for the range of lines specified by the <i>first</i> and <i>last</i> arguments. |
| <b>Step 4</b> <code>term ip netmask-format {bitcount   decimal   hexadecimal}</code><br><br><b>Example:</b><br><pre>Router(config-line)# ip netmask-format hexadecimal</pre> | Specifies the format the router uses to display the network mask for an individual line.                       |
| <b>Step 5</b> <code>end</code><br><br><b>Example:</b><br><pre>Router(config-if)# end</pre>   | Exits the current configuration mode and returns to privileged EXEC mode.                                      |

## Using IP Unnumbered Interfaces on Point-to-Point WAN Interfaces to Limit Number of IP Addresses Required

If you have a limited number of IP network or subnet addresses and you have point-to-point WANs in your network, you can use the IP Unnumbered Interfaces feature to enable IP connectivity on the point-to-point WAN interfaces without actually assigning an IP address to them.

Perform this task to configure the IP Unnumbered Interfaces feature on a point-to-point WAN interface.

- [IP Unnumbered Feature, page 18](#)
- [Troubleshooting Tips, page 20](#)

### IP Unnumbered Feature

The IP Unnumbered Interfaces feature enables IP processing on a point-to-point WAN interface without assigning it an explicit IP address. The IP unnumbered point-to-point WAN interface uses the IP address of another interface to enable IP connectivity, which conserves network addresses.



#### Note

The following restrictions apply to the IP Unnumbered Interfaces feature:

- The IP Unnumbered Interfaces feature is only supported on point-to-point (non-multiaccess) WAN interfaces
- You cannot netboot a Cisco IOS image over an interface that is using the IP Unnumbered Interfaces feature

**SUMMARY STEPS**

1. **enable**
2. **configure terminal**
3. **interface** *type number*
4. **no shutdown**
5. **ip address** *ip-address mask*
6. **interface** *type number*
7. **no shutdown**
8. **ip unnumbered** *type number*
9. **end**

**DETAILED STEPS**

| Command or Action   | Purpose   |
|---|---|
| <p><b>Step 1</b> <b>enable</b></p> <p><b>Example:</b></p> <pre>Router&gt; enable</pre>  | <p>Enables privileged EXEC mode.</p> <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul> |
| <p><b>Step 2</b> <b>configure terminal</b></p> <p><b>Example:</b></p> <pre>Router# configure terminal</pre>   | <p>Enters global configuration mode.</p>  |
| <p><b>Step 3</b> <b>interface</b> <i>type number</i></p> <p><b>Example:</b></p> <pre>Router(config)# interface fastethernet 0/0</pre>                   | <p>Specifies an interface and enters interface configuration mode.</p>  |
| <p><b>Step 4</b> <b>no shutdown</b></p> <p><b>Example:</b></p> <pre>Router(config-if)# no shutdown</pre>  | <p>Enables the interface.</p>   |
| <p><b>Step 5</b> <b>ip address</b> <i>ip-address mask</i></p> <p><b>Example:</b></p> <pre>Router(config-if)# ip address 172.16.16.1 255.255.240.0</pre> | <p>Configures the IP address on the interface.</p>  |

## Troubleshooting Tips

| Command or Action   | Purpose  |
|---|--|
| <b>Step 6</b> <code>interface type number</code><br><br><b>Example:</b><br><pre>Router(config-if)# interface serial 0/0</pre>               | Specifies a point-to-point WAN interface and enters interface configuration mode.  |
| <b>Step 7</b> <code>no shutdown</code><br><br><b>Example:</b><br><pre>Router(config-if)# no shutdown</pre>                                  | Enables the point-to-point WAN interface.  |
| <b>Step 8</b> <code>ip unnumbered type number</code><br><br><b>Example:</b><br><pre>Router(config-if)# ip unnumbered fastethernet 0/0</pre> | Enables the IP unnumbered feature on the point-to-point WAN interface.<br><br>In this example the point-to-point WAN interface uses IP address 172.16.16.1 from Fast Ethernet 0/0. |
| <b>Step 9</b> <code>end</code><br><br><b>Example:</b><br><pre>Router(config-if)# end</pre>  | Exits the current configuration mode and returns to privileged EXEC mode.  |

## Troubleshooting Tips

The following commands can help troubleshoot IP addressing:

- **show ip interface** --Displays the IP parameters for the interface.
- **show ip route connected** --Displays the IP networks the networking device is connected to.

## Using IP addresses with 31-Bit Prefixes on Point-to-Point WAN Interfaces to Limit Number of IP Addresses Required

You can reduce the number of IP subnets used by networking devices to establish IP connectivity to point-to-point WANs that they are connected to by using IP Addresses with 31-bit Prefixes as defined in RFC 3021.

Perform this task to configure an IP address with a 31-bit prefix on a point-to-point WAN interface.

- [RFC 3021, page 20](#)
- [Troubleshooting Tips, page 23](#)

## RFC 3021

Prior to RFC 3021, *Using 31-bit Prefixes on IPv4 Point-to-Point Links*, many network administrators assigned IP address with a 30-bit subnet mask (255.255.255.252) to point-to-point interfaces to conserve IP

address space. Although this practice does conserve IP address space compared to assigning IP addresses with shorter subnet masks such as 255.255.255.240, IP addresses with a 30-bit subnet mask still require four addresses per link: two host addresses (one for each host interface on the link), one all-zeros network address, and one all-ones broadcast network address.

The table below shows an example of the four IP addresses that are created when a 30-bit (otherwise known as 255.255.255.252 or /30) subnet mask is applied to the IP address 192.168.100.4. The bits that are used to specify the host IP addresses in bold.

**Table 8** *Four IP Addresses Created When a 30-Bit Subnet Mask (/30) Is Used*

| Address          | Description                | Binary                                     |
|------------------|----------------------------|--|
| 192.168.100.4/30 | All-zeros IP address       | 11000000.10101000.01100100.0000 <b>100</b> |
| 192.168.100.5/30 | First host addresses       | 11000000.10101000.01100100.0000 <b>101</b> |
| 192.168.100.6/30 | Second host address        | 11000000.10101000.01100100.0000 <b>110</b> |
| 192.168.100.7/30 | All-ones broadcast address | 11000000.10101000.01100100.0000 <b>111</b> |

Point-to-point links only have two endpoints (hosts) and do not require broadcast support because any packet that is transmitted by one host is always received by the other host. Therefore the all-ones broadcast IP address is not required for a point-to-point interface.

The simplest way to explain RFC 3021 is to say that the use of a 31-bit prefix (created by applying a 31-bit subnet mask to an IP address) allows the all-zeros and all-ones IP addresses to be assigned as host addresses on point-to-point networks. Prior to RFC 3021 the longest prefix in common use on point-to-point links was 30-bits, which meant that the all-zeros and all-ones IP addresses were wasted.

The table below shows an example of the two IP addresses that are created when a 31-bit (otherwise known as 255.255.255.254 or /31) subnet mask is applied to the IP address 192.168.100.4. The bit that is used to specify the host IP addresses in bold

**Table 9** *Two IP Addresses Created When a 31-Bit Subnet Mask (/31) Is Used*

| Address          | Description         | Binary                                     |
|------------------|---------------------|--|
| 192.168.100.4/31 | First host address  | 11000000.10101000.01100100.0000 <b>100</b> |
| 192.168.100.5/31 | Second host address | 11000000.10101000.01100100.0000 <b>101</b> |

The complete text for RFC 3021 is available at <http://www.ietf.org/rfc/rfc3021.txt> .

You must have classless IP addressing configured on your networking device before you configure an IP address with a 31-bit prefix on a point-to-point interface. Classless IP addressing is enabled by default in many versions of Cisco IOS software. If you are not certain that your networking device has IP classless addressing configured, enter the **ip classless** command in global configuration mode to enable it.



**Note** This task can only be performed on point-to-point (nonmultiaccess) WAN interfaces.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ip classless**
4. **interface** *type number*
5. **no shutdown**
6. **ip address** *ip-address mask*
7. **end**

### DETAILED STEPS

| Command or Action   | Purpose   |
|---|---|
| <p><b>Step 1</b> <b>enable</b></p> <p><b>Example:</b></p> <pre>Router&gt; enable</pre>  | <p>Enables privileged EXEC mode.</p> <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>   |
| <p><b>Step 2</b> <b>configure terminal</b></p> <p><b>Example:</b></p> <pre>Router# configure terminal</pre>                     | <p>Enters global configuration mode.</p>  |
| <p><b>Step 3</b> <b>ip classless</b></p> <p><b>Example:</b></p> <pre>Router(config)# ip classless</pre>                         | <p>(Optional) Enables IP classless (CIDR).</p> <p><b>Note</b> This command is enabled by default in many versions of Cisco IOS. If you are not certain if it is enabled by default in the version of Cisco IOS that your networking device is running, enter the <b>ip classless</b> command as shown. When you are done with this task view the configuration. If the <b>ip classless</b> command does not appear in your configuration, it is enabled by default.</p> |
| <p><b>Step 4</b> <b>interface</b> <i>type number</i></p> <p><b>Example:</b></p> <pre>Router(config)# interface serial 0/0</pre> | <p>Specifies a point-to-point WAN interface and enters interface configuration mode.</p>  |



| Command or Action  | Purpose   |
|--|---|
| <p><b>Step 5</b> <code>no shutdown</code></p> <p><b>Example:</b></p> <pre>Router(config-if)# no shutdown</pre>   | Enables the interface.  |
| <p><b>Step 6</b> <code>ip address ip-address mask</code></p> <p><b>Example:</b></p> <pre>Router(config-if)# ip address 192.168.100.4 255.255.255.254</pre> | Configures the 31bit prefix IP address on the point-to-point WAN interface. |
| <p><b>Step 7</b> <code>end</code></p> <p><b>Example:</b></p> <pre>Router(config-if)# end</pre>   | Exits the current configuration mode and returns to privileged EXEC mode.   |

## Troubleshooting Tips

The following commands can help troubleshoot IP addressing:

- **show ip interface** --Displays the IP parameters for the interface.
- **show ip route connected** --Displays the IP networks the networking device is connected to.

## Configuration Examples for IP Addresses

- [Example Establishing IP Connectivity to a Network by Assigning an IP Address to an Interface, page 24](#)
- [Example Increasing the Number of IP Hosts that are Supported on a Network by Using Secondary IP Addresses, page 24](#)
- [Example Using IP Unnumbered Interfaces on Point-to-Point WAN Interfaces to Limit Number of IP Addresses Required, page 24](#)
- [Example Using IP addresses with 31-Bit Prefixes on Point-to-Point WAN Interfaces to Limit Number of IP Addresses Required, page 25](#)
- [Example Maximizing the Number of Available IP Subnets by Allowing the Use of IP Subnet Zero, page 25](#)

## Example Establishing IP Connectivity to a Network by Assigning an IP Address to an Interface

The following example configures an IP address on three interfaces:

```
!
interface FastEthernet0/0
  no shutdown
  ip address 172.16.16.1 255.255.240.0
!
interface FastEthernet0/1
  no shutdown
  ip address 172.16.32.1 255.255.240.0
!
interface FastEthernet0/2
  no shutdown
  ip address 172.16.48.1 255.255.240.0
!
```

## Example Increasing the Number of IP Hosts that are Supported on a Network by Using Secondary IP Addresses

The following example configures secondary IP addresses on three interfaces:

```
!
interface FastEthernet0/0
  no shutdown
  ip address 172.16.16.1 255.255.240.0
  ip address 172.16.32.1 255.255.240.0 secondary
!
!
interface FastEthernet0/1
  no shutdown
  ip address 172.17.16.1 255.255.240.0
  ip address 172.17.32.1 255.255.240.0 secondary
!
!
interface FastEthernet0/2
  no shutdown
  ip address 172.18.16.1 255.255.240.0
  ip address 172.18.32.1 255.255.240.0 secondary
!
```

## Example Using IP Unnumbered Interfaces on Point-to-Point WAN Interfaces to Limit Number of IP Addresses Required

The following example configures the unnumbered IP feature on three interfaces:

```
!
interface FastEthernet0/0
  no shutdown
  ip address 172.16.16.1 255.255.240.0
!
interface serial0/0
  no shutdown
  ip unnumbered fastethernet0/0
!
interface serial0/1
  no shutdown
  ip unnumbered fastethernet0/0
!
```

```
interface serial0/2
  no shutdown
  ip unnumbered fastethernet0/0
!
```

## Example Using IP addresses with 31-Bit Prefixes on Point-to-Point WAN Interfaces to Limit Number of IP Addresses Required

The following example configures 31-bit prefixes on two interfaces:

```
!
ip classless
!
interface serial0/0
  no shutdown
  ip address 192.168.100.2 255.255.255.254
!
!
interface serial0/1
  no shutdown
  ip address 192.168.100.4 255.255.255.254
```

## Example Maximizing the Number of Available IP Subnets by Allowing the Use of IP Subnet Zero

The following example enables subnet zero:

```
!
interface FastEthernet0/0
  no shutdown
  ip address 172.16.16.1 255.255.240.0
!
ip subnet-zero
!
```

## Where to Go Next

If your network has two or more routers and you have not already configured a routing protocol, consult the *Cisco IOS IP Routing Protocols Configuration Guide*, Release 12.4T, for information on configuring routing protocols.

## Additional References

### Related Documents

| Related Topic  | Document Title   |
|--|--|
| Cisco IOS commands   | <a href="#">Cisco IOS Master Commands List, All Releases</a> |
| IP addressing commands: complete command syntax, command mode, command history, defaults, usage guidelines, and examples | <i>Cisco IOS IP Addressing Services Command Reference</i>    |

| Related Topic  | Document Title  |
|--|---|
| Fundamental principles of IP addressing and IP routing   | <i>IP Routing Primer ISBN 1578701082</i>  |
| <b>Standards</b>   |   |
| Standard   | Title   |
| No new or modified standards are supported, and support for existing standards has not been modified | --  |
| <b>MIBs</b>  |   |
| MIB  | MIBs Link   |
| No new or modified MIBs are supported, and support for existing MIBs has not been modified           | To locate and download MIBs for selected platforms, Cisco software releases, and feature sets, use Cisco MIB Locator found at the following URL:<br><br><a href="http://www.cisco.com/go/mibs">http://www.cisco.com/go/mibs</a> |
| <b>RFCs</b>  |   |
| RFC <sup>6</sup>   | Title   |
| RFC 791  | <i>Internet Protocol</i><br><a href="http://www.ietf.org/rfc/rfc0791.txt">http://www.ietf.org/rfc/rfc0791.txt</a>   |
| RFC 1338   | <i>Classless Inter-Domain Routing (CIDR): an Address Assignment and Aggregation Strategy</i><br><a href="http://www.ietf.org/rfc/rfc1519.txt">http://www.ietf.org/rfc/rfc1519.txt</a>   |
| RFC 1466   | <i>Guidelines for Management of IP Address Space</i><br><a href="http://www.ietf.org/rfc/rfc1466.txt">http://www.ietf.org/rfc/rfc1466.txt</a>   |
| RFC 1716   | <i>Towards Requirements for IP Routers</i> <a href="http://www.ietf.org/rfc/rfc1716.txt">http://www.ietf.org/rfc/rfc1716.txt</a>  |
| RFC 1918   | <i>Address Allocation for Private Internets</i> <a href="http://www.ietf.org/rfc/rfc1918.txt">http://www.ietf.org/rfc/rfc1918.txt</a>   |
| RFC 3330   | <i>Special-Use IP Addresses</i> <a href="http://www.ietf.org/rfc/rfc3330.txt">http://www.ietf.org/rfc/rfc3330.txt</a>   |

<sup>6</sup> These references are only a sample of the many RFCs available on subjects related to IP addressing and IP routing. Refer to the IETF RFC site at <http://www.ietf.org/rfc.html> for a full list of RFCs.

### Technical Assistance

| Description   | Link  |
|---|---|
| The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password. | <a href="http://www.cisco.com/cisco/web/support/index.html">http://www.cisco.com/cisco/web/support/index.html</a> |

## Feature Information for IP Addresses

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to [www.cisco.com/go/cfn](http://www.cisco.com/go/cfn). An account on Cisco.com is not required.

**Table 10** Feature Information for IP Addresses

| Feature Name                   | Releases | Feature Information  |
|--------------------------------|----------|--|
| Classless Inter-Domain Routing | 10.0     | <p>CIDR is a new way of looking at IP addresses that eliminates the concept of classes (class A, class B, and so on). For example, network 192.213.0.0, which is an illegal class C network number, is a legal supernet when it is represented in CIDR notation as 192.213.0.0/16. The /16 indicates that the subnet mask consists of 16 bits (counting from the left). Therefore, 192.213.0.0/16 is similar to 192.213.0.0 255.255.0.0.</p> <p>The following command was introduced or modified: <b>ip classless</b>.</p> |

| Feature Name                                     | Releases           | Feature Information  |
|--|--------------------|--|
| IP Subnet Zero                                   | 10.0               | <p>In order to conserve IP address space IP Subnet Zero allows the use of the all-zeros subnet as an IP address on an interface, such as configuring 172.16.0.1/24 on Fast Ethernet 0/0.</p> <p>The following command was introduced or modified: <b>ip subnet-zero</b>.</p> |
| IP Unnumbered Interfaces                         | 10.0               | <p>In order to conserve IP address space, IP unnumbered interfaces use the IP address of another interface to enable IP connectivity.</p> <p>The following command was introduced or modified: <b>ip unnumbered</b>.</p>   |
| Using 31-bit Prefixes on IP Point-to-Point Links | 12.0(14)S 12.2(4)T | <p>In order to conserve IP address space on the Internet, a 31-bit prefix length allows the use of only two IP addresses on a point-to-point link. Previously, customers had to use four IP addresses or unnumbered interfaces for point-to-point links.</p>                 |

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: [www.cisco.com/go/trademarks](http://www.cisco.com/go/trademarks). Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2011 Cisco Systems, Inc. All rights reserved.