

Configuring EtherChannels

- Finding Feature Information, on page 1
- Restrictions for EtherChannels, on page 1
- Information About EtherChannels, on page 2
- How to Configure EtherChannels, on page 16
- Monitoring EtherChannel, PAgP, and LACP Status, on page 29
- Configuration Examples for Configuring EtherChannels, on page 30
- Additional References for EtherChannels, on page 32
- Feature Information for EtherChannels, on page 33

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to http://www.cisco.com/go/cfn. An account on Cisco.com is not required.

Restrictions for EtherChannels

The following are restrictions for EtherChannels:


- All ports in an EtherChannel must be assigned to the same VLAN or they must be configured as trunk ports.
- Layer 3 EtherChannels are not supported if running the LAN Base license feature set.
- You cannot have a switch stack containing a mix of Catalyst 3850 and Catalyst 3650 switches.

Information About EtherChannels

EtherChannel Overview

An EtherChannel consists of individual Ethernet links bundled into a single logical link.

Figure 1: Typical EtherChannel Configuration

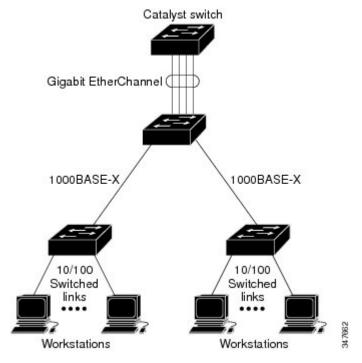

The EtherChannel provides full-duplex bandwidth up to 8 Gb/s (Gigabit EtherChannel) or 80 Gb/s (10-Gigabit EtherChannel) between your switch and another switch or host.

Each EtherChannel can consist of up to eight compatibly configured Ethernet ports.

The number of EtherChannels is limited to 128.

The LAN Base feature set supports up to 24 EtherChannels.

All ports in each EtherChannel must be configured as either Layer 2 or Layer 3 ports. The EtherChannel Layer 3 ports are made up of routed ports. Routed ports are physical ports configured to be in Layer 3 mode by using the **no switchport** interface configuration command.

Related Topics

Configuring Layer 2 EtherChannels (CLI), on page 16 EtherChannel Configuration Guidelines, on page 14 Default EtherChannel Configuration, on page 13

Layer 2 EtherChannel Configuration Guidelines, on page 15

EtherChannel Modes

You can configure an EtherChannel in one of these modes: Port Aggregation Protocol (PAgP), Link Aggregation Control Protocol (LACP), or On. Configure both ends of the EtherChannel in the same mode:

- When you configure one end of an EtherChannel in either PAgP or LACP mode, the system negotiates with the other end of the channel to determine which ports should become active. If the remote port cannot negotiate an EtherChannel, the local port is put into an independent state and continues to carry data traffic as would any other single link. The port configuration does not change, but the port does not participate in the EtherChannel.
- When you configure an EtherChannel in the **on** mode, no negotiations take place. The switch forces all compatible ports to become active in the EtherChannel. The other end of the channel (on the other switch) must also be configured in the **on** mode; otherwise, packet loss can occur.

Related Topics

Configuring Layer 2 EtherChannels (CLI), on page 16 EtherChannel Configuration Guidelines, on page 14 Default EtherChannel Configuration, on page 13 Layer 2 EtherChannel Configuration Guidelines, on page 15

EtherChannel on Switches

You can create an EtherChannel on a switch, on a single switch in the stack, or on multiple switches in the stack (known as cross-stack EtherChannel).

Figure 2: Single-Switch EtherChannel


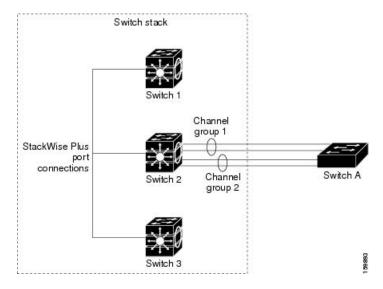


Figure 3: Cross-Stack EtherChannel

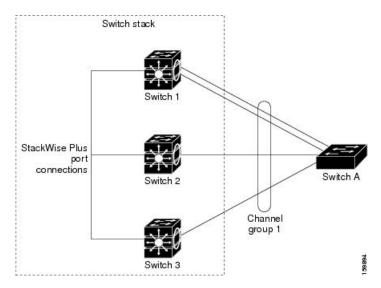

Configuring Layer 2 EtherChannels (CLI), on page 16

EtherChannel Configuration Guidelines, on page 14

Default EtherChannel Configuration, on page 13

Layer 2 EtherChannel Configuration Guidelines, on page 15

EtherChannel Link Failover

If a link within an EtherChannel fails, traffic previously carried over that failed link moves to the remaining links within the EtherChannel. If traps are enabled on the switch, a trap is sent for a failure that identifies the switch, the EtherChannel, and the failed link. Inbound broadcast and multicast packets on one link in an EtherChannel are blocked from returning on any other link of the EtherChannel.

Related Topics

Configuring Layer 2 EtherChannels (CLI), on page 16

EtherChannel Configuration Guidelines, on page 14

Default EtherChannel Configuration, on page 13


Layer 2 EtherChannel Configuration Guidelines, on page 15

Channel Groups and Port-Channel Interfaces

An EtherChannel comprises a channel group and a port-channel interface. The channel group binds physical ports to the port-channel interface. Configuration changes applied to the port-channel interface apply to all the physical ports bound together in the channel group.

Figure 4: Relationship of Physical Ports, Channel Group and Port-Channel Interface

The **channel-group** command binds the physical port and the port-channel interface together. Each EtherChannel has a port-channel logical interface numbered from 1 to 128. This port-channel interface number corresponds to the one specified with the **channel-group** interface configuration command.

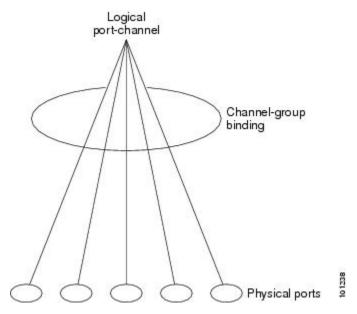

• With Layer 2 ports, use the **channel-group** interface configuration command to dynamically create the port-channel interface.

You also can use the **interface port-channel** port-channel-number global configuration command to manually create the port-channel interface, but then you must use the **channel-group** channel-group-number command to bind the logical interface to a physical port. The channel-group-number can be the same as the port-channel-number, or you can use a new number. If you use a new number, the **channel-group** command dynamically creates a new port channel.

- With Layer 3 ports, you should manually create the logical interface by using the **interface port-channel** global configuration command followed by the **no switchport** interface configuration command. You then manually assign an interface to the EtherChannel by using the **channel-group** interface configuration command.
- With Layer 3 ports, use the **no switchport** interface command to configure the interface as a Layer 3 interface, and then use the **channel-group** interface configuration command to dynamically create the port-channel interface.

Related Topics

Creating Port-Channel Logical Interfaces (CLI)
EtherChannel Configuration Guidelines, on page 14
Default EtherChannel Configuration, on page 13
Layer 2 EtherChannel Configuration Guidelines, on page 15
Configuring the Physical Interfaces (CLI)

Port Aggregation Protocol

The Port Aggregation Protocol (PAgP) is a Cisco-proprietary protocol that can be run only on Cisco switches and on those switches licensed by vendors to support PAgP. PAgP facilitates the automatic creation of EtherChannels by exchanging PAgP packets between Ethernet ports. PAgP can be enabled on cross-stack EtherChannels.

By using PAgP, the switch or switch stack learns the identity of partners capable of supporting PAgP and the capabilities of each port. It then dynamically groups similarly configured ports (on a single switch in the stack) into a single logical link (channel or aggregate port). Similarly configured ports are grouped based on hardware, administrative, and port parameter constraints. For example, PAgP groups the ports with the same speed, duplex mode, native VLAN, VLAN range, and trunking status and type. After grouping the links into an EtherChannel, PAgP adds the group to the spanning tree as a single switch port.

PAgP Modes

PAgP modes specify whether a port can send PAgP packets, which start PAgP negotiations, or only respond to PAgP packets received.

Table 1: EtherChannel PAgP Modes

Mode	Description
auto	Places a port into a passive negotiating state, in which the port responds to PAgP packets it receives but does not start PAgP packet negotiation. This setting minimizes the transmission of PAgP packets.
desirable	Places a port into an active negotiating state, in which the port starts negotiations with other ports by sending PAgP packets. This mode is supported when the EtherChannel members are from different switches in the switch stack (cross-stack EtherChannel).

Switch ports exchange PAgP packets only with partner ports configured in the **auto** or **desirable** modes. Ports configured in the **on** mode do not exchange PAgP packets.

Both the **auto** and **desirable** modes enable ports to negotiate with partner ports to form an EtherChannel based on criteria such as port speed. and for Layer 2 EtherChannels, based on trunk state and VLAN numbers.

Ports can form an EtherChannel when they are in different PAgP modes as long as the modes are compatible. For example:

- A port in the **desirable** mode can form an EtherChannel with another port that is in the **desirable** or **auto** mode.
- A port in the **auto** mode can form an EtherChannel with another port in the **desirable** mode.

A port in the **auto** mode cannot form an EtherChannel with another port that is also in the **auto** mode because neither port starts PAgP negotiation.

Related Topics

Configuring Layer 2 EtherChannels (CLI), on page 16

EtherChannel Configuration Guidelines, on page 14

Default EtherChannel Configuration, on page 13

Layer 2 EtherChannel Configuration Guidelines, on page 15

Creating Port-Channel Logical Interfaces (CLI)

Configuring the Physical Interfaces (CLI)

Silent Mode

If your switch is connected to a partner that is PAgP-capable, you can configure the switch port for nonsilent operation by using the **non-silent** keyword. If you do not specify **non-silent** with the **auto** or **desirable** mode, silent mode is assumed.

Use the silent mode when the switch is connected to a device that is not PAgP-capable and seldom, if ever, sends packets. An example of a silent partner is a file server or a packet analyzer that is not generating traffic. In this case, running PAgP on a physical port connected to a silent partner prevents that switch port from ever becoming operational. However, the silent setting allows PAgP to operate, to attach the port to a channel group, and to use the port for transmission.

Related Topics

Configuring Layer 2 EtherChannels (CLI), on page 16
EtherChannel Configuration Guidelines, on page 14
Default EtherChannel Configuration, on page 13
Layer 2 EtherChannel Configuration Guidelines, on page 15
Creating Port-Channel Logical Interfaces (CLI)
Configuring the Physical Interfaces (CLI)

PAgP Learn Method and Priority

Network devices are classified as PAgP physical learners or aggregate-port learners. A device is a physical learner if it learns addresses by physical ports and directs transmissions based on that knowledge. A device is an aggregate-port learner if it learns addresses by aggregate (logical) ports. The learn method must be configured the same at both ends of the link.

When a device and its partner are both aggregate-port learners, they learn the address on the logical port-channel. The device sends packets to the source by using any of the ports in the EtherChannel. With aggregate-port learning, it is not important on which physical port the packet arrives.

PAgP cannot automatically detect when the partner device is a physical learner and when the local device is an aggregate-port learner. Therefore, you must manually set the learning method on the local device to learn addresses by physical ports. You also must set the load-distribution method to source-based distribution, so that any given source MAC address is always sent on the same physical port.

You also can configure a single port within the group for all transmissions and use other ports for hot-standby. The unused ports in the group can be swapped into operation in just a few seconds if the selected single port loses hardware-signal detection. You can configure which port is always selected for packet transmission by changing its priority with the **pagp port-priority** interface configuration command. The higher the priority, the more likely that the port will be selected.



Note

The switch supports address learning only on aggregate ports even though the **physical-port** keyword is provided in the CLI. The **pagp learn-method** command and the **pagp port-priority** command have no effect on the switch hardware, but they are required for PAgP interoperability with devices that only support address learning by physical ports, such as the Catalyst 1900 switch.

When the link partner of the switch is a physical learner, we recommend that you configure the switch as a physical-port learner by using the **pagp learn-method physical-port** interface configuration command. Set the load-distribution method based on the source MAC address by using the **port-channel load-balance src-mac** global configuration command. The switch then sends packets to the physical learner using the same port in the EtherChannel from which it learned the source address. Only use the **pagp learn-method** command in this situation.

Related Topics

Configuring the PAgP Learn Method and Priority (CLI), on page 23 EtherChannel Configuration Guidelines, on page 14

Default EtherChannel Configuration, on page 13 Monitoring EtherChannel, PAgP, and LACP Status, on page 29 Layer 2 EtherChannel Configuration Guidelines, on page 15

PAgP Interaction with Other Features

The Dynamic Trunking Protocol (DTP) and the Cisco Discovery Protocol (CDP) send and receive packets over the physical ports in the EtherChannel. Trunk ports send and receive PAgP protocol data units (PDUs) on the lowest numbered VLAN.

In Layer 2 EtherChannels, the first port in the channel that comes up provides its MAC address to the EtherChannel. If this port is removed from the bundle, one of the remaining ports in the bundle provides its MAC address to the EtherChannel. For Layer 3 EtherChannels, the MAC address is allocated by the active switch as soon as the interface is created (through the **interface port-channel** global configuration command).

PAgP sends and receives PAgP PDUs only from ports that are up and have PAgP enabled for the auto or desirable mode.

Link Aggregation Control Protocol

The LACP is defined in IEEE 802.3ad and enables Cisco switches to manage Ethernet channels between switches that conform to the IEEE 802.3ad protocol. LACP facilitates the automatic creation of EtherChannels by exchanging LACP packets between Ethernet ports.

By using LACP, the switch or switch stack learns the identity of partners capable of supporting LACP and the capabilities of each port. It then dynamically groups similarly configured ports into a single logical link (channel or aggregate port). Similarly configured ports are grouped based on hardware, administrative, and port parameter constraints. For example, LACP groups the ports with the same speed, duplex mode, native VLAN, VLAN range, and trunking status and type. After grouping the links into an EtherChannel, LACP adds the group to the spanning tree as a single switch port.

LACP Modes

LACP modes specify whether a port can send LACP packets or only receive LACP packets.

Table 2: EtherChannel LACP Modes

Mode	Description
active	Places a port into an active negotiating state in which the port starts negotiations with other ports by sending LACP packets.
passive	Places a port into a passive negotiating state in which the port responds to LACP packets that it receives, but does not start LACP packet negotiation. This setting minimizes the transmission of LACP packets.

Both the **active** and **passive LACP** modes enable ports to negotiate with partner ports to an EtherChannel based on criteria such as port speed, and for Layer 2 EtherChannels, based on trunk state and VLAN numbers.

Ports can form an EtherChannel when they are in different LACP modes as long as the modes are compatible. For example:

 A port in the active mode can form an EtherChannel with another port that is in the active or passive mode. • A port in the **passive** mode cannot form an EtherChannel with another port that is also in the **passive** mode because neither port starts LACP negotiation.

Related Topics

Configuring Layer 2 EtherChannels (CLI), on page 16 EtherChannel Configuration Guidelines, on page 14 Default EtherChannel Configuration, on page 13 Layer 2 EtherChannel Configuration Guidelines, on page 15

LACP and Link Redundancy

LACP port-channel operation, bandwidth availability, and link redundancy can be further refined with the LACP port-channel min-links and the LACP max-bundle features.

The LACP port-channel min-links feature:

- Configures the minimum number of ports that must be linked up and bundled in the LACP port channel.
- Prevents a low-bandwidth LACP port channel from becoming active.
- Causes an LACP port channel to become inactive if there are too few active members ports to supply the required minimum bandwidth.

The LACP max-bundle feature:

- Defines an upper limit on the number of bundled ports in an LACP port channel.
- Allows hot-standby ports with fewer bundled ports. For example, in an LACP port channel with five
 ports, you can specify a max-bundle of three, and the two remaining ports are designated as hot-standby
 ports.

Related Topics

Configuring the LACP Max Bundle Feature (CLI), on page 25 Configuring LACP Hot-Standby Ports: Example, on page 31 Configuring the Port Channel Min-Links Feature (CLI), on page 26

LACP Interaction with Other Features

The DTP and the CDP send and receive packets over the physical ports in the EtherChannel. Trunk ports send and receive LACP PDUs on the lowest numbered VLAN.

In Layer 2 EtherChannels, the first port in the channel that comes up provides its MAC address to the EtherChannel. If this port is removed from the bundle, one of the remaining ports in the bundle provides its MAC address to the EtherChannel. For Layer 3 EtherChannels, the MAC address is allocated by the active switch as soon as the interface is created through the **interface port-channel** global configuration command.

LACP sends and receives LACP PDUs only from ports that are up and have LACP enabled for the active or passive mode.

EtherChannel On Mode

EtherChannel **on** mode can be used to manually configure an EtherChannel. The **on** mode forces a port to join an EtherChannel without negotiations. The **on** mode can be useful if the remote device does not support

PAgP or LACP. In the **on** mode, a usable EtherChannel exists only when the switches at both ends of the link are configured in the **on** mode.

Ports that are configured in the **on** mode in the same channel group must have compatible port characteristics, such as speed and duplex. Ports that are not compatible are suspended, even though they are configured in the **on** mode.



Caution

You should use care when using the **on** mode. This is a manual configuration, and ports on both ends of the EtherChannel must have the same configuration. If the group is misconfigured, packet loss or spanning-tree loops can occur.

Load-Balancing and Forwarding Methods

EtherChannel balances the traffic load across the links in a channel by reducing part of the binary pattern formed from the addresses in the frame to a numerical value that selects one of the links in the channel. You can specify one of several different load-balancing modes, including load distribution based on MAC addresses, IP addresses, source addresses, destination addresses, or both source and destination addresses. The selected mode applies to all EtherChannels configured on the switch.

You configure the load-balancing and forwarding method by using the **port-channel load-balance** and the **port-channel load-balance extended**global configuration commands.

Related Topics

Configuring EtherChannel Load-Balancing (CLI), on page 20

EtherChannel Configuration Guidelines, on page 14

Layer 2 EtherChannel Configuration Guidelines, on page 15

Default EtherChannel Configuration, on page 13

Layer 3 EtherChannel Configuration Guidelines, on page 16

MAC Address Forwarding

With source-MAC address forwarding, when packets are forwarded to an EtherChannel, they are distributed across the ports in the channel based on the source-MAC address of the incoming packet. Therefore, to provide load-balancing, packets from different hosts use different ports in the channel, but packets from the same host use the same port in the channel.

With destination-MAC address forwarding, when packets are forwarded to an EtherChannel, they are distributed across the ports in the channel based on the destination host's MAC address of the incoming packet. Therefore, packets to the same destination are forwarded over the same port, and packets to a different destination are sent on a different port in the channel.

With source-and-destination MAC address forwarding, when packets are forwarded to an EtherChannel, they are distributed across the ports in the channel based on both the source and destination MAC addresses. This forwarding method, a combination source-MAC and destination-MAC address forwarding methods of load distribution, can be used if it is not clear whether source-MAC or destination-MAC address forwarding is better suited on a particular switch. With source-and-destination MAC-address forwarding, packets sent from host A to host B, host A to host C, and host C to host B could all use different ports in the channel.

Related Topics

Configuring EtherChannel Load-Balancing (CLI), on page 20 EtherChannel Configuration Guidelines, on page 14

Layer 2 EtherChannel Configuration Guidelines, on page 15 Default EtherChannel Configuration, on page 13 Layer 3 EtherChannel Configuration Guidelines, on page 16

IP Address Forwarding

With source-IP address-based forwarding, packets are distributed across the ports in the EtherChannel based on the source-IP address of the incoming packet. To provide load balancing, packets from different IP addresses use different ports in the channel, and packets from the same IP address use the same port in the channel.

With destination-IP address-based forwarding, packets are distributed across the ports in the EtherChannel based on the destination-IP address of the incoming packet. To provide load balancing, packets from the same IP source address sent to different IP destination addresses could be sent on different ports in the channel. Packets sent from different source IP addresses to the same destination IP address are always sent on the same port in the channel.

With source-and-destination IP address-based forwarding, packets are distributed across the ports in the EtherChannel based on both the source and destination IP addresses of the incoming packet. This forwarding method, a combination of source-IP and destination-IP address-based forwarding, can be used if it is not clear whether source-IP or destination-IP address-based forwarding is better suited on a particular switch. In this method, packets sent from the IP address A to IP address B, from IP address A to IP address C, and from IP address C to IP address B could all use different ports in the channel.

Related Topics


Configuring EtherChannel Load-Balancing (CLI), on page 20 EtherChannel Configuration Guidelines, on page 14 Layer 2 EtherChannel Configuration Guidelines, on page 15 Default EtherChannel Configuration, on page 13 Layer 3 EtherChannel Configuration Guidelines, on page 16

Load-Balancing Advantages

Different load-balancing methods have different advantages, and the choice of a particular load-balancing method should be based on the position of the switch in the network and the kind of traffic that needs to be load-distributed.

Figure 5: Load Distribution and Forwarding Methods

In the following figure, an EtherChannel of four workstations communicates with a router. Because the router is a single MAC-address device, source-based forwarding on the switch EtherChannel ensures that the switch uses all available bandwidth to the router. The router is configured for destination-based forwarding because

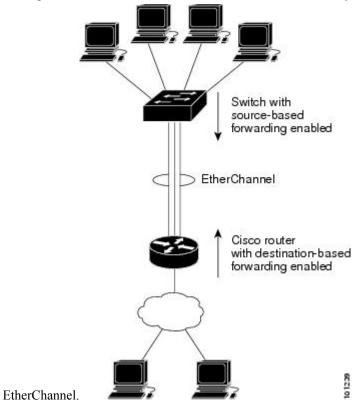

the large number of workstations ensures that the traffic is evenly distributed from the router

Use the option that provides the greatest variety in your configuration. For example, if the traffic on a channel is going only to a single MAC address, using the destination-MAC address always chooses the same link in the channel. Using source addresses or IP addresses might result in better load-balancing.

Related Topics

Configuring EtherChannel Load-Balancing (CLI), on page 20 EtherChannel Configuration Guidelines, on page 14 Layer 2 EtherChannel Configuration Guidelines, on page 15 Default EtherChannel Configuration, on page 13 Layer 3 EtherChannel Configuration Guidelines, on page 16

EtherChannel and Switch Stacks

If a stack member that has ports participating in an EtherChannel fails or leaves the stack, the active switch removes the failed stack member switch ports from the EtherChannel. The remaining ports of the EtherChannel, if any, continue to provide connectivity.

When a switch is added to an existing stack, the new switch receives the running configuration from the active switch and updates itself with the EtherChannel-related stack configuration. The stack member also receives the operational information (the list of ports that are up and are members of a channel).

When two stacks merge that have EtherChannels configured between them, self-looped ports result. Spanning tree detects this condition and acts accordingly. Any PAgP or LACP configuration on a winning switch stack is not affected, but the PAgP or LACP configuration on the losing switch stack is lost after the stack reboots.

Switch Stack and PAgP

With PAgP, if the active switch fails or leaves the stack, the standby switch becomes the new active switch. A spanning-tree reconvergence is not triggered unless there is a change in the EtherChannel bandwidth. The new active switch synchronizes the configuration of the stack members to that of the active switch. The PAgP configuration is not affected after an active switch change unless the EtherChannel has ports residing on the old active switch.

Switch Stacks and LACP

With LACP, the system ID uses the stack MAC address from the active switch. When an active switch fails or leaves the stack and the standby switch becomes the new active switch change, the LACP system ID is unchanged. By default, the LACP configuration is not affected after the active switch changes.

Default EtherChannel Configuration

The default EtherChannel configuration is described in this table.

Table 3: Default EtherChannel Configuration

Feature	Default Setting	
Channel groups	None assigned.	
Port-channel logical interface	None defined.	
PAgP mode	No default.	
PAgP learn method	Aggregate-port learning on all ports.	
PAgP priority	128 on all ports.	
LACP mode	No default.	
LACP learn method	Aggregate-port learning on all ports.	
LACP port priority	32768 on all ports.	
LACP system priority	32768.	
LACP system ID	LACP system priority and the switch or stack MAC address.	
Load-balancing	Load distribution on the switch is based on the source-MAC address of the incoming packet.	

Related Topics

Configuring Layer 2 EtherChannels (CLI), on page 16

EtherChannel Overview, on page 2

EtherChannel Modes, on page 3

EtherChannel on Switches, on page 3

EtherChannel Link Failover, on page 4

LACP Modes, on page 8

PAgP Modes, on page 6

Silent Mode, on page 6

Creating Port-Channel Logical Interfaces (CLI)

Channel Groups and Port-Channel Interfaces, on page 4

Configuring the Physical Interfaces (CLI)

Configuring EtherChannel Load-Balancing (CLI), on page 20

Load-Balancing and Forwarding Methods, on page 10

MAC Address Forwarding, on page 10

IP Address Forwarding, on page 11

Load-Balancing Advantages, on page 11

Configuring the PAgP Learn Method and Priority (CLI), on page 23

PAgP Learn Method and Priority, on page 7

Configuring the LACP System Priority (CLI), on page 27

Configuring the LACP Port Priority (CLI), on page 28

EtherChannel Configuration Guidelines

If improperly configured, some EtherChannel ports are automatically disabled to avoid network loops and other problems. Follow these guidelines to avoid configuration problems:

- Do not try to configure more than 128 EtherChannels on the switch or switch stack.
- Configure a PAgP EtherChannel with up to eight Ethernet ports of the same type.
- Configure a LACP EtherChannel with up to 16 Ethernet ports of the same type. Up to eight ports can be active, and up to eight ports can be in standby mode.
- Configure all ports in an EtherChannel to operate at the same speeds and duplex modes.
- Enable all ports in an EtherChannel. A port in an EtherChannel that is disabled by using the **shutdown** interface configuration command is treated as a link failure, and its traffic is transferred to one of the remaining ports in the EtherChannel.
- When a group is first created, all ports follow the parameters set for the first port to be added to the group. If you change the configuration of one of these parameters, you must also make the changes to all ports in the group:
 - · Allowed-VLAN list
 - Spanning-tree path cost for each VLAN
 - Spanning-tree port priority for each VLAN
 - Spanning-tree Port Fast setting
- Do not configure a port to be a member of more than one EtherChannel group.
- Do not configure an EtherChannel in both the PAgP and LACP modes. EtherChannel groups running PAgP and LACP can coexist on the same switch or on different switches in the stack. Individual EtherChannel groups can run either PAgP or LACP, but they cannot interoperate.
- Do not configure a secure port as part of an EtherChannel or the reverse.

- Do not configure a port that is an active or a not-yet-active member of an EtherChannel as an IEEE 802.1x port. If you try to enable IEEE 802.1x on an EtherChannel port, an error message appears, and IEEE 802.1x is not enabled.
- If EtherChannels are configured on switch interfaces, remove the EtherChannel configuration from the interfaces before globally enabling IEEE 802.1x on a switch by using the **dot1x system-auth-control** global configuration command.
- If cross-stack EtherChannel is configured and the switch stack partitions, loops and forwarding issues can occur.

Configuring Layer 2 EtherChannels (CLI), on page 16

EtherChannel Overview, on page 2

EtherChannel Modes, on page 3

EtherChannel on Switches, on page 3

EtherChannel Link Failover, on page 4

LACP Modes, on page 8

PAgP Modes, on page 6

Silent Mode, on page 6

Creating Port-Channel Logical Interfaces (CLI)

Channel Groups and Port-Channel Interfaces, on page 4

Configuring the Physical Interfaces (CLI)

Configuring EtherChannel Load-Balancing (CLI), on page 20

Load-Balancing and Forwarding Methods, on page 10

MAC Address Forwarding, on page 10

IP Address Forwarding, on page 11

Load-Balancing Advantages, on page 11

Configuring the PAgP Learn Method and Priority (CLI), on page 23

PAgP Learn Method and Priority, on page 7

Configuring the LACP System Priority (CLI), on page 27

Configuring the LACP Port Priority (CLI), on page 28

Layer 2 EtherChannel Configuration Guidelines

When configuring Layer 2 EtherChannels, follow these guidelines:

- Assign all ports in the EtherChannel to the same VLAN, or configure them as trunks. Ports with different native VLANs cannot form an EtherChannel.
- An EtherChannel supports the same allowed range of VLANs on all the ports in a trunking Layer 2 EtherChannel. If the allowed range of VLANs is not the same, the ports do not form an EtherChannel even when PAgP is set to the **auto** or **desirable** mode.
- Ports with different spanning-tree path costs can form an EtherChannel if they are otherwise compatibly
 configured. Setting different spanning-tree path costs does not, by itself, make ports incompatible for
 the formation of an EtherChannel.

Related Topics

Configuring Layer 2 EtherChannels (CLI), on page 16

EtherChannel Overview, on page 2

EtherChannel Modes, on page 3

EtherChannel on Switches, on page 3

EtherChannel Link Failover, on page 4

LACP Modes, on page 8

PAgP Modes, on page 6

Silent Mode, on page 6

Creating Port-Channel Logical Interfaces (CLI)

Channel Groups and Port-Channel Interfaces, on page 4

Configuring the Physical Interfaces (CLI)

Configuring EtherChannel Load-Balancing (CLI), on page 20

Load-Balancing and Forwarding Methods, on page 10

MAC Address Forwarding, on page 10

IP Address Forwarding, on page 11

Load-Balancing Advantages, on page 11

Configuring the PAgP Learn Method and Priority (CLI), on page 23

PAgP Learn Method and Priority, on page 7

Configuring the LACP System Priority (CLI), on page 27

Configuring the LACP Port Priority (CLI), on page 28

Layer 3 EtherChannel Configuration Guidelines

• For Layer 3 EtherChannels, assign the Layer 3 address to the port-channel logical interface, not to the physical ports in the channel.

Related Topics

Configuring EtherChannel Load-Balancing (CLI), on page 20

Load-Balancing and Forwarding Methods, on page 10

MAC Address Forwarding, on page 10

IP Address Forwarding, on page 11

Load-Balancing Advantages, on page 11

How to Configure EtherChannels

After you configure an EtherChannel, configuration changes applied to the port-channel interface apply to all the physical ports assigned to the port-channel interface, and configuration changes applied to the physical port affect only the port where you apply the configuration.

Configuring Layer 2 EtherChannels (CLI)

You configure Layer 2 EtherChannels by assigning ports to a channel group with the **channel-group** interface configuration command. This command automatically creates the port-channel logical interface.

SUMMARY STEPS

1. configure terminal

- 2. interface interface-id
- 3. switchport mode {access | trunk}
- 4. switchport access vlan vlan-id
- 5. channel-group channel-group-number mode $\{auto [non-silent] | desirable [non-silent] | on \} | \{active | passive\}$
- 6. end

	Command or Action	Purpose
Step 1	configure terminal	Enters the global configuration mode.
	Example:	
	Switch# configure terminal	
Step 2	interface interface-id Example:	Specifies a physical port, and enters interface configuration mode.
	Switch(config) # interface gigabitethernet2/0/1	Valid interfaces are physical ports.
		For a PAgP EtherChannel, you can configure up to eight ports of the same type and speed for the same group.
		For a LACP EtherChannel, you can configure up to 16 Ethernet ports of the same type. Up to eight ports can be active, and up to eight ports can be in standby mode.
Step 3	switchport mode {access trunk}	Assigns all ports as static-access ports in the same VLAN, or configure them as trunks.
	Example: Switch(config-if) # switchport mode access	If you configure the port as a static-access port, assign it to only one VLAN. The range is 1 to 4094.
Step 4	switchport access vlan vlan-id	(Optional) If you configure the port as a static-access port,
	Example:	assign it to only one VLAN. The range is 1 to 4094.
	Switch(config-if)# switchport access vlan 22	
Step 5	channel-group channel-group-number mode {auto [non-silent] desirable [non-silent] on } { active	Assigns the port to a channel group, and specifies the PAgP or the LACP mode.
	passive}	For mode , select one of these keywords:
	Example: Switch(config-if)# channel-group 5 mode auto	• auto—Enables PAgP only if a PAgP device is detected. It places the port into a passive negotiating state, in which the port responds to PAgP packets it receives but does not start PAgP packet negotiation. This keyword is not supported when EtherChannel members are from different switches in the switch stack.

	Command or Action	Purpose
		• desirable —Unconditionally enables PAgP. It places the port into an active negotiating state, in which the port starts negotiations with other ports by sending PAgP packets. This keyword is not supported when EtherChannel members are from different switches in the switch stack.
		• on —Forces the port to channel without PAgP or LACP. In the on mode, an EtherChannel exists only when a port group in the on mode is connected to another port group in the on mode.
		• non-silent —(Optional) If your switch is connected to a partner that is PAgP-capable, configures the switch port for nonsilent operation when the port is in the auto or desirable mode. If you do not specify non-silent, silent is assumed. The silent setting is for connections to file servers or packet analyzers. This setting allows PAgP to operate, to attach the port to a channel group, and to use the port for transmission.
		• active—Enables LACP only if a LACP device is detected. It places the port into an active negotiating state in which the port starts negotiations with other ports by sending LACP packets.
		• passive —Enables LACP on the port and places it into a passive negotiating state in which the port responds to LACP packets that it receives, but does not start LACP packet negotiation.
Step 6	end	Returns to privileged EXEC mode.
	Example:	
	Switch(config-if)# end	

EtherChannel Overview, on page 2

EtherChannel Modes, on page 3

EtherChannel on Switches, on page 3

EtherChannel Link Failover, on page 4

LACP Modes, on page 8

PAgP Modes, on page 6

Silent Mode, on page 6

EtherChannel Configuration Guidelines, on page 14

Default EtherChannel Configuration, on page 13

Layer 2 EtherChannel Configuration Guidelines, on page 15

Configuring Layer 3 EtherChannels (CLI)

Beginning in privileged EXEC mode, follow these steps to assign an Ethernet port to a Layer 3 EtherChannel. This procedure is required.

SUMMARY STEPS

- 1. configure terminal
- 2. interface interface-id
- 3. no ip address
- 4. no switchport
- 5. channel-group channel-group-number mode { auto [non-silent] | desirable [non-silent] | on } | { active | passive }
- 6. end

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	Switch# configure terminal	
Step 2	interface interface-id	Specifies a physical port, and enters interface configuration mode.
	Example:	Valid interfaces include physical ports.
	Switch(config) # interface gigabitethernet 1/0/2	
	, , , , , , , , , , , , , , , , , , ,	For a PAgP EtherChannel, you can configure up to eight ports of the same type and speed for the same group.
		For a LACP EtherChannel, you can configure up to 16 Ethernet ports of the same type. Up to eight ports can be active, and up to eight ports can be in standby mode.
Step 3	no ip address	Ensures that there is no IP address assigned to the physical
	Example:	port.
	Switch(config-if)# no ip address	
Step 4	no switchport	Puts the port into Layer 3 mode.
	Example:	
	Switch(config-if)# no switchport	
Step 5	channel-group channel-group-number mode { auto [non-silent] desirable [non-silent] on }	Assigns the port to a channel group, and specifies the PAgP or the LACP mode.
	{ active passive }	For mode , select one of these keywords:

	Command or Action	Purpose
	Example: Switch(config-if)# channel-group 5 mode auto	• auto—Enables PAgP only if a PAgP device is detected. It places the port into a passive negotiating state, in which the port responds to PAgP packets it receives but does not start PAgP packet negotiation. This keyword is not supported when EtherChannel members are from different switches in the switch stack.
		• desirable—Unconditionally enables PAgP. It places the port into an active negotiating state, in which the port starts negotiations with other ports by sending PAgP packets. This keyword is not supported when EtherChannel members are from different switches in the switch stack.
		• on—Forces the port to channel without PAgP or LACP. In the on mode, an EtherChannel exists only when a port group in the on mode is connected to another port group in the on mode.
		• non-silent—(Optional) If your switch is connected to a partner that is PAgP capable, configures the switch port for nonsilent operation when the port is in the auto or desirable mode. If you do not specify non-silent, silent is assumed. The silent setting is for connections to file servers or packet analyzers. This setting allows PAgP to operate, to attach the port to a channel group, and to use the port for transmission.
		• active—Enables LACP only if a LACP device is detected. It places the port into an active negotiating state in which the port starts negotiations with other ports by sending LACP packets.
		• passive —Enables LACP on the port and places it into a passive negotiating state in which the port responds to LACP packets that it receives, but does not start LACP packet negotiation.
Step 6	end	Returns to privileged EXEC mode.
	Example:	
	Switch(config-if)# end	

Configuring EtherChannel Load-Balancing (CLI)

You can configure EtherChannel load-balancing to use one of several different forwarding methods. This task is optional.

SUMMARY STEPS

- 1. configure terminal
- 2. port-channel load-balance { dst-ip | dst-mac | dst-mixed-ip-port | dst-port | extended [dst-ip | dst-mac | dst-port | ipv6-label | l3-proto | src-ip | src-mac | src-port] | src-dst-ip | src-dst-mac src-dst-mixed-ip-port src-dst-portsrc-ip | src-mac | src-mixed-ip-port | src-port}
- 3. end

Command or Action	Purpose
configure terminal	Enters global configuration mode.
Example:	
Switch# configure terminal	
port-channel load-balance { dst-ip dst-mac dst-mixed-ip-port dst-port extended [dst-ip dst-mac dst-port ipv6-label 13-proto src-ip src-mac src-port] src-dst-ip src-dst-mac src-dst-mixed-ip-port src-dst-portsrc-ip src-mac src-mixed-ip-port src-port } Example: Switch(config)# port-channel load-balance src-mac	Configures an EtherChannel load-balancing method. The default is src-mac. Select one of these load-distribution methods: • dst-ip—Specifies destination-host IP address. • dst-mac—Specifies the destination-host MAC address of the incoming packet. • dst-mixed-ip-port—Specifies the host IP address and TCP/UDP port. • dst-port—Specifies the destination TCP/UDP port. • extended—Specifies extended load balance methodscombinations of source and destination methods beyond those available with the standard command. • ipv6-label—Specifies the IPv6 flow label. • l3-proto—Specifies the Layer 3 protocol. • src-dst-ip—Specifies the source and destination host IP address. • src-dst-mac—Specifies the source and destination host MAC address. • src-dst-mixed-ip-port—Specifies the source and destination host IP address and TCP/UDP port. • src-dst-port—Specifies the source and destination TCP/UDP port.
	configure terminal Example: Switch# configure terminal port-channel load-balance { dst-ip dst-mac dst-mixed-ip-port dst-port extended [dst-ip dst-mac dst-port ipv6-label l3-proto src-ip src-mac src-port] src-dst-ip src-dst-mac src-dst-mixed-ip-port src-dst-portsrc-ip src-mac src-mixed-ip-port src-port} Example:

	Command or Action	Purpose
		• src-mac—Specifies the source MAC address of the incoming packet.
		• src-mixed-ip-port —Specifies the source host IP address and TCP/UDP port.
		• src-port —Specifies the source TCP/UDP port.
Step 3	end	Returns to privileged EXEC mode.
	Example:	
	Switch(config)# end	

Load-Balancing and Forwarding Methods, on page 10

MAC Address Forwarding, on page 10

IP Address Forwarding, on page 11

Load-Balancing Advantages, on page 11

EtherChannel Configuration Guidelines, on page 14

Layer 2 EtherChannel Configuration Guidelines, on page 15

Default EtherChannel Configuration, on page 13

Layer 3 EtherChannel Configuration Guidelines, on page 16

Configuring EtherChannel Extended Load-Balancing (CLI)

Configure EtherChannel extended load-balancing when you want to use a combination of load-balancing methods.

This task is optional.

SUMMARY STEPS

- 1. configure terminal
- 2. port-channel load-balance extended [dst-ip | dst-mac dst-port | ipv6-label | l3-proto | src-ip | src-mac | src-port]
- 3. end

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	Switch# configure terminal	

	Command or Action	Purpose
Step 2	port-channel load-balance extended [dst-ip dst-mac dst-port ipv6-label 13-proto src-ip src-mac src-port] Example:	Configures an EtherChannel extended load-balancing method.
		The default is src-mac .
		Select one of these load-distribution methods:
	Switch(config) # port-channel load-balance extended dst-ip dst-mac src-ip	• dst-ip—Specifies destination-host IP address.
		• dst-mac—Specifies the destination-host MAC address of the incoming packet.
		• dst-port—Specifies the destination TCP/UDP port.
		• ipv6-label—Specifies the IPv6 flow label.
		• 13-proto—Specifies the Layer 3 protocol.
		• src-ip—Specifies the source host IP address.
		• src-mac—Specifies the source MAC address of the incoming packet.
		• src-port —Specifies the source TCP/UDP port.
Step 3	end	Returns to privileged EXEC mode.
	Example:	
	Switch(config)# end	
		<u> </u>

Configuring the PAgP Learn Method and Priority (CLI)

This task is optional.

SUMMARY STEPS

- 1. configure terminal
- 2. interface interface-id
- 3. pagp learn-method physical-port
- **4.** pagp port-priority priority
- 5. end

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	Switch# configure terminal	

	Command or Action	Purpose
Step 2	interface interface-id Example:	Specifies the port for transmission, and enters interface configuration mode.
	Switch(config)# interface gigabitethernet 1/0/2	
Step 3	pagp learn-method physical-port	Selects the PAgP learning method.
	Example: Switch(config-if)# pagp learn-method physical port	By default, aggregation-port learning is selected, which means the switch sends packets to the source by using any of the ports in the EtherChannel. With aggregate-port learning, it is not important on which physical port the packet arrives.
		Selects physical-port to connect with another switch that is a physical learner. Make sure to configure the port-channel load-balance global configuration command to src-mac .
		The learning method must be configured the same at both ends of the link.
Step 4	pagp port-priority priority Example:	Assigns a priority so that the selected port is chosen for packet transmission.
	Switch(config-if)# pagp port-priority 200	For <i>priority</i> , the range is 0 to 255. The default is 128. The higher the priority, the more likely that the port will be used for PAgP transmission.
Step 5	end	Returns to privileged EXEC mode.
	Example:	
	Switch(config-if)# end	

PAgP Learn Method and Priority, on page 7

EtherChannel Configuration Guidelines, on page 14

Default EtherChannel Configuration, on page 13

Monitoring EtherChannel, PAgP, and LACP Status, on page 29

Layer 2 EtherChannel Configuration Guidelines, on page 15

Configuring LACP Hot-Standby Ports

When LACP is enabled, the software, by default, tries to configure the maximum number of LACP-compatible ports in a channel, up to a maximum of 16 ports. Only eight LACP links can be active at one time; the remaining eight links are placed in hot-standby mode. If one of the active links becomes inactive, a link that is in the hot-standby mode becomes active in its place.

You can override the default behavior by specifying the maximum number of active ports in a channel, in which case, the remaining ports become hot-standby ports. For example, if you specify a maximum of five ports in a channel, up to 11 ports become hot-standby ports.

If you configure more than eight links for an EtherChannel group, the software automatically decides which of the hot-standby ports to make active based on the LACP priority. To every link between systems that operate LACP, the software assigns a unique priority made up of these elements (in priority order):

- LACP system priority
- System ID (the switch MAC address)
- LACP port priority
- Port number

In priority comparisons, numerically lower values have higher priority. The priority decides which ports should be put in standby mode when there is a hardware limitation that prevents all compatible ports from aggregating.

Determining which ports are active and which are hot standby is a two-step procedure. First the system with a numerically lower system priority and system ID is placed in charge of the decision. Next, that system decides which ports are active and which are hot standby, based on its values for port priority and port number. The port priority and port number values for the other system are not used.

You can change the default values of the LACP system priority and the LACP port priority to affect how the software selects active and standby links.

Configuring the LACP Max Bundle Feature (CLI)

When you specify the maximum number of bundled LACP ports allowed in a port channel, the remaining ports in the port channel are designated as hot-standby ports.

Beginning in privileged EXEC mode, follow these steps to configure the maximum number of LACP ports in a port channel. This procedure is optional.

SUMMARY STEPS

- 1. configure terminal
- 2. interface port-channel channel-number
- 3. lacp max-bundle max-bundle-number
- 4. end

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	Switch# configure terminal	
Step 2	interface port-channel channel-number	Enters interface configuration mode for a port channel.
	Example:	The range is 1 to 128.

	Command or Action	Purpose
	Switch(config)# interface port-channel 2	
Step 3	<pre>lacp max-bundle max-bundle-number Example: Switch(config-if)# lacp max-bundle 3</pre>	Specifies the maximum number of LACP ports in the port-channel bundle. The range is 1 to 8.
Step 4	<pre>end Example: Switch(config)# end</pre>	Returns to privileged EXEC mode.

LACP and Link Redundancy , on page 9 Configuring LACP Hot-Standby Ports: Example, on page 31

Configuring the Port Channel Min-Links Feature (CLI)

You can specify the minimum number of active ports that must be in the link-up state and bundled in an EtherChannel for the port channel interface to transition to the link-up state.

Beginning in privileged EXEC mode, follow these steps to configure the minimum number of links that are required for a port channel. This procedure is optional.

SUMMARY STEPS

- 1. configure terminal
- 2. interface port-channel channel-number
- **3.** port-channel min-links min-links-number
- 4. end

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	Switch# configure terminal	
Step 2	interface port-channel channel-number	Enters interface configuration mode for a port-channel.
	Example:	For <i>channel-number</i> , the range is 1 to 128.
	Switch(config)# interface port-channel 2	

	Command or Action	Purpose
Step 3	port-channel min-links min-links-number Example:	Specifies the minimum number of member ports that must be in the link-up state and bundled in the EtherChannel for the port channel interface to transition to the link-up state.
	Switch(config-if)# port-channel min-links 3	For min-links-number, the range is 2 to 8.
Step 4	end Example:	Returns to privileged EXEC mode.
	Switch(config)# end	

LACP and Link Redundancy, on page 9
Configuring LACP Hot-Standby Ports: Example, on page 31

Configuring the LACP System Priority (CLI)

You can configure the system priority for all the EtherChannels that are enabled for LACP by using the **lacp system-priority** global configuration command. You cannot configure a system priority for each LACP-configured channel. By changing this value from the default, you can affect how the software selects active and standby links.

You can use the **show etherchannel summary** privileged EXEC command to see which ports are in the hot-standby mode (denoted with an H port-state flag).

Beginning in privileged EXEC mode, follow these steps to configure the LACP system priority. This procedure is optional.

SUMMARY STEPS

- 1. configure terminal
- 2. lacp system-priority priority
- 3. end

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	Switch# configure terminal	
Step 2	lacp system-priority priority	Configures the LACP system priority.
	Example:	The range is 1 to 65535. The default is 32768.
	Switch(config)# lacp system-priority 32000	The lower the value, the higher the system priority.

	Command or Action	Purpose
Step 3	end	Returns to privileged EXEC mode.
	Example:	
	Switch(config)# end	

EtherChannel Configuration Guidelines, on page 14
Default EtherChannel Configuration, on page 13

Layer 2 EtherChannel Configuration Guidelines, on page 15

Monitoring EtherChannel, PAgP, and LACP Status, on page 29

Configuring the LACP Port Priority (CLI)

By default, all ports use the same port priority. If the local system has a lower value for the system priority and the system ID than the remote system, you can affect which of the hot-standby links become active first by changing the port priority of LACP EtherChannel ports to a lower value than the default. The hot-standby ports that have lower port numbers become active in the channel first. You can use the **show etherchannel summary** privileged EXEC command to see which ports are in the hot-standby mode (denoted with an H port-state flag).



Note

If LACP is not able to aggregate all the ports that are compatible (for example, the remote system might have more restrictive hardware limitations), all the ports that cannot be actively included in the EtherChannel are put in the hot-standby state and are used only if one of the channeled ports fails.

Beginning in privileged EXEC mode, follow these steps to configure the LACP port priority. This procedure is optional.

SUMMARY STEPS

- 1. configure terminal
- 2. interface interface-id
- 3. lacp port-priority priority
- 4. end

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	Switch# configure terminal	

	Command or Action	Purpose
Step 2	interface interface-id Example:	Specifies the port to be configured, and enters interface configuration mode.
	Switch(config)# interface gigabitethernet 1/0/2	
Step 3	lacp port-priority priority	Configures the LACP port priority.
	Example: Switch(config-if)# lacp port-priority 32000	The range is 1 to 65535. The default is 32768. The lower the value, the more likely that the port will be used for LACP transmission.
Step 4	end	Returns to privileged EXEC mode.
	Example:	
	Switch(config-if)# end	

EtherChannel Configuration Guidelines, on page 14
Default EtherChannel Configuration, on page 13
Layer 2 EtherChannel Configuration Guidelines, on page 15
Monitoring EtherChannel, PAgP, and LACP Status, on page 29

Monitoring EtherChannel, PAgP, and LACP Status

You can display EtherChannel, PAgP, and LACP status using the commands listed in this table.

Table 4: Commands for Monitoring EtherChannel, PAgP, and LACP Status

Command	Description
clear lacp { channel-group-number counters counters }	Clears LACP channel-group information and traffic counters.
clear pagp { channel-group-number counters counters }	Clears PAgP channel-group information and traffic counters.
show etherchannel channel-group-number detail port port-channel protocol summary] detail load-balance port port-channel protocol summary]	Displays EtherChannel information in a brief, detailed, and one-line summary form. Also displays the load-balance or frame-distribution scheme, port, port-channel, and protocol information.
show pagp [channel-group-number] { counters internal neighbor }	Displays PAgP information such as traffic information, the internal PAgP configuration, and neighbor information.

Command	Description
show pagp [channel-group-number] dual-active	Displays the dual-active detection status.
show lacp [channel-group-number] { counters internal neighbor sys-id}	Displays LACP information such as traffic information, the internal LACP configuration, and neighbor information.
show running-config	Verifies your configuration entries.
show etherchannel load-balance	Displays the load balance or frame distribution scheme among ports in the port channel.

```
Configuring the PAgP Learn Method and Priority (CLI), on page 23 PAgP Learn Method and Priority, on page 7 Configuring the LACP System Priority (CLI), on page 27 Configuring the LACP Port Priority (CLI), on page 28
```

Configuration Examples for Configuring EtherChannels

Configuring Layer 2 EtherChannels: Examples

This example shows how to configure an EtherChannel on a single switch in the stack. It assigns two ports as static-access ports in VLAN 10 to channel 5 with the PAgP mode **desirable**:

```
Switch# configure terminal
Switch(config) # interface range gigabitethernet2/0/1 -2
Switch(config-if-range) # switchport mode access
Switch(config-if-range) # switchport access vlan 10
Switch(config-if-range) # channel-group 5 mode desirable non-silent
Switch(config-if-range) # end
```

This example shows how to configure an EtherChannel on a single switch in the stack. It assigns two ports as static-access ports in VLAN 10 to channel 5 with the LACP mode active:

```
Switch# configure terminal
Switch(config)# interface range gigabitethernet2/0/1 -2
Switch(config-if-range)# switchport mode access
Switch(config-if-range)# switchport access vlan 10
Switch(config-if-range)# channel-group 5 mode active
Switch(config-if-range)# end
```

This example shows how to configure a cross-stack EtherChannel. It uses LACP passive mode and assigns two ports on stack member 1 and one port on stack member 2 as static-access ports in VLAN 10 to channel 5:

```
Switch# configure terminal
```

```
Switch(config) # interface range gigabitethernet2/0/4 -5
Switch(config-if-range) # switchport mode access
Switch(config-if-range) # switchport access vlan 10
Switch(config-if-range) # channel-group 5 mode passive
Switch(config-if-range) # exit
Switch(config) # interface gigabitethernet3/0/3
Switch(config-if) # switchport mode access
Switch(config-if) # switchport access vlan 10
Switch(config-if) # channel-group 5 mode passive
Switch(config-if) # exit
```

Configuring Layer 3 EtherChannels: Examples

This example shows how to configure a Layer 3 EtherChannel. It assigns two ports to channel 5 with the LACP mode active:

```
Switch# configure terminal
Switch(config)# interface range gigabitethernet2/0/1 -2
Switch(config-if-range)# no ip address
Switch(config-if-range)# no switchport
Switch(config-if-range)# channel-group 5 mode active
Switch(config-if-range)# end
```

This example shows how to configure a cross-stack Layer 3 EtherChannel. It assigns two ports on stack member 2 and one port on stack member 3 to channel 7 using LACP active mode:

```
Switch# configure terminal
Switch(config)# interface range gigabitethernet2/0/4 -5
Switch(config-if-range)# no ip address
Switch(config-if-range)# no switchport
Switch(config-if-range)# channel-group 7 mode active
Switch(config-if-range)# exit
Switch(config)# interface gigabitethernet3/0/3
Switch(config-if)# no ip address
Switch(config-if)# no switchport
Switch(config-if)# channel-group 7 mode active
Switch(config-if)# exit
```

Configuring LACP Hot-Standby Ports: Example

This example shows how to configure an Etherchannel (port channel 2) that will be active when there are at least three active ports, will comprise up to seven active ports and the remaining ports (up to nine) as hot-standby ports:

```
Switch# configure terminal
Switch(config)# interface port-channel 2
Switch(config-if)# port-channel min-links 3
Switch(config-if)# lacp max-bundle 7
```

Configuring the LACP Max Bundle Feature (CLI), on page 25 LACP and Link Redundancy, on page 9 Configuring the Port Channel Min-Links Feature (CLI), on page 26

Additional References for EtherChannels

Related Documents

Related Topic	Document Title
Layer 2 command reference	Layer 2/3 Command Reference (Catalyst 3650 Switches)

Error Message Decoder

Description	Link
To help you research and resolve system error messages in this release, use the Error Message Decoder tool.	https://www.cisco.com/cgi-bin/Support/Errordecoder/index.cgi

Standards and RFCs

Standard/RFC	Title
None	_

MIBs

MIB	MIBs Link
All supported MIBs for this release.	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

Technical Assistance

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/support
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

Feature Information for EtherChannels

Release	Modification
Cisco IOS XE 3.3SE	This feature was introduced.

Feature Information for EtherChannels