



Using Service Manager

Cisco Mobile Wireless Home Agent is the anchor point for mobile terminals for which mobile or proxy mobile services are provided. The Home Agent maintains mobile user registrations and tunnels packets that are destined for the mobile node to the PDSN or FA. The Home Agent supports reverse tunneling, and can securely tunnel packets to the PDSN by using IPSec.

You can use the HA Service Manager to manage various Home Agent services for users with homed or virtually homed IP addresses on the router.



Note

Some of the Sync Report functions require Network Operator and Network Administrator privileges.

This chapter provides information about:

- [Service Manager Tasks, page 4-1](#)
- [Selecting an HA Device Group, page 4-2](#)
- [Displaying an HA Configuration, page 4-4](#)
- [Generating Sync Reports, page 4-5](#)
- [Activating Services on HA Devices, page 4-11](#)
- [Managing Batch Configurations, page 4-40](#)

Service Manager Tasks

You can use the Service Manager tab to perform these tasks:

Table 4-1 Home Agent Service Manager Tasks

Option	Task	Topic
Select Group	Select a device group	Selecting an HA Device Group, page 4-2
Display Config	Display HA configuration commands of a device	Displaying an HA Configuration, page 4-4

Table 4-1 Home Agent Service Manager Tasks (continued)

Option	Task	Topic
Sync Report	Check the latest status of the master device and other devices in a group, from RME or DCR.	Checking Device Status, page 4-6
	Generate a Sync report.	Generating a Diff Report, page 4-6
	Display the differences in HA-specific configurations between any two devices of the group.	Comparing the Configurations of Two Devices, page 4-10
Service Activation	Activate various services	Activating Services on HA Devices, page 4-11
	Configure local IP pools	Local IP Pools, page 4-11
	Configure virtual networks	Working With Virtual Networks, page 4-15
	Assign home addresses with NAI	Assigning Home Addresses With NAI, page 4-18
	Assign home addresses without NAI	Assigning Home Addresses Without NAI, page 4-21
	Configure security associations for the mobile host, Home Agent, or Foreign Agent	Security Associations, page 4-24
	Configure VRF support on HA devices	VRF Support on HA, page 4-28
	Enable Hot-Lining	Hot-Lining, page 4-31
	Configure ODAP client parameters	Configuring ODAP Client Parameters, page 4-34
	Configure ODAP client pools	Configuring ODAP Client, page 4-36
Configure HA-DNS server address assignment and IP reachability	Configuring HA-DNS, page 4-38	
Batch Configuration	Manage batch configurations	Managing Batch Configurations, page 4-40

Selecting an HA Device Group

Before you enable service activation, you must categorize device entities into a logical group. After you select a group, you can download the service-activation configurations to all the devices in the group.



Note

All devices in the group must be fully managed and monitored by Resource Manager Essentials (RME).

To select a HA device group:

Step 1 Choose **HA Service Manger > Service Manager > Select Group**.

The Group Selection window appears. (See [Figure 4-1 on page 4-3](#).)

Figure 4-1 Group Selection window

Step 2 Choose a group from the list.

Step 3 Click **View** to see the devices in the group.

A popup window displays the following information about the devices:

Field	Description
Display Name	Display name of the device.
Host Name	Name of the host for the device.
IP Address	IP address of the device.

The master device is designated by an asterisk (*).

Step 4 Check the **Fetch Config** check box to obtain the running configuration of the devices in this group.

Help Desk and Approver operators do not have the privilege to do Fetch Config.



Note Fetch Config fetches the configuration from the device and uploads it to the RME archive. The HA SM then obtains that configuration from RME, rather than directly from the device. If the RME archive already contains the running configuration of the device, you need not select **Fetch Config**. If you have modified the running configuration on the device, run Fetch Config to ensure that the RME has the latest configuration for the HA SM to use.

Step 5 Enter your CiscoWorks password, then click **Connect**.

If you check the Fetch Config check box, this task will take a few minutes to complete. The time depends on the number of devices in the selected group and the size of the configuration.

A task status window indicates progress.

Step 6 A confirmation window appears, and confirms that this HA device group is selected. The information in the window varies depending on whether you check or uncheck **Fetch Config**.

- If you check **Fetch Config**, the confirmation window displays a list of all devices in the group with:
 - Device Name
 - Connection Status
 - Cause of any errors

Click the column heading to sort the list. Click **Close** to close this window.

- If you uncheck **Fetch Config**, the confirmation window displays a list of all devices in the group with the following information:

- Display Name
- Host Name
- IP Address

Click **Close** to close this window.

The name of the device group appears in the upper-right corner of the window.


Displaying an HA Configuration

You can view the HA-specific configurations commands of specified devices in the selected group by using the HA Configuration Viewer.

To display an HA-specific configuration:

-
- Step 1** Choose a device group (Choose **Service Manager > Select Group**). For more information, see [Selecting an HA Device Group, page 4-2](#).
 - Step 2** Choose **Service Manager > Display Config**.
The Display Config window appears.
 - Step 3** Choose a device from the Device drop-down list, then click **Display Config**.
The HA Config Viewer appears. (See [Figure 4-2 on page 4-5](#).)

Figure 4-2 HA Config Viewer Window

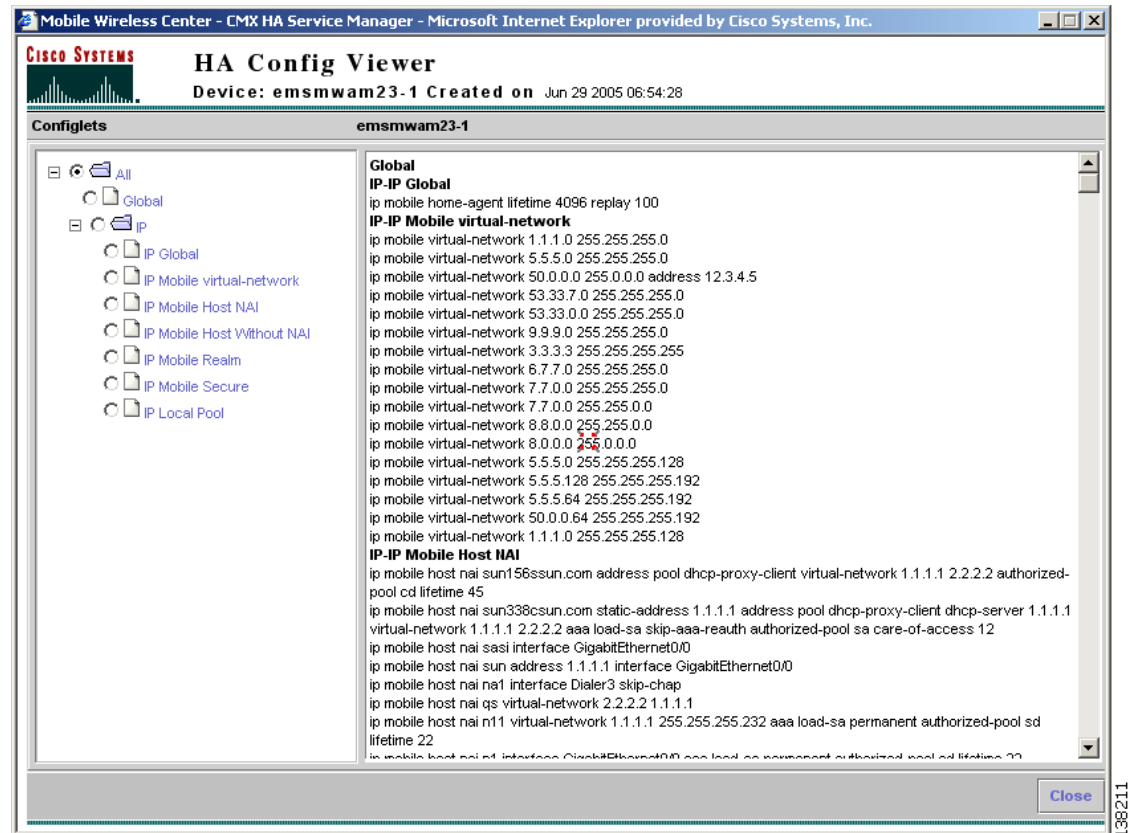

The HA Config Viewer window displays:

- Left pane—Displays all the configlets that the configuration comprises. Click any folder to expand the tree and display descendant configlets. Choose any configlet to see the required commands.
- Right pane—Displays all the configuration commands corresponding to each configlet in alphanumeric order.

Step 4 Click **Close** to exit the HA Config Viewer.

Generating Sync Reports

You can use the Sync Report to compare the HA-specific configurations of the master device and those of the other devices in the group, and two selected devices.

The Sync Report tab displays:

- Sync Report Dashboard—Displays the latest status of the master device and other devices in a group, from RME or DCR. Generates a list of differences between the HA-specific configurations of the master device and those of any other device in the group.
- Compare Config—Displays the differences in HA-specific configurations between any two devices of the group.

To generate a sync report:

-
- Step 1** Choose a device group (Choose **Service Manager > Select Group**). See [Selecting an HA Device Group, page 4-2](#).
- Step 2** Choose **Service Manager > Sync Report**. The overview page appears with the table of contents in the left pane. From here you can go to:
- Sync Report Dashboard—See [Using Sync Report Dashboard, page 4-6](#).
 - Compare Config—See [Comparing the Configurations of Two Devices, page 4-10](#).
-

Using Sync Report Dashboard

The Sync Report Dashboard provides the latest status of the master device and other devices in a group, from RME or DCR. It also polls all the devices in the group and creates a Diff report.

Checking Device Status

When you launch the Sync Report Dashboard, the latest status of the master device from RME or DCR appears automatically. You can get the latest information about the other devices in a group only when you click **Generate Diff**.

When you use the Generate Diff function, the Sync Report Dashboard checks whether the device:

- Is reachable through Telnet and SNMP.
The Sync Report Dashboard does not check the Telnet credentials of the device.
- Display Name, Host Name, or IP Address are changed.
- Exists in RME or DCR.
- Is in Suspended state.

An appropriate message and color appears in the Status field, under the Report pane, depending on the status of the devices.

All the previous checks are performed on the master device when you launch the Sync Report Dashboard. HA SM uses the archived configurations of a device from RME rather than the real time configurations from the device.



Note

The Master Device Status is the current status of the master device at time T1, where T1 is the time that you launch Sync Report Dashboard. The Device Status is the status of the device at time T2, where T2 is the time that you click **Generate Diff**.

Generating a Diff Report



Note

After any modifications to group devices, run another Sync Report in order to see updated details.

To generate a list of differences between the HA-specific configurations of the master device and those of any other device in the group, and to display the latest status of the devices:

- Step 1** Choose a device group (Choose **Service Manager > Select Group**). See [Selecting an HA Device Group, page 4-2](#).
- Step 2** Choose **Service Manager > Sync Report > Sync Report Dashboard**.
The Sync Report Dashboard window appears. (See [Figure 4-3 on page 4-8](#).)
- Step 3** Click **Generate Diff** to poll all the devices in the group and create a Diff report. The current status of the operation is automatically updated.

If you have device groups with large numbers of devices, the diff process will take a few minutes. The window refreshes every five seconds while the report is in the Running state. To update status manually, click **Refresh**. The process is complete when the Status changes to Completed.

The Sync Report Dashboard window contains:

Field	Description
Master Device	Displays the master device of the selected group.
Master Device Status	Current status of the master device at time T1, where T1 is the time you launch Sync Report Dashboard. A (–) appears by default, which indicates that there are no errors. An appropriate message appears if there are any errors.
Report	Lists the devices in the group and the color-coded Diff status.
Device Name	Displays the devices in the selected group.
Status	Displays the status of the device at time T2, where T2 is the time you click Generate Diff. Table 4-2 describes the color code of the Diff Status that appears in the Status column. An appropriate message appears if there are any errors.
Schedule Status	
Status	Displays the status of the Diff process. It can be Running or Completed.
Start Time	Time at which the Diff process starts.
End Time	Time at which the Diff process ends.

Figure 4-3 Sync Report Dashboard Window

Sync Report

Master Device: ems7200u
Master Device Status: -

Report

Sync Report as on **Feb 08 2006 20:08:32** Showing 2 records

	Device Name	Status
1.	emsmwam21-2	
2.	emsmwam21-3	

Show Diff

* - If device configurations have changed since the last Diff Report, click Generate Diff to get the latest Sync Status.

Schedule Status

Status: Completed
Start Time: Feb 08 2006 20:07:56
End Time: Feb 08 2006 20:08:32

Generate Diff Refresh

Note : Diff generation is based on the latest configs successfully archived by RME.

149591

- Step 4** In the Report pane, select a device to compare its configurations with the master device.
- Step 5** Click **Show Diff** to see a detailed comparison. The Sync Report Config Diff Viewer appears. (See [Figure 4-4 on page 4-9.](#))

Figure 4-4 Sync Report Config Diff Viewer

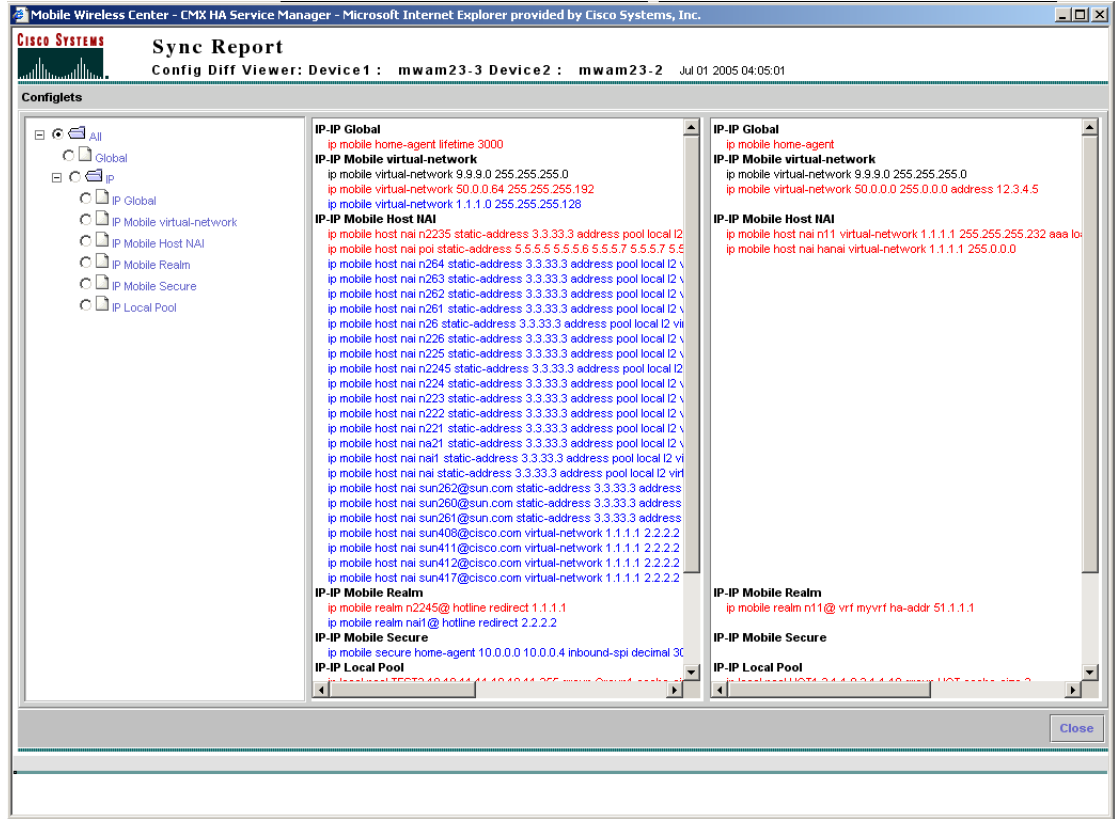


Table 4-2 Color Key to the Sync Report Dashboard

Color	Meaning
Green	No difference exists. The configlets of the master and selected devices are the same. The Show Diff button will be disabled.
Yellow	A difference exists. The configlets of the master and selected devices are dissimilar. Click Show Diff to see a detailed comparison. Note The Show Diff button is enabled only for devices shown in yellow.
Red	The device is not reachable.
Black	One of these conditions has occurred: <ul style="list-style-type: none"> The RME fetch config for that device failed. If all devices in a group appear in black, the fetch config for the master device in that group failed. An error occurred in retrieving the latest configuration version from RME. Authorization failed. The devices in the group are suspended or invalid.
Red asterisk	Indicates that a more recent configuration for this device is present in RME. You can obtain such updated configurations by using the Generate Diff function.

Interpreting the Sync Report Config Diff Viewer

In the Sync Report Config Diff Viewer, Device 1 is the master device and Device 2 is the the device being compared. The Sync Report Config Diff Viewer also displays the date and time that the diff is generated.

The Sync Report Config Diff Viewer has three panes:

- The left pane—Displays all the configlets that the configuration comprises. Click any folder to expand the tree and display descendant configlets. Choose any configlet to compare the required command between the configurations of the two devices.
- The center pane—Displays the configuration of Device 1 (master device).
- The right pane—Displays the configuration of Device 2 (selected device).

The Sync Report Diff Viewer displays colored text that highlights differences between the configlets in the two configurations, as described in [Table 4-3](#):

Table 4-3 Color Key to the Sync Report Config Diff Viewer

Color	Description
Black	These configlets are present in both devices.
Red	These configlets are present on both devices, but differ.
Blue	These configlets are present on one of the devices only.

Comparing the Configurations of Two Devices

To display the differences in HA-specific configurations between any two devices of the group:

-
- Step 1** Choose **Service Manager > Sync Report > Compare Config**.
The Sync Report window appears.
- Step 2** Choose the devices that you want to compare from the drop-down lists for Device1 and Device2.
- Step 3** Click **Compare**. The Sync Report Config Diff Viewer appears. (See [Figure 4-4](#) on page 4-9.)
-

Interpreting the Sync Report Config Diff Viewer

The Sync Report Config Diff Viewer displays that the date and time the diff is generated, and the configurations.

The Sync Report Config Diff Viewer has three panes:

- The left pane—Displays all the configlets that the configuration comprises. Click any folder to expand the tree and display descendant configlets. Choose any configlet to compare the required command between the configurations of the two devices.
- The center pane—Displays the configuration of Device 1.
- The right pane—Displays the configuration of Device 2.

The Sync Report Diff Viewer displays colored text that highlights the differences between the configlets in the two configurations, as described in [Table 4-4](#):

Table 4-4 Color Key to the Sync Report Config Diff Viewer

Color	Description
Black	These configlets are present in both devices.
Red	These configlets are present on both devices, but differ.
Blue	These configlets are present on one of the devices only.

Activating Services on HA Devices

You can use the HA Service Manager to manage and activate services on the Home Agent devices in the selected device groups.

Service activation entails the following tasks:

- [Configuring Local IP Pools, page 4-12](#)
- [Configuring Virtual Networks, page 4-16](#)
- [Assigning Home Addresses With NAI, page 4-18](#)
- [Assigning Home Addresses Without NAI, page 4-21](#)
- [Configuring Security Associations, page 4-25](#)
- [Configuring VRF Support on HA Devices, page 4-29](#)
- [Enabling Hot-Lining, page 4-32](#)
- [Displaying ODAP Client Parameters, page 4-33](#)
- [Configuring ODAP Client Parameters, page 4-34](#)
- [Working With ODAP Client, page 4-35](#)
- [Configuring ODAP Client, page 4-36](#)
- [Configuring HA-DNS, page 4-38](#)

To invoke Service Activation in HA Service Manager:

-
- Step 1** Choose a device group (Choose **Service Manager > Select Group**). See [Selecting an HA Device Group, page 4-2](#).
- Step 2** Select **HA Service Manager > Service Activation**.
- The left pane displays the Service Activation table of contents. Choose the required service to activate it.
-

Local IP Pools

To configure Home Agent functionality on your router, you must determine IP addresses or subnets for which enables roaming service.

Home Agent (HA) dynamically assigns a home address to the mobile node (MN) from address pools that are configured locally. HA obtains the IP address by accessing the DHCP or AAA server, and allocates the addresses from the pool on a first come, first serve basis. The MN will keep the address as long as it has an active binding in the HA. When the binding expires this address is immediately returned to the pool.

To display a list of the local IP pools that are configured in the HA Service Manager:

-
- Step 1** Choose a device group (Choose **Service Manager > Select Group**). See [Selecting an HA Device Group, page 4-2](#).
- Step 2** Choose **HA Service Manager > Service Activation > Local IP Pool**.
- The Local IP Pool dialog box appears with a list of all the local IP pools in the selected group. If no default pool is configured on the device, a default pool that is designated by an asterisk (*) appears in the display. You can view or delete a default pool only after you configure one on the device.
- Step 3** Choose the default pool from the list, then click **Execute**, to configure a default pool.
- Step 4** From the Local IP Pool dialog box, you can:
- Click **Execute** without selecting a group to create a new local IP pool.
 - Choose a pool and:
 - Click **Execute** to modify its configuration.
 - Click **List** to see its current configuration.
 - Click **Delete**, to delete it. You can also delete one or more pools at the same time.

When you select one or more pools, the Execute and List buttons will be disabled.

For more information on configuring IP pools, see [Configuring Local IP Pools, page 4-12](#).

Configuring Local IP Pools

You can configure local and default IP pools using a Local IP Pool wizard.

You can configure overlapping IP address pool groups to create different address spaces and concurrently use the same IP addresses in different address spaces. This feature improves flexibility in assigning IP addresses dynamically and can be used in Multiprotocol Label Switching (MPLS) Virtual Private Network (VPN) environments where multiple IP address spaces are supported.

To launch the Local IP Pool wizard:

-
- Step 1** Choose a device group (Choose **Service Manager > Select Group**). See [Selecting an HA Device Group, page 4-2](#).
- Step 2** Choose **HA Service Manager > Service Activation > Local IP Pool**.
- The Local IP Pool dialog box displays all the local IP pools in the selected group. The default IP pool appears at the top of the list.
- If no default pool is configured on the device, a default pool that is designated by an asterisk (*) appears in the display. You can view or delete a default pool only after you configure one on the device.
- Step 3** Perform one of these actions:
- To create a local IP pool, click **Execute** without selecting one.

- Choose the pool that you want to modify, then click **Execute**.
- Choose the default pool from the list, then click **Execute**, to configure a default pool.

The first window of the Local IP Pool wizard displays:

Field	Description
Name	Name of the local IP address pool.
Start IP	First IP address in the defined range of addresses in this pool.
End IP	Last IP address in the defined range of addresses in this pool.
Cache-Size	(Optional) Specify the number of IP address entries on the free list that the system checks before assigning a new IP address. The range is from 0 to 100, and the default is 20.
Local IP Pool Group	(Optional) Specify a pool group to associate it with the local IP address pool. You can associate an IP address pool with only one group. You can configure overlapping IP address pool groups to create different address spaces and concurrently use the same IP addresses in different address spaces.

Click any column heading to sort the list. From this window:

- Click **Add Row** to add more address pools.
- Select any row and click **Delete Row** to delete the address pool, or extra rows.

Step 4 Enter the information and click **Next**.

The Local IP Pool Configurations window appears and displays the generated configuration commands.

Step 5 Click **Add To Batch** to execute the configuration in a batch mode if you do not want to download them immediately. The Batch Mode window appears. You must leave the Batch Mode window open to add multiple service-activation commands to the same batch.

From the Batch Mode window, you can:

- Click **Save** to save the configuration in a batch file and download it later. A popup window appears where you can specify a name for the batch file, or add the configuration to an existing batch file.
- Click **Download** to save it to the work queue.

HA SM schedules a new job. A notification message displays the Job ID. After the job completes, you can view the details of the job in the Job Details window. See [Viewing Job Details, page 4-14](#), for more information on the job details.
- Click **Clear** to clear the batch profile.
- Click **Close** to close this window.

If you do not save the batch file, a message prompts you to save it. Click **OK** to save and **Cancel** to exit the window.

Step 6 Perform one of these actions:

- Click **Finish** to complete the configuration.

HA SM schedules a new job. A notification message displays the Job ID. After the job completes, you can view the details of the job in the Job Details window. See [Viewing Job Details, page 4-14](#), for more information on the job details.

- Click **Cancel** to exit the wizard.


- Click **Back** to edit the configuration.

Viewing Job Details

You can learn more about any job by viewing its details.

The Job Details window appears (Figure 4-5 on page 4-14), and displays the day, date, and time details in the header at the top of the report. The Job ID and the Status appear in the header of the report.

Figure 4-5 Job Details Window

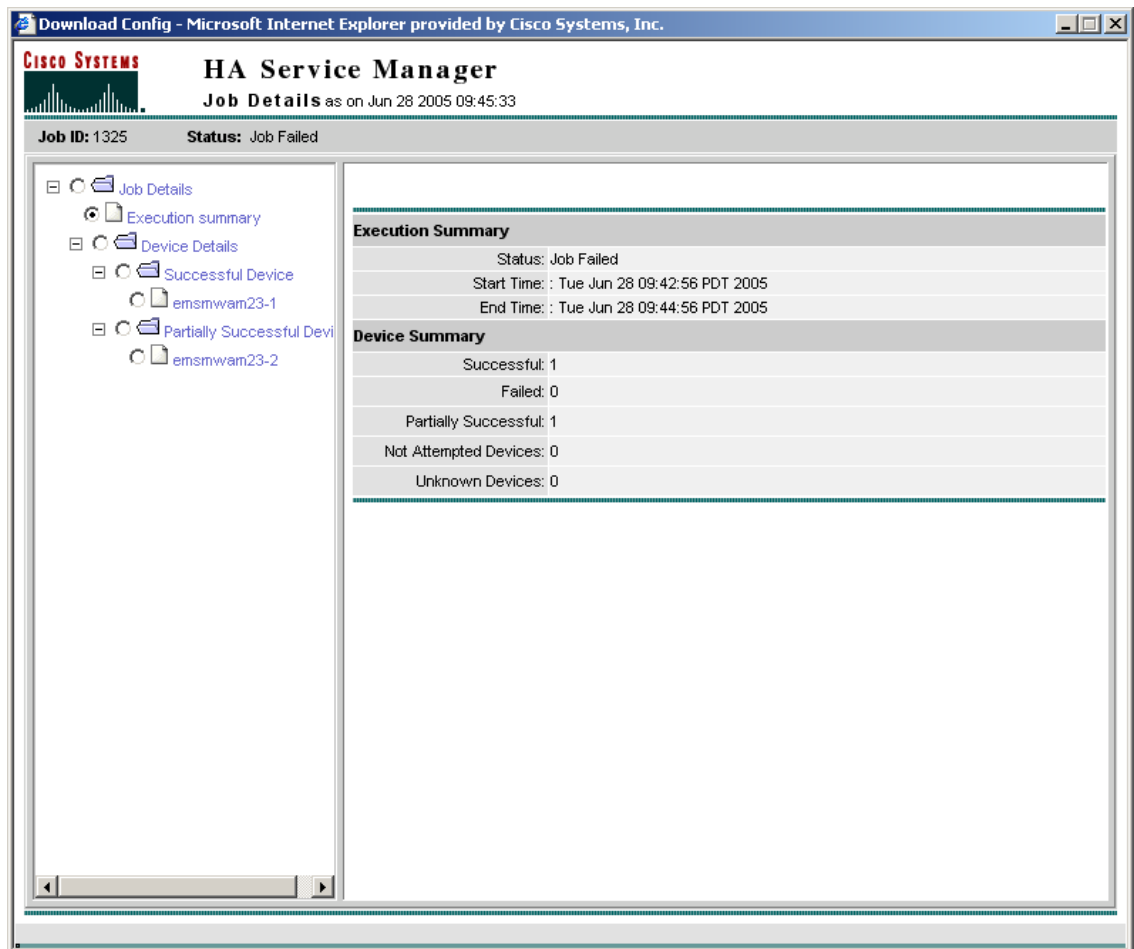

The Job Details popup contains two panes:

- The left pane contains a table of contents with several options to view the job results.
- The right pane displays the results.

By default, the Job Details popup appears with the Job Details list tree in the left pane and the Execution Summary, in the right pane.


The left pane contains:

- Job Details—Expand this folder to display Execution Summary and Device Details for the scheduled job.

- Execution Summary—Click this folder to view the following information for the job.
 - Execution Summary—Displays the status, start time, and end time of the job.
 - Device Summary—Displays a summary of the number of devices for which the download operation was successful, partially successful, failed, or not attempted.
- Device Details—Click a device to display the job CLI output on the right panel.

Table 4-5 lists the elements of the Job Details Window.

Table 4-5 Job Details Window Field Description

Field	Description
Execution Summary	
Status	Status of the job.
Start Time	Time the job started.
End Time	Time the job ended.
Device Summary	Summary of the number of devices for which the download operation was successful, partially successful, failed, or not attempted. Click a device to display the job CLI output on the right panel.
Successful	Lists the devices for which the download operation was successful. Click a device to display the job CLI output on the right pane.
Failed	Lists the devices for which a download of one or more commands failed. Click a device to display the job CLI output on the right panel.
Partially Successful	Lists the devices for which download was partially successful.
Devices Not Attempted	Lists devices for which a download was not attempted. This status usually means that RME is not currently managing the device. That is, the device is in suspended state or does not exist in the RME database.
Unknown Devices	Implies that the HA SM was unable to interpret the job output results because it was not in the expected format. Click a device to display the entire job output.
	 Caution This state should not occur under normal conditions. Report any incidents of this type to Cisco's Technical Assistance Center.

Working With Virtual Networks

You can support mobility of a Mobile Node (MN) beyond the bounds of a physical home network by defining virtual networks on the Home Agent. The virtual network acts like a home network when you associate a mobile node with it. When using virtual networks, the MN is always considered roaming; it can never be attached to its home network.

Virtual networks are configured and referenced by a network number and mask pair. You can also associate the virtual network with a Home Agent address for redundancy purposes.

To display a list of virtual networks that are configured in the HA Service Manager:

- Step 1** Choose a device group (Choose **Service Manager > Select Group**). See [Selecting an HA Device Group, page 4-2](#).

Step 2 Choose **HA Service Manager > Service Activation > Virtual Networks**.

The Virtual Networks dialog box appears and displays a list of all the virtual networks that are configured in the selected group. It contains:

Field	Description
Network Address	Specifies the IP address of virtual network.
Mask	Specifies the network mask associated with the IP address of the virtual network.

Click any column heading to sort the list.

Step 3 From the Virtual Networks dialog box, you can:

- Click **Execute** without selecting a group to create a virtual network.
- Choose a virtual network and:
 - Click **Execute** to modify its configuration.
 - Click **List** to see its current configuration.
 - Click **Delete** to delete it. You can also delete one or more virtual networks at the same time.

When you select one or more virtual network, the Execute and List buttons will be disabled.

For more information, see [Configuring Virtual Networks, page 4-16](#).

Configuring Virtual Networks

If you intend to support roaming for mobile devices without having a physical home location, you must identify the subnets for which to allow this service and place these virtual networks appropriately within your network on the HA. You can configure virtual networks using a Virtual Network wizard.

To launch the Virtual Network wizard:

Step 1 Choose a device group (Choose **Service Manager > Select Group**). See [Selecting an HA Device Group, page 4-2](#).

Step 2 Choose **HA Service Manager > Service Activation > Virtual Networks**.

Step 3 The Virtual Networks dialog box appears and displays a list of all the virtual networks configured in the selected group.

Step 4 Perform one of these actions:

- To create a virtual network, click **Execute** without selecting one.
- Choose the virtual network you want to modify, then click **Execute**.

The first window of the Virtual Networks wizard displays:

Field	Description
Network IP Address	IP address of virtual network.

Field	Description
Network Mask	Network mask associated with the IP address of the virtual network.
Home Agent IP Address	(Optional) IP address of a Home Agent on a virtual network. You can associate the virtual network with a Home Agent address for redundancy purposes.

Click any column heading to sort the list.

Step 5 Enter the information and click **Next**.

The Virtual Networks Configurations window appears and displays the generated configuration commands.

Step 6 Click **Add To Batch** to execute the configuration in a batch mode if you do not want to download them immediately. The Batch Mode window appears. You must leave the Batch Mode window open to add multiple service-activation commands to the same batch.

From the Batch Mode window, you can:

- Click **Save** to save the configuration in a batch file and download it later. A popup window appears where you can specify a name for the batch file, or add the configuration to an existing batch file.
- Click **Download** to save it to the work queue.

HA SM schedules a new job. A notification message displays the Job ID. After the job completes, you can view the details of the job in the Job Details window. See [Viewing Job Details, page 4-14](#), for more information on the job details.

- Click **Clear** to clear the batch profile.
- Click **Close** to close this window.

If you do not save the batch file, a message prompts you to save it. Click **OK** to save and **Cancel** to exit the window.

Step 7 Perform one of these actions:

- Click **Finish** to complete the configuration.

HA SM schedules a new job. A notification message displays the Job ID. After the job completes, you can view the details of the job in the Job Details window. See [Viewing Job Details, page 4-14](#), for more information on the job details.

- Click **Cancel** to exit the wizard.
- Click **Back** to edit the configuration.

Home Address Assignment

You can statically or dynamically assign IP addresses to a mobile station. A static IP address is an address that is pre-assigned to the mobile station, and sometimes pre-configured at the mobile device. The Home Agent can assign a home address to the mobile node based on the user Network Access Identifier (NAI) received during Mobile IP registration, or without using an NAI.

- [Assigning Home Addresses With NAI, page 4-18](#)
- [Assigning Home Addresses Without NAI, page 4-21](#)

Assigning Home Addresses With NAI

The Home Agent can assign a home address to the mobile node based on the user NAI that was received during mobile IP registration. The NAI is the user ID that the client submits during PPP authentication and is with the syntax *username@realm*. You can define an NAI string for a single user (*username@realm*) or a domain (*@realm*). The NAI identifies the user as well as assists the routing of the authentication request. Static home addressing can be used in conjunction with NAI to support a NAI-based authorization and other services.

You must be authorized to use an address before the registration will be accepted. Addresses can be authorized locally, or through an AAA server. If an MN requests an address that is already associated with a binding that has a different NAI, the Home Agent will attempt to return another address from the pool; unless the command is set.

To display a list of home addresses with NAI configured in the HA Service Manager:

Step 1 Choose a device group (Choose **Service Manager > Select Group**). See [Selecting an HA Device Group, page 4-2](#).

Step 2 Choose **HA Service Manager > Service Activation > Home Address Assignment > With NAI**.

The Home Address Assignment–With NAI dialog box displays a list of all the hosts, which are configured with an NAI, in the selected group. It contains:

Field	Description
NAI String	Specifies the network access identifier. The NAI can be a unique identifier (<i>username@realm</i>) or a group identifier (<i>realm</i>).
Home Link	Specifies either: <ul style="list-style-type: none"> Interface to which the mobile node belongs. Virtual network in which the mobile node resides.

Click any column heading to sort the list.

Step 3 From the Home Address Assignment–With NAI dialog box, you can:

- Click **Execute** without selecting a host to create a host configured with an NAI in the selected group.
- Choose a host and:
 - Click **Execute** to modify its configuration.
 - Click **List** to see its current configuration.
 - Click **Delete** to delete it. You can also delete one or more hosts at the same time.

When you select one or more hosts, the Execute and List buttons will be disabled.

For more information, see [Configuring Home Addresses With NAI, page 4-18](#).

Configuring Home Addresses With NAI

You can assign home addresses to a mobile node in the selected group by using NAI with a Home Address Assignment wizard. The Home Agent does not permit simultaneous registrations for different NAIs with the same IP address, regardless of whether it is statically or dynamically assigned.

You can also specify the interface on the network or a virtual network to which the mobile node belongs, its security associations, or download them from an AAA server. All hosts must have security associations for registration authentication. They can have more than one security association. The Home Agent can control where the mobile nodes roam by specifying the care-of-address (CoA) access list.

To launch the Home Address Assignment With NAI Configurations wizard:

- Step 1** Choose a device group (Choose **Service Manager > Select Group**). See [Selecting an HA Device Group, page 4-2](#).
- Step 2** Choose **HA Service Manager > Service Activation > Home Address Assignment > With NAI**.
The Home Address Assignment–With NAI dialog box displays a list of all the hosts, which are configured with an NAI, in the selected group.
- Step 3** Perform one of these actions:
- To create a host configured with an NAI, click **Execute** without selecting one.
 - Choose the host you that want to modify, then click **Execute**.

The first window of the Home Address Assignment–With NAI wizard contains:

Field	Description
Mobile Station Identifier	
NAI String	Network access identifier. The NAI can be a unique identifier (<i>username@realm</i>) or a group identifier (<i>@realm</i>).
Mobile Node IP Address	
Authorized Static Address	You can assign static or dynamic home addresses. Choose Static Address or Local-Pool from the drop-down list to assign one or more static IP addresses, or use a local pool of addresses.
Static Address	Choose Static Address from the drop-down list to specify one or more IP addresses to be assigned to the mobile node.
Local-Pool	Choose Local-Pool from the drop-down list to assign static IP addresses from a local pool. Enter the name of the local pool of addresses to assign a static IP address to this NAI.

Field	Description
Allocate Dynamic IP Address	<p>Choose the required option from the drop-down list to indicate that a dynamic IP address is to be assigned to the flows on this NAI.</p> <p>You can choose:</p> <ul style="list-style-type: none"> • IP Address—Specify a fixed address for the NAI. This address is assigned to the mobile node (MN) each time it registers. • Local-Pool—Specify the local pool to assign dynamic IP addresses. The MN will keep the address as long as it has an active binding in the HA. • DHCP/ODAP Pool—Specify the DHCP or On-Demand Address Pool (ODAP) pool to assign dynamic IP addresses on a per-subnet basis. The ODAP manager assigns addresses to clients from these subnets, and dynamically increases or decreases the subnet pool size, depending on address utilization. • DHCP Server—Specify the IP address of the DHCP server to allocate the home addresses. • DHCP Proxy Client—Specify the pool to be used from a DHCP client.
Home Link	In this pane, you can specify the home network (physical or virtual) of the MN. Click the Interface or Virtual Network radio buttons to specify their details.
Interface	<p>Click the Interface radio button to specify the interface to which the mobile node belongs.</p> <p>To select an interface from a list, click Fetch. A popup appears with a list of interface types. Choose an interface type and click Select.</p>
Virtual Network Address	Click the Virtual Network radio button to specify the virtual network in which the mobile node resides.
Mask	Network mask associated with the IP address of the virtual network.
Skip Chap	<p>(Optional) When you check this check box, the Home Agent will not send access requests to the AAA server, for authentication of mobile IP registration requests.</p> <p>This action will disable all the check boxes related to security associations and AAA authentication.</p>
Security Associations on AAA	(Optional) When you check this check box, the Home Agent retrieves security associations from a AAA (TACACS+ or RADIUS) server.
Download Security Associations	(Optional) Check this check box to download security associations from an AAA server.
Cache Security Associations	(Optional) Check this check box to store security associations in memory after retrieval. You can check either the Cache Security Associations check box or the Skip AAA Authentication check box.
Skip AAA Authentication	<p>(Optional) When you check this check box, the Home Agent will not send access requests to the AAA server for authentication for mobile IP reregistration requests.</p> <p>When you uncheck this check box, the Home Agent will send access requests for all mobile IP registration requests.</p>
Authorized-pool	(Optional) Verifies if the assigned IP address of the mobile node is within the specified local IP pool.

Field	Description
Care-of Address Access-list	(Optional) Controls which care-of addresses (CoAs) in registration request are permitted by the Home Agent. By default, all CoAs are permitted. The access list can be a string or number from 1 to 99.
Mobile Host Lifetime	(Optional) The registration lifetime granted to the mobile node or group (in seconds). The range is from 3 to 65535. The Foreign Agent uses this information to control the duration of registration.

Click any column heading to sort the list.

Step 4 Enter the information and click **Next**.

The Home Address Assignment With NAI Configurations window appears with the generated configuration commands.

Step 5 Click **Add To Batch** to execute the configuration in a batch mode if you do not want to download them immediately. The Batch Mode window appears. You must leave the Batch Mode window open to add multiple service-activation commands to the same batch.

From the Batch Mode window, you can:

- Click **Save** to save the configuration in a batch file and download it later. A popup window appears where you can specify a name for the batch file, or add the configuration to an existing batch file.
 - Click **Download** to save it to the work queue.
- HA SM schedules a new job. A notification message displays the Job ID. After the job completes, you can view the details of the job in the Job Details window. See [Viewing Job Details, page 4-14](#), for more information on the job details.
- Click **Clear** to clear the batch profile.
 - Click **Close** to close this window.

If you do not save the batch file, a message prompts you to save it. Click **OK** to save and **Cancel** to exit the window.

Step 6 Perform one of these actions:

- Click **Finish** to complete the configuration.
- HA SM schedules a new job. A notification message displays the Job ID. After the job completes, you can view the details of the job in the Job Details window. See [Viewing Job Details, page 4-14](#), for more information on the job details.
- Click **Cancel** to exit the wizard.
 - Click **Back** to edit the configuration.

Assigning Home Addresses Without NAI

When the Home Agent assigns a home address without using an NAI, the home IP address serves as the user name for authentication. Static addressing is beneficial because it allows each device to keep the same address all the time; regardless of where it is attached to the network. You can use this method to run mobile terminated services without updating the DNS, or some other form of address resolution. It is also easy to manage MNs with static addressing because the home address and the Home Agent are always the same. However, provisioning and maintenance are much more difficult with static addressing because address allocation must be handled manually, and the Home Agent and MN must be updated.

To display a list of home addresses without NAI configured in the HA Service Manager:

- Step 1** Choose a device group (Choose **Service Manager > Select Group**). See [Selecting an HA Device Group, page 4-2](#).
- Step 2** Choose **HA Service Manager > Service Activation > Home Address Assignment > Without NAI**. The Home Address Assignment - Without NAI dialog box appears with a list of all the hosts that are configured without a NAI, in the selected group. It contains:

Field	Description
Home Address	Specifies IP address of the mobile node. It can also specify the address pool for a mobile node or mobile node group.
Home Link	Specifies either: <ul style="list-style-type: none"> • Interface to which the mobile node belongs. • Virtual network in which the mobile node resides.

Click any column heading to sort the list.

- Step 3** From the Home Address Assignment–Without NAI dialog box, you can:
- Click **Execute** without selecting a host to create a host configured without an NAI in the selected group.
 - Choose a host and:
 - Click **Execute** to modify its configuration.
 - Click **List** to see its current configuration.
 - Click **Delete** to delete it. You can also delete one or more hosts at the same time.

When you select one or more hosts, the Execute and List buttons will be disabled.

For more information, see [Configuring Home Addresses Without NAI, page 4-22](#).

Configuring Home Addresses Without NAI

You can assign home addresses to a mobile node in the selected group (without using NAI) by using a Home Address Assignment wizard. You can configure a range of home addresses for the mobile host or mobile node group to be assigned by the Home Agent. You can also specify the interface on the network or a virtual network to which the mobile node belongs, its security associations, or download them from an AAA server. All hosts must have security associations for registration authentication. They can have more than one security association. The Home Agent can control where the mobile nodes roam by specifying the care-of-address (CoA) access list.

To launch the Home Address Assignment wizard:

- Step 1** Choose a device group (Choose **Service Manager > Select Group**). See [Selecting an HA Device Group, page 4-2](#).
- Step 2** Choose **HA Service Manager > Service Activation > Home Address Assignment > Without NAI**.
- Step 3** The Home Address Assignment–Without NAI dialog box displays a list of all the hosts configured without a NAI, in the selected group.

Step 4 Perform one of these actions:

- To create a host configured without an NAI, click **Execute** without selecting one.
- Choose the host you want to modify, then click **Execute**.

The first window of the Home Address Assignment-Without NAI wizard contains:

Field	Description
Home Address	
Lower Range	Lower IP address of the range of IP addresses for a mobile host or mobile node group. If you specify only this address, it is taken as the IP address of the MN. When used with DHCP, this specifies the address pool from which the DHCP server should select the address.
Upper Range	(Optional) Upper IP address of the range of IP addresses for a mobile host or mobile node group.
Home Link	In this pane, you can specify the home network (physical or virtual) of the MN. Click the Interface or Virtual Network radio buttons to specify their details.
Interface	Click the Interface radio button to specify the interface to which the mobile node belongs. Click Fetch to select an interface from a list. A popup appears with a list of interface types. Choose an interface type and click Select .
Virtual Network Address	Click the Virtual Network radio button to specify the virtual network in which the mobile node resides.
Mask	Network mask associated with the IP address of the virtual network.
Skip Chap	(Optional) When you check this check box, the Home Agent will not send access requests to the AAA server for authentication of mobile IP registration requests.
Security Associations on AAA	(Optional) When you check this check box, the Home Agent retrieves security associations from an AAA (TACACS+ or RADIUS) server.
Download Security Associations	(Optional) Select this check box to download security associations from an AAA server.
Authorized-pool	(Optional) Verifies if the assigned IP address of the mobile node is in the specified local IP pool.
Care-of Address Access-list	(Optional) Controls which care-of addresses (CoAs) in registration request are permitted by the home agent. By default, all CoAs are permitted. The access list can be a string or a number from 1 to 99.
Mobile Host Lifetime	(Optional) The registration lifetime granted to the mobile node or group (in seconds). The range is from 3 to 65535. The Foreign Agent uses this information to control the duration of registration.

Click any column heading to sort the list.

Step 5 Enter the information and click **Next**.

The Home Address Assignment Without NAI Configurations window appears with the generated configuration commands.

- Step 6** Click **Add To Batch** to execute the configuration in a batch mode if you do not want to download them immediately. The Batch Mode window appears. You must leave the Batch Mode window open to add multiple service-activation commands to the same batch.

From the Batch Mode window, you can:

- Click **Save** to save the configuration in a batch file and download it later. A popup window appears where you can specify a name for the batch file, or add the configuration to an existing batch file.
- Click **Download** to save it to the work queue.

HA SM schedules a new job. A notification message displays the Job ID. After the job completes, you can view the details of the job in the Job Details window. See [Viewing Job Details, page 4-14](#), for more information on the job details.

- Click **Clear** to clear the batch profile.
- Click **Close** to close this window.

If you do not save the batch file, a message prompts you to save it. Click **OK** to save and **Cancel** to exit the window.

- Step 7** Perform one of these actions:

- Click **Finish** to complete the configuration.

HA SM schedules a new job. A notification message displays the Job ID. After the job completes, you can view the details of the job in the Job Details window. See [Viewing Job Details, page 4-14](#), for more information on the job details.

- Click **Cancel** to exit the wizard.
- Click **Back** to edit the configuration.

Security Associations

All registration messages between an MN and a HA are authenticated in Mobile IP to prevent denial-of-service and replay attacks. Security associations are used to authenticate the mobile device. A security association is a collection of security contexts between a pair of nodes, which may be applied to Mobile IP protocol messages that are exchanged between them. Each context indicates an authentication algorithm and mode, a secret (a shared key or appropriate public or private key pair), and a style of replay protection in use.

Message Digest 5 (MD5) is an algorithm that takes the registration message and a key to compute the smaller chunk of data, called a message digest, plus a secret key. The MN and HA have a copy of the key, called a symmetric key, and authenticate each other by comparing the results of the computation.

The authentication process begins when an MN sends the registration request. The MN adds the time stamp, computes the message digest, and appends the Mobile-Home Authentication Extension (MHAE) to the registration request. The HA receives the request, checks if the time stamp is valid, computes the message digest using the same key, and compares the message digest results. If the results match, the request is successfully authenticated. For the registration reply, the HA adds the time stamp, computes the message digest, and appends the Mobile-Home Authentication Extension MHAE to the registration reply. The MN authenticates the registration reply upon arrival from the HA.

Replay protection is enabled on the registration packets to protect the network from replay attacks. A replay attack occurs when an individual records an authentic message that was previously transmitted and replays it at a later time.

To display a list of security associations for the MN, Home Agent, or Foreign Agent that is configured in the HA Service Manager:

Step 1 Choose a device group (Choose **Service Manager > Select Group**). See [Selecting an HA Device Group, page 4-2](#).

Step 2 Choose **HA Service Manager > Service Activation > Security Associations**.

The Home Agent Security Associations dialog box displays a list of configured security associations for the mobile node, Home Agent, or Foreign Agent, in the selected group. It contains:

Field	Description
Peer Type	Specifies the peer type. It can be one of the following: <ul style="list-style-type: none"> • Host • Home Agent • Foreign Agent
Peer Identity	Specifies the NAI string or the home IP address of the mobile node.
SPI	Specifies the Security parameter index (SPI). This is used to authenticate a mobile user during mobile IP registration.

Click any column heading to sort the list.

Step 3 From the Home Agent Security Associations dialog box, you can:

- Click **Execute** without selecting a peer type to configure a new security association in the selected group.
- Choose a peer type and:
 - Click **Execute** to modify its security association.
 - Click **List** to see its current security association.
 - Click **Delete** to delete it. You can also delete one or more security associations at the same time.

When you select one or more security associations, the Execute and List buttons will be disabled.

For more information, see [Configuring Security Associations, page 4-25](#).

Configuring Security Associations

You can configure the security associations for the MN, Home Agent, or Foreign Agent using a Security Associations wizard.

To launch the Security Associations wizard:

Step 1 Choose a device group (Choose **Service Manager > Select Group**). See [Selecting an HA Device Group, page 4-2](#).

Step 2 Choose **HA Service Manager > Service Activation > Security Associations**.

The Home Agent Security Associations dialog box displays a list of configured security associations for the MN, Home Agent, or Foreign Agent in the selected group.

Step 3 Perform one of these actions:

- To create a security association for a peer type, click **Execute** without selecting one.
- Select the security association you want to modify, then click **Execute**.

The first window of the Security Associations wizard contains:

Field	Description
Peer Type	Choose a peer type from the drop-down list. It can be one of the following: <ul style="list-style-type: none"> • Host • Home Agent • Foreign Agent
Mobile Node Identity	Click the IP Address or Host NAI String radio button to specify the NAI string or the home IP address of the mobile node.
IP Address	Click the IP Address radio button to specify the IP address of the mobile node.
Lower	IP address of the host, Home Agent, Foreign Agent, or the lower range of IP address pool.
Higher	(Optional) Upper range of the IP addresses pool.
Host NAI String	Specify the network access identifier of the mobile node. It is a unique identifier with the syntax <i>username@realm</i> . Click Fetch to select a NAI string from a list. A popup appears with a list of NAI strings. Choose a NAI string and click Select . Click the column heading to sort the list. This radio button is disabled if you choose Home Agent or Foreign Agent as the peer type.
Bidirectional SPI	Click the Bidirectional SPI radio button to specify the bidirectional SPI. The range is from 256 to 4294967295 (decimal) or 0 to ffffffff (hex).
Unidirectional SPI	Click the Unidirectional SPI radio button to specify the inbound and outbound SPIs. If Home Agent receives an inbound SPI, then outbound SPI will be used when sending a response.
Inbound	Select Decimal or Hex from the drop-down list and specify the SPI to authenticate the inbound registration packets. The range is from 256 to 4294967295 (decimal) or 0 to ffffffff (hex)
Outbound	Select the format of the SPI (Decimal or Hex) from the drop-down list, and specify the SPI to authenticate the outbound registration packets. The range is from 256 to 4294967295 (decimal) or 0 to ffffffff (hex)
Security Key	Select the format of the key (ASCII or Hex) from the drop-down list, and specify the shared secret key for the security associations. The key is used to wrap the registration information for authentication and calculate the message digest. You cannot use spaces in the string.

Field	Description
Replay Time Stamp	Specify the replay protection time stamp (in seconds) to protect the registration packets from replay attacks. The time stamp validates the incoming packets to ensure that they are not being replayed by a hacker. The time stamp allows the sender and receiver to be synchronized. The range is from 1 to 255. If a registration fails because the time stamp value is out of bounds, the Home Agent returns its timestamp so the mobile node can re-register with a timestamp value that is closer to the that of the Home Agent, if desired.
Enable Authentication	(Optional) Choose the Enable Authentication check box to enable authentication and select an authentication algorithm.
Select Authentication Algorithm	(Optional) Select an authentication algorithm to authenticate messages during registration. You can select md5 (message–digest 5) or hmac–md5 (HMAC used with MD5, where HMAC is a mechanism for message authentication that uses cryptographic hash functions) authentication algorithm.
Ignore SPI	(Optional) Select the Ignore SPI check box to disable the authentication of a home agent that uses SPI. This check box is enabled only for Home Agents.

Click any column heading to sort the list.

Step 4 Enter the information and click **Next**.

The Security Associations Configurations window appears with the generated configuration commands.

Step 5 Click **Add To Batch** to execute the configuration in a batch mode if you do not want to download them immediately. The Batch Mode window appears. You must leave the Batch Mode window open to add multiple service-activation commands to the same batch.

From the Batch Mode window, you can:

- Click **Save** to save the configuration in a batch file and download it later. A popup window appears where you can specify a name for the batch file, or add the configuration to an existing batch file.
- Click **Download** to save it to the work queue.

HA SM schedules a new job. A notification message displays the Job ID. After the job completes, you can view the details of the job in the Job Details window. See [Viewing Job Details, page 4-14](#), for more information on the job details.

- Click **Clear** to clear the batch profile.
- Click **Close** to close this window.

If you do not save the batch file, a message prompts you to save it. Click **OK** to save and **Cancel** to exit the window.

Step 6 Perform one of these actions:

- Click **Finish** to complete the configuration.

HA SM schedules a new job. A notification message displays the Job ID. After the job completes, you can view the details of the job in the Job Details window. See [Viewing Job Details, page 4-14](#), for more information on the job details.

- Click **Cancel** to exit the wizard.

- Click **Back** to edit the configuration.

VRF Support on HA

Mobile nodes can share a common IP address across different realms on the same Home Agent. This feature is based on the Multi-VPN Routing and Forwarding (VRF) Customer Edge (CE) network architecture to support multiple VPNs (and, therefore, multiple customers) per Customer Edge (CE) device. This reduces the amount of equipment required and simplifies administration, while allowing the use of overlapping IP addresses within the CE network. Separate VRF table are maintained for each realm. Multiple IP addresses are used at the Home Agent to indicate different enterprise connections or VRFs to the PDSN. Thus, one mobile IP tunnel runs between the PDSN and the HA per realm or VRF.

A typical scenario with VRF enabled on Home Agent:

When a Mobile IP registration requests (RRQ) arrives at the Home Agent, it will read the NAI field of the incoming RRQ and select a pre-configured IP address. This forms a mobile IP tunnel back to the PDSN with this IP address as the source address of the tunnel. The Home Agent adds a host route that corresponds to the IP address that is assigned for the mobile in the routing table of the VRF that is defined for the realm. The tunnel end-point at Home Agent is also inserted in the VRF routing table. This feature enables the mobile nodes to share common IP address across different realms on the same Home Agent.

To display a list of all realms that are configured with VRF in the HA Service Manager:

Step 1 Choose a device group. (Choose **Service Manager > Select Group.**) See [Selecting an HA Device Group, page 4-2](#).

Step 2 Choose **HA Service Manager > Service Activation > HA VRF**.

The Home Agent VRF dialog box displays a list of VRF configured realms, in the selected device group. It contains:

Field	Description
Realm Name	Specifies the realm name. It is a unique identifier with the syntax <i>@realm</i> .
VRF Name	Specifies a unique name to identify the VRF for a specific group.
Virtual HA IP Address	Specifies the IP address of the Home Agent.

Click any column heading to sort the list.

Step 3 From the Home Agent VRF dialog box, you can:

- Click **Execute** without selecting a realm to configure its VRF.
- Choose a realm and:
 - Click **Execute** to modify its VRF configuration.
 - Click **List** to view its current configuration.
 - Click **Delete** to delete it. You can also delete one or more VRF configurations at the same time.

When you select one or more VRF configurations, the Execute and List buttons will be disabled. For more information, see [Configuring VRF Support on HA Devices, page 4-29](#).

Configuring VRF Support on HA Devices

You can configure VRF support on home agent devices by using the Home Agent VRF Configuration wizard.

To launch the Home Agent VRF Configuration wizard:

- Step 1** Choose a device group (Choose **Service Manager > Select Group**). See [Selecting an HA Device Group, page 4-2](#).
- Step 2** Choose **HA Service Manager > Service Activation > HA VRF**.
- The Home Agent VRF dialog box displays a list of VRF configured realms, in the selected device group.
- Step 3** Perform one of these actions:
- To create the VRF for a realm, click **Execute** without selecting a realm.
 - Choose a realm, then click **Execute** to modify its VRF configuration.

The first window of the Home Agent VRF Configuration wizard contains:

Field	Description
Realm Name	Specifies the realm name. It is a unique identifier with the syntax <i>@realm</i> . Click Fetch to select a realm from a list. A popup appears displaying a list of realms. Choose a realm and click Select . Click the column heading to sort the list.
VRF for Realm	
VRF Name	Specifies a unique name to identify the VRF for a specific group. You can: <ul style="list-style-type: none"> • Click Fetch to select a configured VRF from a list. A popup appears with a list of configured VRFs. Choose a VRF and click Select. Click any column heading to sort the list. • Click Define to configure a new VRF routing table. See VRF Definition Dialog Box Field Descriptions, page 4-30, for more details.
Virtual Home Agent	
IP Address	Specifies the IP address of the Home Agent. Click Assign to Loopback to configure a loopback interface. This action provides a stable address to minimize the impact of a physical interface going down. See Loopback Interface Dialog Box Field Descriptions, page 4-31 , for more details.
AAA Group	
Accounting Group	(Optional) Specifies an AAA accounting group. When you define an AAA accounting server group, all accounting records for the users of the realm will be sent to the specified group.
Authentication Group	(Optional) Specifies an AAA authentication group. When you define an AAA authentication group, the Home Agent sends access requests for mobile IP registration requests, to the AAA servers that are defined in the group.

Click any column heading to sort the list.

Step 4 Enter the information and click **Next**.

The HA-VRF Configurations window displays the generated configuration commands.

Step 5 Click **Add To Batch** to execute the configuration in a batch mode if you do not want to download them immediately. The Batch Mode window appears. You must leave the Batch Mode window open to add multiple service-activation commands to the same batch.

From the Batch Mode window, you can:

- Click **Save** to save the configuration in a batch file and download it later. A popup window appears where you can specify a name for the batch file, or add the configuration to an existing batch file.
- Click **Download** to save it to the work queue.

HA SM schedules a new job. A notification message displays the Job ID. After the job completes, you can view the details of the job in the Job Details window. See [Viewing Job Details, page 4-14](#), for more information on the job details.

- Click **Clear** to clear the batch profile.
- Click **Close** to close this window.

If you do not save the batch file, a message prompts you to save it. Click **OK** to save and **Cancel** to exit the window.

Step 6 Perform one of these actions:

- Click **Finish** to complete the configuration.

HA SM schedules a new job. A notification message displays the Job ID. After the job completes, you can view the details of the job in the Job Details window. See [Viewing Job Details, page 4-14](#), for more information on the job details.

- Click **Cancel** to exit the wizard.
- Click **Back** to edit the configuration.

VRF Definition Dialog Box Field Descriptions

When you click **Define** in the **VRF for Realm** pane, the VRF Definition dialog box appears. You can use this dialog box to configure a new VRF routing table from this dialog box. It displays:

Field	Description
VRF Info	
Instance Name	Specifies a unique name by which to identify the VRF for a specific group.

Field	Description
Description	Describes the VRF.
Route Distinguisher	<p>Specify a route distinguisher after you create a VRF. Otherwise, the VRF will not operate.</p> <p>A route distinguisher (RD) creates routing and forwarding tables for a VPN. RD includes an autonomous system number and an arbitrary number, or it is IP-address-relative (includes an IP address and an arbitrary number).</p> <p>You can enter an RD in one of these formats:</p> <ul style="list-style-type: none"> 16-bit AS number: your 32-bit number. For example, 101:3 32-bit IP address: your 16-bit number For example, 192.168.122.15:1

Loopback Interface Dialog Box Field Descriptions

When you click **Assign to Loopback** in the **Virtual Home Agent** pane, the Loopback Interface dialog box appears. It displays:

Field	Description
Loopback Interface Information	
IP Address	Assign an IP network address to the interface.
Subnet Mask	Assign a network mask to the interface
Loopback Interface No.	Specify the number of the loopback interface that you want to create or configure. There is no limit on the number of loopback interfaces you can create.
Assign as Secondary IP	Check the Assign as Secondary IP check box to assign the above IP address as a secondary address on the loopback interface.

Enter the required information and click **Submit**.

Hot-Lining

You use the Hot-lining feature to monitor upstream user traffic by using two different scenarios: active and new session. When Hot-lining is active for a particular user, the upstream IP packets from the mobile are re-directed to the redirect server that is configured for this particular realm. This is achieved by changing the IP packet destination address to the redirect server address.

To display a list of all realms that are configured with hot-lining in the HA Service Manager:

-
- Step 1** Choose a device group (Choose **Service Manager > Select Group**). See [Selecting an HA Device Group, page 4-2](#).
- Step 2** Choose **HA Service Manager > Service Activation > Hot Lining**.

The Hot Lining dialog box displays a list of realms that are configured with hot-lining, in the selected device group. It contains:

Field	Description
Realm Name	Specifies the realm name. It is a unique identifier with the syntax <i>@realm</i> .
Redirect Server	Specifies the IP address of the redirect server.

Click any column heading to sort the list.

Step 3 From the Hot-lining dialog box, you can:

- Click **Execute** without selecting a realm to configure hot-lining.
- Choose a realm and:
 - Click **Execute** to modify its hot-lining configuration.
 - Click **List** to view its current configuration.
 - Click **Delete** to delete it. You can also delete one or more hot-lining configurations at the same time.

When you choose one or more hot-lining configurations, the Execute and List buttons will be disabled.

For more information, see [Configuring VRF Support on HA Devices, page 4-29](#).

Enabling Hot-Lining

You can configure hot-lining on home agent devices by using the Hot Lining wizard.

To launch the Hot Lining wizard:

Step 1 Choose a device group (Choose **Service Manager > Select Group**). See [Selecting an HA Device Group, page 4-2](#).

Step 2 Choose **HA Service Manager > Service Activation > Hot Lining**.

The Hot Lining dialog box displays a list of Hot-lining configured realms, in the selected device group.

Step 3 Perform one of these actions:

- Click **Execute** without selecting a realm to configure hot-lining.
- Choose a realm, then click **Execute** to modify its hot-lining configuration.

The first window of the Hot Lining wizard displays:

Field	Description
Realm Name	Specify the realm name. It is a unique identifier with the syntax <i>@realm</i> . Click Fetch to select a realm from a list. A popup appears displaying a list of realms. Choose a realm and click Select . Click the column heading to sort the list.
Redirect Server	Specify the IP address of the redirect server.

Click any column heading to sort the list.

Step 4 Enter the information and click **Next**.

The Hot Lining Configurations window displays the generated configuration commands.

- Step 5** Click **Add To Batch** to execute the configuration in a batch mode if you do not want to download them immediately. The Batch Mode window appears. You must leave the Batch Mode window open to add multiple service-activation commands to the same batch.

From the Batch Mode window, you can:

- Click **Save** to save the configuration in a batch file and download it later. A popup window appears where you can specify a name for the batch file, or add the configuration to an existing batch file.
- Click **Download** to save it to the work queue.
HA SM schedules a new job. A notification message displays the Job ID. After the job completes, you can view the details of the job in the Job Details window. See [Viewing Job Details, page 4-14](#), for more information on the job details.
- Click **Clear** to clear the batch profile.
- Click **Close** to close this window.

If you do not save the batch file, a message prompts you to save it. Click **OK** to save and **Cancel** to exit the window.

- Step 6** Perform one of these actions:

- Click **Finish** to complete the configuration.
HA SM schedules a new job. A notification message displays the Job ID. After the job completes, you can view the details of the job in the Job Details window. See [Viewing Job Details, page 4-14](#), for more information on the job details.
- Click **Cancel** to exit the wizard.
- Click **Back** to edit the configuration.

Working With ODAP Manager

This section provides information about:

- [Displaying ODAP Client Parameters, page 4-33](#)
- [Configuring ODAP Client Parameters, page 4-34](#)
- [Working With ODAP Client, page 4-35](#)
- [Configuring ODAP Client, page 4-36](#)

Displaying ODAP Client Parameters

With ODAP, a DHCP or ODAP server manages a block of addresses for each ODAP client application. You must enable the ODAP client on the HA to request pools of subnetted IP addresses from the ODAP Subnet Allocation Server.

To display a list of the DHCP client parameters that are configured in the HA SM:

- Step 1** Choose a device group. (Choose **Service Manager > Select Group**.) See [Selecting an HA Device Group, page 4-2](#).

- Step 2** Choose **HA Service Manager > Service Manager > Service Activation > ODAP Manager > Generic Client Config.**

The ODAP Client- Generic Configurations dialog box appears and displays a list of all the DHCP client parameters that are configured in the selected group. The parameters are:

Field	Description
ODAP Client	Specifies if ODAP client is enabled on the device.
Ping Packets	Specifies the number of packets a DHCP server sends to a pool address as part of a ping operation.
Ping Timeout	Specifies the time a DHCP server waits to receive a ping reply from an address pool.

- Step 3** Perform one of these actions:

- Click **Execute** to configure the client parameters. For more information, see [Configuring ODAP Client Parameters, page 4-34](#).
- Click **List** to view the current configuration.

Configuring ODAP Client Parameters

Configure DHCP client parameters by using the ODAP client wizard. To do so:

- Step 1** Choose a device group. (Choose **Service Manager > Select Group.**) See [Selecting an HA Device Group, page 4-2](#).
- Step 2** Choose **HA Service Manager > Service Manager > Service Activation > ODAP Manager > Generic Client Config.**

The ODAP Client-Generic Configurations dialog box appears with a list of all the DHCP client parameters configured in the selected group.

- Step 3** Click **Execute** to configure the client parameters.

The first window of the ODAP client wizard displays:

Field	Description
Enable ODAP Client	Check this check box to enable the ODAP client.
Ping Parameters	
Ping Packets	Number of packets a DHCP server sends to a pool address as part of a ping operation. The range is from 0 to 10. If you specify 0, it will disable the ping test.
Ping Timeout	Specify the time (in milliseconds) a DHCP server waits to receive a ping reply from an address pool. The range is from 100 to 10000.
ODAP Servers	
IP Address or Hostname	Specify the IP address or hostname of the ODAP server.
	Note The configuration will fail if the device is unable to resolve the hostname.

- Step 4** Click **Add Row** or **Delete Row** to add or delete details of ODAP servers.
- Step 5** Enter the information and click **Next**.
The ODAP Client- Generic Configurations window appears with the generated configuration commands.
- Step 6** Click **Add To Batch** to execute the configuration in a batch mode if you do not want to download them immediately. The Batch Mode window appears. You must leave the Batch Mode window open to add multiple service-activation commands to the same batch.
- From the Batch Mode window, you can:
- Click **Save** to save the configuration in a batch file and download it later. A server-side file browser appears where you can create a new batch file, or add the configuration to an existing batch file.
 - Click **Download** to download the configuration in the batch window to the selected group devices. HA SM schedules a new job and a notification message displays the Job ID. After the job ends, you can view the details of the job in the Job Details window. See [Viewing Job Details, page 4-14](#), for more information on the job details.
 - Click **Clear** to clear the **Batch Mode** window.
 - Click **Close** to close this window.
If you do not save the batch file, a message prompts you to save it. Click **OK** to save or **Cancel** to exit the window.
- Step 7** Perform one of these actions:
- Click **Finish** to complete the configuration.
HA SM schedules a new job. A notification message displays the Job ID. After the job ends, you can view the details of the job in the Job Details window. See [Viewing Job Details, page 4-14](#), for more information on the job details.
 - Click **Cancel** to exit the wizard.
 - Click **Back** to edit the configuration.

Working With ODAP Client

You can view the ODAP address pools that are assigned to HAs running ODAP clients.

To display a list of these address pools:

- Step 1** Choose a device group. (Choose **Service Manager > Select Group**.) See [Selecting an HA Device Group, page 4-2](#).
- Step 2** Choose **HA Service Manager > Service Manager > Service Activation > ODAP Manager > Pool Config**.

The ODAP-Client dialog box displays a list of address pools in ODAP clients. It contains:

Field	Description
Pool Name	Specifies the name of the address pool.

Field	Description
Utilization Thresholds	Specifies the range of the utilization mark of the address pool.
Subnet Size	Specifies the initial subnet size and the subsequent increment size of the address pool.

Click the Pool Name column to sort the list.

Step 3 From the ODAP-Client dialog box, you can:

- Click **Execute** without selecting an address pool to configure a new one.
- Choose an address pool and click:
 - **Execute** to modify its configuration.
 - **List** to see its current configuration.
 - **Delete** to delete it. You can delete one or more address pools at the same time.

When you select one or more address pools, the **Execute** and **List** buttons will be disabled.

For more information, see [Configuring ODAP Client, page 4-36](#).

Configuring ODAP Client

You can configure address pools on ODAP clients by using the ODAP client wizard.

To configure address pools on ODAP clients by using the ODAP client wizard:

Step 1 Choose a device group. (Choose **Service Manager > Select Group**.) See [Selecting an HA Device Group, page 4-2](#).

Step 2 Choose **HA Service Manager > Service Manager > Service Activation > ODAP Manager > Pool Config**.

The ODAP-Client dialog box displays a list of address pools that are configured in ODAP clients.

Step 3 Perform one of these actions:

- To configure a new address pool, click **Execute** without selecting one.
- Select the address pool you want to modify or clone, then click **Execute**.

If you modify the Pool Name, a new configuration will be created rather than modifying an existing one.

The first window of the ODAP client wizard displays:

Field	Description
Pool Name	Name of the address pool.
Upper Utilization Threshold	Upper limit of the utilization mark of the address pool. The range is from 1 to 100.
Lower Utilization Threshold	Lower limit of the utilization mark of the address pool. The range is from 1 to 100.

Field	Description
Enable Origin DHCP	Check this check box to configure an address pool as an on-demand address pool, and specify DHCP as the subnet allocation protocol.
Initial Subnet Size	Initial size of the subnet. Specify this value either with a slash (/) at the beginning or in IP format value.
Subnet Autogrow Size	Increment size of the address pool. Specify this value either with a slash (/) at the beginning or in IP format value.

Step 4 Enter the information and click **Next**.

The DHCP Client Pool Configurations window appears and displays the generated configuration commands.

Step 5 Click **Add To Batch** to execute the configuration in a batch mode if you do not want to download them immediately. The Batch Mode window appears. You must leave the Batch Mode window open to add multiple service-activation commands to the same batch.

From the Batch Mode window, you can:

- Click **Save** to save the configuration in a batch file and download it later. A server-side file browser appears where you can create a new batch file, or add the configuration to an existing batch file.
- Click **Download** to download the configuration in the batch window to the selected group devices. HA SM schedules a new job and a notification message displays the Job ID. After the job ends, you can view the details of the job in the Job Details window. See [Viewing Job Details, page 4-14](#), for more information on the job details.
- Click **Clear** to clear the **Batch Mode** window.
- Click **Close** to close this window.

If you do not save the batch file, a message prompts you to save it. Click **OK** to save or **Cancel** to exit the window.

Step 6 Perform one of these actions:

- Click **Finish** to complete the configuration. HA SM schedules a new job. A notification message displays the Job ID. After the job ends, you can view the details of the job in the Job Details window. See [Viewing Job Details, page 4-14](#), for more information on the job details.
- Click **Cancel** to exit the wizard.
- Click **Back** to edit the configuration.

Home Agent Domain Name System (HA-DNS)

The Home Agent Domain Name System (DNS) service-activation is available only on Home Agent 3.0 devices. You can configure service-activation commands for:

- DNS Server Address Assignment
- IP Reachability

DNS Server Address Assignment

The IS835 standard defines a method to push the home DNS server address to a mobile device as an NVSE in a Mobile IP registration response. This procedure allows the mobile station to learn the primary and secondary DNS server address of its home domain. You can assign a DNS server or configure the primary and secondary DNS addresses for a specific realm by using HA SM.

IP Reachability

When the HA receives an initial Registration Request it sends a RADIUS Access-Request to the Home RADIUS server. If the RADIUS server is configured to request Home Agent-based DNS updates, the Home RADIUS server will include the DNS-Update-Required attribute in the RADIUS Access-Accept message returned to the HA. If the initial Mobile IP registration is successful, the HA sends a DNS Update message to the DNS server to add an A Resource Record for the MS. The HA sends a DNS Update message to the primary and secondary DNS server, if present.

To display a list of HA-DNS configured realms:

Step 1 Choose a device group. (Choose **Service Manager > Select Group.**) See [Selecting an HA Device Group, page 4-2](#).

Step 2 Choose **HA Service Manager > Service Manager > Service Activation > HA-DNS**.

The HA-DNS dialog box displays a list of configured realms. It contains:

Field	Description
Realm Name	Specifies the name of realm.
Primary/Secondary DNS	Specifies the primary or secondary DNS.
Dynamic Update	Specifies the name of the dynamic DNS update method.

Click any column heading to sort the list.

Step 3 From the HA-DNS dialog box, you can:

- Click **Execute** without selecting a realm to configure a new one.
- Choose a realm and click:
 - **Execute** to modify its configuration.
 - **List** to see its current configuration.
 - **Delete** to delete it. You can delete one or more realms at the same time.

When you select one or more realms, the **Execute** and **List** buttons will be disabled.

For more information, see [Configuring HA-DNS, page 4-38](#).

Configuring HA-DNS

You can configure the HA-DNS service-activation commands for DNS Server Address Assignment and IP Reachability using the HA-DNS wizard.

Step 1 Choose a device group. (Choose **Service Manager > Select Group.**) See [Selecting an HA Device Group, page 4-2](#).

Step 2 Choose **HA Service Manager > Service Manager > Service Activation > HA-DNS**.



Note The HA-DNS service activation is available only on Home Agent 3.0 devices.

The HA-DNS dialog box displays a list of configured realms.

Step 3 Perform one of these actions:

- To configure a new realm, click **Execute** without selecting one.
- Select the realm you want to modify or clone, then click **Execute**.

The first window of the HA-DNS wizard displays:

Field	Description
Realm Name	Name of the realm. Click Fetch to select a realm from a list. A popup appears displaying a list of all the configure realms. Choose a realm and click Select .
Dynamic Update	Name of the dynamic DNS update method. Configure the DNS update method name on the device by using the command: <code>ip ddns update method <method name></code>
DNS Server Assign	Check this check box to enable the DNS Server Address Assignment feature.
Primary DNS Server	Specify the IP address of the primary DNS Server for the realm.
Secondary DNS Server	Specify the IP address of secondary DNS Server for the realm.

Step 4 Enter the information and click **Next**.

The HA-DNS Configurations window appears and displays the generated configuration commands.

Step 5 Click **Add To Batch** to execute the configuration in a batch mode if you do not want to download them immediately. The Batch Mode window appears. You must leave the Batch Mode window open to add multiple service-activation commands to the same batch.

From the Batch Mode window, you can:

- Click **Save** to save the configuration in a batch file and download it later. A server-side file browser appears where you can create a new batch file, or add the configuration to an existing batch file.
- Click **Download** to download the configuration in the batch window to the selected group devices. HA SM schedules a new job and a notification message displays the Job ID. After the job ends, you can view the details of the job in the Job Details window. See [Viewing Job Details, page 4-14](#), for more information on the job details.
- Click **Clear** to clear the **Batch Mode** window.
- Click **Close** to close this window.

If you do not save the batch file, a message prompts you to save it. Click **OK** to save or **Cancel** to exit the window.

Step 6 Perform one of these actions:

- Click **Finish** to complete the configuration.

HA SM schedules a new job. A notification message displays the Job ID. After the job ends, you can view the details of the job in the Job Details window. See [Viewing Job Details, page 4-14](#), for more information on the job details.

- Click **Cancel** to exit the wizard.
- Click **Back** to edit the configuration.

Managing Batch Configurations

You can use HA Service Manager to apply multiple service-activation configurations to the device by using batch mode. You can save the generated configuration commands and download them later.

Use the Batch Config function to manage batch configurations. You can display, start, or delete the batch configurations.


To open the Batch Config window:

Step 1 Choose **Service Manager > Batch Config**.

The Batch Config window appears. (See [Figure 4-6 on page 4-40](#).)

Step 2 Click any column heading to sort the list.

Figure 4-6 Batch Config window

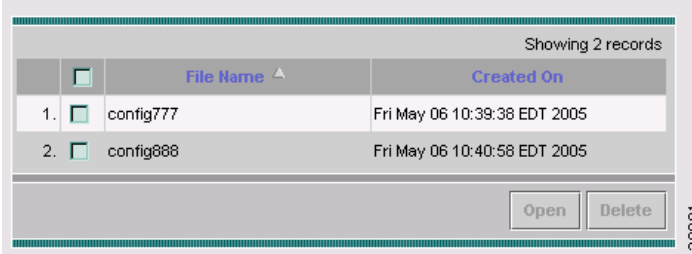

		Showing 2 records	
	<input type="checkbox"/>	File Name ▲	Created On
1.	<input type="checkbox"/>	config777	Fri May 06 10:39:38 EDT 2005
2.	<input type="checkbox"/>	config888	Fri May 06 10:40:58 EDT 2005

Open Delete

From this point, you can:

- Display the contents of a batch configuration file—Select a file from the list, then click **Open**. You can display the details of one batch config at a time.
- Delete a batch configuration file—Select one or more batch configurations from the list, then click **Delete**.



Note The HA SM does not test for configuration dependencies.

Starting a Batch Configuration

To start a batch job:

Step 1 Choose **Service Manager > Batch Config**.

In the Batch Config window, select a batch configuration from the list. The Batch Config display appears.

Step 2 Click **Open** to display the contents of the job file.

Step 3 Click **Download**.
