

Troubleshoot ACI vPC

Contents

[Introduction](#)

[Prerequisites](#)

[Requirements](#)

[Components Used](#)

[Background Information](#)

[Configure](#)

[Topology Explanation](#)

[Network Diagram](#)

[Verify](#)

[Troubleshoot](#)

[Miscable Issues](#)

[Individual Port by Loop Detected](#)

[Interface Change to Operational Down](#)

[LACP Logs](#)

[Related Information](#)

Introduction

This document describes the commands required to identify issues with Virtual Port-Channel (vPC) communication on ACI.

Prerequisites

Requirements

There are no specific requirements for this document.

Components Used

This document is not restricted to specific software and hardware versions.

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, ensure that you understand the potential impact of any command.

Background Information

The vPC between Application Centric Infrastructure (ACI) and the peer device must have been previously up and functional without configuration issues.

Configure

Topology Explanation

ACI LEAF 1: interface Ethernet 1/1, Port-Channel 5 and vPC 343.

ACI LEAF 2: interface Ethernet 1/2, Port-Channel 5 and vPC 343.


NX-OS 1: interfaces Ethernet 1/1 and Ethernet 1/2, Port-Channel 14 and vPC 45.

Connections:

LEAF 1 Eth1/1 <-> NX-OS 1 Eth1/1

LEAF 2 Eth1/2 <-> NX-OS 1 Eth1/2

Network Diagram

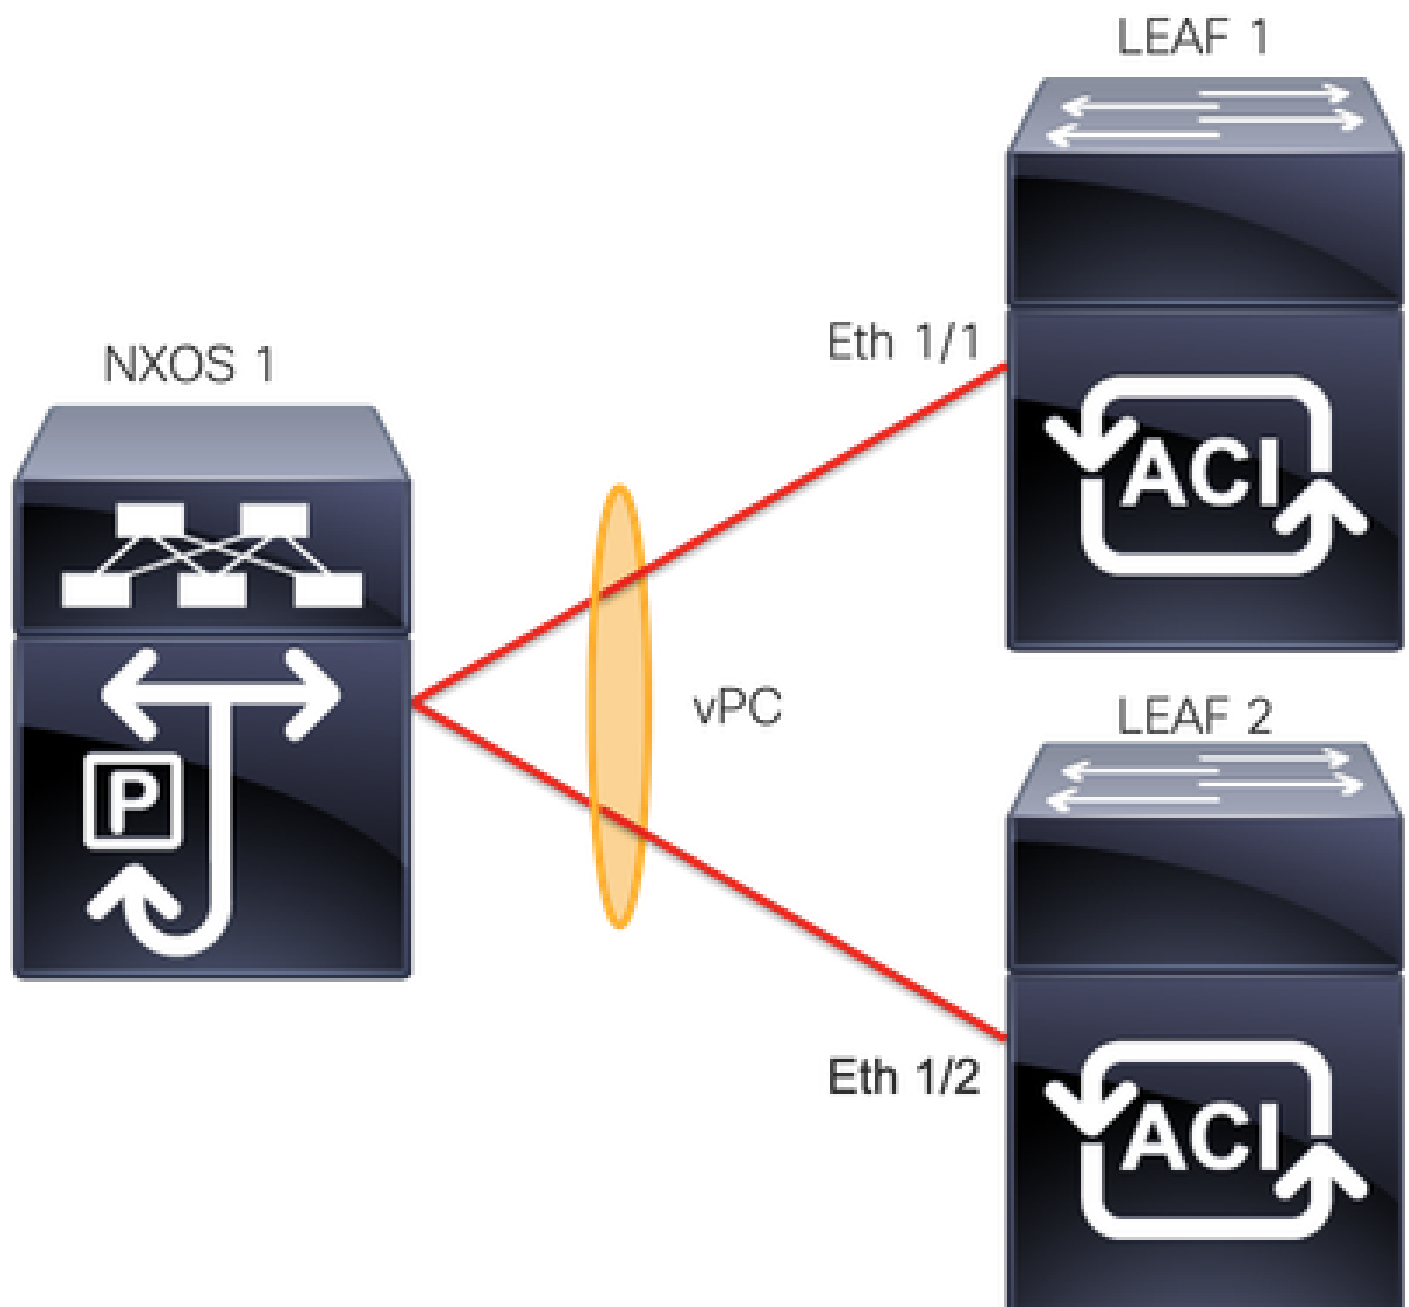

Verify

Use this section to confirm that your configuration works properly.

The [Cisco CLI Analyzer](#) (registered customers only) supports certain show commands. Use the Cisco CLI Analyzer in order to view an analysis of the show command output.

With the command `show vpc brief vpc x` you can see the status of the vPC (Up/Down).

<#root>

LEAF1#

`show vpc brief vpc 343`

vPC status

id	Port	Status	Consistency	Reason	Active vlans
--	----	-----	-----	-----	-----
343	Po5				
up					
	success	success		100	

<#root>

LEAF2#

`show vpc brief vpc 343`

vPC status

id	Port	Status	Consistency	Reason	Active vlans
--	----	-----	-----	-----	-----
343	Po5				
up					
	success	success		100	

With the command `show port-channel summary interface port-channel x` you can see the status of the Port-Channel (Up/Down), the current flags, and the physical interface where it is configured.

<#root>

LEAF1#

`show port-channel summary interface port-channel 5`

Flags: D - Down P - Up in port-channel (members)
 I - Individual H - Hot-standby (LACP only)
 s - Suspended r - Module-removed
 S - Switched R - Routed
 U - Up (port-channel)
 M - Not in use. Min-links not met
 F - Configuration failed

Group	Port-Channel	Type	Protocol	Member Ports
5	Po5(SU)	Eth	LACP	Eth1/1(P)

<#root>

LEAF2#

show port-channel summary interface port-channel 5

Flags: D - Down P - Up in port-channel (members)
I - Individual H - Hot-standby (LACP only)
s - Suspended r - Module-removed
S - Switched R - Routed
U - Up (port-channel)
M - Not in use. Min-links not met
F - Configuration failed

Group	Port-Channel	Type	Protocol	Member Ports
5	Po5(SU)	Eth	LACP	Eth1/2(P)


Troubleshoot

This section provides the information you can use to troubleshoot your configuration.

Miscable Issues

On the APIC GUI, you must see this fault:

Fault F0518: A configuration is not consistent with peer node. Misconfigured due to vPC link in the 2 s

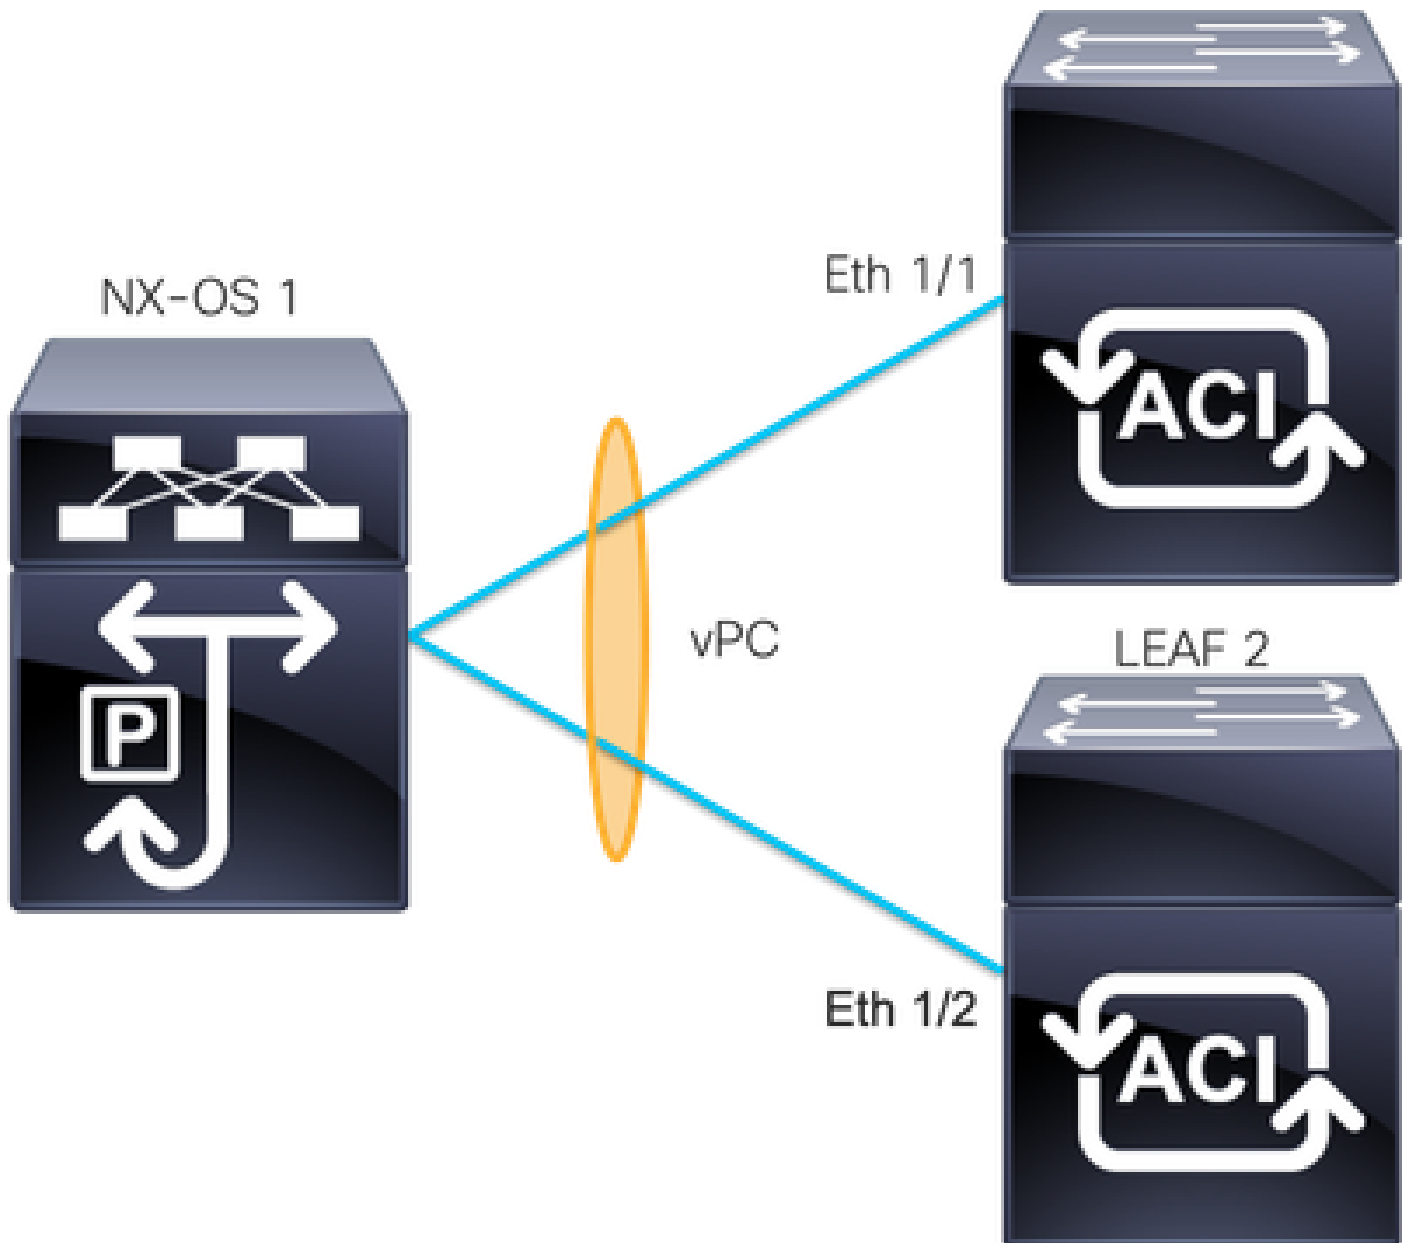

ACI LEAF 1: interface Ethernet 1/1, Port-Channel 5 and vPC 343.

ACI LEAF 2: interface Ethernet 1/2, Port-Channel 5 and vPC 343.

NXOS 1: interfaces Ethernet 1/1 and Ethernet 1/2, Port-Channel 14 and vPC 45.

Connections:

LEAF 1 Eth1/1 <-> NXOS 1 Eth1/1

LEAF 2 Eth1/2 <-> NXOS 1 Eth1/2

If you run into this issue the outputs look like the example:

```
<#root>
```

```
LEAF1#
```

```
show vpc brief vpc 343
```

vPC status

id	Port	Status	Consistency	Reason	Active vlans
--	----	-----	-----	-----	-----
343	Po5	up	failed		

vpc port

100

channel

mis-config

due to vpc

links in the

2 switches

connected to

different

partners

<#root>

LEAF2#

show vpc brief vpc 343

vPC status

id	Port	Status	Consistency	Reason	Active vlans
--	----	-----	-----	-----	-----
343	Po5	up	failed		

vpc port

100

channel

mis-config

due to vpc

links in the

2 switches

connected to

different

partners

<#root>

LEAF1#

show port-channel summary interface port-channel 5

Flags: D - Down P - Up in port-channel (members)
I - Individual H - Hot-standby (LACP only)
s - Suspended r - Module-removed
S - Switched R - Routed
U - Up (port-channel)
M - Not in use. Min-links not met
F - Configuration failed

Group	Port-Channel	Type	Protocol	Member Ports
-------	--------------	------	----------	--------------

5

Po5(SD)

Eth	LACP
-----	------

Eth1/1(D)

<#root>

LEAF2#

show port-channel summary interface port-channel 5

Flags: D - Down P - Up in port-channel (members)
I - Individual H - Hot-standby (LACP only)
s - Suspended r - Module-removed
S - Switched R - Routed

U - Up (port-channel)
M - Not in use. Min-links not met
F - Configuration failed

Group	Port-Channel	Type	Protocol	Member Ports
-------	--------------	------	----------	--------------

5

Po5(SD)

Eth LACP

Eth1/2(D)

<#root>

LEAF1#

show lacp interface ethernet 1/1 | grep Lag

Lag Id: [[(7f9b,

0-11-1-aa-aa-aa

, 8157, 8000, 10d), (8000,

0-22-2-bb-bb-bb

, 65, 8000, 125)]]

<#root>

LEAF2#

show lacp interface ethernet 1/2 | grep Lag

Lag Id: [[(7f9b,

0-11-1-aa-aa-aa

, 8157, 8000, 10d), (8000,

0-33-3-cc-cc-cc

, 65, 8000, 125)]]

The connected device lag information (second vector on the output command) must be the same on both outputs. As well, vector one must be the same on both.

Next Step:

If you have this behavior, the physical connections must be reviewed to ensure that the connections have not been swapped on the ports.


Individual Port by Loop Detected

On the APIC GUI, you must see these faults:

Fault F2705: A vPC interface goes down while peer interface is up.

Fault F2533: A loop was detected by the MCP protocol on ACI.

This issue affects vPC topologies where STP protocol runs on the peer devices.

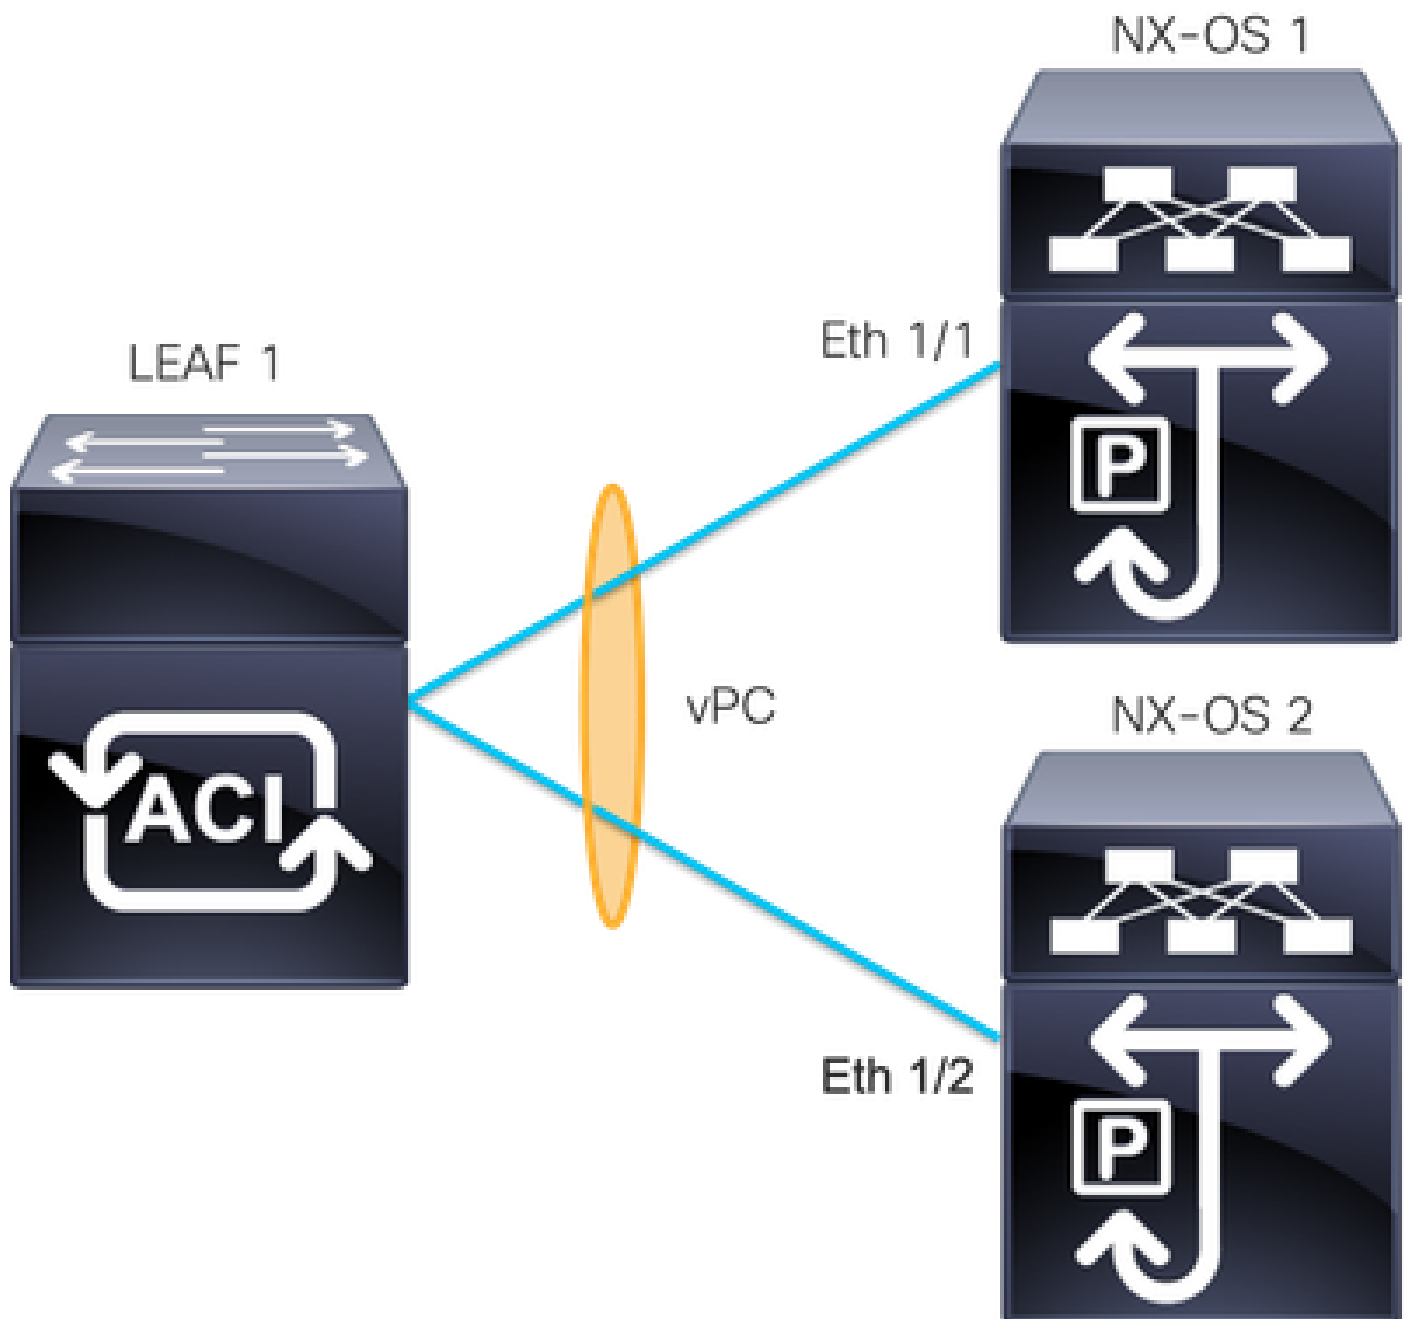

ACI LEAF 1: interface Ethernet 1/1 and Ethernet 1/2, Port-Channel 5 and vPC 343

NXOS 1: interfaces Ethernet 1/1, Port-Channel 14 and vPC 45

NXOS 2: interfaces Ethernet 1/2, Port-Channel 14 and vPC 45

Connections:

LEAF 1 Eth1/1 <-> NXOS 1 Eth1/1

LEAF 1 Eth1/2 <-> NXOS 2 Eth1/2

For this troubleshoot step, it is important to understand the concept of MisCabling Protocol (MCP).

MCP detects loops from external sources (misbehavior of servers, external network equipment that uses STP, and so on) and err-disable the interface on which ACI receives its own packet.

To learn more about MCP see: [Using MCP for ACI](#).

If you have this issue, the outputs look like this:

<#root>

LEAF2#

```
show mcp internal info interface eth 1/2
```

```
-----  
Interface: Ethernet1/2
```

```
Native PI VLAN: 100
```

```
Native Encap VLAN: 1
```

```
BPDU Guard: disabled
```

```
BPDU Filter: disabled
```

```
Port State: down
```

```
Layer3 Port: false
```

```
Switching State: enabled
```

```
Mac Address: AA:AA:AA:AA:AA:01
```

```
Interface MCP enabled: true
```

```
----- STP STATS -----
```

```
MSTP Count: 0
```

```
RSTP Count: 4
```

```
MSTP TC Count: 0
```

```
RSTP TC Count: 4
```

```
PVRSTP TC Count: 4
```

```
TCN Count: 0
```

```
PVID Error BPDU Count: 5
```

```
Error Packet Count: 0
```

```
BPDU Guard Event Count: 0
```

```
----- LOOP-DETECTION STATS -----
```

```
MCP packets sent(Per-vlan): 1278
```

```
MCP packets received: 23
```

```
MCP invalid packets received: 19
```

```
MCP packets received with invalid digest: 0
```

```
MCP packets received when switching state is disabled: 0
```

```
Interface is a member of port-channel
```

```
Number of active VLANs: 1
```

```
Number of VLANs in MCP packets are sent: 1
```


```
MCP enabled vlans:
```

```
628
```

```
MCP loop detected at: Tue Jul 19 09:34:46 2022
```

MCP loop detected in VLAN: 100

----- MCP Remote Peer Info -----
No remote peers exist

 **Note:** The loop issue must be solved to avoid a disabled interface in order to continue with the vPC.

Once the loop issue is solved and if the physical interface is up, but the vPC interface continues with one on a down state and the other in an individual:

<#root>

LEAF1#

show port-channel summary interface port-channel 5

Flags: D - Down P - Up in port-channel (members)
 I - Individual H - Hot-standby (LACP only)
 s - Suspended r - Module-removed
 S - Switched R - Routed
 U - Up (port-channel)
 M - Not in use. Min-links not met
 F - Configuration failed

Group Port- Type Protocol Member Ports
 Channel

5

Po5(SD)

 Eth LACP

Eth1/1(I)

<#root>

LEAF2#

show port-channel summary interface port-channel 5

Flags: D - Down P - Up in port-channel (members)
 I - Individual H - Hot-standby (LACP only)
 s - Suspended r - Module-removed
 S - Switched R - Routed
 U - Up (port-channel)
 M - Not in use. Min-links not met
 F - Configuration failed

Group Port- Type Protocol Member Ports
 Channel

5

Po5(SD)

Eth LACP

Eth1/2(D)

Next Step:


Ensure the port channel configuration is correct on both ends and the channel is bundled correctly.

If the configuration is correct on both ends and worked well before the loop, try this::

Navigate to:

Fabric -> Inventory -> Pod -> Leaf x -> Interfaces -> VPC interfaces -> vpc -> Port-channel interface where is included the **physical port 1/x** -> right-click and select **Disable**.

Then wait 10 seconds, right-click, and select **Enable**.

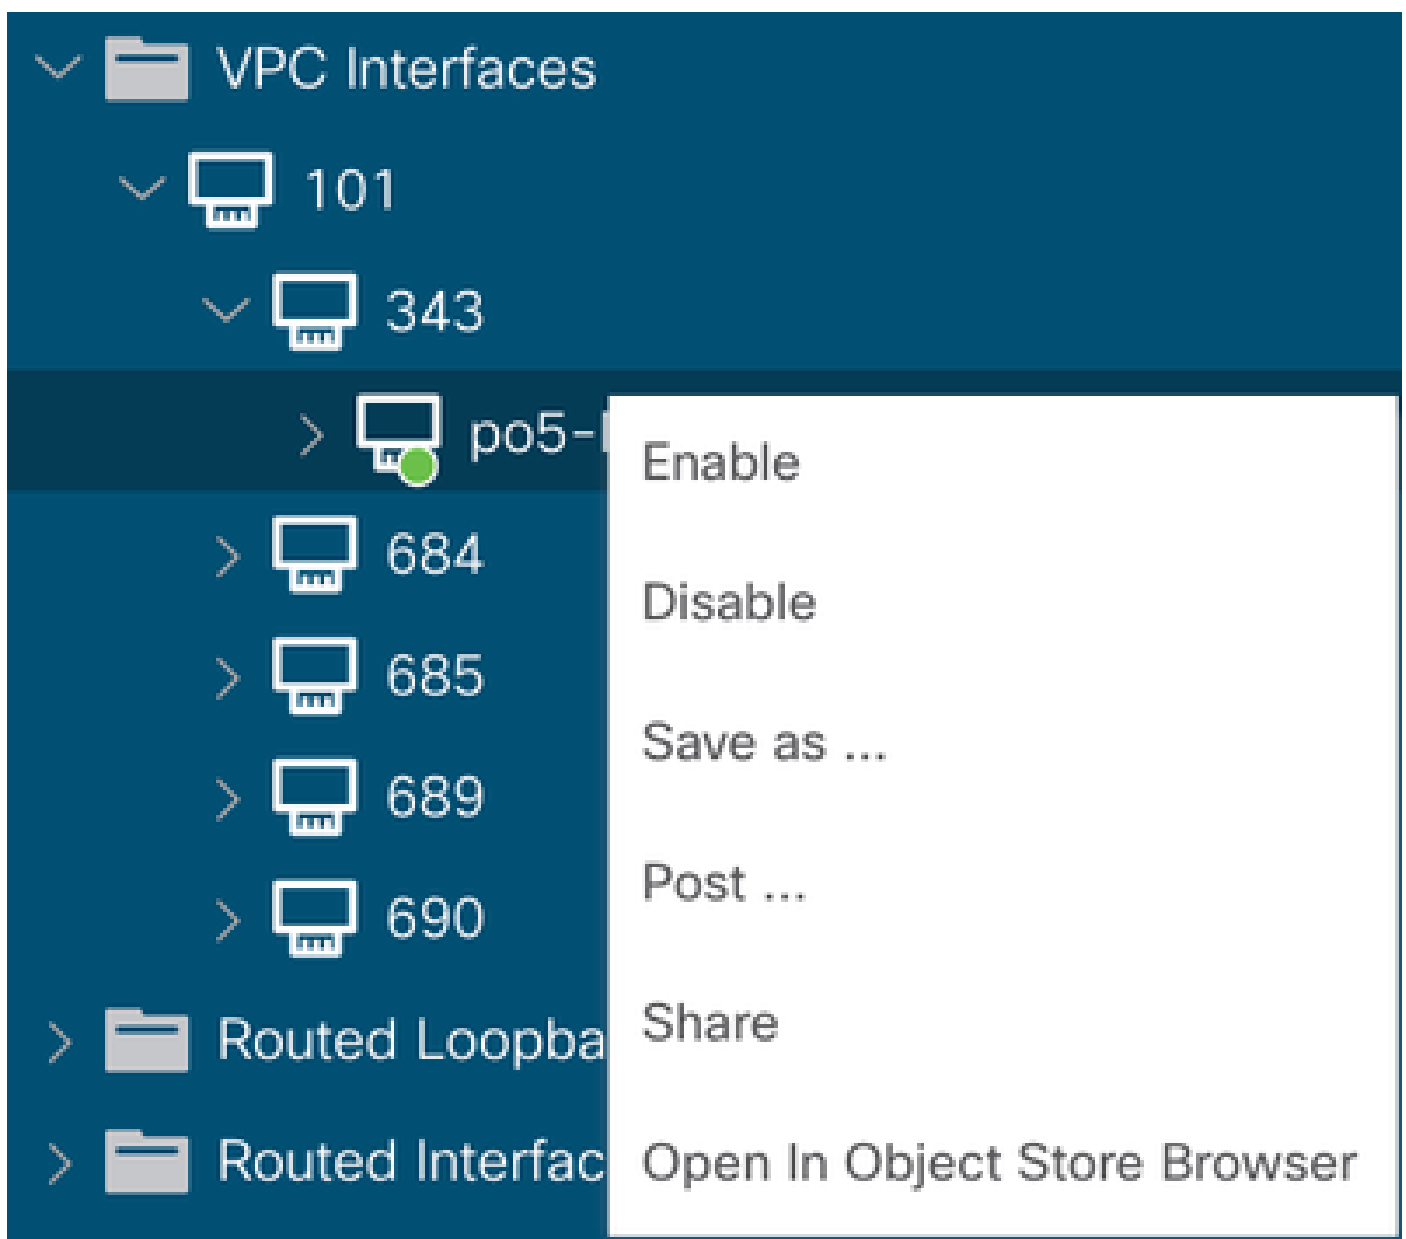


These steps must be performed on the affected interface to force the port-channel synchronization with the peer device and after this process must work properly.

Interface Change to Operational Down

On the APIC GUI, you must see this fault:

Fault F1296: A vPC interface goes down while peer interface is also down.

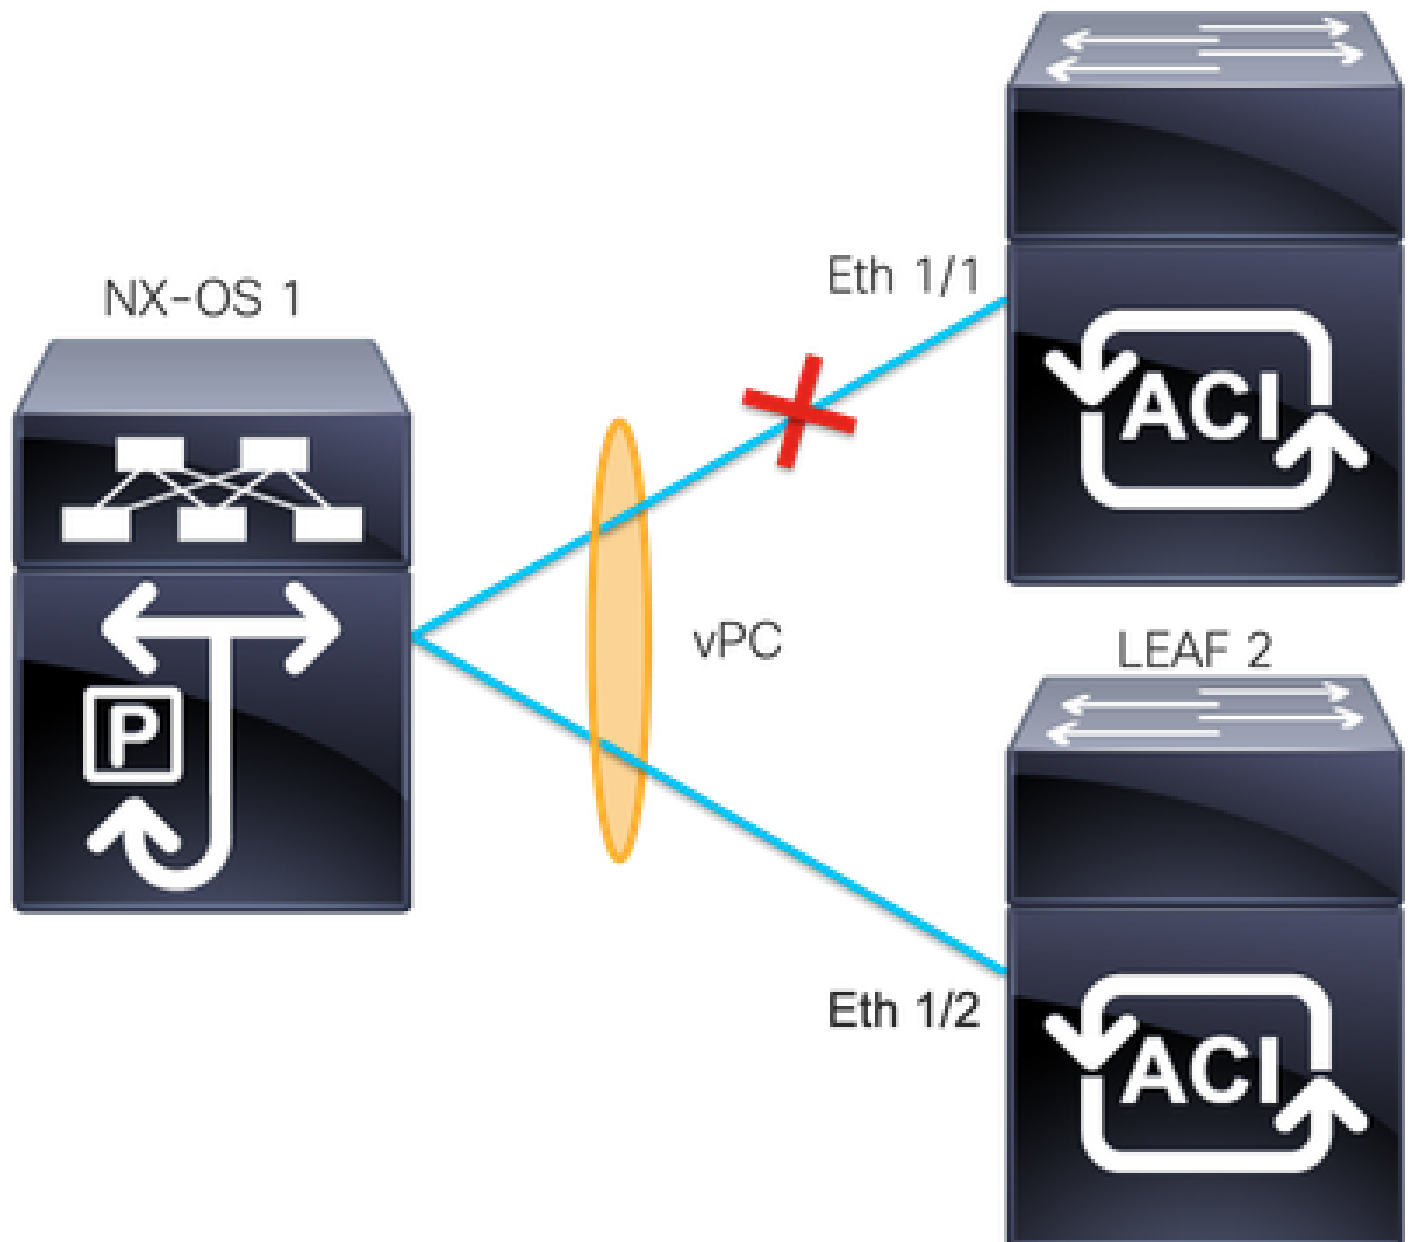

This example illustrates how the information must be displayed by the interface:

```
<#root>
```

```
Leaf1#
```

```
show interface port-channel 5
```

```
port-channel5 is down (port-channel-members-down)
```

```
admin state is up
Hardware: Port-Channel, address: xxxx.xxxx.xx01 (bia xxxx.xxxx.xx01)
MTU 9000 bytes, BW 100000000 Kbit, DLY 1 usec
reliability 255/255, txload 1/255, rxload 1/255
Encapsulation ARPA, medium is broadcast
Port mode is trunk
full-duplex, 100 Gb/s
Input flow-control is off, output flow-control is off
Auto-mdix is turned on
EtherType is 0x8100
Members in this channel: eth1/1
```

You must review and discard these topics:

- Physical issues (transceivers and cables) must be the first step in order to review.
- Changes on the configuration for both ends.
- Link Aggregation Control Protocol (LACP) information was received on the Leaf interface.

LACP Logs

You can use the command `show lacp internal event-history interface ethernet 1/x` to obtain the events related to the LACP status like this example:

```
<#root>
```

```
Leaf1#
```

```
show lacp internal event-history interface ethernet 1/1
```

```
Output omitted
...
```

```
9) FSM:<Ethernet1/1> Transition at 2022-07-15T08:43:06.121732000+00:00
Previous state: [LACP_ST_DETACHED_LAG_NOT_DETERMINED]
Triggered event:
```

```
[LACP_EV_RECEIVE_PARTNER_PDU_TIMED_OUT_II_INDIVIDUAL]
```

```
Next state: [LACP_ST_INDIVIDUAL_OR_DEFAULT]
```

```
Output omitted
...
```

```
18) FSM:<Ethernet1/1> Transition at 2022-07-15T08:46:24.298022000+00:00
Previous state: [LACP_ST_DETACHED_LAG_NOT_DETERMINED]
Triggered event:
```

```
[LACP_EV_RECEIVE_PARTNER_PDU_TIMED_OUT]
```

```
Next state: [FSM_ST_NO_CHANGE]
```

Output omitted

...

23) FSM:<Ethernet1/1> Transition at 2022-07-15T08:46:27.299819000+00:00

Previous state: [LACP_ST_DETACHED_LAG_NOT_DETERMINED]

Triggered event:

[LACP_EV_RECEIVE_PARTNER_PDU_TIMED_OUT_II_INDIVIDUAL]

Next state: [LACP_ST_INDIVIDUAL_OR_DEFAULT]

Output omitted

...

24) FSM:<Ethernet1/1> Transition at 2022-07-15T08:52:25.204611000+00:00

Previous state: [LACP_ST_INDIVIDUAL_OR_DEFAULT]

Triggered event:

[LACP_EV_LACP_DOWN_OR_PORT_DOWN]

Next state: [LACP_ST_PORT_IS_DOWN_OR_LACP_IS_DISABLED]

The example logs show that ACI does not receive the proper reply from the peer device, in some cases the peer does not send the PDU/LACP before the keep-alive timer expires.

Next Step:

Now you need to verify the configuration and the status of the peer device.

The [Cisco CLI Analyzer](#) (registered customers only) supports certain show commands. Use the Cisco CLI Analyzer in order to view an analysis of the show command output.



Note: Refer to [Important Information on Debug Commands](#) before you use debug commands.

Related Information

- [Technical Support & Documentation - Cisco Systems](#)
- [Virtual Port Channel \(vPC\) in ACI](#)
- [Using MCP \(MisCabling Protocol\) for ACI](#)