

IPS 5.x and later: Tuning the Signature with Event Action Filter Using CLI and IDM

Document ID: 91817

Contents

Introduction

Prerequisites

- Requirements
- Components Used
- Conventions

Event Action Filters

- Understanding Event Action Filters
- Event Action Filters Configuration Using CLI
- Event Action Filters Configuration Using IDM

Event Variable Configuration

Related Information

Introduction

This document describes how to tune the signature with the Event Action Filter in the Cisco Intrusion Prevention System (IPS) with the Command Line Interface (CLI) and IDS Device Manager (IDM).

Prerequisites

Requirements

This document assumes that Cisco IPS is installed and works properly.

Components Used

The information in this document is based on the Cisco 4200 Series IDS/IPS Device which runs software version 5.0 and later.

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, make sure that you understand the potential impact of any command.

Conventions

Refer to Cisco Technical Tips Conventions for more information on document conventions.

Event Action Filters

Understanding Event Action Filters

Event action filters are processed as an ordered list and you can move filters up or down in the list.

Filters let the sensor perform certain actions in response to the event without requiring the sensor to perform all actions or remove the entire event. Filters work by the removal of actions from an event. A filter that removes all actions from an event effectively consumes the event.

Note: When you filter sweep signatures, Cisco recommends that you do not filter the destination addresses. If there are multiple destination addresses, only the last address is used to match the filter.

You can configure event action filters to remove specific actions from an event or to discard an entire event and prevent further processing by the sensor. You can use event action variables that you defined to group addresses for your filters. For the procedure on how to configure event action variables, see the Adding, Editing, and Deleting Event Action Variables section.

Note: You must preface the variable with a dollar sign (\$) in order to indicate that you use a variable rather than a string. Otherwise, you receive the `Bad source and destination error`.

Event Action Filters Configuration Using CLI

Complete these steps in order to configure event action filters:

1. Log in to the CLI with an account that has administrator privileges.
2. Enter event action rules submenu:

```
sensor#configure terminal
sensor(config)#service event-action-rules rules1
sensor(config-eve)#
```

3. Create the filter name:

```
sensor(config-eve)#filters insert name1 begin
```

Use **name1**, **name2**, and so forth in order to name your event action filters. Use the **begin** | **end** | **inactive** | **before** | **after** keywords in order to specify where you want to insert the filter.

4. Specify the values for this filter:

- a. Specify the signature ID range:

```
sensor(config-eve-fil)#signature-id-range 1000-1005
```

The default is 900 to 65535.

- b. Specify the subsignature ID range:

```
sensor(config-eve-fil)#subsignature-id-range 1-5
```

The default is 0 to 255.

- c. Specify the attacker address range:

```
sensor(config-eve-fil)#attacker-address-range 10.89.10.10-10.89.10.23
```

The default is 0.0.0.0 to 255.255.255.255.

- d. Specify the victim address range:

```
sensor(config-eve-fil)#victim-address-range 192.56.10.1-192.56.10.255
```

The default is 0.0.0.0 to 255.255.255.255.

- e. Specify the victim port range:

```
sensor(config-eve-fil)#victim-port-range 0-434
```

The default is 0 to 65535.

f. Specify the OS relevance:

```
sensor(config-eve-fil)#os-relevance relevant
```

The default is 0 to 100.

g. Specify the risk rating range.

```
sensor(config-eve-fil)#risk-rating-range 85-100
```

The default is 0 to 100.

h. Specify the actions to remove:

```
sensor(config-eve-fil)#actions-to-remove reset-tcp-connection
```

i. If you filter a deny action, set the percentage of deny actions you want:

```
sensor(config-eve-fil)#deny-attacker-percentage 90
```

The default is 100.

j. Specify the status of the filter to either disabled or enabled.

```
sensor(config-eve-fil)#filter-item-status {enabled | disabled}
```

The default is enabled.

k. Specify the stop on match parameter.

```
sensor(config-eve-fil)#stop-on-match {true | false}
```

True tells the sensor to stop processing filters if this item matches. **False** tells the sensor to continue to process filters even if this item matches.

l. Add any comments you want to use in order to explain this filter:

```
sensor(config-eve-fil)#user-comment NEW FILTER
```

5. Verify the settings for the filter:

```
sensor(config-eve-fil)#show settings
NAME: name1
```

```
-----
```

```
signature-id-range: 1000-10005 default: 900-65535
```

```
subsignature-id-range: 1-5 default: 0-255
```

```
attacker-address-range: 10.89.10.10-10.89.10.23 default: 0.0.0.0-255.255.255.2
```

```
victim-address-range: 192.56.10.1-192.56.10.255 default: 0.0.0.0-255.255.255.2
```

```
attacker-port-range: 0-65535 <defaulted>
```

```
victim-port-range: 1-343 default: 0-65535
```

```
risk-rating-range: 85-100 default: 0-100
```

```
actions-to-remove: reset-tcp-connection default:
```

```
deny-attacker-percentage: 90 default: 100
```

```
filter-item-status: Enabled default: Enabled
```

```
stop-on-match: True default: False
user-comment: NEW FILTER default:
os-relevance: relevant default: relevant|not-relevant|unknown
```

```
-----
sensor(config-eve-fil)#
```

6. In order to edit an existing filter:

```
sensor(config-eve)#filters edit name1
```

7. Edit the parameters and see Steps 4a through 4l for more information.

8. In order to move a filter up or down in the filter list:

```
sensor(config-eve-fil)#exit
sensor(config-eve)#filters move name5 before name1
```

9. Verify that you have moved the filters:

```
sensor(config-eve-fil)#exit
sensor(config-eve)#show settings
```

```
-----
filters (min: 0, max: 4096, current: 5 - 4 active, 1 inactive)
```

```
-----
ACTIVE list-contents
```

```
-----
NAME: name5
```

```
-----
signature-id-range: 900-65535 <defaulted>
subsignature-id-range: 0-255 <defaulted>
attacker-address-range: 0.0.0.0-255.255.255.255 <defaulted>
victim-address-range: 0.0.0.0-255.255.255.255 <defaulted>
attacker-port-range: 0-65535 <defaulted>
victim-port-range: 0-65535 <defaulted>
risk-rating-range: 0-100 <defaulted>
actions-to-remove: <defaulted>
filter-item-status: Enabled <defaulted>
stop-on-match: False <defaulted>
user-comment: <defaulted>
```

```
-----
NAME: name1
-----
```

signature-id-range: 900-65535 <defaulted>
subsignature-id-range: 0-255 <defaulted>
attacker-address-range: 0.0.0.0-255.255.255.255 <defaulted>
victim-address-range: 0.0.0.0-255.255.255.255 <defaulted>
attacker-port-range: 0-65535 <defaulted>
victim-port-range: 0-65535 <defaulted>
risk-rating-range: 0-100 <defaulted>
actions-to-remove: <defaulted>
filter-item-status: Enabled <defaulted>
stop-on-match: False <defaulted>
user-comment: <defaulted>

NAME: name2

signature-id-range: 900-65535 <defaulted>
subsignature-id-range: 0-255 <defaulted>
attacker-address-range: 0.0.0.0-255.255.255.255 <defaulted>
victim-address-range: 0.0.0.0-255.255.255.255 <defaulted>
attacker-port-range: 0-65535 <defaulted>
victim-port-range: 0-65535 <defaulted>
risk-rating-range: 0-100 <defaulted>
actions-to-remove: <defaulted>
filter-item-status: Enabled <defaulted>
stop-on-match: False <defaulted>
user-comment: <defaulted>

INACTIVE list-contents

sensor(config-eve)#

10. In order to move a filter to the inactive list:

```
sensor(config-eve)#filters move name1 inactive
```

11. Verify that the filter has moved to the inactive list:

```
sensor(config-eve-fil)#exit
sensor(config-eve)#show settings
```

```
-----
INACTIVE list-contents
-----
```

```
-----
NAME: name1
-----
```

```
-----
signature-id-range: 900-65535 <defaulted>
subsignature-id-range: 0-255 <defaulted>
attacker-address-range: 0.0.0.0-255.255.255.255 <defaulted>
victim-address-range: 0.0.0.0-255.255.255.255 <defaulted>
attacker-port-range: 0-65535 <defaulted>
victim-port-range: 0-65535 <defaulted>
risk-rating-range: 0-100 <defaulted>
actions-to-remove: <defaulted>
filter-item-status: Enabled <defaulted>
stop-on-match: False <defaulted>
user-comment: <defaulted>
-----
-----
```

```
sensor(config-eve)#
```

12. Exit event action rules submode:

```
sensor(config-eve)#exit
Apply Changes:[yes]:
```


13. Press **Enter** in order to apply your changes or enter **no** in order to discard them.

Event Action Filters Configuration Using IDM

Complete these steps in order to add, edit, delete, enable, disable, and move event action filters:

1. Log in to IDM with an account that has administrator or operator privileges.
2. Choose **Configuration > Policies > Event Action Rules > rules0 > Event Action Filters** if the software version is 6.x. For the software version 5.x, choose **Configuration > Event Action Rules > Event Action Filters**.

The Event Action Filters tab appears as shown.

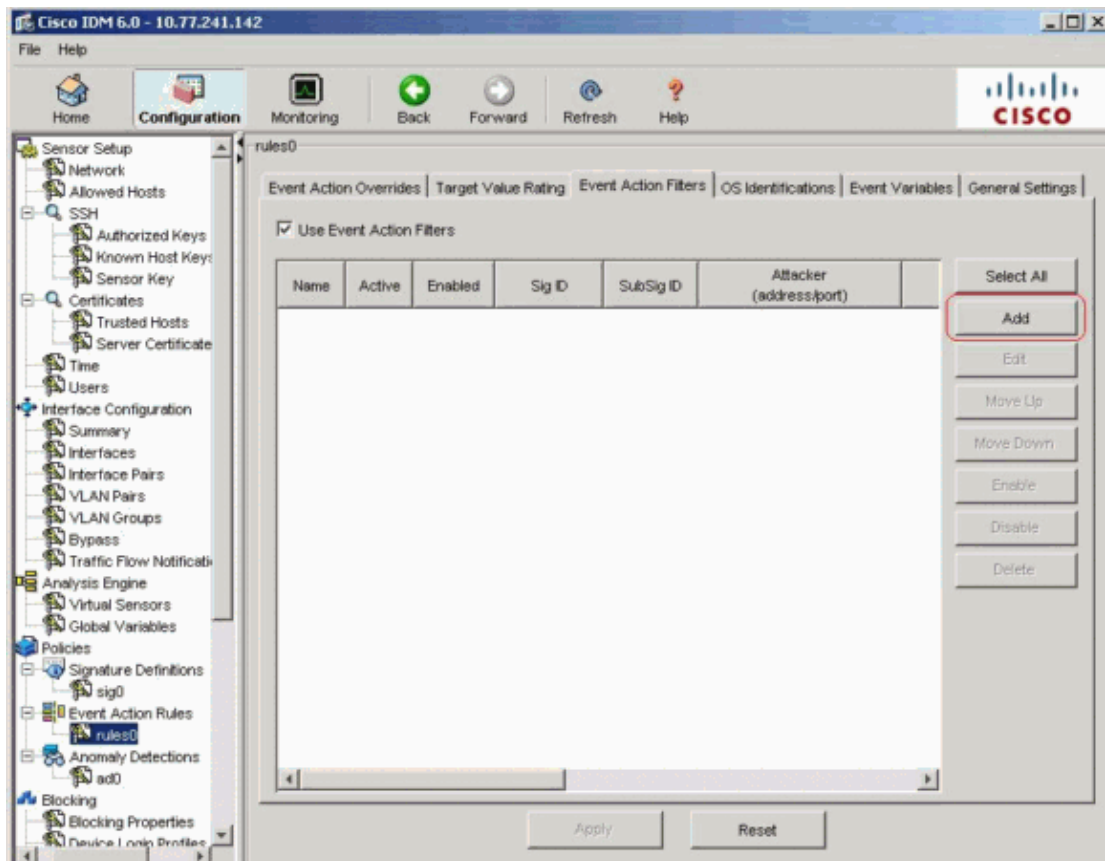

3. Click **Add** in order to add an event action filter.

The Add Event Action Filter dialog box appears.

4. In the Name field, enter a name as **name1** for the event action filter.

A default name is supplied, but you can change it to a more meaningful name.

5. In the Active field, click the **Yes** radio button in order to add this filter to the list so that it takes effect on filtering events.
6. In the Enabled field, click the **Yes** radio button in order to enable the filter.

Note: You must also check the **Use Event Action Filters** check box on the Event Action Filters tab or none of the event action filters become enabled regardless of whether you check the **Yes** check box in the Add Event Action Filter dialog box.

7. In the Signature ID field, enter the signature IDs of all signatures to which this filter should be applied.

You can use a list, for example, 1000, 1005, or a range, for example, **1000–1005** or one of the SIG variables if you defined them on the Event Variables tab. Preface the variable with \$.

8. In the SubSignature ID field, enter the subsignature IDs of the subsignatures to which this filter should be applied. For example, **1–5**.
9. In the Attacker Address field, enter the IP address of the source host.

You can use one of the variables if you defined them on the Event Variables tab. Preface the variable with \$. You can also enter a range of addresses, for example, **10.89.10.10–10.89.10.23**. Default is 0.0.0.0–255.255.255.255.

10. In the Attacker Port field, enter the port number used by the attacker in order to send the offending packet.
11. In the Victim Address field, enter the IP address of the recipient host.

You can use one of the variables if you defined them on the Event Variables tab. Preface the variable with \$. You can also enter a range of addresses, for example, **192.56.10.1–192.56.10.255**. Default is 0.0.0.0–255.255.255.255.

12. In the Victim Port field, enter the port number used by the victim host in order to receive the offending packet. For example, **0–434**.
13. In the Risk Rating field, enter an RR range for this filter. For example, **85–100**.

If the RR for an event falls within the range you specify, the event is processed against the criteria of this filter.

14. From the Actions to Subtract drop–down list, choose the actions you want this filter to remove from the event. For example, choose **Reset TCP connection**.

Tip: Hold down the **Ctrl** key in order to choose more than one event action in the list.

15. In the OS Relevance drop–down list, choose whether you want to know if the alert is relevant to the OS that has been identified for the victim. For example, choose **Relevant**.
16. In the Deny Percentage field, enter the percentage of packets in order to deny for deny attacker features. For instance, **90**.

The default is 100 percent.

17. In the Stop on Match field, choose one of these radio buttons:

- a. **Yes** If you want the Event Action Filters component to stop processing after the actions of this particular filter are removed

Any filters that remain are not processed; therefore, no additional actions can be removed from the event.

- b. **No** If you want to continue to process additional filters

18. In the Comments field, enter any comments that you want to store with this filter, such as the purpose of this filter or why you have configured this filter in a particular way. For example, **NEW FILTER**.

Tip: Click **Cancel** in order to undo your changes and close the Add Event Action Filter dialog box.

Add Event Action Filter

Name:

Active: Yes No

Enabled: Yes No

Signature ID:

Subsignature ID:

Attacker Address:

Attacker Port:

Victim Address:

Victim Port:

Risk Rating:

Minimum	Maximum
<input type="text" value="85"/>	<input type="text" value="100"/>

Actions to Subtract:

- Request Block Connection
- Request Block Host
- Request Rate Limit
- Request Snmp Trap
- Reset Tcp Connection**

OS Relevance:

- Not Relevant
- Relevant**
- Unknown

Deny Percentage:


Stop on Match: Yes No

Comments:


OK Cancel Help

19. Click **OK**.

The new event action filter now appears in the list on the Event Action Filters tab as shown.

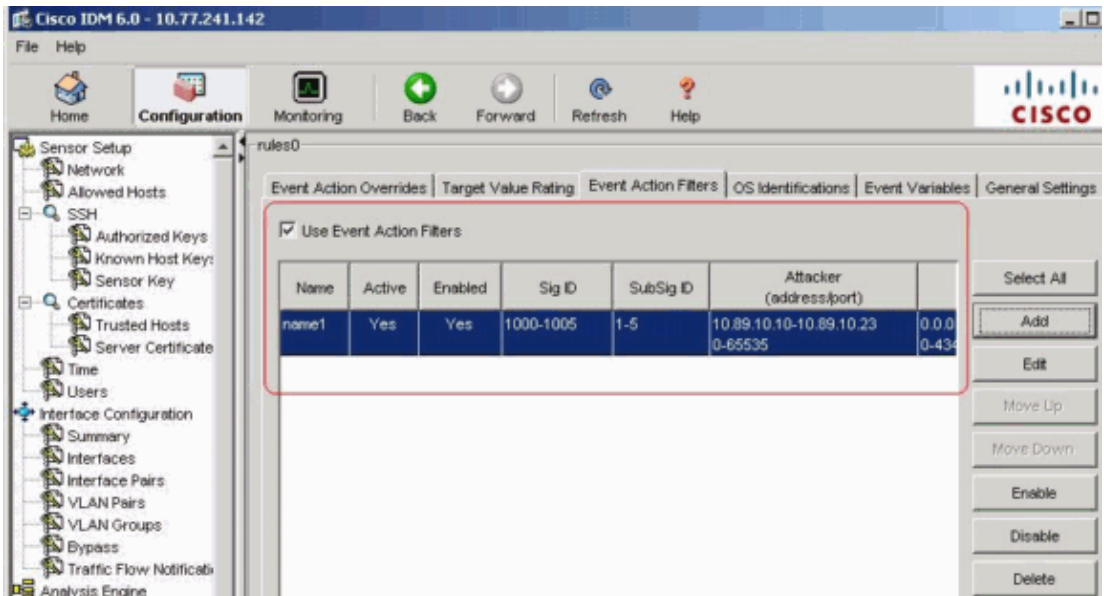

20. Check the **Use Event Action Overrides** check box as shown.

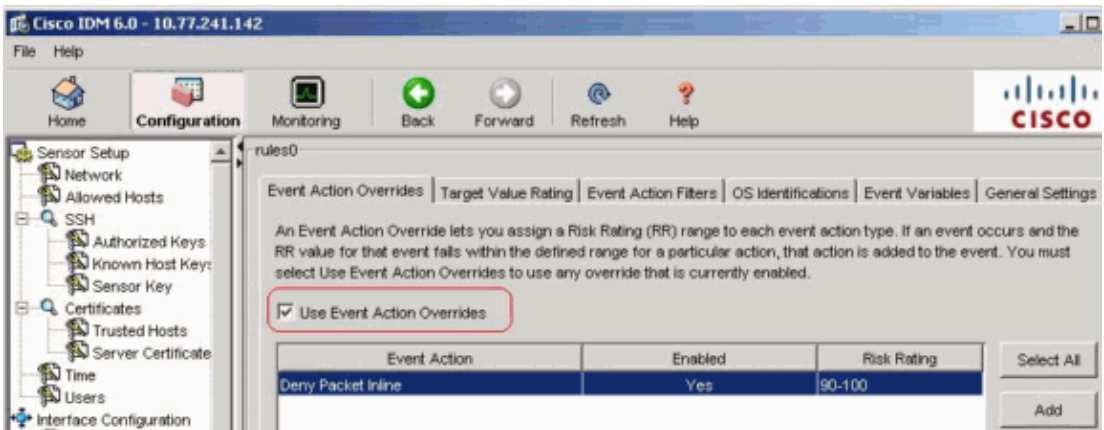

Note: You must check the **Use Event Action Overrides** check box on the Event Action Overrides tab or none of the event action overrides become enabled regardless of the value you set in the Add Event Action Filter dialog box.

21. Choose an existing event action filter in the list in order to edit it, and then click **Edit**.

The Edit Event Action Filter dialog box appears.

22. Change any values in the fields that you need to alter.

See steps 4 through 18 for information on how to complete the fields.

Tip: Click **Cancel** in order to undo your changes and close the Edit Event Action Filter dialog box.

23. Click **OK**.

The edited event action filter now appears in the list on the Event Action Filters tab.

24. Check the **Use Event Action Overrides** check box.

Note: You must check the **Use Event Action Overrides** check box on the Event Action Overrides tab or none of the event action overrides are enabled regardless of the value you set in the Edit Event Action Filter dialog box.

25. Choose an event action filter in the list in order to delete it, and then click **Delete**.

The event action filter no longer appears in the list on the Event Action Filters tab.

26. Filter up or down in the list in order to move an event action, choose it, and then click **Move Up** or **Move Down**.

Tip: Click **Reset** in order to remove your changes.


27. Click **Apply** in order to apply your changes and save the revised configuration.

Event Variable Configuration

Complete these steps in order to add, edit, and delete event variables:

1. Log in. For example, use an account with administrator or operator privileges.
2. Choose **Configuration > Policies > Event Action Rules > rules0 > Event Variables** if the software version is 6.x. For the software version 5.x, choose **Configuration > Event Action Rules > Event Variables**.

The Event Variables tab appears.

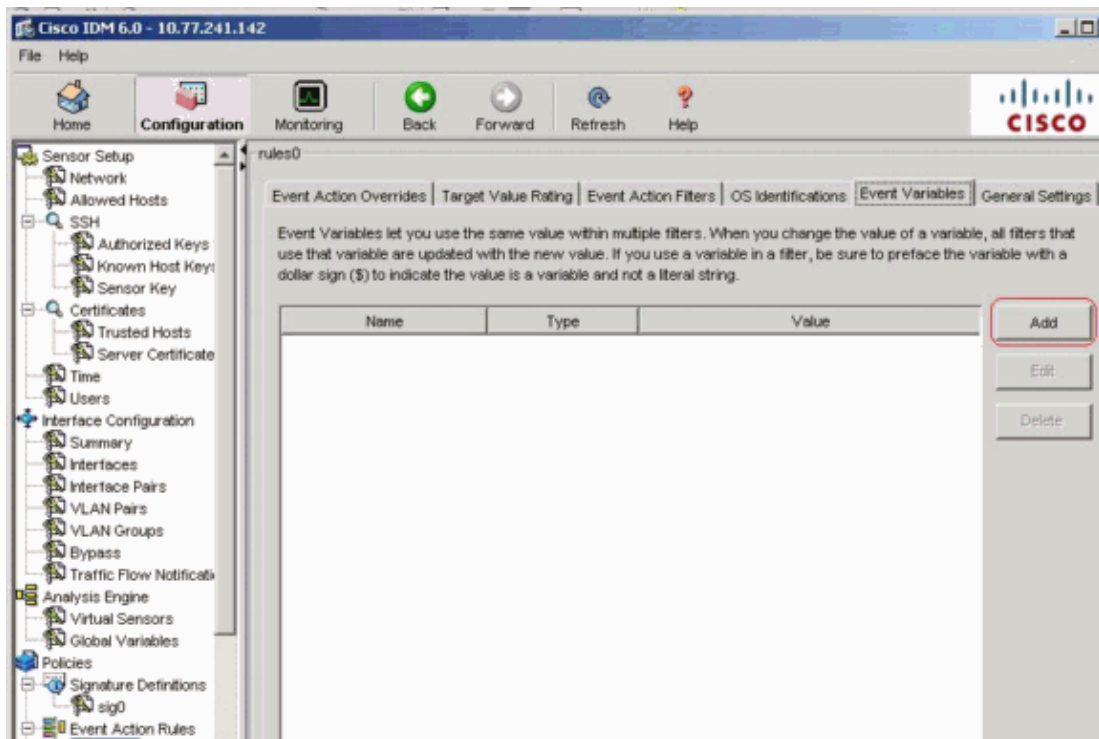

3. Click **Add** in order to create a variable.

The Add Variable dialog box appears.

4. In the Name field, enter a name for this variable.

Note: The valid name can only contain numbers or letters. You can also use a hyphen (-) or an underscore (_).


5. In the Value field, enter the values for this variable.

Specify the full IP address or ranges or set of ranges. For example:

- ◆ 10.89.10.10–10.89.10.23
- ◆ 10.90.1.1
- ◆ 192.168.10.1–192.168.10.255


Note: You can use commas as delimiters. Make sure there are no trailing spaces after the comma. Otherwise, you receive a `Validation failed` error message.

Tip: Click **Cancel** in order to undo your changes and close the Add Event Variable dialog box.

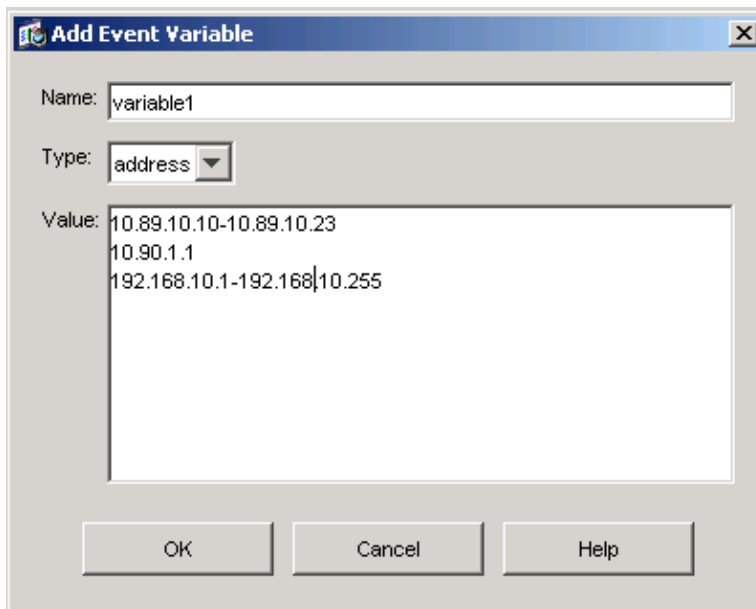

6. Click **OK**.

The new variable appears in the list on the Event Variables tab.

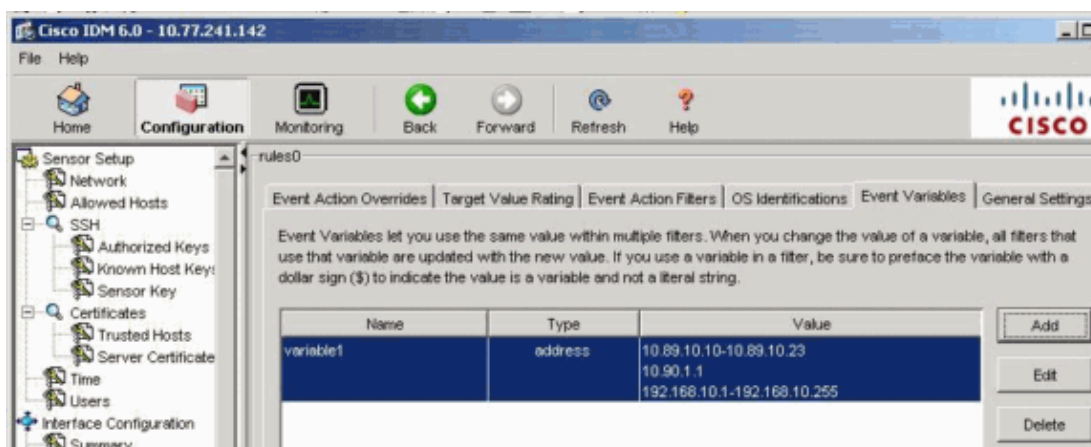

7. Choose the existing variable in the list in order to edit it, and then click **Edit**.

The Edit Event Variable dialog box appears.

8. In the Value field, enter your changes to the value.

9. Click **OK**.

The edited event variable now appears in the list on the Event Variables tab.

Tip: Choose **Reset** in order to remove your changes.

10. Click **Apply** in order to apply your changes and save the revised configuration.

Related Information

- [Cisco Intrusion Prevention System Support Page](#)
- [Technical Support & Documentation – Cisco Systems](#)

