



Cisco cBR Series Converged Broadband Routers PacketCable and PacketCable Multimedia Configuration Guide for Cisco IOS XE Fuji 16.7.x

First Published: 2017-11-23

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883



CONTENTS

CHAPTER 1

PacketCable and PacketCable Multimedia 1

- Finding Feature Information 1
- Hardware Compatibility Matrix for Cisco cBR Series Routers 2
- Restrictions for PacketCable Operations 2
- Information About PacketCable Operations 3
 - Feature Overview 3
 - Emergency 911 Features 3
 - PacketCable Emergency 911 Cable Interface Line Card Prioritization 3
 - PacketCable Emergency 911 Services Listing and History 4
 - PacketCable Network Components 4
 - Dynamic Quality of Service 5
 - Two-Stage Resource Reservation Process 6
 - Making a Call Using DQoS 6
 - DQoS Lite Based IPv6 Voice Support 7
 - Dynamic Service Transaction ID Support 7
 - PacketCable Subscriber ID Support 8
 - Benefits 8
- How to Configure PacketCable Operations 9
 - Enabling PacketCable Operation 9
 - Disabling PacketCable Operation 10
 - Configuring PacketCable Operation 11
 - Enabling Both PacketCable and Non-PacketCable UGS Service Flows 12
 - Enabling PacketCable Subscriber ID Support 13
 - Configuring RADIUS Accounting for RKS Servers 14
 - PacketCable Client Accept Timeout 15
- Configuration Examples for PacketCable 16
 - Example: Typical PacketCable Configuration 17
- Verifying PacketCable Operations 19

| | |
|---|----|
| Verifying Emergency 911 Calls | 20 |
| Information About PacketCable Multimedia Operations | 22 |
| PCMM Overview | 23 |
| PCMM Enhancements over PacketCable 1.x | 24 |
| PCMM and High Availability Features on the Cisco CMTS Router | 24 |
| PCMM Gates | 24 |
| PCMM Gate Overview and PCMM Dynamic Quality of Service | 24 |
| PCMM Persistent Gate | 25 |
| PCMM Interfaces | 25 |
| PCMM to COPS Interface | 25 |
| PCMM and Distributed Cable Interface Line Cards | 25 |
| PCMM Unicast and Multicast | 25 |
| PCMM Multicast Session Range | 26 |
| How to Configure PCMM Operations | 26 |
| Enabling PCMM Operations on the Cisco CMTS Router | 26 |
| Configuring a PCMM Multicast Session Range | 27 |
| Configuration Examples for PacketCable Multimedia | 28 |
| Example: Enabling PCMM Operations on the Cisco CMTS Router | 28 |
| Example: Enabling a Multicast Session Range on the Cisco CMTS Router | 28 |
| Verifying PCMM Operations | 29 |
| High Availability Stateful Switchover (SSO) for PacketCable and PacketCable MultiMedia | 31 |
| PacketCable and PCMM with Admission Control | 31 |
| Voice MGPI Support | 31 |
| Voice Support Over DOCSIS 3.0 E-MTAs | 31 |
| PacketCable and PCMM Call Trace | 32 |
| Verifying PacketCable and PCMM Statistics | 32 |
| Additional References | 33 |
| Feature Information for PacketCable and PacketCable Multimedia | 35 |

CHAPTER 2
COPS Engine Operation 37

| | |
|---|----|
| Finding Feature Information | 37 |
| Hardware Compatibility Matrix for Cisco cBR Series Routers | 38 |
| Prerequisites for the COPS Engine on the Cisco CMTS Routers | 38 |
| Restrictions for the COPS Engine on the Cisco CMTS | 39 |

| | |
|--|----|
| Information About the COPS Engine on the Cisco CMTS | 39 |
| How to Configure the COPS Engine on the Cisco CMTS | 39 |
| Configuring COPS TCP and DSCP Marking | 39 |
| Configuring COPS TCP Window Size | 41 |
| Configuring Access Control List Support for COPS Engine | 42 |
| Restricting RSVP Policy to Specific Access Control Lists | 43 |
| Displaying and Verifying COPS Engine Configuration on the Cisco CMTS | 43 |
| Show Commands for COPS Engine Information | 44 |
| Displaying COPS Servers on the Network | 44 |
| Displaying COPS Policy Information on the Network | 44 |
| Displaying Access Lists for COPS | 45 |
| COPS Engine Configuration Examples for Cable | 45 |
| Example: COPS Server Specified | 45 |
| Example: COPS Server Display | 45 |
| Additional References | 46 |
| Feature Information for COPS Engine Operation | 47 |



CHAPTER

1

PacketCable and PacketCable Multimedia

This document describes how to configure the Cisco CMTS for PacketCable and PacketCable Multimedia operations over an existing DOCSIS (1.1 and later versions) network.

- [Finding Feature Information, page 1](#)
- [Hardware Compatibility Matrix for Cisco cBR Series Routers, page 2](#)
- [Restrictions for PacketCable Operations, page 2](#)
- [Information About PacketCable Operations, page 3](#)
- [How to Configure PacketCable Operations, page 9](#)
- [Configuration Examples for PacketCable, page 16](#)
- [Verifying PacketCable Operations, page 19](#)
- [Information About PacketCable Multimedia Operations, page 22](#)
- [How to Configure PCMM Operations, page 26](#)
- [Configuration Examples for PacketCable Multimedia, page 28](#)
- [Verifying PCMM Operations, page 29](#)
- [High Availability Stateful Switchover \(SSO\) for PacketCable and PacketCable MultiMedia, page 31](#)
- [Voice MGPI Support, page 31](#)
- [Additional References, page 33](#)
- [Feature Information for PacketCable and PacketCable Multimedia, page 35](#)

Finding Feature Information

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the Feature Information Table at the end of this document.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to <http://tools.cisco.com/ITDIT/CFN/>. An account on <http://www.cisco.com/> is not required.

Hardware Compatibility Matrix for Cisco cBR Series Routers



Note

The hardware components introduced in a given Cisco IOS-XE Release are supported in all subsequent releases unless otherwise specified.

Table 1: Hardware Compatibility Matrix for the Cisco cBR Series Routers

| Cisco CMTS Platform | Processor Engine | Interface Cards |
|--|--|---|
| Cisco cBR-8 Converged Broadband Router | <p>Cisco IOS-XE Release 16.5.1 and Later Releases</p> <p>Cisco cBR-8 Supervisor:</p> <ul style="list-style-type: none"> • PID—CBR-CCAP-SUP-160G • PID—CBR-CCAP-SUP-60G • PID—CBR-SUP-8X10G-PIC | <p>Cisco IOS-XE Release 16.5.1 and Later Releases</p> <p>Cisco cBR-8 CCAP Line Cards:</p> <ul style="list-style-type: none"> • PID—CBR-LC-8D30-16U30 • PID—CBR-LC-8D31-16U30 • PID—CBR-RF-PIC • PID—CBR-RF-PROT-PIC • PID—CBR-CCAP-LC-40G-R <p>Cisco cBR-8 Downstream PHY Modules:</p> <ul style="list-style-type: none"> • PID—CBR-D30-DS-MOD • PID—CBR-D31-DS-MOD <p>Cisco cBR-8 Upstream PHY Modules:</p> <ul style="list-style-type: none"> • PID—CBR-D30-US-MOD • PID—CBR-D31-US-MOD |

Restrictions for PacketCable Operations

- To avoid packet drops of voice calls, the Cisco CMTS should be using the default token bucket configuration (**cable downstream rate-limit token-bucket shaping**). Packet drops are guaranteed to occur when the **shaping** option is not used (**cable downstream rate-limit token-bucket**).

- Supports only embedded multimedia terminal adapter (E-MTA) clients. Standalone MTA (S-MTA) clients are not supported.
- PacketCable operations can be configured together with HCCP N+1 redundancy, but the PacketCable states are not synchronized between the Working and Protect interfaces. If a switchover occurs, existing voice calls continue, but when the user hangs up, PacketCable event messages are not generated because the Protect interface is not aware of the previous call states. However, new voice calls can be made and proceed in the normal fashion.
- The 200,000 Hz channel width cannot be used on upstreams that support PacketCable voice calls, or on any upstreams that use Unsolicited Grant Service (UGS) or UGS with Activity Detection (UGS-AD) service flows. Using this small a channel width with voice and other UGS/UGS-AD service flows results in calls being rejected because of “DSA MULTIPLE ERRORS”.

Information About PacketCable Operations

This section provides an overview and other information about PacketCable operations, the components of a PacketCable network, and how they interact with the other components of a DOCSIS cable networks.

Feature Overview

PacketCable is a program initiative from Cablelabs and its associated vendors to establish a standard way of providing packet-based, real-time video and other multimedia traffic over hybrid fiber-coaxial (HFC) cable networks. The PacketCable specification is built upon the Data-over-Cable System Interface Specifications (DOCSIS) 1.1, but it extends the DOCSIS protocol with several other protocols for use over noncable networks, such as the Internet and the public switched telephone network (PSTN).

This allows PacketCable to be an end-to-end solution for traffic that originates or terminates on a cable network, simplifying the task of providing multimedia services over an infrastructure composed of disparate networks and media types. It also provides an integrated approach to end-to-end call signaling, provisioning, quality of service (QoS), security, billing, and network management.

Emergency 911 Features

PacketCable Emergency 911 Cable Interface Line Card Prioritization

The PacketCable Emergency 911 cable interface line card prioritization feature enables cable interface line cards that are supporting an Emergency 911 call to be given automatic priority over cable interface line cards supporting non-emergency voice calls, even in the case of HCCP switchover events. In such cases, Protect HCCP line card interfaces automatically prioritize service to Emergency 911 voice calls, should Working HCCP cable interface line cards be disrupted. This feature is enabled by default, and may not be disabled with manual configuration.

**Note**

Emergency 911 cable interface line card prioritization applies only to PacketCable voice calls.

During HCCP switchover events, cable modems recover in the following sequence:

- 1 Cable modems supporting Emergency 911 voice traffic

- 2 Cable modems supporting non-emergency voice traffic
- 3 Cable modems that are nearing a T4 timeout event, in which service would be disrupted
- 4 Remaining cable modems

To view information about Emergency 911 voice events and cable interface line card prioritization on the Cisco CMTS router, use the `show hccp`, `show cable calls`, and `show hccp event-history` commands in privileged EXEC mode.

PacketCable Emergency 911 Services Listing and History

The enhanced informational support for PacketCable Emergency 911 calls on the Cisco CMTS router provides the following information and related history:

- active Emergency 911 calls
- recent Emergency 911 calls
- regular voice calls
- voice calls made after recent Emergency 911 calls

This feature is enabled and supported with the following configuration and show commands:

- `cable high-priority-call-window`
- **show cable calls**
- **show cable modem calls**

To set the call window (in minutes) during which the Cisco CMTS router maintains records of Emergency 911 calls, use the `cable high-priority-call-window` command in global configuration mode. To remove the call window configuration from the Cisco CMTS router, use the **no** form of this command:

PacketCable Network Components

A PacketCable network contains a number of components. Some components are the same as those that exist in a DOCSIS 1.1 network, while other components are new entities that create the end-to-end infrastructure that the PacketCable network needs to establish calls. Wherever possible, the PacketCable components and protocols build on existing protocols and infrastructures to simplify implementation and interoperability.

- Cable modem—A customer premises equipment (CPE) device that connects to a DOCSIS 1.0 or DOCSIS 1.1 cable network. All DOCSIS cable modems provide high-speed data connectivity to the Internet, while other cable modems can provide additional features, such as telephone connectivity.
- Cable Modem Termination System (CMTS)—A headend-based router that connects a DOCSIS cable network to the IP backbone network. The CMTS controls the DOCSIS 1.1 MAC layer and enforces the quality of service (QoS) limits that the cable operator guarantees to its subscribers. A typical CMTS services between several hundred and several thousand cable modems.



Note

See the DOCSIS 1.1 specifications for information about cable modem and CMTS operations.

- Multimedia terminal adapter (MTA)—A CPE device that connects telephones and other end-user devices to the PacketCable network. The PacketCable specification defines two MTA types, an embedded MTA (E-MTA) and a standalone MTA (S-MTA). The E-MTA is an MTA integrated into a DOCSIS 1.1 cable modem, while the S-MTA is a separate MTA that requires a DOCSIS 1.1 cable modem to connect to the cable network.
- Call management server (CMS)—A centrally located server that provides the signaling functions that allow MTAs to establish calls over the network. The CMS uses the Network-based call signaling (NCS) protocol to provide authentication and authorization, call routing, and support for special features such as three-way calling. A PacketCable network could have multiple CMS servers, depending on its size and complexity.

**Note**

The CMS implements several protocols on top of the Common Open Policy Service (COPS) protocol to communicate with the rest of the PacketCable network.

- Gate controller (GC)—A server that controls the establishment of gates in the PacketCable network. A gate is a logical entity in the CMTS that ensures that a service flow is authorized for the QoS features it is requesting. A separate gate controls the upstream and downstream directions of a service flow. When a call is established, the GC instructs the CMTS to create each gate and supplies the set of authorized parameters for each gate, which the CMTS uses to authorize the QoS requests that the MTA is making for the call. The GC is also responsible for coordinating the creation of the two sets of gates at each end of the call so that the call can be authorized and established.

**Note**

A PacketCable network can contain multiple GCs, although only one server at a time is in control of any particular call. Typically, the same workstation provides both the CMS and GC servers.

- Record keeping server (RKS)—Billing server that collects the information about each call as it is made. The RKS uses the Remote Authentication Dial-In User Service (RADIUS) protocol to collect the billing data from the CMTS and other PacketCable servers. The RKS generates a call data record (CDR) for every call and forwards that information to the appropriate application server at the service provider's data processing center for further processing.

Dynamic Quality of Service

A key feature of a PacketCable network is a dynamic quality of service (DQoS) capability that is similar to the dynamic services provided by DOCSIS 1.1. However, DOCSIS 1.1 DQoS authorizes and provisions services only in the cable network and does not reserve the resources needed to propagate a call from one endpoint to another across the network.

The PacketCable DQoS extends the DOCSIS 1.1 services across the entire network, so that resources can be dynamically authorized and provisioned from one endpoint to another. This prevents possible theft-of-service attacks and guarantees customers the services they are authorized to use.

**Note**

PacketCable 1.0 requires that DOCSIS 1.1 be used for resource reservation within the cable network for E-MTA clients.

Two-Stage Resource Reservation Process

The PacketCable DQoS model uses a two-stage resource reservation process, in which resources are first reserved and then committed. This allows a bidirectional reservation process that ensures that resources are available at both endpoints of the connection before actually placing the call.

When an MTA makes a call request, the local CMTS communicates with the gate controller to authorize the call's resources. After the resources are authorized, the CMTS reserves the local resources while it negotiates with the remote end for the resources that are required at that end.

**Note**

The CMTS uses DOCSIS 1.1 Dynamic Service Addition (DSA) messages to reserve the resources, and then uses Dynamic Service Change (DSC) messages to commit the resources.

When all required resources are available, the local CMTS and remote CMTS both commit the resources, allowing traffic to flow. Usage accounting and billing do not begin until the remote MTA picks up and the call is actually in progress.

The DQoS model ensures that both endpoints of a call, as well as the backbone network, have reserved the same bandwidth, and that the bandwidth is reserved only while the call is in progress. When a call terminates, all portions of the network can release the call's resources and make them available for other users.

Making a Call Using DQoS

DOCSIS 1.1 networks use service flows to implement different QoS policies, but service flows exist only within the cable network. To control the service flows and to extend them across the entire network, a PacketCable network creates and maintains "gates."

A gate is a logical entity created on the CMTS at each side of a connection that authorizes and establishes a particular DQoS traffic flow. The CMTS communicates with the gate controller to coordinate the creation of matching gates at each side of the connection.

Gates are unidirectional, so separate gates are required for the downstream and upstream traffic flows. The same gate ID, however, is usually used for the downstream and upstream gates for a call. Each CMTS maintains its own set of gates, so a bidirectional traffic flow requires four gates to be created, two gates on the local CMTS and two gates on the remote CMTS.

For a typical call, gates progress through the following stages to create a DQoS traffic flow:

- 1 The local MTA makes a call request, and the gate controller sends a Gate-Allocation command to the CMTS, which creates a gate in response and puts it into the Allocated state.
- 2 The call management server, which might be the same server as the gate controller, parses the call request to translate the destination phone number into the appropriate destination gateway.
- 3 The gate controller verifies that the MTA making the call request is authorized for the required resources and sends a Gate-Set command to the CMTS, which puts the gate into the Authorized state.
- 4 The CMTS on each side of the connection reserves the local resources needed for the call, putting the gate into the Reserved state.
- 5 As the remote CMTS and local CMTS perform gate coordination, their respective gates get put into the Local_Committed and Remote_Committed states.
- 6 When both sides have reserved all required resources, each CMTS puts its gates into the Committed state, allowing traffic to flow.

DQoS Lite Based IPv6 Voice Support

DQoS Lite is a modem centric solution without notion of gates, to validate and deliver residential voice services over IPv6 to reclaim IPv4 address space. CMTS does not participate in resource reservation and authorization.

DQoS Lite leverages elements from PacketCable 2.0. It is SIP based, its provision mechanism is similar to PacketCable 2.0 and it can be part of an IP Multimedia Subsystem (IMS) infrastructure for the ISP.

The key factors for deploying IPv6 voice solution on this new DQoS Lite infrastructure are as follows:

- It is SIP or IMS based.
- Support for a wide range of multimedia services.
- To reclaim some IPv4 address space.

This feature is enabled and supported with the following configuration and show commands:

- **packetcable authorize vanilla-docsis-mta**
- **show cable modem** *{ip-address|mac-address}* **qos**
- **show cable modem** *{ip-address|mac-address}* **service-flow**
- **show interface cable** *slot/subslot/cable-interface-index* **sid** *sid*
- **show interface cable** *slot/subslot/cable-interface-index* **service-flow** *sfid*

Dynamic Service Transaction ID Support

DOCSIS 2.0 mandates unique Transaction IDs (TAIDs) across transactions. The TAIDs must be unique and not incremented. The TAIDs are assigned by the senders and sometimes the TAID timeout is mismatched between senders and receivers. This affects the uniqueness of the TAID.

A TAID can be reused when the sender finishes a transaction. Similarly, DOCSIS allows the receiver to identify a transaction by TAID without the SFID. Problems arise in DSD transaction and DSA/DSC interrupted transactions, when these two requirements are combined.

The uniqueness of TAID must be ensured to resolve the interoperability issue. This is done by making the CMTS wait until T10 to reuse the same TAID. A new TAID allocation algorithm is used to fulfill this requirement.

It creates a TAID pool to replace the existing 16-bit counter. This TAID pool is monitored by timers to track the TAID expiration. A flag is assigned to each TAID in the pool to indicate its availability. When new TAID is requested, the dynamic service process checks the availability of the TAID. If the TAID is available, it is allocated to the new service flow, else the request is rejected.

Once the TAID is allocated, the timer starts with T10 expiration time and the TAID flag is set to FALSE to indicate the unavailability of TAID. The dynamic service process keeps track of the timer. When the time expires, the timer stops and the flag is set to TRUE to indicate the availability of TAID.

The TAID pool is allocated and initialized at the process initialization. All timers associated with the TAIDs are added as leaf timers to the process' parent timer.

PacketCable Subscriber ID Support

The PacketCable Subscriber ID feature adds a subscriber ID to all Gate Control messages and enhances error codes returned from the Cisco CMTS router.

Previously, the Gate ID was unique only to individual CMTS systems, with the CMTS proxying all CMS Gate Control messaging through a central device, which manages the CMTS connections on behalf of the CMS. The CMS had a single Common Open Policy Service (COPS) association to the proxy device. Therefore, the Gate IDs could be duplicated when using multiple CMTS systems.

A subscriber ID is added to each Gate Control message to disambiguate the Gate IDs between the CMS and proxy device. The subscriber ID parameter is added to the following COPS messages:

- GATE-INFO
- GATE-DELETE
- GATE-OPEN
- GATE-CLOSE

The subscriber ID is available at the CMS and is used in the Gate-Set messages. Additionally, the error codes returned from CMTS or its proxy are enhanced to include more specific information about gate operation failures.

To enable this feature, use the **packetcable gate send-subscriberID** command in global configuration mode.

Benefits

The PacketCable feature offers the following benefits to service providers and their customers:

Integrated Services on a Cable Network

PacketCable allows cable operators the ability to offer multimedia, real-time services, in addition to data connectivity, across their entire network. These services could include basic telephony with lifeline support, as well as telephony that offers competitive extended calling services. Operators can deploy new services while heavily leveraging their existing network infrastructures.

The widespread use of IP as the standard transport mechanism for data networks today is enabling many advanced Internet applications such as multimedia e-mail, real-time chat, streaming media (including music and video), and videoconferencing. The PacketCable initiative provides the network architecture for a cable operator to deliver these services quickly and economically.

Standardized Provisioning

PacketCable provides a standardized, efficient method to provision IP services for individual subscribers, because PacketCable specifications define a uniform, open, and interoperable network. Cable operators are assured of standardized provisioning and the associated lower costs of deployment.

Interoperability

Customer premises equipment (CPE) devices account for a major portion of the capital expense in deploying a VoIP solution at a cable plant. The PacketCable specifications ensure that vendors will build MTA clients

that support the voice and other services that cable operators plan to deploy. Because these CPE devices are based on existing DOCSIS-compliant cable modems, time and cost of development is minimized.

Interoperability with the other components of the PacketCable network is also guaranteed because of the standards-based approach to the specifications. Any PacketCable-certified component will be able to interoperate within a network that conforms to the PacketCable standards.

Secure Architecture

Because PacketCable is built upon the security features available in DOCSIS 1.1, cable operators will be assured of networks that are secure from end to end, with a high standard of security that prevents the most common theft-of-service attacks. The comprehensive, standards-based PacketCable specifications are designed to create a network that is as secure as the public switched telephone network (PSTN).

CALEA Support

The PacketCable architecture was designed to accommodate the 1994 Communications Assistance for Law Enforcement Act (CALEA), which requires telecommunications carriers to assist law-enforcement agencies in conducting court-ordered electronic surveillance. PacketCable networks will be able to provide the two types of information that a carrier must provide, depending on the type of court order:

- Call-identifying information—The carrier must provide the call-identifying information for calls to or from an intercept target. For telephone calls, this information includes the phone numbers called by the target or calling the target.
- Call content—The carrier must provide the content of calls to or from an intercept target. For telephone calls, this real-time content is the voice conversation.

How to Configure PacketCable Operations

This section contains the following tasks to configure the PacketCable feature. Each task is required unless otherwise identified as optional.

Enabling PacketCable Operation

To enable PacketCable operation, use the following commands beginning in user EXEC mode. This is a required procedure.

DETAILED STEPS

| | Command or Action | Purpose |
|--------|--|--|
| Step 1 | <p>enable</p> <p>Example:</p> <pre>Router> enable</pre> | Enables privileged EXEC mode. Enter your password if prompted. |

| | Command or Action | Purpose |
|---------------|---|--|
| Step 2 | configure terminal Example: Router# configure terminal | Enters global configuration mode. |
| Step 3 | packetcable Example: Router(config)# packetcable | Enables PacketCable operation on all cable interfaces. |
| Step 4 | exit Example: Router(config)# exit | Exits global configuration mode. |

Disabling PacketCable Operation

To disable PacketCable operation, use the following commands beginning in user EXEC mode. This procedure is required only when you no longer want the Cisco CMTS to support PacketCable signaling.

DETAILED STEPS

| | Command or Action | Purpose |
|---------------|---|--|
| Step 1 | enable Example: Router> enable | Enables privileged EXEC mode. Enter your password if prompted. |
| Step 2 | configure terminal Example: Router# configure terminal | Enters global configuration mode. |
| Step 3 | no packetcable Example: Router(config)# no packetcable | Disables PacketCable operation on all cable interfaces. |
| Step 4 | exit Example: Router(config)# exit | Exits global configuration mode. |

Configuring PacketCable Operation

To configure the different parameters that affect PacketCable operations, use the following commands beginning in user EXEC mode. All of these procedures are optional, because each parameter is set to a default that is appropriate for typical PacketCable operations.

DETAILED STEPS

| | Command or Action | Purpose |
|--------|--|--|
| Step 1 | enable Example: Router> enable | Enables privileged EXEC mode. Enter your password if prompted. |
| Step 2 | configure terminal Example: Router# configure terminal | Enters global configuration mode. |
| Step 3 | packetcable element-id <i>n</i> Example: Router(config)# packetcable element-id 23 | Configures the Event Message Element ID for the Cisco CMTS. If you do not manually configure the Element ID, the CMTS defaults to a random value between 0 and 99,999 when PacketCable operations are enabled. |
| Step 4 | packetcable gate maxcount <i>n</i> Example: Router(config)# packetcable gate maxcount 524288 | Sets the maximum number of gate IDs to be allocated in the gate database on the Cisco CMTS. |
| Step 5 | packetcable timer T0 <i>timer-value</i> Example: Router(config)# packetcable timer T0 40000 | Sets the T0 timer in milliseconds. |
| Step 6 | packetcable timer T1 <i>timer-value</i> Example: Router(config)# packetcable timer T1 300000 | Sets the T1 timer in milliseconds. |
| Step 7 | exit Example: Router(config)# exit | Exits global configuration mode. |

Enabling Both PacketCable and Non-PacketCable UGS Service Flows

By default, when PacketCable operations are enabled using the **packetcable** command, cable modems must follow the PacketCable protocol when requesting Unsolicited Grant Service (UGS) service flows. This prevents DOCSIS cable modems that do not support PacketCable operations from using DOCSIS-style UGS service flows.

If you have a mixed network that contains both PacketCable and non-PacketCable DOCSIS CMs, you can use the **packetcable authorize vanilla-docsis-mta** command to enable both types of UGS service flows. This is an optional procedure.

DETAILED STEPS

| | Command or Action | Purpose |
|--------|---|--|
| Step 1 | enable Example: Router> enable | Enables privileged EXEC mode. Enter your password if prompted. |
| Step 2 | configure terminal Example: Router# configure terminal | Enters global configuration mode. |
| Step 3 | packetcable Example: Router (config) # packetcable | Enables PacketCable operations. |
| Step 4 | packetcable authorize vanilla-docsis-mta Example: Router (config) # packetcable authorize vanilla-docsis-mta | Enables the use of DOCSIS-style UGS service flow requests. |
| Step 5 | cable dsx authorization Example: Router (config) # cable dsx authorization | Enables the dsx authorization. |
| Step 6 | exit Example: Router (config) # exit | Exits global configuration mode. |

What to Do Next



Tip

Use the **show packetcable global** command to display whether non-PacketCable UGS service flows have been enabled.

Enabling PacketCable Subscriber ID Support

To include subscriber identification in GATE-OPEN and GATE-CLOSE Gate Control messages, use the **packetcable gate send-subscriberID** command in global configuration mode.

DETAILED STEPS

| | Command or Action | Purpose |
|--------|---|--|
| Step 1 | enable Example: Router> enable | Enables privileged EXEC mode. Enter your password if prompted. |
| Step 2 | configure terminal Example: Router# configure terminal | Enters global configuration mode. |
| Step 3 | packetcable Example: Router (config) # packetcable | Enables PacketCable operations. |
| Step 4 | packetcable gate send-subscriberID Example: Router (config) # packetcable gate send-subscriberID | Enables the use of gate control subscriber identification information. |
| Step 5 | exit Example: Router (config) # exit | Exits global configuration mode. |

Configuring RADIUS Accounting for RKS Servers

To enable the Cisco CMTS router to communicate with the Record Keeping Servers (RKS servers) using the RADIUS protocol, use the following commands. This is a required procedure.

DETAILED STEPS

| | Command or Action | Purpose |
|---------------|--|--|
| Step 1 | enable Example: Router> enable | Enables privileged EXEC mode. Enter your password if prompted. |
| Step 2 | configure terminal Example: Router# configure terminal | Enters global configuration mode. |
| Step 3 | aaa new-model Example: Router (config) # aaa new-model | Enables the authentication, authorization, and accounting (AAA) access control model. |
| Step 4 | aaa group server radius group-name Example: Router (config) # aaa group server radius packetcable | Creates a group of RADIUS servers for authentication and enters RADIUS group configuration mode. The value of <i>group-name</i> is a unique, arbitrary string that identifies this group. |
| Step 5 | server {hostname ip-address} [auth-port udp-port] [acct-port udp-port] Example: Router (config-sg-radius) # server radius-server1 | Specifies the host name or IP address for the RADIUS server that is providing the RKS services. Note Repeat this command as needed to enter multiple RADIUS servers. The Cisco CMTS uses the servers in the order given with this command. |
| Step 6 | exit Example: Router (config-sg-radius) # exit | Exits RADIUS group configuration mode. |
| Step 7 | aaa accounting network default start-stop group radius group group-name Example: Router (config) # aaa accounting network default start-stop group radius group packetcable | Enables AAA services using the group of RADIUS servers that are defined in the previously created group. The <i>group-name</i> parameter should be the same name specified in Step 4 . |

| | Command or Action | Purpose |
|---------|--|--|
| Step 8 | <pre>radius-server host {hostname ip-address} [auth-port port-number] [acct-port port-number] [timeout seconds] [retransmit retries] key 0000000000000000</pre> <p>Example:</p> <pre>Router(config)# radius-server host radius-server1 key 0000000000000000</pre> | <p>Specifies a RADIUS host. Use the same values for <i>hostname</i> or <i>ip-address</i> as for one of the servers specified in Step 5 . If you also specified the auth-port or acct-port values in Step 5 , you must also specify those here, as well. The key value is required and must be 16 ASCII zeros, as shown.</p> <p>Note Repeat this command for each RADIUS server entered in Step 5 .</p> |
| Step 9 | <pre>radius-server vsa send accounting</pre> <p>Example:</p> <pre>Router(config)# radius-server vsa send accounting</pre> | <p>Configures the Cisco CMTS to recognize and use accounting-related vendor-specific attributes (VSA).</p> |
| Step 10 | <pre>exit</pre> <p>Example:</p> <pre>Router(config)# exit</pre> | <p>Exits global configuration mode.</p> |

What to Do Next

Troubleshooting Tips

If the connection between a PacketCable CMS and the Cisco CMTS router is not completely established, and the PacketCable CMS does not correctly terminate the session by sending a TCP FIN message, the connection shows a COPS server in the output of the **show cops server** command.

PacketCable Client Accept Timeout

The PacketCable Client Accept Timeout feature supports COPS for PacketCable on the Cisco CMTS router. This feature also allows you to set timeout values for COPS Telnet connections on the Cisco CMTS router, and for clearing COPS Telnet sessions.

Telnet errors on the network or Cisco CMTS router might cause incomplete COPS sessions to be created. In order to address this issue, the timeout timer enables clearing and cleaning of allocated resources for the stale COPS Telnet sessions on the Cisco CMTS router.

The timeout timer applies to each COPS Telnet connection on the Cisco CMTS router. When this timeout setting expires, it terminates the Telnet session and clears supporting resources on the Cisco CMTS router.

DETAILED STEPS

| | Command or Action | Purpose |
|--------|-------------------|--------------------------------------|
| Step 1 | <pre>enable</pre> | <p>Enables privileged EXEC mode.</p> |

| | Command or Action | Purpose |
|---------------|--|--|
| | Example: Router> enable | <ul style="list-style-type: none"> • Enter your password if prompted. |
| Step 2 | configure terminal Example: Router# configure terminal | Enters global configuration mode. |
| Step 3 | packetcable timer {T0 timer-value T1 timer-value multimedia T1 timer-value} Example: Router(config)# packetcable timer T0 300000 Example: Router(config)# packetcable timer T1 400000 Example: Router(config)# packetcable timer multimedia T1 400000 | Sets the PacketCable timer value. |
| Step 4 | end Example: Router(config)# end | Returns to privileged EXEC mode. |

What to Do Next

Troubleshooting Tips

If the connection between a PacketCable CMS and the Cisco CMTS router is not completely established, and the PacketCable CMS does not correctly terminate the session by sending a TCP FIN message, the connection shows a COPS server in the output of the **show cops server** command.

Configuration Examples for PacketCable

This section provides a PacketCable configuration example.

Example: Typical PacketCable Configuration

This section provides a typical configuration for a Cisco CMTS router that has been configured for PacketCable operations, using default parameters. To use this configuration, you must change the IP addresses for the RADIUS and RKS servers to match the addresses for the servers in your network.

```

!
version 15.5
no parser cache
no service pad
service timestamps debug datetime msec localtime show-timezone
service timestamps log datetime msec localtime show-timezone
no service password-encryption
service internal
service udp-small-servers max-servers no-limit
service tcp-small-servers max-servers no-limit
!
hostname Router
!
no logging rate-limit
aaa new-model
!
!
aaa group server radius a
  server 10.9.62.12 auth-port 1813 acct-port 1812
  server 10.9.62.13 auth-port 1813 acct-port 1812
!
aaa accounting network default start-stop group radius group a
aaa session-id common
enable password <delete>
!
cable modulation-profile 2 request 0 16 0 8 qpsk scrambler 152 no-diff 64 fixed uw16
cable modulation-profile 2 initial 5 34 0 48 qpsk scrambler 152 no-diff 128 fixed uw16
cable modulation-profile 2 station 5 34 0 48 qpsk scrambler 152 no-diff 128 fixed uw16
cable modulation-profile 2 short 6 75 6 8 16qam scrambler 152 no-diff 144 shortened uw8
cable modulation-profile 2 long 8 220 0 8 16qam scrambler 152 no-diff 160 shortened uw8
cable modulation-profile 5 request 0 16 2 8 qpsk scrambler 152 no-diff 64 fixed uw16
cable modulation-profile 5 initial 5 34 0 48 qpsk scrambler 152 no-diff 128 fixed uw16
cable modulation-profile 5 station 5 34 0 48 qpsk scrambler 152 no-diff 128 fixed uw16
cable modulation-profile 5 short 6 78 7 8 16qam scrambler 152 no-diff 144 shortened uw16
cable modulation-profile 5 long 8 220 0 8 16qam scrambler 152 no-diff 160 shortened uw16
cable qos profile 5 max-burst 1200
cable qos profile 5 max-downstream 2000
cable qos profile 5 max-upstream 128
cable qos profile 5 priority 5
cable qos profile 5 privacy
cable qos profile 7 guaranteed-upstream 87
cable qos profile 7 max-upstream 87
cable qos profile 7 privacy
no cable qos permission create
no cable qos permission update
cable qos permission modems
cable qos permission enforce 5
cable time-server
no cable privacy accept-self-signed-certificate
ip subnet-zero
!
!
no ip domain-lookup
ip domain-name cisco.com
ip host tftp 10.8.8.8
ip host cnr 10.9.62.17
!
packetcable
packetcable element-id 12456
!
!
!

```

Example: Typical PacketCable Configuration

```

interface Tunnel0
 ip address 10.55.66.3 255.255.255.0
 load-interval 30
 tunnel source TenGigabitEthernet 4/1/0
 tunnel destination 172.27.184.69
!
interface Tunnel10
 ip address 10.0.1.1 255.255.0.0
!
interface TenGigabitEthernet 4/1/0
 ip address 10.9.60.10 255.255.0.0
 no ip redirects
 no ip mroute-cache
 full-duplex
!
interface TenGigabitEthernet 4/1/0
 ip address 172.22.79.44 255.255.254.0
 no ip redirects
 no ip mroute-cache
 full-duplex
!
interface Cable3/0
 ip address 10.3.1.33 255.255.255.0 secondary
 ip address 10.4.1.1 255.255.255.0 secondary
 ip address 10.4.1.33 255.255.255.0 secondary
 ip address 10.3.1.1 255.255.255.0
 ip helper-address 10.9.62.17
 load-interval 30
 no keepalive
 cable downstream annex B
 cable downstream modulation 64qam
 cable downstream interleave-depth 32
 cable downstream frequency 55500000
 cable upstream 0 modulation-profile 2
 no cable upstream 0 shutdown
 cable upstream 1 frequency 12000000
 cable upstream 1 power-level 0
 cable upstream 1 channel-width 3200000
 cable upstream 1 data-backoff automatic
 cable upstream 1 modulation-profile 2
 cable upstream 1 shutdown
 cable upstream 2 frequency 16000000
 cable upstream 2 power-level 0
 cable upstream 2 channel-width 3200000
 cable upstream 2 data-backoff automatic
 cable upstream 2 modulation-profile 2
 no cable upstream 2 shutdown
 cable upstream 3 frequency 20000000
 cable upstream 3 power-level 0
 cable upstream 3 channel-width 3200000
 cable upstream 3 data-backoff automatic
 cable upstream 3 modulation-profile 2
 no cable upstream 3 shutdown
 cable upstream 4 frequency 24000000
 cable upstream 4 power-level 0
 cable upstream 4 channel-width 3200000
 cable upstream 4 data-backoff automatic
 no cable upstream 4 shutdown
 cable upstream 5 frequency 28000000
 cable upstream 5 power-level 0
 cable upstream 5 channel-width 3200000
 cable upstream 5 data-backoff automatic
 cable upstream 5 modulation-profile 2
 no cable upstream 5 shutdown
 cable dhcp-giaddr policy
!
router eigrp 48849
 network 1.0.0.0
 network 10.0.0.0
 auto-summary
 no eigrp log-neighbor-changes
!
 ip default-gateway 10.9.0.1

```



```

ip classless
ip route 0.0.0.0 0.0.0.0 172.22.78.1
ip route 10.8.0.0 255.255.0.0 10.9.0.1
ip route 192.168.80.0 255.255.255.0 Tunnel0
ip route 192.168.80.0 255.255.255.0 172.27.184.69
ip route 10.255.254.254 255.255.255.255 10.9.0.1
no ip http server
ip pim bidir-enable
!
!
cdp run
!
!
radius-server host 10.9.62.12 auth-port 1813 acct-port 1812 key 0000000000000000
radius-server retransmit 3
radius-server vsa send accounting
!
line con 0
  exec-timeout 0 0
  privilege level 15
line aux 0
line vty 0 4
  session-timeout 33
  exec-timeout 0 0
  password <deleted>
!
ntp clock-period 17179976
ntp server 1.9.35.8
end

```

Verifying PacketCable Operations

To verify and maintain information about PacketCable operations, use one or more of the following commands:

- **show packetcable global**
- **show packetcable gate**
- **show packetcable gate ipv6**
- **show packetcable gate dqos**
- **show packetcable gate counter commit**

To verify the PacketCable configuration, values for the Element ID, maximum number of gates, and the different CMTS-based DQoS timers, use the **show packetcable global** command in privileged EXEC mode.

```

Router# show packetcable global
Packet Cable Global configuration:
Enabled      : Yes
Element-ID: 12456
Max Gates   : 1048576
Allow non-PacketCable UGS
Default Timer value -
  T0        : 30000 msec
  T1        : 300000 msec

```

To verify information about one or more gates in the gate database, use the **show packetcable gate** command as shown in the following example:

```

Router# show packetcable gate summary
GateID      i/f          SubscriberID  GC-Addr      State      Type  SFID(us)  SFID(ds)
13582      Ca8/1/0      3.18.1.4     20.5.0.254   RECOVERY  Dqos  74
29962      Ca8/1/0      3.18.1.5     20.5.0.254   RECOVERY  Dqos  73
46354      Ca8/1/0      -----      20.5.0.254   RECOVERY  Dqos  72
62738      Ca8/1/0      -----      20.5.0.254   RECOVERY  Dqos              69

```

Total number of gates = 4
 Total Gates committed(since bootup or clear counter) = 8
 To verify information about one or more PacketCable gates associated with IPv6 subscriber IDs in the gate database, use the **show packetcable gate ipv6** command as shown in the following example:

```
Router# show packetcable gate ipv6 summary
GateID      i/f          SubscriberID      State  SFID(us) SFID(ds)
13582      Ca8/1/0      2001:40:1:42:C0B4:84E5:5081:9B5C  COMMIT  74
29962      Ca8/1/0      2001:40:1:42:C0B4:84E5:5081:9B5C  COMMIT  73
46354      Ca8/1/0      2001:40:1:42:C0B4:84E5:5081:9B5C  COMMIT  72
62738      Ca8/1/0      2001:40:1:42:C0B4:84E5:5081:9B5C  COMMIT           69
```

Total number of gates = 4
 Total Gates committed(since bootup or clear counter) = 8
 To verify information about one or more PacketCable gates associated with IPv4 subscriber IDs in the gate database, use the **show packetcable gate dqos** command as shown in the following example:

```
Router# show packetcable gate dqos summary
GateID      i/f          SubscriberID      GC-Addr      State  Type  SFID(us) SFID(ds)
13576      Ca8/1/0      40.1.43.60      10.74.58.5   COMMIT  DQoS  527      528
29956      Ca8/1/0      40.1.43.56      10.74.58.5   COMMIT  DQoS  525      526
Total number of DQOS gates = 2
Total Gates committed(since bootup or clear counter) = 346
```

To verify the total number of gates that the Cisco CMTS router has moved to the Committed state since the router was last reset, or since the counter was last cleared, use the **show packetcable gate counter commit** command as shown in the following example:

```
Router# show packetcable gate counter commit
Total Gates committed (since bootup or clear counter) = 132
```

Verifying Emergency 911 Calls

This section provides a few examples to illustrate how you can use the **show cable calls** and **show cable modem calls** commands to verify different scenarios associated with Emergency 911 calls.

The following example displays Emergency 911 calls made on the Cable8/1/1 interface on the Cisco CMTS router during the window set for high priority calls:

```
Router# show cable calls
Interface  ActiveHiPriCalls  ActiveAllCalls  PostHiPriCallCms  RecentHiPriCms
C5/0/0    0                  0                0                  0
C5/0/1    0                  0                0                  0
C5/1/0    0                  0                0                  0
C5/1/1    0                  0                0                  0
C5/1/2    0                  0                0                  0
C5/1/3    0                  0                0                  0
C5/1/4    0                  0                0                  0
C6/0/0    0                  0                0                  0
C6/0/1    0                  0                0                  0
C7/0/0    0                  0                0                  0
C7/0/1    0                  0                0                  0
C8/1/0    0                  0                0                  0
C8/1/1    1                  1                0                  0
C8/1/2    0                  0                0                  0
C8/1/3    0                  0                0                  0
C8/1/4    0                  0                0                  0
Total     1                  1                0                  0
```

The following example displays the change on the Cisco CMTS router when this Emergency 911 calls ends:

```
Router# show cable calls
Interface  ActiveHiPriCalls  ActiveAllCalls  PostHiPriCallCms  RecentHiPriCms
C5/0/0    0                  0                0                  0
```

| | | | | |
|--------|---|---|---|---|
| C5/0/1 | 0 | 0 | 0 | 0 |
| C5/1/0 | 0 | 0 | 0 | 0 |
| C5/1/1 | 0 | 0 | 0 | 0 |
| C5/1/2 | 0 | 0 | 0 | 0 |
| C5/1/3 | 0 | 0 | 0 | 0 |
| C5/1/4 | 0 | 0 | 0 | 0 |
| C6/0/0 | 0 | 0 | 0 | 0 |
| C6/0/1 | 0 | 0 | 0 | 0 |
| C7/0/0 | 0 | 0 | 0 | 0 |
| C7/0/1 | 0 | 0 | 0 | 0 |
| C8/1/0 | 0 | 0 | 0 | 0 |
| C8/1/1 | 0 | 0 | 0 | 1 |
| C8/1/2 | 0 | 0 | 0 | 0 |
| C8/1/3 | 0 | 0 | 0 | 0 |
| C8/1/4 | 0 | 0 | 0 | 0 |
| Total | 0 | 0 | 0 | 1 |

The following example displays information that is available when making a voice call from the same MTA to another MTA on the same interface:

```
Router# show cable calls
Interface ActiveHiPriCalls ActiveAllCalls PostHiPriCallCMs RecentHiPriCMs
C5/0/0 0 0 0 0
C5/0/1 0 0 0 0
C5/1/0 0 0 0 0
C5/1/1 0 0 0 0
C5/1/2 0 0 0 0
C5/1/3 0 0 0 0
C5/1/4 0 0 0 0
C6/0/0 0 0 0 0
C6/0/1 0 0 0 0
C7/0/0 0 0 0 0
C7/0/1 0 0 0 0
C8/1/0 0 0 0 0
C8/1/1 0 2 1 1
C8/1/2 0 0 0 0
C8/1/3 0 0 0 0
C8/1/4 0 0 0 0
Total 0 2 1 1
```

The following example displays information that is available when a voice call from the same MTA to another MTA on the same interface ends:

```
Router# show cable calls
Interface ActiveHiPriCalls ActiveAllCalls PostHiPriCallCMs RecentHiPriCMs
C5/0/0 0 0 0 0
C5/0/1 0 0 0 0
C5/1/0 0 0 0 0
C5/1/1 0 0 0 0
C5/1/2 0 0 0 0
C5/1/3 0 0 0 0
C5/1/4 0 0 0 0
C6/0/0 0 0 0 0
C6/0/1 0 0 0 0
C7/0/0 0 0 0 0
C7/0/1 0 0 0 0
C8/1/0 0 0 0 0
C8/1/1 0 0 0 1
C8/1/2 0 0 0 0
C8/1/3 0 0 0 0
C8/1/4 0 0 0 0
Total 0 0 0 1
```

The following examples display the show cable modem calls command output on the Cisco CMTS router over a period of time, with changing call status information. The call information disappears when a call ends.

```
Router# show cable modem calls
Cable Modem Call Status Flags:
H: Active high priority calls
R: Recent high priority calls
V: Active voice calls (including high priority)
MAC Address IP Address I/F Prim CMCallStatus LatestHiPriCall
```

```

0000.cab7.7b04 10.10.155.38 C8/1/1/U0 18 R (min:sec)
0:39
Router# show cable modem calls
Cable Modem Call Status Flags:
H: Active high priority calls
R: Recent high priority calls
V: Active voice calls (including high priority)
MAC Address IP Address I/F Prim CMCallStatus LatestHiPriCall
Sid (min:sec)

```

The following example displays a new Emergency 911 call on the Cisco CMTS router:

```

Router# show cable modem calls
Cable Modem Call Status Flags:
H: Active high priority calls
R: Recent high priority calls
V: Active voice calls (including high priority)
MAC Address IP Address I/F Prim CMCallStatus LatestHiPriCall
Sid (min:sec)
0000.cab7.7b04 10.10.155.38 C8/1/1/U0 18 HV 1:30

```

The following example displays the end of the Emergency 911 call on the Cisco CMTS router:

```

Router# show cable modem calls
Cable Modem Call Status Flags:
H: Active high priority calls
R: Recent high priority calls
V: Active voice calls (including high priority)
MAC Address IP Address I/F Prim CMCallStatus LatestHiPriCall
Sid (min:sec)
0000.cab7.7b04 10.10.155.38 C8/1/1/U0 18 R 0:3

```

The following example displays a non-emergency voice call on the Cisco CMTS router from the same MTA:

```

Router# show cable modem calls
Cable Modem Call Status Flags:
H: Active high priority calls
R: Recent high priority calls
V: Active voice calls (including high priority)
MAC Address IP Address I/F Prim CMCallStatus LatestHiPriCall
Sid (min:sec)
0000.ca36.f97d 10.10.155.25 C8/1/1/U0 5 V -
0000.cab7.7b04 10.10.155.38 C8/1/1/U0 18 RV 0:30

```

The following example displays the end of the non-emergency voice call on the Cisco CMTS router:

```

Router# show cable modem calls
Cable Modem Call Status Flags:
H: Active high priority calls
R: Recent high priority calls
V: Active voice calls (including high priority)
MAC Address IP Address I/F Prim CMCallStatus LatestHiPriCall
Sid (min:sec)
0000.cab7.7b04 10.10.155.38 C8/1/1/U0 18 R 0:36

```

Information About PacketCable Multimedia Operations

The PacketCable Multimedia (PCMM) feature is a powerful implementation of the CableLabs® standards for PacketCable Multimedia. PCMM provides enhanced QoS for multimedia applications, voice, and bandwidth-intensive services over a DOCSIS (DOCSIS 1.1 and later versions) network.

The Cisco CMTS router supports DOCSIS QoS for SIP-based telephones and SIP video phones, Bandwidth-on-Demand applications, and network-based gaming applications, all of which place extensive bandwidth demands on the network.

This section provides information about the following aspects of PacketCable Multimedia for the Cisco CMTS router, emphasizing PCMM components that are configured with the Cisco IOS command-line interface later in this document:


PCMM Overview

The following network components are required to support the PCMM feature:

- Application Server—Responsible for relaying client requests to the Application Manager.
- Application Manager—Responsible for application or session-level state and for applying session control domain (SCD) policy.
- Policy Server—Responsible for applying the RCD policy and for managing relationships between the Application Manager and a Cisco CMTS router.
- Cisco CMTS router—Responsible for performing admission control and managing network resources through DOCSIS service flows.

Figure below provides an architectural overview of the PCMM functionality:

Figure 1: PCMM Architectural Overview

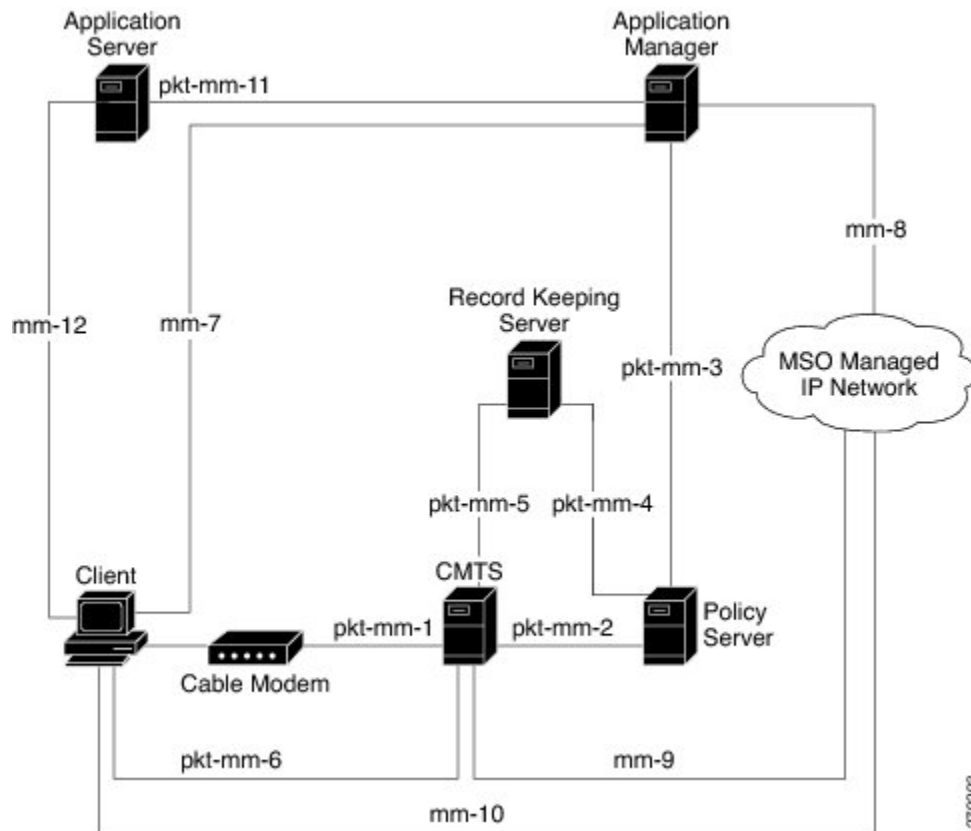

PCMM Enhancements over PacketCable 1.x

PacketCable Multimedia is a service delivery framework that leverages and uses as much of existing PacketCable 1.x deployments and functionality as possible. Furthermore, PCMM offers powerful enhancements to the VoIP service delivery framework with straightforward CLI implementation. The key enhancements that the PCMM provides are:

- Time and volume based network resource authorizations are based on DOCSIS 1.1 Quality of Service (QoS) mechanisms.
- Event-based network resource auditing and management functions.
- Secure infrastructure that protects all interfaces at appropriate levels.
- Preauthorized model from PacketCable 1.x, where the PCMM gate installation and management is supplemented with service flow creation, modification and deletion functions. Together, these provide a secure, network-based QoS.

PCMM and High Availability Features on the Cisco CMTS Router

High Availability on the Cisco CMTS router accommodates synchronization of service flows created for the PCMM applications and the PCCM gate.

PCMM Gates

PCMM Gate Overview and PCMM Dynamic Quality of Service

A PacketCable 1.x gate defines QoS parameters and policy-based authorization for subscribers, and a specific envelope of network resources. A PacketCable 1.x gate also maintains classifiers for originating and terminating IP addresses and ports.

The subscriber ID can identify both IPv4 and IPv6 addresses of either the cable modem or the client CPE.

PacketCable 1.x defines a preauthorization model. The PacketCable gates are created and installed at the Cisco CMTS router prior to network resource reservation or activation requests. This process, termed gate control, is managed through a COPS-based policy interface on the Cisco CMTS router.

In PCMM, this COPS-based interface is enhanced for QoS life-cycle management. PCMM gates maintain service flow creation, modification and deletion functions to provide for network-based QoS. Multiple PCMM gates and service flow policies can be maintained on the Cisco CMTS router at a given time, and these PCMM gates are fully interoperable with PacketCable 1.x gates.

When a cable modem subscriber requests bandwidth for a network-intensive application, the network Policy Server sends a Gate-Set message to the Cisco CMTS router. This message contains QoS, service flow, and billing information for this subscriber. This gate profile information is maintained on the Cisco CMTS router, to include PCMM gate states and PCMM state transitions.

The Cisco CMTS router initiates service flows with cable modems, and optimizes DOCSIS resource availability on the Cisco CMTS router for bandwidth-intensive service flows characteristic to PCMM.

Restrictions

On some upstream paths, best effort service flows are configured on some modems with Committed Information Rate (CIR). When a number of bandwidth requests are queued in the modems, only a few requests are sent to the CMTS. This occurs due to congestion of sending requests caused by higher number of service flows, greater traffic and small size of packets. Therefore, only a few best effort service flow requests are satisfied by the CMTS.

PCMM Persistent Gate

Persistent Gate is a feature by which PCMM gate information is maintained for cable modems that go offline. This gate information is quickly enabled after a cable modem returns online. When a cable modem returns online, the Cisco CMTS router scans PCMM gates previously stored, and initiates service to the cable modem according to the respective PCMM gate. This re-enabled service maintains traffic support profiles for that gate, and allocates DOCSIS resources based on the new online subscriber.

PCMM Interfaces

PCMM optimizes the IPC handshake between the cable interface line card and the Route Processor (RP) for the Cisco CMTS router. Additional PCMM interface changes from PacketCable 1.x include the handling for COPS interface and distributed cable interface line cards.

PCMM to COPS Interface

PCMM differs from PacketCable 1.x in handling COPS sessions. The COPS sessions on PCMM use TCP port number 3918 by default. Whereas, PacketCable uses the DQoS specification for TCP port requirements and COPS sessions.

When the PCMM module initializes for the first time, a PCMM registry is added to the cable interface line card and the route processor. The PCMM module also registers the PCMM COPS client with the COPS layer on the Cisco CMTS router.

PCMM and Distributed Cable Interface Line Cards

As with PacketCable 1.x, PCMM uses IPC messages for voice support. When PCMM gates are created on the Network Processing Engine (NPE) or route processor (RP), the PCMM gate parameters are sent to cable interface line cards. IPC maintains all communication between the NPE or RP, and the cable interface line cards.

Event messaging is used with PCMM to support billing information based on Gate-Set messages. Event messaging for distributed cable interface line cards originates from the line cards, based on the success of DSX operation.

The PCMM module also registers the PCMM COPS client with the COPS layer.

PCMM Unicast and Multicast

In unicast transmission, content is sent to a unique user. In multicast transmission, content is sent to multiple users simultaneously.

PCMM Multicast Session Range

You can configure a PCMM multicast session range by specifying IPv4 IP addresses and a mask for a PCMM multicast group. The PCMM multicast session range enables the Cisco CMTS router to accept Gate-Set messages from the PCMM Policy Server. If a PCMM multicast session range is configured, the Cisco CMTS router does not allow you to create multicast sessions using other sources such as Internet Group Management Protocol (IGMP) and DOCSIS Set-Top Gateway (DSG).

How to Configure PCMM Operations

The following tasks describe how to enable PCMM operations and configure its related features on the Cisco CMTS router:

Enabling PCMM Operations on the Cisco CMTS Router

To enable PCMM operations on the Cisco CMTS router:

DETAILED STEPS

| | Command or Action | Purpose |
|--------|---|---|
| Step 1 | enable Example: Router> enable | Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted. |
| Step 2 | configure terminal Example: Router# configure terminal | Enters global configuration mode. |
| Step 3 | packetcable multimedia Example: Router(config)# packetcable multimedia | Enables and displays PCMM processing on the Cisco CMTS router. This command enables the Cisco CMTS router to start or stop responding to PCMM COPS messages received from the PCMM Policy Server. |
| Step 4 | packetcable authorize vanilla-docsis-mta Example: Router(config)# packetcable authorize vanilla-docsis-mta | Allows non-DQoS MTAs to send DOCSIS DSX messages. |
| Step 5 | packetcable gate maxcount n Example: Router(config)# packetcable gate maxcount 890 | Sets the maximum number of PCMM gates in the gate database. |

| | Command or Action | Purpose |
|--------|--|---|
| Step 6 | packetcable timer multimedia T1 timer-value Example: Router(config)# packetcable timer multimedia T1 300000 | Sets the timeout value for T1 timer used in PCMM gate processing. |
| Step 7 | clear packetcable gate counter commit [dqos multimedia] Example: Router(config)# clear packetcable gate counter commit multimedia | (Optional) Clears the specified PCMM gate counter. |
| Step 8 | end Example: Router(config)# end | Returns to privileged EXEC mode. |

Configuring a PCMM Multicast Session Range

A PCMM multicast session range enables the Cisco CMTS router to use a range of IP addresses for a PCMM multicast group.

Before You Begin

Ensure that PCMM is configured using the **packetcable multimedia command**.



Note

- You can configure only one PCMM multicast group on the Cisco CMTS router. You can configure a maximum of ten multicast sessions for a single multicast group.
- The PCMM multicast feature is supported only with the cable modems that are capable of Multicast DSID-based Forwarding (MDF).

DETAILED STEPS

| | Command or Action | Purpose |
|--------|---|--|
| Step 1 | enable Example: Router> enable | Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted. |

| | Command or Action | Purpose |
|--------|---|--|
| Step 2 | configure terminal Example: Router# configure terminal | Enters global configuration mode. |
| Step 3 | cable multicast source pcmm Example: Router(config)# cable multicast source pcmm | Enables PCMM-based multicast service on the Cisco CMTS router and enters multicast session range configuration mode. |
| Step 4 | session-range ip-addressip-mask Example: Router(config)# session-range 229.0.0.0 255.0.0.0 | Configures a session range for the PCMM multicast group. |
| Step 5 | end Example: Router(config)# end | Returns to privileged EXEC mode. |

Configuration Examples for PacketCable Multimedia

The following sections provide configuration examples for PCMM operations on the Cisco CMTS router:

Example: Enabling PCMM Operations on the Cisco CMTS Router

```
Router# configure terminal
Router(config)# packetcable multimedia
Router(config)# packetcable authorize vanilla-docsis-mta
Router(config)# packetcable gate maxcount 890
Router(config)# packetcable timer multimedia 30000
```

Example: Enabling a Multicast Session Range on the Cisco CMTS Router

```
Router# configure terminal
Router(config)# cable multicast source pcmm
Router(config)# session-range 229.0.0.0 255.0.0.0
```

Verifying PCMM Operations

Use the following **show** commands to verify PCMM operations:

- **show packetcable gate multimedia**
- **show cable multicast db**
- **show interface wideband-cable**
- **show cable multicast qos**

To verify the PCMM multicast gates, use the **show packetcable gate multimedia** command as shown in the following example:

```
Router# show packetcable gate multimedia multicast summary
GateID      i/f      SubscriberID  GC-Addr      State      Type  SFID(us)  SFID(ds)
134         Ca5/0/0  60.1.1.202   2.39.26.19   COMMIT    MM    4          4
Total number of Multimedia-MCAST gates = 1
Total Gates committed(since bootup or clear counter) = 1
```

To verify the PCMM IPv6 gates, use the **show packetcable gate multimedia ipv6** command as shown in the following example:

```
Router# show packetcable gate multimedia ipv6 summary
Load for five secs: 10%/1%; one minute: 9%; five minutes: 9%
Time source is NTP, 03:29:42.153 EST Mon Nov 9 2015

GateID      i/f      SubscriberID  State  SFID(us)  SFID(ds)
409         Ca5/0/2  2001:420:2C7F:FC38:58AF:E36A:80:213A  COMMIT 1326
16789      Ca5/0/2  2001:420:2C7F:FC38:AC40:A49A:F80A:8D0B  COMMIT 1321
33177      Ca5/0/2  2001:420:2C7F:FC38:DD49:72A3:2ECC:8770  COMMIT 1322
49577      Ca5/0/2  2001:420:2C7F:FC38:485:31DF:C88B:E315   COMMIT 1308
65953      Ca5/0/2  2001:420:2C7F:FC38:5AB:AA0B:34AD:ACCF    COMMIT 1336
82337      Ca5/0/2  2001:420:2C7F:FC38:5AB:AA0B:34AD:ACCF    COMMIT 1337
98721      Ca5/0/2  2001:420:2C7F:FC38:5570:EF2E:7565:D36A   COMMIT 1316
115097     Ca5/0/2  2001:420:2C7F:FC38:6009:EF26:F573:7356   COMMIT 1318
131489     Ca5/0/2  2001:420:2C7F:FC38:7D4A:BC50:3FD:CA7     COMMIT 1312
147873     Ca5/0/2  2001:420:2C7F:FC38:E83E:8259:AEF6:5624   COMMIT 1332
```

```
Total number of Multimedia gates = 10
Total Gates committed(since bootup or clear counter) = 1024
```

To verify all the PCMM client entries available with the multicast database, use the **show cable multicast db** command as shown in the following example:

```
Router# show cable multicast db client pcmm
Interface : Bundle1
Session (S,G) : (*,229.2.2.12)
Fwd Intf      Bundle Intf  Host Intf  CM MAC          CPE IP          Gate-ID SFID
Wil1/1/0:0    Bundle1      Ca5/0/0    0018.6852.8056 60.1.1.202     134 4
```

To verify multicast sessions on a specific wideband cable interface, use the **show interface wideband-cable** command as shown in the following example:

```
Router# show interface wideband-cable 1/1/0:0 multicast-sessions
Default Multicast Service Flow 3 on Wideband-Cable1/1/0:0
Multicast Group      : 229.2.2.12
Source              : N/A
Act GCRs            : 1
Interface           : Bul
GCR                 : GC   SAID   SFID   Key   GQC   GEn
                   :      512  8196  4     0    512  0
State: A           GI: Bul      RC: 0
```

To verify the attribute-based assignment of service flows on a specific wideband cable interface, use the **show interface wideband-cable** command as shown in the following example:

```
Router# show interface wideband-cable 1/1/0:0
service-flow 4 verbose
Sfid                : 4
Mac Address         : ffff.ffff.ffff
Type                : Secondary(Static)
Direction           : Downstream
Current State       : Active
Current QoS Indexes [Prov, Adm, Act] : [4, 4, 4]
Active Time         : 05:26
Required Attributes : 0x00000000
Forbidden Attributes: 0x00000000
Aggregate Attributes: 0x00000000
Multicast Sid       : 8196
Traffic Priority     : 0
Maximum Sustained rate : 0 bits/sec
Maximum Burst       : 3044 bytes
Minimum Reserved Rate : 250000 bits/sec
Minimum Packet Size  : 0 bytes
Maximum Latency     : 0 usecs
Peak Rate           : 0 bits/sec
Admitted QoS Timeout : 200 seconds
Active QoS Timeout   : 0 seconds
Packets             : 0
Bytes               : 0
Rate Limit Delayed Packets : 0
Rate Limit Dropped Packets : 0
Current Throughput   : 0 bits/sec, 0 packets/sec
Application Priority  : 0
Low Latency App      : No
Blaze/JIB3 DS Statistic Index : 0
Forwarding Interface : Wi1/1/0:0
Classifiers: NONE
```

To verify that the PCMM-based MQoS gate controllers are created using the correct session ranges, use the **show cable multicast qos** command as shown in the following example:

```
Router# show cable multicast qos group-qos
Group QoS Index   Service Class   Control   Igmp Limit   Override   App
DEFAULT          mcast_default  Aggregate NO-LIMIT
1                SDV_SD         Single    ---          No         CLI
512              SDV_HD         Single    ---          No         PCMM
```

High Availability Stateful Switchover (SSO) for PacketCable and PacketCable MultiMedia

Enhanced high availability support enables the synchronization of PacketCable and PacketCable MultiMedia (PCMM) gates during switchover events on the Cisco CMTS router. This enhancement is enabled by default.

This functionality uses the existing per-interface HCCP commands that are used to associate the working and protect interfaces in the case of N+1 redundancy.

PacketCable and PCMM with Admission Control

A PacketCable or PacketCable Multimedia network contains a number of components that benefit from Admission Control QoS. Admission Control manages and optimizes QoS for PacketCable and PCMM in these ways:

- QoS (based on DOCSIS 1.1 or later versions) for voice and data
- Cable modem registration
- CMS
- Gateway controllers (GC)
- Record keeping servers (RKS)
- Video telephony

When configuring Admission Control with either PacketCable or PCMM, PacketCable or PCMM must be fully operational on the Cisco CMTS headend prior to gaining the benefits from Admission Control.

Voice MGPI Support

The multiple grants per interval (MGPI) feature enables the Cisco CMTS router to map multiple PacketCable Multimedia gates (application flows) to a single DOCSIS service flow using UGS traffic profiles of the same cable modem. In other words, the Cisco CMTS router increases the number of grants per interval for each application flow based on a single service flow, resulting in multiple grants per interval.

The MGPI feature supports the flow-aggregated voice MGPI functionality based on CableLabs PacketCable Specification (PKT-SP-MM-I05-091029). The flow-aggregated MGPI functionality allows the application manager to use the UGS traffic profile to explicitly set the number of grants per interval and place several application flows on a single gate. This results in an aggregated view for event messages, volume, and time usage limits.

Voice Support Over DOCSIS 3.0 E-MTAs

PacketCable and PCMM services are supported on embedded multimedia terminal adapters (E-MTAs). An E-MTA is a network element that contains the interface to a physical voice device, a network interface, and all signaling and encapsulation functions required for the VoIP transport, class features signaling, and QoS signaling.

PacketCable and PCMM Call Trace

To effectively capture signaling information, this functionality buffers signaling for a configured number of PacketCable or PCMM gates. By default, only ten user-configured gate traces are saved in a buffer. After the specified number is reached, any subsequent gate signaling information does not get buffered. When one of the gates being traced is deleted, gate signaling of a new gate is buffered.

Use the **cable dynamic-qos trace** command in global configuration mode to enable the call trace functionality for PacketCable and PacketCable Multimedia gates on the Cisco CMTS router. You will have to specify the number of subscribers for whom call trace needs to be enabled.

Verifying PacketCable and PCMM Statistics

Use the following commands to verify PacketCable and PCMM statistics on the Cisco CMTS router:

- **show interface cable dynamic-service statistics**
- **show interface cable packetcable statistics**
- **show packetcable cms**

To verify dynamic service statistics based on the cable interface, use the **show interface cable dynamic-service statistics** command as shown in the following example:

```
Router# show interface cable 7/1/0 dynamic-service statistics
  Upstream          Downstream
DSA REQ            0             5
DSA RSP            5             0
DSA ACK            0             5
DSC REQ            0             5
DSC RSP            5             0
DSC ACK            0             5
DSD REQ            0             0
DSD RSP            0             0
Retransmission counts
  Upstream          Downstream
DSA REQ            0             0
DSA RSP            0             0
DSA ACK            0             0
DSC REQ            0             5
DSC RSP            5             0
DSC ACK            0             0
DSD REQ            0             0
DSD RSP            0             0
```

To verify PacketCable IPC statistics based on the cable interface, use the **show interface cable packetcable statistics** command as shown in the following example:

```
Router# show interface cable 7/1/0 packetcable statistics
Packetcable IPC Statistics on RP
Msg   create   gate   gate   gate set  dsd
      gie     set    del    notify   notify
Sent  0          10    0      0         0
Rcvd  0          0     0      10        0
Packetcable IPC Statistics on LC
Msg   create   gate   gate   gate set  dsd
      gie     set    del    notify   notify
Sent  0          0     0      10        0
Rcvd  0          10    0      0         0
```

To verify all gate controllers that are currently connected to the PacketCable client, use the `show packetcable cms` command as shown in the following example:

```
Router# show packetcable cms
GC-Addr      GC-Port  Client-Addr  COPS-handle  Version  PSID  Key  PDD-Cfg
1.100.30.2   47236    2.39.34.1   0x2FF9E268/1  4.0     0     0     0
2.39.26.19   55390    2.39.34.1   0x2FF9D890/1  1.0     0     0     2
```

To verify all gate controllers including the COPS servers for which the PacketCable connection is gone down, use the `show packetcable cms` command with the `all` keyword as shown in the following example:

```
Router# show packetcable cms all
GC-Addr      GC-Port  Client-Addr  COPS-handle  Version  PSID  Key  PDD-Cfg
1.100.30.2   47236    2.39.34.1   0x2FF9E268/1  4.0     0     0     0
2.39.26.19   55390    2.39.34.1   0x2FF9D890/1  1.0     0     0     2
1.10.30.22   42307    2.39.34.1   0x0           /0       4.0    0     0     0
```

To verify gate controller statistics, use the `show packetcable cms` command with the keyword, `verbose`, as shown in the following example:

```
Router# show packetcable cms verbose
Gate Controller
  Addr      : 1.100.30.2
  Port      : 47236
  Client Addr : 2.39.34.1
  COPS Handle : 0x2FF9E268
  Version    : 4.0
  Statistics :
    gate del = 0 gate del ack = 0 gate del err = 0
    gate info = 0 gate info ack = 0 gate info err = 0
    gate open = 0 gate report state = 0
    gate set = 0 gate set ack = 0 gate set err = 0
    gate alloc = 0 gate alloc ack = 0 gate alloc err = 0
    gate close = 0
Gate Controller
  Addr      : 2.39.26.19
  Port      : 55390
  Client Addr : 2.39.34.1
  COPS Handle : 0x2FF9D890
  Version    : 1.0
  Statistics :
    gate del = 0 gate del ack = 0 gate del err = 0
    gate info = 0 gate info ack = 0 gate info err = 0
    gate open = 0 gate report state = 0
    gate set = 2 gate set ack = 2 gate set err = 0
  PCMM Timers Expired
  Timer T1 = 0 Timer T2 = 0 Timer T3 = 0 Timer T4 = 0
GC-Addr      GC-Port  Client-Addr  COPS-handle  Version  PSID  Key  PDD-Cfg
1.100.30.2   47236    2.39.34.1   0x2FF9E268/1  4.0     0     0     0
2.39.26.19   55390    2.39.34.1   0x2FF9D890/1  1.0     0     0     2
```

Additional References

Related Documents

| Related Topic | Document Title |
|--------------------|--|
| Cisco IOS commands | Cisco IOS Master Commands List, All Releases |

| Related Topic | Document Title |
|---------------------------|---|
| CMTS commands | <i>Cisco CMTS Cable Command Reference</i> http://www.cisco.com/en/US/docs/ios/cable/command/reference/cbl_book.html |
| N+1 redundancy | <i>N+1 Redundancy for the Cisco CMTS Routers</i> http://www.cisco.com/en/US/docs/ios/cable/configuration/guide/cmts_nplus1_redun_ps2209_TSD_Products_Configuration_Guide_Chapter.html |
| NTP or SNTP Configuration | To configure the Cisco CMTS router to use Network Time Protocol (NTP) or Simple Network Time Protocol (SNTP) to set its system clock, see the “Performing Basic System Management” chapter in the “System Management” section of the Cisco IOS Configuration Fundamentals Configuration Guide . |

Standards

| Standards ¹ | Title |
|---------------------------|--|
| PKT-SP-MM-I06-110629 | PacketCable™ Specification Multimedia Specification |
| ITU X.509 V3 | <i>International Telecommunications Union (ITU) X.509 Version 3.0</i> standard |
| PKT-EM-I03-011221 | <i>PacketCable™ Event Message Specification</i> |
| PKT-SP-DQOS-I04-021018 | <i>PacketCable™ Dynamic Quality-of-Service Specification</i> |
| PKT-SP-EC-MGCP-I04-011221 | <i>PacketCable™ Network-Based Call Signaling Protocol Specification</i> |
| PKT-SP-ESP-I01-991229 | <i>PacketCable™ Electronic Surveillance Specification</i> |
| PKT-SP-ISTP-I02-011221 | <i>PacketCable™ Internet Signaling Transport Protocol (ISTP) Specification</i> |
| PKT-SP-PROV-I03-011221 | <i>PacketCable™ MTA Device Provisioning Specification</i> |

¹ Not all supported standards are listed.

MIBs

| MIBs | MIBs Link |
|---|---|
| No new or changed MIBs are supported by this feature. | To locate and download MIBs for selected platforms, Cisco software releases, and feature sets, use Cisco MIB Locator found at the following URL: http://www.cisco.com/go/mibs |

RFCs

| RFCs | Title |
|-------------|--|
| RFC 1321 | <i>The MD5 Message-Digest Algorithm</i> |
| RFC 1510 | <i>The Kerberos Network Authentication Service (V5)</i> |
| RFC 2138 | <i>Remote Authentication Dial In User Service (RADIUS)</i> |
| RFC 2205 | <i>Resource ReSerVation Protocol (RSVP)</i> |
| RFC 2327 | <i>SDP: Session Description Protocol</i> |
| RFC 2748 | <i>The COPS (Common Open Policy Service) Protocol</i> |

Technical Assistance

| Description | Link |
|---|---|
| The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password. | http://www.cisco.com/cisco/web/support/index.html |

Feature Information for PacketCable and PacketCable Multimedia

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which software images support a specific software release,

feature set, or platform. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>. An account on [Cisco.com](http://www.cisco.com) is not required.

**Note**

The table below lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

| Feature Name | Releases | Feature Information |
|--|-----------------------------|---|
| PacketCable and PacketCable Multimedia Unicast | Cisco IOS XE Everest 16.6.1 | This feature was integrated into Cisco IOS XE Everest 16.6.1 on the Cisco cBR Series Converged Broadband Routers. |
| PacketCable and PacketCable Multimedia Multicast | Cisco IOS XE Everest 16.6.1 | This feature was integrated into Cisco IOS XE Everest 16.6.1 on the Cisco cBR Series Converged Broadband Routers. |
| DQoS Lite Based IPv6 Voice Support | Cisco IOS XE Everest 16.6.1 | This feature was integrated into Cisco IOS XE Everest 16.6.1 on the Cisco cBR Series Converged Broadband Routers. |



COPS Engine Operation

This document describes the Common Open Policy Service (COPS) engine feature on the Cisco CMTS routers. The Cisco CMTS routers also support Access control lists (ACLs) with the COPS engine.

- [Finding Feature Information, page 37](#)
- [Hardware Compatibility Matrix for Cisco cBR Series Routers, page 38](#)
- [Prerequisites for the COPS Engine on the Cisco CMTS Routers, page 38](#)
- [Restrictions for the COPS Engine on the Cisco CMTS, page 39](#)
- [Information About the COPS Engine on the Cisco CMTS, page 39](#)
- [How to Configure the COPS Engine on the Cisco CMTS, page 39](#)
- [COPS Engine Configuration Examples for Cable, page 45](#)
- [Additional References, page 46](#)
- [Feature Information for COPS Engine Operation, page 47](#)

Finding Feature Information

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the Feature Information Table at the end of this document.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to <http://tools.cisco.com/ITDIT/CFN/>. An account on <http://www.cisco.com/> is not required.

Hardware Compatibility Matrix for Cisco cBR Series Routers


Note

The hardware components introduced in a given Cisco IOS-XE Release are supported in all subsequent releases unless otherwise specified.

Table 2: Hardware Compatibility Matrix for the Cisco cBR Series Routers

| Cisco CMTS Platform | Processor Engine | Interface Cards |
|--|--|---|
| Cisco cBR-8 Converged Broadband Router | <p>Cisco IOS-XE Release 16.5.1 and Later Releases</p> <p>Cisco cBR-8 Supervisor:</p> <ul style="list-style-type: none"> • PID—CBR-CCAP-SUP-160G • PID—CBR-CCAP-SUP-60G • PID—CBR-SUP-8X10G-PIC | <p>Cisco IOS-XE Release 16.5.1 and Later Releases</p> <p>Cisco cBR-8 CCAP Line Cards:</p> <ul style="list-style-type: none"> • PID—CBR-LC-8D30-16U30 • PID—CBR-LC-8D31-16U30 • PID—CBR-RF-PIC • PID—CBR-RF-PROT-PIC • PID—CBR-CCAP-LC-40G-R <p>Cisco cBR-8 Downstream PHY Modules:</p> <ul style="list-style-type: none"> • PID—CBR-D30-DS-MOD • PID—CBR-D31-DS-MOD <p>Cisco cBR-8 Upstream PHY Modules:</p> <ul style="list-style-type: none"> • PID—CBR-D30-US-MOD • PID—CBR-D31-US-MOD |

Prerequisites for the COPS Engine on the Cisco CMTS Routers

- A compatible policy server must be connected to the network, such as the Cisco COPS QoS Policy Manager.
- Compliance with administrative policy, such as the Computer Assisted Law Enforcement Act (CALEA) or other lawful intercept (LI), is required for use of this feature on the Cisco CMTS routers.

Restrictions for the COPS Engine on the Cisco CMTS

- Resource Reservation Protocol (RSVP) is not configured on the Cisco CMTS. COPS engine configuration on the Cisco CMTS is limited to networks in which separate RSVP and COPS Servers are configured and operational.

Information About the COPS Engine on the Cisco CMTS

Common Open Policy Service (COPS) is a protocol for communicating network traffic policy information to network devices.

COPS works in correspondence with the Resource Reservation Protocol (RSVP), which is a means for reserving network resources—primarily bandwidth—to guarantee that applications sending end-to-end across the Internet will perform at the desired speed and quality. RSVP is not configured on the Cisco CMTS, but the Cisco CMTS presumes RSVP on the network for these configurations.

Refer to the [Additional References](#), on page 46 for further information about COPS for RSVP.

How to Configure the COPS Engine on the Cisco CMTS

This section describes the tasks for configuring the COPS for RSVP feature on the Cisco CMTS.

To configure the COPS engine on the Cisco CMTS, perform the following tasks:

Configuring COPS TCP and DSCP Marking

This feature allows you to change the Differentiated Services Code Point (DSCP) marking for COPS messages that are transmitted or received by the Cisco router. The **cops ip dscp** command changes the default IP parameters for connections between the Cisco router and COPS servers in the cable network.

DSCP values are used in Quality of Service (QoS) configurations on a Cisco router to summarize the relationship between DSCP and IP precedence. This command allows COPS to remark the packets for either incoming or outbound connections.

The default setting is 0 for outbound connections. On default incoming connections, the COPS engine takes the DSCP value from the COPS server initiating the TCP connection.

**Note**

This feature affects all TCP connections with all COPS servers.

- For messages transmitted by the Cisco router, the default DSCP value is 0.
- For incoming connections to the Cisco router, the COPS engine takes the DSCP value used by the COPS server that initiates the TCP connection, by default.
- The **cops ip dscp** command allows the Cisco router to re-mark the COPS packets for either incoming or outbound connections.
- This command affects all TCP connections with all COPS servers.

- This command does not affect existing connections to COPS servers. Once you issue this command, this function is supported only for new connections after that point in time.

Perform the following steps to enable optional DSCP marking for COPS messages on the Cisco CMTS.

DETAILED STEPS

| | Command or Action | Purpose |
|---------------|--|---|
| Step 1 | enable Example: Router> enable | Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted. |
| Step 2 | configure terminal Example: Router# configure terminal | Enters global configuration mode. |
| Step 3 | cops ip dscp [<0-63> default af11-af43 cs1-cs7] Example: Router(config)# cops ip dscp default | Specifies the marking for COPS messages that are transmitted by the Cisco router. The values for this command specify the markings with which COPS messages are transmitted. The following values are supported for the Cisco CMTS router: <ul style="list-style-type: none"> • 0-63—DSCP value ranging from 0-63. • af11—Use AF11 dscp (001010) • af12—Use AF12 dscp (001100) • af13—Use AF13 dscp (001110) • af21—Use AF21 dscp (010010) • af22—Use AF22 dscp (010100) • af23—Use AF23 dscp (010110) • af31—Use AF31 dscp (011010) • af32—Use AF32 dscp (011100) • af33—Use AF33 dscp (011110) • af41—Use AF41 dscp (100010) • af42—Use AF42 dscp (100100) • af43—Use AF43 dscp (100110) • cs1—Use CS1 dscp (001000) [precedence 1] • cs2—Use CS2 dscp (010000) [precedence 2] • cs3—Use CS3 dscp (011000) [precedence 3] • cs4—Use CS4 dscp (100000) [precedence 4] • cs5—Use CS5 dscp (101000) [precedence 5] |

| | Command or Action | Purpose |
|---------------|---|--|
| | | <ul style="list-style-type: none"> • cs6—Use CS6 dscp (110000) [precedence 6] • cs7—Use CS7 dscp (111000) [precedence 7] • default—Use default dscp (000000) • ef—Use EF dscp (101110) |
| Step 4 | exit Example: Router(config)# exit Router# | Returns to privileged EXEC mode. |

Configuring COPS TCP Window Size

This feature allows you to override the default TCP receive window size that is used by COPS processes. This setting can be used to prevent the COPS server from sending too much data at one time.

Perform the following steps to change the TCP Window size on the Cisco CMTS.

DETAILED STEPS

| | Command or Action | Purpose |
|---------------|---|---|
| Step 1 | enable Example: Router> enable | Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted. |
| Step 2 | configure terminal Example: Router# configure terminal | Enters global configuration mode. |
| Step 3 | cops tcp window-size <i>bytes</i> Example: Router(config)# cops tcp window-size 64000 | Overrides the default TCP receive window size on the Cisco CMTS. To return the TCP window size to a default setting of 4K, use the no form of this command. <p>Note The default COPS TCP window size is 4000 bytes.</p> <p>Note This command does not affect existing connections to COPS servers. Once you issue this command, this function is supported only for new connections after that point in time.</p> <p>Note This command affects all TCP connections with all COPS servers.</p> |

| | Command or Action | Purpose |
|---------------|--|----------------------------------|
| Step 4 | exit Example: Router (config) # exit Router# | Returns to privileged EXEC mode. |

Configuring Access Control List Support for COPS Engine

Perform the following steps to configure COPS ACLs on the Cisco CMTS.

DETAILED STEPS

| | Command or Action | Purpose |
|---------------|---|---|
| Step 1 | enable Example: Router> enable | Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted. |
| Step 2 | configure terminal Example: Router# configure terminal | Enters global configuration mode. |
| Step 3 | cops listeners access-list { <i>acl-num</i> <i>acl-name</i> } Example: Router# cops listeners access-list 40 | Configures access control lists (ACLs) for inbound connections to all COPS listener applications on the Cisco CMTS. To remove this setting from the Cisco CMTS, use the no form of this command. |
| Step 4 | exit Example: Router (config) # exit Router# | Returns to privileged EXEC mode. |

What to Do Next

Access lists can be displayed by using the **show access-list** command in privileged EXEC mode.

Restricting RSVP Policy to Specific Access Control Lists

Perform the following steps to restrict the RSVP policy to specific ACLs, as already configured on the Cisco CMTS.

For ACL configuration, refer to the [Configuring Access Control List Support for COPS Engine](#), on page 42.

DETAILED STEPS

| | Command or Action | Purpose |
|--------|--|---|
| Step 1 | enable Example: Router> enable | Enables privileged EXEC mode. Enter your password if prompted. |
| Step 2 | configure terminal Example: Router# configure terminal | Enters global configuration mode. |
| Step 3 | interface cable (<i>slot /subslot /port</i>) Example: Router(config)# interface cable 8/0/1 Router(config-if)# | Enters interface configuration mode. |
| Step 4 | ip rsvp policy cops <i>ACL-1 ACL-2 servers IP-addr1 IP-addr2</i> Example: Router(config-if)# ip rsvp policy cops 40 160 servers 161.44.130.164 161.44.129.2 | Tells the router to apply RSVP policy to messages that match the specified ACLs, and specifies the COPS server or servers for those sessions. |
| Step 5 | exit Example: Router(config)# exit Router# | Returns to privileged EXEC mode. |

Displaying and Verifying COPS Engine Configuration on the Cisco CMTS

Once COPS is enabled and configured on the Cisco CMTS, you can verify and track configuration by using one or all of the **show** commands in the following steps.

DETAILED STEPS

| | Command or Action | Purpose |
|--------|---|--|
| Step 1 | enable Example: Router> enable | Enables privileged EXEC mode. Enter your password if prompted. |
| Step 2 | show cops servers Example: Router# show cops servers | Displays server addresses, port, state, keepalives, and policy client information. |
| Step 3 | show ip rsvp policy cops Example: Router# show ip rsvp policy cops | Displays policy server addresses, ACL IDs, and client/server connection status. |
| Step 4 | show ip rsvp policy Example: Router# show ip rsvp policy | Displays ACL IDs and their connection status. |

Show Commands for COPS Engine Information

The following examples display three views of the COPS engine configuration on the Cisco router. These respective show commands verify the COPS engine configuration.

Displaying COPS Servers on the Network

This example displays the policy server address, state, keepalives, and policy client information:

```
Router# show cops servers
COPS SERVER: Address: 161.44.135.172. Port: 3288. State: 0. Keepalive: 120 sec
Number of clients: 1. Number of sessions: 1.
COPS CLIENT: Client type: 1. State: 0.
```

Displaying COPS Policy Information on the Network

This example displays the policy server address, the ACL ID, and the client/server connection status:

```
Router# show ip rsvp policy cops
COPS/RSVP entry. ACLs: 40 60
PDPs: 161.44.135.172
Current state: Connected
Currently connected to PDP 161.44.135.172, port 0
```

Displaying Access Lists for COPS

This example displays the ACL ID numbers and the status for each ACL ID:

```
Router# show ip rsvp policy
Local policy: Currently unsupported
COPS:
ACLs: 40 60 . State: CONNECTED.
ACLs: 40 160 . State: CONNECTING.
```

COPS Engine Configuration Examples for Cable

The following sections provide COPS for RSVP configuration examples on the Cisco CMTS:

Example: COPS Server Specified

The following example specifies the COPS server and enables COPS for RSVP on the server. Both of these functions are accomplished by using the **ip rsvp policy cops** command. By implication, the default settings for all remaining COPS for RSVP commands are accepted.

```
Router# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# ip rsvp policy cops servers 161.44.130.168 161.44.129.6
Router(config)# exit
```

Example: COPS Server Display

The following examples display three views of the COPS for RSVP configuration on the router, which can be used to verify the COPS for RSVP configuration.

This example displays the policy server address, state, keepalives, and policy client information:

```
Router# show cops servers
COPS SERVER: Address: 161.44.135.172. Port: 3288. State: 0. Keepalive: 120 sec
Number of clients: 1. Number of sessions: 1.
COPS CLIENT: Client type: 1. State: 0.
```

This example displays the policy server address, the ACL ID, and the client/server connection status:

```
Router# show ip rsvp policy cops
COPS/RSVP entry. ACLs: 40 60
PDPs: 161.44.135.172
Current state: Connected
Currently connected to PDP 161.44.135.172, port 0
```

This example displays the ACL ID numbers and the status for each ACL ID:

```
Router# show ip rsvp policy
Local policy: Currently unsupported
COPS:
ACLs: 40 60 . State: CONNECTED.
ACLs: 40 160 . State: CONNECTING.
```

Additional References

Related Documents

| Related Topic | Document Title |
|---------------------|--|
| Cisco CMTS Commands | Cisco CMTS Cable Command Reference |
| COPS for RSVP | <ul style="list-style-type: none"> • <i>Configuring COPS for RSVP</i> http://www.cisco.com/en/US/docs/ios-xml/ios/qos_rsvp/configuration/12-4t/cops_rsvp.html • <i>COPS for RSVP</i> http://www.cisco.com/en/US/docs/ios/12_1t/12_1t1/feature/guide/CopsRSVP.html |

Standards

| Standard | Title |
|-----------------------|--|
| PKT-SP-ESP-I01-991229 | PacketCable™ Electronic Surveillance Specification (http://www.packetcable.com) |

MIBs

| MIB | MIBs Link |
|---|---|
| <ul style="list-style-type: none"> • No MIBs have been introduced or enhanced for support of this feature. | <p>To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL:</p> <p>http://www.cisco.com/go/mibs</p> |

RFCs

| RFC | Title |
|-----------------------|--|
| General RFC Resources | <ul style="list-style-type: none"> • <i>RFC Index Search Engine</i> http://www.rfc-editor.org/rfcsearch.html • <i>SNMP: Frequently Asked Questions About MIB RFCs</i> http://www.cisco.com/en/US/tech/tk648/tk362/technologies_q_and_a_item09186a00800c2612.shtml |

Technical Assistance

| Description | Link |
|---|---|
| The Cisco Technical Support & Documentation website contains thousands of pages of searchable technical content, including links to products, technologies, solutions, technical tips, and tools. Registered Cisco.com users can log in from this page to access even more content. | http://www.cisco.com/techsupport |

Feature Information for COPS Engine Operation

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>. An account on [Cisco.com](http://www.cisco.com) is not required.

**Note**

The table below lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Table 3: Feature Information for COPS Engine Operation

| Feature Name | Releases | Feature Information |
|-----------------------|-----------------------------|---|
| COPS Engine Operation | Cisco IOS XE Everest 16.6.1 | This feature was integrated into Cisco IOS XE Everest 16.6.1 on the Cisco cBR Series Converged Broadband Routers. |

