



Cisco DNA Center Second-Generation Appliance Installation Guide, Release 2.2.1

First Published: 2021-02-08

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2021 Cisco Systems, Inc. All rights reserved.



CONTENTS

CHAPTER 1

Review the Cisco DNA Center Appliance Features 1

Appliance Hardware Specifications 1

Front and Rear Panels 4

Physical Specifications 17

Environmental Specifications 18

Power Specifications 19

CHAPTER 2

Plan the Deployment 21

Planning Workflow 21

Cisco DNA Center and Cisco Software-Defined Access 22

Interface Cable Connections 22

Required IP Addresses and Subnets 26

Maglev Wizard Interface Configuration Order 29

Required Internet URLs and Fully Qualified Domain Names 30

Provide Secure Access to the Internet 32

Required Network Ports 32

Required Ports and Protocols for Cisco Software-Defined Access 34

Required Configuration Information 41

Required First-Time Setup Information 42

CHAPTER 3

Install the Appliance 45

Appliance Installation Workflow 45

Unpack and Inspect the Appliance 45

Review the Installation Warnings and Guidelines 46

Review the Rack Requirements 48

Connect and Power On the Appliance 48

Check the LEDs 49

CHAPTER 4

Prepare the Appliance for Configuration 53

- Preparation for Appliance Configuration Overview 53
- Enable Browser Access to Cisco Integrated Management Controller 54
- Execute Preconfiguration Checks 59
- NIC Bonding Overview 62
 - Appliance Support 63
 - Enable NIC on an Upgraded Appliance 63
- Reimage the Appliance 69
 - Verify the Cisco DNA Center ISO Image 69
 - Create a Bootable USB Drive 70
 - Using Etcher 70
 - Using the Linux CLI 71
 - Using the Mac CLI 72
 - Reinitialize the Virtual Drives on a Cisco DNA Center Appliance 72
 - Install the Cisco DNA Center ISO Image 73
- Cisco DNA Center Appliance Configuration 73

CHAPTER 5

Configure the Appliance Using the Maglev Wizard 75

- Appliance Configuration Overview 75
- Configure the Primary Node Using the Maglev Wizard 75
- Configure a Secondary Node Using the Maglev Wizard 93
- Upgrade to the Latest Cisco DNA Center Release 110

CHAPTER 6

Configure the 44/56 Core Appliance Using the Browser-Based Wizard 111

- Appliance Configuration Overview 111
- Browser-Based Wizard Prerequisites 111
- Configure the Primary Node Using the Expert Configuration Wizard 112
- Configure a Secondary Node Using the Expert Configuration Wizard 128
- Generate a Linux Password 146
- Upgrade to the Latest Cisco DNA Center Release 147

CHAPTER 7

Configure the 112 Core Appliance Using the Browser-Based Wizard 149

Appliance Configuration Overview	149
Browser-Based Wizard Prerequisites	149
Configure the Primary Node Using the Expert Configuration Wizard	150
Configure a Secondary Node Using the Expert Configuration Wizard	169
Generate a Linux Password	189
Upgrade to the Latest Cisco DNA Center Release	190

CHAPTER 8

Complete First-Time Setup	191
First-Time Setup Workflow	191
Compatible Browsers	191
Complete the Quick Start Workflow	191
Integrate Cisco ISE with Cisco DNA Center	196
Group-Based Access Control: Policy Data Migration and Synchronization	199
Configure Authentication and Policy Servers	201
Configure SNMP Properties	203

CHAPTER 9

Troubleshoot the Deployment	205
Troubleshooting Tasks	205
Log Out	205
Reconfigure the Appliance Using the Configuration Wizard	206
Power-Cycle the Appliance	207
Using the Cisco IMC GUI	207
Using SSH	208

APPENDIX A

Review High Availability Cluster Deployment Scenarios	211
New HA Deployment	211
Existing HA Deployment of the Primary Node with Standard Interface Configurations	212
Existing HA Deployment of Primary Node with Nonstandard Interface Configurations	213
Activate High Availability	213
Additional HA Deployment Considerations	214
Telemetry	214
Wireless Controller	214



CHAPTER 1

Review the Cisco DNA Center Appliance Features

- [Appliance Hardware Specifications, on page 1](#)
- [Front and Rear Panels, on page 4](#)
- [Physical Specifications, on page 17](#)
- [Environmental Specifications, on page 18](#)
- [Power Specifications, on page 19](#)

Appliance Hardware Specifications

Cisco supplies Cisco Digital Network Architecture (DNA) Center in the form of a rack-mountable, physical appliance. The second-generation Cisco DNA Center appliance consists of either a Cisco Unified Computing System (UCS) C220 M5 small form-factor (SFF) chassis or Cisco UCS C480 M5 chassis, both with the addition of one Intel X710-DA2 network interface card (NIC) and one Intel X710-DA4 NIC. Six versions of the second-generation appliance are available:

- 44-core appliance: Cisco part number DN2-HW-APL
- 44-core promotional appliance: Cisco part number DN2-HW-APL-U
- 56-core appliance: Cisco part number DN2-HW-APL-L
- 56-core promotional appliance: Cisco part number DN2-HW-APL-L-U
- 112-core appliance: Cisco part number DN2-HW-APL-XL
- 112-core promotional appliance: Cisco part number DN2-HW-APL-XL-U

The following tables summarize the appliance's hardware specifications.

Table 1: 44-Core Cisco DNA Center Appliance Hardware Specifications

Feature	Description
Chassis	One rack-unit (1RU) chassis.
Processors	Two 22-core Intel Xeon Gold 6152 2.1 GHz processors
Memory	Eight 32 GB DDR4 2666 MHz registered DIMMs (RDIMMs)

Feature	Description
Storage	<ul style="list-style-type: none"> • 2 x 480 GB in RAID 1 • 2 x 1.9 TB in RAID 1 • 6 x 1.9 TB in RAID 10
Disk Management (RAID)	<ul style="list-style-type: none"> • RAID 1 on slots 1 through 4 • RAID 10 on slots 5 through 10
Network and Management I/O	<p>Supported connectors:</p> <ul style="list-style-type: none"> • Two 10-Gbps Ethernet ports on the Intel X710-DA2 NIC • One 1-Gbps RJ-45 management port (Marvell 88E6176) • Two 10GBase-T LOM ports (Intel X550 controller embedded on the motherboard) <p>The following connectors are available but not typically used in the day-to-day operation of Cisco DNA Center:</p> <ul style="list-style-type: none"> • One RS-232 serial port (RJ-45 connector) • One VGA (DB-15) connector • Two USB 3.0 connectors • One front-panel KVM connector that is used with the KVM cable, which provides two USB 2.0, one VGA (DB-15), and one serial port (RS-232) RJ-45 connector. <p>Note that the Intel X710-DA4 NIC, which provides four 10-Gbps Ethernet ports, has been disabled in this release of Cisco DNA Center and will be enabled in a future release of the product.</p>
Power	<p>Two 770 W AC power supplies.</p> <p>Redundant as 1+1.</p>
Cooling	Seven hot-swappable fan modules for front-to-rear cooling.
Video	Video Graphics Array (VGA) video resolution up to 1920 x 1200, 16 bpp at 60 Hz, and up to 512 MB of video memory (8 MB is allocated by default).

Table 2: 56-Core Cisco DNA Center Appliance Hardware Specifications

Feature	Description
Chassis	One rack-unit (1RU) chassis.
Processors	Two 28-core Intel Xeon Platinum 8180 2.5 GHz processors
Memory	Twelve 32 GB DDR4 2666 MHz RDIMMs

Feature	Description
Storage	<ul style="list-style-type: none"> • 2 x 480 GB in RAID 1 • 2 x 1.9 TB in RAID 1 • 6 x 1.9 TB in RAID 10
Disk Management (RAID)	<ul style="list-style-type: none"> • RAID 1 on slots 1 through 4 • RAID 10 on slots 5 through 10
Network and Management I/O	<p>Supported connectors:</p> <ul style="list-style-type: none"> • Two 10-Gbps Ethernet ports on the Intel X710-DA2 NIC • One 1-Gbps RJ-45 management port (Marvell 88E6176) • Two 10GBase-T LOM ports (Intel X550 controller embedded on the motherboard) <p>The following connectors are available but not typically used in the day-to-day operation of Cisco DNA Center:</p> <ul style="list-style-type: none"> • One RS-232 serial port (RJ-45 connector) • One VGA (DB-15) connector • Two USB 3.0 connectors • One front-panel KVM connector that is used with the KVM cable, which provides two USB 2.0, one VGA (DB-15), and one serial port (RS-232) RJ-45 connector. <p>Note that the Intel X710-DA4 NIC, which provides four 10-Gbps Ethernet ports, has been disabled in this release of Cisco DNA Center and will be enabled in a future release of the product.</p>
Power	<p>Two 770 W AC power supplies.</p> <p>Redundant as 1+1.</p>
Cooling	Seven hot-swappable fan modules for front-to-rear cooling.
Video	Video Graphics Array (VGA) video resolution up to 1920 x 1200, 16 bpp at 60 Hz, and up to 512 MB of video memory (8 MB is allocated by default).

Table 3: 112-Core Cisco DNA Center Appliance Hardware Specifications

Feature	Description
Chassis	Four rack-unit (4RU) chassis.
Processors	Two CPU modules, each with two 28-core Intel Xeon Platinum 8176 2.1 GHz processors
Memory	Twenty-four 32 GB DDR4 2666 MHz RDIMMs

Feature	Description
Storage	<ul style="list-style-type: none"> • 2 x 480 GB in RAID 1 • 2 x 3.8 TB in RAID 1 • 16 x 1.9 TB in RAID 10
Disk Management (RAID)	<ul style="list-style-type: none"> • RAID 1 on drive bays 1 and 2 • RAID 10 on slots 3 through 18 • RAID 1 on drive bays 19 and 20
Network and Management I/O	<p>Supported connectors:</p> <ul style="list-style-type: none"> • Two 10 Gbps Ethernet ports on the Intel X710-DA2 NIC • Two 10 Base-T Gbps Ethernet ports • One Gigabit Ethernet management port <p>The following connectors are available but not typically used in the day-to-day operation of Cisco DNA Center:</p> <ul style="list-style-type: none"> • One RS-232 serial port (RJ-45 connector) • One VGA (DB-15) connector • Three USB 3.0 connectors • One front-panel KVM connector that is used with the KVM cable, which provides two USB 2.0, one VGA (DB-15), and one serial port (RS-232) RJ-45 connector. <p>Note that the Intel X710-DA4 NIC, which provides four 10-Gbps Ethernet ports, has been disabled in this release of Cisco DNA Center and will be enabled in a future release of the product.</p>
Power	<p>Four 1600 W AC power supplies.</p> <p>Redundant as 3+1 (must be configured via the Cisco Integrated Management Controller).</p>
Cooling	Four hot-swappable fan modules with two fans in each for front-to-rear cooling.
Video	VGA video resolution up to 1600 x 1200, 16 bpp at 60 Hz, and up to 256 MB of video memory.


Front and Rear Panels

The following figures and tables describe the front and rear panels of the Cisco DNA Center appliance.



Note If you are viewing this guide on Cisco.com, click any of its figures to view a full-sized version.

Figure 1: 44 and 56-Core Appliance Front Panel

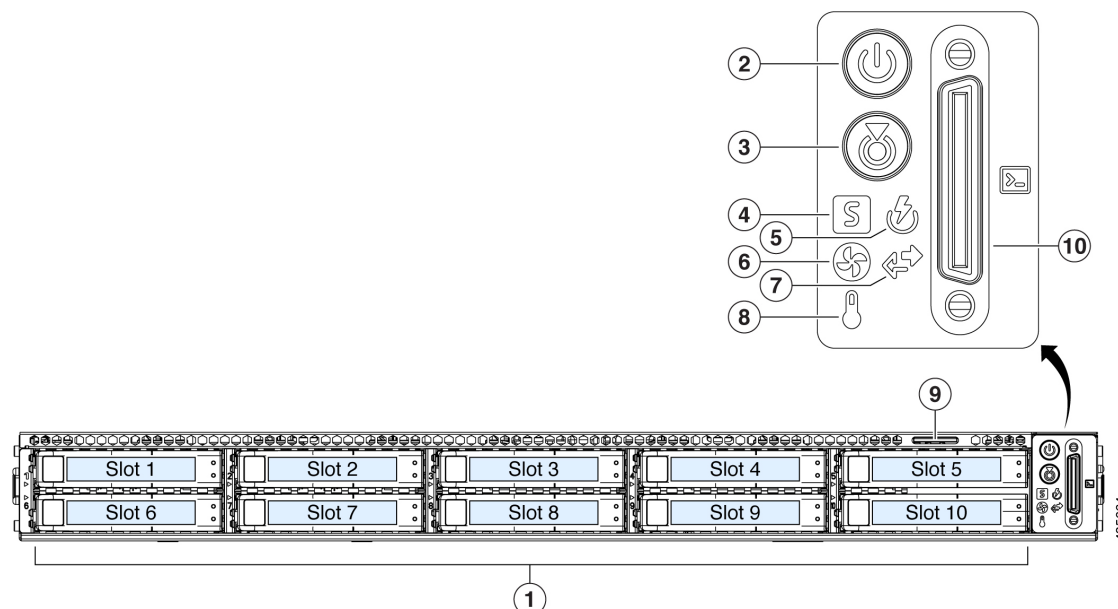


Component	Description
1	<p>A total of 10 drives are available on the appliance:</p> <ul style="list-style-type: none"> • Two 480 GB SAS SSD (in slots 1 and 2). • Eight 1.9 TB SATA SSD (in slots 3 through 10). <p>Each installed drive has a fault LED and an activity LED.</p> <p>When the drive fault LED is:</p> <ul style="list-style-type: none"> • Off: The drive is operating properly. • Amber: The drive has failed. • Amber, blinking: The drive is rebuilding. <p>When the drive activity LED is:</p> <ul style="list-style-type: none"> • Off: There is no drive in the sled (no access, no fault). • Green: The drive is ready. • Green, blinking: The drive is reading or writing data.

Component	Description
2	<p>Power button/power status LED. When the LED is:</p> <ul style="list-style-type: none"> • Off: There is no AC power to the appliance. • Amber: The appliance is in standby power mode. Power is supplied only to the Cisco Integrated Management Controller (Cisco IMC) and some motherboard functions. • Green: The appliance is in main power mode. Power is supplied to all the server components.
3	<p>Unit identification button and LED. When the LED is:</p> <ul style="list-style-type: none"> • Off: Unit identification is inactive. • Blue: Unit identification is active.
4	<p>System status LED. When the LED is:</p> <ul style="list-style-type: none"> • Green: The appliance is running in a normal operating condition. • Green, blinking: The appliance is performing system initialization and memory checks. • Amber, steady: The appliance is in a degraded operational state, which may be due to one or more of the following causes: <ul style="list-style-type: none"> • Power supply redundancy is lost. • CPUs are mismatched. • At least one CPU is faulty. • At least one DIMM is faulty. • At least one drive in a RAID configuration failed. • Amber, 2 blinks: There is a major fault with the system board. • Amber, 3 blinks: There is a major fault with the memory DIMMs. • Amber, 4 blinks: There is a major fault with the CPUs.
5	<p>Power supply status LED. When the LED is:</p> <ul style="list-style-type: none"> • Green: All power supplies are operating normally. • Amber, steady: One or more power supplies are in a degraded operational state. • Amber, blinking: One or more power supplies are in a critical fault state.
6	<p>Fan status LED. When the LED is:</p> <ul style="list-style-type: none"> • Green: All fan modules are operating properly. • Amber, steady: One fan module has failed. • Amber, blinking: Critical fault, two or more fan modules have failed.

Component	Description
7	Network link activity LED. When the LED is: <ul style="list-style-type: none"> Off: The Ethernet link is idle. Green, blinking: One or more Ethernet LOM ports are link-active, with activity. Green: One or more Ethernet LOM ports are link-active, but there is no activity.
8	Temperature status LED. When the LED is: <ul style="list-style-type: none"> Green: The appliance is operating at normal temperature. Amber, steady: One or more temperature sensors have exceeded a warning threshold. Amber, blinking: One or more temperature sensors have exceeded a critical threshold.
9	Pull-out asset tag.
10	KVM connector. Used with a KVM cable that provides two USB 2.0, one VGA, and one serial connector.

Figure 2: 112-Core Appliance Front Panel

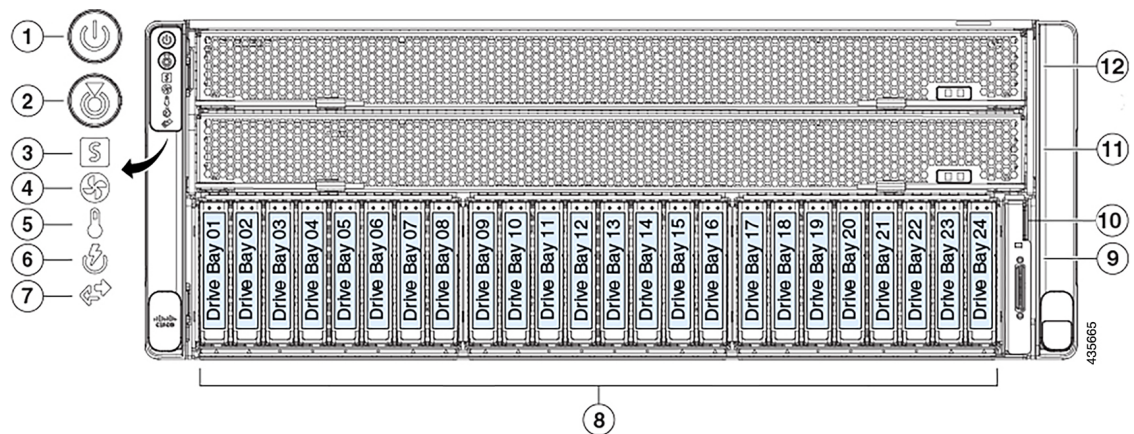


Component	Description
1	Power button/power status LED. When the LED is: <ul style="list-style-type: none"> Off: There is no AC power to the appliance. Amber: The appliance is in standby power mode. Power is supplied only to the Cisco IMC and some motherboard functions. Green: The appliance is in main power mode. Power is supplied to all the server components.

Component	Description
2	<p>Unit identification button and LED. When the LED is:</p> <ul style="list-style-type: none"> • Off: Unit identification is inactive. • Blue: Unit identification is active.
3	<p>System status LED. When the LED is:</p> <ul style="list-style-type: none"> • Green: The appliance is running in a normal operating condition. • Amber, steady: The appliance is in a degraded operational state, which may be due to one or more of the following causes: <ul style="list-style-type: none"> • Power supply redundancy is lost. • CPUs are mismatched. • At least one CPU is faulty. • At least one DIMM is faulty. • At least one drive in a RAID configuration failed. • Amber, blinking: The appliance is in a critical fault state, which may be due to one or more of the following causes: <ul style="list-style-type: none"> • Boot failure • Fatal processor and/or bus error detected • Over-temperature condition
4	<p>Fan status LED. When the LED is:</p> <ul style="list-style-type: none"> • Green: All fan modules are operating properly. • Amber, steady: Fan modules are in a degraded state. One fan module has a fault. • Amber, blinking: Two or more fan modules have faults.
5	<p>Temperature status LED. When the LED is:</p> <ul style="list-style-type: none"> • Green: The appliance is operating at normal temperature. No error conditions detected. • Amber, steady: One or more temperature sensors have exceeded a warning threshold. • Amber, blinking: One or more temperature sensors have exceeded a critical non-recoverable threshold.
6	<p>Power supply status LED. When the LED is:</p> <ul style="list-style-type: none"> • Green: All power supplies are operating normally. • Amber, steady: One or more power supplies are in a degraded operational state. • Amber, blinking: One or more power supplies are in a critical fault state.

Component	Description
7	<p>Network link activity LED. When the LED is:</p> <ul style="list-style-type: none"> • Off: The Ethernet LOM port link is idle. • Green: One or more Ethernet LOM ports are link-active, but there is no activity. • Green, blinking: One or more Ethernet LOM ports are link-active, with activity.
8	<p>A total of 20 drives are available on the appliance:</p> <ul style="list-style-type: none"> • Two 480 GB SATA SSD (in drive bays 1 and 2). • Sixteen 1.9 TB SATA SSD (in slots 3 through 18). • Two 3.8 TB SATA SSD (in drive bays 19 and 20). <p>Note Drive bays 21 through 24 are not used by the appliance.</p> <p>Each installed drive has a fault LED and an activity LED.</p> <p>When the drive fault LED is:</p> <ul style="list-style-type: none"> • Off: The drive is operating properly. • Amber: The drive has failed. • Amber, blinking: The drive is rebuilding. <p>When the drive activity LED is:</p> <ul style="list-style-type: none"> • Off: There is no drive in the sled (no access, no fault). • Green: The drive is ready. • Green, blinking: The drive is reading or writing data.
9	KVM connector. Used with a KVM cable that provides two USB 2.0, one VGA, and one serial connector.
10	Pull-out asset tag.
11	CPU module bay 1.
12	CPU module bay 2.

Figure 3: 44 and 56-Core Appliance Rear Panel

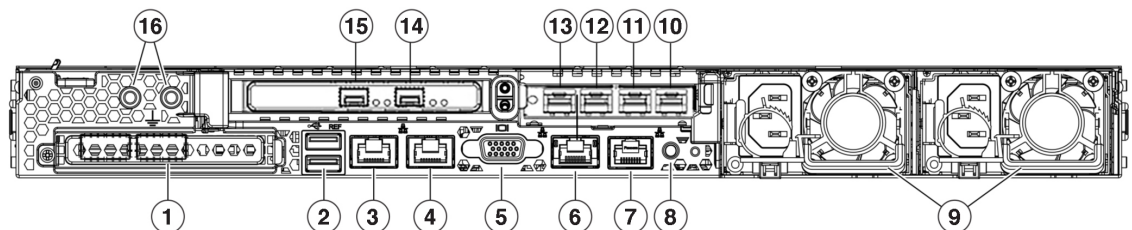



Note If NIC bonding has been enabled on your Cisco DNA Center appliance, two instances of the Enterprise, Intracluster, Management, and Internet port are available to configure and use. See [NIC Bonding Overview](#), on page 62 for more information.

Callout	Description
1	Modular LAN-on-motherboard (mLOM) card bay (x16 PCIe lane)
2	Two USB 3.0 ports
3, 10	<p>1-Gbps/10-Gbps Management Port (Network Adapter 3): This Ethernet port can support 1 Gbps and 10 Gbps, depending on the link partner capability. It is identified as Network Adapter 3 in the Maglev Configuration wizard. Connect this port to a switch that provides access to your enterprise management network.</p> <ul style="list-style-type: none"> • The primary instance (callout 3) is labeled 1 on the rear panel. • The secondary instance (callout 10) is the fourth port on the Intel X710-DA4 NIC in the appliance's PCIe riser 2/slot 2. <p>This port has a link status LED and a link speed LED. When the status LED is:</p> <ul style="list-style-type: none"> • Off: No link is present. • Green, blinking: Traffic is present on the active link. • Green: Link is active, but there is no traffic present. <p>When the speed LED is:</p> <ul style="list-style-type: none"> • Off: Link speed is 10 Mbps or less. • Green: Link speed is 1 Gbps. • Amber: Link speed is 100 Mbps.

Callout	Description
4, 11	<p>1-Gbps/10-Gbps Internet Port (Network Adapter 4): This Ethernet port can support 1 Gbps and 10 Gbps, depending on the link partner capability. It is identified as Network Adapter 4 in the Maglev Configuration wizard. This port is optional and is used for connecting to the Internet when it is not possible to do so via the 10-Gbps Enterprise port. Connect to the Internet or a proxy server that has connections to the Internet.</p> <ul style="list-style-type: none"> • The primary instance (callout 4) is labeled 2 on the rear panel. • The secondary instance (callout 11) is the third port on the Intel X710-DA4 NIC in the appliance's PCIe riser 2/slot 2. <p>This port has a link status LED and a link speed LED. When the link status LED is:</p> <ul style="list-style-type: none"> • Off: No link is present. • Green, blinking: Traffic is present on the active link. • Green: Link is active, but there is no traffic. <p>When the speed LED is:</p> <ul style="list-style-type: none"> • Off: Link speed is 10 Mbps or less. • Green: Link speed is 1 Gbps. • Amber: Link speed is 100 Mbps.
5	VGA video port (DB-15).
6	<p>1-Gbps Cisco IMC Port: This is the embedded port to the right of the VGA video port and to the left of the RJ45 serial port. It is assigned an IP address when you enable browser access to the appliance's Cisco IMC GUI (see Enable Browser Access to Cisco Integrated Management Controller). This port is reserved for out-of-band management of the appliance chassis and software. Connect this port to a switch that provides access to your enterprise management network.</p> <p>This port has a link status LED and a link speed LED. When the link status LED is:</p> <ul style="list-style-type: none"> • Off: No link is present. • Green, blinking: Traffic is present on the active link. • Green: Link is active, but there is no traffic present. <p>When the speed LED is:</p> <ul style="list-style-type: none"> • Off: Link speed is 10 Mbps or less. • Green: Link speed is 1 Gbps. • Amber: Link speed is 100 Mbps.
7	Serial port (RJ-45 connector)
8	Rear unit identification button and LED

Callout	Description
9	<p>Power supplies (up to two: redundant as 1+1). Each power supply has a power supply fault LED and an AC power LED.</p> <p>When the fault LED is:</p> <ul style="list-style-type: none"> • Off: The power supply is operating normally. • Amber, blinking: An event warning threshold has been reached, but the power supply continues to operate. • Amber, solid: A critical fault threshold has been reached, causing the power supply to shut down (for example, a fan failure or an over-temperature condition). <p>When the AC Power LED is:</p> <ul style="list-style-type: none"> • Off: There is no AC power to the power supply. • Green, solid: AC power is OK, DC output is OK. • Green, blinking: AC power is OK, DC output is not enabled. <p>For more details, see Power Specifications.</p>
12, 15	<p>10-Gbps Enterprise Port (Network Adapter 1): This port is identified as Network Adapter 1 in the Maglev Configuration wizard. Connect it to a switch with connections to the Enterprise network.</p> <ul style="list-style-type: none"> • The primary instance (callout 15) is the left-hand port on the Intel X710-DA2 NIC in the appliance's PCIe riser 1/slot 1. • The secondary instance (callout 12) is the second port on the Intel X710-DA4 NIC in the appliance's PCIe riser 2/slot 2. <p>This port has a link status (ACT) LED and a link speed (LINK) LED.</p> <p>When the link status LED is:</p> <ul style="list-style-type: none"> • Off: No link is present. • Green, blinking: Traffic is present on the active link. • Green: Link is active, but there is no traffic present. <p>When the speed LED is:</p> <ul style="list-style-type: none"> • Off: Link speed is 100 Mbps or less. • Green: Link speed is 10 Gbps. • Amber: Link speed is 1 Gbps. <p>Note Although capable of operating at lower speeds, this port is intended to operate at 10 Gbps only.</p>

Callout	Description
13, 14	<p>10-Gbps Intracluster Port (Network Adapter 2): This port is identified as Network Adapter 2 in the Maglev Configuration wizard. Connect this port to a switch with connections to the other nodes in the cluster.</p> <ul style="list-style-type: none"> The primary instance (callout 14) is the right-hand port on the Intel X710-DA2 NIC in the appliance PCIe riser 1/slot 1. The secondary instance (callout 13) is first port on the Intel X710-DA4 NIC in the appliance's PCIe riser 2/slot 2. <p>This port is located on the Intel X710-DA4 NIC, which is located in the appliance's PCIe riser 2/slot 2.</p> <p>This port has a link status (ACT) LED and a link speed (LINK) LED.</p> <p>When the link status LED is:</p> <ul style="list-style-type: none"> Off: No link is present. Green, blinking: Traffic is present on the active link. Green: Link is active, but there is no traffic present. <p>When the link speed LED is:</p> <ul style="list-style-type: none"> Off: Link speed is 100 Mbps or less. Green: Link speed is 10 Gbps. Amber: Link speed is 1 Gbps. <p>Note Although capable of operating at lower speeds, this port is intended to operate at 10 Gbps only.</p>
16	Threaded holes for dual-hole grounding lug.

Figure 4: 112-Core Appliance Rear Panel


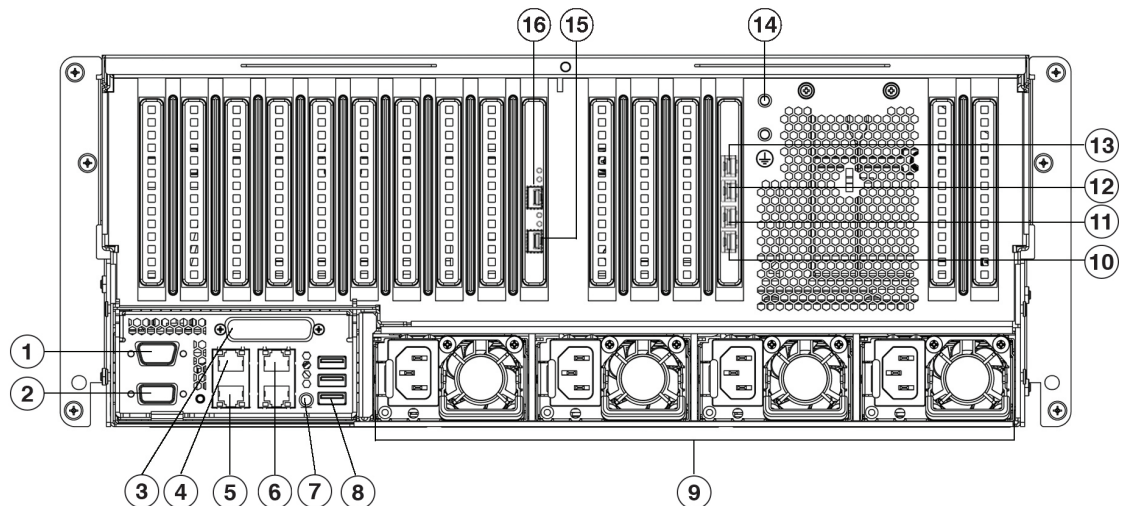


Figure 5: 112-Core Appliance Rear Panel Slots

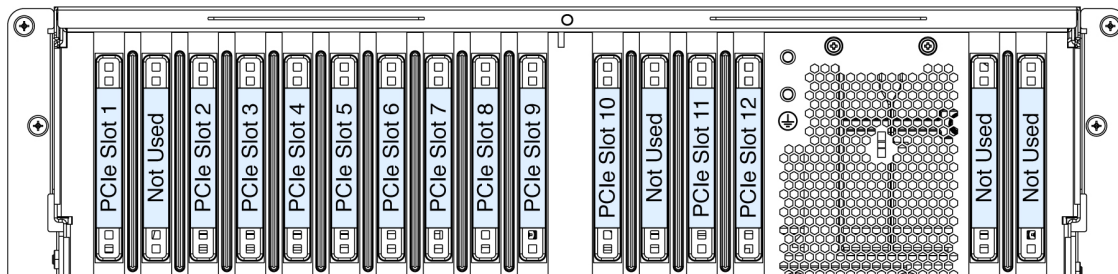

Note If NIC bonding has enabled on your Cisco DNA Center appliance, two instances of the Enterprise, Intraccluster, Management, and Internet port are available to configure and use. See [NIC Bonding Overview](#), on page 62 for more information.

Callout	Description
1	Serial port COM 1 (DB-9 connector)
2	VGA video port (DB-15 connector)
3	Not used at this time
4, 13	<p>1-Gbps/10-Gbps Management Port (Network Adapter 3): This Ethernet port can support 1 Gbps and 10 Gbps, depending on the link partner capability. It is identified as Network Adapter 3 in the Maglev Configuration wizard. Connect this port to a switch that provides access to your enterprise management network.</p> <ul style="list-style-type: none"> The primary instance (callout 4) is labeled 1 on the rear panel. The secondary instance (callout 13) is the top port on the Intel X710-DA4 NIC in the appliance's PCIe riser 2/slot 12. <p>This port has a link status LED and a link speed LED. When the status LED is:</p> <ul style="list-style-type: none"> Off: No link is present. Green, blinking: Traffic is present on the active link. Green: Link is active, but there is no traffic present. <p>When the speed LED is:</p> <ul style="list-style-type: none"> Off: Link speed is 10 Mbps or less. Green: Link speed is 1 Gbps. Amber: Link speed is 100 Mbps.

Callout	Description
5, 12	<p>1-Gbps/10-Gbps Internet Port (Network Adapter 4): This Ethernet port can support 1 Gbps and 10 Gbps, depending on the link partner capability. It is identified as Network Adapter 4 in the Maglev Configuration wizard. This port is optional and is used for connecting to the Internet when it is not possible to do so via the 10-Gbps Enterprise port. Connect to the Internet or a proxy server that has connections to the Internet.</p> <ul style="list-style-type: none"> • The primary instance (callout 5) is labeled 2 on the rear panel. • The secondary instance (callout 12) is the second port from the top on the Intel X710-DA4 NIC in the appliance's PCIe riser 2/slot 12. <p>This port has a link status LED and a link speed LED. When the link status LED is:</p> <ul style="list-style-type: none"> • Off: No link is present. • Green, blinking: Traffic is present on the active link. • Green: Link is active, but there is no traffic. <p>When the speed LED is:</p> <ul style="list-style-type: none"> • Off: Link speed is 10 Mbps or less. • Green: Link speed is 1 Gbps. • Amber: Link speed is 100 Mbps.
6	<p>1-Gbps Cisco IMC Port: This is the 10/100/1000 Ethernet dedicated management port (Base-T), which is located to the right of the Management port. It is identified as 3 on the rear panel. This port is assigned an IP address when you enable browser access to the appliance's Cisco IMC GUI (see Enable Browser Access to Cisco Integrated Management Controller). It is reserved for out-of-band management of the appliance chassis and software. Connect this port to a switch that provides access to your enterprise management network.</p> <p>This port has a link status LED and a link speed LED. When the link status LED is:</p> <ul style="list-style-type: none"> • Off: No link is present. • Green, blinking: Traffic is present on the active link. • Green: Link is active, but there is no traffic present. <p>When the speed LED is:</p> <ul style="list-style-type: none"> • Off: Link speed is 10 Mbps or less. • Green: Link speed is 1 Gbps. • Amber: Link speed is 100 Mbps.
7	Rear identification button/LED
8	Three USB 3.0 ports

Callout	Description
9	Power supplies 1 – 4: hot-swappable and redundant as 3+1 (configured in Cisco IMC). See Power Specifications for more information.
10, 15	<p>10-Gbps Intracluster Port (Network Adapter 2): This port is identified as Network Adapter 2 in the Maglev Configuration wizard. Connect this port to a switch with connections to the other nodes in the cluster.</p> <ul style="list-style-type: none"> • The primary instance (callout 15) is the bottom port on the Intel X710-DA2 NIC in the appliance PCIe riser 1/slot 9. • The secondary instance (callout 10) is the bottom port on the Intel X710-DA4 NIC in the appliance's PCIe riser 2/slot 12. <p>This port has a link status (ACT) LED and a link speed (LINK) LED.</p> <p>When the link status LED is:</p> <ul style="list-style-type: none"> • Off: No link is present. • Green, blinking: Traffic is present on the active link. • Green: Link is active, but there is no traffic present. <p>When the link speed LED is:</p> <ul style="list-style-type: none"> • Off: Link speed is 100 Mbps or less. • Green: Link speed is 10 Gbps. • Amber: Link speed is 1 Gbps. <p>Note Although capable of operating at lower speeds, this port is intended to operate at 10 Gbps only.</p>

Callout	Description
11, 16	<p>10-Gbps Enterprise Port (Network Adapter 1): This port is identified as Network Adapter 1 in the Maglev Configuration wizard. If NIC bonding is enabled on your appliance, connect this port to a switch with connections to the enterprise network.</p> <ul style="list-style-type: none"> The primary instance (callout 16) is the top port on the Intel X710-DA2 NIC in the appliance PCIe riser 1/slot 9. The secondary instance (callout 11) is the third port from the top on the Intel X710-DA4 NIC in the appliance's PCIe riser 2/slot 12. <p>This port has a link status (ACT) LED and a link speed (LINK) LED.</p> <p>When the link status LED is:</p> <ul style="list-style-type: none"> Off: No link is present. Green, blinking: Traffic is present on the active link. Green: Link is active, but there is no traffic present. <p>When the speed LED is:</p> <ul style="list-style-type: none"> Off: Link speed is 100 Mbps or less. Green: Link speed is 10 Gbps. Amber: Link speed is 1 Gbps. <p>Note Although capable of operating at lower speeds, this port is intended to operate at 10 Gbps only.</p>
14	Threaded holes for dual-hole grounding lug.

Physical Specifications

The following table lists the physical specifications for the appliance. Unless indicated, the specifications apply to the 44, 56, and 112-core appliances.

Table 4: Physical Specifications

Description	Specification
Height	44 and 56-core appliance: 1.7 in. (4.32 cm) 112-core appliance: 6.9 in. (17.6 cm)
Width	44 and 56-core appliance: <ul style="list-style-type: none"> Without handles: 16.9 in. (43.0 cm) Including handles: 19.0 in. (48.3 cm) 112-core appliance: 19.0 in. (48.3 cm)

Description	Specification
Depth (length)	44 and 56-core appliance: <ul style="list-style-type: none"> • Without handles: 29.8 in. (75.6 cm) • Including handles: 30.98 in. (78.7 cm) 112-core appliance: 32.7 in. (83.1 cm)
Front Clearance	3 in. (76 mm)
Side Clearance	1 in. (25 mm)
Rear Clearance	6 in. (152 mm)
Maximum weight (fully loaded chassis)	44 and 56-core appliance: 37.5 lb. (17.0 kg) 112-core appliance: 146 lb. (66.2 kg)

Environmental Specifications

The following table lists the environmental specifications for the Cisco DNA Center appliance. Unless indicated, the specifications apply to the 44, 56, and 112-core appliances.

Table 5: Environmental Specifications

Description	Specification
Temperature, operating	41 to 95°F (5 to 35°C) Derate the maximum temperature by 1°C for every 1000 ft. (305 meters) of altitude above sea level.
Temperature, nonoperating (when the appliance is stored or transported)	–40 to 149°F (–40 to 65°C)
Humidity (RH), operating	10 to 90%, noncondensing at 82°F (28°C)
Humidity (RH), nonoperating (when the appliance is stored or transported)	5 to 93% at 82°F (28°C)
Altitude, operating	0 to 10,000 ft. (0 to 3,048 m)
Altitude, nonoperating (when the appliance is stored or transported)	0 to 40,000 ft. (0 to 12,192 m)

Description	Specification
Sound power level, measure A-weighted per ISO7779 LwAd (Bels), operation at 73°F (23°C)	44 and 56-core appliance: 5.5 112-core appliance: <ul style="list-style-type: none"> • Minimum configuration: 7.08 • Typical configuration: 7.67 • Maximum configuration: 8.24
Sound pressure level, measure A-weighted per ISO7779 LpAm (dBA), Operation at 73°F (23°C)	44 and 56-core appliance: 40 112-core appliance: <ul style="list-style-type: none"> • Minimum configuration: 57.6 • Typical configuration: 63.5 • Maximum configuration: 70.5

Power Specifications

The specifications for the power supplies provided with the Cisco DNA Center appliance are listed in the table below. The 44 and 56-core appliance ships with two 770 W power supplies (Cisco part number UCSC-PSU1-770W) and the 112-core appliance ships with four 1600 W AC power supplies (Cisco part number UCSC-PSU1-1600W). Unless indicated, the specifications apply to both power supplies.

Table 6: AC Power Supply Specifications

Description	Specification
AC input voltage	770 W: <ul style="list-style-type: none"> • Nominal range: 100–120 VAC, 200–240 VAC • Range: 90–132 VAC, 180–264 VAC 1600 W: <ul style="list-style-type: none"> • Nominal range: 200–240 VAC • Range: 180–264 VAC
AC input frequency	Nominal range: 50 to 60 Hz (Range: 47–63 Hz)

Description	Specification
Maximum AC input current	770 W: <ul style="list-style-type: none"> • 9.5 A at 100 VAC • 4.5 A at 208 VAC 1600 W: 9.5 A at 200 VAC
Maximum input volt-amperes	770 W: 950 VA at 100 VAC 1600 W: 1250 VA at 200 VAC
Maximum output power per PSU	770 W: 100–120 VAC 1600 W: 200–240 VAC
Maximum inrush current	770 W: 15 A at 35° C 1600 W: 30 A at 35° C
Maximum hold-up time	770 W: 12 ms 1600 W: 80 ms at
Power supply output voltage	12 VDC
Power supply standby voltage	12 VDC
Efficiency rating	Climate Savers Platinum Efficiency (80Plus Platinum certified)
Form factor	RSP2
Input connector	IEC320 C14



Note You can get more specific power information for the exact configuration of your appliance by using the Cisco UCS Power Calculator: <http://ucspowercalc.cisco.com>



CHAPTER 2

Plan the Deployment

- [Planning Workflow](#), on page 21
- [Cisco DNA Center and Cisco Software-Defined Access](#), on page 22
- [Interface Cable Connections](#), on page 22
- [Required IP Addresses and Subnets](#), on page 26
- [Required Internet URLs and Fully Qualified Domain Names](#), on page 30
- [Provide Secure Access to the Internet](#), on page 32
- [Required Network Ports](#), on page 32
- [Required Ports and Protocols for Cisco Software-Defined Access](#), on page 34
- [Required Configuration Information](#), on page 41
- [Required First-Time Setup Information](#), on page 42

Planning Workflow

You must perform the following planning and information-gathering tasks before attempting to install, configure, and set up your Cisco DNA Center appliance. After you complete these tasks, you can continue by physically installing your appliance in the data center.



Note For more information, see [Cisco DNA Center and Cisco Software-Defined Access](#).

1. Review the recommended cabling and switching requirements for standalone and cluster installations. For more information, see [Interface Cable Connections](#).
2. Gather the IP addressing, subnetting, and other IP traffic information that you will apply during appliance configuration. For more information, see [Required IP Addresses and Subnets](#).
3. Prepare a solution for the required access to web-based resources. For more information, see [Required Internet URLs and Fully Qualified Domain Names](#) and [Provide Secure Access to the Internet](#).
4. Reconfigure your firewalls and security policies for Cisco DNA Center traffic. For more information, see [Required Network Ports](#). If you are using Cisco DNA Center to manage a Cisco Software-Defined Access (SD-Access) network, also see [Required Ports and Protocols for Cisco Software-Defined Access](#).
5. Gather the additional information used during appliance configuration and first-time setup. For more information, see [Required Configuration Information](#) and [Required First-Time Setup Information](#).

Cisco DNA Center and Cisco Software-Defined Access

You can use Cisco DNA Center to manage any type of network, including networks that employ the Cisco SD-Access fabric architecture. Cisco SD-Access transforms conventional networks into intent-based networks, where business logic becomes a physical part of the network, making it easy to automate day-to-day tasks such as configuration, provisioning, and troubleshooting. The Cisco SD-Access solution reduces the time taken to adapt the network to business needs, improves issue resolutions, and reduces security-breach impacts.

A complete discussion of the Cisco SD-Access solution is outside the scope of this guide. Network architects and administrators planning to implement a Cisco SD-Access fabric architecture for use with Cisco DNA Center can find additional information and guidance from the following resources:

- For more information on how Cisco DNA Center leverages Cisco SD-Access to automate solutions that are not possible with normal networking approaches and techniques, see [Software Defined Access: Enabling Intent-Based Networking](#).
- For guidance in using Cisco SD-Access access segmentation to enhance network security, see the [Software-Defined Access Segmentation Design Guide](#).
- For guidance on deploying SDA with Cisco DNA Center, see the [Software-Defined Access Deployment Guide](#).
- For more information on the digital network architecture that is the foundation of Cisco DNA Center and the Cisco SD-Access solution, and the roles that other Cisco and third-party products and solutions play in this innovative architecture, see the [Cisco DNA Design Zone](#).

Interface Cable Connections

Connect the ports on the appliance to a switch that provides the following types of network access. At a minimum, you must configure the Enterprise and Intracenter port interfaces, as they are required for Cisco DNA Center functionality.

When NIC bonding is enabled on an appliance, a secondary instance of the Enterprise, Intracenter, Management, and Internet ports resides on the Intel X710-DA4 NIC. Connect these ports to a switch that's different from the one that you will connect the primary instance of these ports to (see [NIC Bonding Overview](#), on page 62 for more information).



Note During appliance configuration, the Maglev Configuration wizard does not let you proceed until you assign the **Cluster Link** option to an interface. For both single-node and three-node deployments in a production environment, assign the Intracenter port as the Cluster Link.

Be aware that the interface marked as the Cluster Link cannot be changed after configuration completes. Later, if you must change the interface marked as the Cluster Link, you are required to reimage the appliance. (For a description of the tasks you need to complete in order to reimage your Cisco DNA Center appliance, see [Reimage the Appliance](#), on page 69.) With this in mind, we recommend that you set up the Cluster Port with an IP address, so as to allow for expansion to a three-node cluster in the future. Also, make sure that the cluster link interface is connected to a switch port and is in the UP state.

- **(Required) 10-Gbps Enterprise Port (Network Adapter 1):** The purpose of this port is to enable Cisco DNA Center to communicate with and manage your network. Connect this port to a switch with connections to the enterprise network and configure one IP address with a subnet mask for the port.

Primary instance:

- On the 44 and 56-core appliance, this is the left-hand port on the Intel X710-DA2 NIC that resides in PCIe slot 1.
- On the 112-core appliance, this is the top 10-Gbps port on the Intel X710-DA2 NIC that resides in PCIe slot 9.

Secondary instance:

- On the 44 and 56-core appliance, this is the second port on the Intel X710-DA4 NIC that resides in PCIe slot 2.
- On the 112-core appliance, this is the third 10-Gbps port from the top on the Intel X710-DA4 NIC that resides in PCIe slot 12.

- **(Required) 10-Gbps Intracluster Port (Network Adapter 2):** The purpose of this port is to enable communications among the primary and secondary nodes in a cluster. Connect this port to a switch with connections to the other nodes in the cluster and configure one IP address with a subnet mask for the port.

Primary instance:

- On the 44 and 56-core appliance, this is the right-hand port on the Intel X710-DA2 NIC that resides in PCIe slot 1.
- On the 112-core appliance, this is the bottom 10-Gbps port on the Intel X710-DA2 NIC that resides in PCIe slot 9.

Secondary instance:

- On the 44 and 56-core appliance, this is the first port on the Intel X710-DA4 NIC that resides in PCIe slot 2.
- On the 112-core appliance, this is the bottom 10-Gbps port on the Intel X710-DA4 NIC that resides in PCIe slot 12.

- **(Optional) 1-Gbps/10-Gbps Management Port (Network Adapter 3):** This port provides access to the Cisco DNA Center GUI, allowing users to use the software on the appliance. Connect this port to a switch with connections to your enterprise management network, and configure one IP address with a subnet mask for the port.

Primary instance: Labeled **1** on the appliance's rear panel.

Secondary instance:

- On the 44 and 56-core appliance, this is the fourth port on the Intel X710-DA4 NIC that resides in PCIe slot 2.
- On the 112-core appliance, this is the top 10-Gbps port on the Intel X710-DA4 NIC that resides in PCIe slot 12.

- **(Optional) 1-Gbps/10-Gbps Internet Port (Network Adapter 4):** This port, labeled **2** on the rear panel, is optional. Use it only if you cannot connect the appliance to the Internet (including to your Internet proxy server) using the 10-Gbps Enterprise Port (Network Adapter 1). If you need to use this port, connect it to a switch with connections to your Internet proxy server and configure one IP address with a subnet mask for the port.


Primary instance: Labeled **2** on the appliance's rear panel.

Secondary instance:

- On the 44 and 56-core appliance, this is the third port on the Intel X710-DA4 NIC that resides in PCIe slot 2.
 - On the 112-core appliance, this is the second 10-Gbps port from the top on the Intel X710-DA4 NIC that resides in PCIe slot 12.
- **(Optional, but strongly recommended) 1-Gbps Cisco IMC Port:** This port provides browser access to the Cisco Integrated Management Controller (Cisco IMC) out-of-band appliance management interface and its GUI. Its purpose is to allow you to manage the appliance and its hardware. Connect this port to a switch with connections to your enterprise management network and configure an IP address with a subnet mask for the port.


The following figures show the recommended connections for a single-node Cisco DNA Center cluster:

Figure 6: Recommended Cabling for 44 and 56-Core Appliance

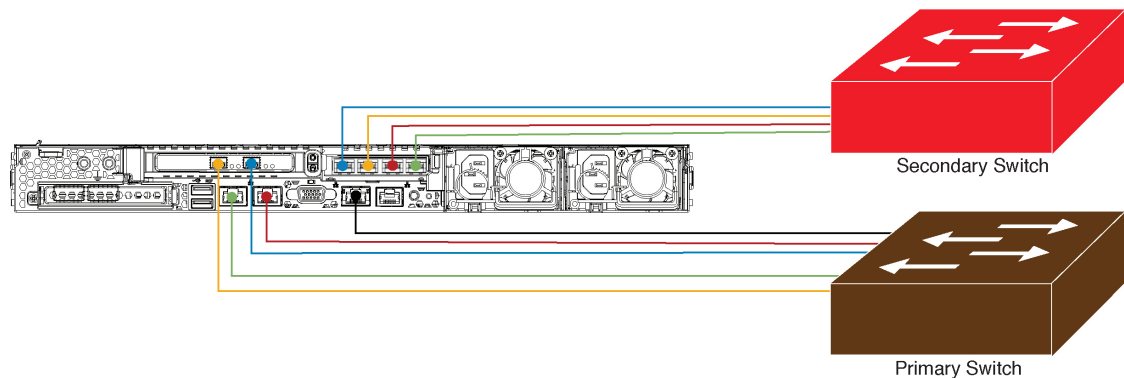

Legend

- | | |
|---|---|
| ● 10 Gbps Enterprise Port
(Network Adapter 3) | ● 1 Gbps/10 Gbps Internet Port
(Network Adapter 2) |
| ● 10 Gbps Intracluster Port
(Network Adapter 4) | ● 1 Gbps Cisco IMC Port |
| ● 1 Gbps/10 Gbps Management Port
(Network Adapter 1) | |

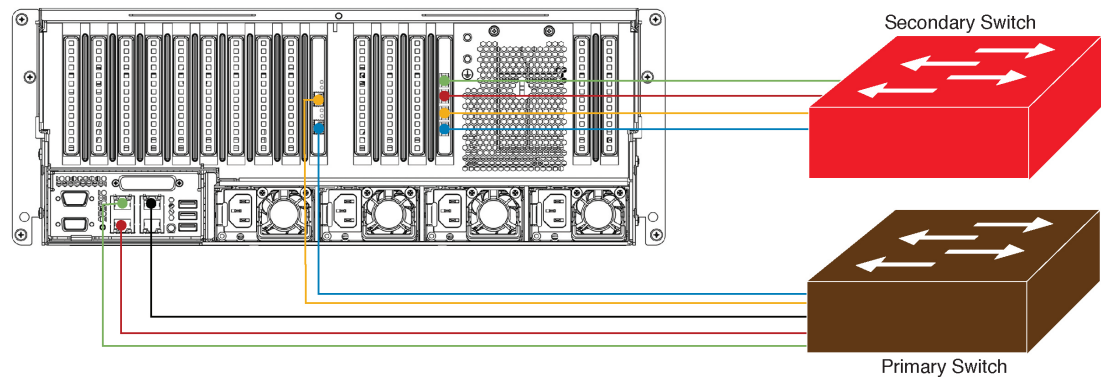Figure 7: Recommended Cabling for 112-Core Appliance**Legend**

- 10-Gbps Enterprise Port (Network Adapter 3)
- 10-Gbps Intracluster Port (Network Adapter 4)
- 1-Gbps/10-Gbps Management Port (Network Adapter 1)
- 1-Gbps/10-Gbps Internet Port (Network Adapter 2)
- 1-Gbps Cisco IMC Port

The connections for each node in a three-node Cisco DNA Center cluster are the same as those for a single-node cluster and use the same ports. Do the following when you cable a three-node cluster:

- Connect the primary instance of each node's Enterprise, Intracluster, Management, and Internet Port, as well as the Cisco IMC port, to the primary switch.
- Connect the secondary instance of each node's Enterprise, Intracluster, Management, and Internet Port to the secondary switch.

For more details on each of the ports, see the rear panel diagram and accompanying descriptions for your chassis in [Front and Rear Panels](#).



Note Multinode cluster deployments require all the member nodes to be in the same network and at the same site. The appliance does not support distribution of nodes across multiple networks or sites.

When cabling the 10-Gbps enterprise and cluster ports, note that the ports support only the following media types:

- SFP-10G-SR (Short range, MMF)
- SFP-10G-SR-S (Short range, MMF)
- SFP-10G-LR (Long range, SMF)
- SFP-H10GB-CU1M (Twinax cable, passive, 1 Meter)
- SFP-H10GB-CU3M (Twinax cable, passive, 3 Meters)
- SFP-H10GB-CU5M (Twinax cable, passive, 5 Meters)
- SFP-H10GB-ACU7M (Twinax cable, active, 7 Meters)

Required IP Addresses and Subnets

Before beginning the installation, you must ensure that your network has sufficient IP addresses available to assign to each of the appliance ports that you plan on using. Depending on whether you are installing the appliance as a single-node cluster or as a primary or secondary node in a three-node cluster, you will need the following appliance port (NIC) addresses:

- **Enterprise Port Address (Required):** One IP address with a subnet mask.
- **Cluster Port Address (Required):** One IP address with a subnet mask.
- **Management Port Address (Optional):** One IP address with a subnet mask.
- **Cloud Port Address (Optional):** One IP address with a subnet mask. This is an optional port, used only when you cannot connect to the cloud using the Enterprise port. You do not need an IP address for the Cloud port unless you must use it for this purpose.
- **CIMC Port Address (Optional, but strongly recommended):** One IP address with a subnet mask.



Note All of the IP addresses called for in these requirements must be valid IPv4 addresses with valid IPv4 netmasks. Ensure that the addresses and their corresponding subnets do not overlap. Service communication issues can result if they do.

You will also need the following additional IP addresses and dedicated IP subnets, which are prompted for and applied during configuration of the appliance:

- **Cluster Virtual IP Addresses:** One virtual IP (VIP) address per configured network interface per cluster. This requirement applies to three-node clusters and single-node clusters that are likely to be converted into a three-node cluster in the future. You must supply a VIP for each network interface you configure. Each VIP should be from the same subnet as the IP address of the corresponding configured interface. There are four interfaces on each appliance: Enterprise, Cluster, Management, and Cloud. At a minimum, you must configure the Enterprise and Cluster port interfaces, as they are required for Cisco DNA Center functionality. An interface is considered configured if you supply an IP address for that interface, along with a subnet mask and one or more associated gateways or static routes. If you skip an interface entirely during configuration, that interface is considered as not configured.

Note the following:

- If you have a single-node setup and do not plan to convert it into a three-node cluster in the future, you are not required to specify a VIP address. However, if you decide to do so, you must specify a VIP address for every configured network interface (just as you would for a three-node cluster).
- If the intracluster link for a single-node cluster goes down, the VIP addresses associated with the Management and Enterprise interfaces also go down. When this happens, Cisco DNA Center is unusable until the intracluster link is restored (because the Software Image Management [SWIM] and Cisco Identity Services Engine [ISE] integration is not operational and Cisco DNA Assurance data is not displayed because information cannot be gathered from Network Data Platform [NDP] collectors).
- You cannot use a link-local IP address for a host interface.

- **Default Gateway IP Address:** The IP address for your network's preferred default gateway. If no other routes match the traffic, traffic will be routed through this IP address. Typically, you should assign the default gateway to the interface in your network configuration that accesses the internet. For information on security considerations to keep in mind when deploying Cisco DNA Center, see the [Cisco Digital Network Architecture Center Security Best Practices Guide](#).
- **DNS Server IP Addresses:** The IP address for one or more of your network's preferred Domain Name System (DNS) servers. During configuration, you can specify multiple DNS server IP addresses by entering them as a space-separated list.
- **(Optional) Static Route Addresses:** The IP addresses, subnet masks, and gateways for one or more static routes. During configuration, you can specify multiple static-route IP addresses, netmasks, and gateways by entering them as a space-separated list.

You can set one or more static routes for an interface on the appliance. You should supply static routes when you want to route traffic in a specific direction other than the default gateway. Each of the interfaces with static routes will be set as the *device* the traffic will be routed through in the IP route command table. For this reason, it is important to match the static route directions with the interface through which the traffic will be sent.

Static routes are not recommended in network device routing tables such as those used by switches and routers. Dynamic routing protocols are better for this. However, you should add static routes where needed, to allow the appliance access to particular parts of the network that can be reached no other way.

- **NTP Server IP Addresses:** The DNS-resolvable hostname or IP address for at least one Network Time Protocol (NTP) server.

During configuration, you can specify multiple NTP server IP addresses/masks or hostnames by entering them as a space-separated list. For a production deployment, we recommend that you configure a minimum of three NTP servers.

Specify these NTP servers during preflight hardware synchronization, and again during the configuration of the software on each appliance in the cluster. Time synchronization is critical to the accuracy of data and the coordination of processing across a multihost cluster. Before deploying the appliance in a production environment, make sure that the time on the appliance system clock is current and that the NTP servers you specified are keeping accurate time. If you are planning to integrate the appliance with ISE, you should also ensure that ISE is synchronizing with the same NTP servers as the appliance.

- **Container Subnet:** Identifies one dedicated IP subnet for the appliance to use in managing and getting IP addresses for communications among its internal application services, such as Assurance, inventory collection, and so on. By default, Cisco DNA Center configures a link-local subnet (**169.254.32.0/20**) for this parameter, and we recommend that you use this subnet. If you choose to enter another subnet, ensure that it does not conflict with or overlap any other subnet used by Cisco DNA Center's internal network or any external network. Also ensure that the minimum size of the subnet is 21 bits. The subnet you specify must conform with the IETF RFC 1918 and RFC 6598 specifications for private networks, which support the following address ranges:

- 10.0.0.0/8
- 172.16.0.0/12
- 192.168.0.0/16
- 100.64.0.0/10

For details, see RFC 1918, [Address Allocation for Private Internets](#), and RFC 6598, [IANA-Reserved IPv4 Prefix for Shared Address Space](#).



Important

- Ensure that you specify a valid CIDR subnet. Otherwise, incorrect bits will be present in the 172.17.1.0/20 and 172.17.61.0/20 subnets.
- After configuration of your Cisco DNA Center appliance is completed, you *cannot* assign a different subnet without first reimaging the appliance (see [Reimage the Appliance](#) for more information).

- **Cluster Subnet:** Identifies one dedicated IP subnet for the appliance to use in managing and getting IPs for communications among its infrastructure services, such as database access, the message bus, and so on. By default, Cisco DNA Center configures a link-local subnet (**169.254.48.0/20**) for this parameter, and we recommend that you use this subnet. If you choose to enter another subnet, ensure that it does not conflict with or overlap any other subnet used by Cisco DNA Center's internal network or any external network. Also ensure that the minimum size of the subnet is 21 bits. The subnet you specify must conform with the IETF RFC 1918 and RFC 6598 specifications for private networks, which support the following address ranges:

- 10.0.0.0/8
- 172.16.0.0/12
- 192.168.0.0/16
- 100.64.0.0/10

For details, see RFC 1918, [Address Allocation for Private Internets](#), and RFC 6598, [IANA-Reserved IPv4 Prefix for Shared Address Space](#).)

If you were to specify 10.10.10.0/21 as your Container subnet, you could also specify a Cluster subnet of 10.0.8.0/21 since these two subnets do not overlap. Also note that the configuration wizard detects overlaps (if any) between these subnets and prompts you to correct the overlap.



Important

- Ensure that you specify a valid CIDR subnet. Otherwise, incorrect bits will be present in the 172.17.1.0/20 and 172.17.61.0/20 subnets.
- After configuration of your Cisco DNA Center appliance is completed, you *cannot* assign a different subnet without first reimaging the appliance (see [Reimage the Appliance](#) for more information).

The recommended total IP address space for the two Container and Cluster subnets contains 4,096 addresses, broken down into two /21 subnets of 2,048 addresses each. The two /21 subnets must not overlap. The Cisco DNA Center internal services require a dedicated set of IP addresses to operate (a Cisco DNA Center microservice architecture requirement). To accommodate this requirement, you must allocate two dedicated subnets for each Cisco DNA Center system.

One reason the appliance requires this amount of address space is to maintain system performance. Because it uses internal routing and tunneling technologies for east-west (inter-node) communications, using overlapping address spaces forces the appliance to run Virtual Routing and Forwarding (VRF) FIBs internally. This leads

to multiple encaps and decaps for packets going from one service to another, causing high internal latency at a very low level, with cascading impacts at higher layers.

Another reason is the Cisco DNA Center [Kubernetes-based service containerization](#) architecture. Each appliance uses the IP addresses in this space for each Kubernetes K8 node. Multiple nodes can make up a single service. Currently, Cisco DNA Center supports more than 100 services, each requiring several IP addresses, and new features and corresponding services are being added all the time. The address space requirement is purposely kept large at the start to ensure that Cisco can add new services and features without running out of IP addresses or requiring customers to reallocate contiguous address spaces simply to upgrade their systems.

The services supported over these subnets are also enabled at Layer 3. The Cluster space, in particular, carries data between application and infrastructure services, and is heavily used.

The RFC 1918 and RFC 6598 requirement is because of the requirement by Cisco DNA Center to download packages and updates from the cloud. If the selected IP address ranges do not conform with RFC 1918 and RFC 6598, this can quickly lead to problems with public IP address overlaps.

Maglev Wizard Interface Configuration Order

The order in which Cisco DNA Center appliance interfaces are configured in the Maglev Configuration wizard differ between the first and second-generation appliance, as illustrated in the following table. Refer to these Cisco part numbers to determine whether you have a first or second-generation appliance:

- First-generation 44-core appliance: DN1-HW-APL
- Second-generation:
 - 44-core appliance: DN2-HW-APL
 - 44-core promotional appliance: DN2-HW-APL-U
 - 56-core appliance: DN2-HW-APL-L
 - 56-core promotional appliance: DN2-HW-APL-L-U
 - 112-core appliance: DN2-HW-APL-XL
 - 112-core promotional appliance: DN2-HW-APL-XL-U

Cisco DNA Center Appliance Interface and Function	Appliance Type	Configuration Order in the Maglev Wizard
Enterprise: Links the appliance to your enterprise network.	First-generation	Network Adapter #4
	Second-generation	Network Adapter #1
Intracenter: Links the appliance to your cluster nodes.	First-generation	Network Adapter #1
	Second-generation	Network Adapter #2
Management: Allows you to access the Cisco DNA Center GUI from your management network.	First-generation	Network Adapter #2
	Second-generation	Network Adapter #3

Cisco DNA Center Appliance Interface and Function	Appliance Type	Configuration Order in the Maglev Wizard
Internet: Provides internet access when another interface is not available for this purpose.	First-generation	Network Adapter #3
	Second-generation	Network Adapter #4

Required Internet URLs and Fully Qualified Domain Names

The appliance requires secure access to the following table of URLs and Fully Qualified Domain Names (FQDNs).

The table describes the features that make use of each URL and FQDN. You must configure either your network firewall or a proxy server so that IP traffic can travel to and from the appliance and these resources. If you cannot provide this access for any listed URL and FQDN, the associated features will be impaired or inoperable.

For more on requirements for proxy access to the internet, see [Provide Secure Access to the Internet](#).

Table 7: Required URLs and FQDN Access

In order to...	...Cisco DNA Center must access these URLs and FQDNs
Download updates to the system and application package software; submit user feedback to the product team.	Recommended: *.ciscoconnectdna.com:443 ¹ Customers who want to avoid wildcards can specify these URLs instead: <ul style="list-style-type: none"> • https://www.ciscoconnectdna.com • https://cdn.ciscoconnectdna.com • https://registry.ciscoconnectdna.com • https://registry-cdn.ciscoconnectdna.com
Cisco DNA Center update package.	https://*.ciscoconnectdna.com/
Smart Account and SWIM software downloads.	https://apx.cisco.com https://cloudsso.cisco.com/as/token.oauth2 https://*.cisco.com/ https://download-ssc.cisco.com/
Authenticate with the cloud domain.	https://dnaservices.cisco.com
User feedback.	https://dnacenter.uservoice.com

In order to...	...Cisco DNA Center must access these URLs and FQDNs
Integrate with Cisco Meraki.	<p>Recommended: *.meraki.com:443</p> <p>Customers who want to avoid wildcards can specify these URLs instead:</p> <ul style="list-style-type: none"> • dashboard.meraki.com:443 • api.meraki.com:443 • n63.meraki.com:443
Integrate with cisco.com and Cisco Smart Licensing.	<p>*.cisco.com:443</p> <p>Customers who want to avoid wildcards can specify these URLs instead:</p> <ul style="list-style-type: none"> • software.cisco.com • cloudsso.cisco.com • cloudsso1.cisco.com • cloudsso2.cisco.com • apiconsole.cisco.com • api.cisco.com • apx.cisco.com • sso.cisco.com • apmx-prod1-vip.cisco.com • apmx-prod2-vip.cisco.com • tools.cisco.com • tools1.cisco.com • tools2.cisco.com • smartreceiver.cisco.com
Render accurate information in site and location maps.	<ul style="list-style-type: none"> • www.mapbox.com • *.tiles.mapbox.com/* :443. For a proxy, the destination is *.tiles.mapbox.com/*
For Cisco AI Network Analytics data collection, configure your network or HTTP proxy to allow outbound HTTPS (TCP 443) access to the cloud hosts.	<ul style="list-style-type: none"> • https://api.use1.prn.kairos.ciscolabs.com (US East Region) • https://api.euc1.prn.kairos.ciscolabs.com (EU Central Region)
Access a menu of interactive help flows that let you complete specific tasks from the GUI.	https://ec.walkme.com
Access the licensing service.	https://swapi.cisco.com

- ¹ Cisco owns and maintains ciscoconnectdna.com and its subdomains. The Cisco Connect DNA infrastructure meets Cisco Security and Trust guidelines and undergoes continuous security testing. This infrastructure is robust, with built-in load balancing and automation capabilities, and is monitored and maintained by a cloud operations team to ensure 24x7x365 availability.

Provide Secure Access to the Internet

By default, the appliance is configured to access the internet in order to download software updates, licenses, and device software, as well as provide up-to-date map information, user feedback, and so on. Providing internet connections for these purposes is a mandatory requirement.

Using an HTTPS proxy server is a reliable way to access remote URLs securely. We recommend that you use an HTTPS proxy server to provide the appliance with the access it needs to the URLs listed in [Required Internet URLs and Fully Qualified Domain Names](#). During appliance installation, you are prompted to enter the URL and port number of the proxy server you want to use for this purpose, along with the proxy's login credentials (if the proxy requires them).

As of this release, the appliance supports communication with proxy servers over HTTP only. You can place the HTTPS proxy server anywhere within your network. The proxy server communicates with the internet using HTTPS, while the appliance communicates with the proxy server via HTTP. Therefore, we recommend that you specify the proxy's HTTP port when configuring the proxy during appliance configuration.

If you need to change the proxy setting after configuration, you can do so using the GUI.

Required Network Ports

The following tables list the well-known network service ports that the appliance uses. You must ensure that these ports are open for traffic flows to and from the appliance, whether you open them using firewall settings or a proxy gateway.

Additional ports, protocols, and types of traffic must be accommodated if you are deploying the appliance in a network that employs SDA infrastructure. For details, see [Required Ports and Protocols for Cisco Software-Defined Access](#).



Note For information on security considerations when deploying Cisco DNA Center, see the [Cisco Digital Network Architecture Center Security Best Practices Guide](#).

Table 8: Ports: Incoming Traffic

Port Number	Permitted Traffic	Protocol (TCP or UDP)
22	SSH	TCP
67	BOOTP	UDP
80	HTTP	TCP
111	NFS (used for Assurance backups)	TCP and UDP
123	NTP	UDP

Port Number	Permitted Traffic	Protocol (TCP or UDP)
162	SNMP	UDP
443	HTTPS	TCP
514	Syslog	UDP
2049	NFS (used for Assurance backups)	TCP and UDP
2222	SSH	TCP
9991	Multicast Domain Name System (mDNS)	TCP
20048	NFS (used for Assurance backups)	TCP and UDP
32767	NFS (used for Assurance backups)	TCP and UDP

Table 9: Ports: Outgoing Traffic

Port Number	Permitted Traffic	Protocol (TCP or UDP)
22	SSH (to network devices and Cisco ISE)	TCP
23	Telnet (to network devices)	TCP
53	DNS	UDP
80	Port 80 can be used for an outgoing proxy configuration. Other common ports (such as 8080) can also be used when a proxy is configured using the Configuration wizard (if a proxy is already in use for your network). To access Cisco-supported certificates and trust pools, configure your network to allow outgoing IP traffic from the appliance to the Cisco addresses listed at: https://www.cisco.com/security/pki/	TCP
123	NTP	UDP
161	SNMP agent	UDP
443	HTTPS	TCP
5222, 8910	Cisco ISE XMP for PxGrid	TCP
9060	Cisco ISE ERS API traffic	TCP




Note Additionally, you can configure your network to allow outgoing IP traffic from the appliance to the Cisco addresses at: <https://www.cisco.com/security/pki/>. The appliance uses the IP addresses listed at the above URL to access Cisco-supported certificates and trust pools.

Required Ports and Protocols for Cisco Software-Defined Access

This topic details the ports, protocols, and types of traffic native to a typical Cisco SD-Access fabric deployment that is similar to the one shown in the following figure.

Figure 8: Cisco SD-Access Fabric Infrastructure

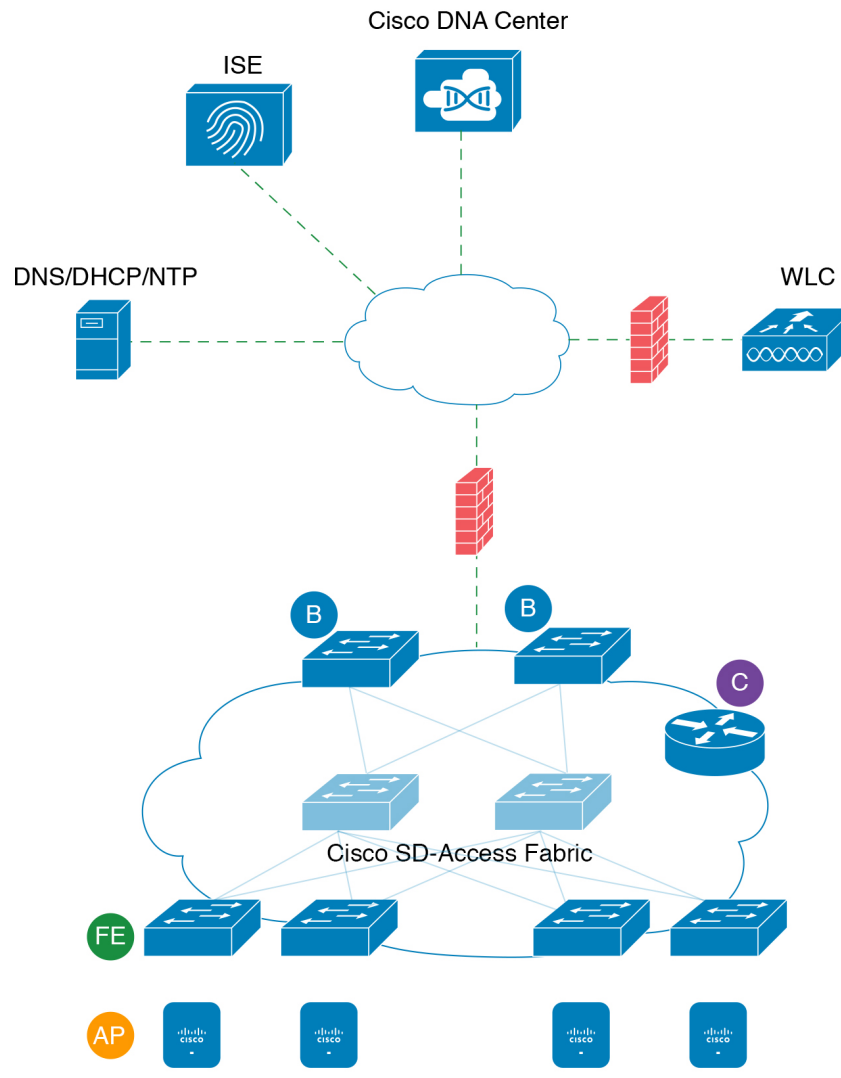

If you have implemented Cisco SD-Access in your network, use the information in the following tables to plan firewall and security policies that secure your Cisco SD-Access infrastructure properly while providing Cisco DNA Center with the access it requires to automate your network management.

Table 10: Cisco DNA Center Traffic

Source Port ²	Source	Destination Port	Destination	Description
Any	Cisco DNA Center	UDP 53	DNS Server	From Cisco DNA Center to DNS server
Any	Cisco DNA Center	TCP 22	Fabric underlay	From Cisco DNA Center to fabric switches' loopbacks for SSH
Any	Cisco DNA Center	TCP 23	Fabric underlay	From Cisco DNA Center to fabric switches' loopbacks for TELNET
Any	Cisco DNA Center	UDP 161	Fabric underlay	From Cisco DNA Center to fabric switches' loopbacks for SNMP device discovery
ICMP	Cisco DNA Center	ICMP	Fabric underlay	From Cisco DNA Center to fabric switches' loopbacks for SNMP device discovery
Any	Cisco DNA Center	TCP 443	Fabric underlay	From Cisco DNA Center to fabric switches for software upgrades (also to the internet if there is no proxy)
Any	Cisco DNA Center	UDP 6007	Switches and routers	From Cisco DNA Center to switches and routers for NetFlow
Any	Cisco DNA Center	TCP 830	Fabric underlay	From Cisco DNA Center to fabric switches for Netconf (Cisco SD-Access embedded wireless)
UDP 123	Cisco DNA Center	UDP 123	Fabric underlay	From Cisco DNA Center to fabric switches for the initial period during LAN automation
Any	Cisco DNA Center	UDP 123	NTP Server	From Cisco DNA Center to NTP server
Any	Cisco DNA Center	TCP 22, UDP 161	Cisco Wireless Controller	From Cisco DNA Center to Cisco Wireless Controller
ICMP	Cisco DNA Center	ICMP	Cisco Wireless Controller	From Cisco DNA Center to Cisco Wireless Controller
Any	AP	TCP 32626	Cisco DNA Center	Used for receiving traffic statistics and packet capture data used by the Cisco DNA Assurance Intelligent Capture (gRPC) feature.

² Cluster, PKI, SFTP server, and proxy port traffic are not included in this table.

Table 11: Internet Connectivity Traffic

Source Port	Source	Destination Port	Destination	Description
Any	Cisco DNA Center	TCP 443	registry.ciscoconnectdna.com	Download Cisco DNA Center package updates
Any	Cisco DNA Center	TCP 443	www.ciscoconnectdna.com	Download Cisco DNA Center package updates
Any	Cisco DNA Center	TCP 443	registry-cdn.ciscoconnectdna.com	Download Cisco DNA Center package updates
Any	Cisco DNA Center	TCP 443	cdn.ciscoconnectdna.com	Download Cisco DNA Center package updates
Any	Cisco DNA Center	TCP 443	software.cisco.com	Download device software
Any	Cisco DNA Center	TCP 443	cloudsso.cisco.com	Validate Cisco.com and Smart Account credentials
Any	Cisco DNA Center	TCP 443	cloudsso1.cisco.com	Validate Cisco.com and Smart Account credentials
Any	Cisco DNA Center	TCP 443	cloudsso2.cisco.com	Validate Cisco.com and Smart Account credentials
Any	Cisco DNA Center	TCP 443	apiconsole.cisco.com	CSSM Smart Licensing API
Any	Cisco DNA Center	TCP 443	sso.cisco.com	Cisco.com credentials and Smart Licensing
Any	Cisco DNA Center	TCP 443	api.cisco.com	Cisco.com credentials and Smart Licensing
Any	Cisco DNA Center	TCP 443	apx.cisco.com	Cisco.com credentials and Smart Licensing
Any	Cisco DNA Center	TCP 443	dashboard.meraki.com	Meraki integration
Any	Cisco DNA Center	TCP 443	api.meraki.com	Meraki integration
Any	Cisco DNA Center	TCP 443	n63.meraki.com	Meraki integration
Any	Cisco DNA Center	TCP 443	dnacenter.uservoice.com	User feedback submission
Any	Cisco DNA Center Admin Client	TCP 443	*.tiles.mapbox.com	Render maps in the browser (for access through proxy; the destination is *.tiles.mapbox.com/*)
Any	Cisco DNA Center	TCP 443	www.mapbox.com	Maps and Cisco Wireless Controller country code identification

Table 12: Cisco Software-Defined Access Fabric Underlay Traffic

Source Port ³	Source	Destination Port	Destination	Description
UDP 68	Fabric underlay	UDP 67	DHCP server	From fabric switches and routers to the DHCP server for DHCP Relay packets initiated by the fabric edge nodes.
Any	Fabric underlay	TCP 80	Cisco DNA Center	From fabric switch and router loopback IPs to Cisco DNA Center for PnP
Any	Fabric underlay	TCP 443	Cisco DNA Center	From fabric switch and router loopback IPs to Cisco DNA Center for image upgrade
Any	Fabric underlay	UDP 162	Cisco DNA Center	From fabric switch and router loopback IPs to Cisco DNA Center for SNMP Traps
Any	Fabric underlay	UDP 514	Cisco DNA Center	From fabric switches and routers to Cisco DNA Assurance
Any	Fabric underlay	UDP 6007	Cisco DNA Center	From fabric switches and routers to Cisco DNA Center for NetFlow
Any	Fabric underlay	UDP 123	Cisco DNA Center	From fabric switches to Cisco DNA Center; used when doing LAN automation
ICMP	Fabric underlay	ICMP	Cisco DNA Center	From fabric switch and router loopbacks to Cisco DNA Center for SNMP: device discovery
UDP 161	Fabric underlay	Any	Cisco DNA Center	From fabric switch and router loopbacks to Cisco DNA Center for SNMP: Device Discovery
Any	Fabric underlay	UDP 53	DNS Server	From fabric switches and routers to DNS server for name resolution
TCP and UDP 4342	Fabric underlay	TCP and UDP 4342	Fabric Routers and Switches	LISP-encapsulated control messages
TCP and UDP 4342	Fabric underlay	Any	Fabric Routers and Switches	LISP control-plane communications
Any	Fabric underlay	UDP 4789	Fabric Routers and Switches	Fabric-encapsulated data packets (VXLAN-GPO)
Any	Fabric underlay	UDP 1645/1646/1812/1813	ISE	From fabric switch and router loopback IPs to ISE for RADIUS
ICMP	Fabric underlay	ICMP	ISE	From fabric switches and routers to ISE for troubleshooting

UDP 1700/3799	Fabric underlay	Any	ISE	From fabric switches to ISE for care-of address (CoA)
Any	Fabric underlay	UDP 123	NTP Server	From fabric switch and router loopback IPs to the NTP server
Any	control-plane	UDP and TCP 4342/4343	Cisco Wireless Controller	From control-plane loopback IP to Cisco Wireless Controller for Fabric-enabled wireless

³ Border routing protocol, SPAN, profiling, and telemetry traffic are not included in this table.

Table 13: Cisco Wireless Controller Traffic

Source Port	Source	Destination Port	Destination	Description
UDP 5246/5247/5248	Cisco Wireless Controller	Any	AP IP Address Pool	From Cisco Wireless Controller to an AP subnet for CAPWAP
ICMP	Cisco Wireless Controller	ICMP	AP IP Address Pool	From Cisco Wireless Controller to APs allowing ping for troubleshooting
Any	Cisco Wireless Controller	TCP 25103	Cisco DNA Center	From Cisco Wireless Controller to Cisco DNA Center for Assurance
Any	Cisco Wireless Controller	UDP 69/5246/5247 TCP 22	AP IP Address Pool	From Cisco Wireless Controller to an AP subnet for CAPWAP
Any	Cisco Wireless Controller	UDP and TCP 4342/4343	Control plane	From Cisco Wireless Controller to control-plane loopback IP address
Any	Cisco Wireless Controller	TCP 22	Cisco DNA Center	From Cisco Wireless Controller to Cisco DNA Center for device discovery
UDP 161	Cisco Wireless Controller	Any	Cisco DNA Center	From Cisco Wireless Controller to Cisco DNA Center for SNMP
Any	Cisco Wireless Controller	UDP 162	Cisco DNA Center	From Cisco Wireless Controller to Cisco DNA Center for SNMP traps
Any	Cisco Wireless Controller	TCP 16113	Cisco Mobility Services Engine (MSE) and Cisco Spectrum Expert	From Cisco Wireless Controller to Cisco MSE and Spectrum Expert for NMSP
ICMP	Cisco Wireless Controller	ICMP	Cisco DNA Center	From Cisco Wireless Controller to allow ping for troubleshooting

Any	Cisco Wireless Controller and various syslog servers	UDP 514	Cisco Wireless Controller	Syslog (optional)
Any	Cisco Wireless Controller	UDP 53	DNS Server	From Cisco Wireless Controller to DNS server
Any	Cisco Wireless Controller	TCP 443	ISE	From Cisco Wireless Controller to ISE for Guest SSID web authorization
Any	Cisco Wireless Controller	UDP 1645,1812	ISE	From Cisco Wireless Controller to ISE for RADIUS authentication
Any	Cisco Wireless Controller	UDP 1646, 1813	ISE	From Cisco Wireless Controller to ISE for RADIUS accounting
Any	Cisco Wireless Controller	UDP 1700, 3799	ISE	From Cisco Wireless Controller to ISE for RADIUS CoA
ICMP	Cisco Wireless Controller	ICMP	ISE	From Cisco Wireless Controller to ISE ICMP for troubleshooting
Any	Cisco Wireless Controller	UDP 123	NTP server	From Cisco Wireless Controller to NTP server

Table 14: Fabric-Enabled Wireless AP IP Address Pool Traffic

Source Port	Source	Destination Port	Destination	Description
UDP 68	AP IP Address Pool	UDP 67	DHCP server	From an AP IP Address pool to DHCP server.
ICMP	AP IP Address Pool	ICMP	DHCP server	From an AP IP Address pool to ICMP for troubleshooting.
Any	AP IP Address Pool	514	Various	Syslog—Destination configurable. Default is 255.255.255.255.
Any	AP IP Address Pool	UDP 69/5246/5247/5248	Cisco Wireless Controller	From an AP IP Address pool to Cisco Wireless Controller for CAPWAP.
ICMP	AP IP Address Pool	ICMP	Cisco Wireless Controller	From an AP IP Address pool to Cisco Wireless Controller, allowing ping for troubleshooting.

Table 15: ISE Traffic

Source Port ⁴	Source	Destination Port	Destination	Description
Any	ISE	TCP 64999	Border	From ISE to border node for SGT Exchange Protocol (SXP)

Any	ISE	UDP 514	Cisco DNA Center	From ISE to syslog server (Cisco DNA Center)
UDP 1645/1646/1812/1813	ISE	Any	Fabric underlay	From ISE to fabric switches and routers for RADIUS and authorization
Any	ISE	UDP 1700/3799	Fabric underlay	From ISE to fabric switch and router loopback IP addresses for CoA
ICMP	ISE	ICMP	Fabric underlay	From ISE to fabric switches for troubleshooting
Any	ISE	UDP 123	NTP Server	From ISE to NTP server
UDP 1812/1645/1813/1646	ISE	Any	Cisco Wireless Controller	From ISE to Cisco Wireless Controller for RADIUS
ICMP	ISE	ICMP	Cisco Wireless Controller	From ISE to Cisco Wireless Controller for troubleshooting

⁴ Note: High availability and profiling traffic are not included in this table.

Table 16: DHCP Server Traffic

Source Port	Source	Destination Port	Destination	Description
UDP 67	DHCP server	UDP 68	AP IP Address Pool	From DHCP server to fabric APs
ICMP	DHCP server	ICMP	AP IP Address Pool	ICMP for troubleshooting: Fabric to DHCP
UDP 67	DHCP server	UDP 68	Fabric underlay	From DHCP to fabric switches and routers
ICMP	DHCP server	ICMP	Fabric underlay	ICMP for troubleshooting: Fabric to DHCP
UDP 67	DHCP server	UDP 68	User IP Address Pool	From DHCP server to fabric switches and routers
ICMP	DHCP server	ICMP	User IP Address Pool	ICMP for troubleshooting: User to DHCP

Table 17: NTP Server Traffic

Source Port	Source	Destination Port	Destination	Description
UDP 123	NTP Server	Any	ISE	From NTP server to ISE
UDP 123	NTP Server	Any	Cisco DNA Center	From NTP server to Cisco DNA Center
UDP 123	NTP Server	Any	Fabric underlay	From NTP server to fabric switch and router loopback

UDP 123	NTP Server	Any	Cisco Wireless Controller	From NTP server to Cisco Wireless Controller
---------	------------	-----	---------------------------	--

Table 18: DNS Traffic

Source Port	Source	Destination Port	Destination	Description
UDP 53	DNS Server	Any	Fabric underlay	From DNS server to fabric switches
UDP 53	DNS Server	Any	Cisco Wireless Controller	From DNS server to Cisco Wireless Controller

Required Configuration Information

During appliance configuration, you will be prompted for the following information, in addition to the [Required IP Addresses and Subnets](#):

- **Linux User Name:** This is **maglev**. This user name is the same on all the appliances in a cluster, including the primary node and secondary nodes, and cannot be changed.
- **Linux Password:** Identifies the password for the Linux user name **maglev**. This password ensures secure access to each appliance using the Linux command line. If required, you can assign a different Linux password for each **maglev** Linux user name on each appliance in a cluster.

You must create the Linux password because there is no default. The password must meet the following requirements:

- Minimum length of eight characters.
- Should not contain a tab or a line break.
- Contains characters from at least three of the following categories:
 - Upper case alphabets
 - Lower case alphabets
 - Numerals
 - Special characters (for example, ! or #)

The Linux password is encrypted and hashed in the Cisco DNA Center database. If you are deploying a multinode cluster, you will also be prompted to enter the primary node's Linux password on each of the secondary nodes.

- **Password Generation Seed (Optional):** Instead of creating a Linux password, you can enter a seed phrase and click **Generate Password**. The **Maglev Configuration** wizard generates a random and secure password using this seed phrase. You can further edit the generated password by using the **Auto Generated Password** field.
- **Administrator Passphrase:** Identifies the password used for web access to Cisco DNA Center in a cluster. This is the password for the superuser account **admin**, which you use to log in to Cisco DNA

Center for the first time (see [Complete the Quick Start Workflow, on page 191](#)). You are prompted to change this password when you log in for the first time.

You must create this password because there is no default. The Administrator Passphrase must meet the same requirements as the Linux password, described earlier.

- **Cisco IMC User Password:** Identifies the password used for access to the Cisco IMC GUI. The factory default is *password*, but you are prompted to change it when you first set up Cisco IMC for access using a web browser (see [Enable Browser Access to Cisco Integrated Management Controller](#)).

The Cisco IMC user password must meet the same requirements as the Linux password described earlier. It can be changed back to *password* only by a reset to factory defaults.

- **Primary Node IP Address:** Required only when you are installing secondary nodes in a cluster. This is the IP address of the cluster port on the primary node (see [Interface Cable Connections](#)).

Required First-Time Setup Information

After you have configured your appliances, log in to Cisco DNA Center and complete the essential setup tasks. During this first-time setup, you should have the following information:

- **New Admin Superuser Password:** You will be prompted to enter a new password for the Cisco DNA Center admin super user. Resetting the super user password enhances operational security. This is especially important if, for example, the enterprise staff who installed and configured the Cisco DNA Center appliance is not a Cisco DNA Center user or administrator.
- **Cisco.com Credentials:** The Cisco.com user ID and password that your organization uses to register software downloads and receive system communications through email.
- **Cisco Smart Account Credentials:** The Cisco.com Smart Account user ID and password your organization uses for managing your device and software licenses.
- **IP Address Manager URL and Credentials:** The host name, URL, admin user name, and admin password of the third-party IP address manager (IPAM) server you plan to use with Cisco DNA Center. This release supports InfoBlox and Bluecat.
- **Proxy URL, Port, and Credentials:** The URL (host name or IP address), port number, user name, and user password of the proxy server you plan to use with Cisco DNA Center in order to get updates to the Cisco DNA Center software, manage device licenses, and retrieve other downloadable content.
- **Cisco DNA Center Users:** User names, passwords, and privilege settings for the new Cisco DNA Center users you will be creating. We recommend that you always use one of these new user accounts for all your normal Cisco DNA Center operations. Avoid using the admin super user account for activities, except reconfiguring Cisco DNA Center and operations where super user privileges are explicitly required.

For details about how to launch and respond to the first-time setup wizard that prompts you for this information, see [Complete the Quick Start Workflow, on page 191](#).

You will also need the following information to complete the remaining setup tasks, which can be done after your first login:

- **ISE Server IP and Credentials:** You will need the Cisco ISE server IP address and credentials, administrative user name, and password. These are needed to log in to and configure your organization's

ISE server to share data with Cisco DNA Center, as explained in [Integrate Cisco ISE with Cisco DNA Center](#).

Installation of or upgrade to Cisco DNA Center checks to see if Cisco ISE is configured as an authentication and policy (AAA) server. If the correct version of Cisco ISE is already configured, you can start migrating group policy data from Cisco ISE to Cisco DNA Center.

If Cisco ISE is not configured, or if the required version of Cisco ISE is not present, Cisco DNA Center installs, but Group Based Policy is disabled. You must install or upgrade Cisco ISE and connect it to Cisco DNA Center. You can then start the data migration.

Cisco DNA Center data present in the previous version is preserved when you upgrade. The data migration operation merges data from Cisco DNA Center and Cisco ISE. If the migration encounters a conflict, preference is given to data from Cisco ISE.

If Cisco DNA Center becomes unavailable, and it is imperative to manage policies before Cisco DNA Center becomes available once more, there is an option in Cisco ISE to override the Read-Only setting. This allows you to make policy changes directly in Cisco ISE. After Cisco DNA Center is available again, you must disable the Read-Only override on Cisco ISE, and re-synchronize the policy data on Cisco DNA Center Group Based Access Control Settings page. Only use this option when absolutely necessary, since changes made directly in Cisco ISE are not propagated to Cisco DNA Center.

- **Authorization and Policy Server Information:** If you are using Cisco ISE as your authentication and policy server, you will need the same information listed in the previous bullet, plus the ISE CLI user name, CLI password, server FQDN, a subscriber name (such as *cdnac*), the ISE SSH key (optional), the protocol choice (RADIUS or TACACS), the authentication port, the accounting port, and retry and timeout settings.

If you are using an authorization and policy server that is not Cisco ISE, you will need the server's IP address, protocol choice (RADIUS or TACACS), authentication port, accounting port, and retry and timeout settings.

This information is required to integrate Cisco DNA Center with your chosen authentication and policy server, as explained in [Configure Authentication and Policy Servers, on page 201](#).

- **SNMP Retry and Timeout Values:** This is required to set up device polling and monitoring, as explained in [Configure SNMP Properties](#).



CHAPTER 3

Install the Appliance

- [Appliance Installation Workflow](#), on page 45
- [Unpack and Inspect the Appliance](#), on page 45
- [Review the Installation Warnings and Guidelines](#), on page 46
- [Review the Rack Requirements](#), on page 48
- [Connect and Power On the Appliance](#), on page 48
- [Check the LEDs](#), on page 49

Appliance Installation Workflow

Complete the tasks described in this chapter to physically install your Cisco DNA Center appliance. Complete these tasks for each appliance you want to install, and be sure to install all of the appliances before configuring the primary node.

After you have completed all of these tasks successfully, continue with the steps described in [Preparation for Appliance Configuration Overview](#).

Unpack and Inspect the Appliance



Caution

When handling internal appliance components, wear an ESD strap and handle modules by the carrier edges only.

-
- Step 1** Remove the appliance from its cardboard container and save all the packaging material (in case the appliance requires shipping in the future).
- Step 2** Compare the shipment with the equipment list provided by your customer service representative. Verify that you have all the items.
- Step 3** Check for damage and report discrepancies or damage, if any, to your customer service representative immediately. Have the following information ready:
- Invoice number of the shipper (see the packing slip)
 - Model and serial number of the damaged unit

- Description of damage
- Effect of damage on the installation

Review the Installation Warnings and Guidelines

**Note**

Before you install, operate, or service a server, review the [Regulatory Compliance and Safety Information for Cisco UCS C-Series Servers](#) for important safety information.

**Warning****IMPORTANT SAFETY INSTRUCTIONS**

This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Use the statement number provided at the end of each warning to locate its translation in the translated safety warnings that accompanied this device.

Statement 1071

**Warning**

To prevent the system from overheating, do not operate it in an area that exceeds the maximum recommended ambient temperature of: 95°F (35°C).

Statement 1047

**Warning**

The plug-socket combination must be accessible at all times, because it serves as the main disconnecting device.

Statement 1019

**Warning**

This product relies on the building's installation for short-circuit (overcurrent) protection. Ensure that the protective device is rated not greater than: 250 V, 15 A. Statement 1005

**Warning**

Installation of the equipment must comply with local and national electrical codes.

Statement 1074

**Warning**

This unit is intended for installation in restricted access areas. A restricted access area can be accessed only through the use of a special tool, lock, and key, or other means of security.

Statement 1017

The following four warnings are specific to the 112-core appliance:

**Warning**

This equipment must be grounded. Never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor. Contact the appropriate electrical inspection authority or an electrician if you are uncertain that suitable grounding is available.

Statement 1024

**Warning**

For Nordic countries (Norway, Finland, Sweden and Denmark) this system must be installed in a Restricted Access Location, where the voltage of the main ground connection of all equipment is the same (equipotential earth) and the system is connected to a grounded electrical outlet.

Statement 328

**Warning**

High leakage current – earth connection essential before connection to system power supply.

Statement 342

**Warning**

This equipment must be externally grounded using a customer-supplied ground wire before power is applied. Contact the appropriate electrical inspection authority or an electrician if you are uncertain that suitable grounding is available.

Statement 366

**Caution**

To ensure proper airflow, it is necessary to rack the appliances using rail kits. Physically placing the units on top of one another or *stacking* without the rail kits blocks the air vents on top of the appliances, which could result in overheating, higher fan speeds, and higher power consumption. We recommend that you mount your appliances on rail kits when you are installing them into the rack because these rails provide the minimal spacing required between the appliances. No additional spacing between the appliances is required when you mount the units using rail kits.

**Caution**

Avoid UPS models that use ferroresonant technology. These UPS models can become unstable with systems such as the Cisco UCS, which can have substantial current-draw fluctuations because of fluctuating data traffic patterns.

When you install an appliance, follow these guidelines:

- Plan your site configuration and prepare the site before installing the appliance. See the [Cisco UCS Site Preparation Guide](#) for help with the recommended site planning and preparation tasks.
- Ensure that there is adequate space around the appliance to enable servicing, and for adequate airflow. The airflow in this appliance is from front to back.
- Ensure that the site's air-conditioning meets the thermal requirements listed in [Environmental Specifications](#).
- Ensure that the cabinet or rack meets the requirements listed in [Review the Rack Requirements](#).
- Ensure that the site's power meets the requirements listed in [Power Specifications](#). If available, use a UPS to protect against power failures.

Review the Rack Requirements

For proper operation, the rack in which you install the appliance must meet the following requirements:

- A standard 19-in. (48.3-cm) wide, four-post EIA rack, with mounting posts that conform to English universal hole spacing, per section 1 of ANSI/EIA-310-D-1992.
- The rack post holes can be square 0.38-in. (9.6 mm), round 0.28-in. (7.1 mm), #12-24 UNC, or #10-32 UNC when you use the supplied slide rails.
- The minimum vertical rack space per server must be:
 - For the 44 and 56-core appliance, one RU, which equals 1.75 in. (44.45 mm).
 - For the 112-core appliance, four RUs, which equals 7.0 in. (177.8 mm).

Connect and Power On the Appliance

This section describes how to power on the appliance and check that it is functional.

Step 1 Attach the supplied power cord to each power supply in the appliance and then attach the power cords to a grounded AC power outlet. See [Power Specifications](#) for details.

Wait for approximately two minutes to let the appliance boot into standby power mode during the first boot up.


The Power Status LED indicates the appliance's power status:

- Off: There is no AC power present in the appliance.
- Amber: The appliance is in standby power mode. Power is supplied only to the CIMC and some motherboard functions.
- Green: The appliance is in main power mode. Power is supplied to all the appliance components.

For more information on these and other appliance LEDs, see [Front and Rear Panels](#).

LED	Desired Status Indicator
1	<ul style="list-style-type: none"> • Drive Fault LEDs: Off • Drive Activity LEDs: Green
2	Power Status: Green
3	Unit identification: Off
4	System Status: Green
5	Power Supply Status: Green
6	Fan Status: Green
7	Network Link Activity: Off
8	Temperature Status: Green


Figure 10: 112-Core Appliance Front Panel LEDs

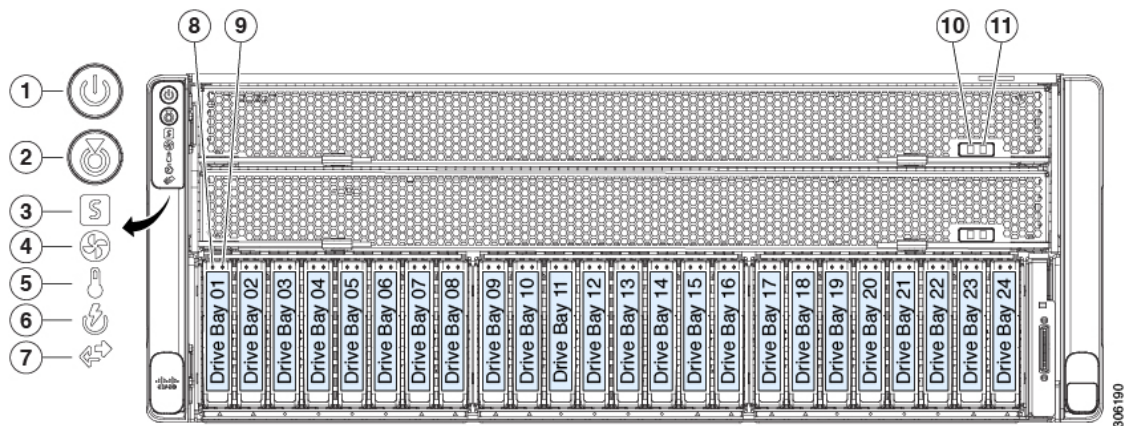

LED	Desired Status Indicator
1	Power Status: Green
2	Unit identification: Off
3	System Status: Green
4	Fan Status: Green
5	Temperature Status: Green
6	Power Supply Status: Green
7	Network Link Activity: Off
8	Drive Fault LEDs: Off


LED	Desired Status Indicator
9	Drive Activity LEDs: Green
10	CPU module power status: Green
11	CPU module fault: Off

Figure 11: 44 and 56-Core Appliance Rear Panel LEDs

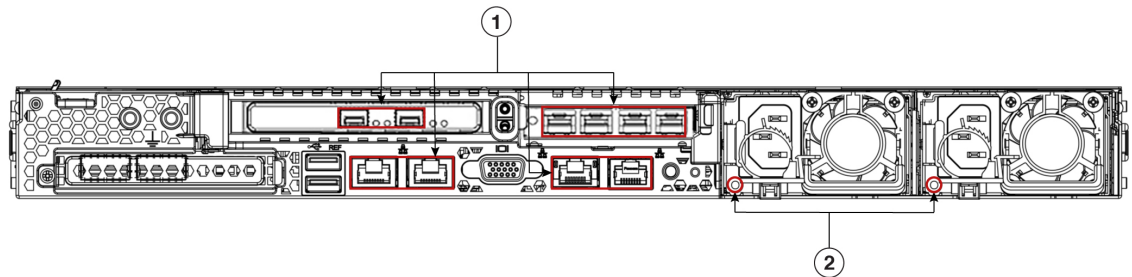

LED	Desired Status Indicator
1	<p>After initial power-up, all the ports should have their Link Status and Link Speed LEDs showing as off.</p> <p>After network settings are configured and tested using either the Maglev Configuration wizard (see Configure the Primary Node Using the Maglev Wizard and Configure a Secondary Node Using the Maglev Wizard) or browser-based configuration wizard (see Configure the Primary Node Using the Expert Configuration Wizard, on page 112 and Configure a Secondary Node Using the Expert Configuration Wizard, on page 128), the Link Status and Link Speed LEDs for all cabled ports should be green. The LED for all uncabled ports should remain unchanged.</p>
2	AC Power Supply Status LEDs: Green

Figure 12: 112-Core Appliance Rear Panel LEDs

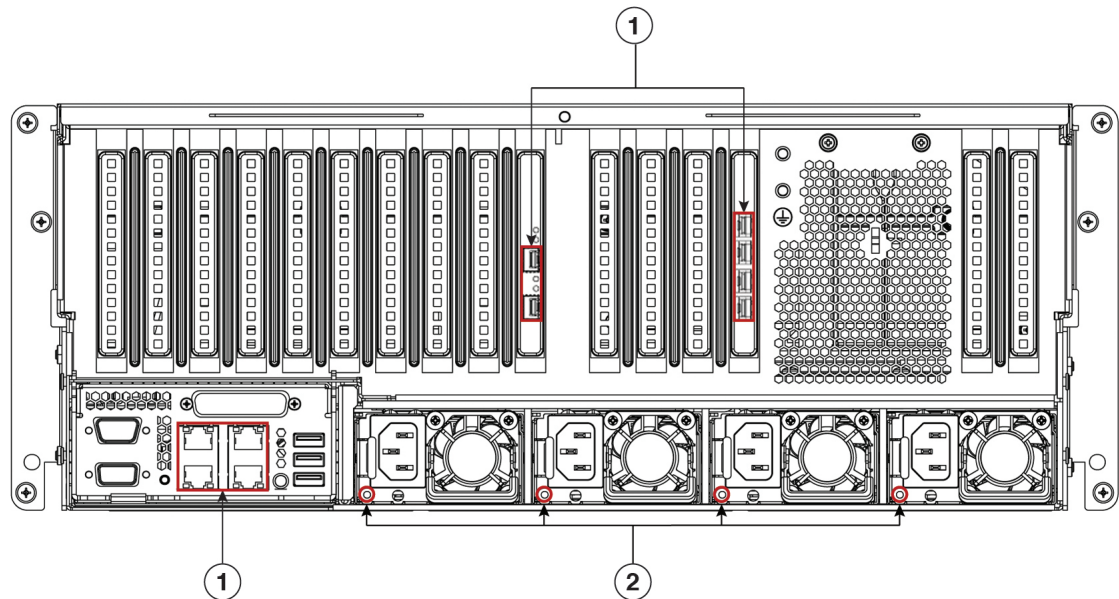

LED	Desired Status Indicator
1	<p>After initial power-up, all the ports should have their Link Status and Link Speed LEDs showing as off.</p> <p>After network settings are configured and tested using either the Maglev Configuration wizard (see Configure the Primary Node Using the Maglev Wizard and Configure a Secondary Node Using the Maglev Wizard) or browser-based configuration wizard (see Configure the Primary Node Using the Expert Configuration Wizard, on page 150 and Configure a Secondary Node Using the Expert Configuration Wizard, on page 169), the Link Status and Link Speed LEDs for all cabled ports should be green. All uncabled port LEDs should be unchanged.</p>
2	AC Power Supply Status LEDs: Green

If you see LEDs with colors other than those shown above, you may have a problem condition. See [Front and Rear Panels](#) for details on the likely causes of the status. Be sure to correct any problem conditions before proceeding to configure the appliance.



CHAPTER 4

Prepare the Appliance for Configuration

- [Preparation for Appliance Configuration Overview](#), on page 53
- [Enable Browser Access to Cisco Integrated Management Controller](#), on page 54
- [Execute Preconfiguration Checks](#), on page 59
- [NIC Bonding Overview](#), on page 62
- [Reimage the Appliance](#), on page 69
- [Cisco DNA Center Appliance Configuration](#), on page 73

Preparation for Appliance Configuration Overview

Before you can successfully configure your Cisco DNA Center appliance, first complete the following tasks:

1. Enable browser access to the appliance's Cisco IMC (see [Enable Browser Access to Cisco Integrated Management Controller](#)).
2. Use Cisco IMC to check and adjust important hardware and switch settings (see [Execute Preconfiguration Checks](#)).
3. If the Intel X710-DA4 network interface card (NIC) that shipped with your appliance is currently disabled, you need to enable it in order to make use of NIC bonding (see [Enable NIC on an Upgraded Appliance](#), on page 63).
4. Cisco DNA Center software is preinstalled on your appliance, but you may need to reinstall the software in certain situations (such as before you change the current cluster link configuration). If this is the case, you must also complete the tasks described in [Reimage the Appliance](#).



Note

If you do not need to reimage your appliance, proceed to the "Appliance Configuration Overview" topic specific to the configuration wizard you want to use:

- [Appliance Configuration Overview](#)
- [Appliance Configuration Overview](#)
- [Appliance Configuration Overview](#)

Enable Browser Access to Cisco Integrated Management Controller

After installing the appliance, as described in [Appliance Installation Workflow](#), use the Cisco IMC configuration utility to assign an IP address and gateway to the appliance's CIMC port. This gives you access to the Cisco IMC GUI, which you should use to configure the appliance.

After you complete the Cisco IMC setup, log in to Cisco IMC and run the tasks listed in [Execute Preconfiguration Checks](#) to ensure correct configuration.



Tip To help ensure the security of your deployment, Cisco IMC prompts you to change the Cisco IMC user's default password when you boot the appliance for the first time. To change the Cisco IMC user password later, use the Cisco IMC GUI, as follows:

1. From the top-left corner of the GUI, click the **Toggle Navigation** icon () and then choose **Admin > User Management**.

The **Local User Management** tab should already be selected.

2. Check the check box for user **1**, and then click **Modify User**.

The **Modify User Details** dialog box opens.

3. Check the **Change Password** check box.
4. Enter and confirm the new password, and then click **Save**.


Step 1 Access the appliance console by attaching either of the following:

- A KVM cable to the KVM connector on the appliance's front panel (component 11 on the front panel illustrated in [Front and Rear Panels](#))
- A keyboard and monitor to the USB and VGA ports on the appliance's rear panel (components 2 and 5, respectively, on the rear panel illustrated in [Front and Rear Panels](#)).

Step 2 Make sure that the appliance's power cord is plugged in and the power is on.

Step 3 Press the **Power** button on the front panel to boot the appliance.

The Cisco IMC configuration utility boot screen should be displayed, as shown below.

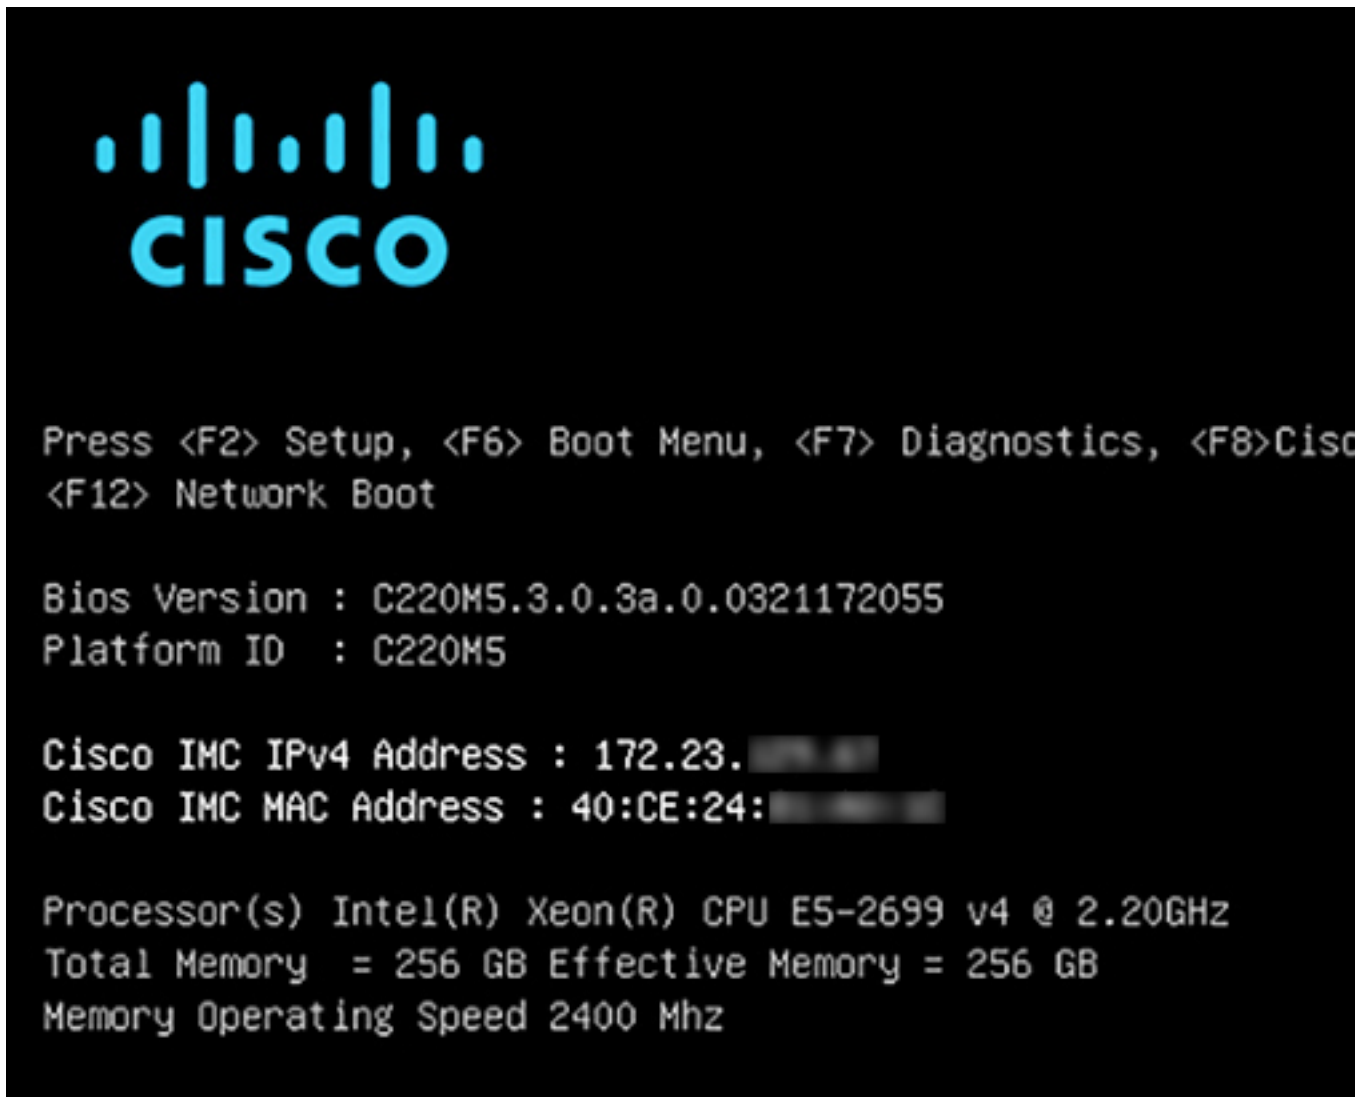**Step 4**

As soon as the boot screen is displayed, press **F8** to perform Cisco IMC configuration.

The CIMC configuration utility displays the **CIMC User Details** screen, as shown below.

The image shows a blue terminal window titled "CIMC User Details (Press Enter to Save / Continue)". It contains three prompts for password entry: "Enter current CIMC password", "Enter new CIMC password", and "Re-Enter new CIMC password". Each prompt has a corresponding input field. A vertical text "355626" is visible on the right side of the screen.

Step 5

Enter the default CIMC user password (the default on a new appliance is *password*) in the **Enter current CIMC Password** field.

Step 6 Enter and confirm the new CIMC user password in the **Enter new CIMC password** and **Re-Enter new CIMC password** fields.

When you press **Enter** after entering the new password in the **Re-Enter new CIMC password** field, the Cisco IMC configuration utility displays the **NIC Properties** screen, as shown below.

```

Cisco IMC Configuration Utility Version 2.0 Cisco Systems, Inc.
*****
NIC Properties
NIC mode                                NIC redundancy
Dedicated: [X]                          None: [X]
Shared LOM: [ ]                          Active-standby: [ ]
Cisco Card:                             Active-active: [ ]
  Riser1: [ ]                            VLAN (Advanced)
  Riser2: [ ]                          VLAN enabled: [ ]
  MLom: [ ]                            VLAN ID: 1
Shared LOM Ext: [ ]                     Priority: 0
IP (Basic)
IPV4: [X]                               IPV6: [ ]
DHCP enabled [ ]
CIMC IP: 172.23. [ ]
Prefix/Subnet: 255.255.0.0
Gateway: 172.23. [ ]
Pref DNS Server: 171.70. [ ]

*****
<Up/Down>Selection  <F10>Save  <Space>Enable/Disable  <F5>Refresh  <ESC>Exit
<F1>Additional settings

```

Step 7 Perform the following actions:

- **NIC mode:** Select **Dedicated**.
- **IP (Basic):** Select **IPV4**.
- **CIMC IP:** Enter the IP address of the CIMC port.
- **Prefix/Subnet:** Enter the subnet mask for the CIMC port IP address.
- **Gateway:** Enter the IP address of your preferred default gateway.
- **Pref DNS Server:** Enter the IP address of your preferred DNS server.
- **NIC Redundancy:** Select **None**.

Step 8 Press **F1** to specify **Additional settings**.

The Cisco IMC configuration utility displays the **Common Properties** screen, as shown below.

```

Cisco IMC Configuration Utility Version 2.0 Cisco Systems, Inc.
*****
Common Properties
Hostname: C220-FCH212
Dynamic DNS: [ ]
DDNS Domain:
FactoryDefaults
Factory Default: [ ]
Default User(Basic)
Default password:
Reenter password:
Port Properties
Auto Negotiation: [X]
Admin Mode      Operation Mode
Speed[1000/100/10Mbps]:      Auto      1000
Duplex mode[half/full]:      Auto      full
Port Profiles
Reset: [ ]
Name:
*****
<Up/Down>Selection  <F10>Save  <Space>Enable/Disable  <F5>Refresh  <ESC>Exit
<F2>PreviousPageetings

```

Step 9

Perform the following actions:

- **Hostname:** Enter a hostname for CIMC on this appliance.
- **Dynamic DNS:** Uncheck the check box to disable this feature.
- **Factory Defaults:** Uncheck the check box to disable this feature.
- **Default User (Basic):** Leave these fields blank.
- **Port Properties:** Enter new settings or accept the defaults shown in these fields.
- **Port Profiles:** Uncheck the check box to disable this feature.

Step 10

Press **F10** to save the settings.

Step 11

Press **Escape** to exit and reboot the appliance.

Step 12

After the settings are saved and the appliance finishes rebooting, open a compatible browser on a client machine with access to the subnet on which the appliance is installed, and enter the following URL:

https://CIMC_ip_address, where **CIMC_ip_address** is the Cisco IMC port IP address that you entered in Step 7.

Your browser displays a main Cisco IMC GUI login window similar to the one shown below.

**Step 13**

Log in using the Cisco IMC user ID and password you set in Step 5.

If the login is successful, your browser displays a **Cisco Integrated Management Controller Chassis Summary** window similar to the one shown below.

Server Properties

Product Name:	Hostname: C220-FCH212
Serial Number: FCH212	IP Address: 172. .223
PID: DN2-HW-APL	MAC Address: 70:69: :48
UUID: AF0FF4C-638C-4EC8-AB03-	Firmware Version: 3.1(2c)
BIOS Version: C220M5.3.1.2b.0.1025170315	Current Time (UTC): Thu May 16 51 2019
Description:	Local Time: Thu May 16 51 2019 UTC +0000
Asset Tag: Unknown	Timezone: UTC Select Timezone

Chassis Status

Power State: ● On
Overall Server Status: ✓ Good
Temperature: ✓ Good
Overall DIMM Status: ✓ Good
Power Supplies: ✓ Good
Fans: ✓ Good
Locator LED: ● Off
Overall Storage Status: ✓ Good

Server Utilization

Overall Utilization (%): N/A
CPU Utilization (%): N/A
Memory Utilization (%): N/A
IO Utilization (%): N/A

Execute Preconfiguration Checks

After installing the appliance (as described in [Appliance Installation Workflow](#)) and setting up access to the Cisco IMC GUI (as described in [Enable Browser Access to Cisco Integrated Management Controller](#)), use Cisco IMC to perform the following preconfiguration tasks, which help ensure correct configuration and deployment:

1. Synchronize the appliance hardware with the Network Time Protocol (NTP) servers you use to manage your network. These must be the same NTP servers whose hostnames or IPs you gathered for use when planning your implementation, as explained in [Required IP Addresses and Subnets](#). This is a critical task that ensures that your Cisco DNA Center data is synchronized properly across the network.
2. Reconfigure the switches connected to the 10-Gbps appliance ports to support higher throughput settings.

Step 1

Log in to the appliance's Cisco IMC using the Cisco IMC IP address, user ID, and password you set in [Enable Browser Access to Cisco Integrated Management Controller](#).

If the login is successful, your browser displays the **Cisco Integrated Management Controller Chassis Summary** window, as shown below.

The screenshot displays the Cisco Integrated Management Controller (IMC) Chassis Summary page. The page is divided into several sections:

- Server Properties:**
 - Product Name: FCH212
 - Serial Number: FCH212
 - PID: DN2-HW-APL
 - UUID: AF0FF4C-638C-4EC8-AB03-
 - BIOS Version: C220M5.3.1.2b.0.1025170315
 - Description: (empty field)
 - Asset Tag: Unknown
- Cisco Integrated Management Controller (Cisco IMC) Information:**
 - Hostname: C220-FCH212
 - IP Address: 172.223
 - MAC Address: 70:69:48
 - Firmware Version: 3.1(2c)
 - Current Time (UTC): Thu May 16 51 2019
 - Local Time: Thu May 16 51 2019 UTC +0000
 - Timezone: UTC
- Chassis Status:**
 - Power State: On
 - Overall Server Status: Good
 - Temperature: Good
 - Overall DIMM Status: Good
 - Power Supplies: Good
 - Fans: Good
 - Locator LED: Off
 - Overall Storage Status: Good
- Server Utilization:**
 - Overall Utilization (%): N/A
 - CPU Utilization (%): N/A
 - Memory Utilization (%): N/A
 - IO Utilization (%): N/A

Step 2

Synchronize the appliance's hardware with the Network Time Protocol (NTP) servers you use to manage your network, as follows:

- a) From the top-left corner of the Cisco IMC GUI, click the **Toggle Navigation** icon (☰).
- b) From the Cisco IMC menu, select **Admin > Networking**, and then choose the **NTP Setting** tab.
- c) Make sure that the **NTP Enabled** check box is checked and enter up to four NTP server host names or addresses in the numbered **Server** fields, as shown in the example below.

Cisco Integrated Management Controller

admin@1 -C220-FCH212

Refresh | Host Power | Launch KVM | Ping | CIMC Reboot | Locator LED

Network | Network Security | **NTP Setting**

NTP Properties

NTP Enabled: ☒

Server 1: 1.ntp.example.com

Server 2: 2.ntp.example.com

Server 3: 3.ntp.example.com

Server 4:

Status: NTP service disabled

Save Changes | Reset Values

- d) Click **Save Changes**. Cisco IMC validates your entries and then begins to synchronize the time on the appliance's hardware with the time on the NTP servers.

Note Unlike the previous generation of Cisco DNA Center appliances, second generation appliances do not use a virtual interface card (VIC). You do not need to configure the network interface card (NIC) that comes installed on your second generation appliance to support high throughput in Cisco IMC, as this is already enabled by default.

Step 3 Reconfigure your switches to match the high-throughput settings on the appliance, as follows:

- Using a Secure Shell (SSH) client, log in to the switch to be configured and enter EXEC mode at the switch prompt.
- Configure the switch port.

On a Cisco Catalyst switch, enter the following commands. For example:

```
MySwitch#Config terminal
MySwitch(config)#interface tengigabitethernet 1/1/3
MySwitch(config-if)#switchport mode access
MySwitch(config-if)#switchport access vlan 99
MySwitch(config-if)#speed auto
MySwitch(config-if)#duplex full
MySwitch(config-if)#mtu 1500
MySwitch(config-if)#no shut
MySwitch(config-if)#end
MySwitch(config)#copy running-config startup-config
```

On a Cisco Nexus switch, enter the following commands to disable Link Layer Discovery Protocol (LLDP) and priority flow control (PFC). For example:

```
N7K2# configure terminal
N7K2(config)# interface eth 3/4
N7K2(config-if)# no priority-flow-control mode auto
N7K2(config-if)# no lldp transmit
N7K2(config-if)# no lldp receive
```

Note the following:

- These commands are examples only.
 - The switch port on Cisco DNA Center second generation appliances must be set to access mode in order to function properly. Trunk mode is not supported, as it is on first generation appliances.
- c) Run the `show interface tengigabitethernet portID` command and verify that the port is connected, running, and has the correct MTU, duplex, and link-type settings in the command output. For example:

```
MySwitch#show interface tengigabitethernet 1/1/3
TenGigabitEthernet1/1/3 is up, line protocol is up (connected)
  Hardware is Ten Gigabit Ethernet, address is XXXe.310.8000 (bia XXX.310.8000)
  MTU 1500 bytes, BW 10000000 Kbit/sec, DLY 10 usec,
    reliability 255/255, txload 1/255, rxload 1/255
  Encapsulation ARPA, loopback not set
  Keepalive not set
  Full-duplex, 10GB/s, link type is auto, media type is SFP-10Gbase-SR
```

- d) Run the `show run interface tengigabitethernet portID` command to configure the switch ports where the cables from the Intel X710-DA2 NIC ports are connected. For example:

```
MySwitch#show run interface tengigabitethernet 1/1/3
Building configuration...
Current configuration : 129 bytes
! interface TenGigabitEthernet1/1/3
  switchport access vlan 99
  ip device tracking maximum 10
end
```

MySwitch#

- e) Run the `show mac address-table interface tengigabitethernet portID` command and verify the MAC address from the command output. For example:

```
MySwitch#show mac address-table interface tengigabitethernet 1/1/3
Mac Address Table
-----
Vlan    Mac Address      Type    Ports
----    -
99      xxxe.3161.1000   DYNAMIC Te1/1/3
Total Mac Addresses for this criterion: 1

MySwitch#
```

What to do next

When this task is complete, do one of the following:

- If you need to reinstall Cisco DNA Center software before you configure your appliance, see [Reimage the Appliance](#).
- If you are ready to configure your appliance, proceed to the "Appliance Configuration Overview" topic specific to the configuration wizard you want to use:
 - [Appliance Configuration Overview](#)
 - [Appliance Configuration Overview](#)

NIC Bonding Overview

On any given Cisco DNA Center appliance, you can configure the Enterprise, Intracluster, Management, and Internet interface. Starting with this release, Cisco DNA Center now supports network interface controller (NIC) bonding. If you enable NIC bonding on an appliance, each of these interfaces has two instances: The primary instance (located on either your appliance's motherboard or Intel X710-DA2 NIC) is connected to one switch, and the secondary instance (located on your appliance's Intel X710-DA4 NIC) is connected to a different switch. NIC bonding consolidates the two instances of each interface into a single logical interface, appearing as a single device with one MAC address. Depending on the bonding mode that you choose when configuring the interfaces on your appliance, this feature provides the following benefits when enabled:

- **Active-Backup mode:** By default, this is the bonding mode that's configured for your appliance's interfaces when this feature is enabled on your appliance. It enables high availability (HA) for the two interfaces that Cisco DNA Center has grouped together. When the interface that's currently active goes down, the other interface takes its place and becomes active.



Note When this mode is enabled on an interface that supports both 1-Gbps and 10-Gbps throughput, Cisco DNA Center automatically sets the throughput to 1-Gbps.

- **LACP mode:** When selected, the two interfaces that Cisco DNA Center has grouped together share the same speed and duplex settings. This provides load balancing and higher bandwidth for the interfaces. In order to enable this mode, the following items must first be in place:
 - The switch that is connected to the Enterprise port must support dynamic interface aggregation.
 - After you enable LACP on the switch, ensure that you have set the LACP mode to **active** (which places the switch port connected to your appliance into an active negotiating state, in which the port initiates negotiations with remote ports by sending LACP packets) and the LACP rate to **fast** (which changes the rate at which the LACP control packets are sent to an LACP-supported interface from the default every 30 seconds to once every second).



Note You can only enable LACP mode on your appliance's Enterprise and Intracluster interfaces. The Management and Internet Access interfaces only support Active-Backup mode.

Before you use NIC bonding in your production environment, you should do the following:

- Confirm that your appliance supports this feature. See [Appliance Support, on page 63](#).
- By default, the Intel X710-DA4 NIC is already enabled on new Cisco DNA Center appliances that have software version 2.2.1.0 installed. To enable this NIC on an appliance that you will upgrade from a previous Cisco DNA Center version, complete the steps described in [Enable NIC on an Upgraded Appliance, on page 63](#).
- Determine where the secondary ports are located on your appliance's rear panel. See [Front and Rear Panels, on page 4](#).
- View the recommended appliance–switch cabling. See [Interface Cable Connections, on page 22](#).

Appliance Support

All second-generation Cisco DNA Center appliances support NIC bonding:

- 44-core appliance: Cisco part number DN2-HW-APL
- 44-core promotional appliance: Cisco part number DN2-HW-APL-U
- 56-core appliance: Cisco part number DN2-HW-APL-L
- 56-core promotional appliance: Cisco part number DN2-HW-APL-L-U
- 112-core appliance: Cisco part number DN2-HW-APL-XL
- 112-core promotional appliance: Cisco part number DN2-HW-APL-XL-U

Enable NIC on an Upgraded Appliance

In order to enable the Intel X710-DA4 NIC on an appliance that you plan to upgrade to Cisco DNA Center 2.2.1.0 from a previous version, complete the following procedure.



Important

If you have a new appliance with Cisco DNA Center 2.2.1.0 installed, this NIC is already configured for use. You do *not* need to complete this procedure.

Step 1

Confirm that your appliance has the Intel X710-DA4 NIC installed.


- Log in to the appliance's Cisco IMC.
- In the **Summary** window's **Server Properties** area, confirm that the following values are set:
 - PID: **DN2-HW-APL** for a 44-core appliance, **DN2-HW-APL-L** for a 56-core appliance, or **DN2-HW-APL-XL** for a 112-core appliance (see the following example).
 - BIOS Version: This value should start with either **C220M5** for a 44 and 56-core appliance or **C480M5** for a 112-core appliance (see the following example).

Server Properties


Product Name:
 Serial Number: FCH224-
PID: DN2-HW-APL-XL
 UUID: 6FF202AA-EEF9-4DF4-9FE4-
 BIOS Version: **C480M5**4.0.1c.0.0706181854
 Description:
 Asset Tag: Unknown

Cisco Integrated Management Controller

Hostname: C480-FCH224-
 IP Address: 10.195.
 MAC Address: A8:B4:56:
 Firmware Version: 4.0(1a)
 Current Time (UTC): Wed Nov 6 18:51:54 2019
 Local Time: Wed Nov 6 10:51:54 2019 PST -08
 Timezone: America/Los_Angeles

- Choose  > **Chassis** > **Inventory** > **Network Adapters**.
- In the **Network Adapters** table, confirm that the Intel X710-DA4 Quad Port network adapter is listed for one of the following slots:

- For a 44 or 56-core appliance, **PCIe Slot 2**.
- For a 112-core appliance, **PCIe Slot 12** (see the following example).

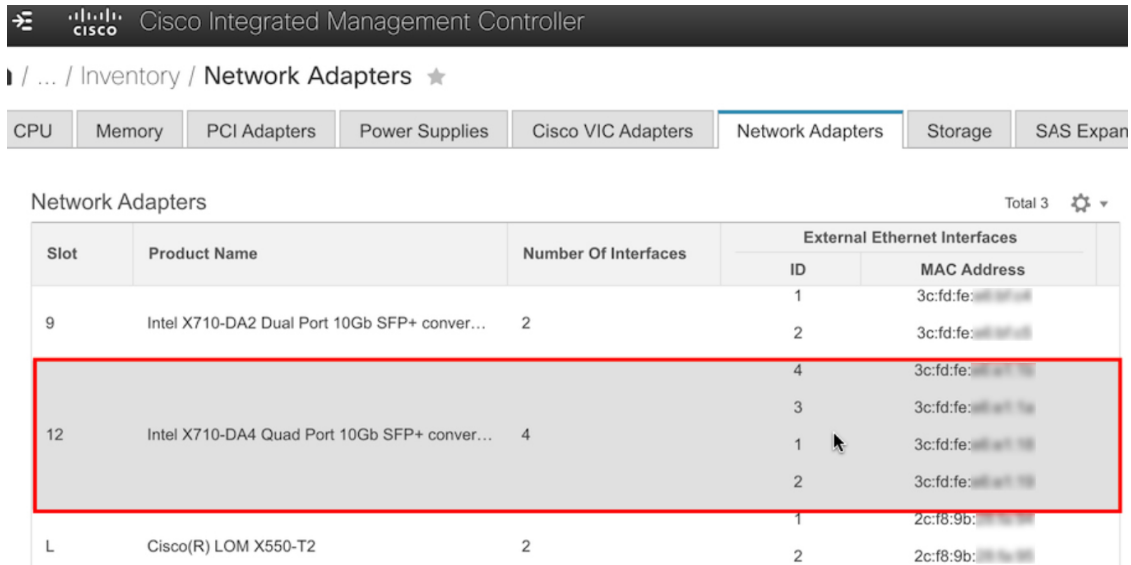

Cisco Integrated Management Controller

/ ... / Inventory / Network Adapters ★

CPU Memory PCI Adapters Power Supplies Cisco VIC Adapters Network Adapters Storage SAS Expansion

Network Adapters Total 3 ⚙

Slot	Product Name	Number Of Interfaces	External Ethernet Interfaces	
			ID	MAC Address
9	Intel X710-DA2 Dual Port 10Gb SFP+ conver...	2	1	3c:fd:fe:ad:80:00
			2	3c:fd:fe:ad:80:00
12	Intel X710-DA4 Quad Port 10Gb SFP+ conver...	4	4	3c:fd:fe:ad:80:00
			3	3c:fd:fe:ad:80:00
			1	3c:fd:fe:ad:80:00
			2	3c:fd:fe:ad:80:00
L	Cisco(R) LOM X550-T2	2	1	2c:f8:9b:00:00:00
			2	2c:f8:9b:00:00:00

Step 2 Confirm that the your appliance's PCIe card is enabled:

- a) Choose  > **Compute**.

The **BIOS > Configure BIOS > I/O** tab opens.

- b) If necessary, set the following parameters to **Enabled** and then click **Save**:
- For a 44 or 56-core appliance, **PCIe Slot 2 OptionROM** and **PCIe Slot 2 Link Speed**.
 - For a 112-core appliance, **PCIe Slot 12 OptionROM** and **PCIe Slot 12 Link Speed** (see the following example).

Cisco Integrated Management Controller

Home / Compute / BIOS

BIOS | Remote Management | Troubleshooting | Power Policies | PID Catalog

[Enter BIOS Setup](#) | [Clear BIOS CMOS](#) | [Restore Manufacturing Custom Settings](#) | [Restore Defaults](#)

Configure BIOS | Configure Boot Order | Configure BIOS Profile

I/O | Server Management | Security | Processor | Memory | Power/Performance

Note: Default values are shown in bold.

Reboot Host Immediately: ☐

Intel VT for directed IO:	Enabled	Legacy USB Support:	Enabled
Intel VTD ATS support:	Enabled	Intel VTD coherency support:	Disabled
LOM Port 1 OptionRom:	Enabled	All Onboard LOM Ports:	Enabled
Pcie Slot 1 OptionRom:	Enabled	LOM Port 2 OptionRom:	Enabled
Pcie Slot 3 OptionRom:	Enabled	Pcie Slot 2 OptionRom:	Enabled
Pcie Slot 5 OptionRom:	Enabled	Pcie Slot 4 OptionRom:	Enabled
Pcie Slot 7 OptionRom:	Enabled	Pcie Slot 6 OptionRom:	Enabled
Pcie Slot 9 OptionRom:	Enabled	Pcie Slot 8 OptionRom:	Enabled
Pcie Slot 11 OptionRom:	Enabled	Pcie Slot 10 OptionRom:	Enabled
RAID OptionRom:	Enabled	Pcie Slot 12 OptionRom:	Disabled
Front NVME 2 OptionRom:	Enabled	Front NVME 1 OptionRom:	Enabled
Front NVME 12 OptionRom:	Enabled	Front NVME 11 OptionRom:	Enabled
Front NVME 14 OptionRom:	Enabled	Front NVME 13 OptionRom:	Enabled
Front NVME 16 OptionRom:	Enabled	Front NVME 15 OptionRom:	Enabled
Front NVME 18 OptionRom:	Enabled	Front NVME 17 OptionRom:	Enabled
Front NVME 20 OptionRom:	Enabled	PCle Slot 12 Link Speed:	Disabled


c) Do one of the following:

- If you needed to set these two parameters to **Enabled** for your appliance, reboot your appliance and then proceed with its configuration. You do not need to complete the rest of this procedure.
- If you have a 112-core appliance and only see one of these parameters displayed in the **I/O** tab, proceed to Step 3 and complete the rest of this procedure.

Step 3


Boot into your appliance's BIOS:

- From Cisco IMC, start a KVM session.
- Power cycle the appliance by clicking the **Host Power** link and then choosing **Power Cycle**.
- During startup, press the **F2** key as soon as you see the following screen to boot into your appliance's BIOS and open the Aptio Setup Utility.

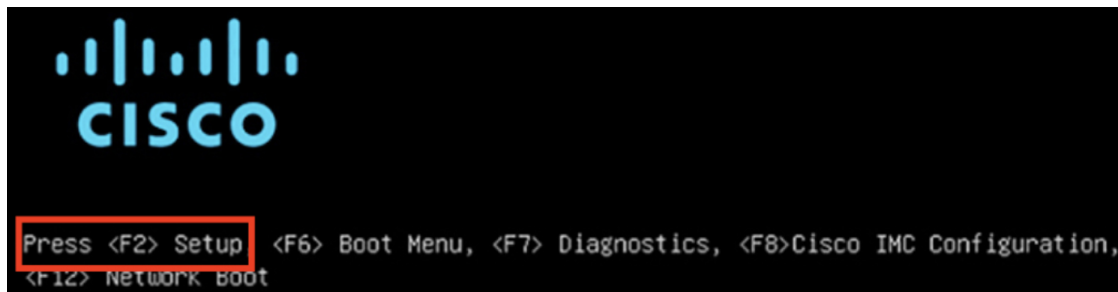


Step 4 Enable the PCIe card:

- a) From the Aptio Setup Utility's **Main** tab, open the **Advanced** tab and then choose **LOM and PCIe Slots Configuration**.

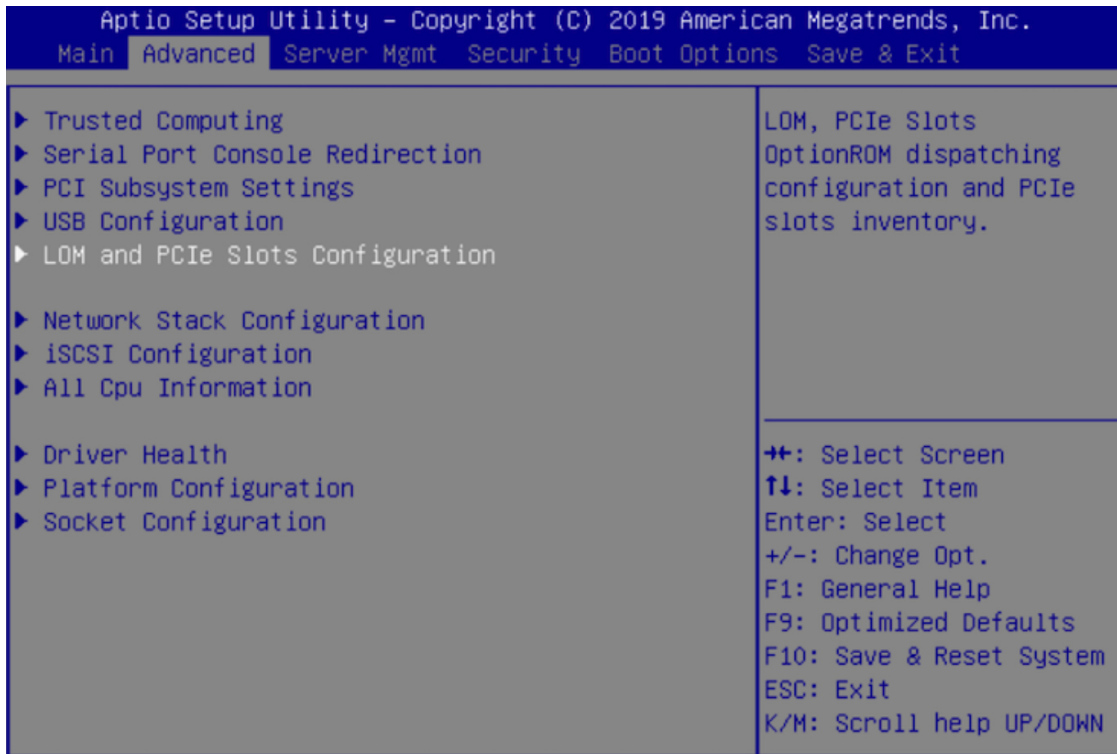


- b) In the **LOM and PCIe Slots Configuration** tab, choose **PCIE Link Speed Configuration**.

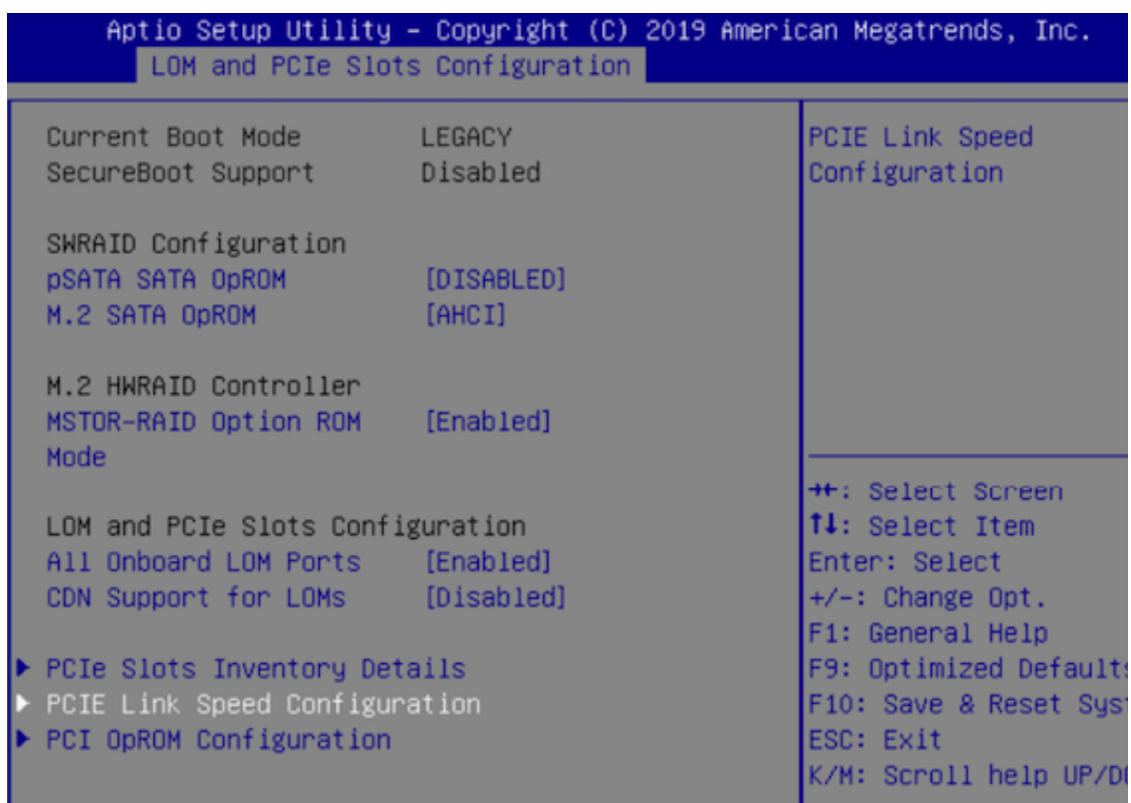


- c) In the **PCIe Link Speed Configuration** tab, scroll down to PCIe SlotID: 12's **Link Enable** option and then press **Enter**.
- d) Choose **Enable**, then press **ENTER**.

Your screen should look like the following example:

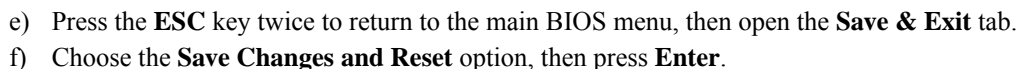

Your appliance reboots and opens the configuration wizard. Proceed with the configuration of your appliance.

Important After you have enabled your appliance's NIC, if you reset your appliance to the default settings in Cisco IMC ( > **Admin** > **Utilities** > **Reset to factory Default**), you will need to complete this procedure again.

Step 5 Upgrade to Cisco DNA Center 2.2.1.0.

In the [Cisco DNA Center Upgrade Guide](#), complete the upgrade procedure specific to your current version.

During the upgrade, Cisco DNA Center will prepare your appliance to use the Intel X710-DA4 NIC. After the upgrade completes and your appliance reboots, Cisco IMC recognizes this NIC and the four interfaces that reside on it. Counting the four interfaces located on the Intel X710-DA2 NIC and appliance motherboard, that makes a total of eight interfaces on your appliance.

Step 6 Complete the configuration wizard to finalize the use of the Intel X710-DA4 NIC on your appliance, as described in [Reconfigure the Appliance Using the Configuration Wizard, on page 206](#).

Reimage the Appliance

Situations that require you to reimage your Cisco DNA Center appliance, such as recovering from a backup or changing your cluster link configuration, might arise. To do so, complete the following procedure.

Step 1 Download the Cisco DNA Center ISO image and verify that it is a genuine Cisco image.

See [Verify the Cisco DNA Center ISO Image](#).

Step 2 Create a bootable USB drive that contains the Cisco DNA Center ISO image.

See [Create a Bootable USB Drive](#).

Step 3 Reinitialize the virtual drives that are managed by your appliance's RAID controller.

See [Reinitialize the Virtual Drives on a Cisco DNA Center Appliance, on page 72](#).

Step 4 Reinstall Cisco DNA Center onto your appliance.

See [Install the Cisco DNA Center ISO Image](#).

Verify the Cisco DNA Center ISO Image

Prior to deploying Cisco DNA Center, we strongly recommend that you to verify that the ISO image you downloaded is a genuine Cisco image.

Before you begin

Obtain the location of the Cisco DNA Center ISO image (through email or by contacting the Cisco support team).

-
- Step 1** Download the Cisco DNA Center ISO image (.iso) from the location specified by Cisco.
- Step 2** Download the Cisco public key (cisco_image_verification_key.pub) for signature verification from the location specified by Cisco.
- Step 3** Download the secure hash algorithm (SHA512) checksum file for the ISO image from the location specified by Cisco.
- Step 4** Obtain the ISO image's signature file (.sig) from Cisco support through email or by download from the secure Cisco website (if available).
- Step 5** (Optional) Perform an SHA verification to determine whether the ISO image is corrupted due to a partial download. Run one of the following commands (depending upon your operating system):
- On a Linux system: **sha512sum ISO-image-filename**
 - On a Mac system: **shasum -a 512 ISO-image-filename**
- Microsoft Windows does not include a built-in checksum utility, but you can install a utility from Microsoft at this link: <http://www.microsoft.com/en-us/download/details.aspx?id=11533>.
- Compare the output of the command you run (or Microsoft Windows utility) to the SHA512 checksum file downloaded in Step 3. If the command output fails to match, download the ISO image again and run the appropriate command a second time. If the output still fails to match, contact Cisco support.
- Step 6** Verify that the ISO image is genuine and from Cisco by verifying its signature:
- openssl dgst -sha512 -verify cisco_image_verification_key.pub -signature signature-filename ISO-image-filename**
- Note** This command works in both MAC and Linux environments. For Windows, you need to download and install OpenSSL (available [here](#)) if you have not already done so.
- If the ISO image is genuine, running this command should display a `Verified OK` message. If this message fails to appear, do not install the ISO image and contact Cisco support.
- Step 7** After confirming that you have downloaded a Cisco ISO image, create a bootable USB drive that contains the Cisco DNA Center ISO image. See [Create a Bootable USB Drive](#).
-

Create a Bootable USB Drive

Complete one of the following procedures to create a bootable USB drive from which you can install the Cisco DNA Center ISO image.

Before you begin:

- Download and verify your copy of the Cisco DNA Center ISO image. See [Verify the Cisco DNA Center ISO Image](#).
- Confirm that the USB flash drive you are using has a capacity of at least 32 GB.

Using Etcher

-
- Step 1** Download and install Etcher (Version 1.3.1 or later), an open-source freeware utility that allows you to create a bootable USB drive on your laptop or desktop.

Linux, macOS, and Windows versions of Etcher are currently available. You can download a copy at <https://www.balena.io/etcher/>.

Note Use only the Windows version of Etcher on machines running Windows 10, as there are known compatibility issues with older versions of Windows.

Step 2 From the machine on which you installed Etcher, connect a USB drive and then start Etcher.


Step 3 In the top-right corner of the window, click  and verify that the following Etcher settings are set:

- Auto-unmount on success
- Validate write on success

Step 4 Click **Back** to return to the main Etcher window.

Step 5 Click **Select Image**.

Step 6 Navigate to the Cisco DNA Center ISO image you downloaded previously, select it, and then click **Open**.

The name of the USB drive you connected should be listed under the drive icon (). If it is not:

- a. Click **Select drive**.
- b. Click the radio button for the correct USB drive, and then click **Continue**.

Step 7 Click **Flash!** to copy the ISO image to the USB drive.

Etcher configures the USB drive as a bootable drive with the Cisco DNA Center ISO image installed.

Using the Linux CLI

Step 1 Verify that your USB flash drive is recognized by your machine:

- a) Insert a flash drive into your machine's USB port.
- b) Open a Linux shell and run the following command: **lsblk**

The command lists the disk partitions that are currently configured on your machine, as illustrated in the following example:

```
$ lsblk
NAME MAJ:MIN RM SIZE RO TYPE MOUNTPOINT
sda 8:0 0 446.1G 0 disk
├─sda1 8:1 0 1M 0 part
├─sda2 8:2 0 28.6G 0 part /
├─sda3 8:3 0 28.6G 0 part /install2
├─sda4 8:4 0 9.5G 0 part /var
├─sda5 8:5 0 30.5G 0 part [SWAP]
└─sda6 8:6 0 348.8G 0 part /data
sdb 8:16 0 1.8T 0 disk
├─sdb1 8:17 0 426.1G 0 part /data/maglev/srv/fusion
└─sdb2 8:18 0 1.3T 0 part /data/maglev/srv/maglev-system
sdc 8:32 0 3.5T 0 disk
└─sdc1 8:33 0 3.5T 0 part /data/maglev/srv/ndp
sdd 8:48 1 28.7G 0 disk
└─sdd1 8:49 1 12G 0 part
```

c) Confirm that an `sdd` partition (which indicates the presence of a USB flash drive) is listed.

Step 2 Burn the Cisco DNA Center ISO image you downloaded previously onto your USB flash drive: **time sudo dd if=/data/tmp/ISO-image-filename of=/dev/flash-drive-partition bs=4M && sync**

For example, to create a bootable USB drive using an ISO image named `CDNAC-SW-1.330.iso`, you would run the following command: **time sudo dd if=/data/tmp/CDNAC-SW-1.330.iso of=/dev/sdd bs=4M && sync**

Using the Mac CLI

Step 1 Determine the disk partition associated with your USB flash drive:

a) Open a Terminal window and run the following command: **diskutil list**

The command lists the disk partitions that are currently configured on your machine.

b) Insert a flash drive into your machine's USB port and run the **diskutil list** command a second time.

The partition that was not listed the first time you ran this command corresponds to your flash drive. For example, let's assume that your flash drive's partition is `/dev/disk2`.

Step 2 Unmount the flash drive's partition: **diskutil unmountDisk flash-drive-partition**

Continuing our example, you would enter **diskutil unmountDisk /dev/disk2**

Step 3 Using the Cisco DNA Center ISO image you downloaded previously, create a disk image: **hdiutil convert -format UDRW -o Cisco-DNA-Center-version ISO-image-filename**

Continuing our example, let's assume that you are working with a Cisco DNA Center ISO image named `CDNAC-SW-1.330.iso`. You would run the following command, which creates a macOS disk image named `CDNAC-1.330.dmg`: **hdiutil convert -format UDRW -o CDNAC-1.330 CDNAC-SW-1.330.iso**

Important Ensure that the ISO image does not reside on a Box partition.

Step 4 Create a bootable USB drive: **sudo dd if=macOS-disk-image-filename of=flash-drive-partition bs=1m**

Continuing our example, you would run the following command: **sudo dd if=CDNAC-1.330.dmg of=/dev/disk2 bs=1m**

The ISO image is about 18 GB in size, so this can take around an hour to complete.

Reinitialize the Virtual Drives on a Cisco DNA Center Appliance

Complete the following procedure to reinitialize the virtual drives on your Cisco DNA Center appliance.

Step 1 Log in to the appliance's Cisco IMC using the Cisco IMC IP address, user ID, and password you set in [Enable Browser Access to Cisco Integrated Management Controller](#).

Step 2 From the top-left corner of the Cisco IMC GUI, click the **Toggle Navigation** icon (.

Step 3 From the Cisco IMC menu, choose **Storage > Cisco 12G Modular Raid Controller**.

Step 4 Click the **Virtual Drive Info** tab.

- Step 5** Check the check box for the first virtual drive that's listed (drive number 0), then click **Initialize**.
- Step 6** From the **Initialize Type** drop-down list, choose **Full Initialize**.
- Step 7** Click **Initialize VD**.
- Step 8** Repeat Steps 5 through 7 for the appliance's other virtual drives.
-

Install the Cisco DNA Center ISO Image

Complete the following procedure to install the Cisco DNA Center ISO image onto your appliance.

Before you begin

Create the bootable USB drive from which you will install the Cisco DNA Center ISO image. See [Create a Bootable USB Drive](#).

- Step 1** Connect the bootable USB drive with the Cisco DNA Center ISO image to the appliance.
- Step 2** Log in to Cisco IMC and start a KVM session.
- Step 3** Power on or power cycle the appliance:
- Choose **Power > Power On System** if the appliance is not currently running.
 - Choose **Power > Power Cycle System (cold boot)** if the appliance is already running.
- Step 4** In the resulting pop-up window, click **Yes** to acknowledge that you are about to execute a server control action.
- Step 5** When the Cisco logo appears, either press the **F6** key or choose **Macros > User Defined Macros > F6** from the KVM menu.
- The boot device selection menu appears.
- Step 6** Select your USB drive and then press **Enter**.
- Step 7** In the **GNU GRUB** bootloader window, choose **Manufacture Cisco DNA appliance** and then press **Enter**.
- Note** The bootloader automatically boots the Maglev Installer instead if you do not make a selection within 30 seconds.
-

Cisco DNA Center Appliance Configuration

When installation of the Cisco DNA Center ISO image completes, the installer reboots and opens the Maglev Configuration wizard's welcome screen. To configure your appliance for day-to-day use in your network, complete the steps described in one of the following chapters:

- If you are using the Maglev Configuration wizard, see [Configure the Appliance Using the Maglev Wizard, on page 75](#).
- If you are using the newly available browser-based configuration wizard to configure a 44 or 56-core appliance, see [Configure the 44/56 Core Appliance Using the Browser-Based Wizard, on page 111](#).

- If you are using the newly available browser-based configuration wizard to configure a 112-core appliance, see [Configure the 112 Core Appliance Using the Browser-Based Wizard, on page 149](#).



CHAPTER 5

Configure the Appliance Using the Maglev Wizard

- [Appliance Configuration Overview, on page 75](#)
- [Configure the Primary Node Using the Maglev Wizard, on page 75](#)
- [Configure a Secondary Node Using the Maglev Wizard, on page 93](#)
- [Upgrade to the Latest Cisco DNA Center Release, on page 110](#)

Appliance Configuration Overview

You can deploy the appliance in your network in one of the following two modes:

- **Standalone:** As a single node offering all the functions. This option is usually preferred for initial or test deployments and in smaller network environments. If you choose Standalone mode for your initial deployment, you can add more appliances later to form a cluster. When configuring the standalone host, ensure that it is set up as the first, or primary, node in the cluster.
- **Cluster:** As a node that belongs to a three-node cluster. In this mode, all the services and data are shared among the hosts. This is the preferred option for large deployments. If you choose Cluster mode for your initial deployment, be sure to finish configuring the primary node before configuring the secondary nodes.

To proceed, complete the following tasks:

1. Configure the primary node in your cluster. See [Configure the Primary Node Using the Maglev Wizard, on page 75](#).
2. If you have installed three appliances and want to add the second and third nodes to your cluster, see [Configure a Secondary Node Using the Maglev Wizard, on page 93](#).

Configure the Primary Node Using the Maglev Wizard

Perform the steps in this procedure to configure the first installed appliance as the primary node. You must always configure the first appliance as the primary node, whether it will operate standalone or as part of a cluster.

If you are configuring the installed appliance as a secondary node for an existing cluster that already has a primary node, follow the steps described in [Configure a Secondary Node Using the Maglev Wizard](#), on page 93 instead.



Note Ensure that all of the IP addresses you enter while completing this procedure are valid IPv4 addresses with valid IPv4 netmasks. Also make sure that the addresses and their corresponding subnets do not overlap. Service communication issues can result if they do.

Before you begin


Ensure that you:

- Collected all of the information specified in [Required IP Addresses and Subnets](#) and [Required Configuration Information](#).
- Installed the first appliance, as described in [Appliance Installation Workflow](#).
- Configured Cisco IMC browser access on the primary node, as described in [Enable Browser Access to Cisco Integrated Management Controller](#).
- Checked that the primary node appliance's ports, and the switches they use, are properly configured, as described in [Execute Preconfiguration Checks](#).
- Confirmed that you are using a compatible browser. For a list of compatible browsers, see the [Release Notes](#) document for the version of Cisco DNA Center you are installing.
- Enabled ICMP on the firewall between Cisco DNA Center and both the default gateway and the DNS server you specify in the following procedure. The Maglev Configuration wizard uses ping to verify the gateway and DNS server you specify. This ping might get blocked if a firewall is in place and ICMP is not enabled on that firewall. When this happens, you will not be able to complete the wizard.

Step 1

Point your browser to the Cisco IMC IP address you set during the Cisco IMC GUI configuration you performed, and log in to the Cisco IMC GUI as the Cisco IMC user (see [Enable Browser Access to Cisco Integrated Management Controller](#)).

After successful login, the appliance displays the **Cisco Integrated Management Controller Chassis Summary** window, with a hyperlinked menu at the top of the window, as shown below.

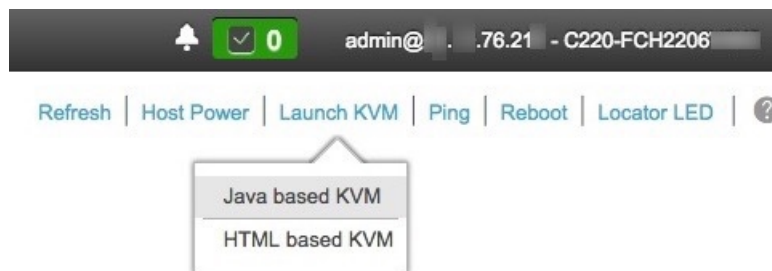

Step 2

From the hyperlinked menu, choose **Launch KVM** and then select either **Java based KVM** or **HTML based KVM**. If you select **Java-based KVM**, you will need to launch the Java startup file from your browser or file manager in

order to view the KVM console in its own window. If you select **HMTL-based KVM**, it launches the KVM console in a separate window or tab automatically.

Irrespective of the KVM type you choose, use the KVM console to monitor the progress of the configuration and respond to the Maglev Configuration wizard prompts.

Step 3

With the KVM displayed, reboot the appliance by making one of the following selections:

- In the main Cisco IMC GUI browser window: Choose **Host Power > Power Cycle**, and switch to the KVM console to continue.
- In the KVM console: Choose **Power > Power Cycle System (cold boot)**.

If you are asked to confirm your choice to reboot the appliance, click **OK**.

After displaying reboot messages, the KVM console displays the Maglev Configuration wizard welcome screen.

```
Welcome to the Maglev Configuration Wizard!

The wizard will walk you through the steps to configure this host. Select one of the options below to specify how you
would like to configure this host:


Start a Cisco DNA Center Cluster
Join a Cisco DNA Center Cluster

< exit >

Web installation: https://172.29.131.224:9004/
```

Step 4

Specify whether the applications and services running on your Cisco DNA Center appliance will use IPv4 or IPv6 addressing. After making your selection, click **next>>** to proceed.

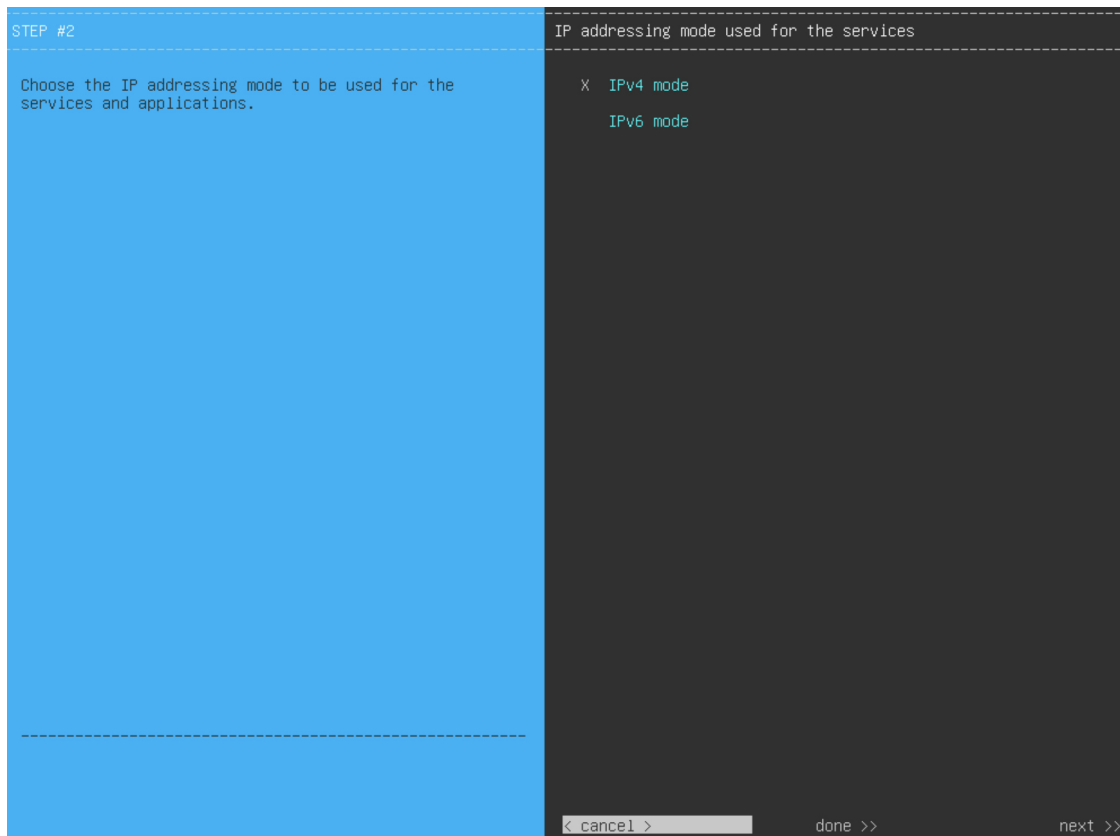

The wizard discovers all of the ports on the appliance and presents them to you one by one, in separate screens, in the following order:

- a. 10-Gbps Enterprise Port (Network Adapter #1)
- b. 10-Gbps Cluster Port (Network Adapter #2)
- c. 1-Gbps/10-Gbps Management Port (Network Adapter #3)
- d. 1-Gbps/10-Gbps Internet Port (Network Adapter #4)

If the wizard fails to display either or both of the Enterprise and Cluster ports during the course of configuration, it might indicate that these ports are nonfunctional or disabled. These two ports are required for Cisco DNA Center functionality. If you discover that they are nonfunctional, choose **cancel** to exit the configuration wizard immediately. Be sure that you have completed all of the steps provided in [Execute Preconfiguration Checks](#) before resuming the configuration or contacting the Cisco Technical Assistance Center (for more information, see the "Get Assistance from the Cisco TAC" topic in the [Release Notes](#) document).

Step 5

The wizard first presents the 10-Gbps Enterprise port as **NETWORK ADAPTER #1**. As explained in [Interface Cable Connections](#), this is a required port used to link the appliance to the enterprise network. Apply the host IP address, netmask, and other values that are appropriate for this purpose (see [Required IP Addresses and Subnets](#) and [Required Configuration Information](#) for the values to enter).

STEP #3	NETWORK ADAPTER #1 (enterprise)
<p>The wizard has discovered 4 physical network adapter(s) installed on the appliance.</p> <p>Enter the network settings for the 1st network adapter - (3c:fd:fe:bd:fa:b4 - 10G - enterprise network).</p> <p>Recommended use: enterprise network</p> <p>Phy Interfaces: enp94s0f0 enp216s0f2</p> <p>Remove all NFS mount before network changes</p>	<p>Host IPv4 Address: 17.192.1.224</p> <p>IPv4 Netmask: 255.255.255.0</p> <p>Default Gateway IPv4 Address: 17.192.1.1</p> <p>IPv4 DNS Servers:</p> <p>IPv4 Static Routes:</p> <p>Cluster Link</p> <p>LACP Mode</p>
<p>< cancel > done >> next >></p>	

Enter the configuration values for **NETWORK ADAPTER #1**, as shown in the table below.

Table 19: Primary Node Entries for Network Adapter #1: 10-Gbps Enterprise Port

Host IPv4/IPv6 Address field	Enter the IP address for the Enterprise port. This is required.
IPv4 Netmask/IPv6 Prefix Length field	Do one of the following: <ul style="list-style-type: none"> If you selected IPv4 addressing, enter the netmask for the port's IP address. This is required. If you selected IPv6 addressing, enter the prefix length (in bits). Valid values range from 10 through 127.
Default Gateway IPv4/IPv6 Address field	Enter a default gateway IP address to use for the port. <p>Important Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.</p>

IPv4/IPv6 DNS Servers field	<p>Enter the IP address of the preferred DNS server. If you are entering multiple DNS servers, separate the IP addresses in the list with spaces.</p> <p>Important For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for an appliance.</p>
IPv4/IPv6 Static Routes field	<p>Enter one or more static routes in the following format, separated by spaces: <code><network>/<netmask>/<gateway></code>. This is usually required on the Cisco DNA Center Management port only.</p>
Cluster Link field	<p>Leave this field blank. It is required on the Cluster port only.</p>
LACP Mode field	<p>Do one of the following:</p> <ul style="list-style-type: none"> • Leave this field blank and the port will operate in Active-Backup mode. This mode provides fault tolerance by aggregating two Ethernet interfaces into a single logical channel. When the interface that's currently active goes down, the other interface takes its place and becomes active. • Check the check box to enable LACP mode on this port. This mode aggregates two Ethernet interfaces that share the same speed and duplex settings into a single logical channel. This provides load balancing and higher bandwidth. <p>For more information about Cisco DNA Center's implementation of NIC bonding, see NIC Bonding Overview, on page 62.</p>

After you finish entering the configuration values, click **next>>** to proceed. The wizard validates the values you entered and issues an error message if any are incorrect. If you receive an error message, check that the value you entered is correct, then reenter it. If needed, click **<<back** to reenter it.

Step 6

After successful validation of the Enterprise port values you entered, the wizard presents the 10-Gbps Cluster port and presents it as **NETWORK ADAPTER #2**. As explained in [Interface Cable Connections](#), this port is used to link the appliance to the cluster, so apply the host IP address, netmask, and other values that are appropriate for this purpose (see [Required IP Addresses and Subnets](#) and [Required Configuration Information](#) for the values to enter).

STEP #3	OPTIONAL - NETWORK ADAPTER #2 (cluster)
<p>(Optional) Enter the network settings for the 2nd network adapter - (3c:fd:fe:bd:fa:b5 - 10G - intra-cluster link).</p> <p>Recommended use: intra-cluster link</p> <p>Change of 'Cluster Link' IP Address and Netmask is not supported.</p> <p>Phy Interfaces: enp94s0f1 enp216s0f3</p> <p>Remove all NFS mount before network changes</p>	<p>Host IPv4 Address: 169.254.6.66</p> <p>IPv4 Netmask: 255.255.255.128</p> <p>Default Gateway IPv4 Address:</p> <p>IPv4 DNS Servers:</p> <p>IPv4 Static Routes:</p> <p>X Cluster Link</p> <p>LACP Mode</p>
<p><< back < cancel > done >> next >></p>	

Enter the configuration values for **NETWORK ADAPTER #2**, as shown in the table below.

Table 20: Primary Node Entries for Network Adapter #2: 10-Gbps Cluster Port

Host IPv4/IPv6 address field	Enter the IP address for the Cluster port. This is required. Note that you cannot change the address of the Cluster port later.
IPv4 Netmask/IPv6 Prefix Length field	Do one of the following: <ul style="list-style-type: none"> If you selected IPv4 addressing, enter the netmask for the port's IP address. This is required. If you selected IPv6 addressing, enter the prefix length (in bits). Valid values range from 10 through 127.
Default Gateway IPv4/IPv6 address field	Enter a default gateway IP address to use for the port. <p>Important Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.</p>

IPv4/IPv6 DNS Servers field	<p>Enter the IP address of the preferred DNS server. If you are entering multiple DNS servers, separate the IP addresses in the list with spaces.</p> <p>Important For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for an appliance.</p>
IPv4/IPv6 Static Routes field	<p>Enter one or more static routes in the following format, separated by spaces: <code><network>/<netmask>/<gateway></code>. This is usually required on the Management port only.</p>
Cluster Link field	<p>Check the check box to set this port as the link to a Cisco DNA Center cluster. This is required on the Cluster port only.</p>
LACP Mode field	<p>Do one of the following:</p> <ul style="list-style-type: none"> • Leave this field blank and the port will operate in Active-Backup mode. This mode provides fault tolerance by aggregating two Ethernet interfaces into a single logical channel. When the interface that's currently active goes down, the other interface takes its place and becomes active. • Check the check box to enable LACP mode on this port. This mode aggregates two Ethernet interfaces that share the same speed and duplex settings into a single logical channel. This provides load balancing and higher bandwidth. • For more information about Cisco DNA Center's implementation of NIC bonding, see NIC Bonding Overview, on page 62.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens. The wizard validates and applies your network adapter configurations.

Step 7

After successful validation of the Cluster port values you entered, the wizard presents the 1-Gbps/10-Gbps Management port and presents it as **NETWORK ADAPTER #3**. As explained in [Interface Cable Connections](#), this port is used to access the Cisco DNA Center GUI from your management network. Apply the host IP address, netmask, and other values that are appropriate for this purpose (see [Required IP Addresses and Subnets](#) and [Required Configuration Information](#) for the values to enter).

STEP #3	OPTIONAL - NETWORK ADAPTER #3 (management)
<p>(Optional) Enter the network settings for the 3rd network adapter - (70:69:5a:48:8f:4e - 10G - management network).</p> <p>Recommended use: management network</p> <p>Phy Interfaces: eno1 enp216s0f0</p> <p>Remove all NFS mount before network changes</p>	<p>Host IPv4 Address: 172.29.131.224</p> <p>IPv4 Netmask: 255.255.255.0</p> <p>Default Gateway IPv4 Address:</p> <p>IPv4 DNS Servers: 171.70.168.183 173.36.131.10</p> <p>IPv4 Static Routes: 10.0.0.0/255.0.0.0/172.29.131.1 171.0.0.0/255.0.0.0/172.29.13 Cluster Link</p>
<p><< back < cancel > done >> next >></p>	

Enter the configuration values for **NETWORK ADAPTER #3**, as shown in the table below.

Table 21: Primary Node Entries for Network Adapter #3: 1-Gbps/10-Gbps Management Port

Host IPv4/IPv6 address field	Enter the IP address for the Management Port. This is required only if you are using this port to access the Cisco DNA Center GUI from your management network; otherwise, you can leave it blank.
IPv4 Netmask/IPv6 Prefix Length field	Do one of the following if you entered an IP address: <ul style="list-style-type: none"> • If you selected IPv4 addressing, enter the netmask for the port's IP address. This is required. • If you selected IPv6 addressing, enter the prefix length (in bits). Valid values range from 10 through 127.
Default Gateway IPv4/IPv6 address field	Enter a default gateway IP address to use for the port. <p>Important Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.</p>

IPv4/IPv6 DNS Servers field	<p>Enter the IP address of the preferred DNS server. If you are entering multiple DNS servers, separate the IP addresses in the list with spaces.</p> <p>Important</p> <ul style="list-style-type: none"> • For NTP, ensure port 123 (UDP) is open between Cisco DNA Center and your NTP server. • For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for an appliance.
IPv4/IPv6 Static Routes field	Enter one or more static routes in the following format, separated by spaces: <code><network>/<netmask>/<gateway></code> .
Cluster Link field	Leave this field blank. It is required on the Cluster port only.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens. The wizard validates and applies your network adapter configurations.

Step 8

After successful validation of the Management port values you entered, the wizard presents the 1-Gbps/10-Gbps Internet port as **NETWORK ADAPTER #4**. As explained in [Interface Cable Connections](#), this is an optional port used to link the appliance to the Internet when you cannot do so through the 10-Gbps Enterprise port. Apply the host IP address, netmask, and other values that are appropriate for this purpose (see [Required IP Addresses and Subnets](#) and [Required Configuration Information](#) for the values to enter).

STEP #3	OPTIONAL - NETWORK ADAPTER #4 (Internet)
<p>(Optional) Enter the network settings for the 4th network adapter - (70:69:5a:48:8f:4f - UNKNOWN - internet-access network).</p> <p>Recommended use: internet-access network</p> <p>Cable status: disconnected</p> <p>Phy Interfaces: eno2 enp216s0f1</p> <p>Remove all NFS mount before network changes</p>	<p>Host IPv4 Address:</p> <p>IPv4 Netmask:</p> <p>Default Gateway IPv4 Address:</p> <p>IPv4 DNS Servers:</p> <p>IPv4 Static Routes:</p> <p>Cluster Link</p>
<p><< back < cancel > done >> next >></p>	

Enter the configuration values for **NETWORK ADAPTER #4**, as shown in the table below.

Table 22: Primary Node Entries for Network Adapter #4: 1-Gbps/10-Gbps Internet Port

Host IPv4/IPv6 address field	Enter the IP address for the Internet port. This is required only if you are using the Cloud port for internet connection; otherwise, you can leave it blank.
IPv4 Netmask/IPv6 Prefix Length field	Do one of the following if you entered an IP address: <ul style="list-style-type: none"> If you selected IPv4 addressing, enter the netmask for the port's IP address. This is required. If you selected IPv6 addressing, enter the prefix length (in bits). Valid values range from 10 through 127.
Default Gateway IPv4/IPv6 address field	Enter a default gateway IP address to use for the Internet port. <p>Important Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.</p>

IPv4/IPv6 DNS Servers field	Enter the IP address of the preferred DNS server. If you are entering multiple DNS servers, separate the IP addresses in the list with spaces. Important For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for an appliance.
IPv4/IPv6 Static Routes field	Enter one or more static routes in the following format, separated by spaces: <network>/<netmask>/<gateway>. This is usually required on the Management port only.
Cluster Link field	Leave this field blank. It is required on the Cluster port only.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens. The wizard validates and applies your network adapter configurations.

Step 9

After the network adapter configuration is complete, the wizard prompts you to enter configuration values for the **NETWORK PROXY** that you are using, as shown below.

STEP #4

The controller appears to be behind a network proxy.

Note : During Network Proxy update operation, enter password details only if it requires to be updated (or) if authentication details for network proxy needs to be entered/updated.

NETWORK PROXY

HTTPS Proxy:
http://proxy-usa.esl.cisco.com:80

HTTPS Proxy Username:

HTTPS Proxy Password:

<< back
cancel >
next >>

Enter the configuration values for the **NETWORK PROXY**, as shown in the table below.

Table 23: Primary Node Entries for Network Proxy

HTTPS Proxy field	<p>Enter the URL or host name of an HTTPS network proxy used to access the Internet.</p> <p>Note</p> <ul style="list-style-type: none"> • Connection from Cisco DNA Center to the HTTPS proxy is supported only through HTTP in this release. • If you enter an IPv6 URL that contains a port number, enclose the IP address portion of the URL in square brackets. In this example, 443 is the port number: https://[2001:db8:85a3:8d3:1319:8a2e:370:7348]:443/
HTTPS Proxy Username field	Enter the user name used to access the network proxy. If no proxy login is required, leave this field blank.
HTTPS Proxy Password field	Enter the password used to access the network proxy. If no proxy login is required, leave this field blank.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens.

Step 10

After network proxy configuration completes, the wizard prompts you to enter virtual IP addresses for the primary node, in **MAGLEV CLUSTER DETAILS** (as shown below).

STEP #5	MAGLEV CLUSTER DETAILS
<p>Virtual IP address(s) is a list of IP(s) through which the Cluster's Management, Enterprise Interfaces can be accessible.</p> <p>Note that these are different from node's individual IP.</p>	<p>Cluster Virtual IP Address(s): 169.254.6.99 172.29.131.77 17.192.1.77</p> <p>Cluster's hostname: Cdnac.example.cisco.com</p>
<p><< back < cancel > next >></p>	

Enter a space-separated list of the virtual IP addresses used for traffic between the cluster and your network. This is required for both three-node clusters and single-node clusters that will be converted into a three-node cluster in the future. If you have a single-node cluster setup and plan to stick with it, skip this step and proceed to Step 12.

Important You must enter one virtual IP address for each configured network interface. You will not be able to complete the wizard unless you do so. These addresses are tied to the cluster link's status, which must be in the **UP** state.

You also have the option to specify the fully qualified domain name (FQDN) for your cluster. Cisco DNA Center uses this domain name to do the following:

- It uses this hostname to access your cluster's web interface and the Representational State Transfer (REST) APIs used by devices in the enterprise network that Cisco DNA Center manages.
- In the Subject Alternative Name (SAN) field of Cisco DNA Center certificates, it uses the FQDN to define the Plug and Play server that should be used for device provisioning.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens.

Step 11

After you have entered the cluster details, the wizard prompts you to enter **USER ACCOUNT SETTINGS** values, as shown below.

STEP #6

Specify a new password for the 'maglev' user.

Please use SHIFT for capitalization, using CAPS LOCK may result in inconsistent password.

* Indicates a mandatory field.

Password generation is optional, but recommended.

User is advised to append personal password with generated password for recommended security.

Caution: Remember generated password for future log ins.

USER ACCOUNT SETTINGS

Linux Password: *

Re-enter Linux Password: *

Password Generation Seed:

< Generate Password >

Auto Generated Password:

< Use Generated Password >

Administrator Passphrase: *

Re-enter Administrator Passphrase: *

<< back
< cancel >
next >>

Enter the values for **USER ACCOUNT SETTINGS**, as shown in the table below.

Table 24: Primary Node Entries for User Account Settings

Linux Password field	Enter a Linux password for the maglev user.
Re-enter Linux Password field	Confirm the Linux password by entering it a second time.
Password Generation Seed field	If you do not want to create the Linux password yourself, enter a seed phrase in this field and then press < Generate Password > to generate the password.
Auto Generated Password field	(Optional) The seed phrase appears as part of a random and secure password. If desired, you can either use this password "as is", or you can further edit this auto-generated password. Press < Use Generated Password > to save the password.
Administrator Password field	Enter a password for the default admin superuser, used to log in to Cisco DNA Center for the first time.
Re-enter Administrator Password field	Confirm the administrator password by entering it a second time.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens.

Step 12 After you have entered the user account details, the wizard prompts you to enter **NTP SERVER SETTINGS** values, as shown below.

STEP #7

Enter the IP address of the NTP server that the controller will use.

It is recommended to specify 3 or more NTP servers to improve availability and time accuracy.

Please note that the NTP server(s) must be accessible in order for the configuration to succeed.

* Indicates a mandatory field

NTP SERVER SETTINGS

NTP Servers: *

ntp.es1.example.com ntp1.es1.example.com ntp2.es1.example.com

<< back < cancel > next >>

Enter one or more NTP server addresses or hostnames, separated by spaces. At least one NTP address or hostname is required. For a production deployment, we recommend that you configure a minimum of three NTP servers.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens. The wizard validates and applies your NTP server configuration.

Step 13 After you have specified the appropriate NTP servers, the wizard prompts you to enter **MAGLEV ADVANCED SETTINGS** values, as shown below.

STEP #8

Enter the IP networks for cluster services network and api network to use.

These networks shouldn't overlap with the existing enterprise network.

The maximum and minimum recommended size for each networks are /108 and /117 subnets respectively.

* Indicates a mandatory field.

MAGLEV ADVANCED SETTINGS

Container subnet: *
169.254.32.0/20

Cluster subnet: *
169.254.32.0/20

<< back < cancel > next >>

Enter the configuration values for **MAGLEV ADVANCED SETTINGS**, as shown in the table below.

Table 25: Primary Node Entries for Maglev Advanced Settings

Container Subnet field	A dedicated, non-routed IP subnet that Cisco DNA Center uses to manage internal services. By default, this is already set to 169.254.32.0/20 , and we recommend that you use this subnet. If you choose to enter another subnet, ensure that it does not conflict with or overlap any other subnet used by the Cisco DNA Center internal network or an external network. For more information, see the Container Subnet description in Required IP Addresses and Subnets, on page 26 .
Cluster Subnet field	A dedicated, non-routed IP subnet that Cisco DNA Center uses to manage internal cluster services. By default, this is already set to 169.254.48.0/20 , and we recommend that you use this subnet. If you choose to enter another subnet, ensure that it does not conflict with or overlap any other subnet used by the Cisco DNA Center internal network or an external network. For more information, see the Cluster Subnet description in Required IP Addresses and Subnets, on page 26 .

When you are finished, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens.

After you have entered the Maglev advanced settings, a final message appears, stating that the wizard is ready to apply the configuration (as shown below).

Configure a Secondary Node Using the Maglev Wizard

Perform the steps in this procedure to configure the second and third appliances in the cluster.



Important

In order to build a three-node cluster, the same version of the **System** package must be installed on your three Cisco DNA Center appliances. Otherwise, unexpected behavior and possible downtime can occur.



Note

Ensure that all of the IP addresses you enter while completing this procedure are valid IPv4 addresses with valid IPv4 netmasks. Also make sure that the addresses and their corresponding subnets do not overlap. Service communication issues can result if they do.

When joining each new secondary node to the cluster, you must specify the first host in the cluster as the primary node. Note the following when joining secondary nodes to a cluster:

- Be sure to join only a single node to the cluster at a time. Do not attempt to add multiple nodes at the same time, because this results in unpredictable behavior.
- Before adding a new node to the cluster, be sure that all installed packages are deployed on the primary node. You can check this by using Secure Shell to log in to the primary node's Cisco DNA Center Management port as the Linux User (maglev) and then running the command `maglev package status`. All installed packages should appear in the command output as `DEPLOYED`. In the following example, a few packages were not installed, such as the `application-policy` and `sd-access` packages. They are the only packages whose status is `NOT_DEPLOYED`. Your package status should look similar to this before configuring a secondary node.

```
[Thu Feb 04 17:07:37 UTC] maglev@192.192.192.224 (maglev-master-192.192.192.224) ~
$ maglev package status
[administration] password for 'admin':

maglev-1 [main - https://kong-frontend.maglev-system.svc.cluster.local:443]
```

NAME	DISPLAY_NAME	DEPLOYED	AVAILABLE	STATUS	PROGRESS
access-control-application	Access Control Application	-	2.1.310.61014	NOT_DEPLOYED	
application-policy	Application Policy	-	2.1.310.117202	NOT_DEPLOYED	
application-registry	Application Registry	-	2.1.310.117202	NOT_DEPLOYED	
assurance	Assurance - Base	2.2.1.243	-	DEPLOYED	
automation-core	NCP - Services	2.1.310.61014	-	DEPLOYED	
base-provision-core	Automation - Base	2.1.310.61014	-	DEPLOYED	
cloud-connectivity-data-hub	Cloud Connectivity - Data Hub	1.6.0.263	-	DEPLOYED	
cloud-connectivity-tethering	Cloud Connectivity - Tethering	2.1.1.37	-	DEPLOYED	
command-runner	Command Runner	2.1.310.61014	-	DEPLOYED	
device-onboarding	Device Onboarding	2.1.310.61014	-	DEPLOYED	
dna-core-apps	Network Experience Platform - Core	2.1.310.61014	-	DEPLOYED	
dnac-platform	Cisco DNA Center Platform	1.4.99.106	-	DEPLOYED	
dnac-search	Cisco DNA Center Global Search	1.4.0.11	-	DEPLOYED	
image-management	Image Management	2.1.310.61014	-	DEPLOYED	
machine-reasoning	Machine Reasoning	2.1.310.210298	-	DEPLOYED	
ncp-system	NCP - Base	2.1.310.61014	-	DEPLOYED	
ndp-base-analytics	Network Data Platform - Base Analytics	1.6.175	-	DEPLOYED	
ndp-platform	Network Data Platform - Core	1.6.259	-	DEPLOYED	
ndp-ui	Network Data Platform - Manager	1.6.129	-	DEPLOYED	
network-visibility	Network Controller Platform	2.1.310.61014	-	DEPLOYED	
path-trace	Path Trace	2.1.310.61014	-	DEPLOYED	
platform-ui	Cisco DNA Center UI	1.6.1.331	-	DEPLOYED	
rbac-extensions	RBAC Extensions	2.1.310.1900012	-	DEPLOYED	
sd-access	SD Access	-	2.1.310.61014	NOT_DEPLOYED	
sensor-automation	Automation - Sensor	-	2.1.310.61014	NOT_DEPLOYED	
ssa	Stealthwatch Security Analytics	2.1.310.1090254	-	DEPLOYED	
system	System	1.6.301	-	DEPLOYED	
system-commons	System Commons	2.1.310.61014	-	DEPLOYED	

- Expect some service downtime during the cluster attachment process for each secondary node. Services will need to be redistributed across the nodes and the cluster will be down for periods of time during that process.

Before you begin


Ensure that you:

- Configured the first appliance in the cluster, following the steps in [Configure the Primary Node Using the Maglev Wizard, on page 75](#).
- Collected all of the information specified in [Required IP Addresses and Subnets](#) and [Required Configuration Information](#).
- Installed the second and third appliances, as described in [Appliance Installation Workflow](#).
- Have done the following:
 1. Ran the **maglev package status** command on the first appliance.
You can also access this information from the Cisco DNA Center GUI by clicking the **Help** icon (?) and choosing **About > Packages**.
 2. Contacted the Cisco TAC, gave them the output of this command, and asked them to point you to the ISO that you should install on your second and third appliances.
- Configured Cisco IMC browser access on both secondary appliances, as described in [Enable Browser Access to Cisco Integrated Management Controller](#).
- Checked that both the secondary appliances' ports and the switches they use are properly configured (as described in [Execute Preconfiguration Checks](#)).
- Confirmed that you are using a compatible browser. For a list of compatible browsers, see the [Release Notes](#) document for the version of Cisco DNA Center you are installing.
- Enabled ICMP on the firewall between Cisco DNA Center and both the default gateway and the DNS server you specify in the following procedure. The Maglev Configuration wizard uses ping to verify the gateway and DNS server you specify. This ping might get blocked if a firewall is in place and ICMP is not enabled on that firewall. When this happens, you will not be able to complete the wizard.

Step 1

Point your browser to the Cisco IMC IP address you set during the Cisco IMC GUI configuration you performed, and log in to the Cisco IMC GUI as the Cisco IMC user (see [Enable Browser Access to Cisco Integrated Management Controller](#)).

After successful login, the appliance displays the **Cisco Integrated Management Controller Chassis Summary** window, with a hyperlinked menu at the top of the window, as shown below.

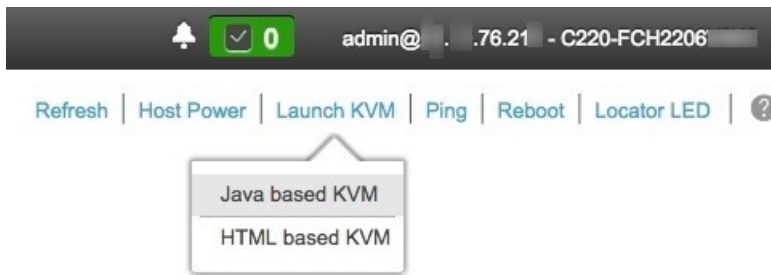

Step 2 From the hyperlinked menu, choose **Launch KVM** and then select either **Java based KVM** or **HTML based KVM**. If you select **Java-based KVM**, you will need to launch the Java startup file from your browser or file manager in order to view the KVM console in its own window. If you select **HMTL-based KVM**, it launches the KVM console in a separate window or tab automatically.


Irrespective of the KVM type you choose, use the KVM console to monitor the progress of the configuration and respond to the Maglev Configuration wizard prompts.

Step 3 With the KVM displayed, reboot the appliance by choosing one of the following options:

- In the main Cisco IMC GUI browser window: Choose **Host Power > Power Cycle**, and switch to the KVM console to continue.
- In the KVM console: Choose **Power > Power Cycle System (cold boot)**.

If you are asked to confirm your choice to reboot the appliance, click **OK**.

After displaying reboot messages, the KVM console displays the Maglev Configuration wizard welcome screen.

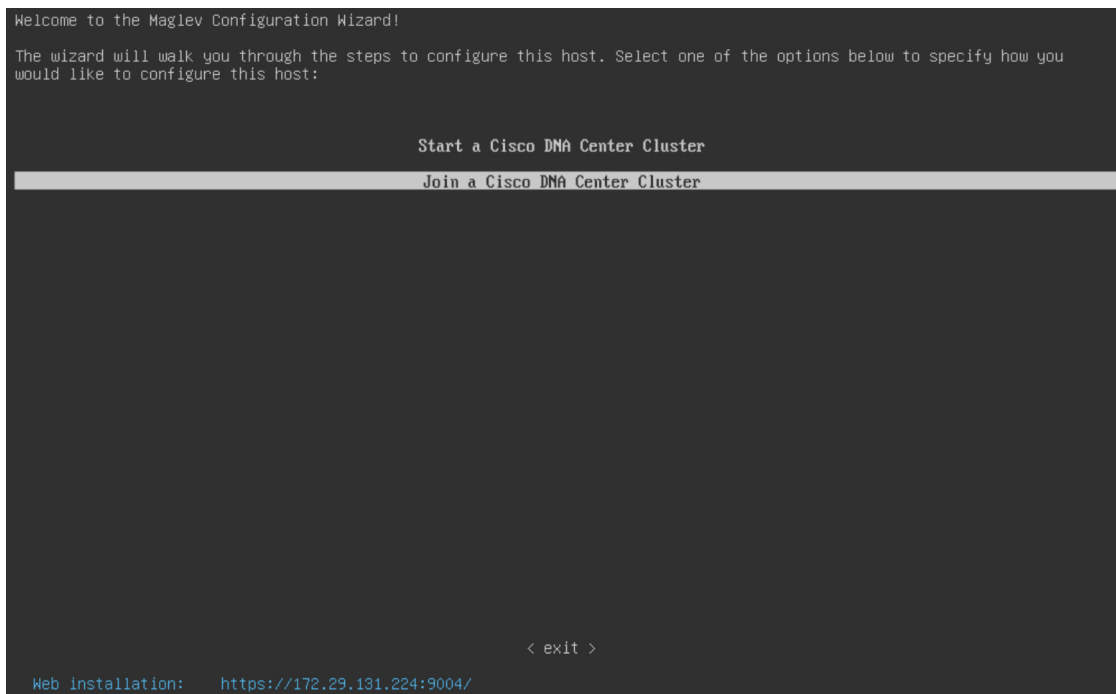

Step 4 Click **Join a Cisco DNA Center Cluster** to begin configuring the secondary node.

Step 5

Specify whether the applications and services running on your Cisco DNA Center appliance will use IPv4 or IPv6 addressing. After making your selection, click **next>>** to proceed.

The wizard discovers all of the ports on the appliance and presents them to you one by one, in separate screens, in the following order:

- a. 10-Gbps Enterprise Port (Network Adapter #1)
- b. 10-Gbps Cluster Port (Network Adapter #2)
- c. 1-Gbps/10-Gbps Management Port (Network Adapter #3)
- d. 1-Gbps/10-Gbps Internet Port (Network Adapter #4)

If the wizard fails to display either or both of the Enterprise and Cluster ports during the course of configuration, it might indicate that these ports are nonfunctional or disabled. These two ports are required for Cisco DNA Center functionality. If you discover that they are nonfunctional, choose **cancel** to exit the configuration wizard immediately. Be sure that you have completed all of the steps provided in [Execute Preconfiguration Checks](#) before resuming the configuration or contacting the Cisco Technical Assistance Center (for more information, see the "Get Assistance from the Cisco TAC" topic in the [Release Notes](#) document).

Step 6

The wizard first presents the 10-Gbps Enterprise port as **NETWORK ADAPTER #1**. As explained in [Interface Cable Connections](#), this is a required port used to link the appliance to the enterprise network. Apply the host IP address, netmask, and other values that are appropriate for this purpose (see [Required IP Addresses and Subnets](#) and [Required Configuration Information](#) for the values to enter).

STEP #3	NETWORK ADAPTER #1 (enterprise)
<p>The wizard has discovered 4 physical network adapter(s) installed on the appliance.</p> <p>Enter the network settings for the 1st network adapter - (3c:fd:fe:bd:fa:b4 - 10G - enterprise network).</p> <p>Recommended use: enterprise network</p> <p>Phy Interfaces: enp94s0f0 enp216s0f2</p> <p>Remove all NFS mount before network changes</p>	<p>Host IPv4 Address: 17.192.1.226</p> <p>IPv4 Netmask: 255.255.255.0</p> <p>Default Gateway IPv4 Address: 17.192.1.1</p> <p>IPv4 DNS Servers:</p> <p>IPv4 Static Routes:</p> <p>Cluster Link</p> <p>LACP Mode</p>
<p>< cancel > done >> next >></p>	

Enter the configuration values for **NETWORK ADAPTER #1**, as shown in the table below.

Table 26: Secondary Node Entries for Network Adapter #1: 10-Gbps Enterprise Port

Host IPv4/IPv6 Address field	Enter the IP address for the Management Port. This is required only if you are using this port to access the Cisco DNA Center GUI from your management network; otherwise, you can leave it blank.
IPv4 Netmask/IPv6 Prefix Length field	Do one of the following if you entered an IP address: <ul style="list-style-type: none"> If you selected IPv4 addressing, enter the netmask for the port's IP address. This is required. If you selected IPv6 addressing, enter the prefix length (in bits). Valid values range from 10 through 127.
Default Gateway IPv4/IPv6 address field	Enter a default gateway IP address to use for the port. <p>Important Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.</p>

IPv4/IPv6 DNS Servers field	<p>Enter the IP address of the preferred DNS server. If you are entering multiple DNS servers, separate the IP addresses in the list with spaces.</p> <p>Important For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for an appliance.</p>
IPv4/IPv6 Static Routes field	<p>Enter one or more static routes in the following format, separated by spaces: <code><network>/<netmask>/<gateway></code>. This is usually required on the Cisco DNA Center Management port only.</p>
Cluster Link field	<p>Leave this field blank. It is required on the Cluster port only.</p>
LACP Mode field	<p>Do one of the following:</p> <ul style="list-style-type: none"> • Leave this field blank and the port will operate in Active-Backup mode. This mode provides fault tolerance by aggregating two Ethernet interfaces into a single logical channel. When the interface that's currently active goes down, the other interface takes its place and becomes active. • Check the check box to enable LACP mode on this port. This mode aggregates two Ethernet interfaces that share the same speed and duplex settings into a single logical channel. This provides load balancing and higher bandwidth. • For more information about Cisco DNA Center's implementation of NIC bonding, see NIC Bonding Overview, on page 62.

After you finish entering the configuration values, click **next>>** to proceed. The wizard validates the values you entered and issues an error message if any are incorrect. If you receive an error message, check that the value you entered is correct, then reenter it. If needed, click **<<back** to reenter it.

Step 7

After successful validation of the Enterprise port values you entered, the wizard presents the 10-Gbps Cluster port and presents it as **NETWORK ADAPTER #2**. As explained in [Interface Cable Connections](#), this port is used to link the appliance to the cluster, so apply the host IP address, netmask, and other values that are appropriate for this purpose (see [Required IP Addresses and Subnets](#) and [Required Configuration Information](#) for the values to enter).

STEP #3	OPTIONAL - NETWORK ADAPTER #2 (cluster)
<p>(Optional) Enter the network settings for the 2nd network adapter - (3c:fd:fe:bd:fa:b5 - 10G - intra-cluster link).</p> <p>Recommended use: intra-cluster link</p> <p>Change of 'Cluster Link' IP Address and Netmask is not supported.</p> <p>Phy Interfaces: enp94s0f1 enp216s0f3</p> <p>Remove all NFS mount before network changes</p>	<p>Host IPv4 Address: 169.254.6.64</p> <p>IPv4 Netmask: 255.255.255.128</p> <p>Default Gateway IPv4 Address:</p> <p>IPv4 DNS Servers:</p> <p>IPv4 Static Routes:</p> <p><input checked="" type="checkbox"/> Cluster Link</p> <p>LACP Mode</p>
<p><< back < cancel > done >> next >></p>	

Enter the configuration values for **NETWORK ADAPTER #2**, as shown in the table below.

Table 27: Secondary Node Entries for Network Adapter #2: 10-Gbps Cluster Port

Host IPv4/IPv6 address field	Enter the IP address for the Cluster port. This is required. Note that you cannot change the address of the Cluster port later.
IPv4 Netmask/IPv6 Prefix Length field	Do one of the following if you entered an IP address: <ul style="list-style-type: none"> If you selected IPv4 addressing, enter the netmask for the port's IP address. This is required. If you selected IPv6 addressing, enter the prefix length (in bits). Valid values range from 10 through 127.
Default Gateway IPv4/IPv6 address field	Enter a default gateway IP address to use for the port. <p>Important Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.</p>

IPv4/IPv6 DNS Servers field	<p>Enter the IP address of the preferred DNS server. If you are entering multiple DNS servers, separate the IP addresses in the list with spaces.</p> <p>Important For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for an appliance.</p>
IPv4/IPv6 Static Routes field	<p>Enter one or more static routes in the following format, separated by spaces: <code><network>/<netmask>/<gateway></code>. This is usually required on the Management port only.</p>
Cluster Link field	<p>Check the check box to set this port as the link to a Cisco DNA Center cluster. This is required on the Cluster port only.</p>
LACP Mode field	<p>Do one of the following:</p> <ul style="list-style-type: none"> • Leave this field blank and the port will operate in Active-Backup mode. This mode provides fault tolerance by aggregating two Ethernet interfaces into a single logical channel. When the interface that's currently active goes down, the other interface takes its place and becomes active. • Check the check box to enable LACP mode on this port. This mode aggregates two Ethernet interfaces that share the same speed and duplex settings into a single logical channel. This provides load balancing and higher bandwidth. • For more information about Cisco DNA Center's implementation of NIC bonding, see NIC Bonding Overview, on page 62.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens. The wizard validates and applies your network adapter configurations.

Step 8

After successful validation of the Cluster port values you entered, the wizard presents the 1-Gbps/10-Gbps Management port and presents it as **NETWORK ADAPTER #3**. As explained in [Interface Cable Connections](#), this port is used to access the Cisco DNA Center GUI from your management network. Apply the host IP address, netmask, and other values that are appropriate for this purpose (see [Required IP Addresses and Subnets](#) and [Required Configuration Information](#) for the values to enter).

STEP #3	OPTIONAL - NETWORK ADAPTER #3 (management)
(Optional) Enter the network settings for the 3rd network adapter - (70:69:5a:48:8f:4e - 10G - management network). Recommended use: management network Phy Interfaces: eno1 enp216s0f0 Remove all NFS mount before network changes	Host IPv4 Address: 172.29.131.226 IPv4 Netmask: 255.255.255.0 Default Gateway IPv4 Address: IPv4 DNS Servers: 171.70.168.183 173.36.131.10 IPv4 Static Routes: 10.0.0.0/255.0.0.0/172.29.131.1 171.0.0.0/255.0.0.0/172.29.13 Cluster Link
<div> << back < cancel > done >> next >> </div>	

Enter the configuration values for **NETWORK ADAPTER #3**, as shown in the table below.

Table 28: Secondary Node Entries for Network Adapter #3: 1-Gbps/10-Gbps Management Port

Host IPv4/IPv6 address field	Enter the IP address for the Management port. This is required.
IPv4 Netmask/IPv6 Prefix Length field	Do one of the following: <ul style="list-style-type: none"> If you selected IPv4 addressing, enter the netmask for the port's IP address. This is required. If you selected IPv6 addressing, enter the prefix length (in bits). Valid values range from 10 through 127.
Default Gateway IPv4/IPv6 address field	Enter a default gateway IP address to use for the port. Important Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.

IPv4/IPv6 DNS Servers field	<p>Enter the IP address of the preferred DNS server. If you are entering multiple DNS servers, separate the IP addresses in the list with spaces.</p> <p>Important</p> <ul style="list-style-type: none"> • For NTP, ensure port 123 (UDP) is open between Cisco DNA Center and your NTP server. • For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for an appliance.
IPv4/IPv6 Static Routes field	Enter one or more static routes in the following format, separated by spaces: <code><network>/<netmask>/<gateway></code> .
Cluster Link field	Leave this field blank. It is required on the Cluster port only.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens. The wizard validates and applies your network adapter configurations.

Step 9

After successful validation of the Management port values you entered, the wizard presents the 1-Gbps/10-Gbps Internet port as **NETWORK ADAPTER #4**. As explained in [Interface Cable Connections](#), this is an optional port used to link the appliance to the Internet when you cannot do so through the 10-Gbps Enterprise port. Apply the host IP address, netmask, and other values that are appropriate for this purpose (see [Required IP Addresses and Subnets](#) and [Required Configuration Information](#) for the values to enter).

STEP #3	OPTIONAL - NETWORK ADAPTER #4 (Internet)
<p>(Optional) Enter the network settings for the 4th network adapter - (70:69:5a:48:8f:4f - UNKNOWN - internet-access network).</p> <p>Recommended use: internet-access network</p> <p>Cable status: disconnected</p> <p>Phy Interfaces: eno2 enp216s0f1</p> <p>Remove all NFS mount before network changes</p>	<p>Host IPv4 Address:</p> <p>IPv4 Netmask:</p> <p>Default Gateway IPv4 Address:</p> <p>IPv4 DNS Servers:</p> <p>IPv4 Static Routes:</p> <p>Cluster Link</p>
<p><< back < cancel > done >> next >></p>	

Enter the configuration values for **NETWORK ADAPTER #4**, as shown in the table below.

Table 29: Secondary Node Entries for Network Adapter #4: 1-Gbps/10-Gbps Internet Port

Host IPv4/IPv6 address field	Enter the IP address for the Internet port. This is required only if you are using the Cloud port for internet connection; otherwise, you can leave it blank.
IPv4 Netmask/IPv6 Prefix Length field	Do one of the following: <ul style="list-style-type: none"> If you selected IPv4 addressing, enter the netmask for the port's IP address. This is required. If you selected IPv6 addressing, enter the prefix length (in bits). Valid values range from 10 through 127.
Default Gateway IPv4/IPv6 address field	Enter a default gateway IP address to use for the Internet port. <p>Important Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.</p>

IPv4/IPv6 DNS Servers field	Enter the IP address of the preferred DNS server. If you are entering multiple DNS servers, separate the IP addresses in the list with spaces. Important For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for an appliance.
IPv4/IPv6 Static Routes field	Enter one or more static routes in the following format, separated by spaces: <network>/<netmask>/<gateway>. This is usually required on the Management port only.
Cluster Link field	Leave this field blank. It is required on the Cluster port only.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens. The wizard validates and applies your network adapter configurations.

Step 10

After the network adapter configuration is complete, the wizard prompts you to enter configuration values for the **NETWORK PROXY** that you are using, as shown below.

STEP #4

The controller appears to be behind a network proxy.

Note : During Network Proxy update operation, enter password details only if it requires to be updated (or) if authentication details for network proxy needs to be entered/updated.

NETWORK PROXY

HTTPS Proxy:
http://proxy-usa.esl.cisco.com:80

HTTPS Proxy Username:

HTTPS Proxy Password:

<< back
cancel >
next >>

Enter the configuration values for the **NETWORK PROXY**, as shown in the table below.

Table 30: Secondary Node Entries for Network Proxy

HTTPS Proxy field	<p>Enter the URL or host name of an HTTPS network proxy used to access the Internet.</p> <p>Note</p> <ul style="list-style-type: none">• Connection from Cisco DNA Center to the HTTPS proxy is supported only through HTTP in this release.• If you enter an IPv6 URL that contains a port number, enclose the IP address portion of the URL in square brackets. In this example, 443 is the port number: https://[2001:db8:85a3:8d3:1319:8a2e:370:7348]:443/
HTTPS Proxy Username field	<p>Enter the user name used to access the network proxy. If no proxy login is required, leave this field blank.</p>
HTTPS Proxy Password field	<p>Enter the password used to access the network proxy. If no proxy login is required, leave this field blank.</p>

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens.

Step 11

After network proxy configuration completes, the wizard prompts you to identify the Cluster port on the primary node and primary node login details, in **MAGLEV CLUSTER DETAILS** (as shown below).

STEP #5

Virtual IP address(s) is a list of IP(s) through which the Cluster's Management, Enterprise Interfaces can be accessible.

Note that these are different from node's individual IP.

MAGLEV CLUSTER DETAILS

Maglev Primary Node: *

169.254.6.66

Username: *

maglev

Password: *

<< back < cancel > next >>

Enter the values for **MAGLEV CLUSTER DETAILS**, as shown in the table below.

Table 31: Secondary Node Entries for Maglev Cluster Details

Maglev Primary Node field	Enter the IP address of the Cluster port on the primary node in the cluster. If you have followed the recommendations for port assignment, this will be the IP address of Network Adapter #2 on the primary node.
Username field	Enter maglev .
Password field	Enter the Linux password you configured on the primary node.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens.

Step 12 After you have entered the cluster details, the wizard prompts you to enter **USER ACCOUNT SETTINGS** values, as shown below.

STEP #6

Specify a new password for the 'maglev' user.

Please use SHIFT for capitalization, using CAPS LOCK may result in inconsistent password.

* Indicates a mandatory field.

Password generation is optional, but recommended.

User is advised to append personal password with generated password for recommended security.

Caution: Remember generated password for future log ins.

USER ACCOUNT SETTINGS

Linux Password: *

Re-enter Linux Password: *

Password Generation Seed:

< Generate Password >

Auto Generated Password:

< Use Generated Password >

Administrator Passphrase: *

Re-enter Administrator Passphrase: *

<< back
< cancel >
next >>

Enter the values for **USER ACCOUNT SETTINGS**, as shown in the table below.

Table 32: Secondary Node Entries for User Account Settings

Linux Password field	Enter a Linux password for the maglev user.
Re-enter Linux Password field	Confirm the Linux password by entering it a second time.
Password Generation Seed field	If you do not want to create the Linux password yourself, enter a seed phrase in this field and then press < Generate Password > to generate the password.
Auto Generated Password field	(Optional) The seed phrase appears as part of a random and secure password. If required, you can either use this password as is, or you can further edit this auto-generated password. Click < Use Generated Password > to save the password.
Administrator Password field	Enter a password for the default admin superuser, used to log in to Cisco DNA Center for the first time.
Re-enter Administrator Password field	Confirm the administrator password by entering it a second time.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens.

Step 13 After you have entered the user account details, the wizard prompts you to enter **NTP SERVER SETTINGS** values, as shown below.

STEP #7

Enter the IP address of the NTP server that the controller will use.

It is recommended to specify 3 or more NTP servers to improve availability and time accuracy.

Please note that the NTP server(s) must be accessible in order for the configuration to succeed.

* Indicates a mandatory field

NTP SERVER SETTINGS

NTP Servers: *

ntp.es1.example.com ntp1.es1.example.com ntp2.es1.example.com

<< back < cancel > next >>

Enter one or more NTP server addresses or hostnames, separated by spaces. At least one NTP address or hostname is required. They should be the same NTP servers that you specified for the primary node.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens. The wizard validates and applies your NTP server configuration.

Step 14 When you are finished entering the NTP server settings, a final message appears, stating that the wizard is ready to apply the configuration (as shown below).


```
The wizard is now ready to apply the configuration on the controller.
Use the [back] button below to verify/modify controller settings.
Use the [cancel] button to discard your changes and exit the wizard.
Use the [proceed] button to save your changes and proceed with applying them on the controller.

<< back                                < cancel >                                proceed >>
```

Click **proceed>>** to complete the configuration wizard.

The host will reboot automatically and display messages on the KVM console as it applies your settings and brings up services. This process can take several hours. You can monitor its progress via the KVM console.

At the end of the configuration process, the appliance power-cycles again, then displays a **CONFIGURATION SUCCEEDED!** message.

```
CONFIGURATION SUCCEEDED

The configuration wizard has completed successfully!
To access the Maglev Web UI, please point your browser to one of the following URLs:

To access the Maglev Web Console, please point your browser to one of the following URLs:
https://17.192.1.226
https://169.254.6.64
https://172.29.131.226

The wizard will automatically close in 30 seconds
```

What to do next

- If you have an additional appliance to deploy as the third and final node in the cluster, repeat this procedure.
- If you have finished adding hosts to the cluster, perform the first-time setup: [First-Time Setup Workflow](#).

Upgrade to the Latest Cisco DNA Center Release

For information about upgrading your current release of Cisco DNA Center, see the [Cisco DNA Center Upgrade Guide](#).



CHAPTER 6

Configure the 44/56 Core Appliance Using the Browser-Based Wizard

- [Appliance Configuration Overview, on page 111](#)
- [Browser-Based Wizard Prerequisites, on page 111](#)
- [Configure the Primary Node Using the Expert Configuration Wizard, on page 112](#)
- [Configure a Secondary Node Using the Expert Configuration Wizard, on page 128](#)
- [Generate a Linux Password, on page 146](#)
- [Upgrade to the Latest Cisco DNA Center Release, on page 147](#)

Appliance Configuration Overview

You can deploy the 44 or 56-core appliance in your network in one of the following modes:

- **Standalone:** As a single node offering all the functions. This option is usually preferred for initial or test deployments and in smaller network environments. If you choose Standalone mode for your initial deployment, this will be your first, or primary, node. Note that you can add more appliances later to form a cluster.
- **Cluster:** As a node that belongs to a three-node cluster. In this mode, all the services and data are shared among the hosts. This is the preferred option for large deployments. If you choose Cluster mode for your initial deployment, be sure to finish configuring the primary node before configuring the secondary nodes.

To proceed, complete the following tasks:

1. Configure the primary node in your cluster (see [Configure the Primary Node Using the Expert Configuration Wizard, on page 112](#)).
2. If you have installed three appliances and want to add the second and third nodes to your cluster, see [Configure a Secondary Node Using the Expert Configuration Wizard, on page 128](#).

Browser-Based Wizard Prerequisites

To use the browser-based wizard and ensure that it configures your appliance properly, do the following:

- Designate the Enterprise interface on your appliance to use the IP address, subnet mask, and default gateway that a DHCP server assigns to it. When you configure this interface in the wizard, you will not be able to change the IP address or subnet mask that have been assigned to it. You will only be able to change its default gateway. The topics in this chapter assume that the Enterprise interface was chosen for this purpose.
- Confirm that the IP address assigned by the DHCP server is reachable by the machine from which you will complete the wizard.
- For the Enterprise and Intracluster interfaces, verify that both interfaces are connected and in the **UP** state.

Configure the Primary Node Using the Expert Configuration Wizard

Perform the following steps to configure the first installed appliance as the primary node using the Expert Configuration wizard. You must always configure the first appliance as the primary node, whether it will operate standalone or as part of a cluster.



Important

The following second generation Cisco DNA Center appliances support configuration using this wizard:

- 44-core appliance: Cisco part number DN2-HW-APL
- 44-core promotional appliance: Cisco part number DN2-HW-APL-U
- 56-core appliance: Cisco part number DN2-HW-APL-L
- 56-core promotional appliance: Cisco part number DN2-HW-APL-L-U

The first generation 44-core Cisco DNA Center appliance (Cisco part number DN1-HW-APL) *cannot* be configured using this wizard.

If you are configuring the installed appliance as a secondary node for an existing cluster that already has a primary node, follow the steps in [Configure a Secondary Node Using the Expert Configuration Wizard, on page 128](#) instead.



Note

Ensure that all of the IP addresses you enter while completing this procedure are valid IPv4 addresses with valid IPv4 netmasks. Also make sure that the addresses and their corresponding subnets do not overlap. Service communication issues can result if they do.

Before you begin

Ensure that you:

- Installed the Cisco DNA Center software image onto your appliance, as described in [Reimage the Appliance, on page 69](#).

**Important**

This is only applicable if you are going to configure a promotional appliance, because the Cisco DNA Center software image is not preinstalled on the following appliances:

- 44-core promotional appliance (Cisco part number DN2-HW-APL-U)
- 56-core promotional appliance: (Cisco part number DN2-HW-APL-L-U)

- Collected all of the information called for in [Required IP Addresses and Subnets, on page 26](#) and [Required Configuration Information](#).
- Installed the first appliance as described in [Appliance Installation Workflow](#).
- Configured Cisco IMC browser access on the primary node, as described in [Enable Browser Access to Cisco Integrated Management Controller](#).
- Checked that the primary node's ports and the switches it uses are properly configured, as described in [Execute Preconfiguration Checks](#).
- Are using a browser that is compatible with Cisco IMC and Cisco DNA Center. For a list of compatible browsers, see the [Release Notes](#) for the version of Cisco DNA Center you are installing.
- Enabled ICMP on the firewall between Cisco DNA Center and both the default gateway and the DNS server you specify in the following procedure. The wizard uses ping to verify the gateway and DNS server you specify. This ping might get blocked if a firewall is in place and ICMP is not enabled on that firewall. When this happens, you will not be able to complete the wizard.

Step 1

Start the Expert Configuration wizard:

- Point your browser to the Cisco IMC IP address you set during the Cisco IMC GUI configuration you performed, then log in to the Cisco IMC GUI as the Cisco IMC user (see [Enable Browser Access to Cisco Integrated Management Controller](#)).

After successful login, the appliance displays the **Cisco Integrated Management Controller Chassis Summary** window, with a blue link menu at the upper right, as shown below.



- From the blue link menu, choose **Launch KVM** and then select either **Java based KVM** or **HTML based KVM**. If you select the Java-based KVM, you will need to launch the Java startup file from your browser or file manager in order to view the KVM console in its own window. If you select the HTML-based KVM, it will launch the KVM console in a separate browser window or tab automatically.

Irrespective of the KVM type you choose, use the KVM console to monitor the progress of the configuration and respond to Maglev Configuration Wizard prompts.

- c) With the KVM displayed, reboot the appliance by making one of the following selections:
- In the main Cisco IMC GUI browser window: Choose **Host Power > Power Cycle**. Then switch to the KVM console to continue.
 - In the KVM console: Choose **Power > Power Cycle System (cold boot)**.

If asked to confirm your choice to reboot the appliance, click **OK**.

After displaying reboot messages, the KVM console displays the Maglev Configuration wizard welcome screen.

```
Welcome to the Maglev Configuration Wizard!

The wizard will walk you through the steps to configure this host. Select one of the options below to specify how you
would like to configure this host:


Start a Cisco DNA Center Cluster
Join a Cisco DNA Center Cluster

< exit >

Web installation: https://172.29.131.26:9004/
```


Note the URL listed in the **Web Installation** field.

- d) Open this URL to bring up the **Appliance Configuration** screen.

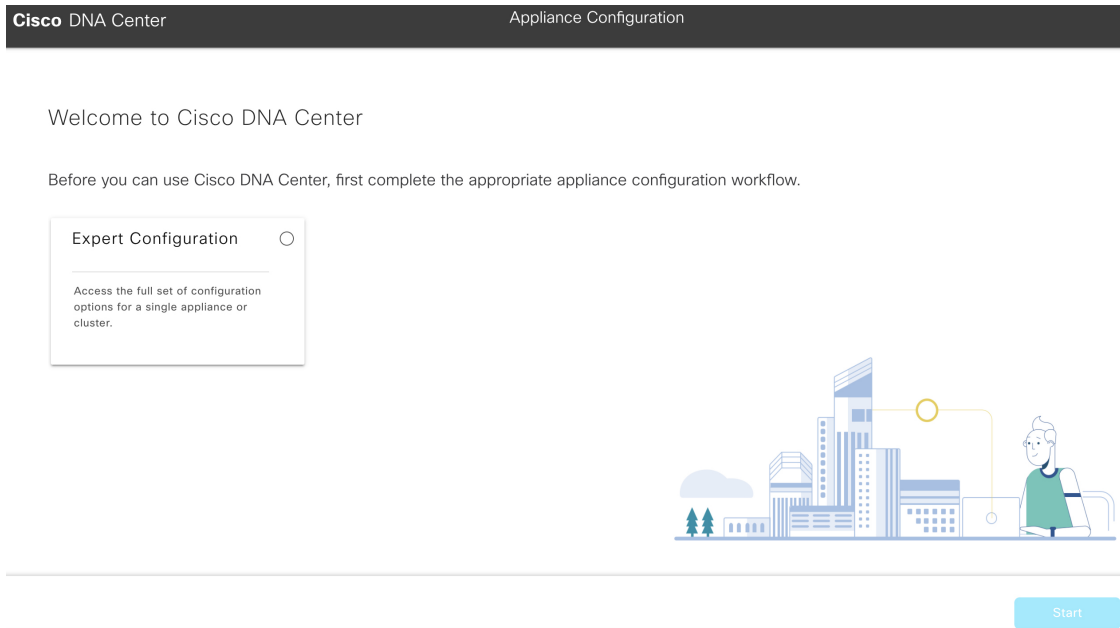


- e) Click the **Expert Configuration** radio button, then click **Start**.

The **Expert Configuration Overview** slider opens. Click > to view a summary of the tasks that the wizard will help you complete.

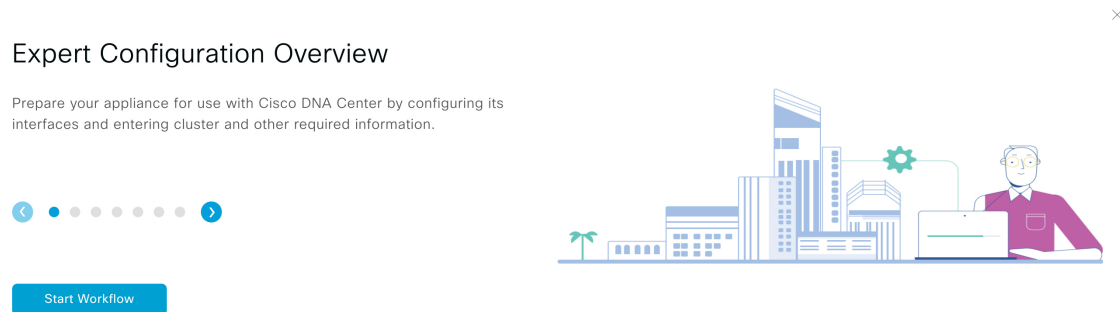

- f) Click **Start Workflow** to start the wizard.

The **Appliance Interface Overview** screen opens, providing a description of the four appliance interfaces that you can configure.

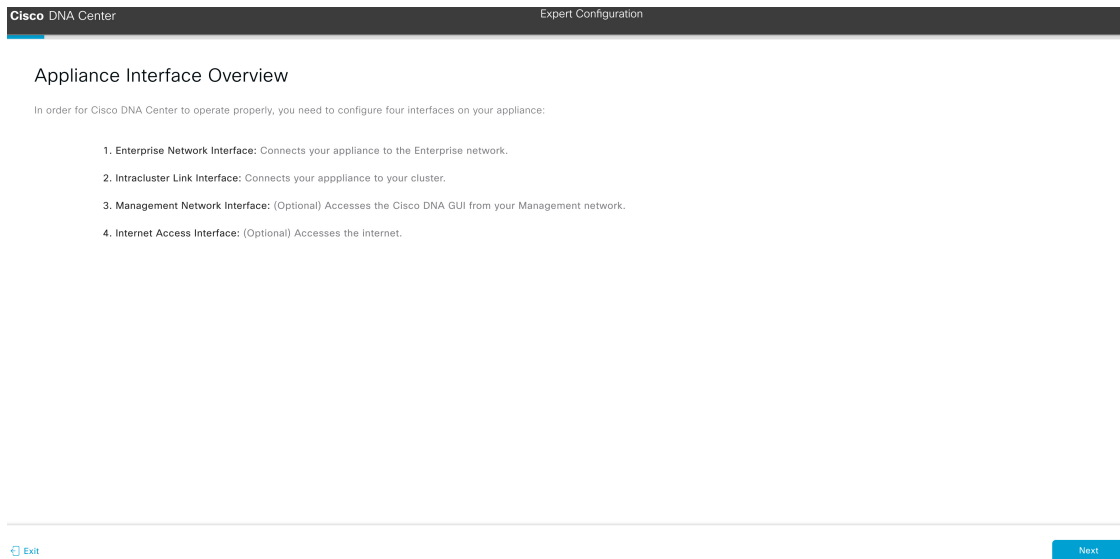


At a minimum, you must configure the interfaces on your appliance's Enterprise and Cluster ports, as they are required for Cisco DNA Center functionality. If the wizard fails to display either or both of these ports during the course of configuration, they may be non-functional or disabled. If you discover that they are non-functional, choose **Exit** to exit the wizard immediately. Be sure you have completed all of the steps provided in [Execute Preconfiguration Checks](#) before resuming configuration or contacting the Cisco Technical Assistance Center (TAC).

Step 2 Complete the Expert Configuration wizard:

a) Click **Next**.

The **Will this appliance join a cluster?** screen opens.

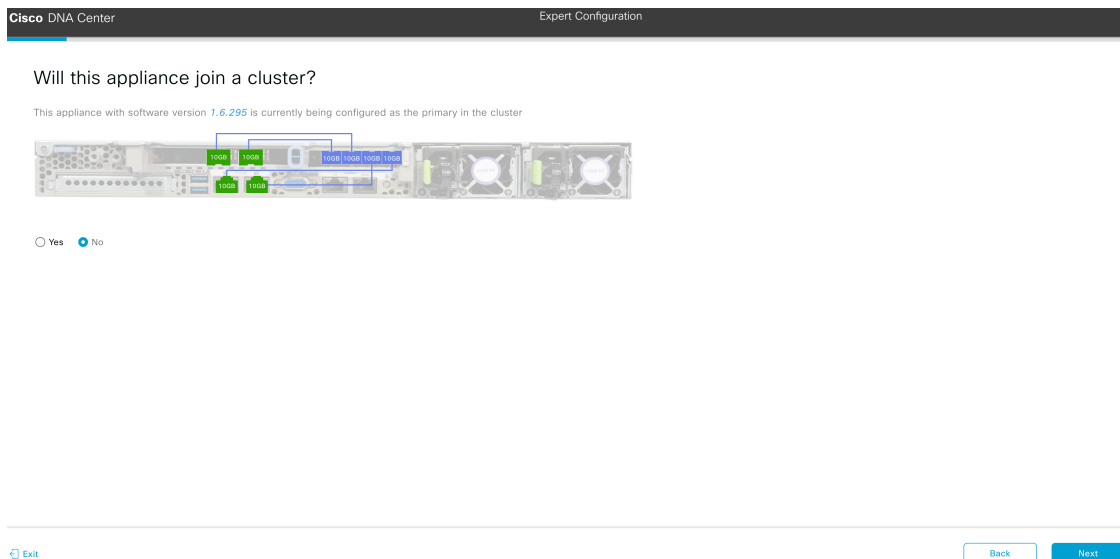


b) Click the **No** radio button (as you are configuring your cluster's primary node), then click **Next**.

The **How would you like to set up your appliance interfaces?** screen opens.

Cisco DNA Center Expert Configuration

How would you like to set up your appliance interfaces?

Currently we detected 4 connected ports (highlighted in green) on the appliance's rear panel. Before you start, reserve the IP addresses necessary for configuration. If your network resides behind a firewall, be sure to [allow access to these URLs](#) and [open these ports](#).



Enterprise Network Interface

Intracuster Link Network

The Enterprise Network Interface and Intracuster Link Interface will be configured using the two 10-Gbps ports as shown above.

Would you like to have a dedicated Management Network Interface?

☒ Yes ☐ No

Would you like to have a dedicated Internet Access Interface?

☒ Yes ☐ No

Exit Back Next


If your network resides behind a firewall, do the following:

- Click the **allow access to these URLs** link to view a popup window that lists the URLs that Cisco DNA Center must be able to access.
 - Click the **open these ports** link to view a popup window that lists the network service ports that must be available for Cisco DNA Center to use.
- c) Indicate whether you want to configure dedicated Management and Internet Access interfaces, then click **Next**.

The **Configure Your Enterprise Network Interface** screen opens.

Cisco DNA Center Expert Configuration

Configure Your Enterprise Network Interface



Enterprise Network Interface

☒ LACP Mode
This mode provides fault tolerance features via active-backup policy.

Host IP Address
10.106.172.47 Enter IPv4

Subnet Mask
255.255.255.128 Enter IPv4 or 0-32 range

Default Gateway IP Address
10.106.172.1 Enter Host name or IP address

DNS Servers
171.70.168.183
To enter multiple addresses, use comma as separator

[Add Static Route](#)

Exit Back Next

- d) Enter configuration values for the Enterprise interface.

As explained in [Interface Cable Connections](#), this is a required interface used to link the appliance to the enterprise network. See [Required IP Addresses and Subnets, on page 26](#) and [Required Configuration Information](#) for a more detailed description of the values you need to enter.

Note

- If you opted to configure the Enterprise and Internet Access interfaces on the same port, complete this step and then proceed to Step 2e (which describes how to configure your Management interface).
- If you opted to configure the Enterprise and Management interfaces on the same port, complete this step and then skip ahead to Step 2f (which describes how to configure your Internet Access interface).
- If you opted to configure the Enterprise, Management, and Internet Access interfaces on the same port, complete this step and then skip ahead to Step 2g (which describes how to configure your Intracluster interface).

Table 33: Primary Node Entries for the Enterprise Interface

LACP Mode slider	<p>Choose one of the following network interface controller (NIC) bonding modes for the Enterprise interface:</p> <ul style="list-style-type: none"> • Active-Backup mode: This mode provides fault tolerance by aggregating two Ethernet interfaces into a single logical channel. When the interface that's currently active goes down, the other interface takes its place and becomes active. • LACP mode: This mode aggregates two Ethernet interfaces that share the same speed and duplex settings into a single logical channel. This provides load balancing and higher bandwidth. <p>For more information about Cisco DNA Center's implementation of NIC bonding, see NIC Bonding Overview, on page 62.</p>
Host IP Address field	Enter the IP address for the Enterprise port. This is required.
Subnet Mask field	Enter the netmask for the port's IP address. This is required.
Default Gateway IP Address field	<p>Enter a default gateway IP address to use for the port.</p> <p>Important Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.</p> <p>Note You designated this interface to use the default gateway assigned to it by a DHCP server. Complete the following steps to specify a different gateway:</p> <ol style="list-style-type: none"> 1. Delete the IP address that is currently listed in this field and then click Exit. This will bring you back to the first wizard screen. 2. Return to the Enterprise port's wizard screen and enter the gateway IP address you want to use.

DNS Servers field	<p>Enter the IP address of the preferred DNS server. If entering multiple DNS servers, separate the IP addresses in the list with commas.</p> <p>Important For each node in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for an appliance.</p>
Add Static Route link	<p>To configure a static route, click this link and then do the following:</p> <ol style="list-style-type: none"> 1. Enter the route's network IP prefix, subnet mask, and nexthop IP address. To configure additional static routes, click +. 2. Click Add.


From here, do one of the following:

- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.
- To proceed to the next wizard screen, click **Next**.

The wizard validates the information you have entered, confirms that the port is up, and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid and the port is up, the wizard's **Configure Your Management Network Interface** screen opens.

Cisco DNA Center
Expert Configuration

Configure Your Management Network Interface



Enterprise Network Interface ⓘ

Interface Name	enterprise
LACP Mode	Disabled ⓘ
IP Address	10.106.172.47
Subnet Mask	255.255.255.128
Default Gateway	10.106.172.1
DNS Servers	171.70.168.183

Management Network Interface ⓘ

Host IP Address	10.20.30.40 <small>Enter IPv4</small>
Subnet Mask	255.255.255.0 <small>Enter IPv4 or 0-32 range</small>
Default Gateway IP Address	<small>Default Gateway already configured in Enterprise Network</small>
DNS Servers	<small>To enter multiple addresses, use comma as separator</small>

[Add Static Route](#) ⓘ

[Exit](#)

Back
Next

- e) (Optional) Enter configuration values for the Management port.

As explained in [Interface Cable Connections](#), this port is used to access the Cisco DNA Center GUI from your management network. If you chose to configure a dedicated Management interface, enter the information described in the following table. (See [Required IP Addresses and Subnets](#), on page 26 and [Required Configuration Information](#) for a more detailed description of the values you need to enter.)

- Note**
- If you opted to configure the Enterprise and Management interfaces on the same port, skip this step and proceed to Step 2f (which describes how to configure your Internet Access interface).
 - If you opted to configure the Enterprise, Management, and Internet Access interfaces on the same port, skip this step and proceed to Step 2g (which describes how to configure your Intracluster interface).

Table 34: Primary Node Entries for the Management Port

Host IP Address field	Enter the IP address for the Management port. This is required.
Subnet Mask field	Enter the netmask for the port's IP address. This is required.
Default Gateway IP Address field	Enter a default gateway IP address to use for the port. Important Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.
DNS Servers field	Enter the IP address of the preferred DNS server. If entering multiple DNS servers, separate the IP addresses in the list with spaces. Important <ul style="list-style-type: none"> • For NTP, ensure port 123 (UDP) is open between Cisco DNA Center and your NTP server. • For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for a node.
Add Static Route link	To configure a static route, click this link and then do the following: 1. Enter the route's network IP prefix, subnet mask, and nexthop IP address. To configure additional static routes, click +. 2. Click Add .


From here, do one of the following:

- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.
- To proceed to the next wizard screen, click **Next**.

The wizard validates the information you have entered, confirms that the port is up, and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid and the port is up, the wizard's **Configure Your Internet Access Interface** screen opens.

Cisco DNA Center Expert Configuration

Configure Your Internet Access Interface

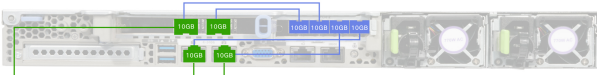

Enterprise Network Interface ⓘ

Interface Name enterprise

LACP Mode Disabled ⓘ

IP Address 10.106.172.47

Subnet Mask 255.255.255.128

Default Gateway 10.106.172.1

DNS Servers 171.70.168.183

Internet Network Interface ⓘ

Host IP Address 11.21.31.41 Enter IPv4

Subnet Mask 255.255.255.0 Enter IPv4 or 0-32 range

Default Gateway IP Address Default Gateway already configured in Enterprise Network

DNS Servers To enter multiple addresses, use comma as separator

[Add Static Route ⓘ](#)

Management Network Interface ⓘ

Interface Name management

[Exit](#) [Back](#) [Next](#)

- f) (Optional) Enter configuration values for the Internet Access interface.

As explained in [Interface Cable Connections](#), this is an optional port used to link the appliance to the Internet when you cannot do so through the Enterprise port. If you chose to configure a dedicated Internet Access interface, enter the information described in the following table. (See [Required IP Addresses and Subnets](#), on page 26 and [Required Configuration Information](#) for a more detailed description of the values you need to enter.)

Note If you opted to configure the Enterprise and Internet Access interfaces on the same port, skip this step and then proceed to Step 2g (which describes how to configure your Intracluster interface).

Table 35: Primary Node Entries for the Internet Access Port

Host IP Address field	Enter the IP address for the Internet Access port.
Subnet Mask field	Enter the netmask for the port's IP address. This is required if you enter an IP address.
Default Gateway IP Address field	Enter a default gateway IP address to use for the port. Important Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.
DNS Servers field	Enter the IP address of the preferred DNS server. If entering multiple DNS servers, separate the IP addresses in the list with spaces. Important For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for a node.

Add Static Route link	<p>To configure a static route, click this link and then do the following:</p> <ol style="list-style-type: none"> 1. Enter the route's network IP prefix, subnet mask, and nexthop IP address. To configure additional static routes, click +. 2. Click Add.
-----------------------	---

From here, do one of the following:

- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.
- To proceed to the next wizard screen, click **Next**.

The wizard validates the information you have entered, confirms that the port is up, and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid and the port is up, the wizard's **Configure Your Intracluster Interface** screen opens.

Cisco DNA Center Expert Configuration

Configure Your Intracluster Interface

Enterprise Network Interface

Interface Name: enterprise

LACP Mode: Disabled

IP Address: 10.106.172.47

Subnet Mask: 255.255.255.128

Default Gateway: 10.106.172.1

DNS Servers: 171.70.168.183

Internet Network Interface

Interface Name: internet

IP Address: 11.21.31.41

Subnet Mask: 255.255.255.0

Intracluster Link Network

☐ LACP Mode

This mode provides fault tolerance features via active-backup policy.

Host IP Address*: 169.254.6.66

Subnet Mask*: 255.255.255.128

Enter IPv4 or 0-32 range

Management Network Interface

Interface Name: management

IP Address: 10.20.30.40

Subnet Mask: 255.255.255.0

Exit Back Next

- g) Enter configuration values for your Intracluster interface.

As explained in [Interface Cable Connections](#), this required port is used to link the appliance to your cluster. See [Required IP Addresses and Subnets, on page 26](#) and [Required Configuration Information](#) for a more detailed description of the values you need to enter.

Table 36: Primary Node Entries for the Intracluster Interface

LACP Mode slider	<p>Choose one of the following NIC bonding modes for the Intracluster interface:</p> <ul style="list-style-type: none"> • Active-Backup mode: This mode provides fault tolerance by aggregating two Ethernet interfaces into a single logical channel. When the interface that's currently active goes down, the other interface takes its place and becomes active. • LACP mode: This mode aggregates two Ethernet interfaces that share the same speed and duplex settings into a single logical channel. This provides load balancing and higher bandwidth. <p>For more information about Cisco DNA Center's implementation of NIC bonding, see NIC Bonding Overview, on page 62.</p>
Host IP Address field	Enter the IP address for the Cluster port. This is required. Note that you cannot change the address of the Cluster port later.
Subnet Mask field	Enter the netmask for the port's IP address. This is required.

From here, do one of the following:

- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.
- To proceed to the next wizard screen, click **Next**.

The wizard validates the information you have entered, confirms that the port is up, and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid and the port is up, the wizard's **Interface to Port Configuration** screen opens.

Cisco DNA Center Expert Configuration

Interface to Port Configuration

We are going to configure the following interfaces. Click Configure and wait for configuration to be done before proceeding to the next step.

[Configure](#)

Enterprise Network Interface

Interface Name	enterprise
LACP Mode	Disabled
IP Address	10.106.172.47
Subnet Mask	255.255.255.128
Default Gateway	10.106.172.1
DNS Servers	171.70.168.183

[Edit](#)

Internet Network Interface

Interface Name	internet
IP Address	11.21.31.41
Subnet Mask	255.255.255.0

[Edit](#)

Intracluster Link Network

Interface Name	cluster
LACP Mode	Disabled
IP Address	169.254.6.66
Subnet Mask	255.255.255.128

[Edit](#)

Management Network Interface

Interface Name	management
IP Address	10.20.30.40

[Exit](#) [Back](#) [Next](#)

- h) Review the settings that you have entered for the primary node's interfaces.

If you need to make any changes, click the **Edit** link for the relevant interface.

- i) When you are happy with the interface settings, click **Configure**.
- j) After initial interface configuration has completed, click **Next**.

The wizard's **Configure Proxy Server Information** screen opens.

Cisco DNA Center Expert Configuration

Configure Proxy Server Information

Does your network use a proxy server to access the internet?

☒ Yes ☐ No

Proxy Server*

http://proxy-wsa.esl.example.com

E.g.: http://example.com

Port*

80

Enter port number between 0 to 65535.

Username

Password

[Exit](#) [Review](#) [Back](#) [Next](#)

- k) Do one of the following:
 - If your network does *not* use a proxy server to access the internet, click the **No** radio button and then click **Next**.
 - If your network does use a proxy server to access the internet, enter the values described in the following table:

Table 37: Primary Node Entries for Proxy Server Settings

Proxy Server field	Enter the URL or host name of an HTTPS network proxy used to access the Internet. Note Connection from Cisco DNA Center to the HTTPS proxy is supported only via HTTP in this release.
Port field	Enter the port your appliance used to access the network proxy.
Username field	Enter the user name used to access the network proxy. If no proxy login is required, leave this field blank.
Password field	Enter the password used to access the network proxy. If no proxy login is required, leave this field blank.

From here, do one of the following:

- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.

- To proceed to the next wizard screen, click **Next**.

The wizard validates the information you have entered and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid and the port is up, the wizard's **Cluster Details** screen opens.

Cisco DNA Center Expert Configuration

Cluster Details

Please enter the IP networks for the cluster and service subnets. These networks will be internal to the cluster and non-routed, but should not overlap with the interface IP ranges. It is recommended not to change this value and use the default settings.

Container Subnet*
169.254.32.0/20
Minimum subnet size is 21 bits. Slash notation is allowed.

Cluster Subnet*
169.254.48.0/20
Minimum subnet size is 21 bits. Slash notation is allowed.

NTP Servers*
ntp.esl.cisco.com
Separate multiple addresses with a comma.

Fully Qualified Domain Name (FQDN)

Cluster VIP Addresses

To access from Enterprise Network Enter IPv4 For Intracluster Access Enter IPv4

To access from Management Network Enter IPv4

LINUX ADMIN CREDENTIALS

Username*
 maglev

Password* [View Password Criteria](#)

Confirm Password*

CISCO DNA CENTER ADMIN CREDENTIALS

Username*
 admin

Password* [View Password Criteria](#)

Confirm Password*

[Exit](#) Review Back Next

- Enter configuration values for your cluster.

Table 38: Primary Node Entries for Cluster Settings

Container Subnet field	A dedicated, non-routed IP subnet that Cisco DNA Center uses to manage internal services. By default, this is already set to 169.254.32.0/20 , and we recommend that you use this subnet. If you choose to enter another subnet, ensure that it does not conflict with or overlap any other subnet used by the Cisco DNA Center internal network or an external network. For more information, see the Container Subnet description in Required IP Addresses and Subnets, on page 26 .
Cluster Subnet field	A dedicated, non-routed IP subnet that Cisco DNA Center uses to manage internal cluster services. By default, this is already set to 169.254.48.0/20 , and we recommend that you use this subnet. If you choose to enter another subnet, ensure that it does not conflict with or overlap any other subnet used by the Cisco DNA Center internal network or an external network. For more information, see the Cluster Subnet description in Required IP Addresses and Subnets, on page 26 .

NTP Servers field	<p>Enter one or more NTP server addresses or hostnames, separated by commas. At least one NTP address or hostname is required.</p> <p>For a production deployment, Cisco recommends that you configure a minimum of three NTP servers.</p>
Fully Qualified Domain Name (FQDN) field	<p>Enter the fully qualified domain name (FQDN) for your cluster. Cisco DNA Center does the following with this hostname:</p> <ul style="list-style-type: none"> • It uses this hostname to access your cluster's web interface and the Representational State Transfer (REST) APIs used by devices in the enterprise network that Cisco DNA Center manages. • In the Subject Alternative Name (SAN) field of Cisco DNA Center certificates, it uses the FQDN to define the Plug and Play server that should be used for device provisioning.
Cluster VIP Addresses	
<p>To access from Enterprise Network, To access from Management Network, For Internet Access, and For Intracluster Access fields</p> <p>Note If you configured the Management or Internet Access interface on the same port as the Enterprise interface, its corresponding field is not displayed in this section.</p>	<p>Enter the virtual IP address that will be used for traffic between the cluster and the interfaces that you have configured on your primary node. This is required for both three-node clusters and single-node clusters that will be converted into a three-node cluster in the future. If you have a single-node cluster setup and plan to stick with it, you can leave the fields in this section blank.</p> <p>Important You must enter one virtual IP address for each configured network interface. You will not be able to complete the wizard unless you do so. This address is tied to the cluster link's status, which must be in the UP state.</p>
Linux Admin Credentials	
Password and Confirm Password fields	Enter and then confirm the password for the <code>maglev</code> user.
Cisco DNA Center Admin Credentials	
Password and Confirm Password fields	Enter and then confirm the password for the default admin superuser, used to log in to Cisco DNA Center for the first time.

From here, do one of the following:

- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.

- To proceed to the next wizard screen, click **Next**.

The wizard validates the information you have entered and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid, the wizard's **Summary** screen opens.

Cisco DNA Center Expert Configuration

Summary

Please review the settings that you have entered. If you need to make any changes, click the appropriate Edit link and make the necessary updates. When you are happy with your settings, click Start Configuration.

Ports Configuration Completed

Enterprise Network Interface	
Interface Name	enterprise
LACP Mode	Disabled
IP Address	10.106.172.47
Subnet Mask	255.255.255.128
Default Gateway	10.106.172.1
DNS Servers	171.70.168.183
Edit	

Internet Network Interface	
Interface Name	internet
IP Address	11.21.31.41
Subnet Mask	255.255.255.0
Edit	

Intracluster Link Network	
Interface Name	cluster
LACP Mode	Disabled
IP Address	169.254.6.66
Subnet Mask	255.255.255.128
Edit	

Management Network Interface	
Interface Name	management
IP Address	10.20.30.40

[Exit](#) [Start Configuration](#)

- Review all of the settings that you have entered while completing the wizard. If necessary, click the appropriate **Edit** link to open the wizard screen in which you want to make updates.
- To complete the configuration of your Cisco DNA Center appliance, click **Start Configuration**.

The wizard screen continuously updates during the process, indicating the tasks that are currently being completed and their progress, as well as any errors that have occurred. To save a local copy of this information as a text file, click the download icon.

Cisco DNA Center Configuration

Application Configuration In Progress

It should take about 90 minutes to complete the configuration of your appliance. As you wait, you can view a video that explains the next steps in the Cisco DNA Center setup process.

0%

Started: Invalid date

```

2021-01-06 02:39:32,811 | renew_certs : Collating the expiry results
2021-01-06 02:39:33,040 | renew_certs : debug
2021-01-06 02:39:33,339 | controller-manager.conf Jan 4 22:47:18 2021 GMT Jan 4
23:29:48 2022 GMT
2021-01-06 02:39:33,340 | -----

```

ABOUT STARTING CISCO DNA CENTER

0:00

While the configuration process is taking place, you can also watch a quick video that describes how to get started using Cisco DNA Center.

What to do next

When this task is complete:

- If you are deploying this appliance in standalone mode only, continue by performing first-time setup: [First-Time Setup Workflow](#).
- If you are deploying this appliance as the primary node in a cluster, configure the second and third installed appliances in the cluster: [Configure a Secondary Node Using the Expert Configuration Wizard](#), on page 128.

Configure a Secondary Node Using the Expert Configuration Wizard

Perform the following steps to configure the second and third nodes in the cluster using the Expert Configuration wizard.



Important

- In order to build a three-node cluster, the same version of the **System** package must be installed on your three Cisco DNA Center appliances. Otherwise, unexpected behavior and possible downtime can occur.
- The following second generation Cisco DNA Center appliances support configuration using the Expert Configuration wizard:
 - 44-core appliance: Cisco part number DN2-HW-APL
 - 44-core promotional appliance: Cisco part number DN2-HW-APL-U
 - 56-core appliance: Cisco part number DN2-HW-APL-L
 - 56-core promotional appliance: Cisco part number DN2-HW-APL-L-U

The first generation 44-core Cisco DNA Center appliance (Cisco part number DN1-HW-APL) *cannot* be configured using this wizard.



Note

Ensure that all of the IP addresses you enter while completing this procedure are valid IPv4 addresses with valid IPv4 netmasks. Also make sure that the addresses and their corresponding subnets do not overlap. Service communication issues can result if they do.

When joining each new secondary nodes to the cluster, you must specify the first appliance in the cluster as the primary node. Note the following when joining secondary nodes to a cluster:

- Before adding a new node to the cluster, be sure that all installed packages are deployed on the primary node. You can check this by using Secure Shell to log in to the primary node's Cisco DNA Center Management port as the Linux User (maglev) and then running the command `maglev package status`. All installed packages should appear in the command output as `DEPLOYED`. In the following example, a few packages were not installed, such as the `application-policy` and `sd-access` packages. They are the only packages whose status is `NOT_DEPLOYED`. Your package status should look similar to this before configuring a secondary node.

```
[Thu Feb 04 17:07:37 UTC] maglev@192.192.192.224 (maglev-master-192.192.192.224) ~
$ maglev package status
[administration] password for 'admin':

maglev-1 [main - https://kong-frontend.maglev-system.svc.cluster.local:443]
```

NAME	DISPLAY_NAME	DEPLOYED	AVAILABLE	STATUS	PROGRESS
access-control-application	Access Control Application	-	2.1.310.61014	NOT_DEPLOYED	
application-policy	Application Policy	-	2.1.310.117202	NOT_DEPLOYED	
application-registry	Application Registry	-	2.1.310.117202	NOT_DEPLOYED	
assurance	Assurance - Base	2.2.1.243	-	DEPLOYED	
automation-core	NCP - Services	2.1.310.61014	-	DEPLOYED	
base-provision-core	Automation - Base	2.1.310.61014	-	DEPLOYED	
cloud-connectivity-data-hub	Cloud Connectivity - Data Hub	1.6.0.263	-	DEPLOYED	
cloud-connectivity-tethering	Cloud Connectivity - Tethering	2.1.1.37	-	DEPLOYED	
command-runner	Command Runner	2.1.310.61014	-	DEPLOYED	
device-onboarding	Device Onboarding	2.1.310.61014	-	DEPLOYED	
dna-core-apps	Network Experience Platform - Core	2.1.310.61014	-	DEPLOYED	
dnac-platform	Cisco DNA Center Platform	1.4.99.106	-	DEPLOYED	
dnac-search	Cisco DNA Center Global Search	1.4.0.11	-	DEPLOYED	
image-management	Image Management	2.1.310.61014	-	DEPLOYED	
machine-reasoning	Machine Reasoning	2.1.310.210298	-	DEPLOYED	
ncp-system	NCP - Base	2.1.310.61014	-	DEPLOYED	
ndp-base-analytics	Network Data Platform - Base Analytics	1.6.175	-	DEPLOYED	
ndp-platform	Network Data Platform - Core	1.6.259	-	DEPLOYED	
ndp-ui	Network Data Platform - Manager	1.6.129	-	DEPLOYED	
network-visibility	Network Controller Platform	2.1.310.61014	-	DEPLOYED	
path-trace	Path Trace	2.1.310.61014	-	DEPLOYED	
platform-ui	Cisco DNA Center UI	1.6.1.331	-	DEPLOYED	
rbac-extensions	RBAC Extensions	2.1.310.1900012	-	DEPLOYED	
sd-access	SD Access	-	2.1.310.61014	NOT_DEPLOYED	
sensor-automation	Automation - Sensor	-	2.1.310.61014	NOT_DEPLOYED	
ssa	Stealthwatch Security Analytics	2.1.310.1090254	-	DEPLOYED	
system	System	1.6.301	-	DEPLOYED	
system-commons	System Commons	2.1.310.61014	-	DEPLOYED	

- Be sure to join only a single node to the cluster at a time. Do not attempt to add multiple nodes at the same time, as doing so will result in unpredictable behavior.
- Expect some service downtime during the cluster attachment process for each secondary node. Services will need to be redistributed across the nodes and the cluster will be down for periods of time during that process.

Before you begin

Ensure that you:

- Installed the Cisco DNA Center software image onto your appliance, as described in [Reimage the Appliance, on page 69](#).



Important

This is only applicable if you are going to configure a promotional appliance, because the Cisco DNA Center software image is not preinstalled on the following appliances:

- 44-core promotional appliance (Cisco part number DN2-HW-APL-U)
- 56-core promotional appliance: (Cisco part number DN2-HW-APL-L-U)

- Configured the first appliance in the cluster, following the steps in [Configure the Primary Node Using the Expert Configuration Wizard, on page 112](#).
- Collected all of the information called for in [Required IP Addresses and Subnets, on page 26](#) and [Required Configuration Information](#).
- Installed the second and third appliances as described in [Appliance Installation Workflow](#).
- Have done the following:
 1. Ran the **maglev package status** command on the first appliance.
You can also access this information from the Cisco DNA Center GUI by clicking the **Help** icon (🔗) and choosing **About > Packages**.
 2. Contacted the Cisco TAC, gave them the output of this command, and asked them to point you to the ISO that you should install on your second and third appliances.
- Configured Cisco IMC browser access on both secondary nodes as described in [Enable Browser Access to Cisco Integrated Management Controller](#).
- Checked that both secondary nodes' ports and the switches they use are properly configured, as described in [Execute Preconfiguration Checks](#).
- Are using a compatible browser. For a list of compatible browsers, see the [Release Notes](#) for the version of Cisco DNA Center you are installing.
- Enabled ICMP on the firewall between Cisco DNA Center and both the default gateway and the DNS server you specify in the following procedure. The wizard uses ping to verify the gateway and DNS server you specify. This ping might get blocked if a firewall is in place and ICMP is not enabled on that firewall. When this happens, you will not be able to complete the wizard.

Step 1 Start the Expert Configuration wizard:

- a) Point your browser to the Cisco IMC IP address you set during the Cisco IMC GUI configuration you performed, then log in to the Cisco IMC GUI as the Cisco IMC user (see [Enable Browser Access to Cisco Integrated Management Controller](#)).

After successful login, the appliance displays the **Cisco Integrated Management Controller Chassis Summary** window, with a blue link menu at the upper right, as shown below.



- b) From the blue link menu, choose **Launch KVM** and then select either **Java based KVM** or **HTML based KVM**. If you select the Java-based KVM, you will need to launch the Java startup file from your browser or file manager

in order to view the KVM console in its own window. If you select the HTML-based KVM, it will launch the KVM console in a separate browser window or tab automatically.

Irrespective of the KVM type you choose, use the KVM console to monitor the progress of the configuration and respond to Maglev Configuration Wizard prompts.

- c) With the KVM displayed, reboot the appliance by making one of the following selections:
- In the main Cisco IMC GUI browser window: Choose **Host Power > Power Cycle**. Then switch to the KVM console to continue.
 - In the KVM console: Choose **Power > Power Cycle System (cold boot)**.

If asked to confirm your choice to reboot the appliance, click **OK**.

After displaying reboot messages, the KVM console displays the Maglev Configuration wizard welcome screen.

```
Welcome to the Maglev Configuration Wizard!

The wizard will walk you through the steps to configure this host. Select one of the options below to specify how you
would like to configure this host:


Start a Cisco DNA Center Cluster
Join a Cisco DNA Center Cluster

< exit >

Web installation: https://172.29.131.26:9004/
```


Note the URL listed in the **Web Installation** field.

- d) Open this URL to bring up the **Appliance Configuration** screen.

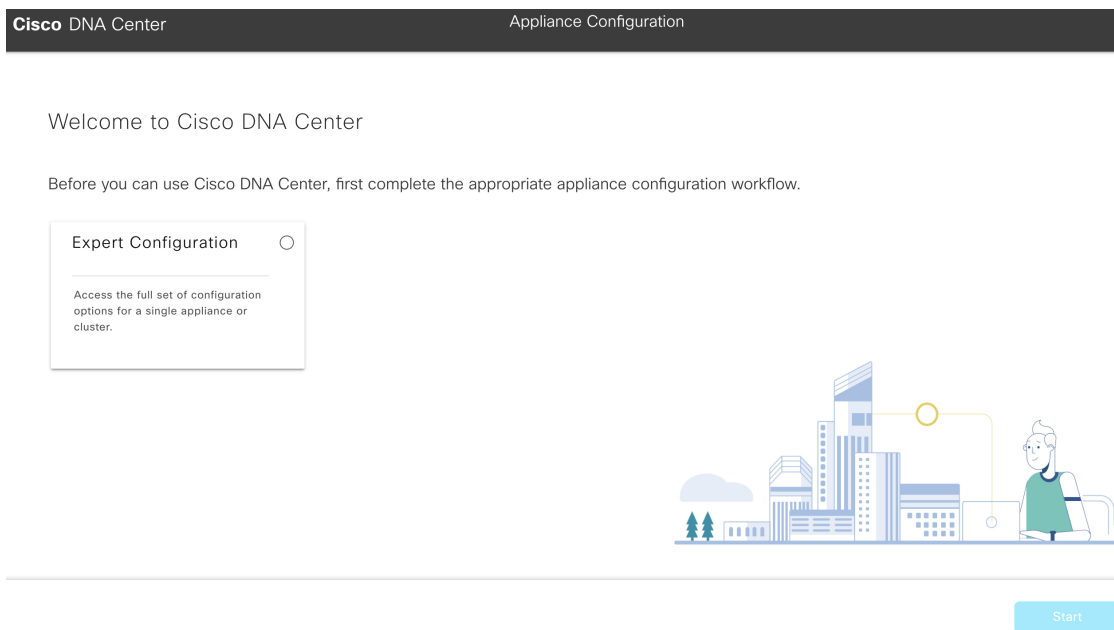


- e) Click the **Expert Configuration** radio button, then click **Start**.

The **Expert Configuration Overview** slider opens. Click > to view a summary of the tasks that the wizard will help you complete.

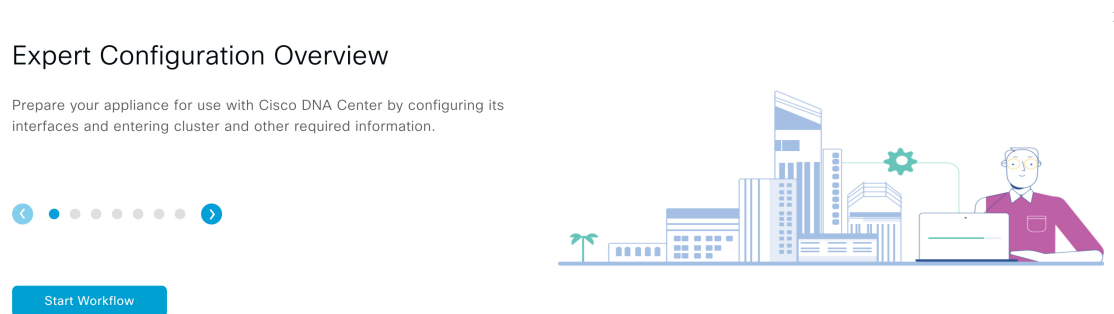

- f) Click **Start Workflow** to start the wizard.

The **Appliance Interface Overview** screen opens, providing a description of the four appliance interfaces that you can configure.

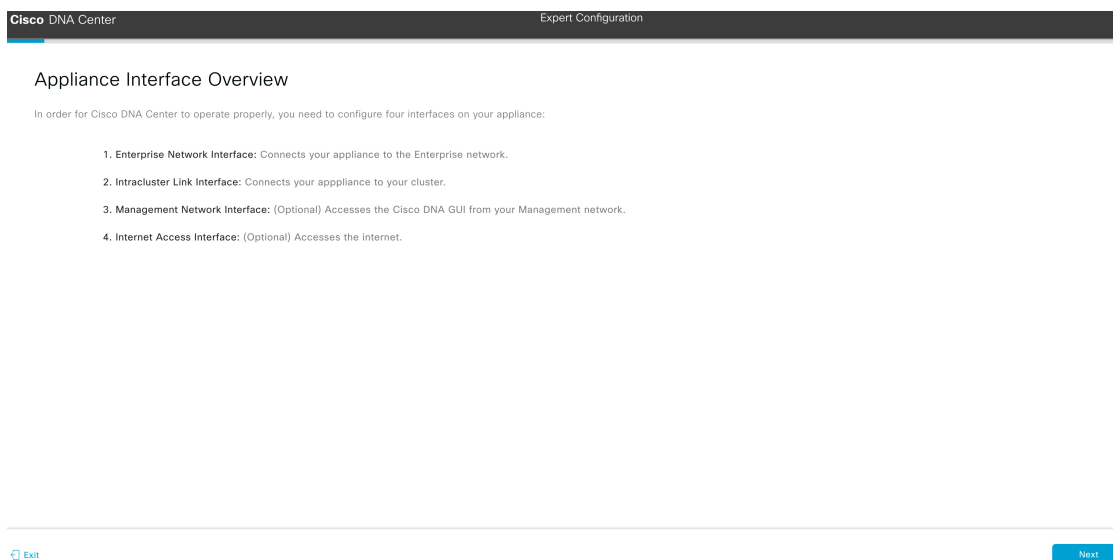


At a minimum, you must configure the interfaces on your appliance's Enterprise and Cluster ports, as they are required for Cisco DNA Center functionality. If the wizard fails to display either or both of these ports during the course of configuration, they may be non-functional or disabled. If you discover that they are non-functional, choose **Exit** to exit the wizard immediately. Be sure you have completed all of the steps provided in [Execute Preconfiguration Checks](#) before resuming configuration or contacting the Cisco Technical Assistance Center (TAC).

Step 2 Complete the Expert Configuration wizard:

- a) Click **Next**.

The **Will this appliance join a cluster?** screen opens.

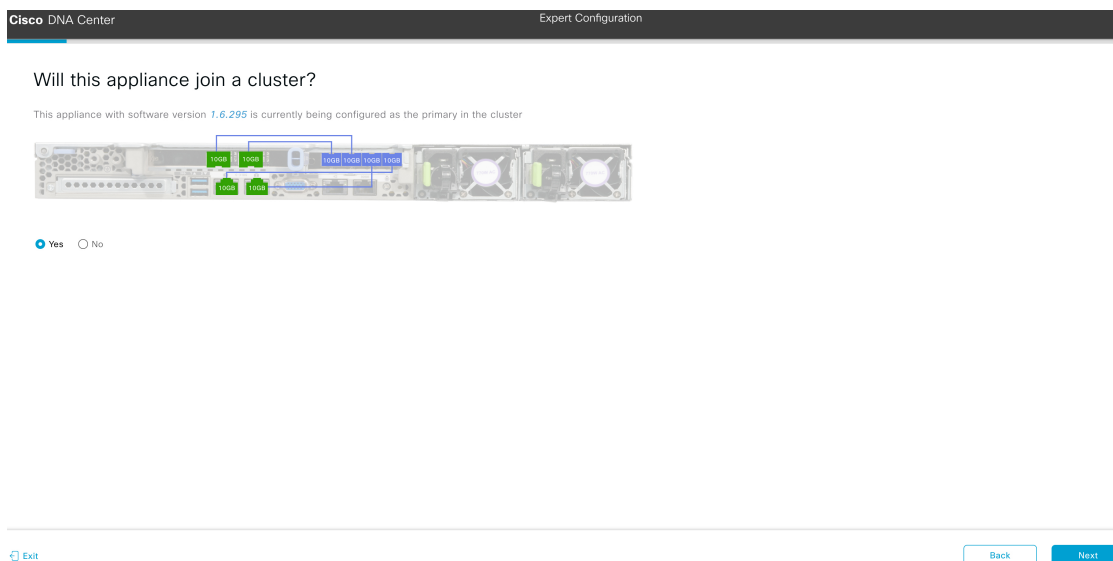

- b) Click the **Yes** radio button, then click **Next**.


The **How would you like to set up your appliance interfaces?** screen opens.

Configure a Secondary Node Using the Expert Configuration Wizard

Cisco DNA Center Expert Configuration

How would you like to set up your appliance interfaces?

Currently we detected 4 connected ports (highlighted in green) on the appliance's rear panel. Before you start, reserve the IP addresses necessary for configuration. If your network resides behind a firewall, be sure to [allow access to these URLs](#) and [open these ports](#).



Enterprise Network Interface ⓘ Intracuster Link Network ⓘ

The Enterprise Network Interface and Intracuster Link Interface will be configured using the two 10-Gbps ports as shown above.

Would you like to have a dedicated Management Network Interface?

☒ Yes ☐ No

Would you like to have a dedicated Internet Access Interface?


☒ Yes ☐ No

[Exit](#) [Back](#) [Next](#)

- c) Indicate whether you want to configure dedicated Management and Internet Access interfaces, then click **Next**. The **Configure Your Enterprise Network Interface** screen opens.

Cisco DNA Center Expert Configuration

Configure Your Enterprise Network Interface

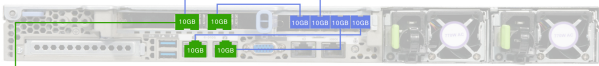

Enterprise Network Interface ⓘ

☐ LACP Mode
This mode provides fault tolerance features via active-backup policy.

Host IP Address
10.106.172.27 Enter IPv4

Subnet Mask
255.255.255.128 Enter IPv4 or 0-32 range

Default Gateway IP Address
10.106.172.1 Enter Host name or IP address

DNS Servers
171.70.168.183
To enter multiple addresses, use comma as separator

[Add Static Route ⓘ](#)

[Exit](#) [Back](#) [Next](#)

- d) Enter configuration values for the Enterprise interface.

As explained in [Interface Cable Connections](#), this is a required interface used to link the appliance to the enterprise network. See [Required IP Addresses and Subnets, on page 26](#) and [Required Configuration Information](#) for a more detailed description of the values you need to enter.

Note

- If you opted to configure the Enterprise and Internet Access interfaces on the same port, complete this step and then proceed to Step 2e (which describes how to configure your Management interface).
- If you opted to configure the Enterprise and Management interfaces on the same port, complete this step and then skip ahead to Step 2f (which describes how to configure your Internet Access interface).
- If you opted to configure the Enterprise, Management, and Internet Access interfaces on the same port, complete this step and then skip ahead to Step 2g (which describes how to configure your Intracluster interface).

Table 39: Secondary Node Entries for the Enterprise Interface

LACP Mode slider	<p>Choose one of the following network interface controller (NIC) bonding modes for the Enterprise interface:</p> <ul style="list-style-type: none"> • Active-Backup mode: This mode provides fault tolerance by aggregating two Ethernet interfaces into a single logical channel. When the interface that's currently active goes down, the other interface takes its place and becomes active. • LACP mode: This mode aggregates two Ethernet interfaces that share the same speed and duplex settings into a single logical channel. This provides load balancing and higher bandwidth. <p>For more information about Cisco DNA Center's implementation of NIC bonding, see NIC Bonding Overview, on page 62.</p>
Host IP Address field	Enter the IP address for the Enterprise port. This is required.
Subnet Mask field	Enter the netmask for the port's IP address. This is required.

Default Gateway IP Address field	<p>Enter a default gateway IP address to use for the port.</p> <p>Important Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.</p> <p>Note You designated this interface to use the default gateway assigned to it by a DHCP server. Complete the following steps to specify a different gateway:</p> <ol style="list-style-type: none"> 1. Delete the IP address that is currently listed in this field and then click Exit. This will bring you back to the first wizard screen. 2. Return to the Enterprise port's wizard screen and enter the gateway IP address you want to use.
DNS Servers field	<p>Enter the IP address of the preferred DNS server. If entering multiple DNS servers, separate the IP addresses in the list with commas.</p> <p>Important For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for a node.</p>
Add Static Route link	<p>To configure a static route, click this link and then do the following:</p> <ol style="list-style-type: none"> 1. Enter the route's network IP prefix, subnet mask, and nexthop IP address. To configure additional static routes, click +. 2. Click Add.


From here, do one of the following:

- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.
- To proceed to the next wizard screen, click **Next**.

The wizard validates the information you have entered, confirms that the port is up, and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid and the port is up, the wizard's **Configure Your Management Network Interface** screen opens.

Cisco DNA Center Expert Configuration

Configure Your Management Network Interface

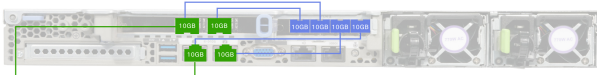

Enterprise Network Interface

Interface Name: enterprise

LACP Mode: Disabled

IP Address: 10.106.172.27

Subnet Mask: 255.255.255.128

Default Gateway: 10.106.172.1

DNS Servers: 171.70.168.183

Management Network Interface

Host IP Address: 10.20.30.43

Subnet Mask: 255.255.255.0

Default Gateway IP Address: Default Gateway already configured in Enterprise Network

DNS Servers: To enter multiple addresses, use comma as separator

[Add Static Route](#)

Exit Back Next

e) (Optional) Enter configuration values for the Management port.

As explained in [Interface Cable Connections](#), this port is used to access the Cisco DNA Center GUI from your management network. If you chose to configure a dedicated Management interface, enter the information described in the following table. (See [Required IP Addresses and Subnets](#), on page 26 and [Required Configuration Information](#) for a more detailed description of the values you need to enter.)

Note

- If you opted to configure the Enterprise and Management interfaces on the same port, skip this step and proceed to Step 2f (which describes how to configure your Internet Access interface).
- If you opted to configure the Enterprise, Management, and Internet Access interfaces on the same port, skip this step and proceed to Step 2g (which describes how to configure your Intracluster interface).

Table 40: Secondary Node Entries for the Management Port

Host IP Address field	Enter the IP address for the Management port. This is required.
Subnet Mask field	Enter the netmask for the port's IP address. This is required.
Default Gateway IP Address field	Enter a default gateway IP address to use for the port. Important Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.

DNS Servers field	<p>Enter the IP address of the preferred DNS server. If entering multiple DNS servers, separate the IP addresses in the list with spaces.</p> <p>Important</p> <ul style="list-style-type: none"> • For NTP, ensure port 123 (UDP) is open between Cisco DNA Center and your NTP server. • For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for a node.
Add Static Route link	<p>To configure a static route, click this link and then do the following:</p> <ol style="list-style-type: none"> 1. Enter the route's network IP prefix, subnet mask, and nexthop IP address. To configure additional static routes, click +. 2. Click Add.


From here, do one of the following:

- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.
- To proceed to the next wizard screen, click **Next**.

The wizard validates the information you have entered, confirms that the port is up, and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid and the port is up, the wizard's **Configure Your Internet Access Interface** screen opens.

Cisco DNA Center Expert Configuration

Configure Your Internet Access Interface

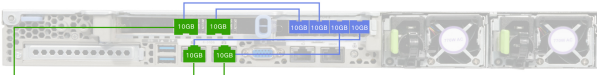

Enterprise Network Interface ⓘ

Interface Name enterprise

LACP Mode Disabled ⓘ

IP Address 10.106.172.27

Subnet Mask 255.255.255.128

Default Gateway 10.106.172.1

DNS Servers 171.70.168.183

Internet Network Interface ⓘ

Host IP Address 11.21.31.45 Enter IPv4

Subnet Mask 255.255.255.0 Enter IPv4 or 0-32 range

Default Gateway IP Address Default Gateway already configured in Enterprise Network

DNS Servers To enter multiple addresses, use comma as separator

[Add Static Route ⓘ](#)

Management Network Interface ⓘ

Interface Name management

[Exit](#) [Back](#) [Next](#)

- f) (Optional) Enter configuration values for the Internet Access interface.

As explained in [Interface Cable Connections](#), this is an optional port used to link the appliance to the Internet when you cannot do so through the Enterprise port. If you chose to configure a dedicated Internet Access interface, enter the information described in the following table. (See [Required IP Addresses and Subnets](#), on page 26 and [Required Configuration Information](#) for a more detailed description of the values you need to enter.)

Note If you opted to configure the Enterprise and Internet Access interfaces on the same port, skip this step and then proceed to Step 2g (which describes how to configure your Intracenter interface).

Table 41: Secondary Node Entries for the Internet Access Port

Host IP Address field	Enter the IP address for the Internet Access port.
Subnet Mask field	Enter the netmask for the port's IP address. This is required if you enter an IP address.
Default Gateway IP Address field	Enter a default gateway IP address to use for the port. Important Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.
DNS Servers field	Enter the IP address of the preferred DNS server. If entering multiple DNS servers, separate the IP addresses in the list with spaces. Important For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for a node.

Add Static Route link	<p>To configure a static route, click this link and then do the following:</p> <ol style="list-style-type: none"> 1. Enter the route's network IP prefix, subnet mask, and nexthop IP address. To configure additional static routes, click +. 2. Click Add.
-----------------------	---

From here, do one of the following:

- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.
- To proceed to the next wizard screen, click **Next**.

The wizard validates the information you have entered, confirms that the port is up, and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid and the port is up, the wizard's **Configure Your Intracluster Interface** screen opens.

Cisco DNA Center Expert Configuration

Configure Your Intracluster Interface

Enterprise Network Interface

Interface Name: enterprise

LACP Mode: Disabled

IP Address: 10.106.172.27

Subnet Mask: 255.255.255.128

Default Gateway: 10.106.172.1

DNS Servers: 171.70.168.183

Internet Network Interface

Interface Name: internet

IP Address: 11.21.31.45

Subnet Mask: 255.255.255.0

Intracluster Link Network

LACP Mode: ☐ LACP Mode

This mode provides fault tolerance features via active-backup policy.

Host IP Address*: 169.254.6.64

Subnet Mask*: 255.255.255.128

Enter IPv4

Enter IPv4 or 0-32 range

Management Network Interface

Interface Name: management

IP Address: 10.20.30.43

Subnet Mask: 255.255.255.0

Exit Back Next

- g) Enter configuration values for your Intracluster interface.

As explained in [Interface Cable Connections](#), this required port is used to link the appliance to your cluster. See [Required IP Addresses and Subnets, on page 26](#) and [Required Configuration Information](#) for a more detailed description of the values you need to enter.

Table 42: Secondary Node Entries for the Intracluster Interface

LACP Mode slider	<p>Choose one of the following NIC bonding modes for the Intracluster interface:</p> <ul style="list-style-type: none"> • Active-Backup mode: This mode provides fault tolerance by aggregating two Ethernet interfaces into a single logical channel. When the interface that's currently active goes down, the other interface takes its place and becomes active. • LACP mode: This mode aggregates two Ethernet interfaces that share the same speed and duplex settings into a single logical channel. This provides load balancing and higher bandwidth. <p>For more information about Cisco DNA Center's implementation of NIC bonding, see NIC Bonding Overview, on page 62.</p>
Host IP Address field	Enter the IP address for the Cluster port. This is required. Note that you cannot change the address of the Cluster port later.
Subnet Mask field	Enter the netmask for the port's IP address. This is required.

From here, do one of the following:

- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.
- To proceed to the next wizard screen, click **Next**.

The wizard validates the information you have entered, confirms that the port is up, and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid and the port is up, the wizard's **Interface to Port Configuration** screen opens.

Configure a Secondary Node Using the Expert Configuration Wizard

Cisco DNA Center Expert Configuration

Interface to Port Configuration

We are going to configure the following interfaces. Click **Configure** and wait for configuration to be done before proceeding to the next step.

Configure

Interface Name	Interface Name	Interface Name
enterprise	internet	cluster
LACP Mode: Disabled	IP Address: 11.21.31.45	LACP Mode: Disabled
IP Address: 10.106.172.27	Subnet Mask: 255.255.255.0	IP Address: 169.254.6.64
Subnet Mask: 255.255.255.128		Subnet Mask: 255.255.255.128
Default Gateway: 10.106.172.1		
DNS Servers: 171.70.168.183		

Management Network Interface

Interface Name	Interface Name
management	
IP Address: 10.20.30.43	

Exit **Back** **Next**

h) Review the settings that you have entered for the secondary node's interfaces.

If you need to make any changes, click the **Edit** link for the relevant interface to return to its wizard screen.

i) When you are happy with the interface settings, click **Configure**.

j) After initial interface configuration has completed, click **Next**.

The **Configure Proxy Server Information** screen opens.

Cisco DNA Center Expert Configuration

Configure Proxy Server Information

Does your network use a proxy server to access the internet?

☒ Yes ☐ No

Proxy Server*

http://proxy-wsa.esl.example.com

E.g: http://example.com

Port*

80

Enter port number between 0 to 65535.

Username

Password

Exit **Review** **Back** **Next**

k) Do one of the following:

- If your network does *not* use a proxy server to access the internet, click the **No** radio button and then click **Next**.
- If your network does use a proxy server to access the internet, enter the values described in the following table:

Table 43: Secondary Node Entries for Proxy Server Settings

Proxy Server field	Enter the URL or host name of an HTTPS network proxy used to access the Internet. Note Connection from Cisco DNA Center to the HTTPS proxy is supported only via HTTP in this release.
Port field	Enter the port your appliance used to access the network proxy.
Username field	Enter the user name used to access the network proxy. If no proxy login is required, leave this field blank.
Password field	Enter the password used to access the network proxy. If no proxy login is required, leave this field blank.

From here, do one of the following:

- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.
- To proceed to the next wizard screen, click **Next**.

The wizard validates the information you have entered and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid, the wizard's **Primary Cluster Details** screen opens.

Cisco DNA Center Expert Configuration

Primary Cluster Details

This appliance is getting added as a node for the Multi Cluster Setup with software version [1.6.236](#).

Primary IP
169.254.6.66

(IP should be within Intra-Cluster's 169.254.6.66/25)

Username*
admin

Enter Linux Username

Password*
.....

Enter Linux Password [SHOW](#)

[Exit](#) [Review](#) [Back](#) [Next](#)

- 1) To establish a connection with your cluster's primary node, enter its IP address and login credentials, and then click **Next**.

The **Cluster Details** screen opens.

Cisco DNA Center
Expert Configuration

Cluster Details

Please enter the IP networks for the cluster and service subnets. These networks will be internal to the cluster and non-routed, but should not overlap with the interface IP ranges. It is recommended not to change this value and use the default settings.

NTP Servers*

ntp.esl.cisco.com

Separate multiple addresses with a comma.

LINUX ADMIN CREDENTIALS

Username*

maglev

Password*

View Password Criteria

Confirm Password*

Exit
Review
Back
Next

m) Enter configuration values for your cluster.

Table 44: Secondary Node Entries for Cluster Settings

NTP Servers field	Enter one or more NTP server addresses or hostnames, separated by commas. At least one NTP address or hostname is required. For a production deployment, Cisco recommends that you configure a minimum of three NTP servers.
Linux Admin Credentials	
Password and Confirm Password fields	Enter and then confirm the password for the <code>maglev</code> user.

From here, do one of the following:

- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.
- To proceed to the next wizard screen, click **Next**.


The wizard validates the information you have entered, confirms that the port is up, and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid, the wizard's **Summary** screen opens.

Cisco DNA Center Expert Configuration

Summary

Please review the settings that you have entered. If you need to make any changes, click the appropriate Edit link and make the necessary updates. When you are happy with your settings, click Start Configuration.

Ports Configuration Completed

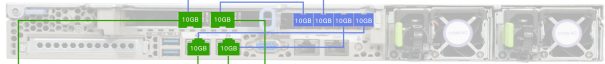

Enterprise Network Interface		Internet Network Interface		Intracuster Link Network	
Interface Name	enterprise	Interface Name	internet	Interface Name	cluster
LACP Mode	Disabled	IP Address	11.21.31.45	LACP Mode	Disabled
IP Address	10.106.172.27	Subnet Mask	255.255.255.0	IP Address	169.254.6.64
Subnet Mask	255.255.255.128	Edit		Subnet Mask	255.255.255.128
Default Gateway	10.106.172.1				Edit
DNS Servers	171.70.168.183				
Edit					

Management Network Interface

Management Network Interface	
Interface Name	management
IP Address	10.20.30.43

[Exit](#) [Start Configuration](#)

- n) Review all of the settings that you have entered while completing the wizard. If necessary, click the appropriate **Edit** link to open the wizard screen in which you want to make updates.
- o) To complete the configuration of your Cisco DNA Center appliance, click **Start Configuration**.

The wizard screen continuously updates during the process, indicating the tasks that are currently being completed and their progress, as well as any errors that have occurred. To save a local copy of this information as a text file, click the download icon.


Cisco DNA Center Configuration

Application Configuration In Progress

It should take about 90 minutes to complete the configuration of your appliance. As you wait, you can view a video that explains the next steps in the Cisco DNA Center setup process.

0%

ABOUT STARTING CISCO DNA CENTER

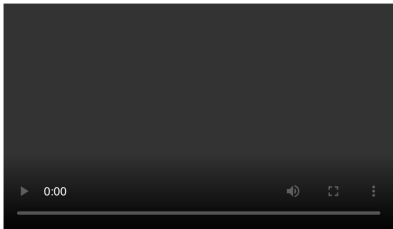

Started: Invalid date

```

2021-01-06 02:39:32,811 | renew_certs : Collating the expiry results
2021-01-06 02:39:33,040 | renew_certs : debug
2021-01-06 02:39:33,339 | controller-manager.conf Jan 4 22:47:18 2021 GMT Jan 4
23:29:48 2022 GMT
2021-01-06 02:39:33,340 | -----

```

While the configuration process is taking place, you can also watch a quick video that describes how to get started using Cisco DNA Center.

What to do next

When this task is complete:

- If you have an additional appliance to deploy as the third and final node in the cluster, repeat this procedure.
- If you are finished adding nodes to the cluster, continue by performing first-time setup: [First-Time Setup Workflow](#).

Generate a Linux Password

When configuring your appliance, you have the option of using a Linux password that is generated by Cisco DNA Center. To generate this password, complete the following steps:

- Step 1** From the wizard's **Cluster Setting** screen, click the **Click here to Generate New Password** link. The **Generate Password** dialog box opens.

Generate Password

Password Generation Seed

Seed phrase must contain letters, digits, space, underscore and hyphen

Generate Password

Auto Generated Password

ⓘ User is advised to append personal password with generated password for recommended security.
Caution: Remember generated password for future logins.

Cancel Use Generated Password

- Step 2** In the **Password Generation Seed** field, enter a seed phrase.

The seed phrase can contain letters, numbers, spaces, underscores, and hyphens.

- Step 3** Click the **Generate Password** link.

In the **Auto Generated Password** field, the seed phrase appears as part of a random and secure password that Cisco DNA Center generates. You can either use this password as is or make any desired changes.

- Step 4** When you are happy with the password, click **Use Generated Password**.

Make sure to save this password for future logins.

Upgrade to the Latest Cisco DNA Center Release

For information about upgrading your current release of Cisco DNA Center, see the [Cisco DNA Center Upgrade Guide](#).



CHAPTER 7

Configure the 112 Core Appliance Using the Browser-Based Wizard

- [Appliance Configuration Overview, on page 149](#)
- [Browser-Based Wizard Prerequisites, on page 149](#)
- [Configure the Primary Node Using the Expert Configuration Wizard, on page 150](#)
- [Configure a Secondary Node Using the Expert Configuration Wizard, on page 169](#)
- [Generate a Linux Password, on page 189](#)
- [Upgrade to the Latest Cisco DNA Center Release, on page 190](#)

Appliance Configuration Overview

You can deploy the 112-core appliance in your network in one of the following modes:

- **Standalone:** As a single node offering all the functions. This option is usually preferred for initial or test deployments and in smaller network environments. If you choose Standalone mode for your initial deployment, this will be your first, or primary, node. Note that you can add more appliances later to form a cluster.
- **Cluster:** As a node that belongs to a three-node cluster. In this mode, all the services and data are shared among the hosts. This is the preferred option for large deployments. If you choose Cluster mode for your initial deployment, be sure to finish configuring the primary node before configuring the secondary nodes.

To proceed, complete the following tasks:

1. Configure the primary node in your cluster (see [Configure the Primary Node Using the Expert Configuration Wizard, on page 150](#)).
2. If you have installed three appliances and want to add the second and third nodes to your cluster, see [Configure a Secondary Node Using the Expert Configuration Wizard, on page 169](#).

Browser-Based Wizard Prerequisites

To use the browser-based wizard and ensure that it configures your appliance properly, do the following:

- Designate the Enterprise interface on your appliance to use the IP address, subnet mask, and default gateway that a DHCP server assigns to it. When you configure this interface in the wizard, you will not be able to change the IP address or subnet mask that have been assigned to it. You will only be able to change its default gateway. The topics in this chapter assume that the Enterprise interface was chosen for this purpose.
- Confirm that the IP address assigned by the DHCP server is reachable by the machine from which you will complete the wizard.
- For the Enterprise and Intracluster interfaces, verify that both interfaces are connected and in the **UP** state.

Configure the Primary Node Using the Expert Configuration Wizard

Perform the following steps to configure the first installed appliance as the primary node using the Expert Configuration wizard. You must always configure the first appliance as the primary node, whether it will operate standalone or as part of a cluster.



Important The following second generation Cisco DNA Center appliances support configuration using this wizard:

- 112-core appliance: Cisco part number DN2-HW-APL-XL
- 112-core promotional appliance: Cisco part number DN2-HW-APL-XL-U

If you are configuring the installed appliance as a secondary node for an existing cluster that already has a primary node, follow the steps in [Configure a Secondary Node Using the Expert Configuration Wizard, on page 169](#) instead.



Note Ensure that all of the IP addresses you enter while completing this procedure are valid IPv4 addresses with valid IPv4 netmasks. Also make sure that the addresses and their corresponding subnets do not overlap. Service communication issues can result if they do.

Before you begin

Ensure that you:

- Installed the Cisco DNA Center software image onto your appliance, as described in [Reimage the Appliance, on page 69](#).



Important This is only applicable if you are going to configure a promotional appliance, because the Cisco DNA Center software image is not preinstalled on the 112-core promotional appliance (Cisco part number DN2-HW-APL-XL-U).

- Collected all of the information called for in [Required IP Addresses and Subnets, on page 26](#) and [Required Configuration Information](#).
- Installed the first appliance as described in [Appliance Installation Workflow](#).
- Configured Cisco IMC browser access on the primary node, as described in [Enable Browser Access to Cisco Integrated Management Controller](#).
- Checked that the primary node's ports and the switches it uses are properly configured, as described in [Execute Preconfiguration Checks](#).
- Are using a browser that is compatible with Cisco IMC and Cisco DNA Center. For a list of compatible browsers, see the [Release Notes](#) for the version of Cisco DNA Center you are installing.
- Enabled ICMP on the firewall between Cisco DNA Center and both the default gateway and the DNS server you specify in the following procedure. The wizard uses ping to verify the gateway and DNS server you specify. This ping might get blocked if a firewall is in place and ICMP is not enabled on that firewall. When this happens, you will not be able to complete the wizard.

Step 1

Start the Expert Configuration wizard:

- Point your browser to the Cisco IMC IP address you set during the Cisco IMC GUI configuration you performed, then log in to the Cisco IMC GUI as the Cisco IMC user (see [Enable Browser Access to Cisco Integrated Management Controller](#)).

After successful login, the appliance displays the **Cisco Integrated Management Controller Chassis Summary** window, with a blue link menu at the upper right, as shown below.




- From the blue link menu, choose **Launch KVM** and then select either **Java based KVM** or **HTML based KVM**. If you select the Java-based KVM, you will need to launch the Java startup file from your browser or file manager in order to view the KVM console in its own window. If you select the HTML-based KVM, it will launch the KVM console in a separate browser window or tab automatically.

Irrespective of the KVM type you choose, use the KVM console to monitor the progress of the configuration and respond to Maglev Configuration Wizard prompts.

- With the KVM displayed, reboot the appliance by making one of the following selections:
 - In the main Cisco IMC GUI browser window: Choose **Host Power > Power Cycle**. Then switch to the KVM console to continue.
 - In the KVM console: Choose **Power > Power Cycle System (cold boot)**.


If asked to confirm your choice to reboot the appliance, click **OK**.

After displaying reboot messages, the KVM console displays the Maglev Configuration wizard welcome screen.

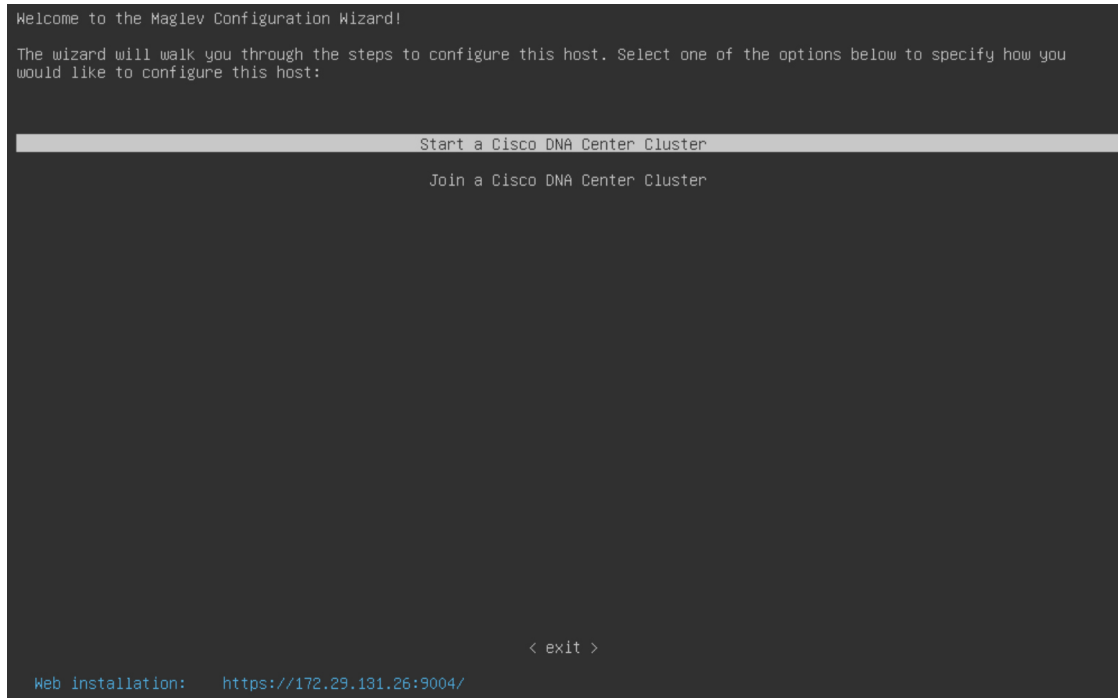

Note the URL listed in the **Web Installation** field.

- d) Open this URL to bring up the **Appliance Configuration** screen.

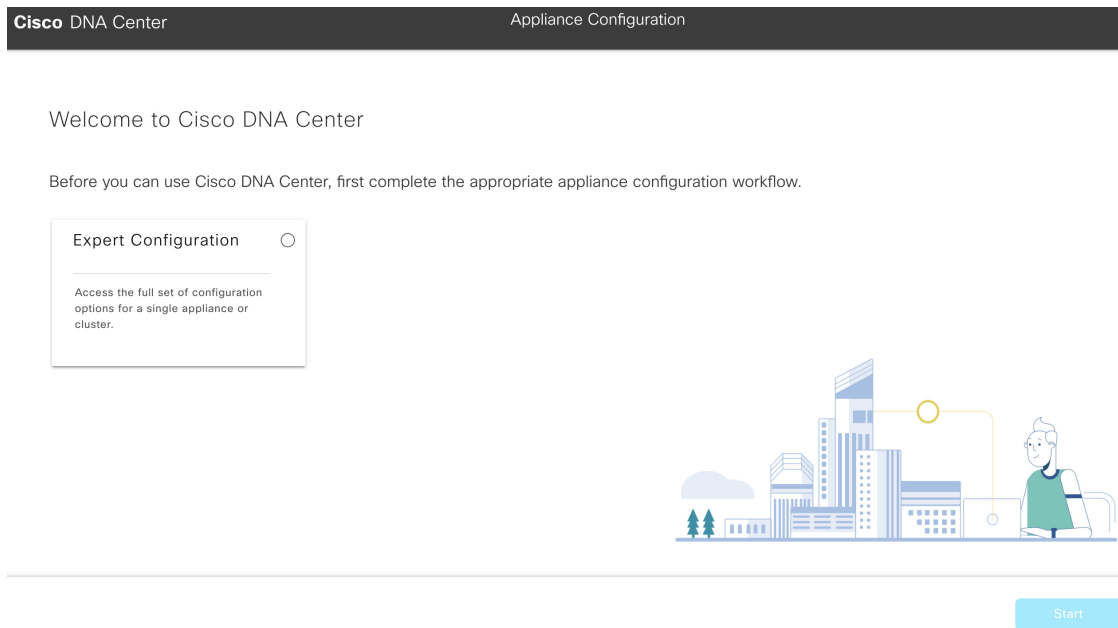

- e) Click the **Expert Configuration** radio button, then click **Start**.

The **Expert Configuration Overview** slider opens. Click > to view a summary of the tasks that the wizard will help you complete.

Expert Configuration Overview


Prepare your appliance for use with Cisco DNA Center by configuring its interfaces and entering cluster and other required information.



Start Workflow

- f) Click **Start Workflow** to start the wizard.

The **Appliance Interface Overview** screen opens, providing a description of the four appliance interfaces that you can configure.

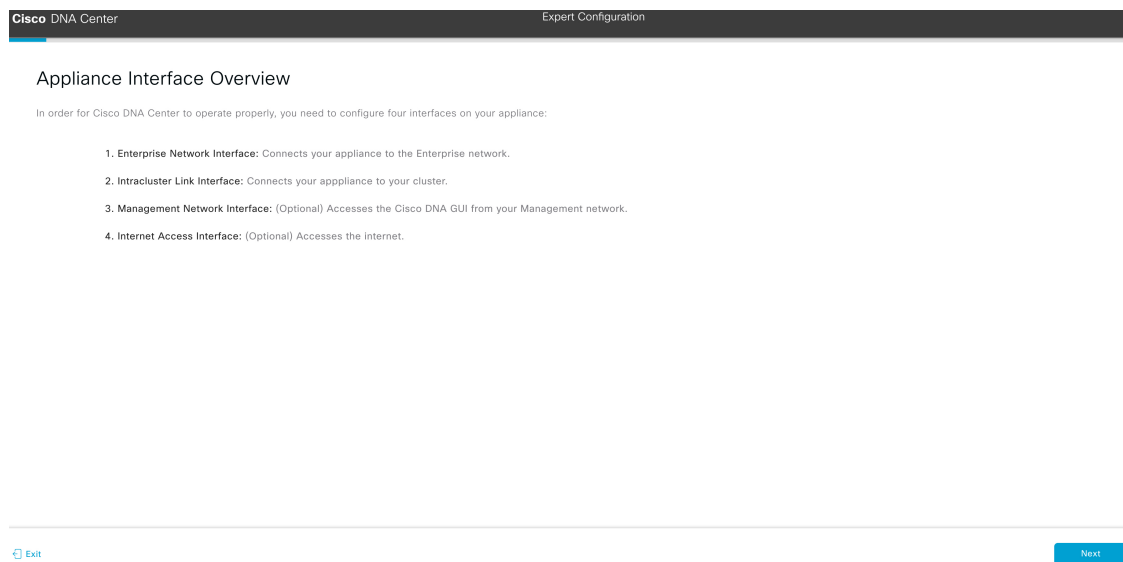

At a minimum, you must configure the Enterprise and Intracluster ports, as they are required for Cisco DNA Center functionality. If the wizard fails to display either or both of these ports during the course of configuration, they may be non-functional or disabled. If you discover that they are non-functional, choose **Exit** to exit the wizard immediately. Be sure you have completed all of the steps provided in [Execute Preconfiguration Checks](#) before resuming configuration or contacting the Cisco Technical Assistance Center (TAC).

Step 2 Complete the Expert Configuration wizard:

- a) Click **Next**.


The **Will this appliance join a cluster?** screen opens.

Configure the Primary Node Using the Expert Configuration Wizard

Cisco DNA Center Expert Configuration

Will this appliance join a cluster?

This appliance with software version [1.6.299](#) is currently being configured as the primary in the cluster

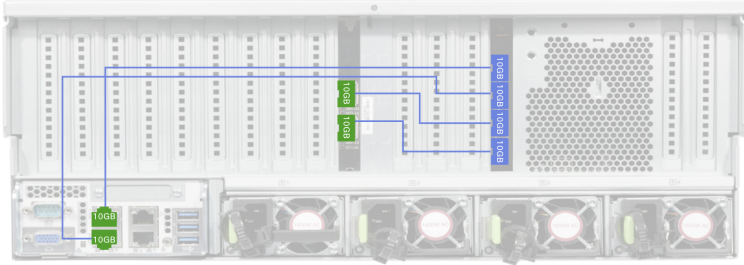

☐ Yes ☒ No

[Exit](#) [Back](#) [Next](#)


- b) Click the **No** radio button (as you are configuring your cluster's primary node), then click **Next**.

The **How would you like to set up your appliance interfaces?** screen opens.

Cisco DNA Center Expert Configuration

How would you like to set up your appliance interfaces?

Currently we detected 4 connected ports (highlighted in green) on the appliance's rear panel. Before you start, reserve the IP addresses necessary for configuration. If your network resides behind a firewall, be sure to [allow access to these URLs](#) and [open these ports](#).

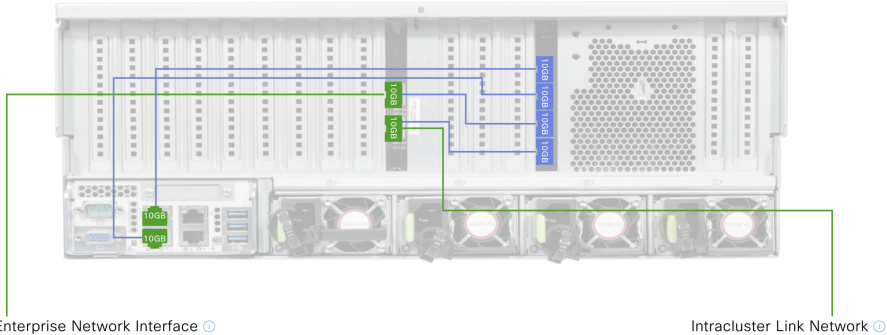

Enterprise Network Interface ⓘ Intracuster Link Network ⓘ

The Enterprise Network Interface and Intracuster Link Interface will be configured using the two 10-Gbps ports as shown above.

Would you like to have a dedicated Management Network Interface?

☒ Yes ☐ No ⓘ

Would you like to have a dedicated Internet Access Interface?

☐ Yes ☒ No


[Exit](#) [Back](#) [Next](#)

If your network resides behind a firewall, do the following:

- Click the **allow access to these URLs** link to view a popup window that lists the URLs that Cisco DNA Center must be able to access.
 - Click the **open these ports** link to view a popup window that lists the network service ports that must be available for Cisco DNA Center to use.
- c) Indicate whether you want to configure dedicated Management and Internet Access interfaces, then click **Next**.
The **Configure Your Enterprise Network Interface** screen opens.

Cisco DNA Center
Expert Configuration

Configure Your Enterprise Network Interface



Enterprise Network Interface ⓘ

☐
LACP Mode

This mode provides fault tolerance features via active-backup policy.

Host IP Address
10.106.172.47 Enter IPv4

Subnet Mask
255.255.255.128 Enter IPv4 or 0-32 range

Default Gateway IP Address
10.106.172.1 Enter Host name or IP address

DNS Servers
171.70.168.183
To enter multiple addresses, use comma as separator

[Add Static Route ⓘ](#)

[Exit](#)

Back
Next

- d) Enter configuration values for the Enterprise interface.

As explained in [Interface Cable Connections](#), this is a required interface used to link the appliance to the enterprise network. See [Required IP Addresses and Subnets](#), on page 26 and [Required Configuration Information](#) for a more detailed description of the values you need to enter.

Note

- If you opted to configure the Enterprise and Internet Access interfaces on the same port, complete this step and then proceed to Step 2e (which describes how to configure your Management interface).
- If you opted to configure the Enterprise and Management interfaces on the same port, complete this step and then skip ahead to Step 2f (which describes how to configure your Internet Access interface).
- If you opted to configure the Enterprise, Management, and Internet Access interfaces on the same port, complete this step and then skip ahead to Step 2g (which describes how to configure your Intracluster interface).

Table 45: Primary Node Entries for the Enterprise Interface

LACP Mode slider	<p>Choose one of the following network interface controller (NIC) bonding modes for the Enterprise interface:</p> <ul style="list-style-type: none"> • Active-Backup mode: This mode provides fault tolerance by aggregating two Ethernet interfaces into a single logical channel. When the interface that's currently active goes down, the other interface takes its place and becomes active. • LACP mode: This mode aggregates two Ethernet interfaces that share the same speed and duplex settings into a single logical channel. This provides load balancing and higher bandwidth. <p>For more information about Cisco DNA Center's implementation of NIC bonding, see NIC Bonding Overview, on page 62.</p>
Host IP Address field	Enter the IP address for the Enterprise port. This is required.
Subnet Mask field	Enter the netmask for the port's IP address. This is required.

Default Gateway IP Address field	<p>Enter a default gateway IP address to use for the port.</p> <p>Important Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.</p> <p>Note You designated this interface to use the default gateway assigned to it by a DHCP server. Complete the following steps to specify a different gateway:</p> <ol style="list-style-type: none"> 1. Delete the IP address that is currently listed in this field and then click Exit. This will bring you back to the first wizard screen. 2. Return to the Enterprise port's wizard screen and enter the gateway IP address you want to use.
DNS Servers field	<p>Enter the IP address of the preferred DNS server. If entering multiple DNS servers, separate the IP addresses in the list with commas.</p> <p>Important For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for a node.</p>
Add Static Route link	<p>To configure a static route, click this link and then do the following:</p> <ol style="list-style-type: none"> 1. Enter the route's network IP prefix, subnet mask, and nexthop IP address. To configure additional static routes, click +. 2. Click Add.

From here, do one of the following:

- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.
- To proceed to the next wizard screen, click **Next**.

The wizard validates the information you have entered, confirms that the port is up, and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid and the port is up, the wizard's **Configure Your Management Network Interface** screen opens.

Cisco DNA Center
Expert Configuration

Configure Your Management Network Interface

Enterprise Network Interface ⓘ

Interface Name	enterprise
LACP Mode	Disabled ⓘ
IP Address	10.106.172.47
Subnet Mask	255.255.255.128
Default Gateway	10.106.172.1
DNS Servers	171.70.168.183

Management Network Interface ⓘ

Host IP Address
10.20.30.40

Enter IPv4

Subnet Mask
255.255.255.0

Enter IPv4 or 0-32 range

Default Gateway IP Address
Default Gateway already configured in Enterprise Network

DNS Servers
To enter multiple addresses, use comma as separator

[Add Static Route](#) ⓘ

Exit

Back
Next

e) (Optional) Enter configuration values for the Management port.

As explained in [Interface Cable Connections](#), this port is used to access the Cisco DNA Center GUI from your management network. If you chose to configure a dedicated Management interface, enter the information described in the following table. (See [Required IP Addresses and Subnets, on page 26](#) and [Required Configuration Information](#) for a more detailed description of the values you need to enter.)

- Note**
- If you opted to configure the Enterprise and Management interfaces on the same port, skip this step and proceed to Step 2f (which describes how to configure your Internet Access interface).
 - If you opted to configure the Enterprise, Management, and Internet Access interfaces on the same port, skip this step and proceed to Step 2g (which describes how to configure your Intracuster interface).

Table 46: Primary Node Entries for the Management Port

Host IP Address field	Enter the IP address for the Management port. This is required.
Subnet Mask field	Enter the netmask for the port's IP address. This is required.

Default Gateway IP Address field	<p>Enter a default gateway IP address to use for the port.</p> <p>Important Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.</p>
DNS Servers field	<p>Enter the IP address of the preferred DNS server. If entering multiple DNS servers, separate the IP addresses in the list with spaces.</p> <p>Important</p> <ul style="list-style-type: none"> • For NTP, ensure port 123 (UDP) is open between Cisco DNA Center and your NTP server. • For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for a node.
Add Static Route link	<p>To configure a static route, click this link and then do the following:</p> <ol style="list-style-type: none"> 1. Enter the route's network IP prefix, subnet mask, and nexthop IP address. To configure additional static routes, click +. 2. Click Add.


From here, do one of the following:

- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.
- To proceed to the next wizard screen, click **Next**.

The wizard validates the information you have entered, confirms that the port is up, and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid and the port is up, the wizard's **Configure Your Internet Access Interface** screen opens.

Cisco DNA CenterExpert Configuration

Configure Your Internet Access Interface

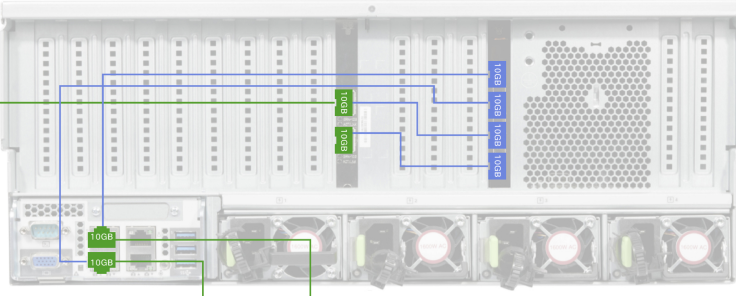

Enterprise Network Interface ⓘ

Interface Name	enterprise
LACP Mode	Disabled ⓘ
IP Address	10.106.172.47
Subnet Mask	255.255.255.128
Default Gateway	10.106.172.1
DNS Servers	171.70.168.183

Management Network Interface ⓘ

Interface Name	management
IP Address	10.20.30.40
Subnet Mask	255.255.255.0

Internet Network Interface ⓘ

Host IP Address

11.21.31.41

Enter IPv4

Subnet Mask

255.255.255.0

Enter IPv4 or 0-32 range

Default Gateway IP Address

Default Gateway already configured in Enterprise Network

DNS Servers

To enter multiple addresses, use comma as separator

Add Static Route ⓘ

Exit

Back

Next

f) (Optional) Enter configuration values for the Internet Access interface.

As explained in [Interface Cable Connections](#), this is an optional port used to link the appliance to the Internet when you cannot do so through the Enterprise port. If you chose to configure a dedicated Internet Access interface, enter the information described in the following table. (See [Required IP Addresses and Subnets](#), on page 26 and [Required Configuration Information](#) for a more detailed description of the values you need to enter.)

Note If you opted to configure the Enterprise and Internet Access interfaces on the same port, skip this step and then proceed to Step 2g (which describes how to configure your Intracluster interface).

Table 47: Primary Node Entries for the Internet Access Port

Host IP Address field	Enter the IP address for the Internet Access port.
-----------------------	--

Cisco DNA Center Second-Generation Appliance Installation Guide, Release 2.2.1

160

Subnet Mask field	Enter the netmask for the port's IP address. This is required if you enter an IP address.
Default Gateway IP Address field	Enter a default gateway IP address to use for the port. Important Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.
DNS Servers field	Enter the IP address of the preferred DNS server. If entering multiple DNS servers, separate the IP addresses in the list with spaces. Important For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for a node.
Add Static Route link	To configure a static route, click this link and then do the following: <ol style="list-style-type: none">1. Enter the route's network IP prefix, subnet mask, and nexthop IP address. To configure additional static routes, click +.2. Click Add.

From here, do one of the following:

- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.
- To proceed to the next wizard screen, click **Next**.

The wizard validates the information you have entered, confirms that the port is up, and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid and the port is up, the wizard's **Configure Your Intracluster Interface** screen opens.

Cisco DNA Center Expert Configuration

Configure Your Intracluster Interface

Enterprise Network Interface ⓘ

Interface Name	enterprise
LACP Mode	Disabled ⓘ
IP Address	10.106.172.47
Subnet Mask	255.255.255.128
Default Gateway	10.106.172.1
DNS Servers	171.70.168.183

Management Network Interface ⓘ

Interface Name	management
IP Address	10.20.30.40
Subnet Mask	255.255.255.0

Intracluster Link Network ⓘ

☒ LACP Mode
This mode provides fault tolerance features via active-backup policy.

Host IP Address*
169.254.6.66
Enter IPv4

Subnet Mask*
255.255.255.128
Enter IPv4 or 0-32 range

Internet Network Interface ⓘ

Interface Name	internet
IP Address	11.21.31.41
Subnet Mask	255.255.255.0

Exit
Back
Next

g) Enter configuration values for your Intracluster interface.

As explained in [Interface Cable Connections](#), this required port is used to link the appliance to your cluster. See [Required IP Addresses and Subnets, on page 26](#) and [Required Configuration Information](#) for a more detailed description of the values you need to enter.

Table 48: Primary Node Entries for the Intracluster Interface

LACP Mode slider	<p>Choose one of the following NIC bonding modes for the Intracluster interface:</p> <ul style="list-style-type: none"> • Active-Backup mode: This mode provides fault tolerance by aggregating two Ethernet interfaces into a single logical channel. When the interface that's currently active goes down, the other interface takes its place and becomes active. • LACP mode: This mode aggregates two Ethernet interfaces that share the same speed and duplex settings into a single logical channel. This provides load balancing and higher bandwidth. <p>For more information about Cisco DNA Center's implementation of NIC bonding, see NIC Bonding Overview, on page 62.</p>
Host IP Address field	Enter the IP address for the Cluster port. This is required. Note that you cannot change the address of the Cluster port later.
Subnet Mask field	Enter the netmask for the port's IP address. This is required.

From here, do one of the following:

- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.
- To proceed to the next wizard screen, click **Next**.

The wizard validates the information you have entered, confirms that the port is up, and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid and the port is up, the wizard's **Interface to Port Configuration** screen opens.

Cisco DNA Center Expert Configuration

Interface to Port Configuration

We are going to configure the following interfaces. Click **Configure** and wait for configuration to be done before proceeding to the next step.

[Configure](#)

The diagram shows a 112 Core Appliance with various network ports. Green lines connect specific ports to configuration tables below:

- Enterprise Network Interface** (connected to 10Gb ports)
- Management Network Interface** (connected to 10Gb ports)
- Intracuster Link Network** (connected to 10Gb ports)
- Internet Network Interface** (connected to 10Gb ports)

Enterprise Network Interface	
Interface Name	enterprise
LACP Mode	Disabled
IP Address	10.106.172.47
Subnet Mask	255.255.255.128
Default Gateway	10.106.172.1
DNS Servers	171.70.168.183
Edit	

Management Network Interface	
Interface Name	management
IP Address	10.20.30.40
Subnet Mask	255.255.255.0
Edit	

Intracuster Link Network	
Interface Name	cluster
LACP Mode	Disabled
IP Address	169.254.6.66
Subnet Mask	255.255.255.128
Edit	

Internet Network Interface	
Interface Name	internet
IP Address	11.21.31.41
Subnet Mask	255.255.255.0
Edit	

[Exit](#) [Back](#) [Next](#)

- h) Review the settings that you have entered for the primary node's interfaces.
If you need to make any changes, click the **Edit** link for the relevant interface.
- i) When you are happy with the interface settings, click **Configure**.
- j) After initial interface configuration has completed, click **Next** to proceed to the next wizard screen.
The wizard's **Configure Proxy Server Information** screen opens.

Cisco DNA Center Expert Configuration

Configure Proxy Server Information

Does your network use a proxy server to access the internet?

☒ Yes ☐ No

Proxy Server*

http://proxy-wsa.esl.example.com

E.g: http://example.com

Port*

80

Enter port number between 0 to 65535.

Username

Password

[Exit](#)
[Review](#)
[Back](#)
[Next](#)

k) Do one of the following:

- If your network does *not* use a proxy server to access the internet, click the **No** radio button and then click **Next**.
- If your network does use a proxy server to access the internet, enter the values described in the following table:

Table 49: Primary Node Entries for Proxy Server Settings

Proxy Server field	Enter the URL or host name of an HTTPS network proxy used to access the Internet. Note Connection from Cisco DNA Center to the HTTPS proxy is supported only via HTTP in this release.
Port field	Enter the port your appliance used to access the network proxy.
Username field	Enter the user name used to access the network proxy. If no proxy login is required, leave this field blank.
Password field	Enter the password used to access the network proxy. If no proxy login is required, leave this field blank.

From here, do one of the following:

- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.
- To proceed to the next wizard screen, click **Next**.

The wizard validates the information you have entered and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid and the port is up, the wizard's **Cluster Details** screen opens.

Cisco DNA Center

Expert Configuration

Cluster Details

Please enter the IP networks for the cluster and service subnets. These networks will be internal to the cluster and non-routed, but should not overlap with the interface IP ranges. It is recommended not to change this value and use the default settings.

Container Subnet*

169.254.32.0/20

Minimum subnet size is 21 bits. Slash notation is allowed.

Cluster Subnet*

169.254.48.0/20

Minimum subnet size is 21 bits. Slash notation is allowed.

NTP Servers*

ntp.esl.cisco.com

Separate multiple addresses with a comma.

Fully Qualified Domain Name (FQDN)

Cluster VIP Addresses

To access from Enterprise Network

Enter IPv4

For Intracluster Access

Enter IPv4

To access from Management Network

Enter IPv4

LINUX ADMIN CREDENTIALS

Username*

maglev

Password*

View Password Criteria

Confirm Password*

CISCO DNA CENTER ADMIN CREDENTIALS

Username*

admin

Password*

View Password Criteria

Confirm Password*

Exit

Review

Back

Next

l) Enter configuration values for your cluster.

Table 50: Primary Node Entries for Cluster Settings

Container Subnet field	A dedicated, non-routed IP subnet that Cisco DNA Center uses to manage internal services. By default, this is already set to 169.254.32.0/20 , and we recommend that you use this subnet. If you choose to enter another subnet, ensure that it does not conflict with or overlap any other subnet used by the Cisco DNA Center internal network or an external network. For more information, see the Container Subnet description in Required IP Addresses and Subnets, on page 26 .
Cluster Subnet field	A dedicated, non-routed IP subnet that Cisco DNA Center uses to manage internal cluster services. By default, this is already set to 169.254.48.0/20 , and we recommend that you use this subnet. If you choose to enter another subnet, ensure that it does not conflict with or overlap any other subnet used by the Cisco DNA Center internal network or an external network. For more information, see the Cluster Subnet description in Required IP Addresses and Subnets, on page 26 .

Cisco DNA Center Second-Generation Appliance Installation Guide, Release 2.2.1

166

NTP Servers field	<p>Enter one or more NTP server addresses or hostnames, separated by commas. At least one NTP address or hostname is required.</p> <p>For a production deployment, Cisco recommends that you configure a minimum of three NTP servers.</p>
Fully Qualified Domain Name (FQDN) field	<p>Enter the fully qualified domain name (FQDN) for your cluster. Cisco DNA Center does the following with this hostname:</p> <ul style="list-style-type: none"> • It uses this hostname to access your cluster's web interface and the Representational State Transfer (REST) APIs used by devices in the enterprise network that Cisco DNA Center manages. • In the Subject Alternative Name (SAN) field of Cisco DNA Center certificates, it uses the FQDN to define the Plug and Play server that should be used for device provisioning.
Cluster VIP Addresses	
<p>To access from Enterprise Network, To access from Management Network, For Internet Access, and For Intracluster Access fields</p> <p>Note If you configured the Management or Internet Access interface on the same port as the Enterprise interface, its corresponding field is not displayed in this section.</p>	<p>Enter the virtual IP address that will be used for traffic between the cluster and the interfaces that you have configured on your primary node. This is required for both three-node clusters and single-node clusters that will be converted into a three-node cluster in the future. If you have a single-node cluster setup and plan to stick with it, you can leave the fields in this section blank.</p> <p>Important You must enter one virtual IP address for each configured network interface. You will not be able to complete the wizard unless you do so. This address is tied to the cluster link's status, which must be in the UP state.</p>
Linux Admin Credentials	
Password and Confirm Password fields	Enter and then confirm the password for the <code>maglev</code> user.
Cisco DNA Center Admin Credentials	
Password and Confirm Password fields	Enter and then confirm the password for the default admin superuser, used to log in to Cisco DNA Center for the first time.

From here, do one of the following:

- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.

- To proceed to the next wizard screen, click **Next**.


The wizard validates the information you have entered and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid, the wizard's **Summary** screen opens.

Cisco DNA Center
Expert Configuration

Summary

Please review the settings that you have entered. If you need to make any changes, click the appropriate Edit link and make the necessary updates. When you are happy with your settings, click Start Configuration.

▼ Ports Configuration Completed

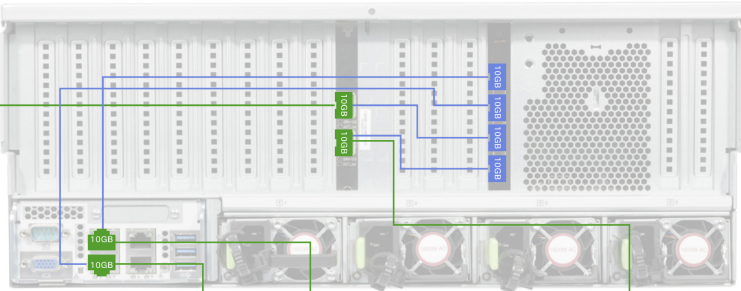

Enterprise Network Interface ⓘ

Interface Name	enterprise
LACP Mode	Disabled ⓘ
IP Address	10.106.172.47
Subnet Mask	255.255.255.128
Default Gateway	10.106.172.1
DNS Servers	171.70.168.183

[Edit](#)

Management Network Interface ⓘ

Interface Name	management
IP Address	10.20.30.40
Subnet Mask	255.255.255.0

[Edit](#)

Intracuster Link Network ⓘ

Interface Name	cluster
LACP Mode	Disabled ⓘ
IP Address	169.254.6.66
Subnet Mask	255.255.255.128

[Edit](#)

Internet Network Interface ⓘ

Interface Name	internet
IP Address	11.21.31.41
Subnet Mask	255.255.255.0

[Edit](#)

[Exit](#)

Back
Next

- m) Review all of the settings that you have entered while completing the wizard. If necessary, click the appropriate **Edit** link to open the wizard screen in which you want to make updates.
- n) To complete the configuration of your Cisco DNA Center appliance, click **Start Configuration**.

The configuration process takes roughly 90 minutes. The wizard screen continuously updates during the process, indicating the tasks that are currently being completed and their progress, as well as any errors that have occurred. To save a local copy of this information as a text file, click the download icon.

Cisco DNA Center Configuration

Application Configuration In Progress


It should take about 90 minutes to complete the configuration of your appliance. As you wait, you can view a video that explains the next steps in the Cisco DNA Center setup process.

0%

Started: Invalid date

2021-01-06 02:39:32,811 | renew_certs : Collating the expiry results
2021-01-06 02:39:33,040 | renew_certs : debug
2021-01-06 02:39:33,339 | controller-manager.conf Jan 4 22:47:18 2021 GMT Jan 4 23:29:48 2022 GMT
2021-01-06 02:39:33,340 | -----

ABOUT STARTING CISCO DNA CENTER

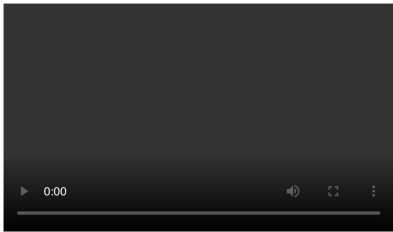

While the configuration process is taking place, you can also watch a quick video that describes how to get started using Cisco DNA Center.

What to do next

When this task is complete:

- If you are deploying this appliance in standalone mode only, continue by performing first-time setup: [First-Time Setup Workflow](#).
- If you are deploying this appliance as the primary node in a cluster, configure the second and third installed appliances in the cluster: [Configure a Secondary Node Using the Expert Configuration Wizard](#), on page 169.

Configure a Secondary Node Using the Expert Configuration Wizard

Perform the following steps to configure the second and third appliances in the cluster using the Expert Configuration wizard.

**Important**

- In order to build a three-node cluster, the same version of the **System** package must be installed on your three Cisco DNA Center appliances. Otherwise, unexpected behavior and possible downtime can occur.
- The following second generation Cisco DNA Center appliances support configuration using this wizard:
 - 112-core appliance: Cisco part number DN2-HW-APL-XL
 - 112-core promotional appliance: Cisco part number DN2-HW-APL-XL-U

**Note**

Ensure that all of the IP addresses you enter while completing this procedure are valid IPv4 addresses with valid IPv4 netmasks. Also make sure that the addresses and their corresponding subnets do not overlap. Service communication issues can result if they do.

When joining each new secondary node to the cluster, you must specify the first host in the cluster as the primary node. Note the following when joining secondary nodes to a cluster:

- Before adding a new node to the cluster, be sure that all installed packages are deployed on the primary node. You can check this by using Secure Shell to log in to the primary node's Cisco DNA Center Management port as the Linux User (maglev) and then running the command `maglev package status`. All installed packages should appear in the command output as `DEPLOYED`. In the following example, a few packages were not installed, such as the application-policy and sd-access packages. They are the only packages whose status is `NOT_DEPLOYED`. Your package status should look similar to this before configuring a secondary node.

```
[Thu Feb 04 17:07:37 UTC] maglev@192.192.192.224 (maglev-master-192.192.192.224) ~
$ maglev package status
[administration] password for 'admin':

maglev-1 [main - https://kong-frontend.maglev-system.svc.cluster.local:443]
```

NAME	DISPLAY_NAME	DEPLOYED	AVAILABLE	STATUS	PROGRESS
access-control-application	Access Control Application	-	2.1.310.61014	NOT_DEPLOYED	
application-policy	Application Policy	-	2.1.310.117202	NOT_DEPLOYED	
application-registry	Application Registry	-	2.1.310.117202	NOT_DEPLOYED	
assurance	Assurance - Base	2.2.1.243	-	DEPLOYED	
automation-core	NCP - Services	2.1.310.61014	-	DEPLOYED	
base-provision-core	Automation - Base	2.1.310.61014	-	DEPLOYED	
cloud-connectivity-data-hub	Cloud Connectivity - Data Hub	1.6.0.263	-	DEPLOYED	
cloud-connectivity-tethering	Cloud Connectivity - Tethering	2.1.1.37	-	DEPLOYED	
command-runner	Command Runner	2.1.310.61014	-	DEPLOYED	
device-onboarding	Device Onboarding	2.1.310.61014	-	DEPLOYED	
dna-core-apps	Network Experience Platform - Core	2.1.310.61014	-	DEPLOYED	
dnac-platform	Cisco DNA Center Platform	1.4.99.106	-	DEPLOYED	
dnac-search	Cisco DNA Center Global Search	1.4.0.11	-	DEPLOYED	
image-management	Image Management	2.1.310.61014	-	DEPLOYED	
machine-reasoning	Machine Reasoning	2.1.310.210298	-	DEPLOYED	
ncp-system	NCP - Base	2.1.310.61014	-	DEPLOYED	
ndp-base-analytics	Network Data Platform - Base Analytics	1.6.175	-	DEPLOYED	
ndp-platform	Network Data Platform - Core	1.6.259	-	DEPLOYED	
ndp-ui	Network Data Platform - Manager	1.6.129	-	DEPLOYED	
network-visibility	Network Controller Platform	2.1.310.61014	-	DEPLOYED	
path-trace	Path Trace	2.1.310.61014	-	DEPLOYED	
platform-ui	Cisco DNA Center UI	1.6.1.331	-	DEPLOYED	
rbac-extensions	RBAC Extensions	2.1.310.1900012	-	DEPLOYED	
sd-access	SD Access	-	2.1.310.61014	NOT_DEPLOYED	
sensor-automation	Automation - Sensor	-	2.1.310.61014	NOT_DEPLOYED	
ssa	Stealthwatch Security Analytics	2.1.310.1090254	-	DEPLOYED	
system	System	1.6.301	-	DEPLOYED	
system-commons	System Commons	2.1.310.61014	-	DEPLOYED	

- Be sure to join only a single node to the cluster at a time. Do not attempt to add multiple nodes at the same time, as doing so will result in unpredictable behavior.

- Expect some service downtime during the cluster attachment process for each secondary node. Services will need to be redistributed across the nodes and the cluster will be down for periods of time during that process.

Before you begin

Ensure that you:


- Installed the Cisco DNA Center software image onto your appliance, as described in [Reimage the Appliance, on page 69](#).



Important

This is only applicable if you are going to configure a promotional appliance, because the Cisco DNA Center software image is not preinstalled on the 112-core promotional appliance (Cisco part number DN2-HW-APL-XL-U).

- Configured the first appliance in the cluster, following the steps in [Configure the Primary Node Using the Expert Configuration Wizard, on page 150](#).
- Collected all of the information called for in [Required IP Addresses and Subnets, on page 26](#) and [Required Configuration Information](#).
- Installed the second and third appliances as described in [Appliance Installation Workflow](#).
- Have done the following:
 1. Ran the **maglev package status** command on the first appliance.

You can also access this information from the Cisco DNA Center home page by clicking the **Help** icon () and choosing **About > Show Packages**.
 2. Contacted the Cisco TAC, gave them the output of this command, and asked them to point you to the ISO that you should install on your second and third appliances.
- Configured Cisco IMC browser access on both secondary nodes as described in [Enable Browser Access to Cisco Integrated Management Controller](#).
- Checked that both secondary nodes' ports and the switches they use are properly configured, as described in [Execute Preconfiguration Checks](#).
- Are using a compatible browser. For a list of compatible browsers, see the [Release Notes](#) for the version of Cisco DNA Center you are installing.
- Enabled ICMP on the firewall between Cisco DNA Center and both the default gateway and the DNS server you specify in the following procedure. The wizard uses ping to verify the gateway and DNS server you specify. This ping might get blocked if a firewall is in place and ICMP is not enabled on that firewall. When this happens, you will not be able to complete the wizard.

Step 1

Start the Expert Configuration wizard:

- a) Point your browser to the Cisco IMC IP address you set during the Cisco IMC GUI configuration you performed, then log in to the Cisco IMC GUI as the Cisco IMC user (see [Enable Browser Access to Cisco Integrated Management Controller](#)).

After successful login, the appliance displays the **Cisco Integrated Management Controller Chassis Summary** window, with a blue link menu at the upper right, as shown below.




- b) From the blue link menu, choose **Launch KVM** and then select either **Java based KVM** or **HTML based KVM**. If you select the Java-based KVM, you will need to launch the Java startup file from your browser or file manager in order to view the KVM console in its own window. If you select the HTML-based KVM, it will launch the KVM console in a separate browser window or tab automatically.

Irrespective of the KVM type you choose, use the KVM console to monitor the progress of the configuration and respond to Maglev Configuration Wizard prompts.

- c) With the KVM displayed, reboot the appliance by making one of the following selections:
- In the main Cisco IMC GUI browser window: Choose **Host Power > Power Cycle**. Then switch to the KVM console to continue.
 - In the KVM console: Choose **Power > Power Cycle System (cold boot)**.


If asked to confirm your choice to reboot the appliance, click **OK**.

After displaying reboot messages, the KVM console displays the Maglev Configuration wizard welcome screen.

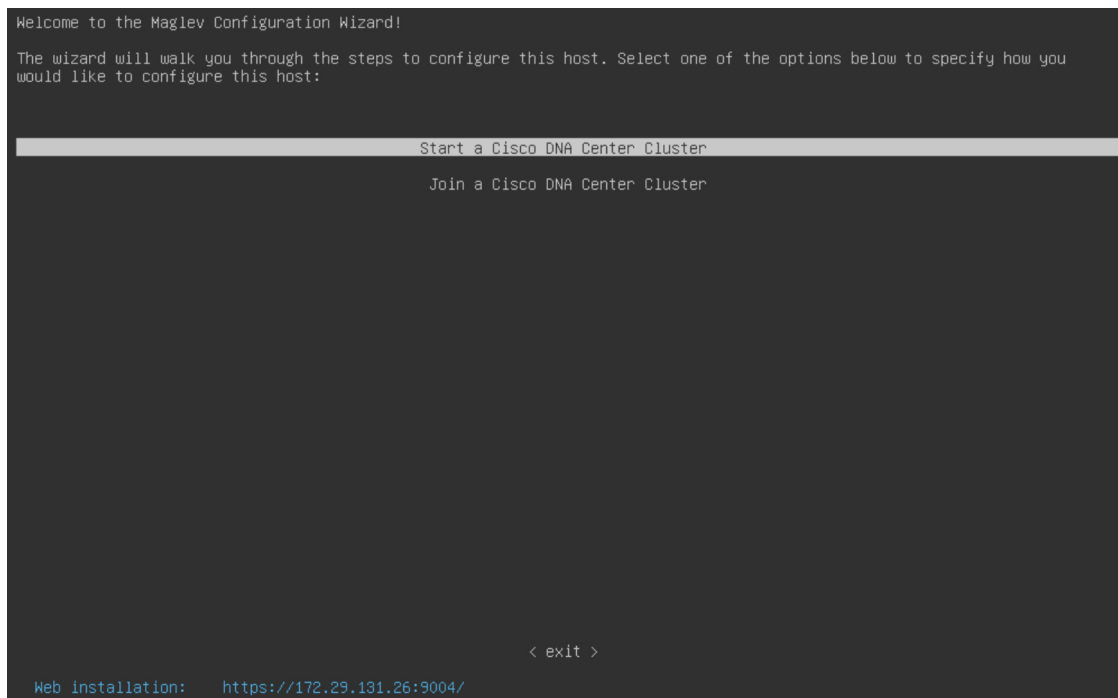


Note the URL listed in the **Web Installation** field.

- d) Open this URL to bring up the **Appliance Configuration** screen.

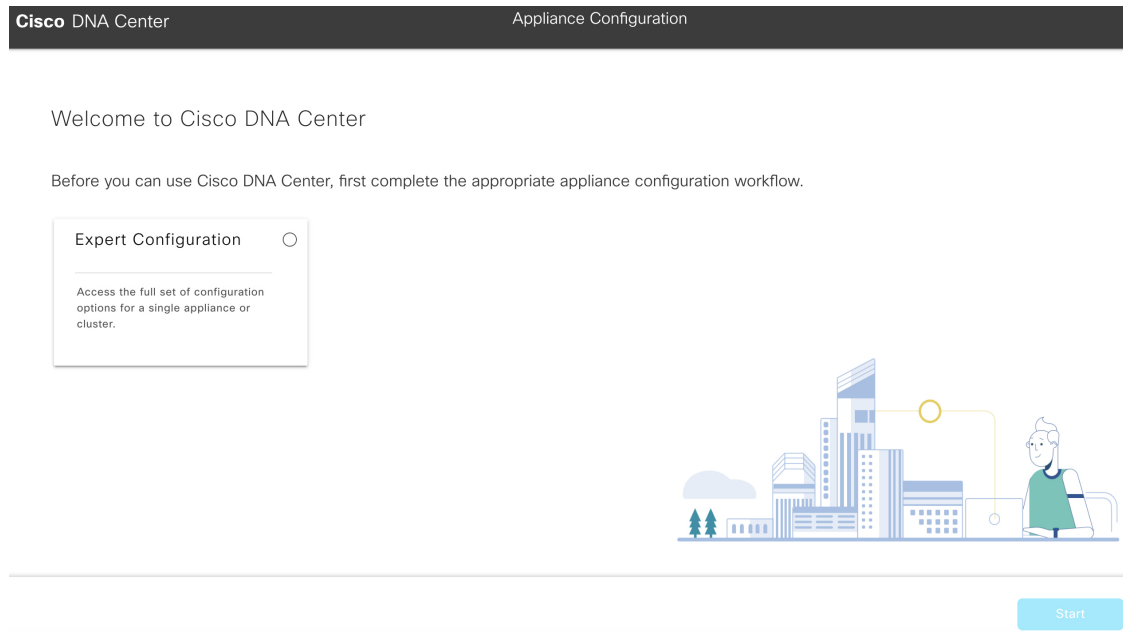

- e) Click the **Expert Configuration** radio button, then click **Start**.

The **Expert Configuration Overview** slider opens. Click > to view a summary of the tasks that the wizard will help you complete.

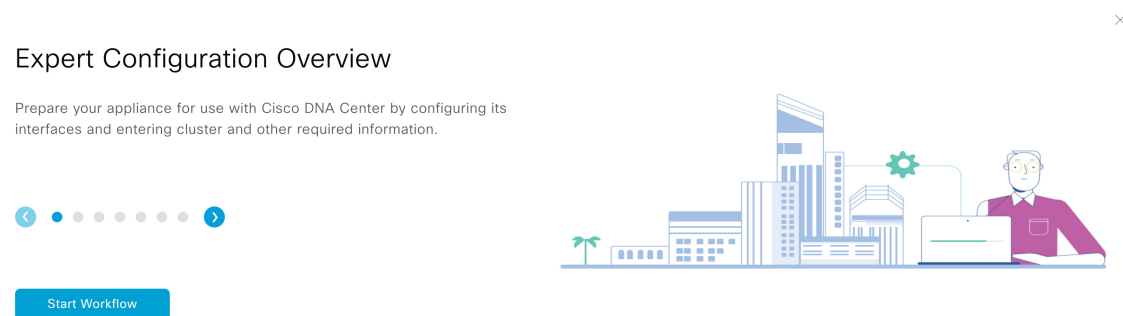

- f) Click **Start Workflow** to start the wizard.

The **Appliance Interface Overview** screen opens, providing a description of the four appliance interfaces that you can configure.

Configure a Secondary Node Using the Expert Configuration Wizard

Cisco DNA Center Expert Configuration

Appliance Interface Overview

In order for Cisco DNA Center to operate properly, you need to configure four interfaces on your appliance:

1. **Enterprise Network Interface:** Connects your appliance to the Enterprise network.
2. **Intracenter Link Interface:** Connects your appliance to your cluster.
3. **Management Network Interface:** (Optional) Accesses the Cisco DNA GUI from your Management network.
4. **Internet Access Interface:** (Optional) Accesses the Internet.

[Exit](#)
[Next](#)

At a minimum, you must configure the Enterprise and Cluster ports, as they are required for Cisco DNA Center functionality. If the wizard fails to display either or both of these ports during the course of configuration, they may be non-functional or disabled. If you discover that they are non-functional, choose **Exit** to exit the wizard immediately. Be sure you have completed all of the steps provided in [Execute Preconfiguration Checks](#) before resuming configuration or contacting the Cisco Technical Assistance Center (TAC).

Step 2 Complete the Expert Configuration wizard:


a) Click **Next**.

The **Will this appliance join a cluster?** screen opens.

Cisco DNA Center Expert Configuration

Will this appliance join a cluster?

This appliance with software version **1.6.299** is currently being configured as the primary in the cluster

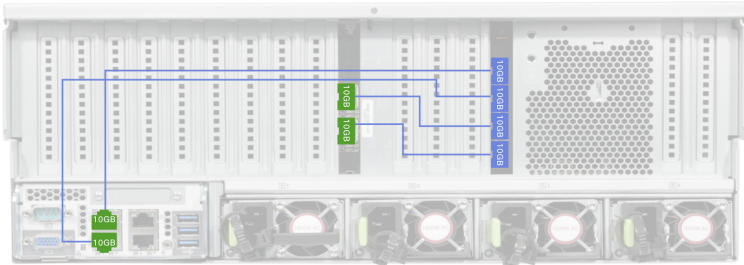

☒ Yes
 ☐ No

[Exit](#)
[Back](#)
[Next](#)


b) Click the **Yes** radio button, then click **Next**.


The **How would you like to set up your appliance interfaces?** screen opens.


Cisco DNA Center Expert Configuration

How would you like to set up your appliance interfaces?

Currently we detected 4 connected ports (highlighted in green) on the appliance's rear panel. Before you start, reserve the IP addresses necessary for configuration. If your network resides behind a firewall, be sure to [allow access to these URLs](#) and [open these ports](#).

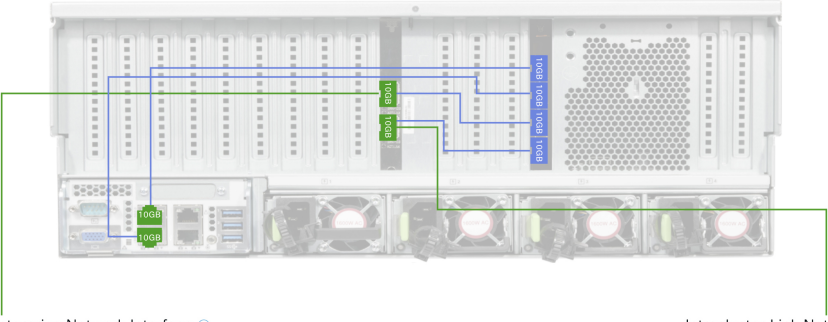


Enterprise Network Interface 

Intracuster Link Network 


The Enterprise Network Interface and Intracuster Link Interface will be configured using the two 10-Gbps ports as shown above.

Would you like to have a dedicated Management Network Interface?

☒ Yes ☐ No 

Would you like to have a dedicated Internet Access Interface?

☐ Yes ☒ No

 Exit

Back

Next

- c) Indicate whether you want to configure dedicated Management and Internet Access interfaces, then click **Next**. The **Configure Your Enterprise Network Interface** screen opens.

Configure Your Enterprise Network Interface



Enterprise Network Interface ⓘ



LACP Mode

This mode provides fault tolerance features via active-backup policy.

Host IP Address

10.106.172.27

Enter IPv4

Subnet Mask

255.255.255.128

Enter IPv4 or 0-32 range

Default Gateway IP Address

10.106.172.1

Enter Host name or IP address

DNS Servers

171.70.168.183

To enter multiple addresses, use comma as separator

Add Static Route ⓘ

Exit

Back

Next

d) Enter configuration values for the Enterprise interface.

As explained in [Interface Cable Connections](#), this is a required interface used to link the appliance to the enterprise network. See [Required IP Addresses and Subnets, on page 26](#) and [Required Configuration Information](#) for a more detailed description of the values you need to enter.

Note

- If you opted to configure the Enterprise and Internet Access interfaces on the same port, complete this step and then proceed to Step 2e (which describes how to configure your Management interface).
- If you opted to configure the Enterprise and Management interfaces on the same port, complete this step and then skip ahead to Step 2f (which describes how to configure your Internet Access interface).
- If you opted to configure the Enterprise, Management, and Internet Access interfaces on the same port, complete this step and then skip ahead to Step 2g (which describes how to configure your Intracluster interface).

Table 51: Secondary Node Entries for the Enterprise Interface

LACP Mode slider	<p>Choose one of the following network interface controller (NIC) bonding modes for the Enterprise interface:</p> <ul style="list-style-type: none"> • Active-Backup mode: This mode provides fault tolerance by aggregating two Ethernet interfaces into a single logical channel. When the interface that's currently active goes down, the other interface takes its place and becomes active. • LACP mode: This mode aggregates two Ethernet interfaces that share the same speed and duplex settings into a single logical channel. This provides load balancing and higher bandwidth. <p>For more information about Cisco DNA Center's implementation of NIC bonding, see NIC Bonding Overview, on page 62.</p>
Host IP Address field	Enter the IP address for the Enterprise port. This is required.
Subnet Mask field	Enter the netmask for the port's IP address. This is required.
Default Gateway IP Address field	<p>Enter a default gateway IP address to use for the port.</p> <p>Important Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.</p> <p>Note You designated this interface to use the default gateway assigned to it by a DHCP server. Complete the following steps to specify a different gateway:</p> <ol style="list-style-type: none"> 1. Delete the IP address that is currently listed in this field and then click Exit. This will bring you back to the first wizard screen. 2. Return to the Enterprise port's wizard screen and enter the gateway IP address you want to use.

DNS Servers field	<p>Enter the IP address of the preferred DNS server. If entering multiple DNS servers, separate the IP addresses in the list with commas.</p> <p>Important For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for a node.</p>
Add Static Route link	<p>To configure a static route, click this link and then do the following:</p> <ol style="list-style-type: none"> 1. Enter the route's network IP prefix, subnet mask, and nexthop IP address. To configure additional static routes, click +. 2. Click Add.

From here, do one of the following:


- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.
- To proceed to the next wizard screen, click **Next**.

The wizard validates the information you have entered, confirms that the port is up, and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid and the port is up, the wizard's **Configure Your Management Network Interface** screen opens.

Cisco DNA Center

Expert Configuration

Configure Your Management Network Interface

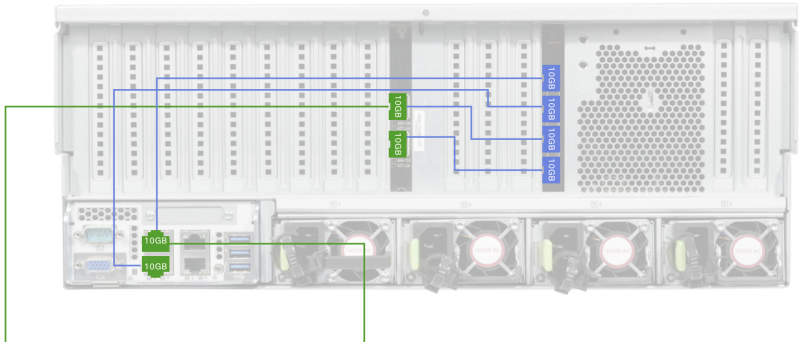

Enterprise Network Interface ⓘ

Interface Name	enterprise
LACP Mode	Disabled ⓘ
IP Address	10.106.172.27
Subnet Mask	255.255.255.128
Default Gateway	10.106.172.1
DNS Servers	171.70.168.183

Management Network Interface ⓘ

Host IP Address	10.20.30.43
Subnet Mask	255.255.255.0
Default Gateway IP Address	Default Gateway already configured in Enterprise Network
DNS Servers	To enter multiple addresses, use comma as separator

[Add Static Route](#) ⓘ

Exit
Back
Next

e) (Optional) Enter configuration values for the Management port.

As explained in [Interface Cable Connections](#), this port is used to access the Cisco DNA Center GUI from your management network. If you chose to configure a dedicated Management interface, enter the information described in the following table. (See [Required IP Addresses and Subnets](#), on page 26 and [Required Configuration Information](#) for a more detailed description of the values you need to enter.)

Note

- If you opted to configure the Enterprise and Management interfaces on the same port, skip this step and proceed to Step 2f (which describes how to configure your Internet Access interface).
- If you opted to configure the Enterprise, Management, and Internet Access interfaces on the same port, skip this step and proceed to Step 2g (which describes how to configure your Intracluster interface).

Table 52: Secondary Node Entries for the Management Port

Host IP Address field	Enter the IP address for the Management port. This is required.
Subnet Mask field	Enter the netmask for the port's IP address. This is required.

Default Gateway IP Address field	<p>Enter a default gateway IP address to use for the port.</p> <p>Important Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.</p>
DNS Servers field	<p>Enter the IP address of the preferred DNS server. If entering multiple DNS servers, separate the IP addresses in the list with spaces.</p> <p>Important</p> <ul style="list-style-type: none"> • For NTP, ensure port 123 (UDP) is open between Cisco DNA Center and your NTP server. • For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for a node.
Add Static Route link	<p>To configure a static route, click this link and then do the following:</p> <ol style="list-style-type: none"> 1. Enter the route's network IP prefix, subnet mask, and nexthop IP address. To configure additional static routes, click +. 2. Click Add.

From here, do one of the following:

- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.
- To proceed to the next wizard screen, click **Next**.

The wizard validates the information you have entered, confirms that the port is up, and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid and the port is up, the wizard's **Configure Your Internet Access Interface** screen opens.

Cisco DNA Center

Expert Configuration

Configure Your Internet Access Interface

Enterprise Network Interface ⓘ

Interface Name	enterprise
LACP Mode	Disabled ⓘ
IP Address	10.106.172.27
Subnet Mask	255.255.255.128
Default Gateway	10.106.172.1
DNS Servers	171.70.168.183

Management Network Interface ⓘ

Interface Name	management
IP Address	10.20.30.43
Subnet Mask	255.255.255.0

Internet Network Interface ⓘ

Host IP Address	11.21.31.45
Subnet Mask	255.255.255.0
Default Gateway IP Address	Default Gateway already configured in Enterprise Network
DNS Servers	To enter multiple addresses, use comma as separator
Add Static Route ⓘ	

Exit Back Next

- f) (Optional) Enter configuration values for the Internet Access interface.

As explained in [Interface Cable Connections](#), this is an optional port used to link the appliance to the Internet when you cannot do so through the Enterprise port. If you chose to configure a dedicated Internet Access interface, enter the information described in the following table. (See [Required IP Addresses and Subnets](#), on page 26 and [Required Configuration Information](#) for a more detailed description of the values you need to enter.)

Note If you opted to configure the Enterprise and Internet Access interfaces on the same port, skip this step and then proceed to Step 2g (which describes how to configure your Intracluster interface).

Table 53: Secondary Node Entries for the Internet Access Port

Host IP Address field	Enter the IP address for the Internet Access port.
-----------------------	--

Subnet Mask field	Enter the netmask for the port's IP address. This is required if you enter an IP address.
Default Gateway IP Address field	Enter a default gateway IP address to use for the port. Important Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.
DNS Servers field	Enter the IP address of the preferred DNS server. If entering multiple DNS servers, separate the IP addresses in the list with spaces. Important For each appliance in your cluster, configure a maximum of three DNS servers. Problems can occur if you configure more than three DNS servers for a node.
Add Static Route link	To configure a static route, click this link and then do the following: <ol style="list-style-type: none">1. Enter the route's network IP prefix, subnet mask, and nexthop IP address. To configure additional static routes, click +.2. Click Add.

From here, do one of the following:


- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.
- To proceed to the next wizard screen, click **Next**.

The wizard validates the information you have entered, confirms that the port is up, and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid and the port is up, the wizard's **Configure Your Intracluster Interface** screen opens.

Cisco DNA Center

Expert Configuration

Configure Your Intracluster Interface

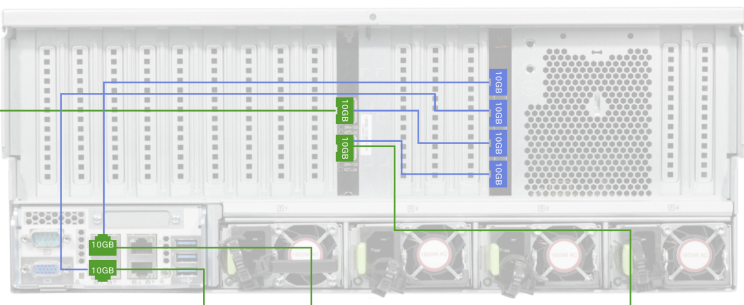

Enterprise Network Interface ⓘ

Interface Name	enterprise
LACP Mode	Disabled ⓘ
IP Address	10.106.172.27
Subnet Mask	255.255.255.128
Default Gateway	10.106.172.1
DNS Servers	171.70.168.183

Management Network Interface ⓘ

Interface Name	management
IP Address	10.20.30.43
Subnet Mask	255.255.255.0

Intracluster Link Network ⓘ

☐ LACP Mode

This mode provides fault tolerance features via active-backup policy.

Host IP Address*
169.254.6.64 Enter IPv4

Subnet Mask*
255.255.255.128 Enter IPv4 or 0-32 range

Internet Network Interface ⓘ

Interface Name	internet
IP Address	11.21.31.45
Subnet Mask	255.255.255.0

Exit

Back

Next

- g) Enter configuration values for your Intracluster interface.

As explained in [Interface Cable Connections](#), this required port is used to link the appliance to your cluster. See [Required IP Addresses and Subnets](#), on page 26 and [Required Configuration Information](#) for a more detailed description of the values you need to enter.

Table 54: Secondary Node Entries for the Intracluster Interface

LACP Mode slider	<p>Choose one of the following NIC bonding modes for the Intracluster interface:</p> <ul style="list-style-type: none"> • Active-Backup mode: This mode provides fault tolerance by aggregating two Ethernet interfaces into a single logical channel. When the interface that's currently active goes down, the other interface takes its place and becomes active. • LACP mode: This mode aggregates two Ethernet interfaces that share the same speed and duplex settings into a single logical channel. This provides load balancing and higher bandwidth. <p>For more information about Cisco DNA Center's implementation of NIC bonding, see NIC Bonding Overview, on page 62.</p>
Host IP Address field	Enter the IP address for the Cluster port. This is required. Note that you cannot change the address of the Cluster port later.
Subnet Mask field	Enter the netmask for the port's IP address. This is required.

From here, do one of the following:


- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.
- To proceed to the next wizard screen, click **Next**.

The wizard validates the information you have entered, confirms that the port is up, and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid and the port is up, the wizard's **Interface to Port Configuration** screen opens.

Interface to Port Configuration

We are going to configure the following interfaces. Click **Configure** and wait for configuration to be done before proceeding to the next step.

[Configure](#)

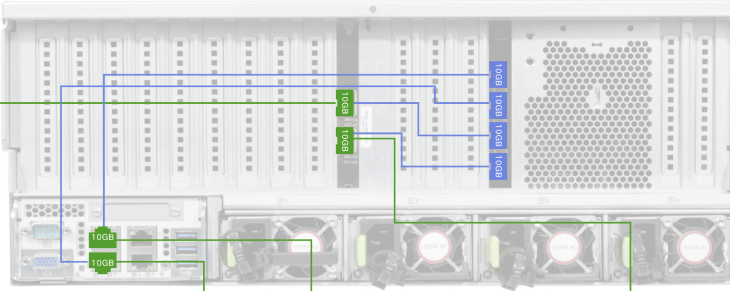

Enterprise Network Interface

Interface Name	enterprise
LACP Mode	Disabled
IP Address	10.106.172.27
Subnet Mask	255.255.255.128
Default Gateway	10.106.172.1
DNS Servers	171.70.168.183

[Edit](#)

Management Network Interface

Interface Name	management
IP Address	10.20.30.43
Subnet Mask	255.255.255.0

[Edit](#)

Intracluster Link Network

Interface Name	cluster
LACP Mode	Disabled
IP Address	169.254.6.64
Subnet Mask	255.255.255.128

[Edit](#)

Internet Network Interface

Interface Name	internet
IP Address	11.21.31.45
Subnet Mask	255.255.255.0

[Edit](#)

[Exit](#)

[Back](#)

[Next](#)

- h) Review the settings that you have entered for the secondary node's interfaces.

If you need to make any changes, click the **Edit** link for the relevant interface to return to its wizard screen.

- i) When you are happy with the interface settings, click **Configure**.
 j) After initial interface configuration has completed, click **Next** to proceed to the next wizard screen.

The **Configure Proxy Server Information** screen opens.

Cisco DNA Center

Expert Configuration

Configure Proxy Server Information

Does your network use a proxy server to access the internet?

☒ Yes ☐ No

Proxy Server*

http://proxy-wsa.esl.example.com

E.g: http://example.com

Port*

80

Enter port number between 0 to 65535.

Username

Password

[Exit](#)
[Review](#)
[Back](#)
[Next](#)

k) Do one of the following:

- If your network does *not* use a proxy server to access the internet, click the **No** radio button and then click **Next**.
- If your network does use a proxy server to access the internet, enter the values described in the following table:

Table 55: Secondary Node Entries for Proxy Server Settings

Proxy Server field	Enter the URL or host name of an HTTPS network proxy used to access the Internet. Note Connection from Cisco DNA Center to the HTTPS proxy is supported only via HTTP in this release.
Port field	Enter the port your appliance used to access the network proxy.
Username field	Enter the user name used to access the network proxy. If no proxy login is required, leave this field blank.
Password field	Enter the password used to access the network proxy. If no proxy login is required, leave this field blank.

From here, do one of the following:

- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.
- To proceed to the next wizard screen, click **Next**.

The wizard validates the information you have entered and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid, the wizard's **Primary Cluster Details** screen opens.

Cisco DNA Center
Expert Configuration

Primary Cluster Details

This appliance is getting added as a node for the Multi Cluster Setup with software version [1.6.236](#).

Primary IP
169.254.6.66

IP should be within Intra-Cluster's 169.254.6.66/25

Username*
admin

Enter Linux Username

Password*

SHOW

Enter Linux Password

Exit
Review
Back
Next

- 1) To establish a connection with your cluster's primary node, enter its IP address and login credentials, and then click **Next**.
- The **Cluster Details** screen opens.

Cisco DNA Center
Expert Configuration

Cluster Details

Please enter the IP networks for the cluster and service subnets. These networks will be internal to the cluster and non-routed, but should not overlap with the interface IP ranges. It is recommended not to change this value and use the default settings.

NTP Servers*
ntp.esl.cisco.com

Separate multiple addresses with a comma.

LINUX ADMIN CREDENTIALS

Username*
maglev

Password*

View Password Criteria

Confirm Password*

- m)
- Exit
Review
Back
Next
Enter
- configuration values for your cluster.

Table 56: Secondary Node Entries for Cluster Settings

NTP Servers field	Enter one or more NTP server addresses or hostnames, separated by commas. At least one NTP address or hostname is required. For a production deployment, Cisco recommends that you configure a minimum of three NTP servers.
Linux Admin Credentials	

Password and Confirm Password fields

Enter and then confirm the password for the `maglev` user.

From here, do one of the following:

- To close the wizard, click **Exit**. A popup window appears, indicating that the settings you have entered up to this point will be saved. Click **Exit** again to confirm that you want to close the wizard. When you restart the wizard and return to this screen, the settings that you entered previously will already be populated.
- To return to the previous wizard screen, click **Back**.
- To proceed to the next wizard screen, click **Next**.


The wizard validates the information you have entered, confirms that the port is up, and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid, the wizard's **Summary** screen opens.

Cisco DNA CenterExpert Configuration

Summary

Please review the settings that you have entered. If you need to make any changes, click the appropriate Edit link and make the necessary updates. When you are happy with your settings, click Start Configuration.

▼ Ports Configuration Completed

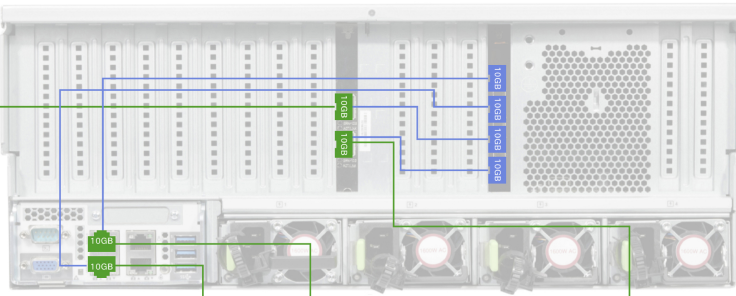

Enterprise Network Interface ⓘ

Interface Name	enterprise
LACP Mode	Disabled ⓘ
IP Address	10.106.172.27
Subnet Mask	255.255.255.128
Default Gateway	10.106.172.1
DNS Servers	171.70.168.183

Edit

Management Network Interface ⓘ

Interface Name	management
IP Address	10.20.30.43
Subnet Mask	255.255.255.0

Edit

Intracuster Link Network ⓘ

Interface Name	cluster
LACP Mode	Disabled ⓘ
IP Address	169.254.6.64
Subnet Mask	255.255.255.128

Edit

Internet Network Interface ⓘ

Interface Name	internet
IP Address	11.21.31.45
Subnet Mask	255.255.255.0

Edit

ExitBackNext

- n) Review all of the settings that you have entered while completing the wizard. If necessary, click the appropriate **Edit** link to open the wizard screen in which you want to make updates.
- o) To complete the configuration of your Cisco DNA Center appliance, click **Start Configuration**.

The configuration process takes roughly 90 minutes. The wizard screen continuously updates during the process, indicating the tasks that are currently being completed and their progress, as well as any errors that have occurred. To save a local copy of this information as a text file, click the download icon.

Cisco DNA Center
Configuration

Application Configuration In Progress

It should take about 90 minutes to complete the configuration of your appliance. As you wait, you can view a video that explains the next steps in the Cisco DNA Center setup process.

0%

ABOUT STARTING CISCO DNA CENTER

▶ 0:00

🔊
🔍
⋮

Started: Invalid date

```

2021-01-06 02:39:32,811 | renew_certs : Collating the expiry results
2021-01-06 02:39:33,040 | renew_certs : debug
2021-01-06 02:39:33,339 | controller-manager.conf Jan 4 22:47:18 2021 GMT Jan 4
23:29:48 2022 GMT
2021-01-06 02:39:33,340 | -----
                
```

While the configuration process is taking place, you can also watch a quick video that describes how to get started using Cisco DNA Center.

What to do next

When this task is complete:

- If you have an additional appliance to deploy as the third and final node in the cluster, repeat this procedure.
- If you are finished adding nodes to the cluster, continue by performing first-time setup: [First-Time Setup Workflow](#).

Generate a Linux Password

When configuring your appliance, you have the option of using a Linux password that is generated by Cisco DNA Center. To generate this password, complete the following steps:

Step 1

From the wizard's **Cluster Setting** screen, click the **Click here to Generate New Password** link.

The **Generate Password** dialog box opens.

Generate Password

Password Generation Seed

Seed phrase must contain letters, digits, space, underscore and hyphen

Generate Password

Auto Generated Password

ⓘ User is advised to append personal password with generated password for recommended security.
Caution: Remember generated password for future logins.

Cancel
Use Generated Password

Step 2 In the **Password Generation Seed** field, enter a seed phrase.

The seed phrase can contain letters, numbers, spaces, underscores, and hyphens.

Step 3 Click the **Generate Password** link.

In the **Auto Generated Password** field, the seed phrase appears as part of a random and secure password that Cisco DNA Center generates. You can either use this password as is or make any desired changes.

Step 4 When you are happy with the password, click **Use Generated Password**.

Make sure to save this password for future logins.

Upgrade to the Latest Cisco DNA Center Release

For information about upgrading your current release of Cisco DNA Center, see the [Cisco DNA Center Upgrade Guide](#).



CHAPTER 8

Complete First-Time Setup

- [First-Time Setup Workflow, on page 191](#)
- [Compatible Browsers, on page 191](#)
- [Complete the Quick Start Workflow, on page 191](#)
- [Integrate Cisco ISE with Cisco DNA Center, on page 196](#)
- [Configure Authentication and Policy Servers, on page 201](#)
- [Configure SNMP Properties, on page 203](#)

First-Time Setup Workflow

After you finish configuring all of the Cisco DNA Center appliances you have installed, perform the tasks described in this chapter to prepare Cisco DNA Center for production use. Note the following points:

- For the parameter information you need to complete this work, see [Required First-Time Setup Information](#).
- If you plan to deploy high availability (HA) in your production environment, you will need to redistribute services among your cluster nodes to optimize HA operation (see [Activate High Availability, on page 213](#)). Complete this step after you have configured the SNMP settings for your appliances.

Compatible Browsers

The Cisco DNA Center GUI is compatible with the following HTTPS-enabled browsers:

- Google Chrome: Version 73.0 or later.
- Mozilla Firefox: Version 65.0 or later.

We recommend that the client systems you use to log in to Cisco DNA Center be equipped with 64-bit operating systems and browsers.

Complete the Quick Start Workflow

After you have installed and configured the Cisco DNA Center appliance, you can log in to its GUI. Use a compatible, HTTPS-enabled browser when accessing Cisco DNA Center.

When you log in for the first time as the admin superuser (with the username `admin` and the `SUPER-ADMIN-ROLE` assigned), the Quick Start workflow automatically starts. Complete this workflow to discover the devices that Cisco DNA Center will manage and enable the collection of telemetry from those devices.

Before you begin

To log in to Cisco DNA Center and complete the Quick Start workflow, you will need:

- The `admin` superuser username and password that you specified while completing one of the following procedures:
 - [Configure the Primary Node Using the Maglev Wizard, on page 75](#)
 - [Configure the Primary Node Using the Expert Configuration Wizard, on page 112](#) (44 or 56 core appliance)
 - [Configure the Primary Node Using the Expert Configuration Wizard, on page 150](#) (112 core appliance)
- The requisite information, as described in [Required First-Time Setup Information](#).

Step 1 After the Cisco DNA Center appliance reboot is completed, launch your browser.

Step 2 Enter the host IP address to access the Cisco DNA Center GUI, using **HTTPS://** and the IP address of the Cisco DNA Center GUI that was displayed at the end of the configuration process.

After entering the IP address, one of the following messages appears (depending on the browser you are using):

- Google Chrome: Your connection is not private
- Mozilla Firefox: Warning: Potential Security Risk Ahead

Step 3 Ignore the message and click **Advanced**.

One of the following messages appears:

- Google Chrome:

This server could not prove that it is `GUI-IP-address`; its security certificate is not trusted by your computer's operating system. This may be caused by a misconfiguration or an attacker intercepting your connection.

- Mozilla Firefox:

Someone could be trying to impersonate the site and you should not continue.

Websites prove their identity via certificates. Firefox does not trust `GUI-IP-address` because its certificate issuer is unknown, the certificate is self-signed, or the server is not sending the correct intermediate certificates.

These messages appear because the controller uses a self-signed certificate. For information on how Cisco DNA Center uses certificates, see the "Certificate and Private Key Support" section in the [Cisco Digital Network Architecture Center Administrator Guide](#).

Step 4 Ignore the message and do one of the following:

- Google Chrome: Click the **Proceed to `GUI-IP-address` (unsafe)** link.

- Mozilla Firefox: Click **Accept the Risk and Continue**.

The Cisco DNA Center login screen appears.

Step 5 Enter the admin's username (admin) and password that you set when you configured Cisco DNA Center, then click **Log In**.

In the resulting screen, you are prompted to specify a new admin password (as a security measure).

Step 6 Do the following, then click **Next**:

- Enter the same admin password you specified in Step 5.
- Enter and confirm a new admin password.

Step 7 In the resulting screen, enter your cisco.com username and password and then click **Next**.

These credentials are used to register software downloads and receive system communications.

The **Terms & Conditions** screen opens, providing links to the software End User License Agreement (EULA) and any supplemental terms that are currently available.

Step 8 After reviewing these documents, click **Next** to accept the EULA.

The **Quick Start Overview** slider opens. Click > to view a description of the tasks that the Quick Start workflow will help you complete in order to start using Cisco DNA Center.

Step 9 Complete the Quick Start workflow:

- Click **Let's Do it**.
- In the **Discover Devices: Provide IP Ranges** screen, enter the following information and then click **Next**:
 - The name for the device discovery job.
 - The IP address ranges of the devices you want to discover. Click + to enter additional ranges.
 - Specify whether you want to designate your appliance's loopback address as its preferred management IP address. For more information, see the "Preferred Management IP Address" topic in the [Cisco DNA Center User Guide](#).
- In the **Discover Devices: Provide Credentials** screen, enter the information described in the following table for the type of credentials you want to configure and then click **Next**:

Field	Description
CLI (SSH) Credentials	
Username	Username used to log in to the CLI of the devices in your network.
Password	Password used to log in to the CLI of the devices in your network.
Name/Description	Name or description of the CLI credentials.
Enable Password	Password used to enable a higher privilege level in the CLI. Configure this password only if your network devices require it.
SNMP Credentials: SNMPv2c Read tab	

Field	Description
Name/Description	Name or description of the SNMPv2c read community string.
Community String	Read-only community string password used only to view SNMP information on the device.
SNMP Credentials: SNMPv2c Write tab	
Name/Description	Name or description of the SNMPv2c write community string.
Community String	Write community string used to make changes to the SNMP information on the device.
SNMP Credentials: SNMPv3	
Name/Description	Name or description of the SNMPv3 credentials.
Username	Username associated with the SNMPv3 credentials.
Mode	<p>Security level that SNMP messages require:</p> <ul style="list-style-type: none"> • No Authentication, No Privacy (noAuthnoPriv): Does not provide authentication or encryption. • Authentication, No Privacy (authNoPriv): Provides authentication, but does not provide encryption. • Authentication and Privacy (authPriv): Provides both authentication and encryption.
Authentication Password	<p>Password required to gain access to information from devices that use SNMPv3. The password must be at least eight characters in length. Note the following points:</p> <ul style="list-style-type: none"> • Some wireless controllers require that passwords be at least 12 characters long. Be sure to check the minimum password requirements for your wireless controllers. Failure to ensure these required minimum character lengths for passwords results in devices not being discovered, monitored, or managed by Cisco DNA Center. • Passwords are encrypted for security reasons and are not displayed in the configuration.

Field	Description
Authentication Type	<p>Hash-based Message Authentication Code (HMAC) type used when either Authentication and Privacy or Authentication, No Privacy is set as the authentication mode:</p> <ul style="list-style-type: none"> • SHA: HMAC-SHA authentication. • MD5: HMAC-MD5 authentication.
Privacy Type	<p>Privacy type used when Authentication and Privacy is set as the authentication mode:</p> <ul style="list-style-type: none"> • DES: 56-bit DES encryption. <p>Note DES encryption is being deprecated and will be removed in a future release.</p> <ul style="list-style-type: none"> • AES128: 128-bit AES encryption. • None: No privacy.
Privacy Password	<p>Password used to generate the secret key for encrypting messages that are exchanged with devices that support DES or AES128 encryption. Passwords must be at least eight characters long. Note the following points:</p> <ul style="list-style-type: none"> • Some wireless controllers require that passwords be at least 12 characters long. Be sure to check the minimum password requirements for your wireless controllers. Failure to ensure these required minimum character lengths for passwords results in devices not being discovered, monitored, or managed by Cisco DNA Center. • Passwords are encrypted for security reasons and are not displayed in the configuration.
NETCONF	
Port	The NETCONF port that Cisco DNA Center should use in order to discover wireless controllers that run Cisco IOS-XE.

- d) In the **Create Site** screen, group the devices you are going to discover into one site in order to facilitate telemetry and then click **Next**.

You can enter the site's information manually or click the location you want to use in the provided map.

- e) In the **Enable Telemetry** screen, check the network components that you want Cisco DNA Center to collect telemetry for and then click **Next**.

To open a pop-up window that lists the commands Cisco DNA Center will send to enable telemetry on a particular component, click its **View Sample Commands** link.

- f) In the **Summary** screen, review the settings that you have entered and then do one of the following:
- If you want to make changes, click the appropriate **Edit** link to open the relevant screen.
 - If you're happy with the settings, click **Start Discovery and Telemetry**. Cisco DNA Center validates your settings to ensure that they will not result in any issues. After validation is complete, the screen updates.
- Cisco DNA Center begins the process of discovering your network's devices and enabling telemetry for the network components you selected. The process will take a minimum of 30 minutes (more for larger networks).
- g) Click **Launch Homepage** to open the Cisco DNA Center homepage.
- While Cisco DNA Center discovers your network's devices and enables telemetry, you can click the **Explore** link to open a page that provides pointers to product documentation and videos.
- A message appears at the top of the homepage to indicate when the Quick Start workflow has completed.
-

Integrate Cisco ISE with Cisco DNA Center

This release of Cisco DNA Center provides a mechanism to create a trusted communications link with Cisco ISE and permits Cisco DNA Center to share data with Cisco ISE in a secure manner. After Cisco ISE is registered with Cisco DNA Center, any device that Cisco DNA Center discovers, along with relevant configuration and other data, is pushed to Cisco ISE. Users can use Cisco DNA Center to discover devices and then apply both Cisco DNA Center and Cisco ISE functions to them because these devices are exposed in both applications. Cisco DNA Center and Cisco ISE devices are all uniquely identified by their device names.

As soon as they are provisioned and belong to a particular site in the Cisco DNA Center site hierarchy, Cisco DNA Center devices are pushed to Cisco ISE. Any updates to a Cisco DNA Center device (such as changes to IP address, SNMP or CLI credentials, Cisco ISE shared secret, and so on) will flow to the corresponding device instance on Cisco ISE automatically. Note that Cisco DNA Center devices are pushed to Cisco ISE only when these devices are associated with a particular site where Cisco ISE is configured as its AAA server.

Before you begin

Before attempting to integrate Cisco ISE with Cisco DNA Center, ensure that you have met the following prerequisites:

- You have deployed one or more Cisco ISE version 2.3 (and later) hosts on your network. For information on installing Cisco ISE, see the [Cisco Identity Services Engine Install and Upgrade guides](#) for version 2.3 and later.
- If you have a standalone Cisco ISE deployment, you must integrate with the Cisco ISE node and enable the pxGrid service and External RESTful Services (ERS) on that node.



Note

Cisco ISE 2.4 and later supports pxGrid 2.0 as well as pxGrid 1.0. Although pxGrid 2.0 allows up to four pxGrid nodes in the Cisco ISE deployment, Cisco DNA Center releases earlier than 2.2.1.x do not support more than two pxGrid nodes.

- If you have a distributed Cisco ISE deployment:
 - You must integrate Cisco DNA Center with the Cisco ISE admin node, the primary Policy Administration node (PAN), and enable ERS on the primary PAN. You must also enable ERS in your secondary PAN. In the case of a primary PAN failover in Cisco ISE, if ERS is not enabled in the secondary PAN, the secondary PAN is not available to Cisco DNA Center. As a result, the connection between Cisco DNA Center and Cisco ISE is affected.



Note As a best practice, use ERS through the PAN. But for backup, enable ERS on the Policy Service nodes (PSNs).

- As with single-node deployments, you must enable the pxGrid service on one of the Cisco ISE nodes within the distributed deployment. Although you can choose to do so, you do not have to enable pxGrid on the PAN. You can enable pxGrid on any of the other Cisco ISE nodes in your distributed deployment.
- The PSNs you configure in Cisco ISE to handle TrustSec/SD Access content and PACs must also be defined in **Work Centers > Trustsec > Trustsec Servers > Trustsec AAA Servers**. For more information, see the Segmentation document in the Administrator Workflow for your release of Cisco ISE.
- You have enabled communication between Cisco DNA Center and Cisco ISE on the following ports: 22, 443, 5222, 8910, and 9060.
- The Cisco ISE host on which pxGrid is enabled must be reachable from Cisco DNA Center on the IP address of the Cisco ISE eth0 interface.
- The Cisco ISE node can reach the fabric underlay network via the appliance's NIC.
- The Cisco ISE admin node certificate must contain the Cisco ISE IP address or FQDN in either the certificate subject name or the Subject Alternative Name (SAN).
- The Cisco DNA Center system certificate must list both the Cisco DNA Center appliance IP address and FQDN in the SAN field.



Note For Cisco ISE 2.4 Patch 13, 2.6 Patch 7, and 2.7 Patch 3, if you are using the Cisco ISE default self-signed certificate as the pxGrid certificate, Cisco ISE might reject that certificate after applying those patches. This is because the older versions of that certificate have the Netscape Cert Type extension specified as the SSL server, which now fails (because a client certificate is required).

This issue does not occur in Cisco ISE 3.0 and later. For details and a suggested workaround, see the [Cisco ISE Release Notes](#).

For more information about configuring Cisco ISE for Cisco DNA Center, see [Integration with Cisco DNA Center](#) in the *Cisco ISE Administrators Guide*.

Step 1 Enable the Cisco ISE pxGrid service and ERS:

- a) Log in to the Cisco ISE primary policy administration node.
- b) Choose **Administration > System > Deployment**.

The **Deployment Nodes** window opens.

- c) Click the hostname of the Cisco ISE node on which you want to enable pxGrid services.


In a distributed deployment, this can be any Cisco ISE node in the deployment.

The **Edit Node** window opens, with the **General Settings** tab selected by default.

- d) Ensure that the **pxGrid** check box is checked, then click **Save**.
- e) Choose **Administration > System > Settings**.
- f) From the left navigation pane, click **ERS Settings** to open the **ERS Settings** window.
- g) Click the **Enable ERS for Read/Write** radio button, then click **OK** in the notification prompt.
- h) Click **Save**.

Step 2

Add the Cisco ISE node to Cisco DNA Center as a AAA server:

- a) Log in to the Cisco DNA Center GUI.
- b) Click the **Menu** icon () and choose **System > System 360**.
- c) In the Identity Services Engine (ISE) pane, click the **Configure** link.
- d) From the **Authentication and Policy Servers** window, click **Add** and choose **ISE** from the drop-down list.
- e) Complete the following tasks in the **Add AAA/ISE server** slide-in pane:
 - In the **Server IP Address** field, enter the Cisco ISE management IP address.
 - Enter the **Shared Secret** used to secure communications between your network devices and Cisco ISE.
 - In the **Username** and **Password** fields, enter the corresponding Cisco ISE admin credentials.
 - Enter the **FQDN** for the Cisco ISE node.
 - (Optional) Enter the **virtual IP address** of the load balancer behind which the Cisco ISE PSNs are located. If you have multiple policy service node farms behind different load balancers, you can enter a maximum of six virtual IP addresses.
- f) Click **Add**.


The first time integration with Cisco ISE is initiated, you will see a notification that the certificate from Cisco ISE is not yet trusted.

- You can view the certificate to see the details.
- Choose **Accept** to trust the certificate and continue with the integration process. If you do not wish to trust the certificate and terminate the integration process, choose **Decline**.

After the integration completes successfully, a confirmation message is displayed.

If any problem is encountered in the integration process, a message is shown with details of the problem. An option to edit or retry is shown where possible.

- If the error message says that the Cisco ISE Admin credentials are invalid, click **Edit** and re-enter the correct information.
- If errors are found with certificates in the integration process, you must delete the Cisco ISE server entry and restart the integration from the beginning after the certificate issue has been resolved.

- Step 3** Verify that Cisco DNA Center is connected to Cisco ISE, and that the Cisco ISE SGT groups and devices are being pushed to Cisco DNA Center:
- Log in to the Cisco DNA Center GUI.
 - Click the **Menu** icon () and choose **System > System 360**.
 - In the Identity Services Engine (ISE) pane, click the **Update** link.
 - From the **Authentication and Policy Servers** window, verify that the status of the Cisco ISE AAA server is still **Active**.
- Step 4** Verify that Cisco ISE is connected to Cisco DNA Center and that the connection has subscribers:
- Log in to the Cisco ISE nodes that are shown as pxGrid servers in the Cisco Identity Services Engine (ISE) Deployment window.
 - Choose **Administration > pxGrid Services** and click the **Web Clients** tab.
- You should see two pxGrid clients in the list with the IP address of the Cisco DNA Center server.
-

Group-Based Access Control: Policy Data Migration and Synchronization

When You Start Using Cisco DNA Center

In earlier releases of Cisco DNA Center, the Group-Based Access Control policy function stored some policy Access Contracts and Policies locally in Cisco DNA Center. Cisco DNA Center also propagated that data to Cisco ISE. Cisco ISE provides the runtime policy services to the network, which includes group-based access control policy downloads to the network devices. Usually, the policy information in Cisco DNA Center matches the policy information in Cisco ISE. But it is possible that the data is not in sync; the data may not be consistent. Because of this, after installing or upgrading to Cisco DNA Center, the following steps are necessary before you can use the Group-Based Access Control capabilities.

- Integrate Cisco ISE with Cisco DNA Center, if it is not already integrated.
- Upgrade Cisco ISE, if the version is not the minimum required. See the Cisco DNA Center Release Notes for the required versions of Cisco ISE.
- Perform Policy Migration and Synchronization.

What Is “Migration and Synchronization”?

Cisco DNA Center reads all the Group-Based Access Control policy data in the integrated Cisco ISE and compares that data with the policy data in Cisco DNA Center. If you upgraded from an earlier version, existing policy data is retained. You must synchronize the policies before you can manage Group-Based Access Control Policy in Cisco DNA Center.

How Does Migration and Synchronization Work?

Usually, the policy data in Cisco ISE and in Cisco DNA Center is consistent, so no special handling or conversion of data is necessary. Sometimes, when there are minor discrepancies or inconsistencies, only some of the data is converted during the migration. If there is a conflict, the data in Cisco ISE is given precedence, so as not to introduce changes in policy behavior in the network. The following list describes the actions taken during migration:

- Scalable Groups: The Scalable Group Tag (SGT), which is a numeric value, uniquely identifies a Scalable Group. Cisco ISE Security Groups are compared to Scalable Groups in Cisco DNA Center.
 - When the Name and SGT value are the same, nothing is changed. The information in Cisco DNA Center is consistent with Cisco ISE and does not need to be changed.
 - When a Cisco ISE Security Group SGT value does not exist in Cisco DNA Center, a new Scalable Group is created in Cisco DNA Center. The new Scalable Group is given the default association of “Default_VN.”
 - When a Cisco ISE Security Group SGT value exists in Cisco DNA Center, but the names do not match, the name from Cisco ISE Security Group replaces the name of that Scalable Group in Cisco DNA Center.
 - When the Cisco ISE Security Group Name is the same, but the SGT value is different, the Security Group from Cisco ISE is migrated. It retains the name and tag value, and the Cisco DNA Center Scalable Group is renamed. A suffix of “_DNA” is added.

Contracts

All the SGACLs in Cisco ISE that are referenced by policies are compared to Contracts in Cisco DNA Center.

- When the SGACL and Contract have the same name and content, there is no need for further action. The information in Cisco DNA Center is consistent with Cisco ISE and does not need to be changed.
- When the SGACL and Contract have the same name, but the content is different, the SGACL content from Cisco ISE is migrated. The previous Contract content in Cisco DNA Center is discarded.

When the SGACL name does not exist in Cisco DNA Center, a new Contract with that name is created, and the SGACL content from Cisco ISE is migrated.



Note

When creating new Access Contracts based on Cisco ISE SGACL content, Cisco DNA Center parses the text command lines, and, where possible, renders these SGACL commands as a modeled Access Contract. Each ACE line renders as an “Advanced” application line. If a Cisco ISE SGACL contains text that cannot be parsed successfully, the text content of the SGACL is not converted into modeled format. It is stored as raw command line text. These SGACL text contracts may be edited, but no parsing or syntax checking of the text content is performed during migration.

Policies

A Policy is uniquely identified by a source group-destination group pair. All Cisco ISE TrustSec Egress Policy Matrix policies are compared to the policies in Cisco DNA Center.

- When a policy for a source group-destination group references the same SGACL/Contract name in Cisco ISE, no changes are made.
- When a policy for a source group-destination group references a different SGACL/Contract name in Cisco ISE, the Cisco ISE Contract name is referenced in the policy. This overwrites the previous Contract reference in Cisco DNA Center.
- The Cisco ISE default policy is checked and migrated to Cisco DNA Center.



Note Cisco DNA Center supports a single contract in access policies. Cisco ISE has an option to use multiple SGACLs in access policies, but this option is not enabled by default in Cisco ISE, and in general is not widely used. Existing SDA customers who have been using the previous release of Cisco DNA Center to manage Group-Based Access Control policy did not use this option.

If you enabled the option to allow multiple SGACLs on Cisco ISE and used this when creating policies, those policies cannot be migrated to Cisco DNA Center in this release. The specific policy features that make use of the “multiple SGACL” option and cannot be migrated are:

- Multiple SGACLs in a policy.
- Policy Level catch-all rules set to “Permit” or “Deny.” Only the value of “None” is currently supported for migration to Cisco DNA Center.
- Default Policy set to use a customer-created SGACL, but only the standard values of “Permit IP,” “Permit_IP_Log,” “Deny IP,” and “Deny_IP_Log” are currently supported for migration to Cisco DNA Center.

If any of the preceding SGACLs are detected during the policy migration and synchronization operation, a notification is generated, and you must choose between the following options to continue:

- **Manage Group-Based Access Control policy in Cisco DNA Center:** If this option is selected, all management of Group-Based Access Control Policy is done in Cisco DNA Center. The user interface screens in Cisco ISE for management of Cisco ISE Security Groups, SGACLs, and Egress Policies are available in Read-Only mode. If there were any issues migrating policies (due to use of multiple SGACLs in Cisco ISE), those policies have no contract selected in Cisco DNA Center. The policy uses the default policy, and you can select a new contract for those policies after completing the migration. If there was an problem migrating the default policy, the default policy is set to "Permit."
- **Manage Group-Based Access Control Policy in Cisco ISE:** If this option is selected, Cisco DNA Center Group-Based Access Control policy management is inactive. No changes are made to Cisco ISE and there is no effect on policy enforcement in the network. Group-Based Access Control policy is managed in Cisco ISE at the TrustSec workcenter.
- **Manage Group-Based Access Control policy in both Cisco DNA Center and Cisco ISE:** This option is not recommended for general use, because policy changes made in Cisco ISE are not synchronized with Cisco DNA Center. The two systems cannot be kept in sync. This option is intended as a short-term or interim option, and should only be considered when you enabled the “Allow Multiple SGACLs” option in Cisco ISE. Use this option if you need more time and flexibility updating Cisco ISE.


Configure Authentication and Policy Servers

Cisco DNA Center uses AAA servers for user authentication and Cisco ISE for both user authentication and access control. Use this procedure to configure AAA servers, including Cisco ISE.

Before you begin

- If you are using Cisco ISE to perform both policy and AAA functions, make sure that Cisco DNA Center and Cisco ISE are integrated as described in [Integrate Cisco ISE with Cisco DNA Center](#).

- If you are using another product (not Cisco ISE) to perform AAA functions, make sure that you do the following:
 - Register Cisco DNA Center with the AAA server, and define the shared secret on both the AAA server and Cisco DNA Center.
 - Define an attribute name for Cisco DNA Center on the AAA server.
 - For a Cisco DNA Center multihost cluster configuration, define all the individual host IP addresses and the virtual IP address for the multihost cluster on the AAA server.

Step 1 In the Cisco DNA Center GUI, click the **Menu** icon () and choose **System > Settings > External Services > Authentication and Policy Servers**.

Step 2 Click  **Add**.

Step 3 Configure the primary AAA server by providing the following information:

- **Server IP Address:** IP address of the AAA server.
- **Shared Secret:** Key for device authentications. The shared secret can be up to 128 characters in length.

Step 4 To configure an AAA server (except Cisco ISE), leave the **Cisco ISE Server** slider in the **Off** position and proceed to Step 5.

To configure a Cisco ISE server, click the **Cisco ISE server** slider to move it to the **On** position and enter information in the following fields:

- **Username**—Name that is used to log in to Cisco ISE CLI.

Note This user must be a Super Admin.

- **Password**—Password for the Cisco ISE CLI username.

- **FQDN**—FQDN of the Cisco ISE server.

Note • We recommend that you copy the FQDN that is defined in Cisco ISE (**Administration > Deployment > Deployment Nodes > List**) and paste it directly into this field.

- The FQDN that you enter must match the FQDN, Common Name (CN), or Subject Alternative Name (SAN) defined in the Cisco ISE certificate.

The FQDN consists of two parts, a hostname and a domain name, in the following format:

hostname.domainname.com.

For example, the FQDN for a Cisco ISE server might be ise.cisco.com.

- **Subscriber Name**—Unique text string that identifies a pxGrid client registering for Cisco ISE pxGrid services; for example, acme. The subscriber name is used during Cisco DNA Center-to-Cisco ISE integration.
- (Optional) **SSH Key**—Diffie-Hellman-Group14-SHA1 SSH key used to connect to Cisco ISE.
- (Optional) **Virtual IP Address(es)**—Virtual IP address of the load balancer behind which the Cisco ISE policy service nodes are located. If you have multiple policy service node farms behind different load balancers, you can enter a maximum of six virtual IP addresses.

Note If the status of the configured ISE server is "FAILED" due to password change, click **Retry**, and update the password to resync the ISE connectivity.

Step 5 Click the **Advanced Settings** slider to move it to the **On** position and configure the following settings:

Note The settings you need to configure will vary, depending on the protocol you set for the server.

- **Protocol:** **RADIUS** is set by default, but you can choose **TACACS** instead or choose both protocols.

Attention If you do not choose **TACACS** for Cisco ISE servers, it will not be available when you configure Cisco ISE nodes.

- **Authentication Port:** Port used by **RADIUS** to relay authentication messages to the AAA server. The default is UDP port 1812.
- **Accounting Port:** Port used by **RADIUS** to relay important events to the AAA server. The information in these events is used for security and billing purposes. The default UDP port is 1813.
- **Port:** Port used by **TACACS** to communicate with the AAA server. The default port is 49.
- **Retries:** Number of times that Cisco DNA Center attempts to connect with the AAA server before abandoning the attempt to connect. The default number of attempts is 3.
- **Timeout:** Length of time the device waits for the AAA server to respond before abandoning the attempt to connect. The default timeout is 4 seconds.

Step 6 Click **Apply**.


Step 7 To add a secondary server, repeat Step 2 through Step 6.

Configure SNMP Properties

You can configure the retry and timeout values for SNMP.

Before you begin

Only a user with SUPER-ADMIN-ROLE permissions can perform this procedure. For more information, see the [Cisco DNA Center Administrator Guide](#).


Step 1 In the Cisco DNA Center GUI, click the **Menu** icon () and choose **System > Settings > Device Settings > SNMP**.

Step 2 Configure the following fields:

- **Retries:** Number of attempts allowed to connect to the device. Valid values are from 1 to 3. The default is 3.
- **Timeout (in Seconds):** Number of seconds Cisco DNA Center waits when trying to establish a connection with a device before timing out. Valid values are from 1 to 300 seconds, in intervals of 5 seconds. The default is 5 seconds.

Step 3 Click **Save**.

Note To return to the default settings, click **Reset and Save**.

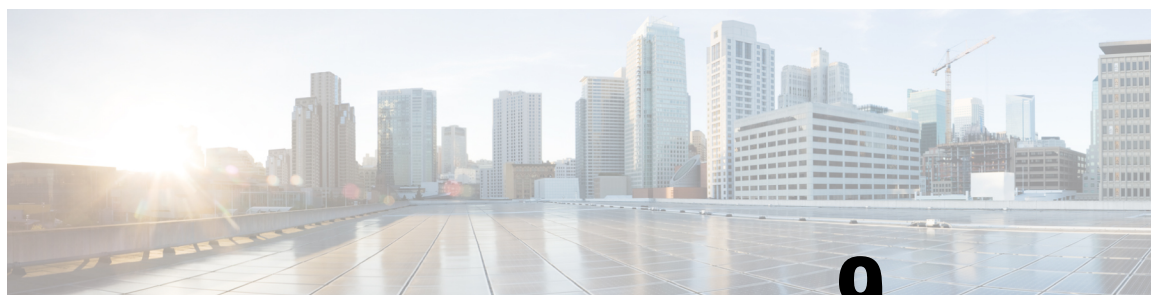

CHAPTER 9

Troubleshoot the Deployment

- [Troubleshooting Tasks, on page 205](#)
- [Log Out, on page 205](#)
- [Reconfigure the Appliance Using the Configuration Wizard, on page 206](#)
- [Power-Cycle the Appliance, on page 207](#)

Troubleshooting Tasks

When troubleshooting issues with the appliance's configuration, you will normally perform the following tasks:

1. If you are currently using the Cisco DNA Center GUI: [Log Out](#).
2. To reconfigure the appliance's hardware, log in to and use the CIMC GUI, as explained in Steps 12 and 13 of [Enable Browser Access to Cisco Integrated Management Controller](#).
3. To change the appliance configuration, launch and use the Maglev Configuration wizard, as explained in [Reconfigure the Appliance Using the Configuration Wizard](#).
4. Power-cycle the appliance so that your changes are active: [Power-Cycle the Appliance, on page 207](#).

For more information about the appliance's network adapters, see the [Managing Adapters](#) section of the *Cisco UCS C-Series Servers Integrated Management Controller CLI Configuration Guide, Release 3.1*. As noted elsewhere, never attempt to manage the appliance hardware through the Linux CLI. Use only the CIMC GUI or the Maglev Configuration wizard to change appliance settings.

Log Out

Follow the steps below to log out of the Cisco DNA Center GUI.

For security reasons, we recommend that you log out after you complete a work session. If you do not log out yourself, you will be logged out automatically after 30 minutes of inactivity.

-
- Step 1** Click the **Menu** icon (≡).
- Step 2** Click **Sign out**.

This ends your session and logs you out.

Reconfigure the Appliance Using the Configuration Wizard

To reconfigure an appliance, you must use the Configuration wizard to update the appliance settings. You cannot use the Linux CLI to do this. The normal Linux administration procedures that you might use to update configuration settings on a standard Linux server will not work and should not be attempted.

After the appliance is configured, you cannot use the Configuration wizard to change all of the appliance settings. Changes are restricted to the following settings only:

- Host IP address of the appliance
- DNS server IP addresses
- Default gateway IP address
- NTP server IP addresses
- Cluster Virtual IP address
- Cluster hostname (FQDN)
- Static routes
- Proxy server IP address
- Maglev user password
- Admin user password

Before you begin

You will need the Linux user name (*maglev*) and password that are currently configured on the target appliance.

Step 1

Point your browser to the Cisco IMC IP address you set during the Cisco IMC GUI configuration you performed, and log in to the Cisco IMC GUI as the Cisco IMC user (see [Enable Browser Access to Cisco Integrated Management Controller](#)).

After successful login, the appliance displays the **Cisco Integrated Management Controller Chassis Summary** window, with a hyperlinked menu at the top of the window, as shown below.



Step 2 From the hyperlinked menu, choose **Launch KVM** and then select either **Java based KVM** or **HTML based KVM**. If you select **Java-based KVM**, you will need to launch the Java startup file from your browser or file manager in order to view the KVM console in its own window. If you select **HMTL-based KVM**, it launches the KVM console in a separate window or tab automatically.

Irrespective of the KVM type you choose, use the KVM console to monitor the progress of the configuration and respond to the Maglev Configuration wizard prompts.

Step 3 When prompted, enter the Linux password.

Step 4 Enter the following command to access the Configuration wizard.

sudo maglev-config update

If you are prompted for the Linux password, enter it again.

Step 5 The Configuration wizard presents an abbreviated version of the same series of screens shown in, for example, [Configure a Secondary Node Using the Maglev Wizard](#). Make changes to the settings presented, if required. After you finish making changes on each screen, choose **[Next]**, as needed, to proceed through the Configuration wizard.

Step 6 At the end of the configuration process, a message appears, stating that the Configuration wizard is now ready to apply your changes. The following options are available:

- **[back]**: Review and verify your changes.
- **[cancel]**: Discard your changes and exit the Configuration wizard.
- **[proceed]**: Save your changes and begin applying them.

Choose **proceed>>** to complete the installation. The Configuration wizard applies the changes you made.

At the end of the configuration process, a `CONFIGURATION SUCCEEDED!` message appears.

Power-Cycle the Appliance

Complete one of the following procedures on your Cisco DNA Center appliance to either halt it or perform a warm restart. You can halt the appliance before you make hardware repairs, or you can initiate a warm restart after you have corrected software issues.

Using the Cisco IMC GUI

If you want to use the KVM console that is accessible from the Cisco IMC GUI in order to halt your appliance or perform a warm restart, complete the tasks described in this procedure.

Before you begin

Note that any hardware changes you make using the Cisco IMC GUI will be applied after the appliance reboots.




Caution Power-cycling your appliance from the Cisco IMC GUI can result in the corruption or loss of data. Only do so if your appliance is completely unresponsive to SSH, the Cisco IMC console, or the physical console.

Step 1

Point your browser to the Cisco IMC IP address you set during the Cisco IMC GUI configuration you performed, and log in to the Cisco IMC GUI as the Cisco IMC user (see [Enable Browser Access to Cisco Integrated Management Controller, on page 54](#)).

After successful login, the appliance displays the **Cisco Integrated Management Controller Chassis Summary** window, with a hyperlinked menu at the top of the window, as shown below.

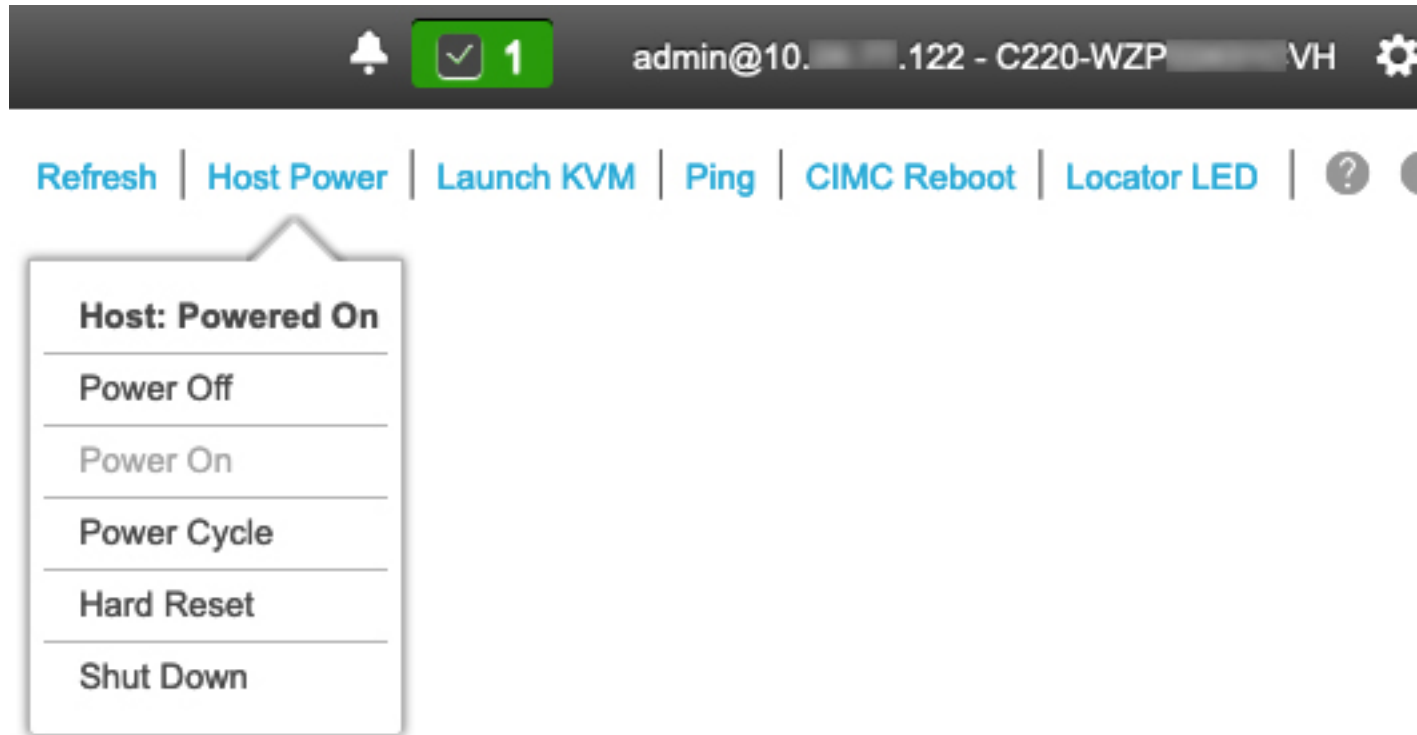**Step 2**

With the KVM displayed, reboot the appliance by choosing **Host Power > Power Cycle**.

If you are asked to confirm your choice to reboot the appliance, click **OK**.

Using SSH

If you want to use SSH in order to halt your appliance or perform a warm restart, complete the following tasks:

Before you begin

You will need the following:

- Secure Shell (SSH) client software.
- The IP address that you configured for the 10-Gbps Enterprise port on the appliance that needs reconfiguration. Log in to the appliance at this address, on port 2222.

To identify the Enterprise port, see the rear-panel figures in [Front and Rear Panels, on page 4](#).

- The Linux user name (*maglev*) and the password that is currently configured on the target appliance.

-
- Step 1** Using a Secure Shell (SSH) client, log in to the IP address of the Enterprise port of the appliance that needs to be reconfigured, on port 2222:
- `ssh maglev@Enterprise-port's-IP-address -p 2222`**
- Step 2** When prompted, enter the Linux password.
- Step 3** Enter the command that is appropriate for the task you want to perform:
- To halt the appliance, enter: **`sudo shutdown -h now`**
 - To initiate a warm restart, enter: **`sudo shutdown -r now`**
- If you are prompted for the Linux password, enter it again.
- Step 4** Review the command output that is displayed as the host shuts down.
- Step 5** If you halted your appliance, power up the Maglev root process by turning the appliance back on, using the front-panel power button.
-



APPENDIX **A**

Review High Availability Cluster Deployment Scenarios

Cisco DNA Center's implementation of high availability (HA) is described in the [Cisco DNA Center High Availability Guide](#). We recommend that you first review this information and then determine whether you want to deploy HA in your production environment. If you choose to do so, complete the following tasks:

1. Complete the deployment procedure that is appropriate for your network:
 - [New HA Deployment](#)
 - [Existing HA Deployment of the Primary Node with Standard Interface Configurations](#)
 - [Existing HA Deployment of Primary Node with Nonstandard Interface Configurations](#)
2. [Activate High Availability](#) on your Cisco DNA Center cluster.
3. See [Additional HA Deployment Considerations](#) and make any additional configurations that are necessary.
 - [New HA Deployment, on page 211](#)
 - [Existing HA Deployment of the Primary Node with Standard Interface Configurations, on page 212](#)
 - [Existing HA Deployment of Primary Node with Nonstandard Interface Configurations, on page 213](#)
 - [Activate High Availability, on page 213](#)
 - [Additional HA Deployment Considerations, on page 214](#)

New HA Deployment

To install a brand new HA cluster, complete the following steps:

Step 1 Configure the first installed appliance as the primary node:

- If you are configuring an appliance using the Maglev Configuration wizard, see [Configure the Primary Node Using the Maglev Wizard, on page 75](#).
- If you are configuring an appliance using the browser-based configuration wizard, see the "Configure the Primary Node Using the Expert Configuration Wizard" topic specific to your appliance:
 - [Configure the Primary Node Using the Expert Configuration Wizard](#)

- [Configure the Primary Node Using the Expert Configuration Wizard](#)

Step 2 Configure the second and third appliances in the cluster:

- If you are configuring an appliance using the Maglev Configuration wizard, see [Configure a Secondary Node Using the Maglev Wizard, on page 93](#).
- If you are configuring an appliance using the browser-based configuration wizard, see the "Configure a Secondary Node Using the Expert Configuration Wizard" topic specific to your appliance:
 - [Configure a Secondary Node Using the Expert Configuration Wizard](#)
 - [Configure a Secondary Node Using the Expert Configuration Wizard](#)

Existing HA Deployment of the Primary Node with Standard Interface Configurations

To deploy an existing HA cluster, where the primary node uses the required interface cable configurations, complete the following steps.

Step 1 Upgrade the primary node to Cisco DNA Center 2.2.1.

For information about upgrading your current release of Cisco DNA Center, see [Cisco DNA Center Upgrade Guide](#).

Step 2 Confirm that you are using the required interface cable configurations on the primary node.

See [Interface Cable Connections](#).

Step 3 Update the virtual IP address (if the virtual IP address is not yet added).

See [Reconfigure the Appliance Using the Configuration Wizard](#).

Step 4 Configure the second and third appliances in the cluster:

- If you are configuring appliances using the Maglev Configuration wizard, see [Configure a Secondary Node Using the Maglev Wizard, on page 93](#).
- If you are configuring appliances using the browser-based configuration wizard, see the "Configure a Secondary Appliance Using the Expert Configuration Wizard" topic specific to your appliance:
 - [Configure a Secondary Node Using the Expert Configuration Wizard](#)
 - [Configure a Secondary Node Using the Expert Configuration Wizard](#)

Step 5 Enter the following command to check the GlusterFS size:

```
sudo du -h /data/maglev/srv/maglev-system/glusterfs/mnt/bricks/default_brick/ | tail -1 | awk '{print $1}'
```


If the GlusterFS file system size is larger than 150 GB, complete the steps described in [Existing HA Deployment of Primary Node with Nonstandard Interface Configurations](#).


Existing HA Deployment of Primary Node with Nonstandard Interface Configurations

To deploy an existing HA cluster where the primary node uses nonstandard interface configurations, complete the following steps.

-
- Step 1** Upgrade the primary node to Cisco DNA Center 2.2.1.
For information about upgrading your current release of Cisco DNA Center, see [Cisco DNA Center Upgrade Guide](#).
- Step 2** Create a backup of the remote repository.
See the "Backup and Restore" chapter in the [Cisco Digital Network Architecture Center Administrator Guide](#).
- Step 3** Reimage the primary node with the required interface cable configuration.
See [Interface Cable Connections](#) and [Install the Cisco DNA Center ISO Image](#). Make sure that the VIP has been configured correctly on the primary node.
- Step 4** On the primary node, install the same set of packages that you selected during the backup.
- Step 5** Using the backup file that you created in Step 2, restore the remote repository's data.
- Step 6** Configure the second and third appliances in the cluster.
- If you are configuring appliances using the Maglev Configuration wizard, see [Configure a Secondary Node Using the Maglev Wizard, on page 93](#).
 - If you are configuring appliances using the browser-based configuration wizard, see the "Configure a Secondary Appliance Using the Expert Configuration Wizard" topic specific to your appliance:
 - [Configure a Secondary Node Using the Expert Configuration Wizard](#)
 - [Configure a Secondary Node Using the Expert Configuration Wizard](#)
-

Activate High Availability

Cisco DNA Center's implementation of HA is described in the [Cisco Digital Network Architecture Center High Availability Guide](#). We recommend that you first review this information and then determine whether you want to deploy HA in your production environment. If you choose to do so, complete the following steps:

1. Click the **Menu** icon () in the Cisco DNA Center GUI and choose **System > Settings > System Configuration > High Availability**.
2. Click **Activate High Availability**.

After you click **Activate High Availability**, Cisco DNA Center enters into maintenance mode. In this mode, Cisco DNA Center is unavailable until the redistribution of services is completed. You should take this into account when scheduling an HA deployment.



Note Cisco DNA Center goes into maintenance mode every time you restore the database, perform a system upgrade (not a package upgrade), and activate HA (as described above).

Additional HA Deployment Considerations

For an existing HA deployment, the following additional configurations must be made.



Note For information about known HA bugs and workarounds, see “Open Bugs—HA” in the [Release Notes for Cisco Digital Network Architecture Center](#).

Telemetry

If you enabled telemetry for a device (without enabling the VIP), complete the following steps:

-
- Step 1** Use the **sudo maglev-config update** command to update the cluster VIP.
- Step 2** Disable telemetry on the device:
- From the Cisco DNA Center home page, choose **Network Telemetry** from the **Tools** area.
The **Network Telemetry** window appears.
 - Click the **Site View** tab.
 - Check the check box of the device on which you want to disable telemetry, and then choose **Actions** > **Disable Telemetry**.
- Step 3** Reenable telemetry using the profile associated with the device previously.
-

Wireless Controller

You must update the wireless controllers in your network with the new VIP of Cisco DNA Center.