



Node and Interface for L3Out

- [Modifying Interfaces for L3Out, on page 1](#)
- [Customizing SVI for L3Out, on page 3](#)
- [About Cisco Floating L3Outs, on page 12](#)

Modifying Interfaces for L3Out

Modifying Interfaces for L3Out Using the GUI

This procedure modifies an L3Out interface.



Note The steps for filling out the fields are not necessarily listed in the same order that you see them in the GUI.

Before you begin

- The Cisco ACI fabric is installed, the Cisco APICs are online, and the Cisco APIC cluster is formed and healthy.
- A Cisco APIC fabric administrator account is available that enables creating the necessary fabric infrastructure configurations.
- The target leaf switches are registered in the Cisco ACI fabric and available.
- Port channels are configured when port channels are used for L3Out interfaces.

-
- Step 1** On the menu bar, choose **Tenants > All Tenants**.
- Step 2** In the Work pane, double click the tenant's name.
- Step 3** In the Navigation pane, expand **tenant_name > Networking > L3Outs > L3Out > Logical Node Profiles > node_profile > Logical Interface Profiles** and choose the profile that you want to modify.
- Step 4** Choose an interface type tab: **Routed Sub-Interfaces**, **Routed Interfaces**, **SVI**, or **Floating SVI**.
- Step 5** Double click an existing interface to modify it, or click the **Create (+)** button to add a new interface to the logical interface profile.

- Step 6** For interface types other than floating SVI, perform the following substeps:
- To add a new interface in the **Path Type** field, choose the appropriate path type.
For the routed sub-interface and routed interface interface types, choose **Port** or **Direct Port Channel**. For the SVI interface type, choose **Port**, **Direct Port Channel**, or **Virtual Port Channel**.
 - In the **Node** drop-down list, choose a node.
Note This is applicable only for the non-port channel path types. If you selected **Path Type** as **Port**, then perform this step. Otherwise, proceed to the next step.
 - In the **Path** drop-down list, choose the interface ID or the port channel name.
An example of an interface ID is eth 1/1. The port channel name is the interface policy group name for each direct or virtual port channel.
- Step 7** For the floating SVI interface type, in the **Anchor Node** drop-down list, choose a node.
- Step 8** (Optional) In the **Description** field, enter a description of the L3Out interface.
- Step 9** For the routed sub-interfaces, SVI, and floating SVI interface types, in the **Encap** drop-down list, choose **VLAN** and enter an integer value for this entry.
- Step 10** For the SVI and floating SVI interface types, perform the following substeps:
- For the **Encap Scope** buttons, choose the scope of the encapsulation used for the Layer 3 Outside profile.
 - **VRF**: Use the same transit VLAN in all Layer 3 Outsides in the same VRF instance for a given VLAN encapsulation. This is a global value.
 - **Local**: Use a unique transit VLAN per Layer 3 Outside.
 - For the **Auto State** buttons, choose whether to enable or disable this feature.
 - **disabled**: The SVI or floating SVI remains active even if no interfaces are operational in the corresponding VLANs.
 - **enabled**: When a VLAN interface has multiple ports in the VLAN, the SVI or floating SVI goes to the down state when all the ports in the VLAN go down.
 - For the **Mode** buttons, choose the VLAN tagging mode.
- Step 11** In the **IPv4 Primary / IPv6 Preferred Address** field, enter the primary IP addresses of the path attached to the Layer 3 outside profile.
- Step 12** In the **IPv4 Secondary / IPv6 Additional Addresses** table, click the + to enter the secondary IP addresses of the path attached to the Layer 3 outside profile.
- Step 13** (Optional) In the **Link-local Address** field, enter an IPv6 link-local address. This is the override of the system-generated IPv6 link-local address.
- Step 14** In the **MAC Address** field, enter the MAC address of the path attached to the Layer 3 outside profile.
- Step 15** In the **MTU (bytes)** field, set the maximum transmit unit of the external network. The range is 576 to 9216. To inherit the value, enter *inherit* in the field.
- Step 16** In the **Target DSCP** drop-down list, choose the target differentiated services code point (DSCP) of the path attached to the Layer 3 outside profile.
- Step 17** Click **Submit**.
-

Customizing SVI for L3Out

SVI External Encapsulation Scope

About SVI External Encapsulation Scope

In the context of a Layer 3 Out configuration, a switch virtual interfaces (SVI), is configured to provide connectivity between the ACI leaf switch and a router.

By default, when a single Layer 3 Out is configured with SVI interfaces, the VLAN encapsulation spans multiple nodes within the fabric. This happens because the ACI fabric configures the same bridge domain (VXLAN VNI) across all the nodes in the fabric where the Layer 3 Out SVI is deployed as long as all SVI interfaces use the same external encapsulation (SVI) as shown in the figure.

However, when different Layer 3 Outs are deployed, the ACI fabric uses different bridge domains even if they use the same external encapsulation (SVI) as shown in the figure:

Figure 1: Local Scope Encapsulation and One Layer 3 Out


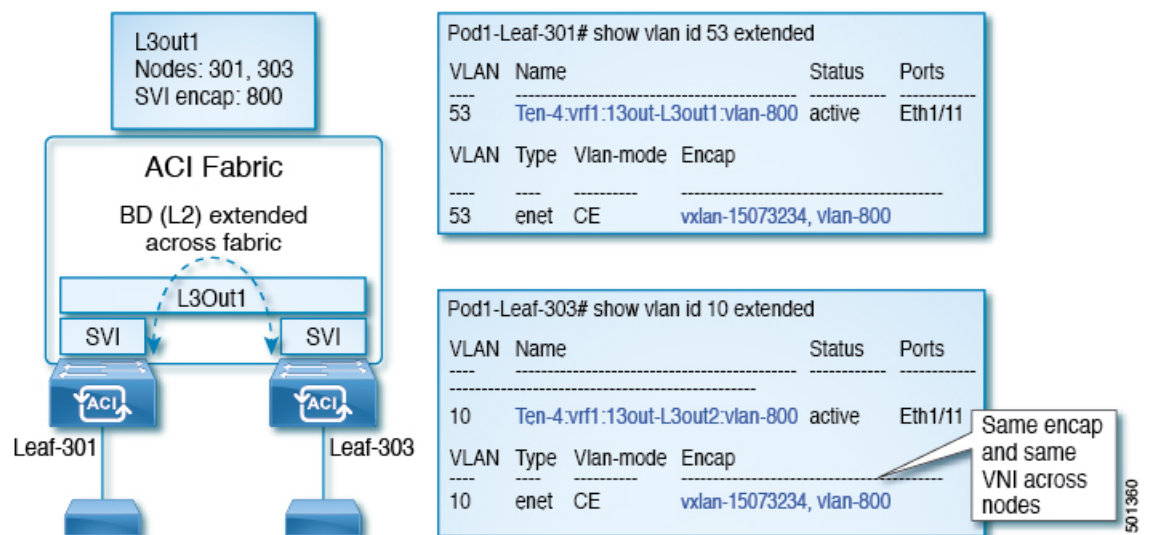


Figure 2: Local Scope Encapsulation and Two Layer 3 Outs

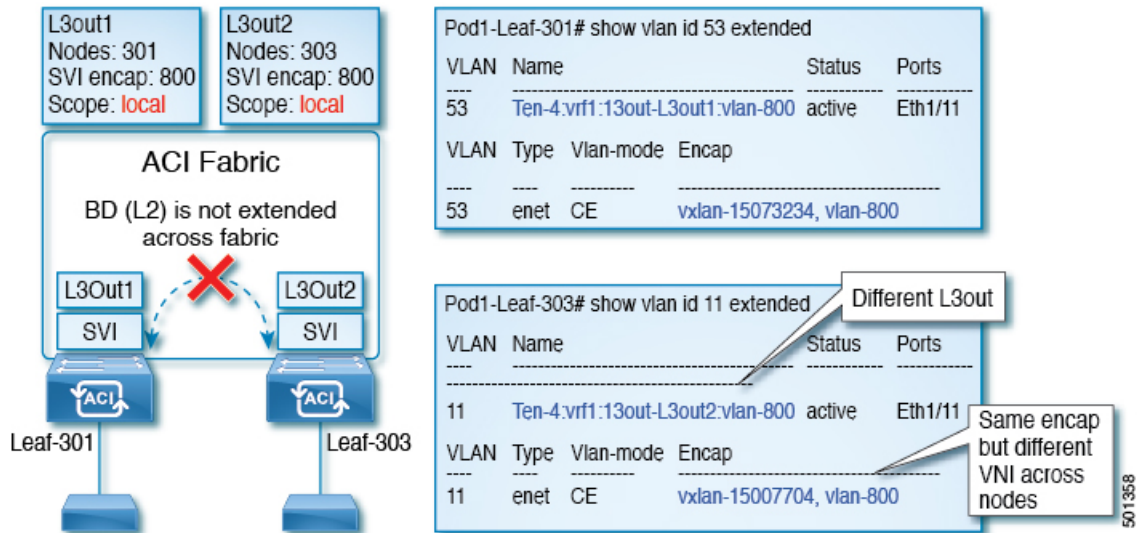


Starting with Cisco APIC release 2.3, it is now possible to choose the behavior when deploying two (or more) Layer 3 Outs using the same external encapsulation (SVI).

The encapsulation scope can now be configured as Local or VRF:

- **Local scope (default):** The example behavior is displayed in the figure titled *Local Scope Encapsulation and Two Layer 3 Outs*.
- **VRF scope:** The ACI fabric configures the same bridge domain (VXLAN VNI) across all the nodes and Layer 3 Out where the same external encapsulation (SVI) is deployed. See the example in the figure titled *VRF Scope Encapsulation and Two Layer 3 Outs*.

Figure 3: VRF Scope Encapsulation and Two Layer 3 Outs

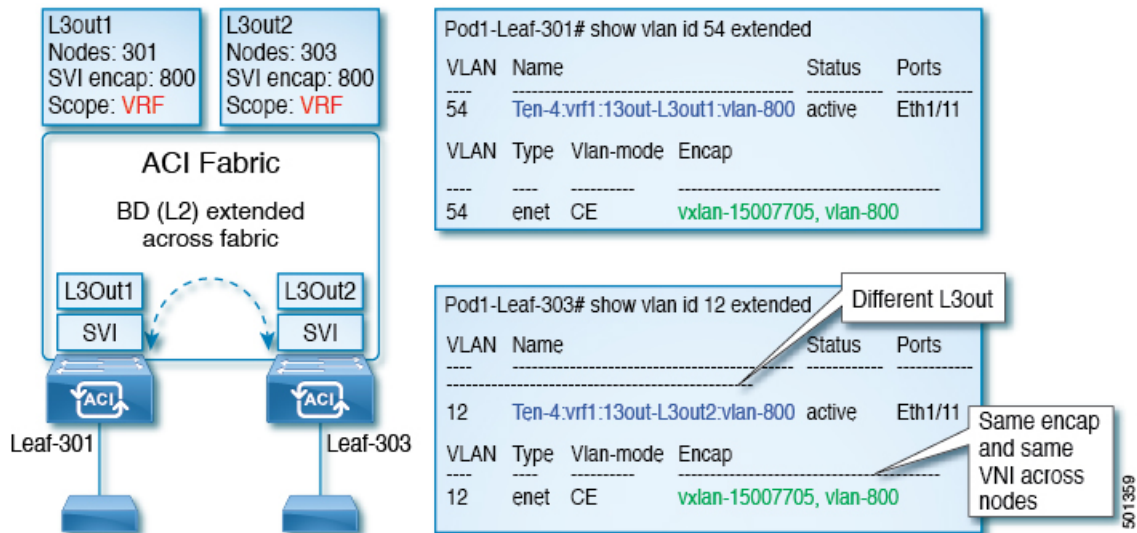

Encapsulation Scope Syntax

The options for configuring the scope of the encapsulation used for the Layer 3 Out profile are as follows:

- **Ctx**—The same external SVI in all Layer 3 Outs in the same VRF for a given VLAN encapsulation. This is a global value.
- **Local** —A unique external SVI per Layer 3 Out. This is the default value.

The mapping among the CLI, API, and GUI syntax is as follows:

Table 1: Encapsulation Scope Syntax

CLI	API	GUI
l3out	local	Local
vrf	ctx	VRF



Note The CLI commands to configure encapsulation scope are only supported when the VRF is configured through a named Layer 3 Out configuration.

Guidelines for SVI External Encapsulation Scope

To use SVI external encapsulation scope, follow these guidelines:

- If deploying the Layer 3 Outs on the same node, the OSPF areas in both the Layer 3 Outs must be different.
- If deploying the Layer 3 Outs on the same node, the BGP peer configured on both the Layer 3 Outs must be different.

Configuring SVI External Encapsulation Scope Using the GUI

Before you begin

- The tenant and VRF configured.
- An L3Out is configured and a logical node profile under the L3Out is configured.

-
- Step 1** On the menu bar, click **> Tenants > Tenant_name**.
- Step 2** In the **Navigation** pane, click **Networking > L3Outs > L3Out_name > Logical Node Profiles > LogicalNodeProfile_name > Logical Interface Profiles**.
- Step 3** In the **Navigation** pane, right-click **Logical Interface Profiles**, and click **Create Interface Profile**.
- Step 4** In the **Create Interface Profile** dialog box, perform the following actions:
- In the **Step 1 Identity** screen, in the **Name** field, enter a name for the interface profile.
 - In the remaining fields, choose the desired options, and click **Next**.
 - In the **Step 2 Protocol Profiles** screen, choose the desired protocol profile details, and click **Next**.
 - In the **Step 3 Interfaces** screen, click the **SVI** tab, and click the + icon to open the **Select SVI** dialog box.

- e) In the **Specify Interface** area, choose the desired values for the various fields.
- f) In the **Encap Scope** field, choose the desired encapsulation scope value. Click **OK**.

The default value is **Local**.

The SVI External encapsulation scope is configured in the specified interface.


Support for Multiple Encapsulation for L3Outs With SVI

Prior to release 5.2(3), L3Outs configured with SVIs are limited to one VLAN encapsulation for each external bridge domain.

Beginning with release 5.2(3), support is now available for using different external VLAN encapsulations, where all of the different external encapsulation instances are treated as part of a single Layer 2 domain. An L3Out configured with multiple SVIs, each using a different encapsulation, can be grouped into a single external bridge domain. This single external bridge domain will use a single VXLAN network identifier (VNID) and will be a single broadcast domain. The SVIs configured with different encapsulations can use IP addresses in the same subnet.

Grouping Multiple SVIs With Different Access Encapsulation

The following figure shows a configuration where multiple SVIs are grouped together with different access encapsulation.

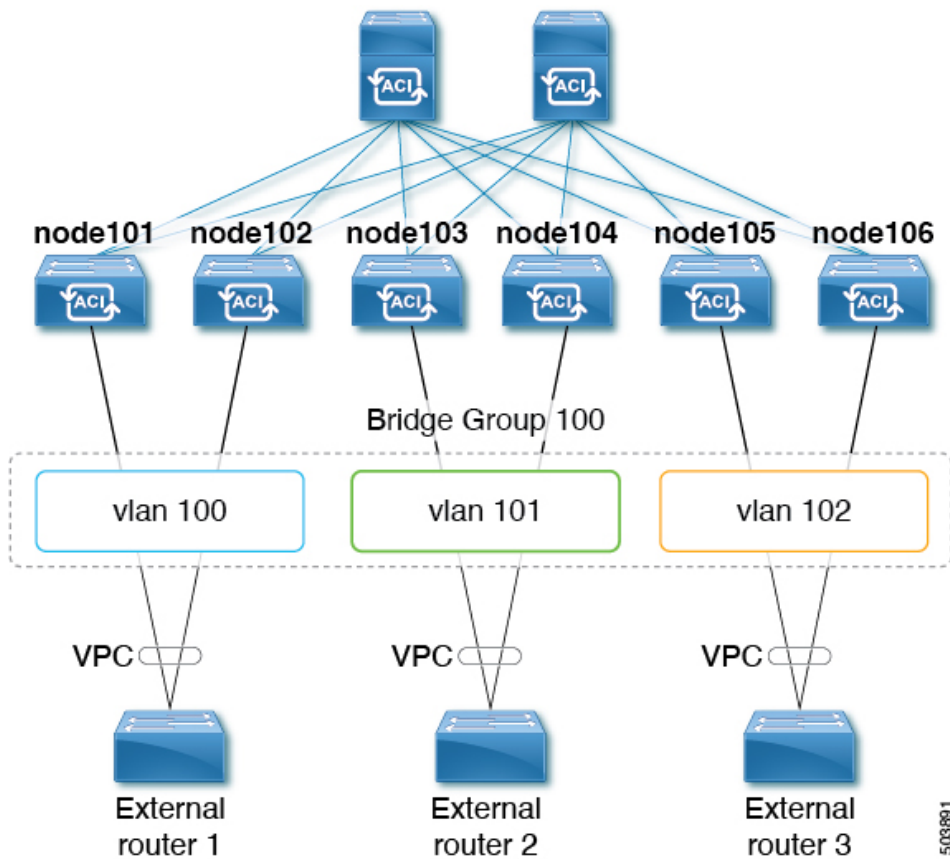

For this use case:

- The following leaf switches are VPC pairs:
 - node101 and node102
 - node103 and node104
 - node105 and node106

To configure the use case shown above, where you are grouping multiple SVIs into a Layer 2 bridge group:

1. Create three regular SVIs for each VPC pair:
 - Create the regular SVI **svi-100** on leaf switches node101 and node102
 - Create the regular SVI **svi-101** on leaf switches node103 and node104
 - Create the regular SVI **svi-102** on leaf switches node105 and node106
2. Configure the leaf switches with access encapsulations:
 - Configure leaf switches node101 and node102 with access encapsulation **vlan100**
 - Configure leaf switches node103 and node104 with access encapsulation **vlan101**
 - Configure leaf switches node105 and node106 with access encapsulation **vlan102**

3. Group the regular SVIs **svi-100**, **svi-101**, and **svi-102** together to behave as part of a single Layer 2 broadcast domain:
 - a. Create a bridge domain profile.
The bridge domain profile is represented by the new MO *l3extBdProfile*
 - b. Provide a unique name string for the bridge domain profile.
 - c. Associate each of the regular SVIs that need to be grouped together to the same bridge domain profile.
Two new MOs are available for this association: *l3extBdProfileCont* and *l3extRsBdProfile*.

Guidelines and Limitations

- Layer 2 loops are blocked by the external device/hypervisor. Loops may occur if this feature is used with external switches that rely on spanning tree protocol to prevent loops.
- The SVI will be deleted and re-added after configuring the external bridge domain profile on them.
- The external bridge domain profile is L3Out-scoped. On a node, you cannot have two different access encapsulation mappings to the same external bridge domain profile.
- Bridge domain grouping is not supported with encapsulation scope **ctx** (the **VRF** option in the APIC GUI).
- Grouped SVIs with different line encapsulation can not share any common nodes.
- If you downgrade from release 5.2(3) to a previous release where multiple encapsulation for L3Outs with SVI is not supported, the following actions will be performed on the L3Out that was configured with multiple encapsulations and/or the external bridge domain profile:
 - The new allocator used for the multiple encapsulation support (*l3extBdProfileEncapAllocator*) will be deleted
 - All external bridge domain profiles (new *l3extBdProfile* MOs) will be deleted
 - All new *l3extBdProfileCont* MOs will be deleted
 - All new *l3extRsBdProfile* MOs will be deleted

Configuring Multiple Encapsulation for L3Outs With SVI Using the GUI

-
- Step 1** Create the regular SVIs and configure the leaf switches with access encapsulations.
See [Configuring SVI External Encapsulation Scope Using the GUI, on page 5](#) for those procedures.
- Step 2** Create an external bridge group profile that will be used for SVI grouping.
- a) Navigate to **Tenants > tenant-name > Policies > Protocol > External Bridge Group Profiles**.
A page showing the already-configured external bridge group profiles is displayed.
 - b) Right-click on **External Bridge Group Profiles** and choose **Create External Bridge Group Profile**.
The **Create External Bridge Group Profile** page is displayed.
 - c) Enter a name for the external bridge group profile, then click **Submit**.

The page showing the already-configured external bridge group profiles is updated with the new external bridge group profile.

- Step 3** Associate a regular SVI with the bridge domain profile.
- Navigate to **Tenants > tenant-name > Networking > L3Outs > L3Out-name > Logical Node Profile > log-node-profile-name > Logical Interface Profile > log-int-profile-name**.
The **General** page for this logical interface profile is displayed.
 - Click on the **SVI** tab.
A page showing the already-configured switch virtual interfaces is displayed.
 - Double-click on the switch virtual interface that you want to associate with the external bridge domain profile.
General information for this switch virtual interface is displayed.
 - In the **External Bridge Group Profile** field, select the external bridge domain profile that you want to associate with this switch virtual interface.
 - Click **Submit**.

Configuring Multiple Encapsulation for L3Outs With SVI Using the CLI

- Step 1** Create the regular SVIs and configure the leaf switches with access encapsulations.
See [Configuring SVI Interface Encapsulation Scope Using NX-OS Style CLI](#) for those procedures.
- Step 2** Log into your APIC through the CLI, then go into configuration mode and tenant configuration mode.

```
apic1#
apic1# configuration
apic1(config)# tenant <tenant-name>
apic1(config-tenant)#
```

- Step 3** Enter the following commands to create an external bridge profile that will be used for SVI grouping.

```
apic1(config-tenant)# external-bridge-profile <bridge-profile-name>
apic1(config-tenant-external-bridge-profile)# ?
```

- Step 4** Enter the following commands to associate a regular SVI with the bridge domain profile.

```
apic1(config)# leaf <leaf-ID>
apic1(config-leaf)# interface vlan <vlan-num>
apic1(config-leaf-if)# vrf member tenant <tenant-name> vrf <VRF-name>
apic1(config-leaf-if)# ip address <IP-address>
apic1(config-leaf-if)# external-bridge-profile <bridge-profile-name>
```

Configuring Multiple Encapsulation for L3Outs With SVI Using the REST API

- Step 1** Create the regular SVIs and configure the leaf switches with access encapsulations.
See [Configuring SVI Interface Encapsulation Scope Using the REST API](#) for those procedures.

Step 2 Enter a post such as the following example to create an external bridge profile that will be used for SVI grouping.

```
<fvTenant name="t1" dn="uni/tn-t1" >
  <l3extBdProfile name="bd100" status=""/>
</fvTenant>
```

Step 3 Enter a post such as the following example to associate a regular SVI with the bridge domain profile.

```
<fvTenant name="t1">
  <l3extOut name="l1">
    <l3extLNodeP name="n1">
      <l3extLIIfP name="i1">
        <l3extRsPathL3OutAtt encap="vlan-108"
          tDn="topology/pod-1/paths-108/pathep-[eth1/10]"
          ifInstT="ext-svi">
          <l3extBdProfileCont>
            <l3extRsBdProfile tDn="uni/tn-t1/bdprofile-bd100" status=""/
          </l3extBdProfileCont>
        </l3extRsPathL3OutAtt>
      </l3extLIIfP>
    </l3extLNodeP>
  </l3extOut>
</fvTenant>
```

Step 4 Enter a post such as the following example to specify the separate encapsulation for floating nodes.

```
<fvTenant name="t1">
  <l3extOut name="l1">
    <l3extLNodeP name="n1">
      <l3extLIIfP name="i1">
        <l3extVirtualLIIfP addr="10.1.0.1/24"
          encap="vlan-100"
          nodeDn="topology/pod-1/node-101"
          ifInstT="ext-svi">
          <l3extRsDynPathAtt floatingAddr="10.1.0.100/24"
            encap="vlan-104"
            tDn="uni/phys-phyDom"/>
        </l3extVirtualLIIfP>
      </l3extLIIfP>
    </l3extOut>
  </fvTenant>
```

SVI Auto State

About SVI Auto State



Note This feature is available in the APIC Release 2.2(3x) release and going forward with APIC Release 3.1(1). It is not supported in APIC Release 3.0(x).

The Switch Virtual Interface (SVI) represents a logical interface between the bridging function and the routing function of a VLAN in the device. SVI can have members that are physical ports, direct port channels, or

virtual port channels. The SVI logical interface is associated with VLANs, and the VLANs have port membership.

The SVI state does not depend on the members. The default auto state behavior for SVI in Cisco APIC is that it remains in the up state when the auto state value is disabled. This means that the SVI remains active even if no interfaces are operational in the corresponding VLAN/s.

If the SVI auto state value is changed to enabled, then it depends on the port members in the associated VLANs. When a VLAN interface has multiple ports in the VLAN, the SVI goes to the down state when all the ports in the VLAN go down.

Table 2: SVI Auto State

SVI Auto State	Description of SVI State
Disabled	SVI remains in the up state even if no interfaces are operational in the corresponding VLAN/s. Disabled is the default SVI auto state value.
Enabled	SVI depends on the port members in the associated VLANs. When a VLAN interface contains multiple ports, the SVI goes into the down state when all the ports in the VLAN go down.

Guidelines and Limitations for SVI Auto State Behavior

Read the following guidelines:

- When you enable or disable the auto state behavior for SVI, you configure the auto state behavior per SVI. There is no global command.

Configuring SVI Auto State Using the GUI

Before you begin

- The tenant and VRF configured.
- An L3Out is configured and a logical node profile and a logical interface profile under the L3Out is configured.

-
- Step 1** On the menu bar, click **> Tenants > Tenant_name**.
- Step 2** In the **Navigation** pane, click **Networking > L3Outs > L3Out_name > Logical Node Profiles > LogicalNodeProfile_name > Logical Interface Profiles**.
- Step 3** In the **Navigation** pane, expand **Logical Interface Profile**, and click the appropriate logical interface profile.
- Step 4** In the **Work** pane, click the **SVI** tab, then click the + sign to display the **SVI** dialog box.
- Step 5** To add an additional SVI, in the **SVI** dialog box, perform the following actions:
- In the **Path Type** field, choose the appropriate path type.
 - In the **Path** field, from the drop-down list, choose the appropriate physical interface.
 - In the **Encap** field, choose the appropriate values.
 - In the **Auto State** field, choose the SVI in the **Work** pane, to view/change the Auto State value.

The default value is **Disabled**.

Note To verify or change the Auto State value for an existing SVI, choose the appropriate SVI and verify or change the value.

About Cisco Floating L3Outs

Beginning with the Cisco Application Policy Infrastructure Controller (APIC) release 4.2(1), you no longer need to specify multiple Layer 3 outside network connection (L3Out) logical interface paths in a virtual environment.

The floating L3Out feature enables you to configure a L3Out without specifying logical interfaces. The feature saves you from having to configure multiple L3Out logical interfaces to maintain routing when virtual machines move from one host to another. Floating L3Out is supported for VMware vSphere Distributed Switch (VDS).

Beginning with the Cisco APIC release 5.0(1), physical domains are supported.

For more information, see the *Using Floating L3Out to Simplify Outside Network Connections* knowledge base article:

<https://www.cisco.com/c/en/us/td/docs/switches/datacenter/aci/apic/sw/kb/Cisco-ACI-Floating-L3Out.html>