



Working with Inventory in Your Nexus Dashboard ACI Fabrics, Release 4.2.1

Table of Contents

New and changed information	1
New and changed information	1
Navigate to Inventory for ACI fabrics	2
Controllers	3
Controller details	3
Switches	5
Switch details	5
Switch port visualization details	9
Guidelines and limitations for standalone NX-OS fabrics	16
Interface details	17
Overview	18
Multicast	24
Trends and statistics	25
Real-time telemetry and UI enhancements for ACI fabrics	27
View trends and statistics for an interface type	30
QoS	30
Anomalies	30
Microbursts	31
Microbursts	31
Filtering information	32
ACI route telemetry streaming	33
Enable ACI route telemetry streaming	33
vPC Pairs	34
Copyright	35

New and changed information

New and changed information

The following table provides an overview of the significant changes up to this current release. The table does not provide an exhaustive list of all changes or of the new features up to this release.

Release Version	Feature	Description
Nexus Dashboard 4.2.1	ACI route telemetry streaming	Beginning with Nexus Dashboard 4.2.1, Nexus Dashboard introduces ACI route telemetry streaming. This feature provides historical visibility into unicast routing tables within ACI fabrics through Nexus Dashboard. For more information, see ACI route telemetry streaming .

Navigate to Inventory for ACI fabrics



In order to view ACI inventory information (**Switches**, **Controllers**, and **vPC Pairs**), you must first enable telemetry within the ACI fabric settings. Refer to [Editing ACI Fabric Settings](#) for more information.

Inventory provides information on controllers and switches in your Nexus Dashboard ACI fabrics.

To navigate to **Inventory** for ACI fabrics:

1. Click **Manage > Fabrics > Local**.
2. Click on the appropriate ACI fabric.

The **Overview** page for that ACI fabric appears.

3. Click **Inventory**.
 - o Click [Controllers](#) to see high-level information on the controllers.
 - o Click [Switches](#) to see high-level information on the switches.
 - o Click [vPC Pairs](#) to see high-level information on the vPC pairs.



If a switch or hostname is modified, it takes around 2 hours for the updated switch or hostname to be reflected in **Inventory**.

Controllers

To navigate to **Controllers** for an ACI fabric:

1. [Navigate to Inventory for ACI fabrics.](#)
2. Click **Controllers**.

Controllers provides the following high-level information on all of the controllers in Nexus Dashboard. The gear icon allows you to customize the table by hiding some of the columns. By default, all columns are visible.

The table can also be filtered based on the columns available.

Field	Description
Node Name	The name of each controller
Anomaly Level	The anomaly levels experienced by each controller
Advisory Level	The advisory levels experienced by each controller
Type	The type for each controller (physical or virtual)
Operational Status	The operational status for each controller to Nexus Dashboard
Software Version	The version of the software on the controller
Model	The model type for each controller
Serial Number	The serial number for the specific switch

Controller details

You'll see **Overview**, **Anomalies** and **Advisories** that will provide more information on the controller, with **Overview** shown first by default.

Overview

Overview has the following additional information.

- **Anomaly Level**

Click Anomaly Level to get more specific information on the anomalies present for this controller. A slide-in appears, showing all the anomalies that occurred for this controller. See [Detecting Anomalies and Identifying Advisories in Your ND](#) to understand how to navigate across the anomalies.

- **Advisory Level**

Hover over the Advisory Level to see what category the advisories belong to. Click Advisory Level to get more specific information on the advisories present for this controller. A slide-in appears, showing all the advisories that occurred for this controller. See [Detecting Anomalies and Identifying Advisories in Your ND](#) to understand how to navigate across the advisories.

- **General**

General displays the following information:

Field	Description
Fabric	The fabric where each controller resides
Role	The role defines what the device is
Connectivity to Insights	This shows the connectivity of the controller.
Software Version	The version of the software on the controller
Last Software Update	The date when the software was last updated on this controller.
Uptime	The amount of time that this controller has been up. You will also see when the controller was last rebooted.
Model	The model type for each controller
Serial Number	The serial number for this controller.
Out-of-Band IPv4 Address	The IP address for the out-of-band management of this controller.
Out-of-Band IPv6 Address	The IP address for the out-of-band management of this controller.
In-Band IPv4 Address	The IP address for the in-band management of this controller.
In-Band IPv6 Address	The IP address for the in-band management of this controller.
Type	The type for each controller (physical or virtual)
Created At	The date when the controller was created.

Anomalies

The Anomaly level shows the total number of anomalies that have occurred and the number of anomalies that have occurred in the last week.

Hover over the Anomaly Level to view the category of the anomalies occurred. Click the Anomaly Level to get specific information on the anomalies present for the specific controller or switch.

See [Detecting Anomalies and Identifying Advisories in Your ND](#) to understand how to navigate across the anomalies.

Advisories

The **Advisories** displays several levels of advisory severity for controller hardware and software in your network. To see an overall advisories dashboard for this controller, click **Advisories**. An advisories dashboard appears for this controller.

See [Detecting Anomalies and Identifying Advisories in Your ND](#) to understand how to navigate across the advisories. See [Filtering information](#) for filter refinement using certain operators.

Switches

To navigate to **Switches** for an ACI fabric:

1. [Navigate to Inventory for ACI fabrics.](#)
2. Click **Switches**.

Switches provides the following high-level information on the switches. The gear icon allows you to customize the table by hiding some of the columns. By default, all columns are visible. The table can also be filtered based on the columns available.

To get additional information on any single switch, click that switch under the **Name** column.

Field	Description
Name	The name of each switch
Anomaly Level	The anomaly levels experienced by each switch
IP Address	The IP address for each switch
Model	The model type for each switch
Role	Displays the role of switch.
Serial Number	The serial number for the specific switch
Discovery Status	The discovery status of the switches
Advisory Level	The advisory levels experienced by each switch
vPC Role	The vPC role for each switch
vPC Peer	The vPC peer for each switch
Mode	The mode for each switch
Software Version	The software version in which the switch is available
Uptime	The amount of uptime for each switch

Switch details

You'll see the following that will provide more information on that switch.

- [Overview](#)
- [Connectivity](#)
- [Segmentation and security](#)
- [Anomalies](#)
- [Advisories](#)

Overview details

These cards appear below **Overview** on the **Switch Overview** page.

- **Anomaly level**

Hover over the **Anomaly level** to see what category the anomalies belong to. Click the **Anomaly level** to get more specific information on the anomalies present for this controller. A slide-in appears, showing all the anomalies that occurred for this controller. For more information, see [Detecting Anomalies and Identifying Advisories in Your ND](#) to understand how to navigate across the anomalies.

- **Advisory level**

Hover over the **Advisory level** to see what category the advisories belong to. Click the **Advisory level** to get more specific information on the advisories present for this switch. A slide-in appears, showing all the advisories that occurred for this switch. For more information, see [Detecting Anomalies and Identifying Advisories in Your ND](#) to understand how to navigate across the advisories tab.

- **Recent activity**

View recent activity for the switch.

- **Switch view**

Within the **Switch view**, you can see a visual representation of the switch ports, where the state could be **Up** (green) or **Down** (red). Click **All** to see the switch view for all modules installed. Nexus Dashboard displays the **Port Status Only** tab by default. The port diagram key helps you understand the switch view. Click **Anomalies Only** to display switches with anomalies. The port diagram key helps you understand switch port status information. For more information, see [Switch port visualization details](#).

If the switch has multiple modules installed, you can switch the views between the different modules.

View hardware resources

Click **View hardware resources** to view a slide-in that appears with information on the hardware resources for this switch in real time. Real-Time Visualization helps view up to date information about the resources. Hardware resources shows the variations in the hardware resources over the time range selected. The hardware resources displayed with the percentage utilized per component are **CPU, Fan Utilization, Memory, Power Supply, Storage, and Temperature**. Click any resource to view further details about it.

For hardware resources, all parameters are updated in real-time based on the cadence from the switch when it sends the data.

View capacity

Click **View capacity** to view a slide-in appears with capacity information for the switch. Capacity details shows the variations in operational, configuration, and interface resources over the time range selected.

Type of Resource	List of resources
<i>Operational Resources</i>	<p>ACI:</p> <ul style="list-style-type: none"> ▪ IPV4 (learned) ▪ IPV4 Host Routes ▪ IPV6 (learned) ▪ IPV6 Host Routes ▪ MAC (learned) ▪ Multicast Routes ▪ Policy TCAM ▪ LPM <p>Standalone NX-OS:</p> <ul style="list-style-type: none"> ▪ Egress Routed ACL ▪ IPV4 Host Routes ▪ IPV4 Prefix Routes ▪ IPV6 Host Routes ▪ IPV6 Prefix Routes ▪ Ingress Routed ACL ▪ L2 QoS TCAM ▪ L3 QoS TCAM ▪ MAC ▪ Multicast Routes
<i>Configuration Resources</i>	<p>ACI:</p> <ul style="list-style-type: none"> ▪ BD ▪ EPG ▪ VLAN ▪ VRF <p>Standalone NX-OS:</p> <ul style="list-style-type: none"> ▪ L2 VNI ▪ L3 VNI ▪ VLAN ▪ VRF
<i>Interface Resources</i>	<ul style="list-style-type: none"> ▪ Egress Port Bandwidth ▪ Ingress Port Bandwidth ▪ Port Usage

• General

General provides the following information.

Field	Description
Fabric name	The unique identifier of the fabric network to which each switch belongs
Role	The specific function assigned to the device within the fabric such as spine, leaf, border leaf, or any other defined role
Management IP address	The IPv4 or IPv6 address used for out-of-band management of the switch
Software version	The current version of the software on the switch
Uptime	The total time the switch has been operational since its last reboot
Serial number	The serial number for this switch
Model	The model type of the switch hardware
VPC peer(s)	The peer switches participating in a virtual port channel (VPC) domain, enabling link aggregation across multiple switches.
VPC domain ID	The identifier for the VPC domain to which the switch belongs
Telemetry collection	Indicates whether telemetry data collection is enabled or disabled on the device

• Interfaces

Interfaces provides the following information:

- The total number of interfaces in this switch
- The number of physical interfaces
- The overall status of the interfaces in the switch (the number of interfaces that are up, down, or physical not in use)

Click on the number above the **Total** text to get additional information on the interfaces in this switch.

You can filter the list of interfaces based on **Anomaly Level**, ***Admin Status**, **Operational Status**, or **Type**. Click on a specific interface to get additional information on that particular interface. See [Interface details](#) for more information.

• Connectivity

Connectivity provides the following information:

Field	Description
Endpoints	The number of endpoints associated with this switch
L3 Neighbors	The number of Layer 3 neighbors associated with this switch
Routes	The number of routes associated with this switch

Click on the number shown in either of these areas to get additional information on the endpoints or the Layer 3 neighbors.

- **Segmentation and security**

Segmentation and security provides the following information:

Field	Description
VRFs	The number of VRFs associated with this switch
Security Groups	The number of security groups associated with this switch
EPGs	The number of EPGs associated with this switch

Click on the number shown in either of these areas to get additional information on the endpoints or the Layer 3 neighbors.

- **Analytics Summary**

For standalone NX-OS fabrics, **Analytics Summary** displays the congestion level of the switch.

Switch port visualization details

You can access a color-coded visualization of all of your switch ports with detailed descriptions of the ports and their attributes. Real-time visualization of switch ports can help you to view up-to-date information on your hardware resources. Navigate to **Manage > Inventory >** and click on a **Switch** to view the switch port visualization details. For more information, see the [View switch port details](#) section.

You can click the **All**, **Port status only**, or **Anomalies only** tabs to customize your switch port visualization to display information on ports and anomalies, only the ports, or only anomalies.

- **All**—The fill color of the port is mapped to the port status, while the border color of the port is mapped to the anomaly level
- **Port status only**—Colors are mapped to the port status as described in the [Port status colors](#) section. This is also the default display option.
- **Anomalies only**—Color of the port matches the anomaly level.

Port status colors

When you click the **Port status only** tab, the physical interfaces of a switch are displayed in these colors.

- Gray—indicates the port is administratively down and operationally down.
- Green—indicates the port is administratively up and operationally up.
- Red—indicates the port is administratively up and operationally down.

When you hover over a port, you can see a tooltip that displays the port name, anomaly level and status, attributes, and CDP/LLDP neighbor information.

For breakout ports, the color displayed on the port is a summary of the breakout ports:

- If all child breakout ports are green, the parent port is displayed in green.
- If all child breakout ports are red, the parent port is displayed in red.
- If some child breakout ports are green and some are red, the parent port is displayed in orange.

If there is a combination of attributes, Nexus Dashboard uses a plus symbol, indicating that there are multiple attributes. When you hover over a port, you can see a tooltip that lists all the attributes of that port. With this release, Nexus Dashboard added attributes for L3Out and Layer 3 ports. Nexus Dashboard considers Layer 2 ports, as opposed to L3Out or Layer 3 port, the default port type and such ports do not show any attributes in the **Port Types** category.

The **Port diagram key** area describes these keys to help you understand the switch port visualization.

Field	Description
Port Status	Displays the port status color and the administrative state of the ports: <ul style="list-style-type: none">▪ Green—UP▪ Red—Down▪ Gray—Admin Down▪ Orange—Partially Down (Breakout Only)
Anomaly Level	Displays anomaly levels represented by these colors: <ul style="list-style-type: none">▪ Green—Healthy▪ Red—Critical▪ Orange—Major▪ Yellow—Minor▪ Blue-- Warning▪ Gray—Unavailable

Field	Description
Port Channels	Indicates the port channel type: <ul style="list-style-type: none"> ▪ P–Ethernet Port Channel ▪ V–Virtual Port Channel
Port Connections	Indicates the port connection types: <ul style="list-style-type: none"> ▪ A–APIC ▪ FX–Fabric extender (FEX) ▪ I–Connected to IPN/ISN ▪ S–Uplink to Spine ▪ B–Uplink to Border Gateway ▪ T1–Tier 1 Parent Switch ▪ T2–Tier 2 Leaf
Port Types	Indicates the port types: <ul style="list-style-type: none"> ▪ L3–Layer 3 ▪ M–MACsec ▪ U–Uplink
Port Details	Indicates breakout ports with a four square icon and multiple attributes with a + symbol.

Guidelines and limitations for switch port visualization

- Supported only for physical interfaces.
- No support for the management port.
- No support for ACI Fibre Channel (FC) ports.
- Port attributes do not contain Endpoint Group (EPG) information unlike L3Outs

View switch port details

Follow these steps to view switch port details.

1. Navigate to **Inventory** for ACI fabrics, **Manage > Inventory**.
2. Click on a switch.

The **Switch Overview** page for that switch displays.

3. Navigate to the **Switch view** area of the page.

The **Switch view > Port Status Only** tab displays by default. You can click on the **All** and

Anomalies Only tabs to view switch port details.

When you hover over a port, you can see a detailed description about this port.

Connectivity details

Click **Connectivity** to view connectivity information for this switch. The following appear below **Connectivity**, with **Interfaces** shown first by default.

Click any of these to view additional connectivity information for this switch:

- **Interfaces**

Click Interfaces to view the Interfaces for this switch. The following information is available in Interfaces:

- Anomaly level (Only interface down anomaly is in Realtime)
- Admin Status (Real time visualization)
- Operational status (Real time visualization)
- Type

The Interfaces are listed in a tabular form with the following data available:

- Anomaly level
- Operational speed
- Type
- CDP/LLDP
- Admin Status
- Operational Status

There are various other columns that are optional and can be added to the table by clicking on the gear icon using the toggle to show or hide.

See [Interface details](#) for more information.

- **L3 Neighbors**

Click L3 Neighbors to view L3 Neighbors for this switch. You can filter the results based on Neighbor, Local Switch, routing protocol, VRF, and Operational Status. BGP and OSPF protocols can be viewed in real time. The switch will report the interface logical neighbor event immediately upon modification or change or properties. OSPF support includes OSPF statistics, operational statistics, interface statistics, and neighbor statistics. Click the IP address in the Neighbor column to view details on this neighbor.

- **Endpoints**

Click Endpoints to view the Endpoints for this switch. You can filter the results based on Anomaly Level, MAC Address, IP Addresses, Hostname, Connected To, Interface, Time, Status, Tenant, VRF, BD, EPG/I3out, Search Deleted IPs, VM Name, and Hypervisor.

Click a MAC address in the **MAC** column to get the following additional information on that endpoint:

1. Overview

o General

- VM Name
- Hypervisor
- MAC Address
- IP Address
- Hostname
- Last Updated
- Status

o Network Configuration

- Tenant
- VRF
- EPG/L3 Out
- BD
- Encap

o Connected To

- Nodes
- Interface

2. Endpoint history - Determine how you want to show endpoint history. The time range for the history is only based on the time selector chosen at the fabric level.

3. Anomalies

You can also click the IP address or the hostname (if clickable) to view additional information about them.

▪ **Routes** (standalone NX-OS)

- o Click **Routes** to view the route details for this switch.
- o You can choose from the drop-down list to view the details for either IPv4 or IPv6 routes.
- o Click **Download** to download any route table from the last 7 days.
- o You can filter the table based on route, protocol or VRF.
- o The **Routes per VRF** graph shows the number of routes per VRF for the top 10 VRFs.
- o The **Change Summary** helps view the number of the added, modified, and deleted routes. Click **Change Summary** to list all the routes which have had modified or deleted change made in a tabular form.
- o The Routes table displays information such as route, node name, protocol, VRF, and Next Hop. The Routes table only displays 10,000 route table entries and 10,000 history events. The Routes table always shows the current route table irrespective of the time range selected.
- o Click on any route listed to view General and Route History view along with the timeline for the

change. The General page list of all the next hops available for that route. The Route History page shows detail of last 50 route events. The route history events shows deleted or modified events. Route add events are shown under modified routes category.

- o Each Next Hop IP address is subscripted with the node name and interface where it is configured.
- o Click **View Details** in the routing page banner to list any unsupported nodes, inactive nodes, switch connection, failure and if data is inconsistent for the selected time range.

• **vPC Domains**

Click **vPC Domains** to view the vPC Domain for this switch. You can filter the results based on Domain ID.

The table lists the domain ID, the primary switch, the secondary switch and the number of vPCs up and down. Click a domain in the **Domain ID** column to view vPC domain details on that domain. For standalone NX-OS fabrics, click an interface in the **Interface** column to view additional information on that interface.

• **Multicast**

The Multicast card lists the IGMP, IGMP snooping and the PIM details for the switch. The Instances table shows the following information:

Protocol Type	Fields for Instances Table
IGMP DETAILS	<ul style="list-style-type: none">▪ Interface▪ Admin State▪ Operational Status▪ Tenant▪ VRF▪ IP Address▪ Querier Address▪ Membership Count▪ Querier Version▪ Errors▪ View Stats

Protocol Type	Fields for Instances Table
IGMP SNOOPING DETAILS	<p>ACI:</p> <ul style="list-style-type: none"> ▪ Tenant ▪ VRF ▪ BD ▪ Admin State ▪ Querier Version ▪ Multicast Routing State ▪ Fabric Querier State ▪ Errors ▪ View Stats <p>Standalone NX-OS:</p> <ul style="list-style-type: none"> ▪ VLAN ▪ Admin State ▪ Querier Address ▪ Querier Version ▪ Multicast Routing State ▪ Switch Querier State ▪ Errors ▪ View Stats
PIM DOMAINS DETAILS	<p>ACI:</p> <ul style="list-style-type: none"> ▪ Tenant ▪ VRF ▪ Admin State ▪ Border Leaf Node ▪ Rendezvous Point Addresses <p>Standalone NX-OS:</p> <ul style="list-style-type: none"> ▪ VRF ▪ Rendezvous Point Addresses

• **Multicast Routes**

Click **Multicast Routes** to view the Multicast PIM Groups for this switch. You can filter the information by Source, Multicast Group, Tenant, VRF, Incoming Interface, Outgoing Interface, RPF Neighbor, RPF Source, and Flags.

Guidelines and limitations for standalone NX-OS fabrics

Guidelines and limitations for real-time visualization (RTEV)

- Controller events are not in real-time and RTEV is limited to switches only.
- For RTEV, 20 UI sessions are supported.
- For the real-time connection to be established, you must enable the NX-API feature in Cisco NX-OS fabrics that do not have a controller.

Guidelines and limitations for Layer 3 neighbors

- When a Layer 3 neighbor changes state, Nexus Dashboard updates the operational state in real-time. However, the timeseries database, which displays data from the last 2 hours, may still show deleted neighbors in the historical table when you choose the **Current time** view.
 - For BGP neighbors, Nexus Dashboard keeps a deleted neighbor visible on the current view until the 2-hour window expires.
 - For OSPF neighbors, Nexus Dashboard continues to display deleted neighbors until it purges them, which can take up to 7 days, keeping them visible in the current view until then.

Guidelines and limitations when viewing hardware resources

All parameters are updated in real-time based on the cadence from the switch when it sends the data.

Guidelines and limitations for routes table

- Nexus Dashboard 4.2.1 does not support ESG as a protocol filter option in the route table.
- Routes table is only supported on NX-OS release 10.4(3) and later.
- You must enable gRPC Network Management Interface (gNMI) transport feature in the switches. To enable gNMI transport you must configure the following:
 - Configure FabricPassword/LanPassword/LeafPassword
 - Enable Feature NX-API
- The routing collector has built in metering to only process the supported scale of route change events and it drops the rest of the route events. For example, on a physical standard deployment, 1 million route updates can be ingested in 3 minutes. Data drop is indicated in the UI using the route banner. When route events are dropped due to metering, it will take some time to re-snapshot and reconcile the route data.
- For a newly onboarded fabric or switch, it may take some time for the Routes table to be available.
- The download route table API is only allowed on switch level page. The API returns complete route table if the prefixes in history events processed are less than 50,0000 per switch.
- When the route database experiences a storm of updates, the metering logic might drop some of these updates resulting in incorrect counts of **New**, **Modified**, or **Deleted** prefixes or routes displayed within a 2 hour window. In this scenario a re-snapshot request to the switch is initiated, which will sync route database with the switch and accurately reflect the total number of routes for a given fabric.

Interface details

The following interface types are supported:

- **Physical Interface:** To view the interface details of the switch, such as admin state, operational state, IP address, CDP/LLDP neighbors, and L3 (logical) neighbors. This page also displays protocols, Trends and statistics, QoS, Anomalies, DOM properties, and Multicast.
- **Port Channel Interface:** The port channel is an aggregate of physical interfaces. They can be statistically channeled or dynamic using LACP protocols. The statistical data that collects the counters for packets, bytes, and various errors are similar to that of the physical interface. The operational data is obtained by looking at an additional set of objects that gives the admin status, oper status, and list of member interfaces for both PC and vPC.
- **vPC Interface:** A virtual port channel (vPC) allows links that are physically connected to two Cisco Nexus 9000 Series devices to appear as a single port channel by a third device. The third device can be a switch, server, or another networking device that supports port channels. A vPC can provide Layer 2 multipathing, which allows you to create redundancy and increase the bisectional bandwidth by enabling multiple parallel paths between nodes and allowing load balancing traffic.
- **SVI Interface:** Switch virtual interface (SVI) is a virtual routed interface that connects a VLAN on the device to the Layer 3 router engine on the same device. Specific information such as Member Interfaces over which the SVI is deployed, VLAN ID, and Encap VLAN are displayed for the SVI interface.
- **Management:** The management interface is a dedicated network port used to remotely access and configure the switch to manage the switch using protocols like Telnet, SSH, or SNMP. It is typically a dedicated physical port on the switch with its own IP address designated for management purposes.
- **Loopback Interface:** A loopback interface is a virtual interface with a single endpoint that is always up. Any packet transmitted over a loopback interface is immediately received by this interface. Loopback interfaces emulate a physical interface. You can use loopback interfaces for performance analysis, testing, and local communications.
- **Sub-interface:** Sub-interfaces divide the parent interface into two or more virtual interfaces on which you can assign unique Layer 3 parameters such as IP addresses and dynamic routing protocols. The IP address for each sub-interface should be in a different subnet from any other sub-interface on the parent interface. One use of sub-interfaces is to provide unique Layer 3 interfaces to each virtual local area network (VLAN) supported by the parent interface. In this scenario, the parent interface connects to a Layer 2 trunking port on another device. You configure a sub-interface and associate the sub-interface to a VLAN ID using 802.1Q trunking.
- **Tunnel:** Tunnels consist of three main components: passenger, carrier, and transport protocols. The passenger protocol needs to be encapsulated. IPv4 is an example of a passenger protocol. The carrier protocol is used to encapsulate the passenger protocol. Cisco NX-OS supports GRE as a carrier protocol. The transport protocol is used to carry the encapsulated protocol. IPv4 is an example of a transport protocol. An IP tunnel takes a passenger protocol, such as IPv4, and encapsulates that protocol within a carrier protocol, such as GRE. The device then transmits this carrier protocol over a transport protocol, such as IPv4.
- **NVE Interface:** A Network Virtualization Edge (NVE) interface is a logical interface used in Cisco Nexus 9000 switches for VXLAN (Virtual Extensible LAN) configuration. It serves as the control point for encapsulating and decapsulating VXLAN traffic. VXLAN is a tunneling protocol used to extend Layer 2 networks over Layer 3, enabling the creation of scalable and flexible virtualized

networks in data center environments.

Click an interface to view more details about it.

Overview

The Anomaly level is available at the top. The fields for overview change depending on the type of interface supported.

1. INTERFACE TYPE : PHYSICAL

Section	
General	<ul style="list-style-type: none"> ▪ Interface ▪ Type (ACI: Host Port, Fabric Port, L3 Port; standalone NX-OS: Access Port, Trunk Port, L3 Port) ▪ Operational Speed (ACI) ▪ IP Address ▪ Admin Status ▪ Operational Status ▪ CDP/LLDP neighbors ▪ Total Endpoints ▪ SFP Diagnostics (You can click on 'View SFP Diagnostics' to view further details) <div style="border-left: 1px solid #ccc; padding-left: 10px; margin-top: 10px;">  <p>If LLDP is disabled, the tag will show 'LLDP disabled', otherwise it will show the count. This is applicable for CDP neighbors as well.</p> </div>
EPGs with Active Endpoints (ACI; this is available for Host Ports)	<ul style="list-style-type: none"> ▪ Tenant name ▪ Endpoints in EPG ▪ EPG Name ▪ Mapped Domains ▪ VLAN
L3 Neighbors (ACI only; this is available for L3 Port with SVI)	<p>In this area, details are displayed such as IP, Operational Status, Routing Protocol, and Type.</p>
VLANs Allowed on Interface (standalone NX-OS; this is available for Access Single Port and Trunk Multiple Ports)	<ul style="list-style-type: none"> ▪ VLAN ID ▪ VNI

Section	
Sub interfaces (standalone NX-OS; this is available for Access Single Port and Trunk Multiple Ports)	<ul style="list-style-type: none"> ▪ Sub interface ▪ IP Address
Associated Routing Protocols (standalone NX-OS; for L3 Port)	<ul style="list-style-type: none"> ▪ Protocol ▪ Type

2. INTERFACE TYPE : PORT CHANNEL

Section	
General	<ul style="list-style-type: none"> ▪ Interface ▪ Description ▪ Type (ACI: Host Port, L3 Port; standalone NX-OS: Access Port, Trunk Port, L3 Port, vPC Peer link for vPC Domain) ▪ Aggregation Type ▪ Bandwidth ▪ IP Address ▪ Admin Status ▪ Operational Status ▪ CDP/LLDP neighbors (Real-time visualization for ACI) ▪ Total Endpoints ▪ SFP Transceiver (ACI: You can click on 'View SFP Diagnostics' to view further details) ▪ SFP Diagnostics (standalone NX-OS: You can click on 'View SFP Diagnostics' to view further details) <div style="display: flex; align-items: center; margin-top: 10px;">  <p>If LLDP is disabled, the tag will show 'LLDP disabled', otherwise it will show the count. This is applicable for CDP neighbors as well.</p> </div>
LACP Details	<ul style="list-style-type: none"> ▪ Interface ▪ Admin Status ▪ Operational Status ▪ LACP Packets received ▪ LACP Packets transmitted ▪ Errors

Section	
EPGs with Active Endpoints (ACI; this is available for Host Ports)	<ul style="list-style-type: none"> ▪ Tenant name ▪ Endpoints in EPG ▪ EPG Name ▪ Mapped Domains ▪ VLAN
Associated L3 Out (ACI; for L3 Port)	<ul style="list-style-type: none"> ▪ L3 Out Name ▪ Switch ▪ Port ▪ Routing protocol ▪ External EPGs
VLANs Allowed on Interface (standalone NX-OS; this is available for Access Single Port and Trunk Multiple Ports)	<ul style="list-style-type: none"> ▪ VLAN ID ▪ VNI
SFP Diagnostics (DOM)	<ul style="list-style-type: none"> ▪ Lane ▪ Voltage ▪ Temperature ▪ Current ▪ Transmit Power Value ▪ Receive Power Value



An interface must be active for you to be able to view the neighbor details.



Configured 'IP Unnumbered' will show as “unassigned” in IP address field.

3. INTERFACE TYPE : vPC



vMCT is not supported.

Section	
General	<ul style="list-style-type: none"> ▪ Interface ▪ Description ▪ Type (vPC for ACI) ▪ vPC Domain ▪ Aggregation Type (ACI) ▪ Bandwidth ▪ IP Address ▪ Admin Status ▪ Operational Status ▪ CDP/LLDP neighbors (Real time visualization for ACI) ▪ Total Endpoints ▪ SFP Transceiver (ACI: You can click on 'View SFP Diagnostics' to view further details) ▪ SFP Diagnostics (standalone NX-OS: You can click on 'View SFP Diagnostics' to view further details) <div style="display: flex; align-items: center; margin-top: 10px;">  <p>If LLDP is disabled, the tag will show 'LLDP disabled', otherwise it will show the count. This is applicable for CDP neighbors as well.</p> </div>
Members	<ul style="list-style-type: none"> ▪ Switch ▪ Port Channel ▪ Aggregation Type ▪ Interface ▪ Operational Status
EPGs with Active Endpoints (ACI: this is available for Host Ports)	<ul style="list-style-type: none"> ▪ Tenant name ▪ Endpoints in EPG ▪ EPG Name ▪ Mapped Domains ▪ VLAN
VLANs Allowed on Interface (standalone NX-OS: this is available for Access Single Port and Trunk Multiple Ports)	<ul style="list-style-type: none"> ▪ VLAN ID ▪ VNI

Section	
SFP Diagnostics (DOM)	<ul style="list-style-type: none"> ▪ Lane ▪ Voltage ▪ Temperature ▪ Current ▪ Transmit Power Value ▪ Receive Power Value

• **INTERFACE TYPE : SUB-INTERFACE** (standalone NX-OS)

Section	
General	<ul style="list-style-type: none"> ▪ Interface ▪ Description ▪ Type (L3 Port) ▪ Parent Interface ▪ VRF ▪ Encap ▪ IP Address ▪ Admin Status ▪ Operational Status ▪ CDP/LLDP neighbors ▪ Total Endpoints ▪ SFP Transceiver (You can click on 'View SFP Diagnostics' to view further details) <div style="display: flex; align-items: center; margin-top: 10px;">  <p>If LLDP is disabled, the tag will show 'LLDP disabled', otherwise it will show the count. This is applicable for CDP neighbors as well.</p> </div>
Associated Routing Protocols (For L3 Port)	<ul style="list-style-type: none"> ▪ Protocol ▪ Type

• **INTERFACE TYPE : NVE** (standalone NX-OS)

Section	
General	<ul style="list-style-type: none"> ▪ Interface ▪ Description ▪ Type (L2/L3 Port) ▪ Encapsulation ▪ Mode ▪ Admin Status ▪ Operational Status ▪ Peers
VNIs	<ul style="list-style-type: none"> ▪ VNID ▪ Multicast Group ▪ Type ▪ VLAN/VRF

1. INTERFACE TYPE : SVI

Section	
General	<ul style="list-style-type: none"> ▪ Interface ▪ Description ▪ Type ▪ Encap ▪ Admin Status ▪ Operational Status ▪ SFP Transceiver (You can click on 'View SFP Diagnostics' to view further details)
Associated L3 Out (ACI; for L3 Port)	<ul style="list-style-type: none"> ▪ L3 Out Name ▪ Switch ▪ Port ▪ Routing protocol ▪ External EPGs
L3 Logical Neighbors (ACI; for L3 ports with SVI)	<ul style="list-style-type: none"> ▪ IP ▪ Operational State ▪ Routing Protocol ▪ Switch ▪ Interface ▪ Type

Section	
Associated Routing Protocols (standalone NX-OS; this is available only if the routing protocol is configured) (Real Time Visualization)	<ul style="list-style-type: none"> ▪ Protocol ▪ Type

Multicast

Click Multicast to view details for multicast routes on this interface.

Field	
General	<ul style="list-style-type: none"> ▪ IP Address ▪ IGMP Version ▪ IGMP Querier ▪ IGMP Last Reporter ▪ Admin State ▪ Oper State ▪ VRF ▪ Tenant ▪ Designated Router Address ▪ Designated Router Priority ▪ Neighbor Address
Multicast Groups	<ul style="list-style-type: none"> ▪ Tenant (ACI) ▪ Source ▪ Multicast Group ▪ VRF ▪ Last Reporter ▪ Receiver Interfaces (ACI)

For any interface, you can choose to view either the **IGMP** details or the **PIM** details.

IGMP DETAILS :

- General Information
 - Fast-leave
 - Allow V3 ASM
 - Report Link-local Groups
- Statistics

- V2 Leave Received
- V2 Leave Sent
- V2 Query Received
- V2 Query Sent
- V2 Report Received
- V2 Report Sent
- V3 Query Received
- V3 Query Sent
- V3 Report Received
- V3 Report Sent

PIM DETAILS :

- Neighbor Details
 - Neighbor
 - BFD Config
 - Bi-Dir Config
- Statistics
 - Authentication failed
 - Bad Version Packet
 - Checksum Errors
 - Invalid Packet Received
 - Invalid Packet Sent
 - Join No RP
 - Join Wrong RP
 - Packet from Self
 - Packet Length Error
 - Packet on Passive Interface

Trends and statistics

Monitor the trends and statistics information on a specific interface on a switch using the **Trends and statistics** tab. For ACI and NX-OS fabrics, you can view admin and operational status, traffic flowing over the interface, bandwidth, and errors. For standalone NX-OS fabric, view information on the traffic flowing over the interface, the interface usage, and various types of statistics for congestions, Microbursts, and errors. You can also view the statistics and trends for the physical interface LACP on the Trends and statistics page.



- Logical interfaces such as Loopback, Tunnels, and NVE interfaces are not supported on the Trends and Statistics page, but you can view the Admin and Operation stat trends for these interfaces.


- Due to switch limitations on the NX-OS fabric, only ACI fabric sub-interfaces are supported on the Trends and Statistics page.

All the trend and statistics data, except Microburst, are rendered in real time. Real Time Visualization helps you to view up-to-date information.

Nexus Dashboard allows you to view and monitor trends and statistics for a specific interface type, see [View trends and statistics for an interface type](#) for details. NX-OS switches support the new subscription service and will send notifications to all interested clients for every sample (every 10 seconds). In the event of any issues with the dial-in connection, it will automatically fall back to the regular update cadence, which is at 1-minute intervals.



The dial-in connection will always use the primary Layer 3 IP (IPv4/IPv6) address of the interface.

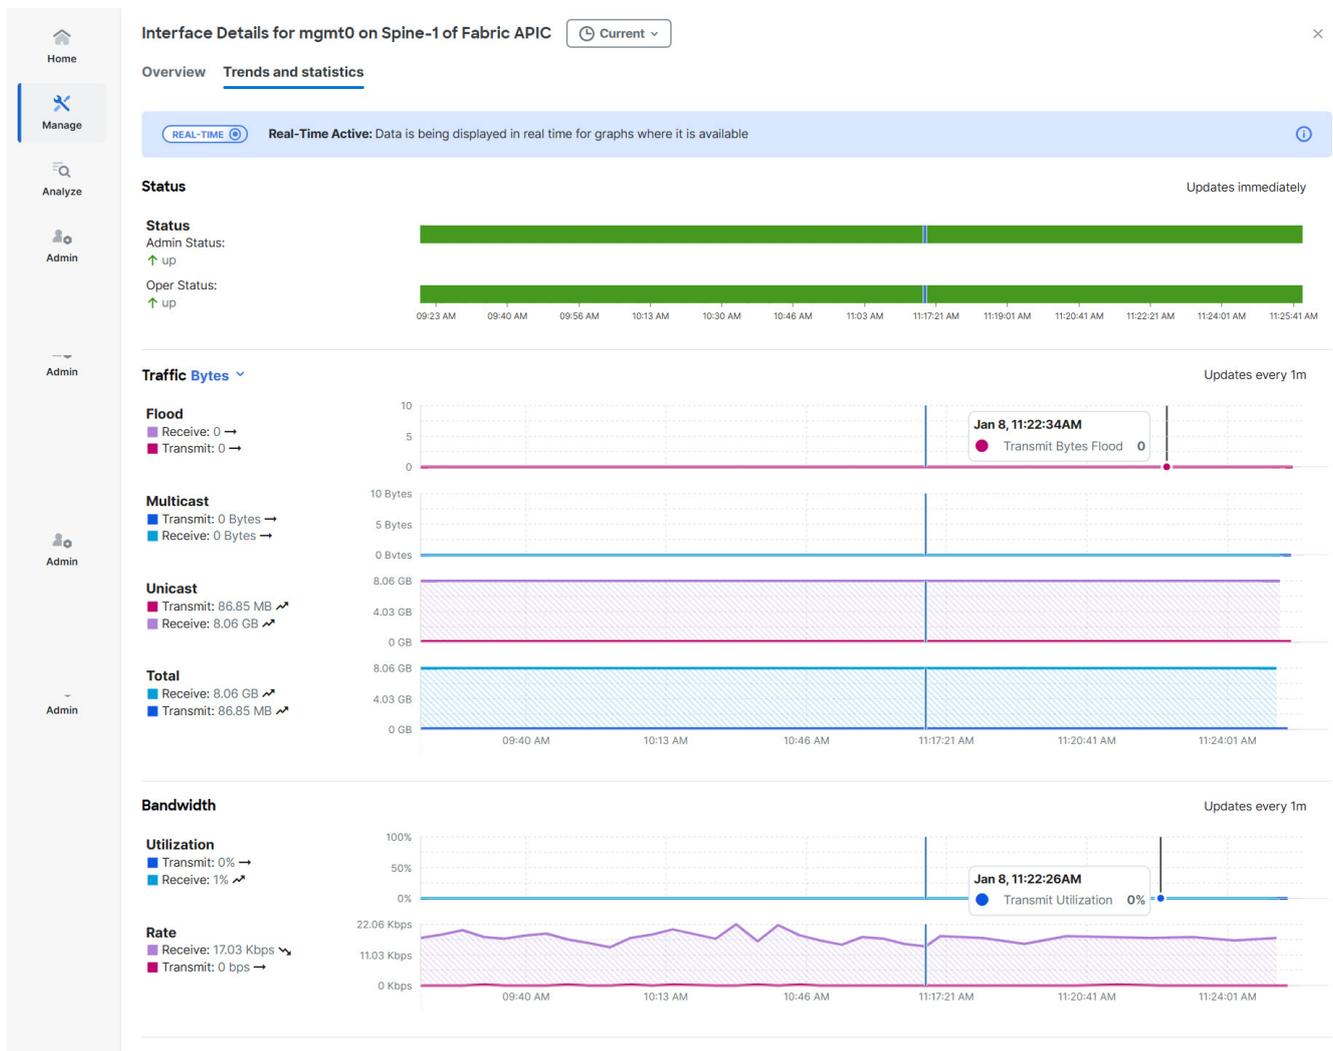

ACI switches do not support gNMI-based subscriptions, so Nexus Dashboard will provide notifications based on a cadence, with statistics updates occurring at 1-minute intervals.

- Admin Status (Real-time visualization)
- Operational Status (Real-time visualization)
- Errors (Real-time visualization for standalone NX-OS)
- Traffic (by bytes or by packets) (Real-time visualization)

- Flood
- Multicast
- Unicast
- Total
- Bandwidth (Real-time visualization for standalone NX-OS)
 - Utilization
 - Rate
- Congestion (standalone NX-OS)
 - Congestion score
 - PFC
 - ECN
 - Drops
 - RED/WRED/AFD
 - Errors
- Microbursts (ACI)

The congestion statistics show the ECN and PFC counters for the traffic received and transmitted. This is used to display where the congestion occurs. Click on any of the counter graphs displayed to view the per queue counters. This displays the list of the counters in the queue along with the number of packets in the respective queue.

Real-time telemetry and UI enhancements for ACI fabrics

Nexus Dashboard supports dynamic, high-frequency real-time telemetry streaming for both Cisco ACI fabrics, enabling comprehensive visibility and analytics for network operations and capacity planning.

The user interface delivers immediate access to telemetry data through dynamic, time-series visualizations that update frequently (for example, every 10 seconds), featuring real-time markers, interactive historical trend navigation, and flexible filtering and drill-down capabilities. These features facilitate efficient monitoring and analysis of operational and capacity metrics.

These telemetry capabilities enhance visibility, troubleshooting, and capacity planning by providing real-time anomaly detection, root-cause analysis, and historical context tracking within the UI.

Nexus Dashboard integrates telemetry data with Cisco best practices to proactively identify and resolve issues, improving operational efficiency. The telemetry data retention periods and platform support are clearly defined, ensuring users understand the scope and duration of available data.

Enabling high-frequency telemetry in Nexus Dashboard for ACI

Nexus Dashboard uses on-demand subscriptions at the distinguished name (DN) or class level, allowing targeted telemetry data collection from specific switches or objects. This approach ensures that only relevant data is streamed, minimizing unnecessary processing.

Subscriptions can be dynamically created and removed, supporting operational flexibility. Telemetry data flows efficiently from the backend to the UI through the **ond_stats** Kafka topic and WebSocket connections, which supports scalability and timely delivery.

To maintain system stability, the number of active WebSocket connections is limited to 20 per service instance. Cisco recommends regularly reviewing and managing subscriptions to avoid reaching system thresholds, especially in environments with multiple users or frequent changes.

UI Enhancements for real-time telemetry

Nexus Dashboard UI delivers immediate access to high-frequency telemetry data. This capability helps you troubleshoot faster and plan capacity more effectively. The following are the improved visualization and interactivity features:

- **Dynamic time-series graphs with real-time markers:** Key dashboards such as **Interface Statistics**, **Capacity Dashboard**, and **QoS Monitoring** now display telemetry data as dynamic time-series graphs that update every 10 seconds. A clear real-time marker highlights the most current data, helping you distinguish it from historical trends. For example, the **Interface Statistics** view shows counters like TX/RX packets and error rates as continuously updating line graphs. A vertical dotted line marks the real-time data point, enabling quick identification of the latest operational status.
- **Historical trend navigation:** You can select predefined time ranges—such as the last 15 minutes, last 2 hours, or last 6 hours—to analyze metric trends and fluctuations over time. Hovering over any point in the graph reveals the exact timestamp and corresponding counter values, supporting detailed root cause analysis. For example, the **Capacity Dashboard** presents fabric and leaf switch capacity metrics, including EPG and VRF counts, as time-based plots. You can visualize resource utilization changes, with percentage utilization shown alongside absolute counts for quick status checks.
- **Enhanced usability and flexibility:** You can filter or drill down into specific object classes or instances, such as a particular port, VLAN, or queue, to focus your analysis. For example, in the **QoS Monitoring** tab, explore per-class graphs for admitted and dropped packets, broken down by TX and RX. Drill down to queue-level statistics for detailed troubleshooting.



When you select a time range where no data exists, the graph area will indicate **No data available**.



For environments with high metric volumes, automatic throttling or data sampling may be applied to maintain UI responsiveness.

□ Supported real-time telemetry metrics and details

Metric category	Monitoring parameters
Interface statistics	<ul style="list-style-type: none"> ▪ Physical ▪ Port-channel ▪ vPC ▪ SVI ▪ Management ▪ Sub-interface (both physical and port-channel)
SFP and DOM statistics	SFP and DOM optical monitoring data
LACP statistics	LACP protocol information
Environmental data	<ul style="list-style-type: none"> ▪ CPU ▪ Memory ▪ Fan ▪ Temperature ▪ Storage ▪ Power
Capacity view	<ul style="list-style-type: none"> ▪ VRF ▪ Bridge domains (BD) ▪ EPG ▪ VLAN ▪ Port usage ▪ IPv4 and IPv6 routes ▪ Multicast routes, and others

Managed objects for telemetry streaming

Three managed object (MO) models facilitate creating and deleting telemetry subscriptions:

- **notifStatsRealtime**: Provides node and switch-level context for real-time telemetry
- **notifOperClassRealtime**: Enables class-based subscriptions, grouping and streaming operational data by object class
- **notifOperInstRealtime**: Supports DN-based subscriptions for granular, instance-specific data collection

Prerequisites

- APIC software version 6.2.1 or later
- ACI switch software version 16.2.1 or later
- Supported hardware includes ACI controllers and switches compatible with the above software versions

View trends and statistics for an interface type

Follow these steps to view the trends and statistics for an interface type:

1. Click **Switches** > **Any switch** > **Connectivity** > **Interfaces** > **Type**
2. Choose an interface type.

Alternatively, you can use the **Filter by** feature to view a specific type of interface. For example, use the attribute, "Type == Management" in the **Filter-by** field to display all management interfaces.

3. Choose an interface listed in the interface table to display the interface details page for this interface.
4. Click the **Trends and statistics** tab to view real time active data in a graph format.

Use the date picker to change the time scope to view and analyze historical data and trends for this interface.

QoS

Quality of Service (QoS) in networking is a process that controls traffic to adjust the overall network traffic based on the requirements of specific applications.

Overview Trends and Statistics **QoS** Anomalies

QoS Queues

Level	Packets Transmitted		Packets Received	
	Admitted	Dropped	Admitted	Dropped
control-plane	0	0	0	0
level1	0	0	0	0
level2	0	0	0	0
level3	0	0	0	0
level4	0	0	0	0
level5	0	0	0	0
level6	0	0	0	0
policy-plane	0	0	0	0
span	0	0	0	0

10 Rows Page 1 of 1 << 1-9 of 9 >>

Anomalies

Click to view anomaly information on this specific interface in this switch. See [Anomalies](#) for more information.

The Anomaly level shows the total number of anomalies that have occurred and the number of anomalies that have occurred in the last week.

Hover over the Anomaly Level to view the category of the anomalies occurred. Click the Anomaly Level to get specific information on the anomalies present for the specific controller or switch.

The **View all anomalies** takes you to the Anomalies tab. See [Anomalies](#) to understand how to navigate across the anomalies.

Microbursts

Microbursts

Click **Switches > Any switch > Connectivity > Interfaces > Any interface > Trends and Statistics** to view Microbursts in Inventory.

A burst of traffic impacts the output buffer of a physical interface port given the channel is already subscribed with line-rate flows. These bursts are often hard to detect with just given queuing parameters, such as buffer cells used and buffer cells unused as there is a high variance of usage of these buffers.

The Cisco Nexus 9000 series switches provide a capability of detecting this by issuing an interrupt that is triggered when a queue occupancy rises above x bytes and falls below y bytes. You can configure up to 8 output queues per physical interface port.

To configure Microburst in Nexus Dashboard, navigate to **Admin > System Settings > Microburst**.

See the **Microburst** section in [Getting Started](#) to view more details.

You can view the microbursts details such as Queue, Start Time, Number of Bursts, Max Duration, Avg. Duration, Max Peak, and Avg Peak in the Microbursts section. A chart view and a tabular view is available.

Microburst Anomaly

Anomalies are raised in Nexus Dashboard based on the number of microbursts at the interface level. Microburst anomaly jobs run every 5 minutes in a container environment, which checks for microburst records in microburst database. If the number of microbursts per interface is greater than microburst count threshold at any given point of time, then a minor anomaly is raised per interface in a node.

Nexus Dashboard raises these anomalies:

1. The flows that are displayed in the summary table are gathered from Flow Telemetry data for a corresponding egress interface. Nexus Dashboard matches the egress interface and egress queue to gather the corresponding microburst.
2. Based on the percentage of threshold, microburst is either low, high, or medium. The percentage of threshold is inverse to sensitivity. When the number of microbursts are greater than 100 on a particular interface, an anomaly is raised.
3. If flow telemetry is enabled and microburst is also enabled, then Nexus Dashboard displays the estimated impact of flows for a particular microburst anomaly.
4. If the flow telemetry is disabled and microburst anomaly is enabled, then Nexus Dashboard displays no Estimated Impact for that anomaly.
5. Flows that are contributing or impacted by microburst.

Filtering information

In some cases, you might be able to filter results to find information more easily.

For example, you might have a situation where there a large number of endpoints under a single leaf switch, but you are only interested in endpoints that have a certain VLAN value.

You could filter the information to show only those specific endpoints in this situation.

Use the following operators for the filter refinement:

Operator	Description
==	With the initial filter type, this operator, and a subsequent value, returns an exact match.
!=	With the initial filter type, this operator, and a subsequent value, returns all that do not have the same value.
contains	With the initial filter type, this operator, and a subsequent value, returns all that contain the value.
!contains	With the initial filter type, this operator, and a subsequent value, returns all that do not contain the value.
<	With the initial filter type, this operator, and a subsequent value, returns a match less than the value.
< =	With the initial filter type, this operator, and a subsequent value, returns a match less than or equal to the value.
>	With the initial filter type, this operator, and a subsequent value, returns a match greater than the value.
> =	With the initial filter type, this operator, and a subsequent value, returns a match greater than or equal to the value.

ACI route telemetry streaming

ACI route telemetry streaming delivers near real-time and historical visibility into unicast routing tables within ACI fabrics through Nexus Dashboard.

The following are the benefits of ACI route telemetry streaming.

- You can track routing table changes in near real time at both fabric and switch levels, which improves operational visibility and troubleshooting.
- You can filter data by prefix, protocol, VRF, and route type for granular analysis.
- Nexus Dashboard provides mechanisms to handle telemetry data loss scenarios with snapshot re-synchronization, ensuring data accuracy.
- ACI telemetry capabilities now align more closely with NX-OS telemetry, enhancing consistency across Cisco fabrics

Software compatibility

- Supported APIC switch version: 6.2(1g)
- Supported ACI switch version: 16.2(1g)

Enable ACI route telemetry streaming

Route telemetry streaming is available for ACI fabrics that are onboarded to Nexus Dashboard with the appropriate license level. There is no separate configuration required to enable this feature. Once the ACI fabric is onboarded, the system automatically streams route events and snapshots through Kafka.

You can query route deltas, view latest route tables, and export the routing table from the switch view. The feature automatically collects snapshots every 72 hours and during node reloads to maintain data integrity.

Filtering and search capabilities help you focus on specific routing prefixes, protocols, or VRFs.

vPC Pairs

To navigate to **vPC Pairs** for an ACI fabric:

1. [Navigate to Inventory for ACI fabrics.](#)
2. Click **vPC Pairs**.

vPC Pairs provides the following high-level information on the vPC pairs. The gear icon allows you to customize the table by hiding some of the columns. By default, all columns are visible. The table can also be filtered based on the columns available.

Field	Description
Peer One Name	The name of the first peer in a vPC pair
Peer One ID	The ID of the first peer in a vPC pair
Peer One Role	The role of the first peer in a vPC pair
Peer Two Name	The name of the second peer in a vPC pair
Peer Two ID	The ID of the second peer in a vPC pair
Peer Two Role	The role of the second peer in a vPC pair
Intended Peer Name	The intended peer name for the vPC pair
vPC Domain ID	The vPC domain ID for the vPC pair

Copyright

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

The documentation set for this product strives to use bias-free language. For the purposes of this documentation set, bias-free is defined as language that does not imply discrimination based on age, disability, gender, racial identity, ethnic identity, sexual orientation, socioeconomic status, and intersectionality. Exceptions may be present in the documentation due to language that is hardcoded in the user interfaces of the product software, language used based on RFP documentation, or language that is used by a referenced third-party product.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/go/trademarks>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

© 2017–2026 Cisco Systems, Inc. All rights reserved.

Americas Headquarters

Cisco Systems, Inc.

170 West Tasman Drive

San Jose, CA 95134-1706

USA

<https://www.cisco.com>

Tel: 408 526-4000

800 553-NETS (6387)

Fax: 408 527-0883