



Preparing ACI Fabrics, Release 4.3.1

Table of Contents

New and changed information	1
Pod Profile and Policy Group	2
Configuring Fabric Access Policies for All APIC Fabrics	3
Configuring Fabric Access Global Policies	3
Configuring Fabric Access Interface Policies	4
Configuring fabrics that contain remote leaf switches	7
Remote leaf	7
Autonomous remote leaf group management	8
Remote Leaf Switch Guidelines and Limitations	8
Configuring Routable Subnets for Remote Leaf Switches	8
Enabling Direct Communication for Remote Leaf Switches	9
Cisco Mini ACI Fabrics	11
Adding and Deleting Fabrics	12
Cisco Nexus Dashboard and APIC Interoperability Support	12
Adding Cisco ACI Fabrics	13
Removing Fabrics	14
Copyright	16

New and changed information

The following table provides an overview of the significant changes up to this current release. The table does not provide an exhaustive list of all changes or of the new features up to this release.

Release Version	Feature	Description
Nexus Dashboard 4.3.1		There were no major changes from the previous release.

Pod Profile and Policy Group

In each fabric's APIC, you must have one Pod profile with a Pod policy group. If your fabric does not have a Pod policy group you must create one. Typically, these settings will already exist as you will have configured them when you first deployed the fabric.

1. Log in to the fabric's APIC GUI.
2. Check that the Pod profile contains a Pod policy group.

Navigate to **Fabric > Fabric Policies > Pods > Profiles > Pod Profile default**.

3. If necessary, create a Pod policy group.
 - a. Navigate to **Fabric > Fabric Policies > Pods > Policy Groups**.
 - b. Right-click **Policy Groups** and select **Create Pod Policy Group**.
 - c. Enter the appropriate information and click **Submit**.
4. Assign the new Pod policy group to the default Pod profile.
 - a. Navigate to **Fabric > Fabric Policies > Pods > Profiles > Pod Profile default**
 - b. Select the default profile.
 - c. Choose the new pod policy group and click **Update**.

Configuring Fabric Access Policies for All APIC Fabrics

Before your APIC fabrics can be added to and managed by the Nexus Dashboard, there is a number of fabric-specific access policies that you must configure on each fabric.

Configuring Fabric Access Global Policies

This section describes the global fabric access policy configurations that must be created for each APIC fabric before it can be added to and managed by the Nexus Dashboard.

1. Log in directly to the fabric's APIC GUI.
2. From the main navigation menu, select **Fabric > Access Policies**.

You must configure a number of fabric policies before the fabric can be added to the Nexus Dashboard. From the APIC's perspective, this is something you do just like you would if you were connecting a bare-metal host, where you would configure domains, AEPs, policy groups, and interface selectors; you must configure the same options for connecting the spine switch interfaces to the inter-fabric network for all the fabrics that will be part of the same Multi-Fabric domain.

3. Specify the VLAN pool.

The first thing you configure is the VLAN pool. We use Layer 3 sub-interfaces tagging traffic with VLAN-4 to connect the spine switches to the inter-fabric network.

- a. In the left navigation tree, browse to **Pools > VLAN**.
- b. Right-click the **VLAN** category and choose **Create VLAN Pool**.

In the **Create VLAN Pool** window, specify the following:

- For the **Name** field, specify the name for the VLAN pool, for example **mfabric**.
- For **Allocation Mode**, specify **Static Allocation**.
- And for the **Encap Blocks**, specify just the single VLAN 4. You can specify a single VLAN by entering the same number in both **Range** fields.

4. Configure Attachable Access Entity Profiles (AEP).
 - a. In the left navigation tree, browse to **Global Policies > Attachable Access Entity Profiles**.
 - b. Right-click the **Attachable Access Entity Profiles** category and choose **Create Attachable Access Entity Profiles**.

In the **Create Attachable Access Entity Profiles** window, specify the name for the AEP, for example **mfabric-aep**.

- c. Click **Next** and **Submit**

No additional changes, such as interfaces, are required.

5. Configure domain.

The domain you configure is what you will select from the Nexus Dashboard when adding this fabric.

- a. In the left navigation tree, browse to **Physical and External Domains > External Routed Domains**.
- b. Right-click the **External Routed Domains** category and choose **Create Layer 3 Domain**.

In the **Create Layer 3 Domain** window, specify the following:

- For the **Name** field, specify the name the domain, for example **mfabric-l3**.
 - For **Associated Attachable Entity Profile**, select the AEP you created in Step 4.
 - For the **VLAN Pool**, select the VLAN pool you created in Step 3.
- c. Click **Submit**.

No additional changes, such as security domains, are required.

What to do next:

After you have configured the global access policies, you must still add interfaces policies as described in [Configuring Fabric Access Interface Policies](#).

Configuring Fabric Access Interface Policies

Before you begin:

You must have configured the global fabric access policies, such as VLAN Pool, AEP, and domain, in the fabric's APIC, as described in [Configuring Fabric Access Global Policies](#).



Interface configuration for Cisco Application Centric Infrastructure (ACI) (**Fabric > Access Policies > Interface Configuration**) introduced in ACI 6.0.1 and 5.2.7 is not supported by Nexus Dashboard Orchestrator (NDO).

This section describes the fabric access interface configurations that must be done for the Nexus Dashboard on each APIC fabric.

1. Log in directly to the fabric's APIC GUI.
2. From the main navigation menu, select **Fabric > Access Policies**.

In addition to the VLAN, AEP, and domain you have configured in previous section, you must also create the interface policies for the fabric's spine switch interfaces that connect to the Inter-Fabric Network.

3. Configure a spine policy group.
 - a. In the left navigation tree, browse to **Interface Policies > Policy Groups > Spine Policy Groups**.

This is similar to how you would add a bare-metal server, except instead of a Leaf Policy Group, you are creating a Spine Policy Group.

- b. Right-click the **Spine Policy Groups** category and choose **Create Spine Access Port Policy Group**.

In the **Create Spine Access Port Policy Group** window, specify the following:

- For the **Name** field, specify the name for the policy group, for example **Spine1-PolGrp**.
- For the **Link Level Policy** field, specify the link policy used between your spine switch and the ISN.
- For **CDP Policy**, choose whether you want to enable CDP.
- For the **Attached Entity Profile**, select the AEP you have configured in previous section, for example **mfabric-aep**.

c. Click **Submit**.

No additional changes, such as security domains, are required.

4. Configure a spine profile.

- In the left navigation tree, browse to **Interface Policies > Profiles > Spine Profiles**.
- Right-click the **Spine Profiles** category and choose **Create Spine Interface Profile**.

In the **Create Spine Interface Profile** window, specify the following:

- For the **Name** field, specify the name for the profile, for example **Spine1-ISN**.
- For **Interface Selectors**, click the **+** sign to add the port on the spine switch that connects to the ISN. Then in the **Create Spine Access Port Selector** window, provide the following:
 - For the **Name** field, specify the name for the port selector, for example **Spine1-ISN**.
 - For the **Interface IDs**, specify the switch port that connects to the ISN, for example **5/32**.
 - For the **Interface Policy Group**, choose the policy group you created in the previous step, for example **Spine1-PolGrp**.

Then click **OK** to save the port selector.

c. Click **Submit** to save the spine interface profile.

5. Configure a spine switch selector policy.

- In the left navigation tree, browse to **Switch Policies > Profiles > Spine Profiles**.
- Right-click the **Spine Profiles** category and choose **Create Spine Profile**.

In the **Create Spine Profile** window, specify the following:

- For the **Name** field, specify the name for the profile, for example **Spine1**.
- For **Spine Selectors**, click the **+** to add the spine and provide the following:
 - For the **Name** field, specify the name for the selector, for example **Spine1**.
 - For the **Blocks** field, specify the spine node, for example **201**.

c. Click **Update** to save the selector.

d. Click **Next** to proceed to the next screen.

e. Select the interface profile you have created in the previous step

For example **Spine1-ISN**.

f. Click **Finish** to save the spine profile.

Configuring fabrics that contain remote leaf switches

Nexus Dashboard architecture supports ACI fabrics with Remote Leaf switches. The following sections describe guidelines, limitations, and configuration steps required to allow Nexus Dashboard to manage these fabrics.

Remote leaf

Remote leaf switches are leaf nodes that connect to the ACI Main Datacenter (DC) through a generic Inter-Pod Network (IPN). The remote leaf feature enables the extension of connectivity and the implementation of consistent policies to remote locations where deploying a complete ACI Pod (including leaf and spine nodes) may not be feasible or desirable. A remote location might consist of a small data center that does not require an extensive number of leaf switches for connectivity. These remote leaf switches establish connections back to spine nodes in the main ACI data center. These remote leaf switches are fully integrated into an existing pod within the fabric, operating like any standard leaf switch in that pod.

In Nexus Dashboard release 4.1.1 and later the system validates proper vPC configuration on remote leaf switches by ensuring that both nodes belong to the same remote leaf TEP pool when you configure vPC interfaces in a fabric resource template. A validation error occurs if the selected remote leaf switches belong to different TEP pools.

Cisco Nexus Dashboard facilitates centralized policy definition (intent) and management, providing the following functionalities:

- Monitoring the health-state of the different ACI fabrics.
- Provisioning of day-0 configuration to establish inter-fabric EVPN control plane.
- Defining and provisioning policies across fabrics (scope of changes).
- Inter-fabric troubleshooting.
- Disaster Recovery
- Multi-cloud connectivity

On remote leaf switches with ACI Release 6.1(1) and later, Nexus Dashboard can distinguish between local and remote leaf types, enabling the management of functions unique to remote leaf switches. Recent ACI releases have introduced new functionalities that specifically cater to remote leaf switches.

This enhancement allows for the utilization of a single uplink for both the fabric control and data plane connectivity on sub-interface VLAN 4, while also permitting the configuration of additional sub-interfaces for tenant L3Out (VRF-Lite) and SR-MPLS infrastructure L3Outs.

It is important to note that the tenant and SR-MPLS L3Outs cannot utilize sub-interface VLAN 4, as this is reserved for the remote leaf fabric interface. For more details on tenant L3Out from a remote leaf, please refer to the [Cisco ACI Remote Leaf Architecture White Paper](#).

Autonomous remote leaf group management

Beginning with ACI Release 6.1(3), the remote leaf resiliency feature enables you to configure remote leaf switches in an Autonomous Remote Leaf Group (ARL Group). The Nexus Dashboard inventory view for remote leaf switches displays the remote leaf TEP pool and ARL Group information if an ARL Group is configured.



The inventory display of remote leaf TEP pool and remote leaf group information is not supported on Nexus Dashboard deployments with telemetry enabled.

Remote Leaf Switch Guidelines and Limitations

If you want to add an APIC fabric with a remote leaf switch to be managed by the Nexus Dashboard, the following guidelines and restrictions apply:

- You must upgrade your Cisco APIC to Release 4.2(4) or later.
- You can now use the same fabric port, used earlier for VXLAN connectivity with ACI fabric to provide connectivity toward the external network domain using local L3Out(s). For more information on tenant policy templates and L3Out configuration, see the "Creating L3Out Template" section in [External Connectivity \(L3Out\) for ACI Fabrics](#).
- Only -EX and -FX or later switches are supported as Remote Leaf switches for use with Multi-Fabric
- Remote leaf is not supported with back-to-back connected fabrics without IPN switches.
- Remote leaf switches in one fabric cannot use another fabric's L3Out.
- When a bridge domain is deployed to a remote leaf switch it must be local only to the fabric where the remote leaf belongs. Stretching a bridge domain deployed on a remote leaf switch to another fabric is not supported.

You must also perform the following tasks before the fabric can be added to and managed by the Nexus Dashboard:

- You must add the routable IP addresses of Cisco APIC nodes in the DHCP-Relay configuration applied on the interfaces of the Layer 3 routers connecting to the Remote Leaf switches.
- You must enable Remote Leaf direct communication and configure routable subnets directly in the fabric's APIC, as described in the following sections.

The routable IP address of each APIC node is listed in the **Routable IP** field of the **System > Controllers > <controller-name>** screen of the APIC GUI.

Configuring Routable Subnets for Remote Leaf Switches

Before you begin

- Upgrade Cisco APIC and all the nodes in the fabric to Release 4.1(2) or later.
- Verify that the routes for the Routable Subnet that you wish to configure will be reachable in the Inter-Pod Network (IPN), and that the subnet is reachable from the remote leaf switches.

Before you can add a fabric that contains one or more Remote Leaf switches to the Nexus

Dashboard, you must configure routable subnets for the pod with which the Remote Leaf nodes are associated.

1. Log in directly to the fabric's APIC GUI.
2. From the menu bar, select **Fabric > Inventory**.
3. In the Navigation pane, click **Pod Fabric Setup Policy**.
4. On the **Fabric Setup Policy** panel, double-click the pod where you want to configure routable subnets.
5. Access the information in the subnets or TEP table, depending on the release of your APIC software:
 - o For releases prior to 4.2(3), click the + on the **Routable Subnets** table.
 - o For 4.2(3) only, click the + on the **External Subnets** table.
 - o For 4.2(4) and later, click the + on the **External TEP** table.
6. Enter the IP address and Reserve Address, if necessary, and set the state to **active** or **inactive**.
 - o The IP address is the subnet prefix that you wish to configure as the routeable IP space.
 - o The Reserve Address is a count of addresses within the subnet that must not be allocated dynamically to the spine switches and remote leaf switches. The count always begins with the first IP in the subnet and increments sequentially. If you wish to allocate the Unicast TEP (covered later in these procedures) from this pool, then it must be reserved.
7. Click **Update** to add the external routable subnet to the subnets or TEP table.
8. On the **Fabric Setup Policy** panel, click **Submit**.



If you find that you have to make changes to the information in the subnets or TEP table after you've made these configurations, follow the procedures provided in "Changing the External Routable Subnet" in the Cisco APIC Getting Started Guide to make those changes successfully.

Enabling Direct Communication for Remote Leaf Switches

Before you can add a fabric that contains one or more Remote Leaf switches to the Nexus Dashboard, you must configure direct remote leaf communication for that fabric. Additional information about remote leaf direct communication feature is available in the *Cisco APIC Layer 3 Networking Configuration Guide*. This section outlines the steps and guidelines specific to the integration with Multi-Fabric.



Once you enable Remote Leaf switch direct communication, the switches will function in the new mode only

1. Log in directly to the fabric's APIC.
2. Enable direct traffic forwarding for Remote Leaf switches.
 - a. From the menu bar, navigate to **System > System Settings**.
 - b. From the left side bar, select **Fabric Wide Setting**.

- c. Check the **Enable Remote Leaf Direct Traffic Forwarding** checkbox.



When this is enabled, the spine switches will install Access Control Lists (ACLs) to prevent traffic coming from remote leaf switches from being sent back, since the remote leaf switches will now send directly between each remote leaf switches' TEPs. There may be a brief disruption in service while the tunnels are built between the remote leaf switches.

- d. Click **Submit** to save the changes.
3. To verify that the configuration was set correctly, on the spine switch, enter the following command:

spine# cat /mit/sys/summary

You should see the following highlighted line in the output, which is verification that the configuration was set correctly (full output truncated):


```
podId : 1
remoteNetworkId : 0
remoteNode : no
rldirectMode : yes
rn : sys
role : spine
```

Cisco Mini ACI Fabrics

Cisco Multi-Fabric supports Cisco Mini ACI fabrics as typical on-premises fabrics without requiring any additional configuration. This section provides a brief overview of Mini ACI fabrics, detailed info on deploying and configuring this type of fabrics is available in [Cisco Mini ACI Fabric and Virtual APICs](#).

Cisco ACI release 4.0(1) introduced Mini ACI Fabric for small scale deployment. Mini ACI fabric works with APIC cluster consisting of one physical APIC and two virtual APICs (vAPIC) running in virtual machines. This reduces the physical footprint and cost of the APIC cluster, allowing ACI fabric to be deployed in scenarios with limited rack space or initial budget, such as a colocation facility or a single-room data center, where a full-scale ACI installations may not be practical due to physical footprint or initial cost.

The following diagram shows an example of a mini ACI fabric with a physical APIC and two virtual APICs (vAPICs):

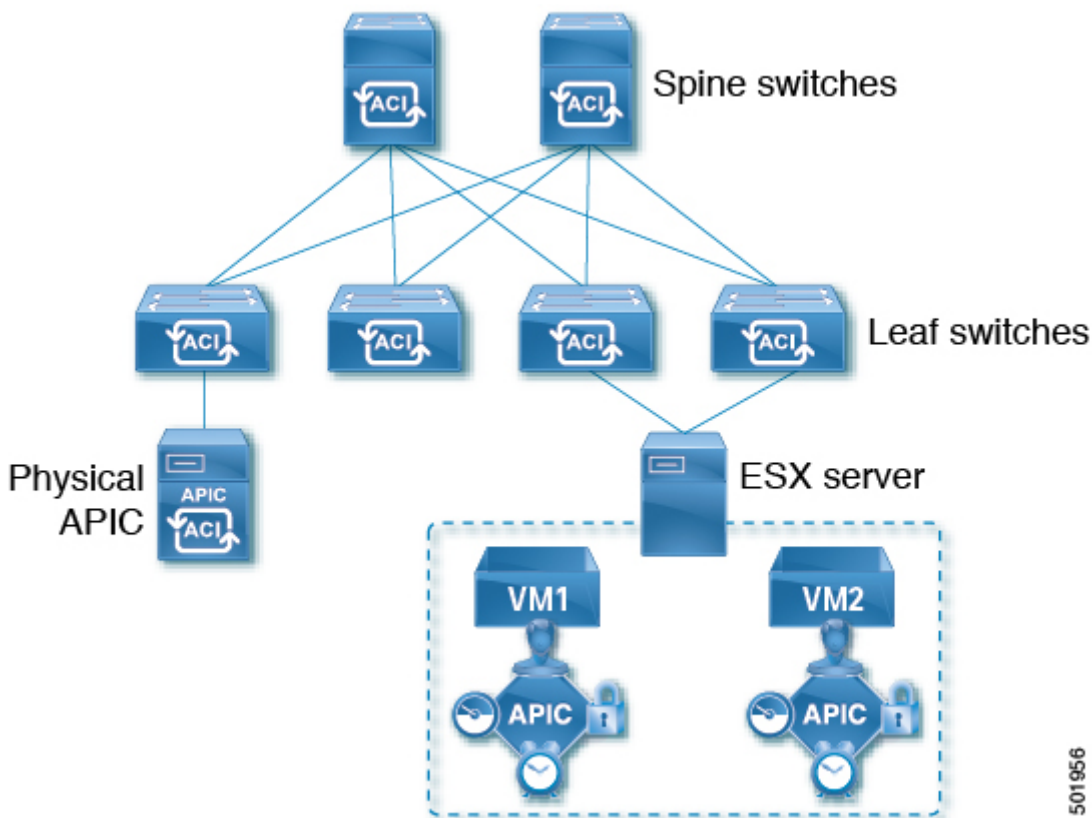

501956

Cisco Mini ACI Fabric

Adding and Deleting Fabrics

Cisco Nexus Dashboard and APIC Interoperability Support

Cisco Nexus Dashboard does not require a specific version of APIC to be running in all fabrics. The APIC clusters in each fabric as well as the Nexus Dashboard itself can be upgraded independently of each other and run in mixed operation mode as long as the fabric can be on-boarded to the Nexus Dashboard. As such, we recommend that you always upgrade to the latest release of the Nexus Dashboard.

However, keep in mind that if you upgrade the Nexus Dashboard before upgrading the APIC clusters in one or more fabrics, some of the new Nexus Dashboard features may not yet be supported by an earlier APIC release. In that case a check is performed on each template to ensure that every configured option is supported by the target fabrics.

The check is performed when you save a template or deploy a template. If the template is already assigned to a fabric, any unsupported configuration options will not be saved; if the template is not yet assigned, you will be able to assign it to a fabric, but not be able to save or deploy the schema if it contains configuration unsupported by that fabric.

In case an unsupported configuration is detected, an error message will show, for example: **This APIC fabric version <fabric-version> is not supported by Nexus Dashboard. The minimum version required for this <feature> is <required-version> or above.**

The following table lists the features and the minimum required APIC release for each one:



While some of the following features are supported on earlier Cisco APIC releases, Release 4.2(4) is the earliest release that can be on-boarded and managed by this release of Nexus Dashboard.

Feature	Minimum APIC Version
ACI Multi-Pod Support	Release 4.2(4)
Service Graphs (L4-L7 Services)	Release 4.2(4)
External EPGs	Release 4.2(4)
ACI Virtual Edge VMM Support	Release 4.2(4)
DHCP Support	Release 4.2(4)
Consistency Checker	Release 4.2(4)
vzAny	Release 4.2(4)
Host Based Routing	Release 4.2(4)
Layer 3 Multicast	Release 4.2(4)
MD5 Authentication for OSPF	Release 4.2(4)
EPG Preferred Group	Release 4.2(4)
Inter-Fabric L3Out	Release 4.2(4)

EPG QoS Priority	Release 4.2(4)
Contract QoS Priority	Release 4.2(4)
Single Sign-On (SSO)	Release 5.0(1)
Multicast Rendezvous Point (RP) Support	Release 5.0(1)
Transit Gateway (TGW) support for AWS and Azure Fabrics	Release 5.0(1)
SR-MPLS Support	Release 5.0(1)
Cloud LoadBalancer High Availability Port	Release 5.0(1)
Service Graphs (L4-L7 Services) with UDR	Release 5.0(2)
3rd Party Device Support in Cloud	Release 5.0(2)
Cloud Loadbalancer Target Attach Mode Feature	Release 5.1(1)
Support security and service insertion in Azure for non-ACI networks reachable through Express Route	Release 5.1(1)
CSR Private IP Support	Release 5.1(1)
Extend ACI policy model and automation for Cloud native services in Azure	Release 5.1(1)
Flexible segmentation through multiple VRF support within a single VNET for Azure	Release 5.1(1)
Private Link automation for Azure PaaS and third-party services	Release 5.1(1)
Openshift 4.3 IPI on Azure with ACI-CNI	Release 5.1(1)
Cloud Fabric Underlay Configuration	Release 5.2(1)

Adding Cisco ACI Fabrics

Before you begin:

- If you are adding on-premises ACI fabric, you must have completed the fabric-specific configurations in each fabric's APIC, as described in previous sections in this chapter.
- You must ensure that one or more fabrics you are adding are running Release 4.2(4) or later.

To add Cisco ACI fabrics, follow the procedures provided in [Creating Fabrics and Fabric Groups](#).



If you perform a clean reboot of an APIC and import a configuration backup, authentication errors might occur in the Orchestration service. This can happen even if the fabric status is Up on the **Fabrics** page. The system displays the following error: **Unable to read MpBgpPolicy for Fabric <Site_Name>: Unable to authenticate. Check your credentials.** To resolve this issue, re-register the affected site. Choose **Manage > Fabrics**, select the affected fabric, and update the site credentials to refresh the authentication context.

Removing Fabrics

Before you begin:

You must ensure that all templates associated with the fabric you want to remove are not deployed.

This section describes how to disable fabric management for one or more fabrics using the Cisco Nexus Dashboard GUI. The fabrics remain present in the Cisco Nexus Dashboard.

1. Navigate to the **Orchestration** window.

Manage > Orchestration

2. Remove the fabric from all templates.

You must remove the fabric from all templates with which it is associated before you can unmanage the fabric and remove it from your Cisco Nexus Dashboard.

- a. Navigate to **Tenant Templates > Applications**.
- b. Click a **Schema** that contains one or more templates that are associated with the fabric.
- c. From the **Overview** drop-down, choose a template that's associated with the fabric that you want to remove.
- d. From the **Actions** drop-down, choose **Add/Remove Fabrics** and uncheck the fabric that you want to remove.

This removes configurations that were deployed using this template to this fabric.



For nonstretched templates, you can choose to preserve the configurations that are deployed by the template to the fabrics by selecting **Actions > Dissociate Fabrics** instead. This option allows you to retain configurations that are deployed by Nexus Dashboard but no longer manage those objects from Nexus Dashboard.

- e. Repeat this step for all templates associated with the fabric that you want to unmanage in this and all other schemas.
3. Remove the fabric's underlay configuration.
 - a. From the left navigation menu, select **Manage > Orchestration > Inter-Fabric Connectivity**.
 - b. In the main pane, click **Configure**.
 - c. In the left sidebar, select the fabric that you want to unmanage.
 - d. Click **View Details** to load fabric settings.
 - e. In right sidebar's **Inter-Fabric Connectivity** tab, disable the **Multi-Fabric** check box.

This disables EVPN peering between this fabric and other fabrics.

- f. Click **Deploy** to deploy the changes to the fabric.
4. Delete the fabric from Cisco Nexus Dashboard.

If you no longer want to manage this fabric or use it with any other applications, you can delete the fabric from the Cisco Nexus Dashboard as well.



The fabric must not be currently in use by any of the services that are installed in your Cisco Nexus Dashboard cluster.

- a. In the top navigation bar, click the **Home** icon to return to the Cisco Nexus Dashboard GUI.
- b. From the left navigation menu of the Cisco Nexus Dashboard GUI, select **Operate > Fabrics**.
- c. Select one or more fabrics that you want to delete.
- d. In the top right of the main pane, select **Actions > Delete Fabric**.
- e. Provide the fabric's sign-in information and click **OK**.

The fabric will be removed from the Cisco Nexus Dashboard.

Copyright

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

The documentation set for this product strives to use bias-free language. For the purposes of this documentation set, bias-free is defined as language that does not imply discrimination based on age, disability, gender, racial identity, ethnic identity, sexual orientation, socioeconomic status, and intersectionality. Exceptions may be present in the documentation due to language that is hardcoded in the user interfaces of the product software, language used based on RFP documentation, or language that is used by a referenced third-party product.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/go/trademarks>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

© 2017–2026 Cisco Systems, Inc. All rights reserved.

Americas Headquarters

Cisco Systems, Inc.

170 West Tasman Drive

San Jose, CA 95134-1706

USA

<https://www.cisco.com>

Tel: 408 526-4000

800 553-NETS (6387)

Fax: 408 527-0883