



Understanding your Nexus Dashboard Fabrics, Release 4.3.1

Table of Contents

New and changed information	1
Mapping fabric types	2
Understanding all your Nexus Dashboard fabrics at a glance	4
Navigate to the Fabrics page	4
Understanding a single Nexus Dashboard fabric at a glance	6
Anomaly level	6
Advisory level	7
Recent activity	7
General	7
Inventory	9
Interfaces	9
Connectivity	9
Segmentation and security	10
Analytics summary	10
External traffic	11
Fabric analysis	13
Assurance analysis	14
Assurance analysis guidelines and limitations	15
On-demand analysis	16
Best Practices job	17
Run an on-demand Best Practices job	18
Policy-based redirect service chain assurance	19
Policy-based redirect anomalies	19
Alerts suspend mode for anomalies and advisories	21
Include suspended alerts in anomalies and advisories	22
Alerts suspend mode notification	24
Guidelines and limitations	25
Copyright	26

New and changed information

The following table provides an overview of the significant changes up to this current release. The table does not provide an exhaustive list of all changes or of the new features up to this release.

Release Version	Feature	Description
Nexus Dashboard 4.3.1	Cisco Nexus 9000 Series name change	Cisco Nexus 9000 Series is now the Cisco N9000 Series.

Mapping fabric types

This table maps fabric types that existed in releases before Nexus Dashboard version 4.1.1 to the new fabric types available in the unified Nexus Dashboard.



- In some cases, a pre-unification fabric type might not be available as a new deployment type and can only be onboarded into Nexus Dashboard. Those fabric types are marked as "Brownfield onboard only" in this table.
- Similarly, a new fabric or fabric group type might become available in a unification release that was not available in pre-unification releases. Those fabric or fabric group types are marked as "N/A" in the **Pre-unification fabrics** fields in this table.

Pre-unification fabrics version 3.2.2 and earlier		Post-unification fabric types version 4.1.1 and later
Fabric technologies	Fabric types	
LAN		
N/A		VXLAN (fabric group) – Subtype VXLAN-ACI
VXLAN EVPN	VXLAN EVPN Multi-Site	VXLAN (fabric group)
Multi-Fabric Domain	Fabric Group	Classic (fabric group)
VXLAN EVPN	Data Center VXLAN EVPN	Data Center VXLAN EVPN – iBGP
eBGP VXLAN EVPN	BGP fabric	Data Center VXLAN EVPN – eBGP
VXLAN EVPN	Campus VXLAN EVPN	Campus VXLAN EVPN
eBGP Routed	BGP fabric	BGP fabric
Classic LAN	Enhanced Classic LAN	Enhanced Classic LAN
Classic LAN	Classic LAN	Legacy Classic LAN (Brownfield onboard only)
Custom	External connectivity network	External and inter-fabric connectivity network
Custom	Custom network	External and inter-fabric connectivity network
Custom	Multi-site external network	External and inter-fabric connectivity network
LAN Monitor	LAN Monitor	External and inter-fabric connectivity network
IPFM		
IPFM	IPFM	IPFM
IPFM	IPFM Classic	IPFM classic
Generic Multicast	IPFM Classic	IPFM classic

Multi-Fabric Domain	Fabric Group	IPFM (fabric group)
---------------------	--------------	-------------------------------------

Understanding all your Nexus Dashboard fabrics at a glance

Navigate to the Fabrics page

The **Fabrics** page allows you to view, create, delete, and modify fabrics and fabric groups.

Follow these steps to navigate to the **Fabrics** page.

1. Go to **Manage > Fabrics**.

The **Fabrics** page displays.

2. Click the **Fabrics** tab.

The **Fabrics** table displays information on all configured fabrics.

Field	Description
Name	Displays the name of the fabric.
Type	Displays the type of the fabric.
Anomaly level	Displays the anomaly level of the fabric. Anomalies are classified into these levels. ▪ Critical—Shown when the network is down, such as when a fabric is not operational. ▪ Major—Shown when connectivity to a given prefix or endpoint could be compromised, such as overlapping IP addresses or subnets. ▪ Warning—Shown when the network is impacted, such as when connectivity to a given prefix or endpoint is degraded.
Advisory level	Displays the advisory level of the fabric. Advisories are classified into these levels. ▪ Critical—Shown when there are unsupported infrastructure components and the associated bug notices are classified as Severity 1. This includes situations such as switches operating under end-of-life conditions or when a critical (Severity 1) field notice or PSIRT has been issued for a switch or software version currently in use. ▪ Major—Shown when the associated bug notices are classified as Severity 2. This level appears when a critical (Severity 2) field notice or PSIRT has been issued for a switch or software version currently running in your network. ▪ Warning—Shown when there is support for infrastructure that may be at risk, and the associated bug notices are classified as Severity 3. This includes cases where switches are nearing end-of-life conditions, or when a Severity 3 field notice or PSIRT has been issued for a switch or software version currently in use.

Field	Description
License tier	Displays the license tier for the software features that is being used in the fabric.
ASN	Displays the ASN for the fabric.

If you want to modify the columns shown in the table, click the gear icon at the top right of the table. From the **Table Configuration** drawer choose the columns that you want to display in the table.

You can view these options.

- Connectivity status
- Software version
- Fabric group
- Features

You can also perform these actions from the **Actions** drop-down list in the **Fabrics** page.

Action	Description
Actions > Create fabric	Click Actions > Create fabric to create a new fabric. For more information, see Creating Fabrics and Fabric Groups .
Actions > Edit Fabric Settings	Choose a fabric to edit, then click Actions > Edit Fabric Settings . ▪ Make the necessary changes and click Save. ▪ Click Cancel to exit without saving any changes.
Actions > Delete fabric	Choose a fabric to delete, then click Actions > Delete fabric . Click Confirm to delete the fabric.
Actions > Re-register	Click Actions > Re-register to re-register a fabric if there are changes to the public IP address.

Understanding a single Nexus Dashboard fabric at a glance

1. Navigate to the main **Fabrics** window.

Manage > Fabrics

2. Locate the fabric that you want information on.
 - To view all configured local online fabrics, click **Local > Online fabrics**.
 - To view all configured remote fabrics, click **Remote**.
3. Single-click on the fabric that you want information on.

The **Summary** window for that fabric appears, with the **Overview** tab selected by default.

4. View the necessary information in the various tiles in the **Overview** tab.
 - [Anomaly level](#)
 - [Advisory level](#)
 - [Recent activity](#)
 - [General](#)
 - [Inventory](#)
 - [Interfaces](#)
 - [Connectivity](#)
 - [Segmentation and security](#)
 - [Analytics summary](#)
 - [External traffic](#)
 - [Connectivity](#)

Anomaly level

Nexus Dashboard proactively detects different types of anomalies across the network, analyzes the anomalies, and identifies remediation methods. The **Anomaly level** tile provides a status of your anomaly levels and a list of your top anomaly categories.

Nexus Dashboard monitors different sets of data from all nodes in the fabric and baselines the data to identify “normal” behavior. Any deviation is represented as an anomaly. Your time is better spent in resolving the issue instead of tracking the issue. Additionally, it can estimate the impact of the anomaly and generate a recommendation depending on the nature of the anomaly and thus reducing the Mean Time to Troubleshooting and Resolution (MTTR).

Click in the **Anomaly level** tile to navigate directly to the **Anomalies** tab in the **Summary** window. See [Detecting Anomalies in Your Nexus Dashboard](#) for more information.

Advisory level

Nexus Dashboard identifies field notices, software and hardware end-of-life and end-of-sale announcements, as well as PSIRTs that can potentially impact the network fabrics that it is monitoring, and generate advisories. Advisories provides recommendations to keep your network under support and running in optimal conditions. The **Advisory level** tile provides a status of your advisory levels and a list of your top advisory categories.

Click in the **Advisory level** tile to navigate directly to the **Advisories** tab in the **Summary** window. See [Identifying Advisories in Your Nexus Dashboard](#) for more information.

Recent activity

The **Recent activity** tile provides a summary of the most recent changes that have occurred in this fabric (for example, if you deleted an interface on a switch in the fabric). Click View all to navigate directly to the **History** tab in the **Summary** window. See [History](#) for more information.

General

The **General** tile provides a summary of this information for the fabric.

Field	Description
Fabric name	Provides the name of the fabric.
Type	Provides the type of fabric.
License tier	Provides the license tier used by the fabric. Click the entry to bring up a slide-in pane that provides additional information on the license tiers and the features that are enabled in each license tier.
BGP ASN	Provides the BGP ASN of the fabric.
Security domain	Provides the security domain used by the fabric.
Fabric group	If the fabric is a member of a fabric group, this field shows the fabric group that the fabric belongs to. Click the fabric group name to navigate directly to the Summary page for that fabric group.
Config-sync status	Provides the fabric status (In-Sync or Out-of-Sync).

Field	Description
Telemetry status	Provides insights into the health and performance of the switches and devices in your network. The different telemetry collection statuses at the fabric level include: ▪ OK: This status indicates that the telemetry data streaming from all the switches to Nexus Dashboard is functioning correctly. This is the desired state, as it ensures comprehensive monitoring and visibility into the network's performance. ▪ Not OK: This status indicates the telemetry data streaming from all the switches to Nexus Dashboard is not functioning correctly. This could be as a result of various problems such as network outages, misconfigurations, or hardware failures. ▪ Partial OK: This status indicates that telemetry data streaming from all the switches to Nexus Dashboard is not functioning correctly from some of the switches but it is functioning correctly from others. This suggests an inconsistent or partial telemetry data flow within the network which could be caused by various factors, such as switch-specific issues or misconfigurations on some switches. Hover over the status to display a pop-up with a summary of the number of switches in the fabric that are sending software telemetry information to Nexus Dashboard. Click the status to bring up a slide-in pane that provides additional information on the software telemetry status for the fabric and for the switches in the fabric. In the slide-in pane, with the Fabric tab selected, click Actions to perform the following actions: ▪ Pause telemetry ▪ Resume telemetry ▪ Resync ▪ Config deployment
Switches software version	Provides the software versions on the switches in the fabric. ▪ If there are more than two switches in the fabric, clickable text is displayed that shows how many additional switches are in the fabric. Click the text to bring up a slide-in pane that provides additional information on the software versions for the switches in the fabric, including the number of nodes running on a specific software version and the total bugs related to that software version. ▪ In the slide-in pane, click View all on any software version row to view the active and susceptible bugs for that software version in the fabric.
Network operating system	Displays SONiC if you have SONiC set as the network operating system for the switches in the fabric.
Fabric bugs	Displays bugs that are associated with the software running on the fabric. Click Show more to view the active and susceptible bugs for the fabric.

Inventory

In the **Inventory** tile, you can view the summary of the controllers and switches for the fabric.

Click **View hardware resources** to view the hardware resources for the fabric. Click and choose a resource from the **Top Controllers By** drop-down list to see a graph for that resource. In the table that follows, see the resource usage by switch. Click the switch name to view additional details.

Click **View capacity** to view the different resources with their maximum capacity and current usage.

- **Fabric summary** shows you the trends for the week, as well as the capacity by resource for the entire fabric. You see the number of resources used out of the total available capacity for each resource in this fabric (for example, Bridge Domains 2829 of 15000). The percentage indicates the percentage of resource used.
- **Switches summary** displays the capacity breakout of resources by switch. The graph shows you the timeline for the parameter that you have chosen from the **Top Switches By** drop-down list. In the table, click **Operational Resources**, **Configuration Resources**, or **Hardware Resources** to see the capacity and usage for each switch in the fabric.

The **Inventory** tile also provides this additional information.

- Number of switches in the fabric. Click this box to navigate directly to **Inventory > Switches** for this fabric.
- Number of vPC pairs in the fabric. Click this box to navigate directly to **Inventory > vPC pairs** for this fabric.
- Number of other devices in the fabric. Click this box to navigate directly to **Inventory > Other devices** for this fabric.

Interfaces

In the **Interfaces** tile, you can see the summary of the interfaces for the fabric, including the number of switches that are in the Up, Down, or Admin Down state.

- Click **Physical** to show only physical interfaces, or click **All** to show physical and virtual interfaces.
- Click **View physical interface statistics** to bring up a slide-in pane that provides statistics information for the physical interfaces.
 - In the **Top 10 interfaces by** area, choose if you want to show the top 10 interfaces by traffic, bandwidth, or congestion. You can also set the time selection in that area.
 - Click the down arrow for other interfaces listed in this slide-in pane to view the same information for other interfaces.
- Click the link for the total number of interfaces in the fabric to navigate directly to **Connectivity > Interfaces** for this fabric. This provides additional details such as Anomaly Level, Admin Status, Operational Status, and Interface Type. Click the interface name to view additional details.

Connectivity

In the **Connectivity** tile, you can view details about these areas related to this fabric.

- **Endpoints:** Click the number of endpoints shown to navigate directly to **Connectivity > Endpoints** for this fabric.
- **Layer 3 (L3) neighbors:** Click the number of L3 neighbors shown to navigate directly to **Connectivity > L3 Neighbors** for this fabric.
- **Inter-fabric connections**

Segmentation and security

In the **Segmentation and security** tile, you can view details about these areas related to this fabric.

- **VRFs:** Click the number of VRFs shown to navigate directly to **Segmentation and security > VRFs** for this fabric.
- **Security groups:** Click the number of security groups shown to navigate directly to **Segmentation and security > Security groups** for this fabric.
- **Networks:** Click the number of networks shown to navigate directly to **Segmentation and security > Networks** for this fabric.

Analytics summary

In the **Analytics Summary** tile, you can see an overview of the multiple analytics collected from across the fabric. It displays the status for these areas related to the fabric.

- **Conformance:** Enables you to visualize and understand the lifecycle of your hardware and software in the network. This assists you in planning upgrades and hardware refresh. Conformance Report is generated everyday for each fabric for hardware and software conformance and weekly for each fabric for scale conformance. In the report you can view the conformance status of software, hardware, a combination of both software and hardware, and scale conformance status for fabrics.

Click the **Conformance** box to bring up a slide-in pane that provides conformance information in these areas.

- Devices by hardware conformance status
- Devices by software conformance status
- Scale conformance status for fabrics or switches

Click **View Conformance** to navigate directly to **Analysis Hub > Conformance**.

- **Congestion:** Measures network bandwidth utilization and quality of service (QoS) activation mechanisms to determine if a service is experiencing network congestion.

Click the **Congestion** box to bring up a slide-in pane that provides compliance information in these areas.

- **Summary:** Displays the number of violations, the top rules by anomaly count, the anomalies from violations and the violations by rule type. Click on any of the rules in 'Top rules by Violation' to view more details and click the count under 'Number of anomalies from violations' to view the list of anomalies.
- **Anomalies from Violations:** Lists all the anomalies that were triggered by the rules created.

Click any rule in the 'Grouped' view to see the list of anomalies categorized under that group. If you click any rule in the 'Ungrouped' view, you are redirected to the compliance rule detail page. This can be listed in a group view for all fabrics or individual view for a specific fabric. The table lists the severity level of the anomaly, the type of rule that triggered the anomaly, the detection time, and the status.

- **Compliance rules:** Shows a summary of the rules enforced and violated along with the number for each rule type. The table lists all the rules used to generate the current report. The table specifies whether it's a configuration rule or a communication rule and the number of anomalies from violations for each rule.

Click **View Conformance** to navigate directly to **Analysis Hub > Compliance**.

- **Traffic analytics:** Enables you to monitor your network's latency, congestion, and drops.

Traffic Analytics automatically discovers services running in your network by matching well-known Layer 4 ports to their corresponding service endpoint categories. Nexus Dashboard then assesses service performance based on thresholds for the following metrics:

- **Latency:** Measures the overall time in microseconds it takes a packet to go from one place to another.
- **Congestion:** Measures network bandwidth utilization and quality of service (QoS) activation mechanisms to determine if a service is experiencing network congestion.
- **Drops:** Measures the score or number of dropped packets versus transmitted packets considering factors such as CRC errors, faulty cables, and other devices.

Click the **Traffic analytics** box to bring up a slide-in pane that provides additional traffic analytics information.

Click **View Analytics** to navigate directly to **Analysis Hub > Traffic Analytics**.

- **Energy management:** Helps you monitor, predict, and improve your network's energy usage, its related carbon emissions, and its total energy cost. The Energy management report enables you to get insights on energy utilization, CO2 emissions, and energy cost for all your fabrics on a monthly basis.

The report is generated by calculating the monthly values for Power Consumption and by summing the usage data across all of your devices at each of your fabrics for every single day in the chosen month. This data is then combined with the Cisco Energy Manager to provide greater insight into what that usage means in terms of energy cost, estimated emissions, and estimated switch power consumption. For more information about the Cisco Energy Manager, see [Cisco Energy Manager](#).

Click the **Energy management** box to bring up a slide-in pane that provides the Energy management report for your fabric.

Click **View energy management** to navigate directly to **Analysis Hub > Energy management**.

External traffic


In the **External Traffic** tile, you can see the external traffic that the fabric has sent and received in the last seven days. The donut helps view the how much traffic is sent and received by the fabric. Click the information icon (i) to view more information about what external traffic is and how it can be

measured for the different types of fabrics.

Click **View external traffic** box to bring up a slide-in pane that provides additional information on external traffic for your fabric.

Fabric analysis

Once your fabric is onboarded and fully prepared, will start the analysis to collect data from your fabric and display the fabric information in the **Fabrics** page. The Fabric Analysis banner displays the progress of the analysis. The time to run the analysis depends on the size of the fabric. After you onboard and fully prepare your fabric, Nexus Dashboard starts analyzing the fabric to collect data and display the fabric information in the **Fabrics** page. The **Fabric Analysis** banner shows the progress of the analysis. The time required to complete the analysis depends on the size of the fabric.

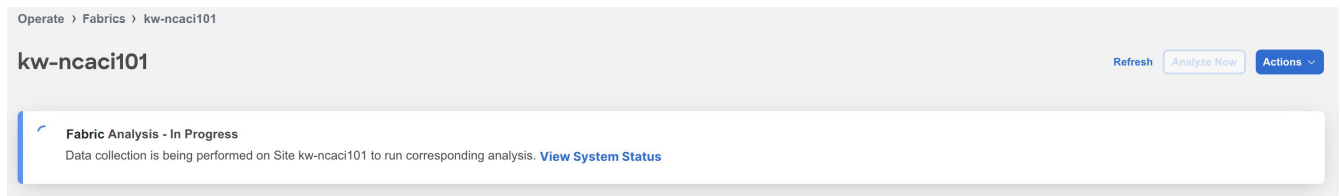

Click **View System Status** to view the status.

During fabric analysis, telemetry collection, assurance analysis, bug scan, and best practices analysis are carried out automatically. See [Assurance Analysis](#) and Bug Scan in [Analyzing and Troubleshooting Your Network](#).

The **Actions** drop-down list in the **Fabrics** page provides the following functionalities for managing and interacting with the fabric.

Action	Description
Edit Fabric Settings	Allows you to modify the configuration settings of the fabric as needed.
Add Switches	Allows you to discover and add switches to a fabric.
Recalculate and deploy	Allows you to recalculate fabric policies and configurations, ensuring they are up-to-date and aligned with the desired state. Once recalculated, you can deploy these settings across the fabric.
Configuration	Allows you to define and manage the operational parameters of a fabric.
Monitoring	Allows you to oversee the performance and status of a fabric. You can click Analyze now to initiate a new analysis session.
Maintenance	Provides options to backup and restore a fabric. You can also suspend or resume alerts for the fabric, ensuring uninterrupted maintenance activities. For more information, see Alert suspend mode for anomalies and advisories.  The suspend and resume alerts feature is available only for fabrics with Advantage and Premier license tiers and applicable to fabric management and telemetry anomalies.
Telemetry	Facilitates the configuration and collection of telemetry data for the fabric, aiding in detailed performance and operational insights.

Assurance analysis

Assurance analysis involves collecting data from fabrics, running the analysis to create a model with the collected data, and generating the results.

- Assurance analysis provides assurance in real time. During assurance analysis for online fabrics, the data collection, model generation, and results generation are carried out simultaneously. The collected data is analyzed immediately after collection followed by result generation. This is repeated after a fixed time interval or as specified by the user. For online fabrics, assurance analysis is performed automatically every 2 hours. The schedule is determined by the fabric size and scale. For larger fabrics, assurance analysis is performed automatically every 3-4 hours.
- For snapshot fabrics, a one-time assurance is provided. This assurance analysis allows you to decouple the data collection stage from the analysis stage. The data is collected using a Python script and the collected data is then uploaded to Nexus Dashboard to provide a one-time assurance. The collected data can also be analyzed at a later time. It enables the user to collect the data during change management windows and then perform the analysis.

Assurance analysis guidelines and limitations


- If you take the assurance analysis from a fabric and export the raw data set to upload a file to a Snapshot fabric, assurance analysis for the snapshot fabric will only generate assurance related anomalies.
- Currently, if you begin an assurance analysis for a snapshot fabric, you can simultaneously continue to run the assurance analysis for online fabrics that are already in progress. They will all run without any disruption to the behavior.
- Anomaly Rules and Compliance Rules are valid in assurance analysis for snapshot fabrics.

On-demand analysis


For online fabrics, assurance analysis is performed automatically, but you can also choose to request one at any time. This may be useful in cases where you resolve one or more issues in a fabric and would like Nexus Dashboard to poll the latest Anomalies and Advisories information without waiting for the next automatic run.

Similarly, you can also run an on-demand analysis for Bug Scan or Best Practices to reflect the latest status.

1. Navigate to **Manage > Fabrics**.
2. Choose Online or Snapshot fabrics from the drop-down list.
3. For an online fabric with telemetry enabled, click the fabric name to view the details.
 - a. Click **Actions > Monitoring > Analyze now**.
 - b. Choose the service. For Bug Scan, select the switches and click **Run now**.

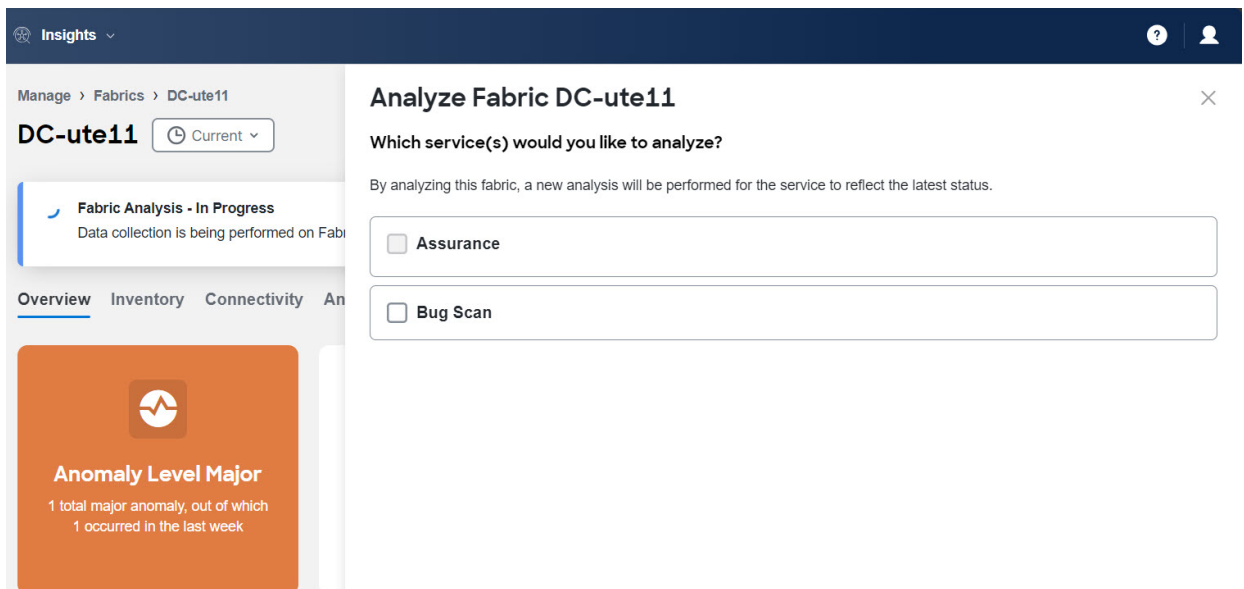

4. For snapshot fabric, click the fabric name to view the details.
5. Click **File History**.
6. In the **File History** table, click the ellipsis icon and choose **Run Analysis**.

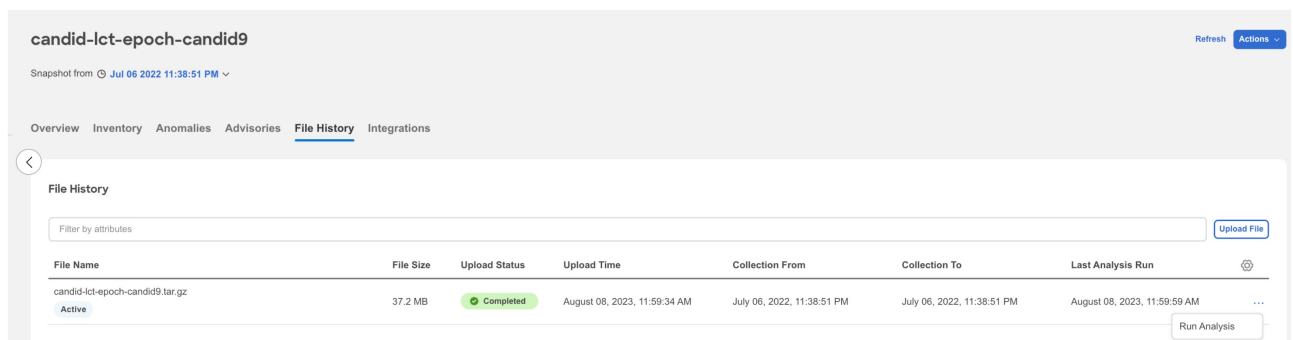

Best Practices job

Nexus Dashboard collects technical support information from the fabric and runs them against known set of signatures and then flags the defects that are not compliant. Nexus Dashboard also generates an anomaly list for you. See [Detecting Anomalies in Your Nexus Dashboard](#) to learn more about Metadata support.

A Best Practices job is run for all the fabrics onboarded to Nexus Dashboard and is auto-scheduled every 7 days for each device. This schedule is fixed and is not customizable.

A Best Practices job is run on devices contained in a fabric either based on the last Best Practices job or the onboarding time if a Best Practices job has not been run before. Priority is given to devices with a longer time elapsed since the last Best Practices job. After a Best Practices job is run on a device, regardless of whether it succeeds or fails, another Best Practices job will not be run for the same device for the next 7 days.

However, the on-demand Best Practices job is an exception and is prioritized over any auto-scheduled runs. If an auto-scheduled Best Practices job is in progress and an on-demand Best Practices job is initiated, based on the available resources in the Nexus Dashboard nodes the on-demand Best Practices job will start while the current Best Practices job is in progress or after the current Best Practices job is completed.

Only one Best Practices job at the time can run on a specific device. However, if you have one set of devices where a Best Practices job is already in progress, a second (auto-scheduled or on-demand) Best Practices job can run only if Nexus Dashboard has enough resources available. Otherwise, it will be put on hold and started as soon as resources are available.

Run an on-demand Best Practices job

You can also run an on-demand Best Practices job for a fabric. See [On-demand analysis](#).



You can only run one on-demand Bug Scan or Best Practice job in Nexus Dashboard at any given instance. Once an on-demand job is started, the UI takes up to a minute to grey out. If you trigger another on-demand job while the UI is not greyed out, the job will fail.

Policy-based redirect service chain assurance

In a Cisco ACI fabric, with policy-based redirect (PBR) support, the Nexus Dashboard assurance engine checks for inconsistencies with device cluster, device selection policy, deployment of vPC nodes, and device cluster deployment for unmanaged single nodes in the GoTo mode.

Nexus Dashboard assures PBR service graphs. If all conditions listed below are met, there will be no false positive anomalies. However, if any of the conditions are not met, then PBR service graphs are not assured and they may result in false positives.

- A service graph template must have route redirect enabled.
- Only a single service node is supported and the service node must be in the GoTo mode **Function Type** under the **Function Node** properties.
- The direct connect option for service graphs is not supported, therefore you must set the value to **False**.
- The set of provider/consumer bridge domains must not overlap with the set of shadow EPG bridge domains. Additionally, every shadow EPG must have its own bridge domain.
- The provider EPG and the consumer EPG must be one of the following types: an L3Out EPG, an application EPG, or a vzAny EPG.
- In a transit routing case with a PBR contract, the provider L3Out and consumer L3Out must be different L3Outs. PBR destinations in an L3Out is not supported.
- There must be a single service graph per contract, and the service graph must be bidirectional.
- There must be no filters set on the function node connectors under the service graph template.
- Only one service graph per contract is supported.
- Subnets on logical interface contexts are not supported.
- The backup PBR policy feature (introduced in Cisco APIC release 4.2(1)) is not supported.
- If you use the threshold-redir command, you must set the threshold down action to permit.
- Filters from a contract for a PBR service graph template is not supported.

Policy-based redirect anomalies

In a Cisco ACI fabric, the anomaly **Service Chain Redirect Policy Violation** is used for PBR assurance.

The following checks are performed before the **Service Chain Redirect Policy Violation** is generated:

- If one or more zoning rules contracts are missing or do not match the APIC configurations.
- If redirect destination or redirect destination group which is used by deployed PBR graph is in disabled state.

As a result, traffic will not be redirected as expected for the contract and graph instance.



If IP-SLA policy or health group is not enabled in the PBR redirect policy, the anomaly **Service Chain Redirect Policy Violation** will not be generated even if the redirect destination is not reachable. In this case, the anomaly **PBR Redirect**

Destination Learning Error will be generated.

Alerts suspend mode for anomalies and advisories

When you place a fabric in Alerts suspend mode, Nexus Dashboard does not display any new anomalies or advisories generated for that fabric in the **Fabric Overview** page. However, you will still see all pre-existing alerts. Once you resume alerts, Nexus Dashboard includes both pre-existing alerts and those generated during the suspend mode in the default views.

Alerts suspend mode is especially useful when you make changes to a fabric or switch, as these changes may trigger numerous anomalies and advisories that resolve once the changes are complete. By enabling this mode, you prevent these anomalies and advisories from cluttering the default views.



You can enable Alerts suspend mode only at the fabric level specifically on the primary cluster of that fabric. When enabled, Nexus Dashboard also suspends alerts on the remote telemetry clusters of the same fabric. Alerts suspend mode is supported only for online fabrics and not supported for snapshot fabrics.

Follow these steps to enable Alerts suspend mode for a fabric.

1. Navigate to the **Fabrics** page.

Go to **Manage > Fabrics**.


2. In the **Fabric** page, click the appropriate fabric.

The **Fabric Overview** page displays.

3. From the **Actions** drop-down list, choose **Maintenance > Suspend alerts**.

The **Suspend alerts** dialog box displays.

4. In the **Suspend alerts** dialog box, click **Suspend alerts** to suspend alerts of the fabric.

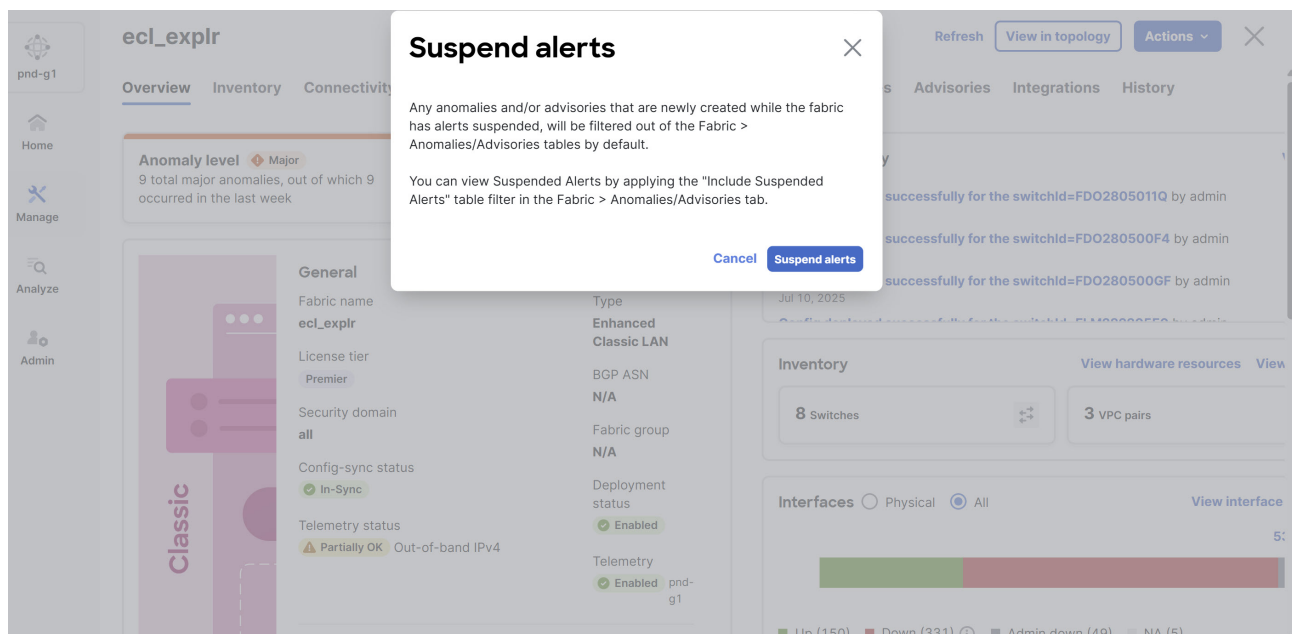

You will see an **Alerts Suspended** label next to the fabric name in the **Fabric Overview** page.



The **Anomaly level** and **Advisory level** cards display no data in the Alerts suspend mode.

- To resume suspended alerts, from the **Actions** drop-down list, choose **Maintenance > Resume alerts**.



The **Anomaly level** and **Advisory level** pie charts and data in the **Overview** page (**Home > Overview**) display only pre-existing anomalies from suspended fabrics, along with all anomalies from non-suspended fabrics. Once alerts are resumed for a fabric, all anomalies from that fabric are displayed in the **Overview** page .

When you place a fabric in Alerts suspend mode, all the switches within the fabric also suspend their alerts. Navigate to **Manage > Inventory**, to view the switches in Alerts suspend mode.

Include suspended alerts in anomalies and advisories

You can view the anomalies and advisories for the specific fabric that you placed in Alerts suspend mode.

Follow these steps to include the suspended alerts in anomalies.

- Navigate to the **Fabrics** page.

Go to **Manage > Fabrics**.

2. Choose the fabric for which you want to include suspended alerts.


The **Fabric Overview** page displays.

3. Click the **Anomalies** tab.

4. In the top-right corner, click the **Include suspended alerts** toggle button to display suspended alerts.



Suspended alerts display along with active anomalies on this page. If any alerts are suspended, the **Anomaly level** card displays a **Suspended alerts** label and indicates the number of suspended alerts. Click the **Suspended alerts** label to view only the anomalies generated after the fabric was placed in Alerts suspend mode.

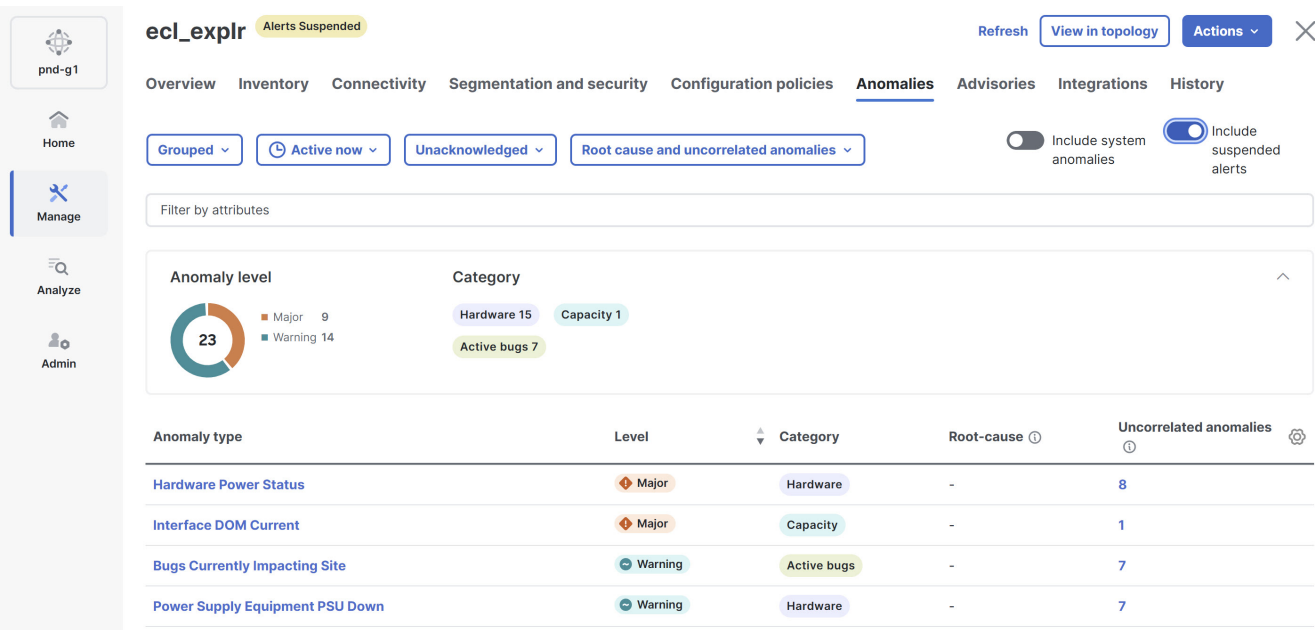

Follow these steps to include the suspended alerts in advisories.

1. Navigate to the **Fabrics** page.

Go to **Manage > Fabrics**.

2. Choose the fabric for which you want to include suspended alerts.

The **Fabric Overview** page displays.

3. Click the **Advisories** tab.

4. In the top-right corner, click the **Include suspended alerts** toggle button to display suspended alerts.



Suspended alerts display along with active advisories on this page. If any alerts are suspended, the **Advisory level** card displays a **Suspended alerts** label and indicates the number of suspended alerts. Click the **Suspended alerts** label to view only the advisories generated after the fabric was placed in Alerts suspend mode.

pnd-g1

Home

Manage

Analyze

Admin

ecl_explr Alerts Suspended

Refresh View in topology Actions

Overview Inventory Connectivity Segmentation and security Configuration policies Anomalies **Advisories** Integrations History

Active now Unacknowledged

Filter by attributes

Advisory level

Category

PSIRT 13 Best practices 10 Field notice 1

Title	Advisory level	Category	Nodes
Configure NTP with authentication	Warning	Best practices	N9K-Tappist_lite_105 ecl_explr View all (8 total)
Develop and configure a warning or message-of-the-day (MOTD) banner	Warning	Best practices	N9K-Tappist_lite_105 ecl_explr View all (8 total)
Use AAA for authentication	Warning	Best practices	N9K-Tappist_lite_105 ecl_explr View all (8 total)



You can also include suspended alerts and view the anomalies and advisories by navigating to **Analyze > Anomalies** and **Analyze > Advisories**.

Alerts suspend mode notification

When you choose fabrics that are currently in Alerts suspend mode within the **Analyze > Analysis Hub** under the Policy CAM, Compliance, and Conformance sections, a banner appears on the respective page. The banner displays the following message.

The fabric selected currently has Alerts suspended which may impact the information shown below.

pnd-g1

Home

Manage

Analyze

Admin

← Analysis hub

Policy CAM analyzer

ecl_explr Active now Re-sync

The fabric selected currently has Alerts suspended which may impact the information shown below

Associated policies

Selecting any combination of objects or policies will update the tables below

Source security group Destination security g... Contract Filter Switch

No Source security groups

No Destination security groups

No Contracts

No Filters

No Switches

Guidelines and limitations

- The Alerts suspend mode feature is available only for fabrics with Advantage and Premier license tiers.
 - You can configure the Alerts suspend mode for a fabric from the primary cluster of the fabric.
 - The Alerts suspend mode feature supports co-located NX-OS and ACI fabrics but does not support snapshot fabrics.
 - The Alerts suspend mode feature is specific to fabric management and telemetry anomalies.
 - Alerts suspend mode does not apply to the following features:
 - Root Cause Analysis
 - Analysis Hub
 - Delta Analysis
 - Policy CAM
-

Copyright

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

The documentation set for this product strives to use bias-free language. For the purposes of this documentation set, bias-free is defined as language that does not imply discrimination based on age, disability, gender, racial identity, ethnic identity, sexual orientation, socioeconomic status, and intersectionality. Exceptions may be present in the documentation due to language that is hardcoded in the user interfaces of the product software, language used based on RFP documentation, or language that is used by a referenced third-party product.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/go/trademarks>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

© 2017–2026 Cisco Systems, Inc. All rights reserved.

Americas Headquarters

Cisco Systems, Inc.

170 West Tasman Drive

San Jose, CA 95134-1706

USA

<https://www.cisco.com>

Tel: 408 526-4000

800 553-NETS (6387)

Fax: 408 527-0883