




Cisco Nexus Dashboard Data Broker Configuration Guide, Release 3.10.4

First Published: 2023-09-22

Last Modified: 2025-03-21

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

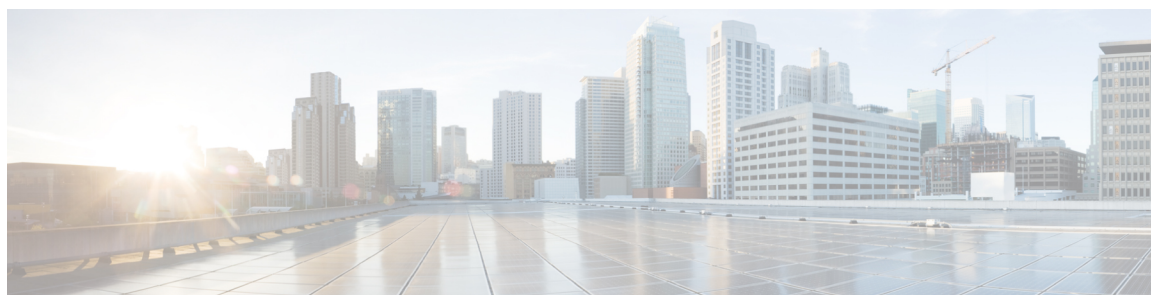

Trademarks

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS REFERENCED IN THIS DOCUMENTATION ARE SUBJECT TO CHANGE WITHOUT NOTICE. EXCEPT AS MAY OTHERWISE BE AGREED BY CISCO IN WRITING, ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS DOCUMENTATION ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED.

The Cisco End User License Agreement and any supplemental license terms govern your use of any Cisco software, including this product documentation, and are located at:

<http://www.cisco.com/go/softwareterms>. Cisco product warranty information is available at <http://www.cisco.com/go/warranty>. US Federal Communications Commission Notices are found here <http://www.cisco.com/c/en/us/products/us-fcc-notice.html>.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any products and features described herein as in development or available at a future date remain in varying stages of development and will be offered on a when-and-if-available basis. Any such product or feature roadmaps are subject to change at the sole discretion of Cisco and Cisco will have no liability for delay in the delivery or failure to deliver any products or feature roadmap items that may be set forth in this document.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

The documentation set for this product strives to use bias-free language. For the purposes of this documentation set, bias-free is defined as language that does not imply discrimination based on age, disability, gender, racial identity, ethnic identity, sexual orientation, socioeconomic status, and intersectionality. Exceptions may be present in the documentation due to language that is hardcoded in the user interfaces of the product software, language used based on RFP documentation, or language that is used by a referenced third-party product.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)



CHAPTER 1

New and Changed Information

This chapter contains new and changed information for release 3.10.4.

- [New and Changed Information, on page 1](#)

New and Changed Information

This chapter provides release-specific information for each new and changed feature in the Cisco Nexus Dashboard Data Broker Configuration Guide, Release 3.10.4.

Table 1: New and Changed Features

Feature	Description	Where Documented
Preferred Primary Node in a Cluster	While configuring a cluster, the first node in the list of supernodes entered in the <code>config.ini</code> file is the primary node of the cluster.	Logging in and Managing chapter
Standby Node in a Cluster	While configuring a cluster, you can add a fourth node as a standby node in the <code>config.ini</code> file. This node comes into play only when two nodes of the cluster are <i>down</i> .	Logging in and Managing chapter
Refresh Fabric button addition	To fetch the latest ACI fabric details, the Refresh Fabric button has been introduced. This is available while you are configuring the span sessions and the input ports.	Components chapter
Save button addition	All Edit screens have been modified to display the Save button after you have edited a parameter.	Across this document.



CHAPTER 2

Overview

This chapter contains overview information of the Cisco Nexus Dashboard Data Broker.

- [About Cisco Nexus Data Broker](#) , on page 3
- [Prerequisites for Cisco Nexus Series Switches](#), on page 7
- [Supported Web Browsers](#), on page 11
- [System Requirements](#), on page 11
- [Guidelines and Limitations](#), on page 12
- [Filename Matrix](#), on page 12
- [Interoperability Matrix](#), on page 13

About Cisco Nexus Data Broker

Visibility into application traffic has traditionally been important for infrastructure operations to maintain security, troubleshooting, and compliance and perform resource planning. With the technological advances and growth in cloud-based applications, it has become imperative to gain increased visibility into the network traffic. Traditional approaches to gain visibility into network traffic are expensive and rigid, making it difficult for managers of large-scale deployments.

Cisco Nexus Data Broker (NDB) with Cisco Nexus Switches provides a software-defined, programmable solution to aggregate copies of network traffic using Switched Port Analyzer (SPAN) or network Test Access Point (TAP) for monitoring and visibility. As opposed to traditional network taps and monitoring solutions, this packet-brokering approach offers a simple, scalable and cost-effective solution that is well-suited for customers who need to monitor higher-volume and business-critical traffic for efficient use of security, compliance, and application performance monitoring tools.

With the flexibility to use a variety of Cisco Nexus Switches and the ability to interconnect them to form a scalable topology provides the ability to aggregate traffic from multiple input TAP or SPAN ports, and replicate and forward traffic to multiple monitoring tools which may be connected across different switches. Using the Cisco NX-API agent to communicate to the switches, Cisco Nexus Data Broker provides advance features for traffic management.

Cisco NDB provides management support for multiple disjointed Cisco NDB networks. You can manage multiple Cisco NDB topologies that may be disjointed using the same application instance. For example, if you have 5 data centers and want to deploy an independent solution for each data center, you can manage all 5 independent deployments using a single application instance by creating a logical partition (network slice) for each monitoring network.

Basic Salient features of the the Cisco Nexus Data Broker:

- Scalable topology for TAP and SPAN port aggregation.
- Robust Representational State Transfer (REST) API and a web-based GUI for performing all functions.
- Ability to replicate and forward traffic to multiple monitoring tools.
- Rules for matching monitoring traffic based on Layer 1 through Layer 4 information.
- Time-stamping using PTP.
- Packet Truncation beyond a specified number of bytes to discard the payload.
- Custom filtering of packets using User Defined Fields.
- Ability to adapt to changes in TAP/SPAN aggregate network states.
- End-to-end visibility.
- High Availability.
- Load Balancing.
- Manage multiple disjointed networks.
- Integration with ACI devices/ APIC and NX-OS devices.
- Real-time statistics for easy troubleshooting.
- Application management via IPv6.
- Security features, such as role-based access control (RBAC), and integration with an external Active Directory using RADIUS, TACACS, or LDAP for authentication, authorization, and accounting (AAA) functions.

Platform-wise support of the additional features of the Cisco Nexus Data Broker:

Table 2: Supported Features

Feature Name	Cisco Nexus 9200 C92304QC, C92160YC	Cisco Nexus 9300(First Gen) C93128TX, C9396TX	Cisco Nexus 9300(EX, FX, FX2) C93180LC-EX, C93180YC-EX, C93108TC-EX, C93108TC-FX, C93180YC-FX, C9336C-FX2, C93240YC-FX2, C93360YC-FX2
Port Channel Load Balancing	Y	Y	Y
MPLS Stripping	Y	Y	Y
MPLS Stripping- Label	N	Y	N

Feature Name	Cisco Nexus 9200 C92304QC, C92160YC	Cisco Nexus 9300(First Gen) C93128TX, C9396TX	Cisco Nexus 9300(EX, FX, FX2) C93180LC-EX, C93180YC-EX, C93108TC-EX, C93108TC-FX, C93180YC-FX, C9336C-FX2, C93240YC-FX2, C93360YC-FX2
MPLS Filtering	N	N	N
sFlow	Y	Y	Y
PTP/ Timestamping	Y	N	Y
Jumbo MTU	Y	Y	Y
NetFlow	N	N	Y
Q-in-Q Tagging (for TAP and SPAN input ports)	N	Y	Y
Span Destination	Y	Y	Y
Timestamping	Y	N	Y
Packet Truncation	N	N	Y
Timestamping Strip	Y	N	Y
Input Port - TAP/ SPAN	Y	Y	Y
Local Monitoring Tool	Y	Y	Y
Remote Monitoring Tool with ERSPAN support	Y	Y	Y
Remote Source	Y	N	Y
UDF	Y	Y	Y
UDF v6	N	Y	Y
UDE	N	N	N
Drop ICMPv6	Y	N	Y

Table 3: Supported Features (contd)

Feature Name	Cisco Nexus 9500(EX, FX) C9504, C9508, C9516	Cisco Nexus 9364C, 9332C	Cisco Nexus 9300-GX 93600CD-GX 9364C-GX 9316D-GX
Port Channel Load Balancing	Y	Y	Y
MPLS Stripping	N	N	Y
MPLS Stripping- Label	N	N	N
MPLS Filtering	N	N	N
sFlow	Y	Y	Y
PTP/ Timestamping	Y	Y	Y
Jumbo MTU	Y	Y	Y
NetFlow	Y	N	Y
Q-in-Q Tagging (for TAP and SPAN input ports)	Y	Y	Y
Span Destination	Y	Y	Y
Timestamping	Y	Y	Y
Packet Truncation	Y	Y	Y
Timestamping Strip	Y	Y	Y
Input Port - TAP/ SPAN	Y	Y	Y
Local Monitoring Tool	Y	Y	Y
Remote Monitoring Tool with ERSPAN support	Y	Y	Y
Remote Source	Y	N	Y
UDF	Y	Y	Y
UDF v6	Y	Y	Y
UDE	Y	N	N
Drop ICMPv6	Y	Y	Y



Note The Cisco Nexus Series switches indicated in the above tables are recommended. For the supported NX-OS versions on the Nexus switches, see the Interoperability Matrix table in the [Cisco Nexus Data Broker Release Notes, Release 3.10](#).

The following Cisco Nexus Series switches are also supported:

- Cisco Nexus 3000 Series switches—3048, 3064
- Cisco Nexus 3100 Series switches—3172, 3164, 31108TC-V, 31108PC-V, 3132C-Z
- Cisco Nexus 3200 Series switches— 3232
- Cisco Nexus 3500 Series switches

Limitations of Cisco Nexus Series switches:

Table 4: Limitations

Cisco Nexus Series Switch	Limitations
9364C-GX, 93600CD-GX, 9316D-GX	<ul style="list-style-type: none"> • Range for QinQ VLAN on input ports is from 2 to 509. • QinQ VLANs cannot be added after configuring MPLS label strip.

Prerequisites for Cisco Nexus Series Switches

Cisco Nexus Dashboard Data Broker is supported on Cisco Nexus 3000, 3100, 3200, and 9000 series switches. Before you deploy the software, you must do the following:

- Ensure that you have administrative rights to log in to the switch.
- Verify that the management interface of the switch (mgmt0) has an IP address configured using the **show running-config interface mgmt0** command.
- Ensure that the switch is in Multiple Spanning Tree (MST) mode. You can use **spanning-tree mode mst** command to enable MST mode on a switch.
- Add the VLAN range in the database that is to be used in Cisco Nexus Dashboard Data Broker for tap aggregation and inline monitoring redirection to support VLAN filtering. For example, the VLAN range is <1-3967>.
- Ensure that the spanning tree protocol is disabled for all the VLANs. You can use the **no spanning-tree vlan 1-3967** to disable spanning tree on all the VLANs.
- For the first Nexus Dashboard Data Broker deployment with NXOS version 9.2(1), ensure that the **feature nxapi** and **nxapi http port 80** commands are configured on the NDB device. If you upgrading NDB device from NXOS version I7(x) to 9.2(1), the **feature nxapi** and **nxapi http port 80** configurations are not required.

For running the NX-API mode on the Cisco Nexus Series switches, see the following pre-requisites.



Note The hardware command that is a pre-requisite for the IPv6 feature is **hardware access-list tcam region ipv6-ifacl 512 double-wide**.



Note The TCAM configurations are based on the type of filters required. You may configure multiple TCAM entries from a specific region based on the network requirement. For example, *ing-ifacl* is the TCAM region to cater MAC, IPv4, IPv6 filters in case of N93180YC-E. You may configure multiple TCAM from this region to fit more filtering ACL TCAM entries.

Device Models	NX-API Mode
Cisco Nexus 3000 Series switches	Enter the following commands at the prompt: <ul style="list-style-type: none"> • # hardware profile tcam region qos 0 • # hardware profile tcam region racl 0 • # hardware profile tcam region vacl 0 • # hardware profile tcam region ifacl 1024 double-wide • # hardware access-list tcam region mac-ifacl 512 • #feature nxapi • #feature lldp
Cisco Nexus 3164Q, 3132Q switches	Enter the following commands at the prompt: <ul style="list-style-type: none"> • # hardware profile tcam region qos 0 • # hardware profile tcam region racl 0 • # hardware profile tcam region vacl 0 • # hardware profile tcam region ifacl 1024 double-wide • # hardware access-list tcam region mac-ifacl 512 • #feature nxapi • #feature lldp
Cisco Nexus 3172 Series switches	Use the hardware profile mode tap-aggregation [l2drop] CLI command to enable tap aggregation and to reserve entries in the interface table that are needed for VLAN tagging. The l2drop option drops non-IP traffic ingress on tap interfaces.

Device Models	NX-API Mode
Cisco Nexus 3200 Series switches	<p>Enter the following commands at the prompt:</p> <ul style="list-style-type: none"> • # hardware access-list team region e-racl 0 • # hardware access-list team region span 0 • # hardware access-list team region redirect 0 • # hardware access-list team region vpc-convergence 0 • # hardware access-list team region racl-lite 256 • # hardware access-list team region l3qos-intra-lite 0 • # hardware access-list team region ifacl 256 double-wide • # hardware access-list team region mac-ifacl 512 • # hardware access-list team region ipv6-ifacl 256 • #feature nxapi • #feature lldp
Cisco Nexus 9300 Series switches	<p>Enter the following commands at the prompt:</p> <ul style="list-style-type: none"> • # hardware access-list team region qos 0 • # hardware access-list team region vacl 0 • # hardware access-list team region racl 0 • # hardware access-list team region redirect 0 • # hardware access-list team region vpc-convergence 0 • # hardware access-list team region ifacl 1024 double-wide • # hardware access-list team region mac-ifacl 512 • # hardware access-list team region ipv6-ifacl 512 • #feature nxapi • #feature lldp • #system dot1q-tunnel transit

Device Models	NX-API Mode
Cisco Nexus 9200, 9300-EX, 9336C-FX2, 93240YC-FX2, and N9K-C93360YC-FX2 switches	<p>Enter the following commands at the prompt:</p> <ul style="list-style-type: none"> • #hardware access-list tcam region ing-l2-span-filter 0 (For Cisco Nexus 93108 series switch only) • #hardware access-list tcam region ing-l3-span-filter 0 (For Cisco Nexus 93108 series switch only) • # hardware access-list tcam region ing-racl 0 • hardware access-list tcam region ing-l3-vlan-qos 0 • # hardware access-list tcam region egr-racl 0 • # hardware access-list tcam region ing-ifacl 1024 • #feature nxapi • #feature lldp • #system dot1q-tunnel transit <p>Note This command is not supported on the Nexus 9200 switches.</p>
Cisco Nexus 9500-EX and 9500-FX Series switches (9504, 9508 and 9516)	<p>Enter the following commands at the prompt:</p> <ul style="list-style-type: none"> • # hardware access-list tcam region ing-racl 0 • # hardware access-list tcam region ing-l3-vlan-qos 0 • # hardware access-list tcam region egr-racl 0 • # hardware access-list tcam region ing-ifacl 1024 • #feature nxapi • #hardware acl tap-agg • #feature lldp • #system dot1q-tunnel transit

Device Models	NX-API Mode
Cisco Nexus 9300-GX Series switches	<p>Enter the following commands at the prompt:</p> <ul style="list-style-type: none"> • <code># hardware access-list team region ing-racl 0</code> • <code># hardware access-list team region ing-l3-vlan-qos 0</code> • <code># hardware access-list team region egr-racl 0</code> • <code># hardware access-list team region ing-ifacl 1024</code> • <code>#feature nxapi</code> • <code>#hardware acl tap-agg</code> • <code>#feature lldp</code> • <code>#system dot1q-tunnel transit</code>

Supported Web Browsers

The following web browsers are supported for Cisco Nexus Dashboard Data Broker:

- Firefox 85.0 and later versions.
- Chrome 88.0 and later versions.
- Microsoft Edge 88.0 and later versions.



Note If incompatible browsers are used, you may encounter GUI display issues for Release 3.10.



Note Enable JavaScript on your browser.

System Requirements

The following table lists the system requirements as per the deployment size:

Table 5: System Requirements per Deployment Size

Description	Small	Medium	Large
CPUs (virtual or physical)	6-core	12-core	18-core
Memory	8 GB RAM	16 GB RAM	24 GB RAM

Description	Small	Medium	Large
Number of switches for TAP and SPAN aggregation	Upto 25 switches	Upto 50 switches	75 to 100 switches
Hard disk	Minimum of 40 GB of free space available on the partition on which the Data Broker software is installed.		
Operating System	A recent 64-bit Linux distribution that supports Java, preferably Ubuntu, Fedora, or Red Hat.		
Other	Java Virtual Machine 1.8.		

Guidelines and Limitations

Cisco Nexus Dashboard Data Broker runs in a Java Virtual Machine (JVM). As a Java-based application, Cisco Nexus Dashboard Data Broker can run on any x86 server. For best results, we recommend the following:

- Java Virtual Machine 1.8.0_45 and higher.
- A \$JAVA_HOME environment variable in your profile that is set to the path of the JVM.
- JConsole and VisualVM that are both part of JDK are the recommended (but not required) additions for troubleshooting.
- You should not configure the same name for more than one switch in the topology to avoid unpredictable behavior in the link discovery by Cisco Nexus Dashboard Data Broker.
- The following special characters are not allowed in description field for Port Definitions, Port Groups, Connections, Redirections, Monitoring Devices, and Service Nodes: Apostrophe ('), Less Than (<), Greater Than (>), Double Quotation ("), Back Slash (\), Vertical Bar (|), and Question Mark (?).
- When the domain name is enabled in the switch, it does not reflect the change in the LLDP neighbors and the links get removed for that particular switch. The workaround for this issue is to disable the LLDP feature and then to enable it again by using **no feature lldp** and **feature lldp** CLI commands respectively.
- If Cisco Nexus 9000 Series switch is using 7.0(3)I4(1) or later version in NX-API mode and if a flow is installed using a VLAN filer, then the device goes through an IP access list and it does not match on the Layer 2 packet.

Filename Matrix

Filename Matrix for Cisco Nexus Dashboard Data Broker:

Mode of Deployment	NXOS Image	Mode	File Name
Embedded	9.3(1) to 9.3(5)	NXAPI	ndb1000-sw-app-emb-k9- <i>release-number</i> .zip

Mode of Deployment	NXOS Image	Mode	File Name
Centralized	9.3(1) to 9.3(5)	NXAPI	ndb1000-sw-app-k9-release-number.zip

Interoperability Matrix

For the Interoperability Matrix, see the *Cisco Nexus Dashboard Data Broker Release Notes, Release 3.10.1*.



CHAPTER 3

Logging in and Managing the Cisco Nexus Dashboard Data Broker

This chapter has details about logging in and managing the Cisco Nexus Dashboard Data Broker, and overview of the GUI.

Beginning with Release 3.10.1, Cisco Nexus Data Broker (NDB) has been renamed to Cisco Nexus Dashboard Data Broker. However, some instances of NDB are present in this document, to correspond with the GUI, and installation folder structure. References of NDB/ Nexus Data Broker/ Nexus Dashboard Data Broker can be used interchangeably.

- [Configuring High Availability Clusters](#) , on page 15
- [Logging in to Cisco Nexus Dashboard Data Broker GUI](#), on page 19
- [Changing Controller Access](#), on page 19
- [Cisco Nexus Dashboard Data Broker GUI Overview](#), on page 20
- [Syslog](#), on page 23

Configuring High Availability Clusters

Cisco Nexus Dashboard Data Broker supports high availability clustering in active/active mode with up to five controllers. To use high availability clustering with Cisco Nexus Dashboard Data Broker, you must edit the `config.ini` file for each instance of Cisco Nexus Dashboard Data Broker.

NDDB release 3.10.4 supports 3-node clusters only.

In case of a split-brain scenario, 3-node clusters are handled as follows:

Cluster health is indicated as Yellow. A minimum of two nodes should be *up* and connected in the cluster for the cluster to be in the operational state. If not, the cluster nodes will move to a non-operational state. Override option is not available. Fix the VM and/or network link, as required.



Note IPv6 is supported in centralized Nexus Dashboard Data Broker mode only, it is not supported in Embedded mode.

Table 6: Cluster Operation Status

Cluster Indicator	Cluster Status	Recommendation
Green	Operational	<i>No recommendation as the status is operational.</i>
Yellow	Some of the cluster nodes are not available	Do not make any changes or add to the existing Nexus Dashboard Data Broker configuration.
Red	The node is isolated from the cluster.	Do not make any changes or add to the existing Nexus Dashboard Data Broker configuration. Note: For two node cluster, you need to override in any one of the cluster node only, to ensure regular operation.

Before you begin

- All IP addresses must be reachable and capable of communicating with each other.
- All switches in the cluster must connect to all of the controllers.
- All controllers must have the same HA clustering configuration information in the `config.ini` files.
- All controllers must have the same information in the `ndb/configuration/startup` directory.
- If using cluster passwords, all controllers must have the same password configured in the `ndbjgroups.xml` file.
- To mark a node as a preferred primary, add the required node IP address as the first node in the list of supernodes in the `config.ini` file. If you would prefer to always have the first node as the preferred primary, then set `enablePreferredPrimary=true` in the `config.ini` file.

To change the preferred primary node, *stop* the `ndb` controller and make the required modifications to the `config.ini` file.

If you donot wish to mark the first node as the preferred primary from the list of super nodes, then change the parameter to *false* in the `config.ini` file:

```
enablePreferredPrimary=false
```

Now, in case of a failure, and the primary node is *down*, another member node takes over as the primary node. The member node will continue to be the primary node even when the former primary node is *up*.

**Note**

The data broker controller checks for the number of configured supernodes (in the `config.ini` file), and if the number is less than three, an error is displayed indicating that 2-node cluster is not supported.

Procedure

-
- Step 1** Open a command window on one of the instances in the cluster.
- Step 2** Navigate to the `ndb/configuration` directory that was created when you installed the software.
- Step 3** Use any text editor to open the `config.ini` file.
- Step 4** Locate the following text:
- ```
HA Clustering configuration (semi-colon-separated IP addresses of all controllers that are part of
the cluster.)
supernodes=<ip1>;<ip2>;<ip3>;<ipn>
```
- Step 5** **Example:**
- IPv4 example.
- ```
# HA Clustering configuration (semi-colon-separated IP addresses of all controllers that are part of
the cluster.)
supernodes=10.1.1.1;10.2.1.1;10.3.1.1;10.4.1.1;10.5.1.1
```
- Example:**
- IPv6 example.
- ```
HA Clustering configuration (semi-colon-separated IP addresses of all controllers that are part of
the cluster.)
supernodes=2001:22:11::1;2001:33::44::1;2001:55:66::1
```
- Step 6** Save the file and exit the editor.
- Step 7** Repeat Step 3 through Step 7 for each instance of Cisco Nexus Dashboard Data Broker in the cluster.
- Step 8** Restart Cisco Nexus Dashboard Data Broker.

For Nexus Dashboard Data Broker cluster deployment, the expected latency between the node is three seconds, with three retries. You can configure the latency time and the number of maximum retries. See the procedure, below.

---

### What to do next

(Optional) Use this procedure to configure the delay time for a node and the number of retries.

1. Open a command window on one of the instances in the cluster.
2. Navigate to the `ndb` configuration directory.
3. Use any text editor to open the `ndbjgroups.xml` file.
4. Locate the following text:

```
FD timeout="3000" max_tries="3"/
```
5. Modify the *Latency Time* value and *maximum\_tries* value.
6. Save the file and exit the editor.
7. Repeat the above steps for all the instances of the cluster.

# Password Protecting High Availability Clusters

## Procedure

**Step 1** Open a command window on one of the instances in the cluster.

**Step 2** Navigate to the `ndb/configuration` directory.

**Step 3** Use any text editor to open the `ndbjgroups.xml` file.

**Step 4** Locate the following text:

```
<!-- <AUTH auth_class="org.jgroups.auth.MD5Token" auth_value="ciscoXNC" token_hash="MD5"></AUTH> -->
```

**Step 5** Remove the comments from the AUTH line.

### Example:

```
<AUTH auth_class="org.jgroups.auth.MD5Token" auth_value="ciscoXNC" token_hash="MD5"></AUTH>
```

**Step 6** (Optional) Change the password in the `auth_value` attribute.

By default, the cluster is protected with the password "ciscoXNC". You can change this password to whatever value you want, you need make the similar changes on all machines in the cluster.

**Step 7** Save the file and exit the editor.

## Adding a Standby Node

Beginning with release 3.10.4, you can add a standby node to support a cluster. You need to append `-standby` to the IP address of the standby node to indicate the standby node while configuring the supernodes in the `config.ini` file. An example is shown here:

```
supernodes=<ip1>;<ip2>;<ip3>;<ip4>-standby
```

Release 3.10.4 supports 3-node clusters only. The cluster is said to be *fully healthy* if all the three nodes are working fine, *partially healthy* if two (out of the three nodes) are working fine. If only one node is working fine, that is, two nodes (out of the three nodes of a cluster) are *down*, then, the cluster is *unhealthy*. You need to manually `start` the standby node, which forms a cluster with the running node.

The standby node terminates automatically:

- If the running node gets terminated abruptly.
- After recovery, if the two nodes that were earlier *down* are now *up*.

### Guidelines and limitations for standby nodes

- You cannot `start` the standby node, if all the nodes in a cluster are *down*. One node needs to be running to form a cluster with the standby node.
- You cannot `start` the standby node, if the cluster is healthy (that is, if two nodes in a three node cluster are working fine).
- Ensure that the cluster is unhealthy before starting the standby node. Ensure that the nodes of the cluster are *down*, and not a disruption in connection between the nodes.

Consider a scenario wherein, node 1 and node 2 are located together and node 3 and the standby node are located together elsewhere. If nodes 1 and 2 are temporarily disconnected from node 3 and the standby node, it gives a false impression that nodes 1 and 2 are *down*, and based on this information, if the standby node is started, then the standby node and node 3 form a cluster (even when nodes 1,2 are *up*). This will lead to a configuration mismatch/ loss when the connection between node 1- node 2 and node 3-standby node is restored.

## Logging in to Cisco Nexus Dashboard Data Broker GUI

You can login to the Cisco Nexus Data Broher GUI using HTTPS. The default HTTPS web link for the Cisco Nexus Dashboard Data Broker GUI is `https://IP_address:8443/monitor`.



**Note** You must manually specify the `https://` protocol in your web browser. The controller must also be configured for HTTPS.

### Procedure

**Step 1** In your web browser, enter the Cisco Nexus Dashboard Data Broker web link.

**Step 2** On the launch page, do the following:

- a) Enter your username and password.

The default username and password is admin/admin.

- b) Click **LOGIN**.

## Changing Controller Access

An unencrypted (HTTP) access to the GUI and the API to the controller access is disabled by default. You cannot access the controller with the URL `http://<host>:8080`.

To change the controller access to HTTP, complete the following steps:

### Before you begin

Cisco Nexus Dashboard Data Broker is shipped with a certificate for the HTTPS connection between the Cisco Nexus Dashboard Data Broker and a browser. You can change to a different certificate.

The script **generateWebUICertificate.sh** is available in the **ndb/configuration** folder. If you execute this script, it moves the shipped certificate to **old\_keystore** and the new certificate is generated in **keystore**. On the next Cisco Nexus Dashboard Data Broker restart, this new certificate is used.

## Procedure

- Step 1** Remove the comment character from the connector for port 8080 in the `tomcat-server.xml` files in the configuration directory as displayed in the following example:

```
<Service name="Catalina">
<!--
<Connector port="8080" protocol="HTTP/1.1"
connectionTimeout="20000"
redirectPort="8443" server="Cisco NDB" enableLookups="false" />
-->
<Connector port="8443" protocol="HTTP/1.1" SSLEnabled="true"
scheme="https" secure="true"
clientAuth="false" sslProtocol="TLS"
keystoreFile="configuration/keystore"
keystorePass="ciscondb" server="Cisco NDB"
connectionTimeout="60000" enableLookups="false" />
```

- Step 2** Restart the controller.

# Cisco Nexus Dashboard Data Broker GUI Overview

The Cisco Nexus Dashboard Data Broker GUI contains the following tabs and each of these tabs are discussed in detail (as separate chapters) in the subsequent pages of this guide.

- [Dashboard](#)
- [Topology](#)
- [Devices](#)
- [Connections](#)
- [Components](#)
- [Sessions](#)
- [Statistics](#)
- [Troubleshooting](#)
- [Administration](#)

For details about the header icons, see [Header](#).

## Components of a screen of the Cisco Nexus Dashboard Data Broker

When you click a tab/ sub-tab, the current information of the tab is displayed in a table.

A typical screen representing one of the tabs of the Release 3.10.1 Cisco Nexus Dashboard Data Broker GUI is displayed here:



Nexus Data Broker

Stand-alone Slice default

Filters

Filter by attributes

<input type="checkbox"/>	In Use	Default	Filter Name	Bidirectional	EtherType	Protocol	AdvancedFilter(s)	Created By	Last Modified By
<input type="checkbox"/>	✓	✓	Default-Match-all	No	All EtherTypes (0...			admin ( Network-...	-
<input type="checkbox"/>	✓	✓	Default-Match-ARP	No	ARP (0x0806)			admin ( Network-...	-
<input type="checkbox"/>	✓	✓	Default-Match-ICMP	No	IPv6 (0x86DD)	ICMP (1)	nd-na,nd-ns,rout...	admin ( Network-...	-
<input type="checkbox"/>	✓	✓	Default-Match-ICM...	No	IPv6 (0x86DD)	ICMP (1)		admin ( Network-...	-
<input type="checkbox"/>	✓	✓	Default-Match-IP	No	IPv4 (0x0800)			admin ( Network-...	-





5 Rows Page 1 of 7 1-5 of 34


- 1—Name of the tab/sub-tab.
- 2—Use the *Filter by attributes* bar to filter the displayed table which has the details of the selected tab. Choose the attribute, operator and filter-value.  
You can also filter the displayed table based on the *filter* icon that appears when you hover over an element of the table.
- 3—Use the *Refresh* icon to refresh the displayed details and get the latest information about the tab/sub-tab.
- 4—Use the *Column Customization* icon to select the columns you want to see in the displayed table.
- 5—Click the **Actions** button to see the available actions for the screen.
- 6—From the **Rows** drop-down list, select the number of rows to be displayed in the table.

## Header

This section provides an overview of the Cisco Nexus Dashboard Data Broker GUI Header (upper right corner) icons:

Table 7: Cisco Nexus Dashboard Data Broker Header Icons

Icon	Description
<b>Cluster</b>	<p>Displays the role of the current Nexus Dashboard Data Broker controller instance- either Primary (P) or Member (M). The IP addresses of the primary and member(s) are displayed; the IP address of the primary cluster is denoted with an (*).</p> <p>If Nexus Dashboard Data Broker controller is not in a cluster, <i>Stand-alone</i> is displayed.</p>
<b>Slice</b>	<p>Displays the slice name the user is currently logged in to.</p> <p>From the drop-down list, select another slice to change the network view.</p>
<b>Figure 1: Create</b> 	Provides quick navigation to often-used configuration and administration procedures.
<b>Figure 2: Alarm</b> 	Displays the number of inconsistent NDB devices. Click the Alarm icon; you are directed to the <a href="#">Flow Management</a> tab for details.
<b>Figure 3: Help Menu-Bar</b> 	<p>Displays the following options:</p> <ul style="list-style-type: none"> <li>• <b>What's New</b>—Displays new features for the latest release.</li> <li>• <b>Help</b>—Displays online help content.</li> </ul>
<b>Figure 4: System Tools Menu-Bar</b> 	<p>Provides the following options:</p> <ul style="list-style-type: none"> <li>• <b>Download Log</b>—Enables you to download log files to your local machine.</li> <li>• <b>Northbound API</b>—takes you to the <b>Swagger</b> UI for details about Nexus Dashboard Data Broker REST APIs.</li> <li>• <b>Session Timeout</b>—Enables you to set the session timeout value.</li> <li>• <b>About Nexus Dashboard Data Broker</b>—Displays Nexus Dashboard Data Broker details such as, build and version.</li> </ul>

Icon	Description
<p><b>Figure 5: User Profile Menu-Bar</b></p> 	<p>Provides the following options:</p> <ul style="list-style-type: none"> <li>• <b>Welcome <i>User</i></b>—Displays the current user of the GUI.</li> <li>• <b>Change Password</b>—Enables you to change the password of the current user.</li> <li>• <b>Logout</b>—Enables you to logout of the GUI.</li> </ul>

## Syslog

In the Nexus Dashboard Data Broker server backend, you can configure the `logback.xml` file to send logs to the Syslog server. You can customize the log format as per your requirement. The logback file is located at: `/ndb/configuration/logback.xml`



**Note** If the Nexus Dashboard Data Broker server(s) are running, restart the servers after the changes are made in the `logback.xml` file.

Sample Syslog configuration:

Add below config with respective Syslog server IP address and port number in `logback.xml` file.

```
<appender name="SYSLOG" class="ch.qos.logback.classic.net.SyslogAppender">
 <syslogHost>10.16.206.171</syslogHost>
 <facility>LOCAL7</facility>
 <port>514</port>
 <suffixPattern>[%thread] %logger %msg</suffixPattern>
</appender>
```

Append "`<appender-ref ref="SYSLOG" />`" in root as shown below,

```
<root level="error">
 <appender-ref ref="STDOUT" />
 <appender-ref ref="SYSLOG" />
 <appender-ref ref="ndb.log" />
</root>
```

After an upgrade, these configuration changes in the `logback.xml` file are lost. Ensure to check and restore the configuration manually, after upgrading the controller to a newer Nexus Dashboard Data Broker version.





## CHAPTER 4

# Managing TLS Certificate, KeyStore and TrustStore Files

This chapter has information and procedures for generating TLS Certificates and TrustStore files.

Beginning with Release 3.10.1, Cisco Nexus Data Broker (NDB) has been renamed to Cisco Nexus Dashboard Data Broker. However, some instances of NDB are present in this document, to correspond with the GUI, and installation folder structure. References of NDB/ Nexus Data Broker/ Nexus Dashboard Data Broker can be used interchangeably.

- [Generating TLS Self-Signed Certification Between NDB Server and NDB Switch for NXAPI, on page 25](#)
- [Generating TLS 3rd Party Certification Between NDB Server and NDB Switch for NXAPI, on page 31](#)
- [Generating TLS Self-Signed Certification Between WebUI Browser and NDB Server, on page 38](#)
- [Generating TLS 3rd Party Certification Between WebUI Browser and NDB Server, on page 46](#)

## Generating TLS Self-Signed Certification Between NDB Server and NDB Switch for NXAPI

This section describes how to generate TLS self-signed certification between NDB server and NDB Switch. You need to generate certificates and keys for each switch to enable TLS. TLS communication between NDB switch and NDB server uses port 443 only.

Complete the following steps to generate TLS self-signed certification between NDB Server and NDB Switch for NXAPI:

- [Generating Self-Signed Certificate and Key, on page 26](#)
- [Creating the TLS TrustStore File, on page 28](#)
- [Starting NDB with TLS, on page 29](#)
- [Configuring TLS KeyStore and TrustStore Passwords on Nexus Dashboard Data Broker , on page 30](#)



**Note** You cannot configure a controller to communicate using port 80 after configuring TLS.

## Generating Self-Signed Certificate and Key

This section describes how to generate self-signed certificate and key.

### Before you begin

Ensure that you have domain name configured on the switch using **ip domain-name** command for each NDB switch that acts as the Fully Qualified Domain Name (FQDN) for the switch. For example:

```
conf t
ip domain-name cisco.com
hostname N9k-117
end
```

The FQDN for the switch is configured to N9K-117.cisco.com.

### Procedure

**Step 1** Log in to the server.

**Step 2** Generate the private key and self-signed certificate using the **openssl req** command.

#### Example:

```
docker@docker-virtual-machine:~/TLS$ openssl req -x509 -nodes -days 3650 -newkey rsa:2048 -out
swl-ca.pem -outform PEM -keyout swl-ca.key
```

```
Generating a 2048 bit RSA private key
```

```
...+++
```

```
.....+++
```

```
writing new private key to 'swl-ca.key'
```

```

```

You are about to be asked to enter information that will be incorporated into your certificate request.

What you are about to enter is what is called a Distinguished Name or a DN.

There are quite a few fields but you can leave some blank

For some fields there will be a default value,

If you enter '.', the field will be left blank.

```

```

```
Country Name (2 letter code) [AU]:US
```

```
State or Province Name (full name) [Some-State]:CA
```

```
Locality Name (eg, city) []:SJ
```

```
Organization Name (eg, company) [Internet Widgits Pty Ltd]:cisco
```

```
Organizational Unit Name (eg, section) []:insbu
```

```
Common Name (e.g. server FQDN or YOUR name) []:N9K-117.cisco.com
```

```
Email Address []:myname@cisco.com
```

#### Note

If you have multiple switches, generate the certificate file and private key for each switch.

This command creates a certificate file (swl-ca.pem) and a private key (swl-ca.key).

**Step 3** Log in to the NDB switch.

**Step 4** Copy the certificate file, swl-ca.pem, and keyfile, swl-ca.key, to the switch using the **copy** command.

**Example:**

```
N9K-117# copy scp://docker@10.16.206.250/home/docker/Mallik/TLS_CA_june_23/sw1-ca.pem bootflash:
Enter vrf (If no input, current vrf 'default' is considered): management
docker@10.16.206.250's password:
server.cer
```

100% 4676

```
4.6KB/s 00:00
```

```
Copy complete, now saving to disk (please wait)...
```

```
N9K-117# copy scp://docker@10.16.206.250/home/docker/Mallik/TLS_CA_june_23/sw1-ca.key bootflash:
Enter vrf (If no input, current vrf 'default' is considered): management
```

```
docker@10.16.206.250's password:
cert.key
```

100%

```
Copy complete, now saving to disk (please wait)...
```

**Note**

If you have multiple switches, repeat this step for all the switches.

**Step 5**

Configure the certificate file, sw1-ca.pem, and keyfile, sw1-ca.key in the switch using the **nxapi** command.

**Example:**

```
N9K-117 (config)# nxapi certificate httpskey keyfile bootflash:sw1-ca.key
Upload done. Please enable. Note cert and key must match.
N9K-117 (config)#
N9K-117 (config)# nxapi certificate https crt certfile bootflash:sw1-ca.pem
Upload done. Please enable. Note cert and key must match.
N9K-117 (config)#
```

**Note**

If you have multiple switches, configure the corresponding certificate and private key to each switch.

**Step 6**

Enable self-signed certificates on the switch using the **nxapi certificate** command.

**Example:**

```
N9K-117 (config)# nxapi certificate enable
N9K-117 (config)#
```

**Note**

Ensure that there is no error while enabling self-signed certificates on the switch.

**Step 7**

Log in to the server.

**Step 8**

Copy and convert the sw1-ca.key and sw1-ca.pem files to .PEM format using the **copy** command.

**Example:**

```
cp sw1-ca.key sw1-ndb-privatekey.pem
cp sw1-ca.pem sw1-ndb-cert.pem
```

**Step 9**

Concatenate the private key and the certificate file using **cat** command.

**Example:**

```
docker@docker-virtual-machine:~/TLS$ cat sw1-ndb-privatekey.pem sw1-ndb-cert.pem > sw1-ndb.pem
```

- Step 10** Convert the .pem file to .p12 file format using the **openssl** command. Enter the export password when prompted to create a password protected .p12 certificate file.

**Example:**

```
docker@docker-virtual-machine:~/TLS$ openssl pkcs12 -export -out sw1-ndb.p12 -in sw1-ndb.pem
Enter Export Password: cisco123
Verifying - Enter Export Password: cisco123
Enter a password at the prompt. Use the same password that you entered in the previous Step (cisco123)
```

- Step 11** Convert the sw1-ndb.p12 to a password protected Java KeyStore (tlsKeyStore) file using the **keytool** command. Use the jre/bin from the installed java directory.

**Example:**

```
docker@docker-virtual-machine:~/TLS$./ (relativePath) /keytool -importkeystore -srckeystore sw1-ndb.p12
-srcstoretype pkcs12 -destkeystore tlsKeyStore -deststoretype jks
Enter Destination Keystore password:cisco123
Re-enter new password:cisco123
Enter source keystore password:cisco123
Entry for alias 1 successfully imported.
Import command completed: 1 entries successfully imported, 0 entries failed or cancelled.
```

**Note**

By default an alias named “1” is stored in tlsKeyStore for the first switch. If the NDB controller is managing multiple switches, repeat this step for all the switches. When you add the second switch, the utility allows you to rename the first switch alias and also provides a provision to rename alias for the second switch. Refer examples as shown below.

```
keytool -importkeystore -srckeystore sw2-ndb.p12 -srcstoretype pkcs12 -destkeystore tlsKeyStore
-deststoretype jks
keytool -importkeystore -srckeystore sw3-ndb.p12 -srcstoretype pkcs12 -destkeystore tlsKeyStore
-deststoretype jks
```

- Step 12** List and verify content in the java tlsKeyStore using the **keytool** command.

**Example:**

```
docker@docker-virtual-machine:~/TLS$ keytool -list -v -keystore tlsKeyStore | more
```

---

**What to do next**

Proceed to the subsequent task, *Creating the TLS TrustStore File*.

## Creating the TLS TrustStore File

TrustStore is created from the self-signed certificates that are generated for one or more switches. It holds certificates for one or more switches in the controller. This section describes how to create a Truststore using the self-signed certificate created in [Generating self-signed certificate and key](#) section. If you have multiple switches in the controller, each switch will have separate certificate file (For example, sw1-ndb-cert.pem, sw2-ndb-cert.pem)



## Procedure

- Step 1** Log in to the server.
- Step 2** Convert the certificate file (For example, sw1-ndb-cert.pem) to a Java TrustStore (tlsTrustStore) file using the **keytool** command. Enter a password when prompted to create a password protected Java TrustStore (tlsTrustStore) file. The password should be at least six characters. Use the jre/bin installed in the java directory.

### Example:

```
docker@docker-virtual-machine:~/TLS$./relativePath/keytool -import -alias sw1 -file sw1-ndb-cert.pem
-keystore tlsTrustStore -storetype jks
Enter Export Password: cisco123
Verifying - Enter Export Password: cisco123
Enter a password at the prompt. Use the same password that you entered in the previous Step (cisco123)
```

### Note

If a NDB controller manages multiple switches, repeat this step for all the switches to add all switch keys into the same TrustStore. For example:

```
docker@docker-virtual-machine:~/TLS$ keytool -import -alias sw2 -file sw2-ndb-cert.pem -keystore
tlsTrustStore
docker@docker-virtual-machine:~/TLS$ keytool -import -alias sw3 -file sw3-ndb-cert.pem -keystore
tlsTrustStore
// Here sw2 and sw3 are alias for switch 2 and switch 3 for identification purpose.
```

- Step 3** List and verify keys for multiple switches in the same tlsTrustStore using the **keytool** command.

### Example:

```
docker@docker-virtual-machine:~/TLS$ keytool -list -v -keystore tlsTrustStore | more
```

## Starting NDB with TLS

To start NDB with TLS, complete these steps:

## Procedure

- Step 1** Log in to the NDB server.
- Step 2** Stop the NDB application, if running, using the **runndb.sh** command

### Example:

```
./runndb.sh -stop
Controller with PID: 17426 -- Stopped!
```

### Note

When onboarding a device, ensure to provide the FQDN or IP address of the device, that was provided during the certificate generation for that device.

- Step 3** Copy the tlsKeystore and tlsTruststore files that you created to configuration folder of NDB (ndb/configuration).

**Example:**

```
cp tlskeystore /root/ndb/configuration
cp tlsTrustStore /root/ndb/configuration
```

**Step 4** Start the NDB application with TLS using the **runndb.sh** script.

**Example:**

```
./runndb.sh -tls -tlskeystore ./configuration/tlsKeyStore -tlstruststore ./configuration/tlsTrustStore
```

**Example:**

To start NDB with default username (admin) and a non-default password (for example, pwd123):

```
./runndb.sh -osgiPasswordSync -tls -tlskeystore ./configuration/tlsKeyStore -tlstruststore
./configuration/tlsTrustStore
```

If ndb password is changed, OSGi webconsole password needs to be changed.

To set non-default OSGi webconsole password, enter ndb Admin Password [default]:  
(Type the non-default password which was set)

**Note**

To disable TLS, run the **./runndb.sh -notls** command. To disable TLS and start NDB, run the **./runndb.sh -notls -start** command. Before disabling TLS, ensure to *stop* NDB. After TLS is disabled, the port number for the devices connected to the NDB server should be changed to 80.

## Configuring TLS KeyStore and TrustStore Passwords on Nexus Dashboard Data Broker

You need to configure TLS KeyStore and TrustStore passwords to enable Nexus Dashboard Data Broker to read password protected TLS KeyStore and TrustStore files. To configure TLS KeyStore and TrustStore passwords on Nexus Dashboard Data Broker, complete these steps:

**Procedure**

**Step 1** Log in to the Nexus Dashboard Data Broker server.

**Step 2** Navigate to bin directory.

**Example:**

```
cd ndb/bin
```

**Step 3** Configure the TLS KeyStore and TrustStore passwords using the **ndb config-keystore-passwords** command.

**Example:**

```
./ndb config-keystore-passwords --user admin --password admin --url https://ip-address_localhost:8443
--verbose --prompt --keystore-password keystore_password --truststore-password truststore_password
Please enter your password: <enter the NDB GUI admin password>
```

In case Nexus Dashboard Data Broker is configured with AAA (Tacacs/LDAP/Radius), and if the above command, **ndb config-keystore-passwords** fails, and you see a *401 unauthorized* error, then:

a. Go to `ndb` or `xnc` directory.

- b. Stop the Nexus Dashboard Data Broker server using `./runndb.sh -stop`.
- c. Enable the flag `enable.LocalUser.Authentication` by changing the value from *false* to *true* in the Nexus Dashboard Data Broker `config.ini` file.
- d. Start the Nexus Dashboard Data Broker server using `./runndb.sh -start`.
- e. Run the `ndb config-keystore-passwords` command again.

**Note**

In a HA environment, you need to run the above procedure for all the Nexus Dashboard Data Broker servers in the cluster.

After the TLS is enabled on Nexus Dashboard Data Broker, all the connections between Nexus Dashboard Data Broker server and Nexus Dashboard Data Broker switch are established using port 443. Ensure that you change device connections in Nexus Dashboard Data Broker to use port 443.

Upon successfully completing these steps, you can add nexus switch in the controller using port 443. Use FQDN of the switch to add the device to the Nexus Dashboard Data Broker controller.

You can verify the Certificate information using the WebUI Sandbox of the switch.

## Generating TLS 3rd Party Certification Between NDB Server and NDB Switch for NXAPI

This section describes how to generate TLS 3rd party certification between NDB server and NDB Switch. You need to request for a separate certificate and key for each switch in your network. TLS communication between NDB switch and NDB server uses port 443 only.

Complete the following steps to generate TLS 3rd party certification between NDB Server and NDB Switch for NXAPI:

- [Obtaining Certificates from a Certification Authority](#)
- [Generating the Java `tlsKeyStore` and `tlsTrustStore` for NDB Controller](#)
- [Starting NDB with TLS](#)
- [Configuring TLS KeyStore and Truststore Passwords on NDB](#)

**Note**

Complete all the steps under both the sections to ensure successful communication between the controller and the switch over TLS.

### Obtaining Certificates from a Certification Authority

You can obtain certificate from a Certification Authority (CA) in two ways. You can either directly approach a CA for both the private key and certificate. The CA will generate a private key on your behalf along with the certificate that contains the public key with issuing CA's signature.

In the other approach, you can generate a private key using tools such as openssl and generate a Certificate Signing Request (CSR) to a certificate issuing authority. The CA generates the certificates with public key using the user identity information from CSR.

### Before you begin

Ensure that you have domain name configured in the switch using **ip domain-name** command for each NDB switch that acts as the Fully Qualified Domain Name (FQDN) for the switch. For example:

```
conf t
ip domain-name cisco.com
hostname N9k-117
end
```

The FQDN for the switch is configured to N9K-117.cisco.com.

## Procedure

**Step 1** Log in to the server.

**Step 2** Generate the private key (cert.key) and certificate signing request (cert.req) using openssl command.

### Note

If you have multiple switches, generate the certificate file and private key for each switch.

### Example:

```
docker@docker-virtual-machine:~/Mallik/TLS_CA$ openssl req -newkey rsa:2048 -sha256 -keyout cert.key
-keyform PEM -out cert.req -outform PEM
```

```
Generating a 2048 bit RSA private key
```

```
.....+++
```

```
.....+++
```

```
writing new private key to 'cert.key'
```

```
Enter PEM pass phrase: ☐ cisco123
```

```
Verifying - Enter PEM pass phrase: ☐ cisco123
```

```

```

You are about to be asked to enter information that will be incorporated into your certificate request.

What you are about to enter is what is called a Distinguished Name or a DN.

There are quite a few fields but you can leave some blank

For some fields there will be a default value,

If you enter '.', the field will be left blank.

```

```

```
Country Name (2 letter code) [GB]:US
```

```
State or Province Name (full name) [Berkshire]:CA
```

```
Locality Name (eg, city) [Newbury]:SJ
```

```
Organization Name (eg, company) [My Company Ltd]:cisco
```

```
Organizational Unit Name (eg, section) []:insbu
```

```
Common Name (eg, your name or your server's hostname) []:N9K-117.cisco.com
```

```
Email Address []:myname@cisco.com
```

```
Please enter the following 'extra' attributes
```

```
to be sent with your certificate request
```

```
A challenge password []: ☐ cisco123
```

```
An optional company name []:☐ cisco123
```

```
docker@docker-virtual-machine: # ls
```

```
cert.key cert.req
```

**Step 3** Verify the CSR using the openssl command.

**Example:**

```
docker@docker-virtual-machine:~/Mallik/TLS_CA$ openssl req -noout -text -in cert.req
```

**Step 4** The private key is generated with a security passphrase. You may need to unencrypt the private key. To remove the passphrase from the private key, use the openssl command.

**Example:**

```
docker@docker-virtual-machine:~/Mk/TLS_CA$ ls
cert.key cert.req
docker@docker-virtual-machine:~/Mk/TLS_CA$ cp cert.key cert.keybkp
docker@docker-virtual-machine:~/Mk/TLS_CA$ rm cert.key
docker@docker-virtual-machine:~/Mk/TLS_CA$ openssl rsa -in cert.keybkp -out cert.key

Enter pass phrase for cert.keybkp: cisco123
```

**Note**

Repeat this step to remove passphrase from private keys for all the switches.

**Note**

Depending on the tier of the CA you choose, you can get up to three certificates (certificate chain) for each CSR. This means you get three certificates (root, intermediate and domain) from CA for each NDB switch. You need to check with CA to identify each type of certificate. Certificate naming convention might be different for different certifying authorities. For example: test-root-ca-2048.cer (root), test-ssl-ca.cer (intermediate), N9K-117.cisco.com.cer (domain).

Certificates are mostly shared in .PEM file format.

The cert.req file data needs to be submitted to 3rd party certification authority. Follow the relevant procedures and get the three (certificate) files.

**Step 5** Create a single certificate file from the three certificate files using the **cat** command. The concatenation should be done in the following order, domain certificate, root certificate, and intermediate certificate. Syntax for **cat** command: *cat domain certificateroot certificateintermediate certificate > server.cer*.

**Example:**

```
$cat N9K-117.cisco.com.cer test-root-ca-2048.cer test-ssl-ca.cer > server.cer
```

**Step 6** Edit the newly created server.cer file to separate the concatenated END and BEGIN lines. Do not delete anything in the file.

**Example:**

```
-----END CERTIFICATE-----BEGIN CERTIFICATE-----
```

```
///// Modify the above line like this by adding a line feed between the two.
-----END CERTIFICATE-----
-----BEGIN CERTIFICATE-----
```

**Note**

Repeat this step all the switches.

**Step 7** Log into the NDB switch.

**Step 8** Copy the private key (cert.key) and the certificate from CA (server.cer) to the switch using the copy command.

**Example:**

```

N9K-117# copy scp://docker@10.16.206.250/home/docker/Mallik/TLS_CA_june_23/server.cer bootflash:
Enter vrf (If no input, current vrf 'default' is considered): management
docker@10.16.206.250's password:
server.cer
100% 4676 4.6KB/s 00:00
Copy complete, now saving to disk (please wait)...
```

```

N9K-117# copy scp://docker@10.16.206.250/home/docker/Mallik/TLS_CA_june_23/cert.key bootflash:
Enter vrf (If no input, current vrf 'default' is considered): management
docker@10.16.206.250's password:
cert.key
100%
Copy complete, now saving to disk (please wait)...
```

**Note**

Repeat this step for all the switches.

**Step 9** Configure the certificate file, sw1-ca.pem, and keyfile, sw1-ca.key in the switch using the **nxapi** command.

**Example:**

```

N9K-117 (config)# nxapi certificate httpskey keyfile bootflash:cert.key
Upload done. Please enable. Note cert and key must match.
N9K-117 (config)#
N9K-117 (config)# nxapi certificate httpsCRT certfile bootflash:server.cer
Upload done. Please enable. Note cert and key must match.
N9K-117 (config)#
```

**Note**

If you have multiple switches, configure the corresponding certificate and private key to each switch.

**Step 10** Enable self-signed certificates on the switch using the **nxapi certificate** command.

**Example:**

```

N9K-117 (config)# nxapi certificate enable
N9K-117 (config)#
```

**Note**

Ensure that there is no error while enabling self-signed certificates on the switch.

## Creating TLS Keystore and Truststore Files for NDDB Controller

NDDB uses certificates and keys to secure communication between switches. It stores the keys and certificates in keystores. These files are stored as `tlsTruststore` and `tlsKeystore` files in NDDB. Complete the following steps to generate the Java `tlsKeyStore` and `tlsTrustStore` files for NDDB Controller:

**Procedure**

**Step 1** Copy the `cert.key` and `server.cer` created in the *Obtaining Certificates from a Certification Authority* section into the current directory (TLS). Select the certificate and key files for a single switch. These files were earlier generated for all the switches connecting to the controller. Using the `server.cer` and `cert.key` for the current switch, create the TLS KeyStore File.

If multiple switches are connected, repeat this step for each switch separately.

**Step 2** Copy and convert the server.cer and cert.key files to .PEM format using the **copy** command.

**Example:**

```
cp cert.key sw1-ndb-privatekey.pem
cp server.cer sw1-ndb-cert.pem
```

**Step 3** Concatenate the private key (sw1-ndb-privatekey.pem) and certificate file (sw1-ndb-cert.pem) into a single .PEM file using the **cat** command.

**Example:**

```
cat sw1-ndb-privatekey.pem sw1-ndb-cert.pem > sw1-ndb.pem
```

**Step 4** Convert the .PEM file to .P12 format using the **openssl** command. Enter the export password when prompted. The password must contain at least 6 characters, for example, cisco123. The sw1-ndb.pem file is converted to a password-protected sw1-ndb.p12 file.

**Example:**

```
docker@docker-virtual-machine:~/TLS$ openssl pkcs12 -export -out sw1-ndb.p12 -in sw1-ndb.pem
Enter Export Password: cisco123
Verifying - Enter Export Password: cisco123
Enter a password at the prompt. Use the same password that you entered in the previous Step (cisco123)
```

**Step 5** Convert the sw1-ndb.p12 to a password protected Java KeyStore (tlsKeyStore) file using the **keytool** command. This command converts the sw1-ndb.p12 file to a password-protected tlsKeyStore file.

**Example:**

```
docker@docker-virtual-machine:~/TLS$ keytool -importkeystore -srckeystore sw1-ndb.p12 -srcstoretype
pkcs12 -destkeystore tlsKeyStore -deststoretype jks
Enter Destination Keystore password:cisco123
```

**Note**

By default an alias named “1” is stored in tlsKeyStore for the first switch. If the NDB controller is managing multiple switches, repeat this step for all the switches. When you add the second switch, the utility allows you to rename the first switch alias and also provides a provision to rename alias for the new switch. For example, see below.

```
keytool -importkeystore -srckeystore sw2-ndb.p12 -srcstoretype pkcs12 -destkeystore tlsKeyStore
-deststoretype jks
keytool -importkeystore -srckeystore sw3-ndb.p12 -srcstoretype pkcs12 -destkeystore tlsKeyStore
-deststoretype jks
```

**Step 6** List and verify content in the java tlsKeyStore using the keytool command.

**Example:**

```
docker@docker-virtual-machine:~/TLS$ keytool -list -v -keystore tlsKeyStore | more
```

**Step 7** Convert the certificate file (sw1-ndb-cert.pem) to a Java TrustStore (tlsTrustStore) file using the **keytool** command. Enter a password when prompted to create a password protected Java TrustStore (tlsTrustStore) file. The password should be at least six characters.

**Example:**

```
docker@docker-virtual-machine:~/TLS$ keytool -import -alias sw1 -file sw1-ndb-cert.pem -keystore
tlsTrustStore -storetype jks
Enter keystore password: cisco123
Re-enter new password: cisco123
Owner: EMAILADDRESS=myname@cisco.com, CN=localhost, OU=insbu, O=cisco, L=SJ, ST=CA, C=US
Issuer: EMAILADDRESS=myname@cisco.com, CN=localhost, OU=insbu, O=cisco, L=SJ, ST=CA, C=US
```

```

Serial number: c557f668a0dd2ca5
Valid from: Thu Jun 15 05:43:48 IST 2017 until: Sun Jun 13 05:43:48 IST 2027
Certificate fingerprints:
MD5: C2:7B:9E:26:31:7A:74:25:55:DF:A7:91:C9:5D:20:A3
SHA1: 3C:DF:66:96:72:12:CE:81:DB:AB:58:30:60:E7:CC:04:4D:DF:6D:B2
SHA256: DD:FB:3D:71:B4:B8:9E:CE:97:A3:E4:2D:D3:B6:90:CD:76:A8:5F:84:77:78:BE:49:6C:04:01:84:62:2C:2F:EB
Signature algorithm name: SHA256withRSA
Version: 3

```

Extensions:

```

#1: ObjectId: 2.5.29.35 Criticality=false
AuthorityKeyIdentifier [
 KeyIdentifier [
 0000: 0D B3 CF 81 66 4A 33 4E EF 86 7E 26 C3 50 9B 73fJ3N...&.P.s
 0010: 38 EF DF 40 8..@
]
]

#2: ObjectId: 2.5.29.19 Criticality=false
BasicConstraints:[
 CA:true
 PathLen:2147483647
]

#3: ObjectId: 2.5.29.14 Criticality=false
SubjectKeyIdentifier [
 KeyIdentifier [
 0000: 0D B3 CF 81 66 4A 33 4E EF 86 7E 26 C3 50 9B 73fJ3N...&.P.s
 0010: 38 EF DF 40 8..@
]
]

```

```

Trust this certificate? [no]: yes
Certificate was added to keystore

```

#### Note

If a NDB controller manages multiple switches, repeat this step for all the switches to add all switch keys into the same TrustStore. For example:

```

keytool -import -alias sw2 -file sw2-ndb-cert.pem -keystore tlsTrustStore
keytool -import -alias sw3 -file sw3-ndb-cert.pem -keystore tlsTrustStore

```

**Step 8** List and verify keys for multiple switches in the same tlsTrustStore using the keytool command.

#### Example:

```

docker@docker-virtual-machine:~/TLS$ keytool -list -v -keystore tlsTrustStore | more

```

## Starting NDB with TLS

To start NDB with TLS, complete these steps:

### Procedure

**Step 1** Log in to the NDB server.



**Step 2** Stop the NDB application, if running, using the **runndb.sh** command

**Example:**

```
./runndb.sh -stop
Controller with PID: 17426 -- Stopped!
```

**Note**

When onboarding a device, ensure to provide the FQDN or IP address of the device, that was provided during the certificate generation for that device.

**Step 3** Copy the **tlsKeystore** and **tlsTruststore** files that you created to configuration folder of NDB (**ndb/configuration**).

**Example:**

```
cp tlskeystore /root/ndb/configuration
cp tlsTrustStore /root/ndb/configuration
```

**Step 4** Start the NDB application with TLS using the **runndb.sh** script.

**Example:**

```
./runndb.sh -tls -tlskeystore ./configuration/tlsKeyStore -tlstruststore ./configuration/tlsTrustStore
```

**Example:**

To start NDB with default username (admin) and a non-default password (for example, **pwd123**):

```
./runndb.sh -osgiPasswordSync -tls -tlskeystore ./configuration/tlsKeyStore -tlstruststore
./configuration/tlsTrustStore
```

If **ndb password** is changed, OSGi webconsole password needs to be changed.

To set non-default OSGi webconsole password, enter **ndb Admin Password [default]:**  
(Type the non-default password which was set)

**Note**

To disable TLS, run the **./runndb.sh -notls** command. To disable TLS and start NDB, run the **./runndb.sh -notls -start** command. Before disabling TLS, ensure to *stop* NDB. After TLS is disabled, the port number for the devices connected to the NDB server should be changed to 80.

---

## Configuring TLS KeyStore and TrustStore Passwords on Nexus Dashboard Data Broker

You need to configure TLS KeyStore and TrustStore passwords to enable Nexus Dashboard Data Broker to read password protected TLS KeyStore and TrustStore files. To configure TLS KeyStore and TrustStore passwords on Nexus Dashboard Data Broker, complete these steps:

### Procedure

---

**Step 1** Log in to the Nexus Dashboard Data Broker server.

**Step 2** Navigate to **bin** directory.

**Example:**

```
cd ndb/bin
```

**Step 3** Configure the TLS KeyStore and TrustStore passwords using the **ndb config-keystore-passwords** command.

**Example:**

```
./ndb config-keystore-passwords --user admin --password admin --url https://ip-address_localhost:8443
--verbose --prompt --keystore-password keystore_password --truststore-password truststore_password
Please enter your password: <enter the NDB GUI admin password>
```

In case Nexus Dashboard Data Broker is configured with AAA (Tacacs/LDAP/Radius), and if the above command, **ndb config-keystore-passwords** fails, and you see a *401 unauthorized* error, then:

- a. Go to `ndb` or `xnc` directory.
- b. Stop the Nexus Dashboard Data Broker server using `./runndb.sh -stop`.
- c. Enable the flag `enable.LocalUser.Authentication` by changing the value from *false* to *true* in the Nexus Dashboard Data Broker **config.ini** file.
- d. Start the Nexus Dashboard Data Broker server using `./runndb.sh -start`.
- e. Run the **ndb config-keystore-passwords** command again.

**Note**

In a HA environment, you need to run the above procedure for all the Nexus Dashboard Data Broker servers in the cluster.

After the TLS is enabled on Nexus Dashboard Data Broker, all the connections between Nexus Dashboard Data Broker server and Nexus Dashboard Data Broker switch are established using port 443. Ensure that you change device connections in Nexus Dashboard Data Broker to use port 443.

Up on successfully completing these steps, you can add nexus switch in the controller using port 443. Use FQDN of the switch to add the device to the Nexus Dashboard Data Broker controller.

You can verify the Certificate information using the WebUI Sandbox of the switch.

## Generating TLS Self-Signed Certification Between WebUI Browser and NDB Server

You can secure communication between a Web browser and NDB server running in centralized mode using self-signed certificates. This section describes how to generate a self-signed certificate to secure communication between a WebUI browser and NDB application. By default Cisco NDB is shipped with default certificate which is issued to Cisco NDB and issued by Cisco NDB with default validity. You can use the **generateWebUICertificate.sh** script under configuration folder to create self-signed certificates. For Cisco NDB releases 3.5 and earlier, these certificates are valid for 6 months. Starting with Cisco NDB release 3.6, default validity of a certificate is 6 months but you can configure the validity of a certificate.



**Note** You can create self-signed TLS certificates for NDB in Centralized mode only.

- Generating TLS Self-Signed Certification Between WebUI Browser and NDB Server Running in Centralized Mode

## Generating TLS Self-Signed Certification Between WebUI Browser and NDB Server Running in Centralized Environment

Complete the following steps to generate TLS self-signed certification between WebUI Browser and NDB Server running in Centralized mode:

### Procedure

**Step 1** Log into the NDB server and change the current directory `\ndb\configuration`.

**Example:**

```
[root@RHEL-VM-NDB-ACI]# cd \ndb\configuration
```

**Step 2** Generate the TLS self-signed certificate using the `generateWebUICertificate.sh` script.

**Example:**

```
[root@RHEL-VM-NDB-ACI configuration]# ./generateWebUICertificate.sh
```

```

Enter Fully qualified domain name :

NDB-browser This can be FQDN of the NDB java application as well

Enter Organizational unit :

INSBU

Enter Organization :

cisco

Enter Location :

SJ

Enter State :

CA

Enter Country :

USA

Enter keypass :

```

```

cisco123

Enter storepass :

cisco123

Enter the validity in number of days :

365 ☐ in NDB 3.5 this script will let you to specify the certificate validity.

Below process will rename the existing key file to <old_keystore>, will generate
a new key file. Do you want to continue (y/n) ?

Y

Self-Signed Certificate Created

Alias name: cisco
Creation date: Jan 6, 2019
Entry type: PrivateKeyEntry
Certificate chain length: 1
Certificate[1]:
Owner: CN=NDB-browser, OU=INSBU, O=cisco, L=SJ, ST=CA, C=USA
Issuer: CN=NDB-browser, OU=INSBU, O=cisco, L=SJ, ST=CA, C=USA
Serial number: b404be5
Valid from: Sun Jan 06 20:22:05 PST 2019 until: Mon Jan 06 20:22:05 PST 2020
Certificate fingerprints:
 MD5: 71:07:F6:4E:57:6A:08:3A:AD:06:32:B3:6C:5F:8F:52
 SHA1: 04:08:B9:D5:B7:EB:ED:E0:F9:22:49:14:FA:C6:09:39:22:32:43:A2
 SHA256:
34:D9:EB:34:0A:52:D1:4A:DD:F1:8B:14:D0:84:E4:1C:57:8B:2B:99:9B:E5:A1:4C:C7:8C:CD:AE:24:31:49:75

 Signature algorithm name: SHA256withRSA
 Version: 3

Extensions:

#1: ObjectId: 2.5.29.14 Criticality=false
SubjectKeyIdentifier [
KeyIdentifier [
0000: 63 8A 92 8F 6F 0F 45 BD EE 55 C5 A8 99 3B F6 F7 c...o.E..U...;...
0010: AC FA 4A 21 ..J!
]
]

Displayed the generated keystore

Configured the keystore details on tomcat-server.xml

```

```

The newly generated key will be used on next NDB restart. Do you want to restart NDB
now (y/n) ?

y
Doesn't seem any Controller daemon is currently running
Running controller in background with PID: 13573, to connect to it please SSH to
this host on port 2400
NDB GUI can be accessed using below URL:
[https://10.16.206.160:8443]
[https://[fe80::250:56ff:fe90:b764]:8443]
[https://10.16.206.159:8443]
[https://192.168.1.123:8443]
[https://[fe80::250:56ff:fe90:9c79]:8443]

NDB Restarted

```

**Note**

The **generateWebUICertificate.sh** script reloads the NDB application to ensure that the browser starts using this certificate when we access NDB java application from the browser.

**Step 3**

Decode the generated certificate using the **keytool -list -v -keystore keystore\_Name** command. Enter the store password when prompted.

**Example:**

```

[root@RHEL-VM-NDB-ACI configuration]# keytool -list -v -keystore keystore
Enter keystore password:

Keystore type: JKS
Keystore provider: SUN

Your keystore contains 1 entry

Alias name: cisco
Creation date: Jul 6, 2019
Entry type: PrivateKeyEntry
Certificate chain length: 1
Certificate[1]:
Owner: CN=NDB-browser, OU=INSBU, O=cisco, L=SJ, ST=CA, C=USA
Issuer: CN=NDB-browser, OU=INSBU, O=cisco, L=SJ, ST=CA, C=USA
Serial number: b404be5
Valid from: Sun Jan 06 20:22:05 PST 2019 until: Mon Jan 06 20:22:05 PST 2020
Certificate fingerprints:
 MD5: 71:07:F6:4E:57:6A:08:3A:AD:06:32:B3:6C:5F:8F:52
 SHA1: 04:08:B9:D5:B7:EB:ED:E0:F9:22:49:14:FA:C6:09:39:22:32:43:A2
 SHA256:
34:D9:EB:34:0A:52:D1:4A:DD:F1:8B:14:D0:84:E4:1C:57:8B:2B:99:9B:E5:A1:4C:C7:8C:CD:AE:24:31:49:75
 Signature algorithm name: SHA256withRSA
 Version: 3

Extensions:

#1: ObjectId: 2.5.29.14 Criticality=false
SubjectKeyIdentifier [
KeyIdentifier [
0000: 63 8A 92 8F 6F 0F 45 BD EE 55 C5 A8 99 3B F6 F7 c...o.E..U...;..

```

```
0010: AC FA 4A 21 ..J!
]
]
```

```


```

**Step 4** The self-signed certificates are generated in JKS format which is not compatible with the browsers. Hence, you need to convert these certificates into PKCS12 format before importing the certificate in the browser. Complete the following steps to convert JKS format certificate to PKCS12 format. Convert JKS format certificate into PKCS12 format using the **keytool** command.

**Note**

Ensure that you keep a copy of the original certificates before proceeding with the conversion.

**Example:**

```
keytool -importkeystore -srckeystore keystore -srcstorepass cisco123 -srckeypass cisco123 -destkeystore
keystore.p12 -deststoretype PKCS12 -srcalias cisco -deststorepass cisco123 -destkeypass cisco123
```

**Note**

The inputs in the **keytool** command should match the inputs provided during UI certificate generation.

**Note**

The resulting certificate file (keystore.p12) is in PKCS12 format.

**Step 5** Add this certificate to Trusted Root certificate store on the browser. See help for respective Web browsers about how to add the certificate to the Trusted Root certificate store.

## Generating TLS Self-Signed Certificate Between Web Browser and NDB Server Running in Embedded Mode Using Guest Shell Environment

To generate TLS self-signed certificate between Web browser and NDB server running in embedded mode using Guest Shell environment, complete the following steps.

### Procedure

**Step 1** Connect to Guest Shell using **guestshell** command.

**Example:**

```
N9K-C93108TC-EX-108# guestshell
[admin@guestshell ~]$
[admin@guestshell ~]$
```

**Step 2** Change the current directory to `\ndb\configuration`.

**Example:**

```
[admin@guestshell ~]$ cd \ndb\configuration
```

**Step 3** Generate the TLS self-signed certificate using the  
/home/admin/ndb/configuration/generateWebUICertificate.sh script.

**Example:**

```
[root@RHEL-VM-NDB-ACI configuration]# ./generateWebUICertificate.sh

Enter Fully qualified domain name :

NDB-browser This can be FQDN of the NDB java application as well

Enter Organizational unit :

INSBU

Enter Organization :

cisco

Enter Location :

SJ

Enter State :

CA

Enter Country :

USA

Enter keypass :

cisco123

Enter storepass :

cisco123

Enter the validity in number of days :

365 in NDB 3.5 this script will let you to specify the certificate validity.

Below process will rename the existing key file to <old_keystore>, will generate
a new key file. Do you want to continue (y/n) ?

Y

Self-Signed Certificate Created

Alias name: cisco
```

```

Creation date: Jan 6, 2019
Entry type: PrivateKeyEntry
Certificate chain length: 1
Certificate[1]:
Owner: CN=NDB-browser, OU=INSBU, O=cisco, L=SJ, ST=CA, C=USA
Issuer: CN=NDB-browser, OU=INSBU, O=cisco, L=SJ, ST=CA, C=USA
Serial number: b404be5
Valid from: Sun Jan 06 20:22:05 PST 2019 until: Mon Jan 06 20:22:05 PST 2020
Certificate fingerprints:
 MD5: 71:07:F6:4E:57:6A:08:3A:AD:06:32:B3:6C:5F:8F:52
 SHA1: 04:08:B9:D5:B7:EB:ED:E0:F9:22:49:14:FA:C6:09:39:22:32:43:A2
 SHA256:
34:D9:EB:34:0A:52:D1:4A:DD:F1:8B:14:D0:84:E4:1C:57:8B:2B:99:9B:E5:A1:4C:C7:8C:CD:AE:24:31:49:75

 Signature algorithm name: SHA256withRSA
 Version: 3

```

#### Extensions:

```

#1: ObjectId: 2.5.29.14 Criticality=false
SubjectKeyIdentifier [
KeyIdentifier [
0000: 63 8A 92 8F 6F 0F 45 BD EE 55 C5 A8 99 3B F6 F7 c...o.E..U...;...
0010: AC FA 4A 21 ..J!
]
]

```

```

Displayed the generated keystore

Configured the keystore details on jetty-ssl-context.xml

The newly generated key will used on next NDB restart. Do you want to restart NDB
now (y/n) ?

n

The newly generated key will be used on the next NDB restart.

```

#### Note

Manually reboot guestshell using the **guestshell reboot** command to ensure that the browser starts using this certificate when you access NDB java application from the browser.

#### Step 4

Decode the generated certificate using the **keytool -list -v -keystore keystore\_Name** command. Enter the store password when prompted.

#### Example:

```

[root@RHEL-VM-NDB-ACI configuration]# keytool -list -v -keystore keystore
Enter keystore password:

```



```

Keystore type: JKS
Keystore provider: SUN

Your keystore contains 1 entry

Alias name: cisco
Creation date: Jul 6, 2019
Entry type: PrivateKeyEntry
Certificate chain length: 1
Certificate[1]:
Owner: CN=NDB-browser, OU=INSBU, O=cisco, L=SJ, ST=CA, C=USA
Issuer: CN=NDB-browser, OU=INSBU, O=cisco, L=SJ, ST=CA, C=USA
Serial number: b404be5
Valid from: Sun Jan 06 20:22:05 PST 2019 until: Mon Jan 06 20:22:05 PST 2020
Certificate fingerprints:
 MD5: 71:07:F6:4E:57:6A:08:3A:AD:06:32:B3:6C:5F:8F:52
 SHA1: 04:08:B9:D5:B7:EB:ED:E0:F9:22:49:14:FA:C6:09:39:22:32:43:A2
 SHA256:
34:D9:EB:34:0A:52:D1:4A:DD:F1:8B:14:D0:84:E4:1C:57:8B:2B:99:9B:E5:A1:4C:C7:8C:CD:AE:24:31:49:75
 Signature algorithm name: SHA256withRSA
 Version: 3

Extensions:

#1: ObjectId: 2.5.29.14 Criticality=false
SubjectKeyIdentifier [
KeyIdentifier [
0000: 63 8A 92 8F 6F 0F 45 BD EE 55 C5 A8 99 3B F6 F7 c...o.E..U...;..
0010: AC FA 4A 21 ..J!
]
]


```

**Step 5**

The self-signed certificates are generated in JKS format which is not compatible with the browsers. You need to convert these certificates into PKCS12 format before importing the certificate in the browser. Complete the following steps to convert JKS format certificate to PKCS12 format. Convert JKS format certificate into PKCS12 format using the **keytool** command.

**Note**

Ensure that you keep a copy of the original certificates before proceeding with the conversion.

**Example:**

```
keytool -importkeystore -srckeystore keystore -srcstorepass cisco123 -srckeypass cisco123 -destkeystore
keystore.p12 -deststoretype PKCS12 -srcalias cisco -deststorepass cisco123 -destkeypass cisco123
```

**Note**

The inputs in the **keytool** command should match the inputs provided during UI certificate generation.

**Note**

The resulting certificate file (keystore.p12) is in PKCS12 format.

**Step 6**

Upload the CA certificate into Trusted Root certificate store of Web browser. See help for respective Web browsers about how to add the certificate to the Trusted Root certificate store. Use the password that you created while creating the certificate when prompted while uploading the certificate to the Web browser.

**Step 7** Restart the Guest Shell to restart the NDB.

## Generating TLS 3rd Party Certification Between WebUI Browser and NDB Server

You can secure communication between a Web browser and NDB server running in centralized mode. This section describes how to generate CA certificates, convert the certificates into JKS format, and upload the certificates into a Web browser. To generate a CA certificate, you need to generate a Certificate Signing Request (CSR) and send it to a Certificate issuing authority (CA). You can use an open source tool to generate a CSR.

- Generating TLS 3rd Party Certification Between WebUI Browser and NDB Server Running in Centralized Mode

## Generating TLS 3rd Party Certification Between WebUI Browser and NDB Server Running in Centralized Mode

Complete these steps to generate TLS 3rd party certification between WebUI browser and NDB server running in centralized mode:

### Procedure

**Step 1** Generate Certificate Signing Request (CSR) using the **openssl req** command.

#### Example:

```
[root@NDB-server ~]# openssl req -newkey rsa:2048 -sha256 -keyout ndb-server.key -keyform PEM -out
ndb-server.req -outform PEM
Generating a 2048 bit RSA private key
...+++
.....+++
writing new private key to 'ndb-server.key'
Enter PEM pass phrase: ☐ cisco123
Verifying - Enter PEM pass phrase: ☐ cisco123

You are about to be asked to enter information that will be incorporated
into your certificate request.
What you are about to enter is what is called a Distinguished Name or a DN.
There are quite a few fields but you can leave some blank
For some fields there will be a default value,
If you enter '.', the field will be left blank.

Country Name (2 letter code) [GB]:US
State or Province Name (full name) [Berkshire]:CA
Locality Name (eg, city) [Newbury]:SJ
```

```

Organization Name (eg, company) [My Company Ltd]:cisco
Organizational Unit Name (eg, section) []:insbu
Common Name (eg, your name or your server's hostname) []:ndb-server.cisco.com
Email Address []:chburra@cisco.com

```

```

Please enter the following 'extra' attributes
to be sent with your certificate request
A challenge password []:cisco123
An optional company name []:cisco123

```

```

[root@NDB-server ~]# ls
ndb-server.req ndb-server.key

```

**Note**

The ndb-server.req (CSR) file is submitted to the certificate issuing authority (CA).

**Note**

You need to use the same information when exporting the CA provided certificate into browser. The CSR file, cert.req, is submitted to CA.

**Step 2**

To verify or view the CSR request, use the **openssl req** command.

**Example:**

```

[root@NDB-server ~]# openssl req -noout -text -in ndb-server.req
Certificate Request:
 Data:
 Version: 0 (0x0)
 Subject: C=US, ST=CA, L=SJ, O=cisco, OU=insbu,
 CN=ndb-server.cisco.com/emailAddress=chburra@cisco.com
 Subject Public Key Info:
 Public Key Algorithm: rsaEncryption
 RSA Public Key: (2048 bit)
 Modulus (2048 bit):
 00:b5:30:75:e8:c8:5f:05:3b:0e:4f:aa:00:d9:64:
 8d:bf:b2:80:20:56:c3:be:b0:4c:e0:52:e5:be:d8:
 d2:74:85:4e:8a:ba:d3:1e:30:76:bf:e5:de:7d:51:
 11:79:8e:bc:96:38:7a:23:5a:26:31:50:50:fa:29:
 44:ab:56:b6:0d:41:38:ba:d1:d5:b4:e3:ba:a3:6c:
 4a:35:73:27:d9:fd:5c:4b:21:85:1a:f9:4d:b0:9e:
 f3:ae:ce:49:98:ef:a2:f8:11:ab:bd:7e:64:ee:68:
 68:19:6e:8f:3c:54:30:0f:28:01:13:b0:3d:34:b8:
 f9:f5:cc:4a:84:d8:e5:d2:27:47:cc:83:76:92:ad:
 92:62:f3:a3:35:be:14:ce:38:af:2a:c5:2e:fa:b8:
 31:6b:71:cd:56:00:1f:0d:cc:b0:f8:fc:b0:52:91:
 f8:9c:cf:45:13:c9:b5:86:fa:30:dd:88:78:01:15:
 fb:5c:c9:6f:5b:b7:80:28:6c:86:54:c0:f2:5f:35:
 70:82:49:5c:79:1c:f2:23:dd:50:d5:47:12:37:a3:
 3f:f9:1d:90:8f:c0:e8:18:09:2e:66:8d:c3:72:17:
 7f:7d:27:da:b1:cc:26:2d:8c:6b:ee:c5:e8:b5:78:
 31:7c:bb:ba:6d:2c:e5:a3:29:7e:c1:4a:93:19:ed:
 9a:e7

```

```

 Exponent: 65537 (0x10001)
Attributes:
 unstructuredName :cisco123
 challengePassword :cisco123
Signature Algorithm: sha256WithRSAEncryption
9c:9a:51:e0:1d:e4:0b:8f:c1:c6:f5:e0:d2:f6:30:0e:18:af:
a7:b2:a4:4a:57:d7:07:44:cd:9c:fa:2d:0e:8b:c9:31:5b:16:
6b:84:42:0b:ed:06:5c:ed:30:d8:9b:ee:5d:79:f4:8a:e3:52:
3c:b3:4a:eb:6c:22:a2:f4:35:80:28:3a:67:62:7f:5f:dc:80:
e0:74:f0:3c:39:26:39:3a:76:6a:6a:98:e9:68:f9:b7:58:bf:
e7:44:2e:e7:73:0a:9c:62:28:b2:c6:09:41:81:b2:53:46:14:
e6:e4:dc:ca:90:81:5a:5e:dc:1b:dc:36:2c:86:5f:37:29:4c:
b0:ee:85:2b:34:f2:82:8a:d4:fc:a0:ce:10:e4:44:4e:d0:7a:
37:6d:3e:f9:ff:a1:19:8c:db:06:bf:be:87:57:a1:cb:05:15:
0b:9f:6c:8b:c2:ad:22:25:10:f0:4d:0f:4d:b7:be:71:87:f7:
85:24:e7:2d:f9:59:86:1a:b7:88:57:16:93:31:1f:d7:e5:07:
42:77:00:f9:ac:44:3b:6c:35:0f:80:5d:00:6f:ea:be:fe:e7:
28:53:0c:6b:5f:0c:76:bf:8c:a7:60:57:63:05:06:ff:ac:3d:
f1:63:54:d0:d0:13:44:b1:e9:53:6b:32:11:e2:83:26:04:f5:
23:67:6b:de

```

**Step 3**

The private key, `ndb-server.key`, is secured with the passphrase. You need to unencrypt the certificate private key. Unencrypt the private key using the **openssl rsa** command.

**Example:**

```

[root@NDB-server ~]# cp ndb-server.key ndb-server.keybkp
[root@NDB-server ~]# rm ndb-server.key
[root@NDB-server ~]# openssl rsa -in ndb-server.keybkp -out ndb-server.key
Enter pass phrase for ndb-server.keybkp: cisco123
writing RSA key

```

**Note**

The `ndb-server.req` file data needs to be submitted to 3rd party certification authority. Follow the relevant procedures and get the certificate files.

Depending on the tier of the CA you choose, you can get up to three certificates (certificate chain) for each CSR. This means you get three certificates (root, intermediate and domain) from CA for each NDB switch. You need to check with CA to identify each type of certificate. Certificate naming convention might be different for different certifying authorities. For example: `qvrca2.cer` (root), `hydssl2.cer` (intermediate), `ndb-server.cisco.com-39891.cer` (domain).

Certificates are mostly shared in .PEM file format.

**Step 4**

Create a single certificate file from the three certificate files using the `cat` command. The concatenation should be done in the following order, domain certificate, root certificate, and intermediate certificate. Syntax for `cat` command: **cat domain certificate root certificate intermediate certificate > ndb-server.cer**.

**Example:**

```

[root@NDB-server ~]# cat ndb-server.cisco.com-39891.cer qvrca.cer hydssl2.cer > ndb-server.cer

```

**Step 5**

Edit the newly created `server.cer` file to separate the concatenated END and BEGIN lines. Do not delete anything in the file.

**Example:**

```

-----END CERTIFICATE-----BEGIN CERTIFICATE-----

```

```

//////// Modify the above line like this by adding a line feed between the two.
-----END CERTIFICATE-----
-----BEGIN CERTIFICATE-----

```

- Step 6** Create the TLS NDB Server Keystore file using the `ndb-server.cer` and `ndb-server.key` files. Copy the files to switch using the `copy` command.

**Example:**

```

cp ndb-server.key ndb-server-ndb-privatekey.pem
cp ndb-server.cer ndb-server-ndb-cert.pem

```

- Step 7** Combine the private key and certificate file into a single .PEM file using the `cat` command.

**Example:**

```

cat ndb-server-ndb-privatekey.pem ndb-server-ndb-cert.pem > ndb-server-ndb.pem

```

- Step 8** CA provides certificates in PEM format and extension of the certificate is .pem. You need to convert the PEM format certificate to PKCS12 format. Convert the PEM file, `ndb-server-ndb.pem`, to .P12 file format using the **openssl pkcs12** command. Enter the export password when prompted. The password must contain at least 6 characters, for example, `cisco123`. The `ndb-server-ndb.pem` file is converted to a password-protected `ndb-server-ndb.p12` file.

**Example:**

```

[root@NDB-server ~]# openssl pkcs12 -export -out ndb-server-ndb.p12 -in ndb-server-ndb.pem
Enter Export Password: cisco123
Verifying - Enter Export Password: cisco123

```

- Step 9** Convert the `ndb-server-ndb.p12` to a password protected Java KeyStore (`ndb-server-keystore`) file using the **keytool** command. This command converts the `sw1-ndb.p12` file to a password-protected `ndb-server-keystore` file. Create a new password for the destination JKS store and enter the source keystore password when prompted.

**Example:**

```

[root@NDB-server ~]# .(relativePath)/keytool -importkeystore -srckeystore ndb-server-ndb.p12
-srcstoretype pkcs12 -destkeystore ndb-server-keystore -deststoretype jks
Enter destination keystore password: cisco123
Re-enter new password: cisco123
Enter source keystore password: cisco123
Entry for alias 1 successfully imported.
Import command completed: 1 entries successfully imported, 0 entries failed or
cancelled
[root@NDB-server ~]#

```

- Step 10** List and verify content in the `java tlsKeyStore` using the **keytool** command.

**Example:**

```

[root@NDB-server ~]# .(relativePath)/keytool -list -v -keystore ndb-server-keystore

```

- Step 11** Copy the `ndb-server-keystore` file to the `/ndb/configuration` folder.

- Step 12** Configure `jetty-ssl-context.xml` (stored in `ndb/configuration/etc`) with key store password that was provided while generating the certificate. You can use VI editor and edit the following lines with `KeyStorePath`, `KeyStorePassword`, `TrustStorePath`, `TrustStorePassword`.

**Example:**

```

<Set name="KeyStorePath"><Property name="jetty.base" default="." /><Property
name="jetty.sslContext.keyStorePath" deprecated="jetty.keystore"
default="configuration/ndb-server-keystore"/></Set>

```

```
<Set name="KeyStorePassword"><Property name="jetty.sslContext.keyStorePassword"
deprecated="jetty.keystore.password" default="cisco123"/></Set>

<Set name="KeyManagerPassword"><Property name="jetty.sslContext.keyManagerPassword"
deprecated="jetty.keymanager.password" default="cisco123"/></Set>
<Set name="TrustStorePath"><Property name="jetty.base" default="." /></Property
name="jetty.sslContext.trustStorePath" deprecated="jetty.truststore"
default="configuration/ndb-server-keystore"/></Set>

<Set name="TrustStorePassword"><Property name="jetty.sslContext.trustStorePassword"
deprecated="jetty.truststore.password" default="cisco123"/></Set>
```

**Step 13** Restart the NDB.

**Step 14** Upload the CA certificate into Trusted Root certificate store of Web browser. See help for respective Web browsers about how to add the certificate to the Trusted Root certificate store. Use the password that you created while creating the certificate when prompted while uploading the certificate to the Web browser.

## Generating TLS 3rd Party Certificate Between Web Browser and NDB Server Running in Embedded Mode Using Guest Shell Environment

To generate TLS 3rd party certificate between Web browser and NDB server running in embedded mode using guest shell environment, complete the following steps.

### Procedure

**Step 1** Enable bash-shell feature on the switch using the feature command.

**Example:**

```
N9396TX-116(config)# feature bash-shell
```

**Step 2** Enter bash-shell mode on the switch using the run command.

**Example:**

```
N9396TX-116(config)# run bash
bash-4.2$
```

**Step 3** Generate Certificate Signing Request (CSR) using the **openssl req** command. Enter the required information when prompted.

**Example:**

```
bash-4.2$ openssl req -newkey rsa:2048 -sha256 -keyout ndb-server.key -keyform PEM -out ndb-server.req
-outform PEM
Generating a 2048 bit RSA private key
...+++
.....+++
writing new private key to 'ndb-server.key'
Enter PEM pass phrase: ☐ cisco123
Verifying - Enter PEM pass phrase: ☐ cisco123

You are about to be asked to enter information that will be incorporated
into your certificate request.
What you are about to enter is what is called a Distinguished Name or a DN.
There are quite a few fields but you can leave some blank
```

For some fields there will be a default value,  
If you enter '.', the field will be left blank.

-----

```
Country Name (2 letter code) [GB]:US
State or Province Name (full name) [Berkshire]:CA
Locality Name (eg, city) [Newbury]:SJ
Organization Name (eg, company) [My Company Ltd]:cisco
Organizational Unit Name (eg, section) []:insbu
Common Name (eg, your name or your server's hostname) []:ndb-server.cisco.com
Email Address []:chburra@cisco.com
```

Please enter the following 'extra' attributes  
to be sent with your certificate request  
A challenge password []:cisco123  
An optional company name []:cisco123

```
bash-4.2$ ls
```

```
ndb-server.req ndb-server.key
```

#### Note

The openssl command creates a private key, ndb-server.key, and a certificate signing request file, ndb-server.req. The ndb-server.req (CSR) file is submitted to the certificate issuing authority (CA).

#### Note

You need to use the same information when exporting the CA provided certificate into browser. The CSR file, cert.req, is submitted to CA.

## Step 4

To view the content or verify the CSR request, use the **openssl req** command.

#### Example:

```
bash-4.2$ openssl req -noout -text -in ndb-server.req
Certificate Request:
 Data:
 Version: 0 (0x0)
 Subject: C=US, ST=CA, L=SJ, O=cisco, OU=insbu,
 CN=ndb-server.cisco.com/emailAddress=chburra@cisco.com
 Subject Public Key Info:
 Public Key Algorithm: rsaEncryption
 RSA Public Key: (2048 bit)
 Modulus (2048 bit):
 00:b5:30:75:e8:c8:5f:05:3b:0e:4f:aa:00:d9:64:
 8d:bf:b2:80:20:56:c3:be:b0:4c:e0:52:e5:be:d8:
 d2:74:85:4e:8a:ba:d3:1e:30:76:bf:e5:de:7d:51:
 11:79:8e:bc:96:38:7a:23:5a:26:31:50:50:fa:29:
 44:ab:56:b6:0d:41:38:ba:d1:d5:b4:e3:ba:a3:6c:
 4a:35:73:27:d9:fd:5c:4b:21:85:1a:f9:4d:b0:9e:
 f3:ae:ce:49:98:ef:a2:f8:11:ab:bd:7e:64:ee:68:
 68:19:6e:8f:3c:54:30:0f:28:01:13:b0:3d:34:b8:
 f9:f5:cc:4a:84:d8:e5:d2:27:47:cc:83:76:92:ad:
 92:62:f3:a3:35:be:14:ce:38:af:2a:c5:2e:fa:b8:
 31:6b:71:cd:56:00:1f:0d:cc:b0:f8:fc:b0:52:91:
 f8:9c:cf:45:13:c9:b5:86:fa:30:dd:88:78:01:15:
 fb:5c:c9:6f:5b:b7:80:28:6c:86:54:c0:f2:5f:35:
 70:82:49:5c:79:1c:f2:23:dd:50:d5:47:12:37:a3:
 3f:f9:1d:90:8f:c0:e8:18:09:2e:66:8d:c3:72:17:
 7f:7d:27:da:b1:cc:26:2d:8c:6b:ee:c5:e8:b5:78:
 31:7c:bb:ba:6d:2c:e5:a3:29:7e:c1:4a:93:19:ed:
 9a:e7
 Exponent: 65537 (0x10001)
```

```

Attributes:
 unstructuredName :cisco123
 challengePassword :cisco123
Signature Algorithm: sha256WithRSAEncryption
9c:9a:51:e0:1d:e4:0b:8f:c1:c6:f5:e0:d2:f6:30:0e:18:af:
a7:b2:a4:4a:57:d7:07:44:cd:9c:fa:2d:0e:8b:c9:31:5b:16:
6b:84:42:0b:ed:06:5c:ed:30:d8:9b:ee:5d:79:f4:8a:e3:52:
3c:b3:4a:eb:6c:22:a2:f4:35:80:28:3a:67:62:7f:5f:dc:80:
e0:74:f0:3c:39:26:39:3a:76:6a:6a:98:e9:68:f9:b7:58:bf:
e7:44:2e:e7:73:0a:9c:62:28:b2:c6:09:41:81:b2:53:46:14:
e6:e4:dc:ca:90:81:5a:5e:dc:1b:dc:36:2c:86:5f:37:29:4c:
b0:ee:85:2b:34:f2:82:8a:d4:fc:a0:ce:10:e4:44:4e:d0:7a:
37:6d:3e:f9:ff:a1:19:8c:db:06:bf:be:87:57:a1:cb:05:15:
0b:9f:6c:8b:c2:ad:22:25:10:f0:4d:0f:4d:b7:be:71:87:f7:
85:24:e7:2d:f9:59:86:1a:b7:88:57:16:93:31:1f:d7:e5:07:
42:77:00:f9:ac:44:3b:6c:35:0f:80:5d:00:6f:ea:be:fe:e7:
28:53:0c:6b:5f:0c:76:bf:8c:a7:60:57:63:05:06:ff:ac:3d:
f1:63:54:d0:d0:13:44:b1:e9:53:6b:32:11:e2:83:26:04:f5:
23:67:6b:de

```

**Step 5** The private key, `ndb-server.key`, is secured with the passphrase. You need to unencrypt the certificate private key. Unencrypt the private key using the **openssl rsa** command.

**Example:**

```

bash-4.2$ cp ndb-server.key ndb-server.keybkp
bash-4.2$ rm ndb-server.key
bash-4.2$ openssl rsa -in ndb-server.keybkp -out ndb-server.key
Enter pass phrase for ndb-server.keybkp: cisco123
writing RSA key

```

**Note**

Depending on the tier of the CA you choose, you can get up to three certificates (certificate chain) for each CSR. This means you get three certificates (root, intermediate and domain) from CA for each NDB switch. You need to check with CA to identify each type of certificate. Certificate naming convention might be different for different certifying authorities. For example: `qvrca2.cer` (root), `hydsslsg2.cer` (intermediate), `ndb-server.cisco.com-39891.cer` (domain).

Certificates are mostly shared in .PEM file format.

**Step 6** Create a single certificate file from the three certificate files using the `cat` command. The concatenation should be done in the following order, domain certificate, root certificate, and intermediate certificate. Syntax for `cat` command: **cat domain certificate root certificate intermediate certificate > ndb-server.cer**.

**Example:**

```

bash-4.2$ cat ndb-server.cisco.com-39891.cer qvrca.cer hydsslsg2.cer > ndb-server.cer

```

**Step 7** Edit the newly created `server.cer` file to separate the concatenated END and BEGIN lines. Do not delete anything in the file.

**Example:**

```

-----END CERTIFICATE-----BEGIN CERTIFICATE-----

///// Modify the above line like this by adding a line feed between the two.
-----END CERTIFICATE-----
-----BEGIN CERTIFICATE-----

```

**Step 8** Create the TLS NDB Server Keystore file using the `ndb-server.cer` and `ndb-server.key` files. Copy the files to switch using the **copy** command.

**Example:**



```
cp ndb-server.key ndb-server-ndb-privatekey.pem
cp ndb-server.cer ndb-server-ndb-cert.pem
```

**Step 9** Combine the private key and certificate file into a single .PEM file using the **cat** command.

**Example:**

```
cat ndb-server-ndb-privatekey.pem ndb-server-ndb-cert.pem > ndb-server-ndb.pem
```

**Step 10** CA provides certificates in PEM format and extension of the certificate is .pem. You need to convert the PEM format certificate to PKCS12 format. Convert the PEM file, ndb-server-ndb.pem, to .P12 file format using the **openssl pkcs12** command. Enter the export password when prompted. The password must contain at least 6 characters, for example, cisco123. The ndb-server-ndb.pem file is converted to a password-protected ndb-server-ndb.p12 file.

**Example:**

```
bash-4.2$ openssl pkcs12 -export -out ndb-server-ndb.p12 -in ndb-server-ndb.pem
Enter Export Password: cisco123
Verifying - Enter Export Password: cisco123
```

**Step 11** Copy the certificate file to the NDB configuration folder.

**Example:**

```
bash-4.2$ sudo cp ndb-server-ndb.p12
/isan/vdc_1/virtual-instance/guestshell+/rootfs/usr/bin/ndb/configuration/
```

**Step 12** Exit the bash shell mode using the **exit** command.

**Example:**

```
bash-4.2$ exit
exit
N9396TX-116#
```

**Step 13** Connect to guest shell using guestshell command.

**Example:**

```
N9396TX-116# guestshell
[admin@guestshell ~]$
```

**Step 14** Change current directory to ndb/configuration.

**Example:**

```
[admin@guestshell ~]$ cd ndb/configuration
```

**Step 15** Convert the ndb-server-ndb.p12 to a password protected Java KeyStore (ndb-server-keystore) file using the **keytool** command. This command converts the ndb-server-ndb.p12 file to a password-protected ndb-server-keystore file. Create a new password for the destination JKS store and enter the source keystore password when prompted.

**Example:**

```
[admin@guestshell configuration]$ keytool -importkeystore -srckeystore ndb-server-ndb.p12
-srcstoretype pkcs12 -destkeystore ndb-server-keystore -deststoretype jks
Enter destination keystore password: cisco123
Re-enter new password: cisco123
Enter source keystore password: cisco123
Entry for alias 1 successfully imported.
Import command completed: 1 entries successfully imported, 0 entries failed or cancelled
```

**Step 16** List and verify content in the java tlsKeyStore using the **keytool** command.

**Example:**

```
[admin@guestshell configuration]$ keytool -list -v -keystore ndb-server-keystore
```

**Step 17** Configure `jetty-ssl-context.xml` (stored in `ndb/etc` folder) with key store password that was provided while generating the certificate. You can use VI editor and edit the following lines with keystore and keystorepass.

**Example:**

```
<Set name="KeyStorePath"><Property name="jetty.base" default="." /><Property
name="jetty.sslContext.keyStorePath" deprecated="jetty.keystore"
default="configuration/ndb-server-keystore"/></Set>
<Set name="KeyStorePassword"><Property name="jetty.sslContext.keyStorePassword"
deprecated="jetty.keystore.password" default="cisco123"/></Set>

<Set name="KeyManagerPassword"><Property name="jetty.sslContext.keyManagerPassword"
deprecated="jetty.keymanager.password" default="cisco123"/></Set>

<Set name="TrustStorePath"><Property name="jetty.base" default="." /><Property
name="jetty.sslContext.trustStorePath" deprecated="jetty.truststore"
default="configuration/ndb-server-keystore"/></Set>

<Set name="TrustStorePassword"><Property name="jetty.sslContext.trustStorePassword"
deprecated="jetty.truststore.password" default="cisco123"/></Set>
```

**Step 18** Upload the CA certificate into Trusted Root certificate store of Web browser. See help for respective Web browsers about how to add the certificate to the Trusted Root certificate store. Use the password that you created while creating the certificate when prompted while uploading the certificate to the Web browser.

**Step 19** Use **guestshell disable** followed by **guestshell enable** to restart NDB.

---



## CHAPTER 5

# Configuring Cisco Nexus 9000 Series Switches

Beginning with Release 3.10.1, Cisco Nexus Data Broker (NDB) has been renamed to Cisco Nexus Dashboard Data Broker. However, some instances of NDB are present in this document, to correspond with the GUI, and installation folder structure. References of NDB/ Nexus Data Broker/ Nexus Dashboard Data Broker can be used interchangeably.

This chapter contains the following sections:

- [Guidelines and Limitations for Cisco Nexus 9000 Series Switches, on page 55](#)
- [Configuring TCAM Hardware Sizing on Cisco Nexus 9000 Series Switches, on page 56](#)
- [Enabling Cisco NX-API on Cisco Nexus 9000 Series Switches Using CLI, on page 57](#)
- [Enabling Switch Port Mode as Trunk on the Inter-switch Ports and Port Channels, on page 58](#)

## Guidelines and Limitations for Cisco Nexus 9000 Series Switches

See the following guidelines and limitations for configuring Cisco Nexus 9000 Series switches through Cisco Nexus Dashboard Data Broker.

- Beginning with Cisco NX-OS Release 7.0(3)I7(2), you can enable TAP aggregation for Cisco Nexus 9500 platform switches with N9K-X9700-EX and N9K-X9700-FX line card.
- To enable TAP AGG feature on N9K-X9700-EX and N9K-X9700-FX line card, you need to configure hardware acl tap-agg globally on the Cisco Nexus 9500 switches.
- Cisco Nexus Dashboard Data Broker supports NX-API protocol for Cisco Nexus 9000 series family of devices starting with Release 7.x.
- The devices that are going to be provisioned by Cisco Nexus Dashboard Data Broker are assumed to have LLDP enabled and the LLDP feature should not be disabled during the device association with Cisco Nexus Dashboard Data Broker. If the LLDP feature is disabled, there might be an inconsistency in Cisco Nexus Dashboard Data Broker that cannot be fixed without device deletion and re-addition.
- Cisco Nexus Dashboard Data Broker assumes that the device interfaces configured by the port definitions are L2 switch ports and these interfaces have device configurations as switchport trunk by default.
- Cisco Nexus 9200 Series switches do not support Q-in-Q VLAN tagging for the Edge SPAN and Edge TAP port.

- For Cisco Nexus 9000 Series switches, upgrade the Cisco NX-OS software to Cisco NX-OS Release 7.x or above.
- You can now add a Cisco Nexus 9000 Series switch to the Cisco Nexus Dashboard Data Broker that can be discovered through NX-API protocol. Once the connection is successful, all the line card information for chassis model 9500 is discovered.
- Prior to deploying the Cisco Nexus 9000 Series switches for Tap/SPAN aggregation through Cisco Nexus Dashboard Data Broker with NX-API mode, the following configurations should be completed:
  - Configure the ACL TCAM region size for IPV4 port ACLs or MAC port ACLs.
  - Enable NX-API feature in the switch using the **feature nxapi** command.
  - Configure **switchport mode trunk** on all the inter-switch ports and the port-channels.
- Cisco Nexus Dashboard Data Broker periodically rediscovers the switch inventory, the topology interconnection, and the status. This information is updated in the GUI depending on the status. The rediscovery interval can be configured and the default value for the rediscovery interval is every 10 seconds.

## Configuring TCAM Hardware Sizing on Cisco Nexus 9000 Series Switches

The TCAM configuration is based on the filtering requirement. You may need to configure multiple TCAM entries based on your filtering requirement. Complete these steps to configure a TCAM:

### SUMMARY STEPS

1. Use the **hardware access-list tcam region <region> <tcam-size>** command to configure the following TCAM regions:

### DETAILED STEPS

#### Procedure

	Command or Action	Purpose
<b>Step 1</b>	Use the <b>hardware access-list tcam region &lt;region&gt; &lt;tcam-size&gt;</b> command to configure the following TCAM regions:	<pre> NAT ACL[nat] size =      0 Ingress PACL [ing-ifacl] size = 1024 VACL [vacl] size =      0 Ingress RACL [ing-racl] size =      0 Ingress L2 QOS [ing-l2-qos] size = 256 Ingress L3/VLAN QOS [ing-l3-vlan-qos] size =      0 Ingress SUP [ing-sup] size = 512 Ingress L2 SPAN filter [ing-l2-span-filter] size = 256 Ingress L3 SPAN filter [ing-l3-span-filter] size =      0 Ingress FSTAT [ing-fstat] size =      0 span [span] size = 512 Egress RACL [egr-racl] size = 1792           </pre>

	Command or Action	Purpose
		<pre> Egress SUP [egr-sup] size = 256 Ingress Redirect [ing-redirect] size = 512 Egress L2 QOS [egr-l2-qos] size = 0 Egress L3/VLAN QOS [egr-l3-vlan-qos] size = 0 Ingress Netflow/Analytics [ing-netflow] size = 512 Ingress NBM [ing-nbm] size = 0 TCP NAT ACL[tcp-nat] size = 0 Egress sup control plane[egr-copp] size = 0 Ingress Flow Redirect [ing-flow-redirect] size = 0 Ingress PACL IPv4 Lite [ing-ifacl-ipv4-lite] size = 0 Ingress PACL IPv6 Lite [ing-ifacl-ipv6-lite] size = 0 MCAST NAT ACL[mcast-nat] size = 0 Ingress PACL Super Bridge [ing-pacl-sb] size = 1024 Ingress Storm Control [ing-storm-control] size = 0 Ingress VACL redirect [ing-vacl-nh] size = 0 Egress PACL [egr-ifacl] size = 0 </pre> <p>See the <i>Cisco Nexus 9000 Series NX-OS Security Configuration Guide</i> for the step-by-step TCAM hardware sizing configuration on Cisco Nexus 9000 Series Switches.</p> <p><b>Note</b> Cisco Nexus Dashboard Data Broker in OpenFlow mode supports Ethernet MAC source and destination addresses as match capabilities only when the OpenFlow TCAM region is configured as double wide (for example, <b>hardware access-list tcam region openflow 512 double-wide</b>). If the OpenFlow TCAM region is configured as non double wide, only ether type match is supported as match capabilities.</p>

## Enabling Cisco NX-API on Cisco Nexus 9000 Series Switches Using CLI

You can now manage multiple Cisco Nexus 9000 Series switches that are connected in a topology. Cisco Nexus Dashboard Data Broker plugin can discover the switch interconnections using LLDP and update the topology services within Cisco Nexus Dashboard Data Broker. The switch interconnections can be a physical link or a port-channel interface. The topology displays only the interconnections between Cisco Nexus 9000 Series switches that are added to the NDB device list. The topology interconnection is displayed in the GUI.

Complete the following steps for enabling Cisco NX-API on Cisco Nexus 9000 Series switches:

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	Enable the management interface.	Enable the management interface on the switch.

	Command or Action	Purpose
<b>Step 2</b>	switch# <b>conf t</b>	Enter the configuration mode.
<b>Step 3</b>	switch (config) # <b>feature nxapi</b>	Enable the NX-API feature.
<b>Step 4</b>	switch (config) # <b>nxapi http port 80</b>	Configure the HTTP port.
<b>Step 5</b>	switch (config) # <b>nxapi https port 443</b>	Configure the HTTPS port.  For the step-by-step configuration information for enabling the NX-API feature on Cisco Nexus 9000 Series switches, see the <i>Cisco Nexus 9000 Series NX-OS Programmability Guide</i> .

## Enabling Switch Port Mode as Trunk on the Inter-switch Ports and Port Channels

Complete the following steps to enable the switch port mode on the inter-switch ports and port-channels:

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	switch(config)# <b>config t</b>	Enables the configuration mode.
<b>Step 2</b>	switch(config)# interface {{ <b>type slot/port</b> }   { <i>port-channel number</i> }}	Specifies an interface to configure.
<b>Step 3</b>	switch(config-if)# <b>switchport mode</b> { <i>access</i>   <i>trunk</i> }	Configures the switchport mode as access or trunk on the inter-switch ports and the port-channels.
<b>Step 4</b>	switch(config)# <b>exit</b>	Exits the configuration mode.



## PART I

# Configuring the Cisco Nexus Dashboard Data Broker

- [Dashboard, on page 61](#)
- [Topology, on page 63](#)
- [Devices, on page 65](#)
- [Connections, on page 87](#)
- [Components, on page 99](#)
- [Sessions, on page 153](#)
- [Statistics, on page 163](#)
- [Troubleshooting, on page 169](#)
- [Administration, on page 181](#)







## CHAPTER 6

# Dashboard

This chapter has details about the Cisco Nexus Data Broker dashboard. The dashboard integrates information from multiple components and devices into a unified display.

Beginning with Release 3.10.1, Cisco Nexus Data Broker (NDB) has been renamed to Cisco Nexus Dashboard Data Broker. However, some instances of NDB are present in this document, to correspond with the GUI, and installation folder structure. References of NDB/ Nexus Data Broker/ Nexus Dashboard Data Broker, can be used interchangeably.

- [Dashboard, on page 61](#)

## Dashboard

The intent of **Dashboard** is to enable network and storage administrators to focus on particular areas of concern around the health and performance of Cisco Nexus Dashboard Data Broker. This information is provided as 24-hour snapshots.

From the left menu bar, choose **Dashboard**. The **Dashboard** window displays the following dashlets:

- **Status by Resources**—Status of the resources connected to the Nexus Dashboard Data Broker controller are displayed in color-coded circles. The resources are:
  - NDB Devices
  - Input Ports
  - Filters
  - Monitoring Tools
  - Connections
- **Data Handled / Received since *date***—Overall amount of data received and transmitted by the Nexus Dashboard Data Broker controller since the *indicated date*.
- **Cluster Runtime**—Runtime of the current cluster.
- **Cluster Last Restart**—Date and time the cluster was last restarted.
- **Top Connections by Packet Count** (displayed in color coded bars)—Connections based on packet count (total packet count processed by the flows of the connection) and approximate bandwidth for a

connection based on the packet count. The list is in descending order; the connection with the highest packet count is displayed at the top.

- **Top Input Ports by Received Packet Count** (displayed in color coded bars)— Input ports based on the number of packets received on the ports. The list is in descending order; the source port with the highest *received* packet count is displayed at the top.
- **Top Monitoring Tools by Transmitted Packet Count** (displayed in color coded bars)— Monitoring tools based on the transmitted packet count. The list is in descending order; the monitoring tool with the highest *transmitted* packet count is displayed at the top.
- **Top Filters by Filtered Packet Count** (displayed in color coded bars)— Filters based on the ACL-filtered packet count. The list is in descending order; the filter with the highest packet count is displayed at the top.
- **Top Device by TCAM Resource Utilization** (displayed in color coded bars)— Devices based on TCAM resource utilization. The list is in descending order; the device which has the highest utilization is displayed at the top.



## CHAPTER 7

# Topology

This chapter has details of the network topology with details of the devices and connections of the Cisco Nexus Dashboard Data Broker.

Beginning with Release 3.10.1, Cisco Nexus Data Broker (NDB) has been renamed to Cisco Nexus Dashboard Data Broker. However, some instances of NDB are present in this document, to correspond with the GUI, and installation folder structure. References of NDB/ Nexus Data Broker/ Nexus Dashboard Data Broker, can be used interchangeably.

- [Topology, on page 63](#)

## Topology

The **Topology** tab provides an integrated view of the Cisco Nexus Dashboard Data Broker network.


The topology diagram displays the elements of the network. Hover over an element to get details about it. Click an element, for more information about the element.

The displayed network elements are:

- Connected NDB devices
- Input ports
- Monitoring tools
- NX-OS Devices
- ACI Devices



### Note

Click **Refresh**(  ) to view the latest topology.

The following actions can be performed from the **Topology** tab:

- **Add NDB Device**— See [Adding an NDB Device](#) for more details.
- **Add Span Device**— See [Adding a Span Device , on page 77](#) for more details.
- **Add Monitoring Tool**—See [Adding a Monitoring Tool](#) for more details.





## CHAPTER 8

# Devices

This chapter has details about the devices of the Cisco Nexus Dashboard Data Broker.

Beginning with Release 3.10.1, Cisco Nexus Data Broker (NDB) has been renamed to Cisco Nexus Dashboard Data Broker. However, some instances of NDB are present in this document, to correspond with the GUI, and installation folder structure. References of NDB/ Nexus Data Broker/ Nexus Dashboard Data Broker, can be used interchangeably.



---

**Note** All references of DNA/ DNAC in this chapter/ guide denote Cisco DNA/ Cisco DNAC.

---

- [Devices, on page 65](#)

## Devices

The **Devices** tab has the following sub tabs:

- **NDB Devices**—aggregation devices managed by the NDB controller. See [NDB Devices](#) for more details.
- **Span Devices**— Switches (Nexus/ Catalyst) and controllers (Cisco APIC/ Cisco DNAC) connected to NDB. See [Span Devices, on page 75](#) for more details.
- **Tap Devices** —tap devices connected to the NDB controller. See [Tap Devices](#) for more details.
- **Device Groups**—the groups to which the NDB devices are segregated into. See [Device Groups](#) for more details.


## NDB Devices

The **NDB Devices** tab displays details of all the devices connected to the NDB controller.

A table is displayed with the following details:

**Table 8: NDB Devices**

Column Name	Description
<b>Status</b> (the first column of the table)	<p>The current status of the device connected to the NDB; indicated by color. The options are:</p> <ul style="list-style-type: none"><li>• Green—indicates that the device is operational and connected to the NDB controller.</li><li>• Red—indicates failure and the device is not connected to the NDB controller.</li><li>• Yellow—indicates that the device is connected but not ready yet. Reboot the device and wait for a few minutes for the status to turn green. Refresh and check.</li><li>• Gray—indicates that the device is in maintenance mode.</li></ul>

Column Name	Description
<b>IP Address</b>	<p>The IP address of the device.</p> <p>This field is a hyperlink. Click the IP address to view more details of the device.</p> <p>Click the <b>IP Address</b>. A new pane is displayed on the right which has more information about the device. Additional actions that can be performed from here are:</p> <ul style="list-style-type: none"> <li>• <a href="#">Edit Device</a></li> <li>• Take Device Offline</li> <li>• <a href="#">Edit Global Configuration</a></li> </ul> <p><b>Note</b> The <i>Take Device Offline</i> action is generally grayed out and is available only for devices in maintenance mode.</p> <p>You can also view the <b>Ports</b>, <b>Port Channels</b> and <b>Port Groups</b> of the device by clicking the corresponding tab. For more information about Port Channels and Groups, see <a href="#">Port Channels and Groups</a>.</p> <p>Click the <b>Details</b> icon (  ) to get additional details of the device. A new window displays the following details for the selected device:</p> <ul style="list-style-type: none"> <li>• General</li> <li>• Ports</li> <li>• Port Channel</li> <li>• Port Groups</li> <li>• Global Configuration</li> <li>• Monitor Sessions</li> <li>• Flow Statistics</li> <li>• Port Statistics</li> <li>• TCAM Resource Utilization</li> </ul> <p>Additional actions that can be performed from <b>Details</b> tab:</p> <ul style="list-style-type: none"> <li>• Trigger Global ACLs—this action identifies the non-configured interfaces of a device and attaches global ACLs to all these interfaces. It is mandatory for all interfaces of a device to be configured with global ACLs.</li> <li>• <a href="#">Add Port Channel</a></li> </ul>

Column Name	Description
<b>Device Name</b>	The device name (switch name) as indicated by the administrator while configuring the device. Device name is displayed only if the device status is green. If the status of the device is red or yellow, the device name is not displayed.
<b>Platform</b>	The device platform.
<b>Node ID</b>	The node ID of the device.
<b>Profile Name</b>	The profile of the device as configured during device addition.
<b>NX-OS</b>	The software version currently running on the device.
<b>Mode</b>	<p>The mode the switch is currently using. The options are:</p> <ul style="list-style-type: none"> <li>• NDB mode—indicates that the whole switch (all interfaces) is managed by the NDB controller.</li> <li>• Hybrid—indicates that only some interfaces in the device are managed by the NDB controller.</li> </ul> <p><b>Note</b> By default, this column is hidden. When Hybrid mode is enabled on the device during device addition, this column is displayed.</p>
<b>Port</b>	The port used by the NDB controller to communicate to the NDB device.
<b>Status Description</b>	<p>The status of the connection between the NDB device and the NDB controller. The options are:</p> <ul style="list-style-type: none"> <li>• Connection succeeded—indicates that the connection between the device and NDB controller is successful.</li> <li>• Connection failed—indicates that the connection between the device and NDB controller has failed. A reason for failure is also displayed, such as authentication failed, connection refused (incorrect port).</li> <li>• Connection not ready—indicates that the device reload was not successful.</li> </ul>

The following actions can be performed from the **NDB Devices** tab:

- **Add Device**—Use this to add a new device. See [Adding a Device](#) for details.
- **Rediscover Device**—Select the required device by checking the check box at the beginning of the row. Click **Actions > Rediscover Device(s)**. A pop-up appears. Click **Rediscover** to rediscover the selected devices. When you rediscover devices, the global ACLs are reattached.





**Note** Rediscovering a device leads to UDF, ports, global and connections reconfigurations and this results in traffic loss.

When there is a configuration error, use rediscover to reconfigure the device.

If you choose the rediscover action without selecting a check box, an error is displayed. You will be prompted to select a device.

- **Reconnect Device**— Select the required device by checking the check box at the beginning of the row. Click **Actions** > **Reconnect Device(s)**. A pop-up appears. Click **Reconnect** to reconnect the selected devices. The reconnect action is used to re-establish a failed connection between a device and NDB controller.

If you choose the reconnect action without selecting a check box, an error is displayed. You will be prompted to select a device.

- **Update Profile**—Use this action to add or update the profile for a device. See [Update Profile](#) for details about this task.
- **Delete Device**—Select the required device by checking the check box which is available at the beginning of the row. Click **Actions** > **Delete Device(s)**. A pop-up window displays two options:
  - **Delete**—Use this option to delete the device from the NDB controller while retaining the device configuration.
  - **Purge and Delete**—Use this option to delete the device and also remove device configuration from the NDB controller.

If you choose the delete action without selecting a check box, an error is displayed. You will be prompted to select a device.



**Note** If a device is not reachable and disconnects from the NDB controller, the NDB controller tries to locate and connect to the device after every 30 seconds.

Global deny ACLs are automatically added to all non-configured interfaces (Edge SPAN/TAP, Packet Truncation, Remote Source, and Local and Remote Monitor) on a device. By default, Global Deny ACL feature is enabled on all the devices. You can disable the Global Deny ACL feature by setting the `configure.global.acls` parameter to false in the `config.ini` file. Ensure that you restart NDB after making changes in the configuration file.

## Adding a Device

Use this procedure to add a device to NDB controller.

### Before you begin

Before adding a device to the NDB controller, do the following:

- Enable NXAPI on the device using the **feature nxapi** command.
- Use the Device Prerequisites option, if you are adding a device for the first time to the NDB controller.



**Note** Check the release-specific *Cisco Nexus Dashboard Data Broker Release Notes*, to see the supported Cisco Nexus Series switches and the supported NX-OS versions.

## Procedure

- Step 1** Navigate to **Devices > NDB Devices**.
- Step 2** From the **Actions** drop down menu, select **Add Device**.
- Step 3** In the **Add Device** dialog box, enter the following details:

*Table 9: Add Device*

Field	Description
<b>General</b>	
<b>IP Address/ Hostname</b>	Enter the name or IP address of the device. To add multiple devices, add the hostnames or IP Addresses separated with a comma.
<b>Username/ Profile</b>	<p>Select either <b>Username</b> or <b>Profile</b>.</p> <p>If you click <b>Username</b>, the following fields are displayed:</p> <ul style="list-style-type: none"> <li>• <b>Username</b>—Enter the switch username to login to the device.</li> <li>• <b>Password</b>—Enter the switch password.</li> </ul> <p>If you click <b>Profile</b>, the following fields are displayed:</p> <ul style="list-style-type: none"> <li>• <b>Profile</b>—From the <b>Select Profile</b> drop-down list, select a profile.</li> </ul> <p><b>Note</b> You can associate multiple switches to a profile. The profile configuration is applied to all the member switches.</p>
<b>Connection Type</b>	Select the Connection Type from the drop- down list. Currently, only NX-API is supported.
<b>Port</b>	Enter the device communication port. Use port 80 for NX-API over HTTP and 443 for HTTPS.

Field	Description
Device Prerequisites	<p>Click the gray button to enable Device Prerequisites. The bar turns blue and the button moves to the right. The following check boxes appear:</p> <ul style="list-style-type: none"> <li>• <b>Interface Commands</b>—By default, this check box is checked. Device Prerequisites automatically executes a set of default interface commands.</li> <li>• <b>Reboot</b>—Check the check box to reboot the device before it gets added to NDB.</li> <li>• <b>TCAM</b>—Check the check box to set a TCAM value. Select <b>Default</b> or <b>Scale</b>. A memory of 1024 or 2048 is allocated, respectively.</li> </ul> <p>For more information about Device Prerequisites, see <a href="#">Device Prerequisites, on page 74</a>.</p>
Hybrid Mode	<p>Slide the bar to the right to enable hybrid mode. In hybrid mode, only some interfaces of the device are managed by NDB.</p> <p>For this option to be displayed, the <b>config.ini</b> file should be enabled using <b>nx.hybrid.support=true</b>. Restart NDB to use this feature on all the the devices connected to NDB.</p>

**Step 4** Click **Add Device**.

**Note**

Global ACLs are automatically added to all the interfaces on a device. By default, Global ACLs are enabled for a device. To manage Global ACLs, you need to add the `configure.global.acls` parameter in the `config.ini` file. Set the `configure.global.acls` parameter to *false* and restart the device to disable Global ACLs on the device.

During the process of device addition, feature tap aggregation is enabled.

## Editing a Device

Use this procedure to edit a device.

**Before you begin**

Create one or more devices.

### Procedure

**Step 1** Navigate to **Devices > NDB Devices**.

**Step 2** In the displayed table, click an **IP Address**.

A new pane is displayed on the right.

**Step 3** Click **Actions** and select **Edit Device**.

**Step 4** In the **Edit Device** dialog box, the current device information is displayed. Modify these fields, as required:

*Table 10: Edit Device*

Field	Description
<b>General</b>	
<b>IP Address/ Hostname</b>	The current IP address of the device. This field cannot be edited.
<b>Username/ Profile</b>	<p>Select either <b>Username</b> or <b>Profile</b>.</p> <p>If you click <b>Username</b>, the following fields are displayed:</p> <ul style="list-style-type: none"> <li>• <b>Username</b>— Username used to login to the device is displayed; you can edit this field.</li> <li>• <b>Password</b>—Enter the password for the username.</li> </ul> <p>If you click <b>Profile</b>, the following fields are displayed:</p> <ul style="list-style-type: none"> <li>• <b>Profile</b>—From the <b>Select Profile</b> drop-down list, select a profile.</li> </ul> <p><b>Note</b> You can associate multiple switches to a profile. The profile configuration is applied to all the member switches.</p>
<b>Connection Type</b>	Select the Connection Type from the drop down menu. Currently, only NXAPI is supported.
<b>Port</b>	Enter the device communication port. Use port 80 for NX-API over HTTP and 443 for HTTPS.
<b>Device Prerequisites</b>	<p>Click the gray button to enable Device Prerequisites. The bar turns blue and the button moves to the right. The following check boxes appear:</p> <ul style="list-style-type: none"> <li>• <b>Interface Commands</b>—By default, this check box is checked. Device Prerequisites automatically executes a set of default interface commands.</li> <li>• <b>Reboot</b>—Check the check box to reboot the device before it gets added to NDB.</li> <li>• <b>TCAM</b>—Check the check box to set a TCAM value. Select <b>Default</b> or <b>Scale</b>. A memory of 1024 or 2048 is allocated, respectively.</li> </ul> <p>For more information about Device Prerequisites, see <a href="#">Device Prerequisites, on page 74</a>.</p>

**Step 5** Click **Save**.

## Updating Device Profile

Use this procedure to assign (associate) a profile to a device or update the profile for a device.

### Before you begin

Create one or more profiles.

### Procedure

**Step 1** Navigate to **Devices > NDB Devices**.

**Step 2** From the **Actions** drop-down menu, select **Assign/ Update Profile**.

**Step 3** In the **Assign/ Update Profile** dialog box, enter the following details:

*Table 11: Assign/ Update Profile*

Field	Description
<b>General</b>	
<b>Profile</b>	Select a <b>Profile</b> from the drop down menu.
<b>Connection Type</b>	The default NXAPI connection type is displayed.

**Step 4** Click **Assign/ Update Profile**.

## Adding a Port Channel

Use this procedure to add a port channel.

See [Port Channels and Groups](#) for more information about port channels.

### Procedure

**Step 1** Navigate to **Devices > NDB Devices**.

**Step 2** Click an **IP Address** and select the Details icon.

**Step 3** In the **Add Port Channel** dialog box, enter the following details:

*Table 12: Add Port Channel*

Field	Description
<b>General</b>	

Field	Description
<b>ID</b>	Enter a name for the port channel.
<b>Description</b>	Enter a description for the port channel.
<b>Port</b>	Click <b>Select Port</b> . Select the required check boxes and click <b>Select</b> .

**Step 4** Click **Add Port Channel**.

## Device Prerequisites

Nexus Dashboard Data Broker pushes basic configuration to a newly added device. Ensure NX-API is enabled on the new device for Nexus Dashboard Data Broker to push prerequisite configuration successfully. Manual configuration of the NX-API devices to make it ready for Nexus Dashboard Data Broker is not required.

Device Prerequisites can be configured when you add or edit a device, or when you add or change profile to a device. See [Adding a Device, on page 69](#) and/or [Editing a Device, on page 71](#).

Following configurations are pushed into the new switch by Nexus Dashboard Data Broker:

- While onboarding an NDB device, without following STP pre-requisites (when independent links or port channels are connected to NDB devices), you need to manually configure the **switchport mode trunk** and **spanning-tree bpdupfilter enable** commands.
- TCAM configurations based on the device platform
- MST mode is enabled on the Spanning Tree
- Basic VLAN configuration
- Feature tap aggregation is enabled.
- LLDP feature is enabled (only for the centralized mode).

Device is rebooted after all the configurations are successfully pushed by Nexus Dashboard Data Broker. The device reboot is required because of the TCAM configurations. The reboot is supported from NX-OS is 9.2(3) and above.

## Port Channels and Port Groups

### Port Channels

A port channel is an aggregation of multiple physical interfaces that creates a logical interface. You can bundle up to 8 individual active links into a port channel to provide increased bandwidth and redundancy. If a member port within a port channel fails, the traffic previously carried over the failed link switches to the remaining member ports within the port channel. Port channeling also load balances traffic across these physical interfaces. The port channel stays operational as long as at least one physical interface within the port channel is operational.

You create a port channel by bundling compatible interfaces. You can configure and run either static port channels or ports channels running the Link Aggregation Control Protocol (LACP). Any configuration changes that you apply to the port channel are applied to each member interface of that port channel. For example, if

you configure Spanning Tree Protocol (STP) parameters on the port channel, the Cisco NX-OS applies those parameters to each interface in the port channel.

You can use static port channels, with no associated protocol, for a simplified configuration. For more efficient use of the port channel, you can use the Link Aggregation Control Protocol (LACP), which is defined in IEEE 802.3ad. When you use LACP, the link passes protocol packets.

### Port Groups

Ports of a device (or different devices) can be grouped together to form a port group. The port groups can be a combination of the edge-span and the edge-tap ports across different switches. Selecting individual ports of a port group is disabled when using a port group.

## Symmetric and Non-Symmetric Load Balancing

You can configure symmetric load balancing and enable MPLS tag stripping on the Cisco Nexus 3000 Series and Cisco Nexus 9000 Series switches using NX-API configuration mode, from the Cisco Nexus Data Broker GUI and the REST API interfaces.

The following table lists the symmetric and non-symmetric load balancing options:

Configuration Type	Hashing Configuration	Platforms	Options
Symmetric	SOURCE_DESTINATION	Nexus 9000 Series (all), N3K-C3164xx, N3K-C32xx	IP, IP-GRE, IP-L4PORT, IP-L4PORT-VLAN, IP-VLAN, L4PORT, MAC
		REST API	IP, IP-GRE, PORT, MAC, IP-ONLY,PORT-ONLY
Non-symmetric	SOURCE, DESTINATION	Nexus 9000 Series (all), N3K-C3164xx, N3K-C32xx	IP, IP-GRE, IP-L4PORT, IP-L4PORT-VLAN, IP-VLAN, L4PORT, MAC
		REST API	IP, IP-GRE, PORT, MAC

## Span Devices

Switch port Analyzer (SPAN) is an efficient and high performance traffic monitoring system. It duplicates the network traffic and routes the packets to an the analyzer for monitoring. SPAN is used for troubleshooting connectivity issues and calculating network utilization, and performance monitoring. You can add, edit, remove, and rediscover a device to SPAN using Nexus Dashboard Data Broker.

Beginning with Cisco Nexus Dashboard Data Broker Release, 3.10.1, Cisco Catalyst 9300 Series Switches are supported as a production switch. For details of Catalyst switches, see *relevant Cisco documentation on Cisco.com*.



**Note** Catalyst series switches 9300-24UB have been qualified for Release 3.10.1. Supported IOS XE versions are, 16.09.05 and above.

Catalyst switches can be directly onboarded and managed using the Nexus Dashboard Data Broker GUI. Catalyst switches can also be onboarded using Cisco DNA Center (Cisco DNAC). See [Integrating Cisco Nexus Dashboard Data Broker with Cisco DNA Center](#) , on page 80.

The **Span Devices** tab displays details of the devices connected to the SPAN.

Select **Controllers** or **Production Switches** to see the details.

- **Controllers**—networks or devices connected to the Nexus Dashboard Data Broker controller via Cisco APIC or Cisco DNAC.
- **Production Switches**—standalone Nexus or Catalyst switches connected to the Nexus Dashboard Data Broker controller.

**Table 13: Controllers**

Column	Description
<b>Active IP</b>	<p>Active IP address of the controller. Click the IP address and a new pane is displayed on the right. Additional actions that can be performed from here are:</p> <ul style="list-style-type: none"> <li>• <a href="#">Editing a Span Device, on page 79</a></li> </ul> <p>Current IP address of the Cisco APIC/ Cisco DNAC controller communicating with the Nexus Dashboard Data Broker controller.</p> <p>Click the IP address and a new pane is displayed on the right side with more details.</p> <p>For Cisco DNAC controllers, the template names that Nexus Dashboard Data Broker installs on Cisco DNAC are displayed. The templates are:</p> <ul style="list-style-type: none"> <li>• NDB Monitor Session Deletion</li> <li>• NDB Monitor Session Creation</li> </ul>
<b>Username</b>	Username currently logged in to the controller .
<b>Name</b>	Name of the controller.
<b>Primary IP Address</b>	Primary IP address of the controller.
<b>Secondary IP Address</b>	(Only for APIC) Secondary IP address of the controller .
<b>Tertiary IP Address</b>	(Only for APIC) Tertiary IP address of the controller.



Table 14: Production Switches

Column	Description
Active IP	Active IP address of the device.  Click the IP address and a new pane is displayed on the right. Additional actions that can be performed from here are: <ul style="list-style-type: none"><li>• <a href="#">Editing a Span Device, on page 79</a></li></ul>
Username	Username currently logged in to the device.
Platform	Platform of the device.

The following actions can be performed from the **Span Devices** tab:

- **Add Span Device**—Use this to add a new span device. See [Adding a Span Device , on page 77](#) for details.
- **Rediscover Span Device**—Select the required device by checking the check box at the beginning of the row. Click **Actions > Rediscover Span Device**. A pop-up window is displayed. Click **Rediscover** to rediscover the selected devices.

Use the **Rediscover Span Device** option to re-establish the connection between the Nexus Dashboard Data Broker controller and the Span device(s).

If you choose the rediscover action without selecting a check box, an error is displayed. You will be prompted to select a device.

- **Delete Span Device**—Select the required device by checking the check box which is available at the beginning of the row. Click **Actions > Delete Span Device**.

If you choose the delete action without selecting a check box, an error is displayed. You will be prompted to select a device.

## Adding a Span Device

Use this procedure to add a device to SPAN.

### Procedure

- 
- Step 1** Navigate to **Devices > Span Devices**.
  - Step 2** From the **Actions** drop down list, select **Add Span Device**.
  - Step 3** In the **Add Span Device** dialog box, enter the following details:

Table 15: Add Span Device

Field	Description
<b>General</b>	Select <b>Controller</b> or <b>Production Switch</b> . A controller can be a Cisco APIC or Cisco DNAC. A Production Switch (PS) can be a Nexus or a Catalyst switch.  The options available for each are discussed in the rows, below.
Fields displayed for <b>Controller</b> :	
<b>Controller Type</b>	Select a controller type from the drop down list. The options are: <ul style="list-style-type: none"> <li>• Cisco APIC</li> <li>• Cisco DNAC</li> </ul>
<b>IP Address/ Hostname</b>	Enter the IP address for the controller.
<b>IP Address (Secondary)</b>	(Optional; only for APIC) Enter a secondary IP address for the controller.
<b>IP Address (Tertiary)</b>	(Optional; only for APIC) Enter a tertiary IP address for the controller.
<b>Username</b>	Enter a username.
<b>Password</b>	Enter the required password for authentication.
<b>Cisco DNAC Name</b>	(Only for Cisco DNAC) Enter a name for the Cisco DNAC. This name is used for identification by the Nexus Dashboard Data Broker controller.
Fields displayed for <b>Production Switch</b> :	
<b>Address</b>	IP address of the Nexus or Catalyst switch.
<b>Platform Type</b>	Select from the drop down list. The options are: <ul style="list-style-type: none"> <li>• Nexus</li> <li>• Catalyst</li> </ul>
<b>Port</b>	The device communication port.  Enter a port number for Nexus switches.  If you have selected the <b>Platform Type</b> as Catalyst, the default port value of 22 is displayed. Communication to catalyst switches is via SSH.
<b>Username</b>	Enter a username for the device.
<b>Password</b>	Enter the required password to authenticate the username.

Field	Description
<b>Enable Password</b>	(Only for Catalyst switches) Enter the required password.  <b>Note</b> If the switch is not in enable mode, then enter the password.

**Step 4** Click **Add Span Device**.

After a Cisco DNAC controller is successfully added as a span device, Nexus Dashboard Data Broker installs the required projects and templates on the Cisco DNAC controller. You can check the created projects and templates under *Template Editor* on the Cisco DNAC.

## Editing a Span Device

Use this procedure to edit parameters for a Span device.

**Before you begin**

Create one or more Span devices.

**Procedure**

**Step 1** Navigate to **Devices > Span Devices**.

**Step 2** In the displayed table, click an **IP Address**.

A new pane is displayed on the right.

**Step 3** Click **Actions** and select **Edit Span Device**.

**Step 4** In the **Edit Span Device** dialog box, the current span device information is displayed. Modify these fields, as required:

**Table 16: Edit Span Device**

Field	Description
<b>General</b>	This field can not be edited. If you have selected a <b>Controller</b> or <b>Production Switch</b> , earlier, that selection can not be changed. However, the parameters for these can be edited and they are discussed in the rows, below.
Fields displayed for <b>Controller</b> :	
<b>Controller Type</b>	The earlier selected controller type. This field can not be edited.
<b>IP Address/ Hostname</b>	The primary IP address of the controller . This field can not be edited.
<b>IP Address (Secondary)</b>	(Only for APIC) Enter a secondary IP address for the APIC device.

Field	Description
<b>IP Address (Tertiary)</b>	(Only for APIC) Enter a tertiary IP address for the APIC device.
<b>Username</b>	Username for the controller.
<b>Password</b>	Enter the required password for authentication.
<b>Cisco DNAC Name</b>	(Only for Cisco DNAC) Name of the Cisco DNAC. This name is used for identification by the Nexus Dashboard Data Broker controller.
Fields displayed for <b>Production Switch</b> :	
<b>Address</b>	IP address of the Nexus or Catalyst switch.
<b>Platform Type</b>	The earlier selected platform type. This field can not be edited.
<b>Port</b>	The device communication port.  The port number is 80 for Nexus switches and 22 for Catalyst switches.
<b>Username</b>	Username for the device.
<b>Password</b>	Enter the required password to authenticate the username.
<b>Enable Password</b>	(Only for Catalyst switches) Enter the required password to enable the switch.

**Step 5** Click **Save**.

## Integrating Cisco Nexus Dashboard Data Broker with Cisco DNA Center

Cisco Digital Network Architecture Center (Cisco DNAC) is a powerful network controller and management dashboard that lets you take charge of your network.

For details about Cisco DNAC, see *relevant Cisco DNAC documentation*.

The Cisco DNAC controller can be integrated with Nexus Dashboard Data Broker. SPAN session configurations on the Catalyst switches are managed from the Nexus Dashboard Data Broker UI. Nexus Dashboard Data Broker creates a separate Project and Template(s) on Cisco DNAC while onboarding. Nexus Dashboard Data Broker shares the ports details of the Catalyst switches to Cisco DNAC. Based on the templates, Cisco DNAC creates SPAN sessions on the Catalyst switches.

Examples of Nexus Dashboard Data Broker templates on the Cisco DNAC controller:

```
monitor session $sessionNumber source $sourceType $sources $direction
monitor session $sessionNumber destination interface $destinationInterfaces
```

REST APIs are used for communication between the Nexus Dashboard Data Broker controller and Cisco DNAC.

## Tap Devices

Cisco Nexus Dashboard Data Broker Release 3.10.1 supports Cisco Nexus 3550-F L1 series switch as a Tap device. A Tap device is a device that makes a copy of network data but does not alter the data. Traffic from the Tap device reaches the Cisco Nexus Dashboard Data Broker for further processing. For more details about how Cisco Nexus 3550-F L1 is implemented as a Tap device with Cisco Nexus Dashboard Data Broker, see [About Tap Configurations](#), on page 146.

**Table 17: Tap Devices**

Column	Description
<b>IP Address</b>	IP address of the tap device.
<b>Device Name</b>	Name of the device.
<b>Platform</b>	Platform of the tap device.
<b>Node ID</b>	The unique ID of the tap device used for identification by the Nexus Dashboard Data Broker controller.
<b>Profile Name</b>	Associated profile name.  If the <b>Profile</b> option was not selected while creating a tap device, no information is displayed here.
<b>Version</b>	The software version of the tap device.
<b>Status Description</b>	The status of the connection between the Nexus Dashboard Data Broker controller and the tap device. The available options are: <ul style="list-style-type: none"> <li>• Successfully connected—successful connection</li> <li>• Authentication failure—incorrect credentials of the tap device</li> <li>• Connection timed-out—tap device not reachable within a period of time.</li> <li>• No route to host—wrong IP address of the tap device</li> <li>• Invalid response from device—incorrect device (any other device besides Cisco Nexus 3550-L1)</li> </ul>

The following actions can be performed from the **Tap Devices** tab:

- **Add Tap Device**—Use this to add a new tap device. See [Adding a Tap Device](#), on page 82 for details.
- **Assign/ Update Profile**—Use this action to add or update the profile for a tap device. See *Update Profile* for details about this task.
- **Reconnect Tap Device(s)**— Select the required device by checking the check box at the beginning of the row. Click **Actions** > **Reconnect Tap Device(s)**. A pop-up appears. Click **Reconnect** to reconnect

the selected tap devices. Use this option when you see a *Connection Timed Out* error between the tap device and Nexus Dashboard Data Broker controller.

- **Delete Tap Device**—Select the required tap device by checking the check box which is available at the beginning of the row. Click **Actions > Delete Device(s)**. You have two options:
  - **Delete**—disconnects the tap device from the Nexus Dashboard Data Broker controller.
  - **Purge and Delete**—disconnects the tap device from the Nexus Dashboard Data Broker controller and deletes associated configurations from the Nexus Dashboard Data Broker controller.

## Adding a Tap Device

Use this procedure to add Cisco Nexus 3550-F L1 as a tap device. The minimum supported software version is 1.15.0.

### Before you begin

- Enable HTTP on the tap device, using **configure http enable**.
- Ensure there are no pre-existing configurations on the tap device.

### Procedure

- Step 1** Navigate to **Devices > Tap Devices**.
- Step 2** From the **Actions** drop down list, select **Add Tap Device**.
- Step 3** In the **Add Tap Device** dialog box, enter the following details:

**Table 18: Add Tap Device**

Field	Description
<b>IP Address/ Hostname</b>	Enter the IP address of the tap device.
You can choose to add a tap device by either using the username of the device or using an associated profile. Select <b>Username</b> or <b>Profile</b> and fill in the relevant fields.	
<b>Username</b>	
<b>Username</b>	Enter a username to login to the device.
<b>Password</b>	Enter the password for the username.
<b>Profile</b>	
<b>Profile</b>	Select a profile from the drop-down list.
<b>Connection Type</b>	This field is read-only. The default value (REST) is displayed.

- Step 4** Click **Add Tap Device**.

## Device Groups

The **Device Groups** tab displays details of the device groups. A table is displayed with the following details:

*Table 19: Device Groups*

Column Name	Description
Group	The device group name.  This field is a hyperlink. Click the group name and a new pane is displayed on the right that has the list of devices included in the group. Additional actions that can be performed from here are: <ul style="list-style-type: none"><li>• <a href="#">Editing a Device Group</a></li></ul>
Devices	The number of devices in the device group.

The following actions can be performed from the **Device Groups** tab:

- **Add Device Group**—Use this to add a new device group. See [Adding a Device Group](#).
- **Delete Device Group**—Select the required device group by checking the check box which is available at the beginning of the row. Click **Actions > Delete Device Group(s)**. The selected device group(s) are deleted. If you choose the delete action without selecting a check box, an error is displayed. You will be prompted to select a device group.

## Adding a Device Group

Use this procedure to add a new device group.

### Procedure

- 
- Step 1** Navigate to **Devices > Device Groups**.
- Step 2** From the **Actions** drop down menu, select **Add Device Group**.
- Step 3** In the **Add Device Group** dialog box, enter the following details:

*Table 20: Add Device Group*

Field	Description
<b>General</b>	
Device Group Name	Enter a name for the device group.

Field	Description
Devices	<p>Click <b>Select Device(s)</b>.</p> <p>The <b>Select Device</b> dialog box opens. Check the check box corresponding to the device(s) you want to add to the group. Click <b>Select</b>.</p> <p><b>Note</b> Check if the device is already part of another group; if yes, the device is removed from the previous group and added to the new group.</p>

**Step 4** Click **Add Device Group**.

### Editing a Device Group

Use this procedure to edit a device group.

**Before you begin**

Add one or more device groups.

**Procedure**

**Step 1** Navigate to **Devices > Device Groups**.

**Step 2** Click a **Device Group** name.

A new pane is displayed on the right.

**Step 3** Click **Action > Edit Device Group**.

Enter the following details, in the displayed window.

*Table 21: Edit Device Group*

Field	Description
<b>General</b>	
Device Group Name	<p>Device group name.</p> <p>This field cannot be edited.</p>



Field	Description
Devices	<p>The devices which are currently part of the device group are displayed. You can delete devices from a group. To add more devices to the group, click <b>Select Device(s)</b>.</p> <p>The <b>Select Device</b> dialog box opens. Check the check box corresponding to the device(s) you want to add to the group. Click <b>Select</b>.</p> <p><b>Note</b> Check if the device is already part of another group; if yes, the device is removed from the previous group and added to the new group.</p>

**Step 4** Click **Save**.

---





## CHAPTER 9

# Connections

---

This chapter has details about the connections of the Cisco Nexus Dashboard Data Broker.

Beginning with Release 3.10.1, Cisco Nexus Data Broker (NDB) has been renamed to Cisco Nexus Dashboard Data Broker. However, some instances of NDB are present in this document, to correspond with the GUI, and installation folder structure. References of NDB/ Nexus Data Broker/ Nexus Dashboard Data Broker can be used interchangeably.

- [Connections, on page 87](#)
- [User Connections, on page 87](#)
- [Default Connections, on page 98](#)

## Connections

The **Connections** tab has the following subtabs:


- **User Connections**—user-defined connections to manage traffic between an input port and monitoring tool port. See [User Connections](#) for more details.
- **Default Connections**—by default, ingress traffic on the input ports is denied, until a user-defined connection is defined. See [Default Connections](#) for more details.

## User Connections

The **User Connections** tab displays details of all the user-defined connections between input port(s) (with or without filters) and monitoring tool port(s).

A table with the following details is displayed:

Table 22: User Connections

Column Name	Description
Connection Name	<p>The name of the connection.</p> <p>This field is a hyperlink. Click the name of the connection. A new pane is displayed on the right which has more information about the connection. You can view the topology of the connection in either <b>Deployment View</b> or <b>Network View</b>.</p> <p>Additional actions that can be performed here:</p> <ul style="list-style-type: none"> <li>• <b>Edit Connection</b>—Select this action to edit a connection. See <a href="#">Edit Connection</a> for details.</li> <li>• <b>Clone Connection</b>—Select this action to clone a connection. See <a href="#">Edit Connection</a> for details. Cloning a connection is similar to editing a connection.</li> </ul> <p>Click the <b>Details</b> icon (  ) to get additional details of the connection. A new window displays the following details for the selected connection:</p> <ul style="list-style-type: none"> <li>• General</li> <li>• Deployment View</li> <li>• Network View</li> <li>• Flow Statistics</li> <li>• Port Statistics</li> </ul>
Type	<p>Type of connection. The options are:</p> <ul style="list-style-type: none"> <li>• Normal— here, the connection applies filters on the input ports and redirects traffic to the monitoring tool.</li> <li>• Auto Priority— here, the connection redirects the traffic to the monitoring tool based on the set auto-priority number. For more details, see <a href="#">Auto Priority, on page 97</a>.</li> </ul>
Applied Filters	<p>The number of <b>Allow</b> and <b>Drop</b> filters applied to the connection. Matching traffic is either dropped or allowed based on the selection.</p> <p>This field is a hyperlink. Click the displayed number and a new pane opens on the right. A list of all the filters applied to the connection is displayed.</p>

Column Name	Description
<b>Input Port/ Input Port Groups</b>	<p>The number of input ports and/or input port groups of the connection.</p> <p>This field is a hyperlink. Click the displayed number and a new pane opens on the right. A list of sources (production devices from which traffic reaches the Nexus Dashboard Data Broker controller) and ports applicable to the connection is displayed.</p>
<b>Monitoring Tools/ Monitoring Tools Group</b>	<p>The number of monitoring tools and/or monitoring tool groups of the connection.</p> <p>This field is a hyperlink. Click the displayed number and a new pane opens on the right. A list of monitoring tools applicable to the connection is displayed.</p>
<b>Description</b>	Description of the connection.
<b>Created By</b>	User who created the connection.
<b>Last Modified By</b>	User who last modified the connection.

A color coded circle and a lock are displayed at the beginning of each row. The factors impacting the status of a connection are— operational and administration state of the source ports, operational state and administration state of the monitoring tools and the sessions involved in the connection.

- A green circle indicates that the connection is successful.
- A red circle indicates that the connection has failed.
- A yellow circle indicates the connection is partially successful; one or more input port(s) and monitoring tools have errors.
- A gray circle indicates that the connection is not operational; check the state of all the input ports and monitoring tools.

The lock symbol indicates that the connection is locked and unauthorized modification of the connection parameters is not allowed. Only the user (or administrator) who has created the connection or the user who has locked the connection can make required changes. You can lock a connection while adding a connection.

The following actions can be performed from the **User Connections** tab:

- **Add Connection**—Select this action to add a new connection. See [Add Connection](#) for details about this task.
- **Delete Connection**—Select the required connection(s) by checking the check box which is at the beginning of the row. Click the **Actions** button and, select **Delete Connection**. The selected connection(s) are deleted. If you choose the delete action without selecting a check box, an error is displayed. You will be prompted to select a connection.
- **Toggle Install**—Select the required connection(s) by checking the check box which is at the beginning of the row. Click the **Actions** button, select **Toggle Install** to install a connection. **Toggle Install** will install/ uninstall connection(s) on the NDB devices but the connection configuration will not be deleted from the Nexus Dashboard Data Broker controller.

If you choose the toggle install action without selecting a check box, an error is displayed. You will be prompted to select a connection.

You can disable deny ACL on all the ISL interfaces by setting the **configure.global.acls** parameter to false in the **config.ini** file. Ensure that you restart Nexus Dashboard Data Broker after making changes in the configuration file.

You can disable Global deny ACL or ISL deny ACL during the CLI upgrade or configuration upload by using the CLI upgrade command and setting the **configure.global.acls** parameter to false in the **config.ini** file. For example:

```
configure.global.acls=false
```

## Adding a Connection

Use this procedure to add a connection. A connection establishes a link between the input ports (with filters) of a device to the monitoring tool ports of the device.

### Before you begin

Complete these tasks:

- Define a filter for the connection
- Configure a monitoring tool (recommended)
- Configure an edge port (recommended)
- Use [Dry Run](#) (recommended)

Follow these restrictions and usage guidelines for creating a connection:

- Configure QinQ VLAN to add a new connection with auto priority across devices (with multiple hops).
- You can configure only one connection with auto priority for each input port/port group.

### Procedure

- Step 1** Navigate to **Connections > User Connections**.
- Step 2** From the **Actions** drop-down list, select **Add Connection**.
- Step 3** In the **Add Connection** dialog box, enter the following details:

*Table 23: Add Connection*

Field	Description
Connection Name	Enter the connection name.
Description	Enter a description for the connection.

Field	Description
<b>Priority</b>	<p>Enter the priority you want to set for the connection. By default, priority level is 100. Range is from 2 to 10000. Higher the number, greater the priority. For example, 200 indicates higher priority when compared to 100.</p> <p>Incoming traffic from the ports is matched based on priority. If two connections have the same inputs ports and same filters, traffic takes the connection with the higher priority.</p> <p><b>Note</b> By default, Edit is enabled for the Cisco NDB administrator role.</p>
<b>Lock Connection</b>	<p>Click the gray button to lock the connection. The gray button turns blue and moves to the right indicating that locking is enabled.</p> <p>Locking a connection prevents unauthorized changes to a connection.</p>
<b>AutoPriority</b>	<p>Click the gray button to enable auto priority. The gray button turns blue and moves to the right indicating that AutoPriority is enabled.</p> <p>When <b>AutoPriority</b> is enabled, the <b>Priority</b> field is disabled. NDB automatically assigns a priority for a connection based on certain criteria (monitoring tools and filters).</p> <p>Auto priority provides flexibility to map filters to multiple monitoring tools in a connection. For more details, see <a href="#">Auto Priority, on page 97</a>.</p>
<b>Connection Topology</b>	<p>Here, you can define <b>Input Port(s)</b>, <b>Filter(s)</b> and <b>Monitoring Tools(s)</b> for a connection.</p>

Field	Description
<b>Input Port</b>	<p>Select an input port for the connection.</p> <p>Click <b>Select Input Port(s)/ Group</b>. Select either <b>Input Port</b> or <b>Input Port Group</b>.</p> <p>If you select <b>Input Port</b>, a list of devices is displayed.</p> <ol style="list-style-type: none"> <li>To select a device, check the corresponding check box. Based on the selected device, the available ports of the device are displayed.</li> <li>To select a port, check the corresponding check box. Details of the selected port(s) are displayed on the right. The current status of the port is displayed by a color-coded circle.</li> </ol> <p><b>Note</b> Click <b>Add Input Port</b> to add an input port for the selected device. For the detailed procedure, see <i>Adding an Input Port</i> in the <b>Components</b> chapter.</p> <ol style="list-style-type: none"> <li>Click <b>Select</b> to include the selected source port(s) as part of the connection.</li> </ol> <p>If you select <b>Input Port Group</b>, a list of port groups is displayed.</p> <ol style="list-style-type: none"> <li>To select a port group, check the corresponding check box. Details of the selected port group(s) are displayed on the right. The current status of the port group is indicated by a color-coded circle.</li> </ol> <p><b>Note</b> Click <b>Add Input Port Group</b> to add an input port group. For the detailed procedure, see <i>Adding an Input Port</i> in the <b>Components</b> chapter.</p> <p>.</p> <ol style="list-style-type: none"> <li>Click <b>Select</b> to include the selected source port group(s) as part of the connection.</li> </ol>



Field	Description
Filter	<p>Click <b>Select Filter(s)</b>.</p> <p><b>a.</b> To select a filter, check the corresponding check box. Details of the selected filter(s) are displayed on the right. More than one filter can be selected. You can either choose to use the <b>Allow</b> or <b>Deny</b> behavior for a filter. Allow enables the traffic from the input ports to pass through; deny drops the traffic from the input ports.</p> <p><b>Note</b> Click <b>Add Filter</b> to add a filter. For the detailed procedure, see <a href="#">Adding a Filter</a>.</p> <p><b>b.</b> Click <b>Select</b> to include the selected filter(s) as part of the connection.</p> <p><b>Note</b> This field is disabled if <b>AutoPriority</b> is enabled.</p>

Field	Description
Monitoring Tools	<p>The <b>Select Monitoring Tool(s)/ Group</b> option is displayed if AutoPriority is not enabled.</p> <p>Click <b>Select Monitoring Tool(s)/ Group</b> . Select either <b>Monitoring Tool</b> or <b>Tool Group</b>.</p> <p>If you select <b>Monitoring Tool</b>, a list of monitoring tools is displayed.</p> <ol style="list-style-type: none"> <li>To select a monitoring tool, check the corresponding check box. The details of the monitoring tool are displayed on the right, with the current status of the monitoring tool. The status is indicated by color coded circles.</li> </ol> <p><b>Note</b> Click <b>Add Monitoring Tool</b> to add a monitoring tool. For the detailed procedure, see <a href="#">Adding a Monitoring Tool</a>.</p> <ol style="list-style-type: none"> <li>Click <b>Select</b> to include the monitoring tool(s) as part of the connection.</li> </ol> <p>If you select <b>Tool Group</b>, a list of monitoring tool groups is displayed.</p> <ol style="list-style-type: none"> <li>To select a tool group, check the corresponding check box. Details of the selected tool group(s) are displayed on the right. The current status of the tool group is indicated by a color coded circle.</li> </ol> <p><b>Note</b> Click <b>Add Monitoring Tool Group</b> to add a monitoring tool group. For the detailed procedure, see <a href="#">Adding a Monitoring Tool Group</a>.</p> <ol style="list-style-type: none"> <li>Click <b>Select</b> to include the selected tool group(s) as part of the connection.</li> </ol> <p>The <b>Select Monitoring Tool and Filter Pair</b> option is displayed if AutoPriority is enabled.</p> <ol style="list-style-type: none"> <li>Select one or more monitoring tool(s) and filter(s).</li> <li>Click <b>Select</b>.</li> </ol>

**Step 4** Click **Add Connection** to add the connection or **Install Connection** to add and deploy the connection on the NDB device.

## Editing or Cloning a Connection

Use this procedure to edit or clone a connection.

Editing a connection means changing the parameters of an existing connection.

Cloning a connection means creating a new connection with identical parameters of an existing connection, and then, changing the required parameters. Ensure to change the name of the connection before saving it.

### Before you begin

Create one or more connections.

## Procedure

**Step 1** Navigate to **Connections > User Connections**.

**Step 2** In the displayed table, click a **Connection Name**.

A new pane is displayed on the right.

**Step 3** Click **Actions** and select **Edit Connection**.

To clone a connection, select **Clone Connection**.

**Step 4** In the **Edit Connection** or **Clone Connection** dialog box, the current connection information is displayed. Modify these fields, as required:

*Table 24: Edit Connection/ Clone Connection*

Field	Description
<b>Connection Name</b>	Connection name.
<b>Description</b>	Description of the connection.
<b>Priority</b>	The current priority of the connection.
<b>Lock Connection</b>	Click the gray button to lock the connection. The gray button turns blue and moves to the right indicating that locking is enabled.  Locking a connection prevents unauthorized changes to a connection.
<b>Auto Priority</b>	If <b>Auto Priority</b> was not enabled while adding a connection, then this field is disabled.
<b>Connection Topology</b>	Here, you can define <b>Input Port(s)</b> , <b>Filter(s)</b> and <b>Monitoring Tools(s)</b> for a connection.

Field	Description
<b>Input Port</b>	<p>The current input port(s) included in the connection are displayed. Click the cross mark adjacent to an input port to delete the port from the connection. To edit the input ports, click <b>Select Input Port(s)/ Group</b>. Select either <b>Input Port</b> or <b>Input Port Group</b>.</p> <p>If you select <b>Input Port</b>, a list of devices is displayed.</p> <ol style="list-style-type: none"> <li>To select a device, check the corresponding check box. Based on the selected device, the available ports of the device are displayed.</li> <li>To select a port, check the corresponding check box. Details of the selected port(s) are displayed on the right.</li> <li>Click <b>Select</b> to include the selected source port(s) as part of the connection.</li> </ol> <p>If you select <b>Input Port Group</b>, a list of port groups is displayed.</p> <ol style="list-style-type: none"> <li>To select a port group, check the corresponding check box. Details of the selected port group(s) are displayed on the right.</li> <li>Click <b>Select</b> to include the selected source port group(s) as part of the connection.</li> </ol>
<b>Filter</b>	<p>The current filter(s) included in the connection are displayed. Click the cross mark adjacent to a filter to delete the filter from the connection. To edit filters, click <b>Select Filter(s)</b>.</p> <ol style="list-style-type: none"> <li>To select a filter, check the corresponding check box. Details of the selected filter(s) are displayed on the right. More than one filter can be selected.</li> <li>Click <b>Select</b> to include the selected filter(s) as part of the connection.</li> </ol>

Field	Description
Monitoring Tools	<p>The current monitoring tool(s) or tool group(s) included in the connection are displayed. Click the cross mark adjacent to a monitoring tool or tool group to delete it from the connection. To edit any of these, click <b>Select Monitoring Tool(s)/ Group</b> . Select either <b>Monitoring Tool</b> or <b>Tool Group</b>.</p> <p>If you select <b>Monitoring Tool</b>, a list of monitoring tools is displayed.</p> <ol style="list-style-type: none"> <li>To select a monitoring tool, check the corresponding check box. The details of the monitoring tool are displayed on the right, with the current status of the monitoring tool. The status is indicated by color coded circles.</li> <li>Click <b>Select</b> to include the monitoring tool(s) as part of the connection.</li> </ol> <p>If you select <b>Tool Group</b>, a list of monitoring tool groups is displayed.</p> <ol style="list-style-type: none"> <li>To select a tool group, check the corresponding check box. Details of the selected tool group(s) are displayed on the right. The current status of the tool group is indicated by a color coded circle.</li> <li>Click <b>Select</b> to include the selected tool group(s) as part of the connection.</li> </ol>

**Step 5** Click **Save**.

## Auto Priority

Auto priority provides flexibility to map filters to multiple destination devices in a connection. The priority of a connection with Auto-Priority is set to the value configured in the `config.ini` file. You can configure the `connection.autopriority.priorityValue` attribute in the `config.ini` file with a priority value to be used for all the new connections with auto-priority. The connection information lists the allowed filters along with the destination devices.

## Dry Run

You can estimate the amount of traffic generated for a new connection using the Dry Run feature. This feature samples the traffic for 30 seconds for the new connection and estimates the approximate traffic generated for the connection. You can use the Dry Run feature before adding a new connection. You can manage the Dry Run feature using the `mm.dryrun.timer` parameter in the `config.ini` file. To enable the Dry Run feature, set the `mm.dryrun.timer` parameter to a value greater than zero. If the `mm.dryrun.timer` parameter is set to zero, the Dry Run feature is disabled.

The Dry Run feature shows the topology for the new connection with information about the estimated traffic. The feature samples the traffic for few (`mm.dryrun.timer` value in `config.ini` file) seconds for the new connection and estimates the approximate traffic generated for the connection. Use the Dry Run feature before adding a new connection.

# Default Connections

The **Default Connections** tab displays details of the default Nexus Dashboard Data Broker connections. Default deny rules are system-configured on the input ports, monitoring tools and packet truncation ports. This means, by default, traffic received on the input ports is denied , until a user defined connection is configured.

By default, deny ACL is enabled on all the Inter Switch Links (ISL) interfaces causing all the traffic in the ISL interfaces to be dropped if there is no connection installed. The following connections are installed on the ISL interfaces:

- Default-Deny-ISL-*device\_name* connection with Default-Deny-All, Default-Deny-MPLS, and Default-Deny-ARP filters. This connection is supported on all the types of switches in NXAPI mode.
- Default-Deny-ISL-ICMP-*device\_name* connection with Default-Deny-ICMP and Default-Deny-ICMP-All filters. This connection is supported on Nexus 9200, 9300EX, 9300FX, 9500EX, and 9500FX switches in NXAPI mode.
- You can manage this feature using the mm.addDefaultISLDenyRules attribute in config.ini file. By default, the mm.addDefaultISLDenyRules attribute is not be present in config.in file. To disable this feature, you need to add the mm.addDefaultISLDenyRules attribute to config.ini file ans set it to false and restart the device. For example:

```
mm.addDefaultISLDenyRules = false
```

A table is displayed with the following details:

**Table 25: Default Connections**

Column Name	Description
<b>Connection Name</b>	<p>The default connection name.</p> <p>This field is a hyperlink. Click the name of the connection. A new pane is displayed on the right which has more information about the connection.</p> <p>The following actions can be performed here:</p> <ul style="list-style-type: none"> <li>• <b>Clone Connection</b>—Select this action to clone a connection. See <a href="#">Edit Connection</a> for details. Cloning a connection is similar to editing a connection.</li> </ul> <p><b>Note</b> Default connections cannot be edited.</p>
<b>Drop Filters</b>	<p>The number of drop filters for the connection.</p> <p>Drop filters on NDB drop the matching traffic.</p>
<b>Input / Monitoring Ports</b>	The number of input or monitoring ports.
<b>Description</b>	Description of the connection.



## CHAPTER 10

# Components

This chapter has details about the components of the Cisco Nexus Dashboard Data Broker.

Beginning with Release 3.10.1, Cisco Nexus Data Broker (NDB) has been renamed to Cisco Nexus Dashboard Data Broker. However, some instances of NDB are present in this document, to correspond with the GUI, and installation folder structure. References of NDB/ Nexus Data Broker/ Nexus Dashboard Data Broker can be used interchangeably.



---

**Note** All references of DNA/ DNAC in this chapter/guide denote Cisco DNA/ Cisco DNAC.

---

- [Filters, on page 99](#)
- [Global Configuration, on page 111](#)
- [Input Ports , on page 120](#)
- [Monitoring Tools, on page 128](#)
- [Port Groups, on page 136](#)
- [Span Destination, on page 142](#)
- [Tap Configurations, on page 143](#)
- [User Defined Field, on page 147](#)

## Filters

The **Filters** tab displays details of all the filters available on the Nexus Dashboard Data Broker controller. The tab provides information of the filtering criteria (used in a connection) for the incoming traffic.

The default filters include the following protocols for packet filtering:

- Default-match-all
- Default-match-IP
- Default-match-ARP
- Default-match-MPLS ( unicast and multicast)
- Default-match-ICMP
- Default-match-ICMP-All

A table is displayed with the following details:

**Table 26: Filters**

Column Name	Description
<b>In Use</b>	A green tick mark indicates that the filter is in use, in a connection.
<b>Filter</b>	<p>The filter name.</p> <p>Click <b>Filter</b>. A new pane is displayed on the right which has more information about the filter. The following additional actions can be performed from here:</p> <ul style="list-style-type: none"> <li>• <a href="#">Editing a Filter</a></li> </ul> <p><b>Note</b> Default filters cannot be edited.</p>
<b>Bidirectional</b>	<p>If a filter is bidirectional, a <b>Yes</b> is displayed; else a <b>No</b> is displayed.</p> <p>If a filter is marked bidirectional, incoming and outgoing traffic is filtered at the same port.</p>
<b>Ethertype</b>	Layer 2 ethertype of the filter.
<b>Protocol</b>	Layer 3 protocol used by the filter.
<b>Advanced Filter(s)</b>	The advanced filters associated with the filter.
<b>Created By</b>	The user who created the filter.
<b>Last Modified By</b>	The user who last modified the filter.

The following actions can be performed from the **Filters** tab:

- **Add Filter**—Use this to add a new filter. See [Adding a Filter](#) for details about this task.
- **Delete Filter**—Select the filter(s) to be deleted by checking the check box which is available at the beginning of the row and then click **Actions > Delete Filter(s)**. The selected filter(s) is deleted. If you choose the delete action without selecting a check box, an error is displayed. You will be prompted to select a filter.

## Adding a Filter

Use this procedure to add a filter. The incoming traffic is matched based on the parameters defined in a filter.



## Procedure

- Step 1** Navigate to **Components > Filters**.
- Step 2** From the **Actions** drop down menu, select **Add Filter**.
- Step 3** In the **Add Filter** dialog box, enter the following details:

*Table 27: Add Filter*

Field	Description
<b>Filter Name</b>	Enter a name for the filter.
<b>Bidirectional</b>	Check this box if you want the filter to capture bidirectional traffic information, that is, from a source IP, source port, or source MAC address to a destination IP, destination port, or destination MAC address, and from a destination IP, destination port, or destination MAC to a source IP, source port, or source MAC address.

Field	Description
Layer 2	<p>The options displayed for using Layer 2 filtering are:</p> <ul style="list-style-type: none"> <li>• <b>Ethernet Type</b>—Select the Ethernet Type from the drop-down list. The options are: <ul style="list-style-type: none"> <li>• IPv4</li> <li>• IPv6</li> <li>• LLDP</li> <li>• MPLS</li> <li>• ARP</li> <li>• All Ethernet Types</li> </ul> </li> <li>• <b>Predefined Ethernet Types</b>— If you choose this option, all predefined Ethernet types contained in the <code>config.ini</code> file are associated with the rule, and you should not configure any other parameters.</li> <li>• <b>Enter Ethernet Type</b>—If you choose this option, enter the ethernet type in hexadecimal format.</li> <li>• <b>VLAN Identification Number</b>—Enter the VLAN ID for the Layer 2 traffic. You can enter a single VLAN ID, a range of VLAN ID values, or comma-separated VLAN ID values and VLAN ID ranges. Maximum value is 4095.</li> <li>• <b>VLAN Priority</b>—Enter the VLAN priority for the traffic. VLAN Priority is matched for Layer 2 traffic only.</li> <li>• <b>Source MAC Address</b>—Enter the MAC address of the source device. MAC addresses are matched for Layer 2 traffic only.</li> <li>• <b>Destination MAC Address</b>—Enter the MAC address of the destination device. MAC addresses are matched for Layer 2 traffic only.</li> <li>• <b>MPLS Label Value</b>—Enter the MPLS value for Label 1, Label 2, Label 3, Label 4.  The <b>MPLS Label Value</b> fields are displayed only if the <b>Ethernet Type</b> is set to MPLS. The MPLS label values are matched.</li> </ul>

Field	Description
<b>Layer 3</b> To enable options for Layer 3, choose <b>IPv4</b> or <b>IPv6</b> as <b>Ethertype</b> under the Layer 2 tab.	

Field	Description
	<p>The options displayed for Layer 3 filtering are:</p> <ul style="list-style-type: none"> <li>• Source IP Address—Enter the Source IP address of the Layer 3 traffic. This can be one of the following: <ul style="list-style-type: none"> <li>• The host IP address in the standard IPv4 or IPv6 format</li> <li>• An IPv4 or IPv6 address range</li> <li>• Combination of an address range and standard IP addresses; example: 10.1.1.1, 10.1.1.2-10.1.1.5</li> <li>• Comma-separated discontinuous IP addresses; example: 10.1.1.1, 10.1.1.2, 10.1.1.5</li> </ul> </li> </ul> <p><b>Note</b> If you configure a range of Layer 3 source IP addresses, you cannot configure ranges of Layer 4 source or destination ports.</p> <p>If you configure a range of Layer 3 source IP addresses, you cannot configure ranges of Layer 2 VLAN identifiers.</p> <ul style="list-style-type: none"> <li>• Destination IP Address—Enter the Destination IP address of the Layer 3 traffic. This can be one of the following: <ul style="list-style-type: none"> <li>• The host IP address in the standard IPv4 or IPv6 format</li> <li>• An IPv4 or IPv6 address range</li> <li>• Combination of an address range and standard IP addresses; example: 10.1.1.1, 10.1.1.2-10.1.1.5</li> <li>• Comma-separated discontinuous IP addresses; example: 10.1.1.1, 10.1.1.2, 10.1.1.5</li> </ul> </li> </ul> <p><b>Note</b> If you configure a range of Layer 3 source IP addresses, you cannot configure ranges of Layer 4 source or destination ports.</p> <p>If you configure a range of Layer 3 source IP addresses, you cannot configure ranges of Layer 2 VLAN identifiers.</p> <ul style="list-style-type: none"> <li>• L4 Protocol—Select a Layer 4 protocol from the drop down list or enter a <b>Protocol Number</b>.</li> <li>• Advanced Filter—Click the button to enable advanced filtering and check the check-boxes to select the required options. For details about the options pertaining to Advanced Filters, see <a href="#">Advanced Filters</a>.</li> <li>• Custom Filter—Click the button to enable custom filtering using User Defined Fields (UDF). Click <b>Select UDFs</b> and select a filter in the <b>Select Custom Filters</b> window. The</li> </ul>

Field	Description
	<p>UDFs created using <a href="#">Adding a UDF</a> are displayed here.</p> <p>The selected UDF(s) are displayed in a table. Enter the following details for the selected UDF:</p> <ul style="list-style-type: none"><li>• Value—is the value to be matched in decimal notation (0-65535). E.g. if you want to match 0x0806 enter 2054 which is 0x0806 in decimal notation.</li><li>• Mask—is the mask to be applied to the value for matching purposes. E.g. to exactly match 2054 (0x0806) enter 65535 (0xffff), to match 2048-2063 (0x0800-0x080f) use 65520 (0xffff0).</li></ul> <p><b>Note</b> When the monitoring tool port is on an ISL device, it is mandatory to select <b>Add Default UDF for inner vlan</b> checkbox. Ensure the input port has Q-in-Q configured.</p>

Field	Description
<b>Layer 4</b> To enable options for Layer 4, choose <b>IPv4</b> or <b>IPv6</b> as <b>Ethertype</b> under the Layer 2 tab and choose <b>TCP</b> or <b>UDP</b> as <b>L4 Protocol</b> under the Layer 3 tab.	<p>The options displayed for Layer 4 filtering are:</p> <ul style="list-style-type: none"> <li>• Source Port—Select the source port from the drop down list. The options are:               <ul style="list-style-type: none"> <li>• FTP (Data)</li> <li>• FTP (Control)</li> <li>• SSH</li> <li>• Telnet</li> <li>• HTTP</li> <li>• HTTPS</li> </ul> </li> <li>• Enter Source Port—Enter the source port. You can enter comma separated single port numbers or a range of source port numbers.               <p><b>Note</b> If you enter a range of Layer 4 source ports, you cannot configure ranges of Layer 3 IP addresses or Layer 2 VLAN identifiers.</p> </li> <li>• Destination Port—Select the destination port from the drop down list. The options are:               <ul style="list-style-type: none"> <li>• FTP (Data)</li> <li>• FTP (Control)</li> <li>• SSH</li> <li>• Telnet</li> <li>• HTTP</li> <li>• HTTPS</li> </ul> </li> <li>• Enter Destination Port—Enter the source port. You can enter comma separated single port numbers or a range of source port numbers.               <p><b>Note</b> If you enter a range of Layer 4 destination ports, you cannot configure ranges of Layer 2 VLAN identifiers or Layer 3 IP addresses.</p> </li> </ul>
<b>Layer 7</b>	Not supported.

**Note**

For Custom Filtering: You can add upto four UDFs for a filter. UDF option is enabled for IPv4 and IPv6 ethertypes.

**Step 4** Click **Add Filter** to add the filter.

## Editing or Cloning a Filter

Use this procedure to edit or clone a filter.

Editing a filter means changing the parameters of an existing filter.

Cloning a filter means creating a new filter with the same parameters of an existing filter and making the required changes to the filter parameters. Ensure to change the name of the filter before saving it.



**Note** Default filters cannot be edited.

### Before you begin

Add one or more filters.

### Procedure

**Step 1** Navigate to **Components > Filters**.

**Step 2** In the displayed table, click a **Filter**.

A new pane is displayed on the right.

**Step 3** Click **Actions** and select **Clone Filter**.

**Step 4** In the **Clone Filter** or **Edit Filter** dialog box, the current filter information is displayed. Modify these fields, as required:

*Table 28: Edit/ Clone Filter*

Field	Description
<b>Filter Name</b>	Name of the filter.
<b>Bidirectional</b>	Check this box if you want the filter to capture bidirectional traffic information, that is, from a source IP, source port, or source MAC address to a destination IP, destination port, or destination MAC address, and from a destination IP, destination port, or destination MAC to a source IP, source port, or source MAC address.

Field	Description
Layer 2	<p>The options displayed while using Layer 2 are:</p> <ul style="list-style-type: none"> <li>• Ethernet Type—Select the Ethernet Type from the drop-down list. The options are: <ul style="list-style-type: none"> <li>• IPv4</li> <li>• IPv6</li> <li>• LLDP</li> <li>• MPLS</li> <li>• ARP</li> <li>• All Ethernet Types</li> </ul> </li> <li>• Predefined Ethernet Types— If you choose this option, all predefined Ethernet types contained in the <code>config.ini</code> file are associated with the rule, and you should not configure any other parameters.</li> <li>• Enter Ethernet Type—If you choose this option, enter the ethernet type in hexadecimal format.</li> <li>• VLAN Identification Number—Enter the VLAN ID for the Layer 2 traffic. You can enter a single VLAN ID, a range of VLAN ID values, or comma-separated VLAN ID values and VLAN ID ranges. Maximum value is 4095.</li> <li>• VLAN Priority—Enter the VLAN priority for the traffic. VLAN Priority is matched for Layer 2 traffic only.</li> <li>• Source MAC Address—Enter the MAC address of the source device. MAC addresses are matched for Layer 2 traffic only.</li> <li>• Destination MAC Address—Enter the MAC address of the destination device. MAC addresses are matched for Layer 2 traffic only.</li> <li>• MPLS Label Value—Enter the MPLS value for Label 1, Label 2, Label 3, Label 4.  The <b>MPLS Label Value</b> fields are displayed only if the <b>Ethernet Type</b> is set to MPLS. The MPLS label values are matched.</li> </ul>



Field	Description
<p><b>Layer 3</b></p> <p>To enable options for Layer 3, choose <b>IPv4</b> or <b>IPv6</b> as <b>Ethertype</b> under the Layer 2 tab.</p>	<p>The options displayed while using Layer 3 are:</p> <ul style="list-style-type: none"> <li>Source IP Address—Enter the Source IP address of the Layer 3 traffic. This can be one of the following: <ul style="list-style-type: none"> <li>The host IP address in the standard IPv4 or IPv6 format</li> <li>An IPv4 or IPv6 address range</li> <li>Combination of an address range and standard IP addresses; example: 10.1.1.1, 10.1.1.2-10.1.1.5</li> <li>Comma-separated discontinuous IP addresses; example: 10.1.1.1, 10.1.1.2, 10.1.1.5</li> </ul> </li> </ul> <p><b>Note</b> If you configure a range of Layer 3 source IP addresses, you cannot configure ranges of Layer 4 source or destination ports.</p> <p>If you configure a range of Layer 3 source IP addresses, you cannot configure ranges of Layer 2 VLAN identifiers.</p> <ul style="list-style-type: none"> <li>Destination IP Address—Enter the Destination IP address of the Layer 3 traffic. This can be one of the following: <ul style="list-style-type: none"> <li>The host IP address in the standard IPv4 or IPv6 format</li> <li>An IPv4 or IPv6 address range</li> <li>Combination of an address range and standard IP addresses; example: 10.1.1.1, 10.1.1.2-10.1.1.5</li> <li>Comma-separated discontinuous IP addresses; example: 10.1.1.1, 10.1.1.2, 10.1.1.5</li> </ul> </li> </ul> <p><b>Note</b> If you configure a range of Layer 3 source IP addresses, you cannot configure ranges of Layer 4 source or destination ports.</p> <p>If you configure a range of Layer 3 source IP addresses, you cannot configure ranges of Layer 2 VLAN identifiers.</p> <ul style="list-style-type: none"> <li>L4 Protocol—Select a Layer 4 protocol from the drop down list.</li> <li>Advanced Filter—Click the button to enable advanced filtering and check the check-boxes to select the required options. For more details about Advanced Filters, see <a href="#">Advanced Filters</a>.</li> <li>Custom Filter—Click the button to enable custom filtering using User Defined Fields (UDF). Click <b>Select UDFs</b> and select a filter in the <b>Select Custom Filters</b> window.</li> </ul>

Field	Description
<p><b>Layer 4</b></p> <p>To enable options for Layer 4, choose <b>IPv4</b> or <b>IPv6</b> as <b>Ethertype</b> under the Layer 2 tab and choose <b>TCP</b> or <b>UDP</b> as <b>L4 Protocol</b> under the Layer 3 tab.</p>	<p>The options displayed while using Layer 4 are:</p> <ul style="list-style-type: none"> <li>• Source Port—Select the source port from the drop down list. The options are: <ul style="list-style-type: none"> <li>• FTP (Data)</li> <li>• FTP (Control)</li> <li>• SSH</li> <li>• Telnet</li> <li>• HTTP</li> <li>• HTTPS</li> </ul> </li> <li>• Enter Source Port—Enter the source port. You can enter comma separated single port numbers or a range of source port numbers. <p><b>Note</b> If you enter a range of Layer 4 source ports, you cannot configure ranges of Layer 3 IP addresses or Layer 2 VLAN identifiers.</p> </li> <li>• Destination Port—Select the destination port from the drop down list. The options are: <ul style="list-style-type: none"> <li>• FTP (Data)</li> <li>• FTP (Control)</li> <li>• SSH</li> <li>• Telnet</li> <li>• HTTP</li> <li>• HTTPS</li> </ul> </li> <li>• Enter Destination Port—Enter the source port. You can enter comma separated single port numbers or a range of source port numbers. <p><b>Note</b> If you enter a range of Layer 4 destination ports, you cannot configure ranges of Layer 2 VLAN identifiers or Layer 3 IP addresses.</p> </li> </ul>
<b>Layer 7</b>	Not supported.

**Step 5** Click **Save**.

## Advanced Filters

Advanced filtering provides multiple options to filter (permit or deny) the traffic based on Ethernet type and attributes such as Acknowledgment, FIN, Fragments, PSH, RST, SYN, DSCP, Precedence, TTL, packet-length, and NVE. Advanced filtering is available for the following Ethernet types and options:

**Table 29: Advanced Filtering Support**

Data Type	Supported Options
IPv4	DSCP, Fragment, Precedence, and TTL
IPv4 with TCP	Acknowledgment, DSCP, Fragment, FIN, Precedence, PSH, RST, SYN, and TTL
IPv4 with UDP	DSCP, Fragment, Precedence, and TTL
IPv6	DSCP and Fragment
IPv6 with TCP	Acknowledgment, DSCP, Fragment, FIN, PSH, RST, and SYN
IPv6 with UDP	DSCP and Fragment



**Note** Advanced Filtering is available only for NX-API on Cisco Nexus 9000 platform.

The Time to Live (TTL) attributes range from 0 to 255. For Nexus 9200 devices, the maximum value of TTL that can be set is 3. For rest of the Nexus 9000 series devices, the maximum TTL value can be 3 for NX-OS version 7.0(3)I6(1) and above. For NXOS versions 7.0(3)I4(1) and below, you can configure any value within the range.

### Limitations for using Advanced Filtering

While configuring Advanced Filters, you cannot:

- Configure DSCP and precedence together.
- Configure fragments and ACK or SYN or FIN or PSH or RST together.
- Configure fragments and port numbers with UDP and IPv4 or IPv6 combination.
- Configure precedence and HTTP methods with IPv4 and TCP combination.

## Global Configuration

The **Global Configuration** tab displays the devices connected to the Nexus Dashboard Data Broker controller. New devices added to the Nexus Dashboard Data Broker controller are displayed here by default.



**Note** Only *Connected* devices (connection status indicated in green) are displayed here. If a device is added to the Nexus Dashboard Data Broker controller, but is *not connected* (connection status indicated in red), then, that device is not displayed here. To check the status of a device, see [NDB Devices](#).

A table with the following details is displayed:

**Table 30: Global Configuration**

Column Name	Description
<b>Device</b>	The device name.  This is a hyperlink, click the <b>Device</b> name to get the global configuration details of the device.
<b>Loadbalancing</b>	Displays the type of load balancing. The options are: <ul style="list-style-type: none"> <li>• Symmetric</li> <li>• Non-symmetric</li> </ul>
<b>PTP</b>	Displays if PTP is enabled or not. The options are: <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>
<b>Jumbo MTU</b>	The Jumbo MTU size for the device.  Jumbo MTU is the maximum MTU that can be configured for a device.
<b>MPLS Strip</b>	Displays if MPLS stripping is enabled or not on the device. The options are: <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>
<b>MPLS Filter</b>	Displays if MPLS filtering on the device, is enabled or not. The options are: <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>
<b>Netflow</b>	Displays if Netflow on the device, is enabled or not. The options are: <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>

The following actions can be performed from the **Global Configuration** tab:

- **Edit Global Configuration**—For details of the procedure, see [Editing Global Configuration for a Device, on page 113](#).

## Editing Global Configuration for a Device

Use this procedure to edit global configuration for a device. You can make global changes to the parameters of a device. For example, the Jumbo MTU value set here, defines the MTU value for an input port of the device.

When a device is created, some basic configurations are created and some default values are set. Use this procedure to change or add one or more parameters for a device.

### Before you begin

Create one or more devices. Check the status of the device.

### Procedure

- Step 1** Navigate to **Components > Global Configuration**.
- Step 2** Select a device by checking the check box at the beginning of the row.
- Step 3** From the **Actions** drop down menu, select **Edit Global Configuration**.
- Step 4** In the **Edit Global Configuration** dialog box, enter the following details:

*Table 31: Edit Global Configuration*

Field	Description
<b>General</b>	
<b>Device</b>	The device name is displayed based on your earlier selection.
<b>Load Balancing Type Configuration</b>	Select <b>Symmetric</b> or <b>Non-symmetric</b> from the drop-down list. For details about load balancing, see <a href="#">Symmetric and Non-Symmetric Load Balancing</a> , on page 75.
<b>Hashing Configuration</b>	Select a hashing configuration from the drop-down list. The displayed drop-down list is dynamic and depends on the selected load balancing type.
<b>Hashing Type</b>	Select a hashing type from the drop-down list.
<b>MPLS Configuration</b>	

Field	Description
<b>MPLS Strip Type Configuration</b>	<p>Click the gray button to enable MPLS strip type configuration. The button turns blue and moves to the right.</p> <p>All the MPLS packets from the input ports are stripped of the MPLS header.</p> <p><b>Note</b> On Cisco Nexus 9300-GX Series switches, MPLS strip feature works only after switch reload.</p>
<b>Label Age</b>	<p>Set the time period after which the MPLS labels will age out. This field is available only for select devices.</p> <p>Supported platforms are the following Cisco Nexus Series switches - 93128TX, 3172, 3164, 3232, 3132C-Z.</p>
<b>Enable MPLS Filter Configuration</b>	<p>Click the gray button to enable MPLS filter configuration. The button turns blue and moves to the right.</p> <p>MPLS filter configuration enabled here, is applied to the input port of the device.</p>
<b>sFlow Configuration</b>	
<b>Enable sFlow</b>	<p>Click the gray button to enable Sampled Flow (sFlow). The button turns blue and moves to the right.</p> <p>For details about sFlow, see <a href="#">Sampled Flow</a> , on page 120.</p> <p>Enter the following details:</p> <ul style="list-style-type: none"> <li>• <b>Agent IP Address</b>— Enter the agent ip address.</li> <li>• <b>Select VRF</b>—Select a VRF from the drop-down list.</li> <li>• <b>Collector IP Address</b> —Enter an IP address for the collector port.</li> <li>• <b>Collector UDP Port</b> —Enter the UDP port for the sFlow collector.</li> <li>• <b>Counter Poll Interval</b>—Enter a poll interval value for sFlow.</li> <li>• <b>Max Datagram Size</b>—Enter the maximum datagram size.</li> <li>• <b>Max Sampled Size</b>—Enter the maximum sampled size.</li> <li>• <b>Sampling Rate</b> —Enter the data sampling rate.</li> <li>• <b>Data Sources</b>—Click <b>Select Ports</b> and select the ports by checking the required check boxes and click <b>Add</b>.</li> </ul> <p><b>Note</b> To verify sflow configuration on a device, use the <b>show sflow</b> command.</p>

Field	Description
<b>PTP Configuration</b>	
<b>Enable PTP</b>	<p>Click the gray button to enable PTP and receive updates from the master. The button turns blue and moves to the right.</p> <p>PTP enabled here is used for timestamping in the inputs ports and monitoring tools.</p> <p>For details about PTP, see <a href="#">Precision Time Protocol, on page 119</a>.</p> <p>The following fields are displayed:</p> <ul style="list-style-type: none"> <li>• <b>Source IP Address</b>— Enter the source IP address for receiving PTP updates.</li> <li>• <b>Ports</b>—Click <b>Select Ports</b> and check the check boxes to select the required ports to which the PTP source IP is connected.</li> </ul> <p><b>Note</b> You need to enable PTP for all the devices in the network to ensure PTP clock time synchronization.</p>
<b>Jumbo MTU Configuration</b>	
<b>MTU Value</b>	<p>Enter MTU value; range is 1502 to 9216. Jumbo MTU sets the maximum MTU value the device can accept.</p> <p>MTU size for traffic is typically 1500. To receive traffic with MTU more than 1500, enable this. The MTU value defined here is applied on the incoming traffic on the input ports of a device.</p> <p>Click <b>Reset to Default</b> to set the MTU value to the default value of 1500.</p> <p><b>Note</b> MTU value must be an even number, in the specified range.</p>
<b>Netflow Configuration</b>	
<b>Enable Netflow</b>	<p>Click the gray button to enable netflow. The button turns blue and moves to the right.</p> <p>For details about Netflow, see <a href="#">Netflow, on page 120</a>.</p> <p>To define the Netflow parameters, complete the following configurations (in the specified order):</p> <ul style="list-style-type: none"> <li>• <a href="#">Adding a Record for NetFlow, on page 116</a></li> <li>• <a href="#">Adding an Exporter for NetFlow, on page 117</a></li> <li>• <a href="#">Adding a Monitor for NetFlow, on page 118</a></li> </ul> <p>To complete the NetFlow configuration, associate the NetFlow Monitor to an input port. See <a href="#">Adding an Input Port, on page 122</a>.</p>

**Step 5** Click **Save**.

## Adding a Record for NetFlow

Use this procedure to create a NetFlow record.

A flow record defines the keys that NetFlow uses to identify packets and other fields of interest that NetFlow gathers for the flow. The flow record determines the size of the data to be collected for a flow. The key fields are specified with the *match* keyword.

### Procedure

- Step 1** Navigate to **Components > Global Configuration**.
- Step 2** Select a device by checking the check box at the beginning of the row.
- Step 3** From the **Actions** drop down menu, select **Edit Global Configuration**.
- Step 4** In the **Edit Global Configuration** dialog box, click the gray button to **Enable Netflow**.
- Step 5** Click **Add Record** and enter the following details:

*Table 32: Add Record*

Field	Description
<b>Name</b>	Name of the record.
<b>Description</b>	Description for the record.
<b>Collect</b>	<p>Define the collection parameters.</p> <p>Check the corresponding check box to enable collection based on one or more of the following parameters:</p> <ul style="list-style-type: none"> <li>• Counter Bytes</li> <li>• Counter Packets</li> <li>• IP Version</li> <li>• Transport TCP Flags</li> <li>• System Uptime First</li> <li>• System Uptime Last</li> </ul>
<b>Match</b>	<p>Define the match parameters.</p> <p>The options available are <b>Layer 2</b> and <b>Layer 3/4</b>. Click either of them to select the match parameters. These parameters are discussed in the subsequent rows.</p>



Field	Description
<b>Layer 2</b>	<p>Check the check box to enable one or more matching Layer 2 parameters.</p> <ul style="list-style-type: none"> <li>• Mac Source Address</li> <li>• Mac Destination Address</li> <li>• Ethertype</li> <li>• VLAN</li> </ul>
<b>Layer 3/4</b>	<p>Check the check box to enable one or more matching Layer 3 and/or Layer 4 parameters.</p> <ul style="list-style-type: none"> <li>• IP Protocol</li> <li>• IP TOS</li> <li>• Transport Source Port</li> <li>• Transport Destination Port</li> <li>• IPv4 Source Address</li> <li>• IPv4 Destination Address</li> <li>• IPv6 Source Address</li> <li>• IPv6 Destination Address</li> <li>• IPv6 Flow Label</li> <li>• IPv6 Options</li> </ul>

**Step 6** Click **Add Record**.

## Adding an Exporter for NetFlow

Use this procedure to create a NetFlow exporter. The flow exporter configuration defines the export parameters for a flow and specifies reachability information for the remote NetFlow Collector.

A flow exporter contains network layer and transport layer details for the NetFlow export packet.

### Procedure

- Step 1** Navigate to **Components > Global Configuration**.
- Step 2** Select a device by checking the check box at the beginning of the row.
- Step 3** From the **Actions** drop down menu, select **Edit Global Configuration**.
- Step 4** In the **Edit Global Configuration** dialog box, click the gray button to **Enable Netflow**.

**Step 5** Click **Add Exporter** and enter the following details:

*Table 33: Add Exporter*

Field	Description
<b>Name</b>	Name of the exporter.
<b>Description</b>	Description of the exporter.
<b>Destination</b>	Export destination IP address. Check the corresponding check box to enable collection based on one or more of the following parameters:
<b>Source</b>	Source IP address. Interface on the device through which the flow cache reaches the destination.
<b>UDP Port</b>	UDP port where the NetFlow collector is listening for NetFlow packets. The range is from 1 to 65535.
<b>DSCP</b>	The differentiated services codepoint value. The range is from 0 to 63.
<b>Version</b>	The NetFlow export version. This field cannot be changed. <b>Note</b> Cisco NX-OS supports the Version 9 export format.
<b>Option Exporter</b>	Flow exporter statistics resend timer. The range is from 1 to 86400 seconds.
<b>Template Data Timeout</b>	Template data resend timer. The range is from 1 to 86400 seconds.

**Step 6** Click **Add Exporter**.

## Adding a Monitor for NetFlow

Use this procedure to create a NetFlow monitor.

You can create a flow monitor and associate it with a flow record and a flow exporter. All of the flows that belong to a monitor use the associated flow record to match on the different fields, and the data is exported to the specified flow exporter.

### Before you begin

Complete the following configurations:

- Adding a record
- Adding an exporter

## Procedure

- Step 1** Navigate to **Components > Global Configuration**.
- Step 2** Select a device by checking the check box at the beginning of the row.
- Step 3** From the **Actions** drop down menu, select **Edit Global Configuration**.
- Step 4** In the **Edit Global Configuration** dialog box, click the gray button to **Enable Netflow**.
- Step 5** Click **Add Monitor** and enter the following details:

*Table 34: Add Monitor*

Field	Description
Name	Name of the monitor.
Description	Description of the monitor.
Record	Click <b>Select Record</b> . In the <b>Select Record</b> window, choose a record by clicking the corresponding radio button. The details of the selected record are displayed on the right. Click <b>Select</b> .
Exporter	Click <b>Select Exporter</b> . In the <b>Select Exporter</b> window, choose an exporter by selecting the corresponding check box. The details of the selected exporter are displayed on the right. Click <b>Select</b> .  <b>Note</b> You can select a maximum of two flow exporters for a monitor

- Step 6** Click **Add Monitor**.

## Precision Time Protocol

Precision Time Protocol (PTP) devices include ordinary clocks, boundary clocks, and transparent clocks. Non-PTP devices include ordinary network switches, routers, and other infrastructure devices. A PTP system can consist of a combination of PTP and non-PTP devices.

PTP is a distributed protocol that specifies how real-time PTP clocks in the system synchronize with each other. These clocks are organized into a master-member synchronization hierarchy with the grandmaster clock, the clock at the top of the hierarchy, determining the reference time for the entire system. Synchronization is achieved by exchanging PTP timing messages, with the members using the timing information to adjust their clocks to the time of their master in the hierarchy. PTP operates within a logical scope called a PTP domain.

PTP is a time synchronization protocol for nodes distributed across a network. Its hardware timestamp feature provides excellent accuracy.

PTP is supported on the following platforms:

- Cisco Nexus 9200 switches

- Cisco Nexus 9300 switches—9300-FX, FX2, EX
- Cisco Nexus 9500 switches—9500-FX, EX
- Cisco Nexus 3548 switches



**Note** After PTP is configured, the default PTP configuration is synchronized with all the ISL ports of the corresponding device.

See [Editing Global Configuration for a Device, on page 113](#) for configuring PTP.

## Netflow

NetFlow identifies packet flows for ingress IP packets and provides statistics based on these packet flows. NetFlow does not require any change to either the packets themselves or to any networking device.

In order to provide enough free space to monitor flows, the ing-netflow TCAM region is carved to 512 by default on Cisco Nexus 9300-FX platform switches. If more space is required, use the **hardware access-list tcam region ing-netflow size** command to modify the size of this TCAM region, using a multiple of 512.

Netflow is supported on the following platforms:

- Cisco Nexus 9300 switches—9300-FX, FX2, EX
- Cisco Nexus 9500 switches—9500-FX, EX

See [Editing Global Configuration for a Device, on page 113](#) for configuring Netflow.

For more information about Netflow, see *Cisco Nexus 9000 Series NX-OS System Management Configuration Guide*.

## Sampled Flow

You can manage Sampled Flow (sFlow) on Nexus Dashboard Data Broker that are based on NX-API. sFlow allows you to monitor real-time traffic in data networks that contain switches and routers. It uses the sampling mechanism in the sFlow agent software on switches and routers to monitor traffic and to forward the sample data to the central data collector.

See [Editing Global Configuration for a Device, on page 113](#) for configuring sFlow.

## Input Ports

The **Input Ports** tab displays details of the inputs ports on the NDB devices.

When an Edge-SPAN or an Edge-TAP or an Remote Source Edge-SPAN port is defined in the NX-API mode of configuration, the **spanning-tree bpdupfilter enable** command is automatically configured in the interface mode on the ports to filter the BPDU packets. This configuration is applicable for all Cisco Nexus 3000 and 9000 Series switches.

Ensure to configure the **spanning-tree bpdupfilter enable** command on all the inter-switch ports for Cisco Nexus series switches.

A table with the following details is displayed:

**Table 35: Input Ports**

Column Name	Description
<b>Device</b>	The device on which the input port is configured.  This field is a hyperlink. Click the Device name to view more information about the device. For details and procedures, see <a href="#">Devices, on page 65</a> chapter.
<b>Port</b>	The port of the device that is configured as an input port.  This field is a hyperlink. Click a <b>Port</b> to view more details of the port. Additional actions that can be performed from here are: <ul style="list-style-type: none"> <li>• <i>Editing an Input Port</i></li> <li>• Remove Configuration—the port is removed as an input port for the device.</li> </ul>
<b>In Use</b>	A green tick mark indicates that the input port is in use.
<b>Configuration</b>	The configuration information of the input port (based on the parameters set during <a href="#">Adding an Input Port, on page 122</a> ).
<b>Type</b>	Port type. The displayed options are: <ul style="list-style-type: none"> <li>• Edge port-SPAN</li> <li>• Edge port-TAP</li> <li>• Remote Source Edge-SPAN</li> <li>• Packet Truncation</li> </ul>
<b>Span Destination/ Tap Name</b>	Details of the span destination which is connected to the input port. <ul style="list-style-type: none"> <li>• If the port is connected to a production switch, then <i>PS</i>, followed by the device ID and the connected interface is displayed.</li> <li>• If the port is connected to a Cisco APIC/ or Cisco DNAC controller, then for APIC, the DN value is displayed with the pod and path details. For Cisco DNAC, <i>Cisco DNAC</i> followed by the Catalyst device ID and interface is displayed.</li> <li>• If the port is connected to a Tap device, the tap configuration name is displayed.</li> </ul>
<b>Created By</b>	The user who created the the input port.

Column Name	Description
Modified By	The user who last modified the input port.

The following actions can be performed from the **Input Ports** tab:

- **Add Input Port** —Use this to add a new input port. See [Adding an Input Port, on page 122](#) for details about this task.
- **Delete Input Port** —Select the required input port by checking the check box which is available at the beginning of the row. Click **Actions > Delete Input Port(s)**. The selected port(s) is deleted.



**Note** *In Use* input ports cannot be deleted.

If you choose the delete action without selecting a check box, an error is displayed. You will be prompted to select a device.

## Adding an Input Port

Use this procedure to create an input port.

Input port of a device is the port through which traffic enters the packet broker network and is directed to the monitoring tool.

### Before you begin

Add one or more devices.

Some of the input port parameters are defined at the device-level using the **Global Configuration** tab. To define these parameters (listed below), see [Editing Global Configuration](#).

- PTP
- Netflow
- MPLS Filtering
- Jumbo MTU

### Procedure

- Step 1** Navigate to **Components > Input Port Configuration**.
- Step 2** From the **Actions** drop-down list, select **Add Input Port**.
- Step 3** In the **Add Input Port** dialog-box, enter the following details:

*Table 36: Add Input Port*

Field	Description
<b>General</b>	

Field	Description
<b>Device</b>	To select a device on which the input port is being configured. Click <b>Select Device</b> . From the <b>Select Device</b> window, select a radio button and choose a device. Click <b>Select</b> .
<b>Port(s)</b>	To select a port to be configured as the input port. Click <b>Select Port</b> . From the <b>Select Port</b> window, select the required port(s). Click <b>Select</b> .
<b>Port Type</b>	Select from the drop-down list to define the input port type. The options are: <ul style="list-style-type: none"> <li>• <b>Edge Port - SPAN</b> —creates an edge-port for incoming traffic from a configured session of the production switch .</li> <li>• <b>Edge Port- TAP</b>—creates an edge port for incoming traffic from a physical device on an ISL.</li> <li>• <b>Remote Source Edge - SPAN</b> —creates an edge-port for incoming traffic from a configured remote session of the production switch.</li> </ul>
<b>Port Description</b>	Enter a description for the port.
<b>VLAN ID (QinQ Supported)</b>	The port is configured as dot1q to preserve any production VLAN information. The VLAN ID is used to identify the port that the traffic is coming from.  <b>Note</b> After an interface is configured with Q-in-Q, do not configure VLAN filters for the Q-in-Q configured interface.
<b>Block-Tx</b>	Check the check-box to block the traffic that is being transmitted from the input ports.  <b>Note</b> Only unicast and multicast traffic is blocked.
<b>Drop ICMP v6 Neighbour Solicitation</b>	Check the check-box to drop all ICMP traffic.  By default, all the ICMP traffic is blocked for Edge-SPAN and Edge-TAP port types for Nexus 9300-EX and 9200 Series switches. For the rest of Nexus 9000 Series switches, user has to manually enable this feature to deny or block all the ICMP traffic. This feature is currently available on NX-API based switches for NX-OS versions I5 and later.

Field	Description
<b>Enable Timestamp Tagging</b>	<p>Check the check-box to append the timestamp tag on packets using the Timestamp Tagging feature.</p> <p>For Nexus 9300-EX and 9200 series switches, this feature is applicable for Edge-SPAN and Edge-TAP ports. To configure Timestamp Tagging feature, ensure that PTP feature is enabled on the device. You need to enable Timestamp tagging on monitoring device and edge ports. If Timestamp Tagging feature is not configured on either side of the connection, Edge-SPAN/Edge-TAP and Monitor Devices, the packets are not tagged with timestamp.</p> <p><b>Note</b> If PTP is not enabled for the device using Global Configuration, then this option is grayed out.</p>
<b>Enable MPLS Filtering</b>	<p>Check the check-box to enable MPLS filtering.</p> <p><b>Note</b> If MPLS filtering is not enabled for the device using Global Configuration, then this option is grayed out.</p>
<b>Apply Jumbo MTU</b>	<p>Check the check-box to enable the set Jumbo MTU value on this port.</p> <p><b>Note</b> If Jumbo MTU is not configured for the device using Global Configuration, then this option is grayed out.</p>
<b>Netflow Monitor</b>	<p>Select an option from the drop-down list. The monitor names created at the Global Configuration level are listed here.</p> <p><b>Note</b> If NetFlow is not enabled for the device using Global Configuration, then this option is grayed out.</p>

The fields displayed for each **Port Type** are discussed below.

a) (Only for **Port Type**—Edge Port-SPAN) Enter the following details:

Field	Description
<b>Destination Device Type</b>	<p>This is the source for the input ports (Span Destination).</p> <p>Select the required option from the drop down list. The options are:</p> <ul style="list-style-type: none"> <li>• Controller</li> <li>• Production Switch</li> </ul> <p>The options for each of the above are discussed in the subsequent rows.</p>



Field	Description
<b>Controller</b>	Click <b>Select Controller</b> . Select <b>(Cisco) ACI</b> or <b>(Cisco) DNAC</b> .
Fields for <b>Destination Device Type: Controller &gt; ACI</b>  While selecting the interfaces (discussed below), if you do not find the latest pod, node and its interfaces in the displayed options, click the <b>Refresh Fabric</b> button. This action will fetch the latest pod, node and its interfaces from the ACI Fabric.  <b>Note</b> You must add an APIC/ ACI device before you configure SPAN destination.	
<b>Span Destination Name</b>	Enter a name for Span Destination.
<b>Pod</b>	Select a pod.
<b>Node</b>	Select a node.
<b>Port</b>	Select a port.
<b>MTU</b>	Set an MTU value for the span destination of APIC.
Fields for <b>Destination Device Type: Controller &gt; (Cisco) DNAC</b>	
<b>Span Destination Name</b>	Enter a name for Span Destination.
<b>Span Destination Port</b>	Click <b>Select Span Destination Port</b> and select a Catalyst switch and port(s).
Fields for <b>Destination Device Type: Production Switch</b>  <b>Note</b> You must add a Nexus or a Catalyst device before you configure SPAN destination.	
<b>Span Destination Device</b>	Click <b>Select Device</b> and select a device.
<b>Span Destination Port</b>	Click <b>Select Port</b> and select a port.

- b) (Only for **Port Type**—Edge Port-TAP) Enter the following details:

Field	Description
<b>Tap Configuration Name</b>	Select a tap configuration from the drop down list.
<b>Tap Configuration Type</b>	Select the port of the NDB device which will receive the mirrored traffic from the tap device.  The displayed options are based on the selected <b>Tap Configuration Name</b> details. If you have selected to tap either/both the mirror ports during <a href="#">Adding a Tap Configuration</a> , on page 144, the corresponding NDB Edge Port-Tap ports are displayed.

- c) (Only for **Port Type**—Remote Source Edge-SPAN) Enter the following details:

**Note**

You can configure a maximum of four Remote Source Edge-SPAN ports, to receive traffic from a remote source.

Field	Description
<b>Remote Input Termination Session</b>	
<b>ERSPAN ID</b>	Enter an ERSPAN ID. Range is from 1 to 1023.  The ERSPAN id entered here is matched with the source session id in the remote source.
<b>Use Loopback Interface</b>	Check the check-box to use a loopback interface.
<b>Loopback</b>	Click <b>Select Loopback</b> to select a loopback interface. If there are no configured loopback interfaces, click <b>Add Loopback</b> . See <a href="#">Configuring Loopback</a> .  Use a loopback interface to have more than one remote input port. Traffic from an L3 interface reaches the loopback interface and from there the session destination port. If the first remote source edge span input port was created with a loopback, then the following Remote Source Edge-SPAN ports must also be configured with the same loopback interface. If the first remote source edge span input port was created without a loopback, then the following Remote Source Edge-SPAN ports must also be configured without a loopback interface.
<b>Session Destination</b>	Click <b>Select Destination Port</b> and select a destination port (on the NDB device).
<b>Remote Input Session</b>	
<b>Remote Input Port</b>	Click <b>Remote Input Port</b> and select a remote input port (on the NDB device).  <b>Note</b> Only one remote input port can be configured for the traffic reaching the Remote Source Edge-SPAN ports. If you have configured a loopback interface, then, the remote input ports can be different for each of the Remote Source Edge-SPAN ports.
<b>IP Address</b>	Enter an IP address. IP address entered here is the IP address of the remote source port to which the packets reach over L3 network.  You need to enter this value only when configuring the first Remote Source Edge-SPAN port. For the next three ports that you configure, this field is grayed out as the same IP address is applied to all the four sessions with Remote Source Edge-SPAN ports.

Field	Description
<b>Destination Device Type</b>	Select the device type from the drop down list. For Remote Source Edge-SPAN ports, the supported destination type is ACI.
<b>Span Destination ACI Fabric</b>	Click <b>Select ACI Fabric</b> and select an ACI fabric.
<b>Span Destination Name</b>	Enter a name for the span destination.
<b>Tenant</b>	Click <b>Select Tenant</b> to select a tenant.
<b>Application Profile</b>	Click <b>Select Application Profile</b> to select an application profile.
<b>EPG</b>	Click <b>Select EPG</b> to select an EPG.
<b>Source IP Address</b>	Enter the source IP address. This IP address is the base IP address of the IP subnet of the source packets.
<b>Destination IP Address</b>	This field is automatically populated. The IP address populated here is the same address that you entered as the IP address of the <b>Remote Input Port</b> . <b>Note</b> For APIC/ ACI devices, this is the destination port (remote input port), and hence called destination IP.
<b>Flow ID</b>	This field is automatically populated. Flow ID is the flow identifier of the SPAN packet. It is matched with the ERSPAN ID earlier specified for the Remote Source Edge-SPAN port.
<b>TTL</b>	Enter a TTL value. Default value is 64 hops.
<b>DSCP</b>	Select a DSCP value from the drop-down list.
<b>MTU</b>	Enter an MTU value for the span destination port. Range is from 64 to 9216.

**Step 4** Click **Add Input Port**.

## Configuring Loopback

Use this procedure to configure a loopback for the Remote source edge span input port.

### Procedure

**Step 1** Navigate to **Inputs Ports > Actions > Add Input Ports**.

**Step 2** Select **Port Type** as Remote Source Edge Span Port and select the **Use Loopback Interface** check-box to select a loopback interface.

**Step 3** Click **Configure Loopback** to create a new loopback interface.

In the **Configure Loopback** dialog-box, enter the following details:

*Table 37: Configure Loopback*

Field	Description
<b>General</b>	
<b>Loopback Id</b>	Enter a loopback ID.
<b>IP Address</b>	Enter the loopback IP address.

**Step 4** Click **Configure Loopback**.

## Monitoring Tools

The **Monitoring Tools** tab displays details of the monitoring tool ports of NDB devices. Traffic from the monitoring tool port of an NDB device is directed to the monitoring tool.

A table with the following details is displayed:

*Table 38: Monitoring Tools*

Column Name	Description
<b>Status</b>	<p>Status is defined using two columns.</p> <p>First column indicates the traffic on the monitoring tool.</p> <ul style="list-style-type: none"> <li>• Green—indicates that the monitoring tool is currently carrying traffic.</li> <li>• Yellow—indicates that the monitoring tool is currently not carrying traffic.</li> </ul> <p>Second column indicates the status of the link between the monitoring tool port and monitoring tool. If the link between the monitoring tool port and the monitoring tool is up, then it is green in colour.</p> <ul style="list-style-type: none"> <li>• Green—indicates that the link is up and running.</li> <li>• Red—indicates that the link is down.</li> <li>• Yellow—indicates that the link is administratively down.</li> </ul>

Column Name	Description
<b>Monitoring Tool</b>	<p>The monitoring tool name.</p> <p>This field is a hyperlink. Click the <b>Monitoring Tool</b> name. A new pane is displayed on the right which has more details about the monitoring tool. The following additional actions can be performed from here:</p> <ul style="list-style-type: none"> <li>• <a href="#">Editing a Monitoring Tool, on page 133</a></li> </ul>
<b>Port</b>	<p>Monitoring tool port (with the device).</p> <p>Click the <b>Port</b> name to get more details of the port. The following additional actions can be performed from here:</p> <ul style="list-style-type: none"> <li>• <a href="#">Editing a Monitoring Tool, on page 133</a></li> </ul>
<b>Type</b>	<p>The type of monitoring tool. The option are:</p> <ul style="list-style-type: none"> <li>• Local Monitoring Tool—port that resides on the NDB device in the local network (L2 port).</li> <li>• Remote Monitoring Tool—port that resides outside the local network and reachable over L3 network.</li> </ul>
<b>In Use</b>	If the monitoring tool port is in use, a <i>green tick mark</i> is displayed; else it is left blank.
<b>Packet Truncation</b>	If packet truncation is enabled on the monitoring tool port, a <i>green tick mark</i> is displayed; else it is left blank.
<b>Block Rx</b>	If incoming traffic from the monitoring tool to the monitoring tool port (on the NDB device) is blocked, then <b>Yes</b> is displayed.
<b>Created By</b>	The user who created the monitoring tool.
<b>Last Modified By</b>	The user who last modified the monitoring tool.

The following actions can be performed from the **Monitoring Tools** tab:

- **Add Monitoring Tool**—Use this to add a new monitoring device. See [Adding a Monitoring Tool](#) for details about this task.
- **Delete Monitoring Tool(s)**—Select the required device by checking the check box which is available at the beginning of the row. The selected device(s) are deleted. Click **Actions > Delete Monitoring Tool(s)**. If you choose the delete action without selecting a check box, an error is displayed. You will be prompted to select a device.



**Note** An *In use* monitoring tool cannot be deleted.

## Adding a Monitoring Tool

Use this procedure to add a monitoring tool port. You can create a:

- Local Monitoring Tool—a port that resides on the NDB device in the local network (L2 port).
- Remote Monitoring Tool—a port that resides outside the local network and reachable over L3 network.

You can create a packet truncation port (used to block the ingress traffic) to be associated with the monitoring tool which is the egress port for a packet.

### Before you begin

#### Restrictions:

- You cannot use more than one remote delivery port per switch per connection.
- Remote monitoring tool involving inter switched links is restricted to only one connection per ISL.
- If the monitoring tool is used with a packet truncation interface, then, ensure that the status of the packet truncation port is Administratively Up (green icon) and that the other end of the link is not connected to any NDB device. To change the port Layer 2 status to Up, you need to connect to another non-NDB device create a loopback using a third party loopback fiber optic.



**Note** You can configure a maximum of four monitoring tools with packet truncation on a switch.

### Procedure

- Step 1** Navigate to **Components > Monitoring Tools**.
- Step 2** From the **Actions** drop-down list, select **Add Monitoring Tool**.
- Step 3** In the **Add Monitoring Tool** dialog box, enter the following details:

*Table 39: Add Monitoring Tool*

Field	Description
<b>General</b>	
<b>Monitoring Tool Name</b>	Enter a name for the monitoring tool name.

Field	Description
<b>Device Name</b>	<p>Click <b>Select Device</b>. From the displayed list of devices, select a device using the radio button. The device details are displayed on the right.</p> <p>The monitoring tool port resides on this device.</p> <p>Click <b>Select Device</b>.</p>
<b>Port</b>	<p>Click <b>Select Port</b>. In the <b>Select Interface</b> window that opens, select a port by using the radio button. The displayed interfaces depends on the selected device.</p> <p>Click <b>Select</b>.</p> <p>The selected port is marked as the monitoring tool port. The traffic is redirected to the monitoring tool from here.</p>
<b>Port Description</b>	Enter a description for the port.
<b>Local Monitor Tool</b>	<p>Select the radio button to select a local monitor device. By selecting this option, a monitoring device is from the local network.</p> <p>The following options are displayed for local monitor device (discussed in detail in the rows below):</p> <ul style="list-style-type: none"> <li>• Block Rx</li> <li>• Block ICMPv6 Neighbour Solicitation</li> <li>• Enable Timestamp Tagging</li> <li>• Packet Truncation</li> <li>• Enable Timestamp Strip</li> <li>• Apply Jumbo MTU</li> </ul>
<b>Block Rx</b>	<p>Blocks traffic from the monitoring tool (to the monitoring tool port on the NDB device). This option is selected by default. You can turn this option off by unchecking the check box.</p> <p><b>Note</b> Rx traffic is blocked using Unidirectional Ethernet for Cisco N9K-95xx switches with N9K-X97160YC-EX line card (NX-OS 9.3(3) or later).</p>
<b>Block ICMPv6 Neighbour Solicitation</b>	<p>Blocks ICMP traffic from the monitoring tool (to the monitoring tool port on the NDB device). This option is selected by default. You can turn this option off by unchecking the check box.</p> <p>Supported on Nexus 9300-EX and 9200 switches. For the rest of Nexus 9000 Series switches, user has to manually enable this feature to deny or block all the ICMP traffic.</p>

Field	Description
<b>Enable Timestamp Tagging</b>	<p>Check the check box to enable timestamp tagging. A timestamp tag is appended to all the outgoing packets of the monitoring tool port.</p> <p>You can configure this feature on a single device or multiple devices.</p> <p>To configure timestamp tagging, ensure that PTP is enabled on the device. You need to enable timestamp tagging on the monitoring device(s) and edge ports. If timestamp tagging is not configured on either side of the connection, Edge-SPAN/Edge-TAP and the monitor tools, then packets are not tagged with timestamp.</p>
<b>Packet Truncation</b>	<p>Check the check box to enable packet truncation and enter the MTU size.</p> <p>Packet truncation discards bytes from an incoming packet based on the MTU size. This is done in order to send only the the required traffic to the monitoring tool port. This is achieved by redirecting the traffic from the input port to the packet truncation port. The truncated packets from the packet tuncation port reach the monitoring tool.</p> <p>To set a packet truncation port, click <b>Select Packet Truncation Port</b>. See <a href="#">Adding a Packet Truncation Port, on page 135</a> for the detailed procedure.</p>
<b>Enable Timestamp Strip</b>	Check the check box to enable timestamp strip. This removes the timestamp tag from the source packets.
<b>Apply Jumbo MTU</b>	<p>Check the check box to enable jumbo MTU.</p> <p>Jumbo MTU sets a bigger packet size for the device. Enable <b>Jumbo MTU</b> in <b>Global Configuration</b> to apply the set Jumbo MTU size for a port of the device.</p>
<b>Remote Monitor Tool</b>	<p>Select the radio button to select a remote monitor device. By selecting this option, a monitoring device from a remote network is enabled.</p> <p>The following options are displayed for remote monitor device (discussed in detail in the rows below):</p> <ul style="list-style-type: none"> <li>• Block Rx</li> <li>• Interface IP</li> <li>• Destination IP</li> <li>• ERSPAN ID</li> </ul>
<b>Interface IP</b>	IP address to be assigned to the monitoring tool port.
<b>Destination IP</b>	IP Address where ERSPAN terminates and should be reachable from the selected port.



Field	Description
ERSPAN ID	Enter ERSPAN id; range is 1 to 1023.  You can use a device outside the network as a monitoring device using the Encapsulated Remote Switch Port Analyzer (ERSPAN) Source Session feature for Cisco Nexus 9300 FX and EX series switches.

**Step 4** Click **Add Monitoring Tool**.

## Editing a Monitoring Tool

Use this procedure to edit the parameters of a monitoring tool.

### Before you begin

Add one or more monitoring tools.

### Procedure

**Step 1** Navigate to **Components > Monitoring Tools**.

**Step 2** In the displayed table, click a **Monitoring Tool** name.

A new pane is displayed on the right.

**Step 3** Click **Actions** and select **Edit Monitoring Tool**.

**Step 4** In the **Edit Monitoring Tool** dialog box, the current information of the monitoring tool is displayed. Modify these fields, as required:

*Table 40: Edit Monitoring Tool*

Field	Description
<b>General</b>	
Monitoring Tool Name	Monitoring tool name is displayed; this cannot be edited.
Device Name	The device on which the monitoring tool port resides.
Port	The monitoring tool port.
Port Description	Enter a description for the port.

Field	Description
<b>Local Monitor Tool</b>	<p>Select the radio button to select a local monitor device. By selecting this option, a monitoring device is from the local network.</p> <p>The following options are displayed for local monitor device (discussed in detail in the rows below):</p> <ul style="list-style-type: none"> <li>• Block Rx</li> <li>• Block ICMPv6 Neighbour Solicitation</li> <li>• Enable Timestamp Tagging</li> <li>• Packet Truncation</li> <li>• Enable Timestamp Strip</li> <li>• Apply Jumbo MTU</li> </ul>
<b>Block Rx</b>	<p>Blocks traffic from the monitoring tool (to the monitoring tool port on the NDB device). This option is selected by default. You can turn this option off by unchecking the check box.</p> <p><b>Note</b> Rx traffic is blocked using Unidirectional Ethernet for Cisco N9K-95xx switches with N9K-X97160YC-EX line card (NX-OS 9.3(3) or later).</p>
<b>Block ICMPv6 Neighbour Solicitation</b>	<p>Blocks ICMP traffic from the monitoring tool (to the monitoring tool port on the NDB device). This option is selected by default. You can turn this option off by unchecking the check box.</p> <p>Supported on Nexus 9300-EX and 9200 switches. For the rest of Nexus 9000 Series switches, user has to manually enable this feature to deny or block all the ICMP traffic.</p>
<b>Enable Timestamp Tagging</b>	<p>Check the check box to enable timestamp tagging. A timestamp tag is appended to all the outgoing packets of the monitoring tool port.</p> <p>You can configure this feature on a single device or multiple devices.</p> <p>To configure timestamp tagging, ensure that PTP is enabled on the device. You need to enable timestamp tagging on the monitoring device(s) and edge ports. If timestamp tagging is not configured on either side of the connection, Edge-SPAN/Edge-TAP and the monitor tools, then packets are not tagged with timestamp.</p>
<b>Packet Truncation</b>	<p>Check the check box to enable packet truncation and enter the MTU size. If a packet truncation port was not configured during the addition of the monitoring tool, the <b>Select Packet Truncation Port</b> is disabled.</p>
<b>Enable Timestamp Strip</b>	<p>Check the check box to enable timestamp strip. This removes the timestamp tag from the source packets.</p>

Field	Description
<b>Apply Jumbo MTU</b>	Check the check box to enable jumbo MTU.  Jumbo MTU sets a bigger packet size for the device. Enable <b>Jumbo MTU</b> in <b>Global Configuration</b> to apply the set Jumbo MTU size for a port of the device.
<b>Remote Monitor Tool</b>	Select the radio button to select a remote monitor device. By selecting this option, a monitoring device from a remote network is enabled.  The following options are displayed for remote monitor device (discussed in detail in the rows below): <ul style="list-style-type: none"> <li>• Block Rx</li> <li>• Interface IP</li> <li>• Destination IP</li> <li>• ERSPAN ID</li> </ul>
<b>Interface IP</b>	IP address to be assigned to the monitoring tool port.
<b>Destination IP</b>	IP Address where ERSPAN terminates and should be reachable from the selected port.
<b>ERSPAN ID</b>	Enter ERSPAN id; range is 1 to 1023.  You can use a device outside the network as a monitoring device using the Encapsulated Remote Switch Port Analyzer (ERSPAN) Source Session feature for Cisco Nexus 9300 FX and EX series switches.

**Step 5** Click **Save**.

## Adding a Packet Truncation Port

Use this procedure to create a packet truncation port. A packet truncation port serves as an input port for the monitoring tool port. Hence, the created packet truncation port is listed as an input port, and unused packet truncation ports can be deleted from the [Input Ports](#) , on page 120 tab.

### Before you begin

Packet truncation involves discarding bytes from a packet starting at a specified byte position. All the data after the specified byte position is discarded. Packet truncation is required when the main information of interest is in the header of a packet or in the initial part of the packet.



**Note** Packet truncation is supported for unicast traffic (not supported for multicast traffic).

Table 41: Support for Packet Truncation

EX Chassis	FX Chassis	Nexus 9364C, Nexus 9332C	Nexus 9336C-FX2	EOR switches with -EX or -FX LCs
MTU size range is 320 to 1518 bytes	MTU size range is 64 to 1518 bytes	MTU size range is 64 to 1518 bytes	MTU size range is 64 to 1518 bytes	Depends on LC

## Procedure

- Step 1** Navigate to **Components > Monitoring Tools**.
- Step 2** From the **Actions** drop-down list, select **Add Monitoring Tool**.
- Step 3** Select a device and port and check the **Packet Truncation** check-box to enable packet truncation.
- Step 4** Click **Select Packet Truncation Port**.
- Step 5** In the **Select Packet Truncation Port** window that is displayed, click **Add Packet Truncation Port**.
- Step 6** In the **Add Packet Truncation** dialog box, enter the following details:

Table 42: Add Packet Truncation

Field	Description
<b>General</b>	
<b>Device</b>	The device name is displayed.
<b>Port</b>	Click <b>Select Port</b> . In the <b>Select Port</b> window, select a port by selecting a radio button. Click <b>Submit</b> .
<b>Port Type</b>	Packet Truncation port is selected by default.
<b>Port Description</b>	Port description for the truncation port.
<b>Drop ICMPv6 Neighbour Solicitation</b>	Blocks ingress ICMP traffic for the packet truncation port. This option is selected by default. You can turn this option off by unchecking the check box.

- Step 7** Click **Add**.

## Port Groups

The **Port Groups** tab has the following subtabs:

- **Input Port Group**—input ports of a device (or across devices) are grouped together to form an input port group. See [Input Port Group](#) for more details.

- **Monitoring Tool Group**—monitoring tool ports of a device (or across devices) are grouped together to form a monitoring tool group. See [Monitoring Tool Group](#) for more details.

## Input Port Group

Input ports of a device (or different devices) are grouped together to form a port group. Port groups can be a combination of the edge-span and the edge-tap ports across different devices. While creating a connection, instead of choosing input ports separately, you can select more than one input port simultaneously by grouping them.

A table with the following details is displayed:

*Table 43: Input Port Group*

Column Name	Description
<b>Input Port Group Name</b>	Input port group name.  This field is a hyperlink. Click the <b>Input Port Group Name</b> . A new pane is displayed on the right which provides more information about the input port group. Additional tasks that can be performed from here are: <ul style="list-style-type: none"><li>• <a href="#">Edit Input Port Group</a></li></ul>
<b>Description</b>	Description of the input port group.
<b>Associated Connections</b>	The connection(s) associated with the group.
<b>Member(s)</b>	The number of member input ports of the group.
<b>Created By</b>	User who created the group.
<b>Last Modified By</b>	User who last modified the group.

The following actions can be performed from the **Input Port Group** tab:

- **Add Input Port Group**—Use this to add a new input port group. See [Adding an Input Port Group](#) for details about this task.
- **Delete Input Port Group(s)**—Select the input port group(s) to be deleted by checking the check box which is available at the beginning of the row and then click **Actions > Delete Input Port Group**. The selected input port group(s) is deleted. If you choose the delete action without selecting a check box, an error is displayed. You will be prompted to select an input port group.

## Adding an Input Port Group

Use this procedure to create an input port group.

While creating a connection, instead of choosing input ports separately, you can select more than one input port simultaneously by grouping them.

**Before you begin**

Create one or more devices.

**Procedure**

**Step 1** Navigate to **Components > Port Groups > Input Port Group**.

**Step 2** From the **Actions** drop-down list, select **Add Input Port Group**.

**Step 3** In the **Add Input Port Group** dialog box, enter the following details:

*Table 44: Add Input Port Group*

Field	Description
<b>General</b>	
<b>Group Name</b>	Enter a name for the input port group.
<b>Description</b>	Enter a description for the group.
<b>Select Node</b>	From the <i>All Nodes</i> box, select a device by clicking a radio button.
<b>Choose Port(s)</b>	Ports that are configured as inputs ports, are displayed. Click a port to select it. You can click <b>Add All</b> to select all the (input) ports of a device.
<b>Selected Port(s)</b>	The selected ports are populated here. These are the ports which will be part of the group. If you want to delete a port, click the cross-mark (x) displayed next to the port. You can click <b>Remove All</b> to delete all the selected ports.

**Step 4** Click **Add Input Port Group**.

## Editing an Input Port Group

Use this procedure to edit the parameters of an input port group.

**Before you begin**

Create one or more input port groups.

**Procedure**

**Step 1** Navigate to **Components > Port Groups > Input Port Group**.

**Step 2** In the displayed table, click an **Input Port Group** name.

A new pane is displayed on the right.

**Step 3** Click **Actions** and select **Edit Input Port Group**.

**Step 4** In the **Edit Input Port Group** dialog box, the current information of the group is displayed. Modify these fields, as required:

*Table 45: Edit Input Port Group*

Field	Description
<b>General</b>	
<b>Group Name</b>	Input port group name.
<b>Description</b>	Description of the group.
<b>Select Node</b>	From the <i>All Nodes</i> box, select a device by clicking a radio button.
<b>Choose Port(s)</b>	Ports configured as input ports, are displayed. Click a port to select it. You can click <b>Add All</b> to select all the ports of a device.
<b>Selected Port(s)</b>	The selected ports are populated here. These are the ports which will be part of the group. If you want to delete a port, click the cross-mark (x) displayed next to the port. You can click <b>Remove All</b> to delete all the selected ports.

**Step 5** Click **Save**.

## Monitoring Tool Group

Monitoring tool ports grouped together across devices form a monitoring tool group.

A table with the following details is displayed:

*Table 46: Monitoring Tool Group*

Column Name	Description
<b>Monitoring Tool Group Name</b>	Monitoring tool group name.  This field is a hyperlink. Click the <b>Monitoring Tool Group Name</b> . A new pane is displayed on the right which provides more information about the monitoring tool group. Additional tasks that can be performed from here are: <ul style="list-style-type: none"> <li>• <a href="#">Editing a Monitoring Tool Group</a></li> </ul>
<b>Description</b>	Description of the monitoring tool group.
<b>Associated Connections</b>	Connections using the monitoring tool group.
<b>Member(s)</b>	The number of member monitoring tool ports of the group.

Column Name	Description
Created By	User who created the group.
Last Modified By	User who last modified the group.

The following actions can be performed from the **Monitoring Tool Group** tab:

- **Add Monitoring Tool Group**—Use this to add a new monitoring tool group. See [Adding a Monitoring Tool Group](#) for details about this task.
- **Delete Monitoring Tool Group(s)**—Select the tool group(s) to be deleted by checking the check box which is available at the beginning of the row and then click **Actions > Delete Monitoring Tool Group(s)**. The selected tool group(s) is deleted. If you choose the delete action without selecting a check box, an error is displayed. You will be prompted to select a tool group.

## Adding a Monitoring Tool Group

Use this procedure to create a monitoring tool group.

### Before you begin

Create one or more monitoring tools.

### Procedure

- Step 1** Navigate to **Components > Port Groups > Monitoring Tool Group**.
- Step 2** From the **Actions** drop-down list, select **Add Monitoring Tool Group**.
- Step 3** In the **Add Monitoring Tool Group** dialog box, enter the following details:

*Table 47: Add Monitoring Tool Group*

Field	Description
<b>General</b>	
<b>Group Name</b>	Enter a name for the monitoring tool group.
<b>Description</b>	Enter a description for the group.
<b>Select Node</b>	From the <i>All Nodes</i> box, select a device by clicking a radio button.
<b>Choose Port(s)</b>	Ports that are configured as monitoring tool ports, are displayed. Click a port to select it. You can click <b>Add All</b> to select all the (monitoring) ports of a device.
<b>Selected Port(s)</b>	The selected ports are populated here. These are the ports which will be part of the group. If you want to delete a port, click the cross-mark (x) displayed next to the port. You can click <b>Remove All</b> to delete all the selected ports.



**Step 4** Click **Add Monitoring Tool Group**.

---

## Editing a Monitoring Tool Group

Use this procedure to edit the parameters of a monitoring tool group.

### Before you begin

Create one or more monitoring tool groups.

### Procedure

---

**Step 1** Navigate to **Components > Port Groups > Monitoring Tool Group**.

**Step 2** In the displayed table, click a **Monitoring Tool Group** name.

A new pane is displayed on the right.

**Step 3** Click **Actions** and select **Edit Monitoring Tool Group**.

**Step 4** In the **Edit Monitoring Tool Group** dialog box, the current information of the group is displayed. Modify these fields, as required:

*Table 48: Edit Monitoring Tool Group*

Field	Description
<b>General</b>	
<b>Group Name</b>	Name of the monitoring tool group.
<b>Description</b>	Description for the group.
<b>Select Node</b>	From the <i>All Nodes</i> box, select a device by clicking a radio button.
<b>Choose Port(s)</b>	Ports that are configured as monitoring tool ports, are displayed. Click a port to select it. You can click <b>Add All</b> to select all the (monitoring) ports of a device.
<b>Selected Port(s)</b>	The selected ports are populated here. These are the ports which will be part of the group. If you want to delete a port, click the cross-mark (x) displayed next to the port. You can click <b>Remove All</b> to delete all the selected ports.

**Step 5** Click **Save**.

---

# Span Destination

The **Span Destination** tab displays details of the span ports connected to the input ports of NDB devices. Span destination is the traffic source (from ACI or NX-OS device) for the input ports. An L2 span destination (local) is created on an edge span port and an L3 span destination (remote) is created on a remote edge span port.

A table with the following details is displayed:

**Table 49: Span Destination**

Column Name	Description
<b>Name</b>	Name of the span destination port.
<b>Destinations</b>	Indicates if the span destination is on a Cisco ACI/ APIC or Cisco DNAC or Nexus or Catalyst device.
<b>Input Port</b>	Input port of the NDB device which is connected to the span destination.
<b>Input Port Type</b>	Input port type. The options are: <ul style="list-style-type: none"> <li>• Edge-SPAN port</li> <li>• Remote Source Edge-SPAN port</li> </ul>
<b>Span Device</b>	Span device (traffic source). The options are: <ul style="list-style-type: none"> <li>• Cisco APIC/ ACI or Cisco DNAC controller</li> <li>• Catalyst or Nexus switch (production switch)</li> </ul>
<b>Created By</b>	The user who created the span destination.
<b>Last Modified By</b>	The user who last modified the span destination.

The following actions can be performed from the **Span Destinations** tab:

- **Delete Span Destination(s)**—Select the span destination to be deleted by checking the check box which is available at the beginning of the row and then click **Actions > Delete Span Destination(s)**. The selected span destination is deleted. If you choose the delete action without selecting a check box, an error is displayed. You will be prompted to select a span destination.



## Note

For adding a Span Destination, see [Adding an Input Port, on page 122](#) procedure. A span destination (on an ACI/ NX-OS device) is connected to the input port of an NDB device. You can add a SPAN destination only after either an ACI/ NX-OS device has been successfully added to the network.

For APIC SPAN destination, when you configure an input port as an Edge-SPAN port and the port is connected to the ACI side, you can select the pod, the node, and the port from the ACI side and set the port as SPAN

destination. For NX-OS (production switch) SPAN destination, when you configure an input port as an Edge-SPAN port and the port is connected to an NX-OS device, select a node and port on the NX-OS device, and set the port as SPAN destination.

## Tap Configurations

The **Tap Configurations** tab displays details of the tap configurations on the Nexus Dashboard Data Broker controller. The tab provides information about the mapping of the network ports and mirror ports of a tap device, and also the NDB device ports connected to the Tap devices.

A table is displayed with the following details:

**Table 50: Tap Configurations**

Column Name	Description
<b>Tap Name</b>	Tap configuration name.  Click the Tap Name; a new pane is displayed on the right. You can perform the following additional procedures: <ul style="list-style-type: none"> <li>• <a href="#">Editing a Tap Configuration, on page 145</a></li> </ul>
<b>Device</b>	Tap device on which the tap configuration was created.
<b>Port-1</b>	Port of the tap device that receives traffic from the production network.
<b>Port-2</b>	Port of the tap device that receives traffic from the production network.
<b>Port-1 Mirror</b>	Port of the tap device that receives mirrored traffic from <b>Port-1</b> of the tap device and forwards it to the NDB Port-1 Edge Port-TAP.
<b>Port-2 Mirror</b>	Port of the tap device that receives mirrored traffic from <b>Port-2</b> of the tap device and forwards it to the NDB Port-2 Edge Port-TAP.
<b>Port-1 Edge Port-TAP</b>	Port of the NDB device that receives traffic from <b>Port-1 Mirror</b> port of the tap device.
<b>Port-2 Edge Port-TAP</b>	Port of the NDB device that receives traffic from <b>Port-2 Mirror</b> port of the tap device.
<b>Created By</b>	The user who created the tap configuration.
<b>Modified By</b>	The user who modified the tap configuration.

The following actions can be performed from the **Tap Configurations** tab:

- **Add Tap Configuration**—Use this to add a tap configuration. See [Adding a Tap Configuration](#) , on page 144 for details.
- **Edit Tap Configuration**—Use this to edit an existing tap configuration. See [Editing a Tap Configuration](#), on page 145 for details.
- **Delete Tap Configuration**—Select the tap configuration(s) to be deleted by checking the check box which is available at the beginning of the row and then click **Actions > Delete Tap Configuration** .
- **Sync Tap Configuration**—Use this option to synchronize the tap configuration on the tap device with the tap configuration on the Nexus Dashboard Data Broker controller.

## Adding a Tap Configuration

Use this procedure to add a tap configuration.

### Before you begin

Add one or more Tap Devices.

### Procedure

- Step 1** Navigate to **Components > Tap Configurations**.
- Step 2** From the **Actions** drop-down list, select **Add Tap Configuration**.
- Step 3** In the **Add Tap Configuration** dialog-box, enter the following details:

*Table 51: Add Tap Configuration*

Field	Description
Tap Name	Enter a name for the tap configuration.
Tap Device	To select a tap device on which the tap configuration is being configured.  Click <b>Select Device</b> and select a tap device from the <b>Select Tap Device</b> window that is displayed. You can also choose to add a tap device by clicking <b>Add Tap Device</b> .
Port(s) to Tap Incoming Traffic	Select from these options- Port-1, Port-2, Both.  You can select to tap traffic from either of the ports, or both the ports.
Network Ports	Click <b>Select Port</b> to select Port-1 and Port-2.  These are the ports on the tap device, which receive traffic from the production network. Bidirectional traffic is established between both the network ports.

Field	Description
<b>Mirror Port(s)</b>	<p>Click <b>Select Port</b> to select the port(s) you want to mirror the traffic to. Traffic from Network Port-1 is sent to Mirror Port-1 and traffic from Network Port-2 is sent to Mirror Port-2.</p> <p>Traffic from the network ports is sent (mirrored) to the mirror ports, and then to the NDB device.</p> <p><b>Note</b> Both Port-1 and Port-2 will be available, only if you have selected the option as <b>Both</b> , to tap incoming traffic.</p>
<b>NDB Edge Port-TAP</b>	<p>Click <b>Select Port</b> to select the Edge Port-TAP port(s) on the NDB device. Traffic from the mirror port(s) is received here.</p> <p><b>Note</b> If you choose not to select NDB Edge Port-TAP port(s) here, you can associate the ports using <a href="#">Adding an Input Port, on page 122</a> procedure.</p>

**Step 4** Click **Add Tap Configuration**.

## Editing a Tap Configuration

Use this procedure to edit the parameters of a tap configuration.

### Before you begin

Add one or more tap configurations.

### Procedure

**Step 1** Navigate to **Components > Tap Configurations**.

**Step 2** In the displayed table, click a **Tap Name**.

A new pane is displayed on the right.

**Step 3** Click **Actions** and select **Edit Tap Configuration**.

**Step 4** In the **Edit Tap Configuration** dialog box, the current information of the tap configuration is displayed. Modify these fields, as required:

*Table 52: Edit Tap Configuration*

Field	Description
<b>Tap Name</b>	Tap configuration name.
<b>Tap Device</b>	Tap device on which the tap configuration was created.


Field	Description
<b>Port(s) to Tap Incoming Traffic</b>	The earlier selected options are displayed. If you want to change: Select from these options- Port-1, Port-2, Both.  You can select to tap traffic from either of the ports, or both the ports.
<b>Network Ports</b>	The earlier selected options are displayed. If you want to change: Click <b>Select Port</b> to select Port-1 and Port-2.
<b>Mirror Port(s)</b>	The earlier selected options are displayed. If you want to change:  Click <b>Select Port</b> to select the port(s) you want to mirror the traffic to. Traffic from Network Port-1 is sent to Mirror Port-1 and traffic from Network Port-2 is sent to Mirror Port-2.  <b>Note</b> Both Port-1 and Port-2 will be available, only if you have selected the option as <b>Both</b> , to tap incoming traffic.
<b>NDB Edge Port-TAP</b>	The earlier selected options are displayed. If you want to change:  Click <b>Select Port</b> to select the Edge Port-TAP port(s) on the NDB device. Traffic from the mirror port(s) is received here.  <b>Note</b> If you choose not to select NDB Edge Port-TAP port(s) here, you can associate the ports using <a href="#">Adding an Input Port, on page 122</a> procedure.

**Step 5** Click **Save**.

## About Tap Configurations

A tap device makes a copy (mirror) of the network traffic from one or more production switch/ networks. It is recommended to use Cisco Nexus 3550-F L1 series switch as a tap device.

With reference to the topology, below, ports A1 and A2 of the tap device receive traffic from a production switch/ network(s). These are called as network ports. A bidirectional traffic flow is established between the network ports. Traffic on the network ports is mirrored to ports B1 and B2, called as mirror ports. Traffic from the mirror ports reaches the Edge Port-TAP port(s) of the NDB device. The mirror ports of the tap device and Edge Port-TAP ports of the NDB device are physically connected.

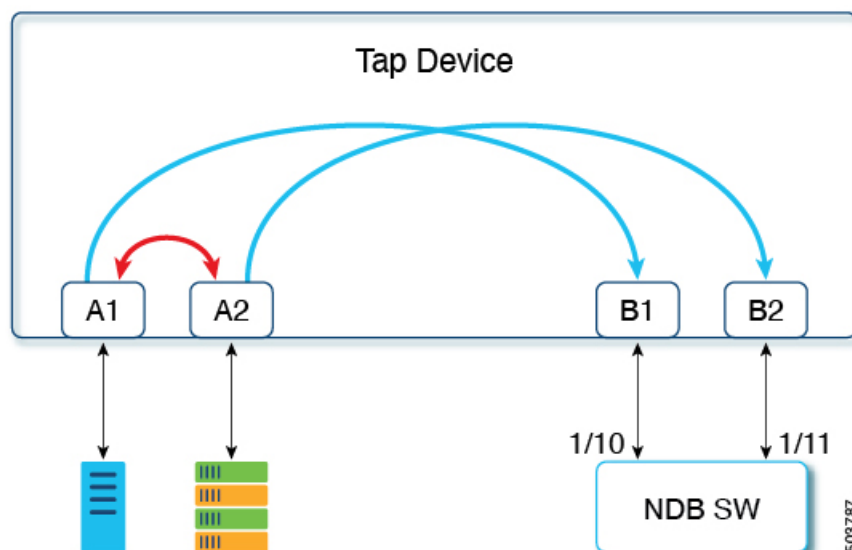

#### Benefits of using Cisco Nexus 3550-F L1 switch as a Tap Device with Cisco Nexus Dashboard Data Broker

- Ease of use. You can configure and manage Cisco Nexus 3550-F L1 using the Cisco Nexus Dashboard Data Broker GUI.
- Cost effective. Cisco Nexus 3550-F Fusion L1 replaces 16 optical taps (48 ports) in a single 1-RU device.

## User Defined Field

The **User Defined Field (UDF)** tab displays details of UDFs on NDB devices.

A UDF enables you to filter packets based on an offset value. An offset value in a packet can be matched within 128 bytes.

By default, Nexus Dashboard Data Broker controller generates two UDFs named *udfInnerVlan* and *udfInnerVlanv6*, used to match the inner VLAN in the ISL ports.

**Table 53: UDF Support Matrix**

UDF Ethertype	Platform
IPv4	Cisco Nexus 9200 and 9300 series switches
IPv6	Cisco Nexus 93xx EX/FX , 95xx EX/FX , 92xx series switches

**Table 54: Qualifying Regions for UDF**

Platform	UDF Qualifying TCAM Region
Cisco Nexus 9200, 9300-EX/9300-FX and 9500-EX/9500-FX series switches	ing-ifacl

Platform	UDF Qualifying TCAM Region
Other platforms	ifacl

A table with the following details is displayed:

**Table 55: User Defined Field**

Column Name	Description
UDF	The UDF name.  This field is a hyperlink. Click the UDF name and a new pane is displayed on the right with more details of the UDF. Additional tasks that can be performed from here are:  • <a href="#">Editing or Cloning a User Defined Field</a> .
Type	Displays <b>IPv4</b> or <b>IPv6</b> .
Keyword	Displays <b>Packet-Start</b> or <b>Header</b> .
In Use	A green tick-mark indicates that the UDF is currently in use.
Offset	The set offset value.
Length	Length (number of bytes) in a packet that are matched.
Devices	Number of devices a UDF is applied on.
Created By	User who created the UDF.
Last Modified By	User who last modified the UDF.

The following actions can be performed from the **User Defined Field** tab:

- **Add UDF**—Use this to add a new UDF. See [Adding a UDF](#) for details about this task.
- **Delete UDF(s)**—Select a UDF by checking the check box which is available at the beginning of the row. Click **Actions** > **Delete UDF(s)**.

If you choose the delete action without selecting a check box, an error is displayed. You will be prompted to select a UDF.



**Note** Any change in a UDF definition requires device reboot.

## Adding a User Defined Field

Use this procedure to add a user defined field.



Some protocols are not supported by default in some NX-OS devices. To support filtering of packets on these devices, use UDFs.



**Note** UDF can match a maximum of two offset bytes. To filter three consecutive bytes in a packet, we need to stack the UDFs. Create two UDFs, one after the other using the NDB GUI. The second UDF is called the stacking UDF.

## Procedure

- Step 1** Navigate to **Components > User Defined Field**.
- Step 2** From the **Actions** drop down list, select **Add UDF**.
- Step 3** In the **Add UDF** dialog box, enter the following details:

*Table 56: Add UDF*

Field	Description
<b>UDF Name</b>	Name of the UDF.
<b>Type</b>	Select from the drop down list. The options are: <ul style="list-style-type: none"> <li>• IPv4</li> <li>• IPv6</li> </ul>
<b>Keyword</b>	Select from the drop down list. The options are: <ul style="list-style-type: none"> <li>• Header</li> <li>• Packet-Start</li> </ul> <p>If the <b>Header</b> option is selected, the Inner (Offset base from inner/outer header) and L3/L4 (Offset base from L3/L4 header) is enabled. If <b>Packet-Start</b> is selected, the offset base starts from the packet.</p>
<b>Header</b>	Select from the drop down list. The options are: <ul style="list-style-type: none"> <li>• Inner</li> <li>• Outer</li> </ul> <p>This field is enabled only when the selected keyword is <b>Header</b>. Enables you to select the base offset value from the inner or outer Header.</p>

Field	Description
<b>Layer</b>	<p>Select from the drop down list. The options are:</p> <ul style="list-style-type: none"> <li>• Layer 3</li> <li>• Layer 4</li> </ul> <p>This field is enabled only when the selected keyword is <b>Header</b> . Enables you to specify if the offset start value is from Layer 3 or Layer 4.</p>
<b>Offset</b>	<p>Set the byte <b>Offset</b> value; range is from 0 to 127.</p> <p>Filtering of packets is done based on the set offset value in UDF, packets are matched from the set offset value.</p>
<b>Length</b>	<p>Length (number of bytes) of a packet that are matched; range is from 1 to 2.</p> <p>The length depends on the offset value, if it is set to 1; then one byte starting with the set offset byte is matched.</p>
<b>Devices</b>	<p>Device on which the UDF is being created.</p> <p>Click <b>Select Devices</b>.</p> <p>In the <b>Select Device(s)</b> window, select a device and click <b>Select Device(s)</b>.</p>

**Step 4** Click **Add UDF**.

The created UDF is used as a *custom filter* while creating filters for a connection. See [Adding a Filter](#) for details.

**Note**

The icon for UDF is yellow in color immediately after it is created. After you reboot the device, if the UDF is successfully installed, the UDF icon color changes to green, else it changes to red.

## Editing or Cloning a User Defined Field

Use this procedure to edit or clone a user defined field.

Editing a UDF means changing the parameters of an existing UDF.

Cloning a UDF means a new UDF is created with the same parameters as an existing UDF. You can change the parameters as required.

**Before you begin**

Create one or more user defined fields.

## Procedure

- Step 1** Navigate to **Components > User Defined Field**.
- Step 2** In the displayed table, click a **UDF**.  
A new pane is displayed on the right.
- Step 3** Click **Actions** and select **Clone UDF** or **Edit UDF**.
- Step 4** In the **Clone UDF** or **Edit UDF** dialog box, the current UDF information is displayed. Modify these fields, as required:

*Table 57: Edit UDF*

Field	Description
<b>UDF Name</b>	Name of the UDF. This field cannot be changed.
<b>Type</b>	The type selected during UDF creation. This field cannot be changed.
<b>Keyword</b>	Select from the drop down list. The options are: <ul style="list-style-type: none"> <li>• Header</li> <li>• Packet-Start</li> </ul>
<b>Header</b>	The Header selected during UDF creation. This field cannot be changed.
<b>Layer</b>	The Layer selected during UDF creation. This field cannot be changed.
<b>Offset</b>	Set the byte <b>Offset</b> value; range is from 0 to 127. Filtering of packets is done based on the set offset value in UDF, packets are matched from the set offset value.
<b>Length</b>	Length (number of bytes) of a packet that are matched; range is from 1 to 2. The length depends on the offset value, if it is set to 1; then one byte starting with the set offset byte is matched.

Field	Description
Devices	<p>Device on which the UDF is currently applied on. You can delete the UDF from the current device or apply the UDF on more devices.</p> <p>Click <b>Select Devices</b>.</p> <p>In the <b>Select Device(s)</b> window, select a device and click <b>Select Device(s)</b>.</p> <p><b>Note</b> You can not delete an <i>In-use</i> UDF from a device.</p>

**Step 5** Click **Save**.

---



# CHAPTER 11

## Sessions

This chapter has details of the sessions created on the Cisco Nexus Dashboard Data Broker.

Beginning with Release 3.10.1, Cisco Nexus Data Broker (NDB) has been renamed to Cisco Nexus Dashboard Data Broker. However, some instances of NDB are present in this document, to correspond with the GUI, and installation folder structure. References of NDB/ Nexus Data Broker/ Nexus Dashboard Data Broker can be used interchangeably.



---

**Note** All references of DNA/ DNAC in this chapter/ guide denote Cisco DNA/ Cisco DNAC.

---

- [Span Sessions, on page 153](#)

## Span Sessions

The **Span Sessions** tab displays details of the span sessions of the Nexus Dashboard Data Broker controller.

A span session is the link between the span destination of span devices, and the input port of an NDB device. A span session is partially outside the Nexus Dashboard Data Broker network, and defines the path of the packets from the span destination to the monitoring tool port.

A table is displayed with the following details:

Table 58: Span Sessions

Column Name	Description
Status	<p>The status of a SPAN session depends on the operational status of the session in the device/ controller and the status of the connection attached to it. Click the displayed status icon to view the details of the session and connection. The factors impacting session status are—span destination, source (production switch/ controller), input port, monitoring tool port, ISL links(if any).</p> <p>The available statuses are:</p> <ul style="list-style-type: none"> <li>• Green—session is successful</li> <li>• Yellow—session is partially successful</li> <li>• Red—session has failed</li> <li>• Gray—session has not been installed</li> </ul>
Span Session	<p>Span session name.</p> <p>This field is a hyperlink. Click the <b>SPAN session</b> name and a new pane is displayed on the right. The following additional actions can be performed here:</p> <ul style="list-style-type: none"> <li>• <a href="#">Editing or Cloning a Span Session, on page 158</a></li> </ul>
IP Address	IP address of the span session source (span device).
Span Sources	<p>The number of source ports for the span session.</p> <p><b>Note</b> In case of VLAN, the source ports are EPGs on the ACI device.</p>
Span Destination	<p>The number of span destination(s) for the session.</p> <p><b>Note</b> Only ACI devices can have multiple SPAN destinations. If there are more than one span destination, then, internal sessions are created. These internal sessions are created based on the availability of source ports.</p> <p>Nexus devices support only one span destination per session.</p>
Connection	Name(s) of connection(s) associated to the span session.
Created By	User who created the span session.

Column Name	Description
Last Modified By	User who last modified the span session.

The following actions can be performed from the **Span Sessions** tab:

- **Add Span Session**—Use this action to add a span session, see [Adding a Span Session, on page 155](#).
- **Synchronize Span Session / Destination**—Use this action to synchronize the information on the production switch (Nexus / Catalyst) or controller (Cisco APIC/ Cisco DNAC) with the Nexus Dashboard Data Broker controller. In case the span session information is deleted /removed on the switch or controller, this action synchronizes span destination configuration and span session configuration on the switch or controller with the configuration on the Nexus Dashboard Data Broker controller.
- **Toggle Install** —Use this action to install/ uninstall a span session. You can install a span session on the switch (Nexus / Catalyst) / controller or uninstall a span session without removing it from the Nexus Dashboard Data Broker controller. The SPAN session is uninstalled from the switch/ controller, but remains saved on the Nexus Dashboard Data Broker controller for future use.
- **Delete Span Session(s)**—Select the span session to be deleted by checking the check box which is available at the beginning of the row and then click **Actions > Delete Span Session(s)**. The selected span session is deleted. If you choose the delete action without selecting a check box, an error is displayed. You will be prompted to select a span session.

## Adding a Span Session

Use this procedure to add a span session.



**Note** You can add a maximum of 4 active span sessions for a Nexus switch.  
You can add a maximum of 8 active span sessions for a Catalyst switch.

### Before you begin

Add a controller / production switch before setting up a span session.

### Procedure

- Step 1** Navigate to **Sessions > Span Sessions**.
- Step 2** From the **Actions** drop-down list, select **Add Span Session**.
- Step 3** In the **Add Span Session** dialog box, enter the following details:

*Table 59: Add Span Session*

Field	Description
Span Session Name	Enter a name for the span session.

Field	Description
Span Sources	<p>Select a Span Source.</p> <p>Select <b>Production Switch</b> or <b>Controller</b>.</p> <p>Each of these have a unique set of fields, which are discussed in the subsequent rows.</p>
<b>Span Source: Controller</b>	
Controller	<p>Click <b>Select Controller</b>, and choose either <b>Cisco ACI</b> or <b>Cisco DNAC</b>.</p> <p>For creating a span source for Nexus devices that are part of the ACI network, select <b>Cisco ACI</b>. For creating a span source for catalyst switches, select <b>Cisco DNAC</b>.</p>
Leaf Ports	<p>(Only for ACI Controller)</p> <p>While selecting the pod, node and its interfaces, if you do not find the latest details in the displayed options, click the <b>Refresh Fabric</b> button. This action will fetch the latest pod, node and it's interfaces from the ACI Fabric.</p> <p>Select <b>Leaf Ports</b> to add a leaf port to capture the traffic from multiple leaf ports.</p> <p>Click <b>Select Leaf Ports</b>. In the <b>Select Leaf Port(s)</b> window that is displayed, select a <b>Pod</b>. The devices in the selected pod are displayed. Select a <b>Device</b> and <b>Port(s)</b> of the device.</p>
EPG/ AAEP	<p>(Only for ACI Controller)</p> <p>While selecting the EPG/ AAEP, if you do not find the latest EPG/ AAEP in the displayed options, click the <b>Refresh Fabric</b> button. This action will fetch the latest details from the ACI fabric.</p> <p>Select <b>EPG/ AAEP</b> to add an EPG/ AAEP source.</p> <p>Click <b>Select EPG/ AAEP</b>. In the <b>Select EPG/ AAEP</b> window that is displayed, select a <b>Tenant</b>, <b>Profile</b>, <b>EPG</b> and <b>EPG Members</b>. The displayed EPG members are-Dynamic, Static, AAEP. When you select, Dynamic or Static, the member details are displayed on the right. When you select <b>AAEP</b> as an EPG Member, in the <b>Select AAEP</b> column, select an AAEP.</p> <p><b>Note</b> EPG interfaces work only when all the ports are within the same leaf switch.</p> <p>If an EPG is spread across multiple switches, select the corresponding SPAN destination on all the leaf switches.</p>



Field	Description
<b>Interface</b>	(Only for Cisco DNAC) Click <b>Select Interface</b> and select a Catalyst switch and interface.
<b>VLAN</b>	(Only for Cisco DNAC) Enter a VLAN id.
<b>Span Source: Production Switch</b>	
<b>Interface</b>	Click <b>Select Interface(s)</b> . and select a <b>Device</b> and <b>Port(s)</b> . The selected device and port(s) are used in the session.
<b>VLAN</b>	Click <b>Select Production Switch</b> and select a device. Enter a VLAN ID. The device matching the VLAN ID is used in the session.
<b>Direction</b>	Indicates traffic for the session source port of the device. Select from one of these options: <ul style="list-style-type: none"> <li>• Incoming</li> <li>• Outgoing</li> <li>• Both</li> </ul>
<b>SPAN Destination</b>	Click <b>Select SPAN Destination</b> and select the span destination port. The fields displayed are based on your earlier <b>Span Sources</b> selection.  <b>Note</b> The Span Destination port was earlier created using <a href="#">Adding an Input Port, on page 122</a> procedure.  If directly connected to the NDB device, select a local span destination, else select remote span destination. Remote span destination is applicable only for Nexus switches.  To install ACI SPAN session, Nexus Dashboard Data Broker controller lists the SPAN destination(s) created in ACI.  To install Nexus SPAN session, Nexus Dashboard Data Broker controller lists the SPAN destination(s) created for the Nexus devices.  To install a Catalyst SPAN session, Nexus Dashboard Data Broker controller lists the SPAN destination(s) created for the Catalyst switch.

Field	Description
<b>Apply Connection</b>	<p>Select a connection for the session.</p> <p>You can associate an existing connection to the span session or create a new connection for the span session.</p> <p><b>Note</b> All span destinations which are part of a session should be a part of a connection too, to direct traffic to the monitoring tool.</p> <p>Click the button to enable addition of a connection to the span session. Click <b>Select Connection</b> and select a connection from the <b>Select Connection</b> window.</p>

**Note**

For EPG:

- For EPG selection, if an EPG is selected, by default, the Nexus Dashboard Data Broker controller listens for the changes in the statically or dynamically configured interfaces of the selected EPG. If there is any change, it is applied to the SPAN session. The web socket connection is not secured with the certificates. To disable the event listening, add `enableWebSocketHandle=false` in the `config.ini` file under `ndb/configuration` folder.
- When new EPG members are added in APIC, if there is no SPAN destination on the leaf switch that matches the newly added EPG member as part of the configured SPAN session, Nexus Dashboard Data Broker ignores this event and the new EPG member are not shown in Nexus Dashboard Data Broker.

**Note**

For SPAN Destination:

Ensure that each leaf switch in the SPAN source has at least one corresponding SPAN destination.

**Step 4**

Click **Add Span Session** to add the created span session, without installing it on the production switch or controller. Click **Install Span Session** to save and install the created span session on the production switch or controller.

## Editing or Cloning a Span Session

Use this procedure to edit or clone a span session.

Editing a span session means changing some of the parameters of an existing span session.

Cloning a span session means creating a new span session with identical parameters of an existing span session, with required modifications. Ensure to change the name of the span session before saving it.

**Before you begin**

Add one or more span sessions.

## Procedure

- Step 1** Navigate to **Sessions > Span Sessions**.
- Step 2** In the displayed table, click a **Session**.  
A new pane is displayed on the right.
- Step 3** Click **Actions** and select **Edit Span Session** or **Clone Span Session**.  
Edit the displayed parameters in the table.

*Table 60: Edit Span Session*

Field	Description
<b>Span Session Name</b>	Span session name is displayed. This field can not be edited.
<b>Span Sources</b>	The earlier selected span source is indicated. The span source can not be changed.
<b>Span Source: Controller</b>	
<b>Controller</b>	Click <b>Select Controller</b> , and choose either <b>(Cisco) ACI</b> or <b>(Cisco) DNAC</b> .  For creating a span source for Nexus devices that are part of the ACI network, select <b>(Cisco) ACI</b> . For creating a span source for catalyst switches, select <b>(Cisco) DNAC</b> .
<b>Leaf Ports</b>	(Only for ACI Controller)  Select <b>Leaf Ports</b> to add a leaf port to capture the traffic from multiple leaf ports.  Click <b>Select Leaf Ports</b> . In the <b>Select Leaf Port(s)</b> window that is displayed, select a <b>Pod</b> . The devices in the selected pod are displayed. Select a <b>Device</b> and <b>Port(s)</b> of the device.

Field	Description
<b>EPG/ AAEP</b>	<p>(Only for ACI Controller)</p> <p>Select <b>EPG/ AAEP</b> to add an EPG/ AAEP source.</p> <p>Click <b>Select EPG/ AAEP</b>. In the <b>Select EPG/ AAEP</b> window that is displayed, select a <b>Tenant, Profile , EPG</b> and <b>EPG Members</b>. The displayed EPG members are- Dynamic, Static, AAEP. When you select, Dynamic or Static, the member details are displayed on the right. When you select <b>AAEP</b> as an EPG Member, in the <b>Select AAEP</b> column, select an AAEP.</p> <p><b>Note</b> EPG interfaces work only when all the ports are within the same leaf switch.</p> <p>If an EPG is spread across multiple switches, select the corresponding SPAN destination on all the leaf switches.</p>
<b>Interface</b>	<p>(Only for Cisco DNAC)</p> <p>Click <b>Select Interface</b> and select a Catalyst switch and interface.</p>
<b>VLAN</b>	<p>(Only for Cisco DNAC)</p> <p>Enter a VLAN id.</p>
<b>Span Source: Production Switch</b>	
<b>Interface</b>	<p>The interfaces selected earlier while adding a span session are displayed. You can add or delete these interfaces.</p> <p>Click <b>Select Interface(s)</b> . and select a <b>Device</b> and <b>Port(s)</b>. The selected device and port(s) are used in the session.</p>
<b>VLAN</b>	<p>Click <b>Select Production Switch</b> and select a device. Enter a VLAN ID.</p> <p>The device matching the VLAN ID is used in the session.</p>
<b>Direction</b>	<p>Indicates traffic for the session source port of the device.</p> <p>Select from one of these options:</p> <ul style="list-style-type: none"> <li>• Incoming</li> <li>• Outgoing</li> <li>• Both</li> </ul>

Field	Description
<b>SPAN Destination</b>	<p>Click <b>Select SPAN Destination</b> and select the span destination port. The fields displayed are based on your earlier <b>Span Sources</b> selection.</p> <p><b>Note</b> The Span Destination port was earlier created using <a href="#">Adding an Input Port, on page 122</a> procedure.</p> <p>If directly connected to the NDB device, select a local span destination, else select remote span destination. Remote span destination is applicable only for Nexus switches.</p> <p>To install ACI SPAN session, Nexus Dashboard Data Broker controller lists the SPAN destination(s) created in ACI.</p> <p>To install Nexus SPAN session, Nexus Dashboard Data Broker controller lists the SPAN destination(s) created for the NX-OS devices.</p> <p>To install a Catalyst SPAN session, Nexus Dashboard Data Broker controller lists the SPAN destination(s) created for the Catalyst switch.</p>
<b>Apply Connection</b>	<p>Select a connection for the session.</p> <p>You can associate an existing connection to the span session or create a new connection for the span session.</p> <p><b>Note</b> All span destinations which are part of a session should be a part of a connection too, to direct traffic to the monitoring tool.</p> <p>Click the button to enable addition of a connection to the span session. Click <b>Select Connection</b> and select a connection from the <b>Select Connection</b> window.</p>

**Step 4** Click **Save**.





## CHAPTER 12

# Statistics

This chapter has details about the statistics of the connections and components of the Cisco Nexus Dashboard Data Broker.

Beginning with Release 3.10.1, Cisco Nexus Data Broker (NDB) has been renamed to Cisco Nexus Dashboard Data Broker. However, some instances of NDB are present in this document, to correspond with the GUI, and installation folder structure. References of NDB/ Nexus Data Broker/ Nexus Dashboard Data Broker can be used interchangeably.

- [Connections, on page 163](#)
- [Filters, on page 163](#)
- [Flows, on page 164](#)
- [Input Ports, on page 165](#)
- [TCAM Resource Utilization, on page 165](#)
- [Monitoring Tools, on page 166](#)
- [Ports, on page 166](#)

## Connections

The **Connections** tab displays a list of connections configured on the Nexus Dashboard Data Broker controller.

A table with the following details is displayed:

Column Name	Description
<b>Connection</b>	The connection name.  This field is a hyperlink; click a <b>Connection</b> name to get more information about the connection. For related actions, see the <a href="#">Connections</a> section.
<b>Packet Count</b>	The aggregate traffic volume shown in packets for the connection.

## Filters

The **Filters** tab displays filters that are used in connections.

A table with the following details is displayed:

Column Name	Description
<b>Filter</b>	The filter name.  This is hyperlink; click the <b>Filter</b> name for more details about the filter. For related actions, see the <a href="#">Filters</a> section.
<b>Packet Count</b>	The aggregate traffic volume shown in packets for the filter.

## Flows

The **Flows** tab displays device flows for NDB devices.

Click **Select Device** to select an NDB device for which the flow statistics will be fetched. If you want to fetch the flow statistics for another device, click **Change Device**.

A table with the following details is displayed:

Column Name	Description
<b>In Port</b>	The input port(s) from which the traffic is matched.
<b>DL Src</b>	The source MAC address to be matched for the incoming traffic.
<b>DL Dst</b>	The destination MAC address to be matched for the incoming traffic.
<b>DL Type</b>	The ethernet type to be matched for the incoming traffic. For example, <b>IPv4</b> or <b>IPv6</b> is used for all IP traffic types.
<b>DL VLAN</b>	The VLAN ID to be matched for the incoming traffic.
<b>VLAN PCP</b>	The VLAN priority to be matched for the incoming traffic.
<b>NW Src</b>	The IPv4 or IPv6 source address for the incoming traffic.
<b>NW Dst</b>	The IPv4 or IPv6 destination address for the incoming traffic.
<b>NW Proto</b>	The network protocol to be matched for the incoming traffic. For example, "6" indicates the TCP protocol.
<b>TP Src</b>	The source port associated with the network protocol to be matched for the incoming traffic.



Column Name	Description
<b>TP Dst</b>	The destination port associated with the network protocol to be matched for the incoming traffic.
<b>Packet Count</b>	The aggregate traffic volume shown in packets that match the specified flow connection.

## Input Ports

The **Input Ports** tab displays the packet count details for the input ports of the NDB devices.

A table with the following details is displayed:

Column Name	Description
<b>Input Ports</b>	The input port with the device name.  Click the <b>Input Port</b> to get more details of the input port. For related actions, see the <a href="#">Input Ports</a> , on page 120section.
<b>Packet Count</b>	The aggregate traffic volume shown in packets for the input port.

## TCAM Resource Utilization

The **TCAM Resource Utilization** tab displays TCAM resource utilization details for NDB devices.

A table with the following details is displayed:

**Table 61: TCAM Resource Utilization**

Column Name	Description
<b>Device</b>	The device name.  This field is a hyperlink; click the <b>Device</b> name for more details of the device. For related actions, see the <a href="#">Devices</a> section.
<b>Utilization</b>	The utilization pattern, indicated by colours. <ul style="list-style-type: none"> <li>• Green—indicates that the TCAM utilization is optimum.</li> <li>• Orange—indicates that the TCAM utilization is within the range.</li> <li>• Red—indicates that the TCAM utilization is nearing the full limit.</li> </ul>

# Monitoring Tools

The **Monitoring Tools** tab displays the monitoring tool ports connected to the NDB controller.

A table with the following details is displayed:

Column Name	Description
<b>Monitoring Tools</b>	The monitoring tool name.  This field is a hyperlink; click the monitoring tool name for more details. For related actions, see the <a href="#">Monitoring Tools</a> section.
<b>TX Packets</b>	The number of packets transmitted by the monitoring tool port.

# Ports

The **Ports** tab displays the statistics for ports of an NDB device.

Click **Select Device** to fetch the port details of the selected device. Click **Change Device** to select another device.

A table with the following details is displayed:

Column Name	Description
<b>Port</b>	The interface of the device for which the statistics are displayed.  This is hyperlink; click the port for more details.
<b>Rx Pkts</b>	The number of received packets on the port.
<b>Tx Pkts</b>	The number of transmitted packets on the port.
<b>Rx Bytes</b>	The number of received bytes on the port.
<b>Tx Bytes</b>	The number of transmitted bytes on the port.
<b>Rx Rate (kbps)</b>	The rate of receiving packets.
<b>Tx Rate (kbps)</b>	The rate of transmitting packets.
<b>Rx Drops</b>	The rate at which packets are dropped at the port (Rx).
<b>Tx Drops</b>	The rate at which packets are dropped at the port (Tx).
<b>Rx Errs</b>	Errors at the port while receiving packets.
<b>Tx Errs</b>	Errors at the port while transmitting packets.

Column Name	Description
Rx Frame Errs	Frame errors at the port while receiving packets.
Rx OverRu	Overrun errors at the port while receiving packets.

Click **Actions** > **Clear Ports** to clear the statistics data of the selected device.





## CHAPTER 13

# Troubleshooting

This chapter has troubleshooting details of the Cisco Nexus Dashboard Data Broker.

Beginning with Release 3.10.1, Cisco Nexus Data Broker (NDB) has been renamed to Cisco Nexus Dashboard Data Broker. However, some instances of NDB are present in this document, to correspond with the GUI, and installation folder structure. References of NDB/ Nexus Data Broker/ Nexus Dashboard Data Broker can be used interchangeably.

- [Audit Log, on page 169](#)
- [Flow Management, on page 170](#)
- [JSON Export/ Import , on page 174](#)
- [Purge Device, on page 176](#)
- [RMA, on page 176](#)
- [Tech Support, on page 177](#)

## Audit Log

The **Audit Log** tab displays a record of activities or actions performed on the Nexus Dashboard Data Broker controller.



**Note** Read-only actions are not recorded.

A table is displayed with the following details:

*Table 62: Audit Log*

Column Name	Description
Date & Time	The date and time of activity.
Module Name	Module on which the event occurred.  This is based on an internal mapping of modules, for example- logging in and logging out is part of the Security Module.

Column Name	Description
<b>Slice</b>	<p>Slice pertaining to an action/ event.</p> <p>Some actions are not slice-relevant and they are left blank.</p> <p>Examples for slice-dependent actions- components, connections , sessions, statistics.</p>
<b>User</b>	User responsible for the action/ event.
<b>Action</b>	Description of the action performed by the user.
<b>Resource</b>	Object on which the action was performed.
<b>Description</b>	<p>The result of the performed action. The available options are:</p> <ul style="list-style-type: none"> <li>• Failure (with description)</li> <li>• Success</li> </ul>
<b>Origin</b>	<p>Nexus Dashboard Data Broker controller on which the action was performed.</p> <p><b>Note</b> For Standalone Nexus Dashboard Data Broker controller, 127.0.0.1 is displayed.</p>
<b>Mode</b>	<p>Mode in which the action was performed.</p> <p><b>Note</b> For Release 3.10, only Centralized mode is supported.</p>

The following actions can be performed from the **Audit Log** tab:

- **Fetch Records**—Use this to set the number of audit logs that will be displayed.

Click **Actions** > **Fetch Records** and enter a value for the **Record Count** field. Click **Fetch**. The **Audit Log** table is loaded accordingly.

## Flow Management

The **Flow Management** tab enables you to view inconsistent connections and device flows and manage the inconsistent flows. You can view and download the details, which can be used for debugging.

The **Flow Management** tabs contains the following subtabs:

- **Consistency Check**—displays inconsistencies for NX-API based devices. The inconsistencies are automatically triggered if there is an ACL/ ACE mismatch with the NDB database. See [Consistency Check](#) for more details.

- **Connection Flows**—displays details of the ACLs and ACEs generated for a connection. See [Connection Flows](#) for more details.
- **Device Flows**—displays details of the ACLs and ACEs generated for a device. See [Devices Flows](#) for more details.

## Consistency Check

The **Consistency Check** tab displays inconsistencies for NX-API based devices. The inconsistencies are automatically triggered if there is an ACL/ ACE mismatch with the Nexus Dashboard Data Broker database.



The *Alarm* icon (  ) in the header displays the number of devices that have inconsistencies.

A table is displayed with the following details:

**Table 63: Consistency Check**

Column Name	Description
<b>Device</b>	<p>Device name.</p> <p>This field is an hyperlink. Click the <b>Device</b> name and a new pane is displayed on the right. For details about devices, see <a href="#">Devices</a>.</p>
<b>Inconsistent Controller Flows</b>	<p>The inconsistent controller flows.</p> <p>This field is an hyperlink. Click the number indicated and a new pane is displayed on the right with a list of ACLs and their ACEs. The following actions can be performed from here:</p> <ul style="list-style-type: none"> <li>• <b>Fix Flows</b>—Select the required check-boxes and click <b>Fix Flows</b>. The selected flows (ACEs) are fixed and the number displayed in the <b>Inconsistent Controller Flows</b> column is updated accordingly.</li> <li>• <b>Export All</b>—Select this option to get a copy of the flows listed as ACLs and ACEs. A <code>.csv</code> file is downloaded to your local machine. This is useful for debugging.</li> </ul>

Column Name	Description
<b>Inconsistent Device Flows</b>	<p>The inconsistent or stale flows for a device; indicates the missing ACLs and ACEs in the device when compared to the controller flows.</p> <p>This field is an hyperlink. Click the number indicated and a new pane is displayed on the right with a list of ACLs and their ACEs. The following actions can be performed from here:</p> <ul style="list-style-type: none"> <li>• <b>Fix Flows</b>—Select the required check-boxes and click <b>Fix Flows</b>. The selected flows (ACEs) are fixed and the number displayed in the <b>Inconsistent Controller Flows</b> column is updated accordingly.</li> <li>• <b>Export All</b>—Select this option to get a copy of the flows listed as ACLs with their ACEs. A <code>.csv</code> file is downloaded to your local machine. This is useful for debugging.</li> </ul>
<b>Non NDB Flows</b>	<p>The number of ACLs present in the device. ACLs can be the default device ACLs or can be added manually.</p> <p>This field is an hyperlink. Click the number indicated and a new pane is displayed on the right with a list of ACLs and their ACEs. The following actions can be performed from here:</p> <ul style="list-style-type: none"> <li>• <b>Fix Flows</b>—Select the required check-boxes and click <b>Fix Flows</b>. The selected flows (ACEs) are fixed and the number displayed in the <b>Inconsistent Controller Flows</b> column is updated accordingly.</li> <li>• <b>Export All</b>—Select this option to get a copy of the flows listed as ACLs with their ACEs. A <code>.csv</code> file is downloaded to your local machine. This is useful for debugging.</li> </ul>



**Note** ACLs which are Nexus Dashboard Data Broker-generated are indicated with a *ndb\_* prefix. Non-NDB flows are indicated by the respective component.

The following actions can be performed from the **Consistency Check** tab:

- **Check Controller Flows**—Select a device and click **Check Controller Flows**. A new pane is displayed on the right with the ACLs and ACEs.
- **Check Device Flows**—Select a device and click **Check Device Flows**. A new pane is displayed on the right with the ACLs and ACEs.



- **View non-NDB Flows**—Select a device and click **View non-NDB Flows**. A new pane is displayed on the right with the ACLs and ACEs.

## Connections Flows

The **Connections Flows** tab provides details of the ACLs and ACEs generated for a connection.

A table is displayed with the following details:

*Table 64: Connections Flows*

Column Name	Description
<b>Connection</b>	<p>Connection name.</p> <p>This field is a hyperlink. Click the <b>Connection</b> name and a new pane is displayed on the right with details of the connection. For information about the actions that can be performed here, see <a href="#">Connections</a> chapter.</p>
<b>Flows</b>	<p>Number of flows (ACEs) for the connection (can be across devices).</p> <p>This field is hyperlink. Click the displayed number and a new pane is displayed on the right. The connection name is displayed, followed by the ACL and the ACEs that it contains. Actions that can be performed from here are:</p> <ul style="list-style-type: none"> <li>• <b>Export All</b>—Select this option to get a copy of the flows listed as ACLs with their ACEs. A <code>.csv</code> file is downloaded to your local machine.</li> </ul>

The following actions can be performed from the **Connection Flows** tab:

- **Check Connection Flows**—Select a connection and click **Check Connection Flows**. A new pane is displayed on the right. The connection name is displayed, followed by the ACL and the ACEs that it contains. Actions that can be performed from here are:
  - **Export All**—Select this option to get a copy of the flows listed as ACLs with their ACEs. A `.csv` file is downloaded to your local machine.

## Device Flows

The **Device Flows** tab provides details of the ACLs and ACEs generated for a device.

A table is displayed with the following details:

Table 65: Device Flows

Column Name	Description
Device	<p>Device name.</p> <p>This field is a hyperlink. Click the <b>Device</b> name and a new pane is displayed on the right with details of the device. For information about the actions that can be performed here, see <a href="#">Devices</a> chapter.</p>
Flows	<p>Number of flows (ACEs) for the device (can be across connections and all ports of the device).</p> <p>This field is a hyperlink. Click the displayed number and a new pane is displayed on the right. The connection name is displayed, followed by the ACL and the ACEs that it contains. Actions that can be performed from here are:</p> <ul style="list-style-type: none"> <li>• <b>Export All</b>—Select this option to get a copy of the flows listed as ACLs with their ACEs. A <code>.csv</code> file is downloaded to your local machine.</li> </ul>

The following actions can be performed from the **Device Flows** tab:

- **Check Device Flows**—Select a device and click **Check Device Flows**. A new pane is displayed on the right. The device name is displayed, followed by the ACL and the ACEs that it contains. Actions that can be performed from here are:
  - **Export All**—Select this option to get a copy of the flows listed as ACLs with their ACEs. A `.csv` file is downloaded to your local machine.

## JSON Export/ Import

The **JSON Export/ Import** tab enables you to export and import the device configuration in JSON file format. The configuration file includes information about the connected as well as disconnected devices with all the configuration information (except for port-channel).

The **JSON Export/ Import** tab contains the following subtabs:

- **Export**—enables you to export configurations from Nexus Dashboard Data Broker controller (to your local machine). See [Export](#) for more details.
- **Import**—enables you to import configurations into the Nexus Dashboard Data Broker controller. See [Import](#) for more details.

## Export

The **Export** tab enables you export configurations from the Nexus Dashboard Data Broker controller.

A table with the following details is displayed:

Table 66: Export

Column Name	Description
<b>ID</b>	Serial number of the device.
<b>Name</b>	Name of the device.
<b>IP Address</b>	IP address of the device.
<b>Type</b>	Type of the device. The options are: <ul style="list-style-type: none"> <li>• NX—NDB device connected to NX-API device.</li> <li>• PS—NDB device connected to production switch (NX-OS).</li> <li>• AC—NDB device connected to ACI device.</li> </ul>
<b>Status</b>	The status of the device.

The following actions can be performed from the **JSON Export/ Import > Export** tab:

- **Export Configuration**—Click **Actions > Export Configuration** to export a JSON configuration to your local machine. Select the **Connections** check-box to include the connections of a device while exporting. Click **Export**.

## Import

The **Import** tab enables you to import configurations in to the Nexus Dashboard Data Broker controller.

A table with the following details is displayed:

Table 67: Import

Column Name	Description
<b>ID</b>	Serial number of the device.
<b>Exported Device Name</b>	Name of the device from which the configuration was exported.
<b>IP Address</b>	IP address of the device.
<b>Type</b>	Type of the device. The options are: <ul style="list-style-type: none"> <li>• NX—NDB device connected to NX-API device.</li> <li>• PS—NDB device connected to production switch (NX-OS).</li> <li>• AC—NDB device connected to ACI device.</li> </ul>
<b>Status</b>	Status of the import action. The options are- success, failure, partial, in progress, abort.

Column Name	Description
Description	Description of the success/ failure status.

The following actions can be performed from the **JSON Export/ Import > Import** tab:

- **Import Configuration**—Click **Actions > Import Configuration** and select a JSON file from your local machine and click **Upload**. You can also *drag and drop* to upload a JSON file.
- **Apply Configuration**—Click **Actions > Apply Configuration**. The **Edit Device** screen is displayed. Enter the details of the device on which you intend to apply the configuration. Click **Apply and Check Compatibility**. The **Compatibility Matrix** screen is displayed. If both the devices are compatible, the status is indicated in green. Click **Apply**.

The status of this action is indicated in the **Import** table.

- **Delete Import**—Click **Actions > Delete Import** to delete an imported configuration.

## Purge Device

The **Purge Device** tab displays details of deleted NDB devices. Deleting a device only removes it from the Nexus Dashboard Data Broker controller but the device configuration is retained, while purging a device deletes a device and also removes the device configuration from the Nexus Dashboard Data Broker controller.

A table is displayed with the following details:

**Table 68: Purge Device**

Column Name	Description
Node ID	Node ID of the device connected to Nexus Dashboard Data Broker controller.
Device	Device name.
IP Address	IP address of the device.

Use the *Filter by attributes* bar to filter the table based on displayed device group details. Choose the attribute, operator and filter-value.

The following actions can be performed from the **Purge Device** tab:

- **Purge Device(s)**—Select the required devices by checking the check box which is available at the beginning of the row; click **Purge Device(s)**.

This is useful for removing the stale device configurations from the database.

## RMA

The Return Material Authorization (**RMA**) tab displays a list of devices that have been deleted and awaiting replacement. This feature maps the configuration from the RMA device to the new device.

A table is displayed with the following details:

**Table 69: RMA**

Column Name	Description
Existing Node ID	The node ID of the (deleted) NDB device.
Node Name	Device name.
Serial Number	Serial number of the device.
IP Address	IP address of the device.

The following actions can be performed from the **RMA** tab:

- **Replace Node ID**— Select a Node ID by checking the check box. Click **Actions > Replace Node ID**. In the pop-up window that appears, enter the **Serial Number** and click **Replace**. The selected device is replaced with the device with the new serial number. The configuration which was available on the *old* device is programmed on the new device. Add the new device with the [Device Prerequisites](#). The *new* device that is added to NDB, must have **feature nxapi** and **nxapi** HTTP/HTTPS port enabled. Physical port allocations must remain the same as it was with the *old* device in the network.



**Note** Ensure to delete (not *purge and delete*) the device before replacing it. Go to the **Devices** tab to delete the device. After the device is deleted, it appears under the **RMA** and **Purge Devices** tab.

To get the serial number for a NX-API device, use **show module** command for non-modular chassis (look for Serial-Num in the output) or use **show hardware** command for modular chassis switches (look for serial number under Switch hardware ID information in the output).

## Tech Support

The **Tech Support** tab displays details of the tech support jobs created on the Nexus Dashboard Data Broker controller.

For more details about Tech Support [About Tech Support, on page 179](#).

A table is displayed with the following details:

Table 70: Tech Support

Column Name	Description
<b>Job ID</b>	<p>Job id created for a Tech Support job.</p> <p>This field is a hyperlink. Click the <b>Job ID</b> to view more details of the job. Click <b>Actions &gt; Download</b> to download the details of the job to your local machine.</p> <p>The <b>Download and Delete</b> option downloads the details of the job to your local machine and then deletes it from the Nexus Dashboard Data Broker controller.</p>
<b>Job Type</b>	<p>The Operation Type of the job. The options are:</p> <ul style="list-style-type: none"> <li>• Basic</li> <li>• Advanced</li> </ul>
<b>Status</b>	<p>Status of the tech support job.</p> <p>The available statuses are:</p> <ul style="list-style-type: none"> <li>• Success— job is successfully completed.</li> <li>• Partial— job is partially successful. For eg, if multiple devices were selected, then, may be the failure has occurred on one of the selected devices.</li> <li>• Failure— job is not successful.</li> <li>• In progress— job is currently in progress.</li> <li>• Created— job is ready for execution, but is in a queue.</li> <li>• Stop— job was created but was not allowed to complete.</li> </ul>

The following actions can be performed from the **Tech Support** tab:

- **Trigger Job** — Use this to trigger a tech support job. See [Trigger Tech Support, on page 179](#) for more details.
- **Re-trigger Job** —Select a check box next and click **Actions > Re-trigger Job** to re-trigger a job. *In Progress* and *Created* jobs cannot be re-triggered. The Tech Support log files are replaced with the latest set of files, after a retriggered job is successful.
- **Stop Job**—Select a check box and click **Actions > Stop Job** to stop an ongoing job. Only *In Progress* and *Created* jobs can be stopped.
- **Delete Job**—Select a check box and click **Actions > Delete Job** to delete a job. An *In Progress* job cannot be deleted.



**Note** Multiple eligible jobs can be removed/stopped/re-triggered at a time.

## Trigger Tech Support

Use this procedure to trigger a tech support job.

### Before you begin

Ensure that one or more devices are connected to Nexus Dashboard Data Broker and the AUX mode is disabled.

Ensure to have a minimum available space of 64 MB in the device; else, the operation fails and a *No Enough Space* error is displayed.

### Procedure

**Step 1** Navigate to **Troubleshooting > Tech Support**.

**Step 2** Click **Actions > Trigger Job**.

**Step 3** In the **Trigger Tech Support** dialog box, enter the following details:

*Table 71: Trigger Tech Support*

Field	Description
<b>Trigger Settings</b>	
<b>Device</b>	The device for which you need to collect data. Click <b>Select Device</b> to select a device.
<b>Operation Type</b>	Select <b>Basic</b> or <b>Advanced</b> . The <code>show commands</code> for each of these options is listed.

**Step 4** Click **Add** to collect the outputs of the `show commands`.

### Note

The following folders are by default downloaded besides the Tech Support folder – configuration folder, configuration start up folder and general logs. This enables the tech support team to get all the information together and results in faster analysis.

## About Tech Support

The tech support for NX-API devices feature enables you to collect information from one or more switches in one attempt, instead of collecting data separately from each switch. This is useful during debugging as all the relevant logs are readily available and can be downloaded.

Tech support data collection from switches can be performed in two modes:

- Basic mode— contains a limited set of show commands.
- Advanced mode—contains a wider set of show commands:





# CHAPTER 14

## Administration

This chapter has details about the profiles and users of the Cisco Nexus Dashboard Data Broker.

Beginning with Release 3.10.1, Cisco Nexus Data Broker (NDB) has been renamed to Cisco Nexus Dashboard Data Broker. However, some instances of NDB are present in this document, to correspond with the GUI, and installation folder structure. References of NDB/ Nexus Data Broker/ Nexus Dashboard Data Broker can be used interchangeably.

- [AAA](#) , on page 181
- [Backup/ Restore](#), on page 184
- [Cluster](#), on page 187
- [Profile](#), on page 188
- [Slices](#), on page 190
- [System Information](#), on page 193
- [User Management](#), on page 193

## AAA

The **AAA** tab displays details of the AAA servers available on the Nexus Dashboard Data Broker. For more details about AAA servers, see [About AAA Servers](#), on page 184.

A table with the following details is displayed:

Column Name	Description
Server Address	The IP address of the AAA server.
Protocol	The protocol running on the server. The options are: <ul style="list-style-type: none"><li>• TACACS</li><li>• RADIUS+</li><li>• LDAP</li></ul>

The following actions can be performed from the **AAA** tab:

- **Add Server**—Use this to add a new AAA server. See [Adding an AAA Server](#), on page 182 for the detailed procedure.

- **Delete Server**—Select the server(s) to be deleted by checking the check box which is available at the beginning of the row and then click **Actions > Delete AAA Server**. The selected server(s) is deleted. If you choose the delete action without selecting a check box, an error is displayed. You will be prompted to select a server.

## Adding an AAA Server

Use this procedure to add an AAA server.

### Procedure

- Step 1** Navigate to **Administration > AAA**.
- Step 2** From the **Actions** drop down menu, select **Add AAA Server**.
- Step 3** In the **Add AAA Server** dialog box, enter the following details:

*Table 72: Add AAA Server*

Field	Description
<b>General</b>	
<b>Protocol</b>	Choose a protocol for the AAA server. <ul style="list-style-type: none"> <li>• Radius</li> <li>• LDAP</li> <li>• TACACS</li> </ul> The fields relevant for each option are discussed below.
<b>Protocol: Radius</b>	
<b>Server Address</b>	Server IP address or domain name.
<b>Secret</b>	Secret configured on the AAA server.
<b>Protocol: LDAP</b>	
<b>Server Address</b>	Server IP address or domain name.
<b>Port</b>	Communication port for the AAA server.

Field	Description
User RDN	<p>Enter the Relative Distinguished Name (RDN) , used to authenticate with the LDAP server.</p> <p>User hierarchy defined in the LDAP server. Example: While configuring LDAP in AAA, consider the following hierarchy (defined in LDAP), for user “cn=admin,ou=People,dc=ndb,dc=local”, user RDN should be “ou=People,dc=ndb,dc=local”. After NDB is configured with LDAP, then to login, only the <i>cn</i> value has to be provided for the username. In this case, username is “admin”.</p>
Role Attribute	<p>Enter the role attribute which is the LDAP authorization attribute for users.</p> <p>Role Attribute can be any attribute in LDAP for the DN.</p> <p>For example, let <i>sn</i> be the defined role-attribute in the local LDAP server. So, for <i>admin user</i> in NDB, you can have “network-admin” as a value for the <i>sn</i> attribute.</p> <p>When NDB contacts the LDAP sever with the Role Attribute and User RDN and <i>admin user</i>, LDAP returns the <i>sn</i> value ("network-admin") as authentication.</p>
Role Type Mapping	<p>Click the button to enable Default setting. A list of <b>Role Mapping</b> values are displayed. If you have enabled <b>Default</b>, then, the following are the existing mapped values:</p> <ul style="list-style-type: none"> <li>• network-admin—<i>network-admin</i></li> <li>• network-operator—<i>network-operator</i></li> <li>• application-user—<i>application-user</i></li> <li>• slice-user—<i>slice-user</i></li> </ul> <p>Disable <b>Default</b>, to provide custom mapping of roles with values defined in LDAP. Select a role from the drop down list in the <b>Role Mapping</b> column, and enter a value defined in LDAP in the <b>Role Type Mapping</b> column.</p> <p>Click <b>Add Row</b> to add more Role Type Mapping rows.</p>
Timeout	Enter the wait time by which the LDAP server should respond.
Protocol: TACACS+	
Server Address	TACACS+ server address.
Secret	Secret configured on the TACACS+ server.
Username	Username to login to the server.

Field	Description
<b>Password</b>	Password to login to the server.
<b>Check Server</b>	Click <b>Check Server</b> to check if the server is reachable and the authentication credentials are valid.

**Note**

It is not recommended to change the admin password of the ndb controller when the user management of the ndb controller is performed through TACACS or AAA.

**Step 4** Click **Add AAA Server** to add the server.

**What to do next**

If you chose RADIUS as the protocol for the AAA server, you need to configure user authentication for RADIUS.

**Configuring User Authentication for RADIUS Server**

User authorization on a RADIUS server must conform to the Cisco Attribute-Value (av-pair) format. In the RADIUS server, configure the Cisco av-pair attribute for a user as follows:

```
shell:roles="Network-Admin Slice-Admin"
```

## About AAA Servers

AAA enables the security appliance to determine who the user is (authentication), what the user can do (authorization), and what the user did (accounting). Cisco Nexus Dashboard Data Broker uses Remote Authentication Dial-In User Service (RADIUS) or Terminal Access Controller Access-Control System Plus (TACACS+) to communicate with an AAA server.

AAA server supports remote authentication and authorization. To authenticate each user, Cisco Nexus Dashboard Data Broker uses both the login credentials and an attribute-value (AV) pair. An AV pair assigns the authorized role for the user as part of the user administration. After successful authentication, the Cisco AV pair is returned to Cisco Nexus Dashboard Data Broker for resource access authorization.

## Backup/ Restore

The **Backup/ Restore** tab has two subtabs:

- **Scheduled Backups**—for details of the schedule of backup(s) on the Nexus Dashboard Data Broker controller, see [Schedule of Backups, on page 185](#).
- **Backups** —for details of completed backups on the Nexus Dashboard Data Broker controller, see [Backups, on page 186](#).

## Schedule of Backups

The **Schedule of Backups** tab displays details of the scheduled backups for the Nexus Dashboard Data Broker controller.

A table with the following details is displayed:

**Table 73: Backup**

Column Name	Description
Start Date	The start date for the backup.
Start Time	The start time for the backup.
End Date	The end date for the backup.
Pattern	The backup pattern. Options are: <ul style="list-style-type: none"><li>• Daily</li><li>• Weekly</li><li>• Monthly</li></ul>
Occurrences	Number of occurrences based on the selected pattern.

The following actions can be performed from the **Backup** tab:

- **Schedule Backup**—Use this to schedule a backup. See [Scheduling Backup, on page 185](#).
- **Backup Locally**—Configuration is backed up on your local machine.
- **Restore Locally**—In the **Restore Locally** window that appears, choose a file from your local machine to restore the configuration.

Select the **Restore** check-box if you want Nexus Dashboard Data Broker to re-configure the configurations of the device, from the uploaded backup after Nexus Dashboard Data Broker is restarted. The following configurations are reconfigured:

- Global Configurations
- Port Configurations
- UDF
- Connections

The **Restore** check-box is applicable only for configuration downloaded from NDB Release 3.8 and above.

## Scheduling Backup

Use this procedure to schedule a backup.

It is always recommended to take a backup before upgrading to the next Nexus Dashboard Data Broker version.

## Procedure

- Step 1** Navigate to **Administration > Backup / Restore**.
- Step 2** From the **Actions** drop-down list, select **Schedule Backup**.
- Step 3** In the **Schedule Backup** dialog box, enter the following details:

*Table 74: Schedule Backup*

Field	Description
<b>Schedule</b>	
<b>Start Date</b>	Enter the start date for the backup.
<b>Start Time</b>	Enter the start time for the backup.
<b>Repeat</b>	<p>Select one of the options:</p> <ul style="list-style-type: none"> <li>• <b>Daily</b>—the backup operation occurs daily.</li> <li>• <b>Weekly</b>—the backup operation occurs on the selected day of the week, every week.</li> <li>• <b>Monthly</b>—the backup operation starts on the selected date every month.</li> </ul> <p><b>Note</b> Check the <b>Last Day</b> check-box for the backup to be performed till the end of the selected month.</p>
<b>End</b>	<p>Select one of the options to stop the backup process:</p> <ul style="list-style-type: none"> <li>• <b>No End Date</b>—continue taking back up.</li> <li>• <b>End Date</b> —continue taking backup till the specified end date.</li> <li>• <b>Occurrences</b> —takes backup based on the number selected in the <b>Number of Occurrences</b> field.</li> </ul>
<b>Enable</b>	The <b>Enable</b> check box is selected by default. Leave the check box checked, to enable the backup per the schedule.

- Step 4** Click **Schedule**.

## Backups

The **Backups** tab displays the backup information.

The information displayed here is based on the schedule generated using [Scheduling Backup](#). A table with the following details is displayed:

Column Name	Description
<b>Item</b>	Time of backup.
<b>Cluster Backup Status</b>	Cluster backup status of the Nexus Dashboard Data Broker controller. Options are: <ul style="list-style-type: none"> <li>• Success</li> <li>• Failure</li> </ul>
<b>Description</b>	Description of the backup.
<b>Restore Triggers</b>	Timestamp when the restore backup was triggered.

The following actions can be performed from the **Backups** tab:

- **Backup to NDB Server**—Backup is created at the specified time in the NDB server. After you select this option, the backup details appear in the **Backups** tab.
- **Restore Backup**—The selected backup is restored on the Nexus Dashboard Data Broker controller. It is recommended to always choose the latest backup for restoration. If you choose an old backup, there could be connection failures based on recent topology changes.



**Note** Restart the Nexus Dashboard Data Broker controller after restoring a backup.

- **Delete Backup**—Select the backup(s) to be deleted by checking the check box which is available at the beginning of the row and then click **Actions > Delete Backup(s)**.

## Cluster

The **Cluster** tab displays details of the clusters available on the Nexus Dashboard Data Broker controller. Nexus Dashboard Data Broker supports high availability clustering in active/active mode with up to five controllers in a cluster.

A table with the following details is displayed:

Column Name	Description
<b>Controller</b>	The IP address of the controller.
<b>Type</b>	Displayed options are either <b>Primary</b> or <b>Member</b> .



**Note** For the backup and upload features to work properly, all the servers in the cluster should be stopped and then they should be restarted. You should not configure any functionality during this time. Once the upload configuration is done, you should not configure anything from any other nodes in the cluster as it might lead to inconsistencies in the data.



**Note** After a backup is uploaded, all the instances of the cluster should be shut down and the server on which the backup is uploaded should be started first.

## Profile

The **Profiles** tab displays details of the profiles available on the Nexus Dashboard Data Broker controller. A profile allows you to manage multiple devices associated to an Nexus Dashboard Data Broker controller. You can attach multiple devices to a profile.

The profile configuration is applied to all the member switches.

A table with the following details is displayed:

Column Name	Description
Profile Name	Name of the profile.
User Name	User name that created the profile.

Use the *Filter by attributes* bar to filter the table based on displayed filter details. Choose the attribute, operator and filter-value.

The following actions can be performed from the **Profiles** tab:

- **Add Profile**—Use this to add a new profile. See *Add Profile* for details about this task.
- **Delete Profile**—Select the required profile(s) by checking the check box which is at the beginning of the row and then click **Delete Profile**. The selected profile(s) are deleted. If you choose the delete action without selecting a check box, an error is displayed. You will be prompted to select a profile.



**Note** A profile which is in use cannot be deleted.

## Adding a Profile

Use this procedure to add a new profile.



## Procedure

- Step 1** Navigate to **Administration > Profile**.
- Step 2** From the **Actions** drop down menu, select **Add Profile**.
- Step 3** In the **Add Profile** dialog box, enter the following details:

*Table 75: Add Profile*

Field	Description
Profile Name	Enter a profile name.
Username	Enter a user name to login to the device.
Password	Enter a password for the username.  Passwords must be between 8 and 256 characters long, contain uppercase and lowercase characters, have at least one numeric character, and have at least one non-alphanumeric character.

- Step 4** Click **Add Profile** to create the profile.

## Editing a Profile

Use this procedure to edit a profile.



**Note** When you edit a profile, devices that are using the profile will be reconnected.

### Before you begin

Create one or more profiles.

## Procedure

- Step 1** Navigate to **Administration > Profiles**.
- Step 2** In the displayed table, click a **Profile Name**.  
A new pane is displayed on the right.
- Step 3** Click **Actions** and select **Edit Profile**.
- Step 4** In the **Edit Profile** dialog box, the current profile information is displayed. Modify these fields, as required:

Table 76: Edit Profile

Field	Description
Profile Name	Profile name is displayed and can not be changed.
Username	Enter a username to login to the device.
Password	Enter a password for the username.  Passwords must be between 8 and 256 characters long, contain uppercase and lowercase characters, have at least one numeric character, and have at least one non-alphanumeric character.

**Step 5** Click **Save** to edit the profile.

## Slices

The **Slices** tab displays details of the slices available on the Nexus Dashboard Data Broker.

Slicing enables you to partition a network into many logical networks. For more information, see [About Slices, on page 192](#).

To view a different network partition, switch the slice using the **Slice** button in the header. As part of the initial Nexus Dashboard Data Broker build, one slice is available and is called the **Default** slice. The following configurations can be performed only on the default slice of the Nexus Dashboard Data Broker controller:

- Adding a new device
- Editing global configurations for devices
- Changing profiles for users
- Changing the parameters for users and associated roles
- Fixing inconsistent device and connection flows

A table with the following details is displayed:

Column Name	Description
Slice	Name of the slice.  This field is a hyperlink. Click the <b>Slice</b> name and a new pane is displayed on the right. Additional actions that can be performed from here: <ul style="list-style-type: none"> <li>• <a href="#">Editing a Slice</a></li> </ul>
Configured Port(s)	Ports of a device (or different devices) that are currently part of the slice.

Column Name	Description
Available Port(s)	Ports of a device (or different devices) that are currently not part of the slice, but can be added to the slice.

You can perform the following actions from the **Slices** tab:

- **Add Slice**—For details about this action, see [Adding a Slice](#).
- **Delete Slice**—Select the slices to be deleted and click **Actions > Delete Slice(s)**. If you choose the delete action, without selecting a check box, an error is displayed and you will be prompted to select a slice.

## Adding a Slice

Use this procedure to add a slice.



**Note** A device can be a part of multiple slices; a port can be a part of only one slice at any given time.

### Before you begin

Clear all port configurations and connections of a device which is already a part of the default slice, before adding the ports of a device to a new slice.

### Procedure

- Step 1** Navigate to **Administration > Slices**.
- Step 2** From the **Actions** drop down menu, select **Add Slice**.
- Step 3** In the **Add Slice** dialog box, enter the following details:

*Table 77: Add Slice*

Field	Description
<b>General</b>	
<b>Slice Name</b>	Enter a name for the slice.
<b>Port</b>	Click <b>Select Ports</b> and in the <b>Select Ports</b> window, select the device and required ports.  <b>Note</b> Ensure to have all the ports of a device on the same slice.

- Step 4** Click **Add Slice** to create the slice.

**Note**

After a new slice is added, the default slice is in *read-only* mode. If an active port configuration and/or connection is present on the default slice, then, it is rendered unavailable.

The devices added to a slice are displayed in the slice. For example, if device D1 is added to slice S1, and if the device goes into maintenance mode (or failed state or not ready state), the device is no longer displayed on S1, but is displayed on the default slice.

## Editing a Slice

Use this procedure to edit a slice.

### Before you begin

Delete the port configurations for a port before deleting the port from a slice.

### Procedure

- Step 1** Navigate to **Administration > Slices**.
- Step 2** Click a **Slice** name. A new window opens on the right.
- Step 3** Click **Action > Edit Slice**.  
The **Edit Slice** window is displayed.
- Step 4** Make required changes in the **Edit Slice** window. The following details are displayed:

**Table 78: Edit Slice**

Field	Description
<b>General</b>	
<b>Slice Name</b>	Name for the slice. This field cannot be changed.
<b>Port</b>	The ports that are part of the slice are listed. You can delete / add as required.

- Step 5** Click **Save**.

## About Slices

Slices enables you to partition networks into many logical networks. This feature allows you to create multiple disjoint networks and assign different roles and access levels to each one. Each logical network can be assigned to departments, groups of individuals, or applications. Multiple disjoint networks can be managed using the Cisco Nexus Dashboard Data Broker application.

Slices are created based on the following criteria:

- **Network devices**—The devices that can be used in the slice. Network devices can be shared between slices.
- **Network device interfaces**—The device interfaces that can be used in the slice. Network device interfaces can be shared between slices.

Slices must be created by a Cisco Nexus Dashboard Data Broker user with the Network Administrator role. After creation, the slices can be managed by a user with the Slice Administrator role.

## System Information

The **System Information** tab displays all the information about the Nexus Dashboard Data Broker controller and the Nexus Dashboard Data Broker controller host. The information is available under two headings:

- **NDB Information** —includes information such as Installation Type, Current Build Number, Previous Build number, etc.
- **System Information**—includes information such as Total Memory, Physical Memory, Used Memory, Free Memory of the Nexus Dashboard Data Broker controller host.

## User Management

The **User Management** tab has the following subtabs:

- **Users**—users of Nexus Dashboard Data Broker controller. See [Users](#) for more details.
- **Roles**—roles that the users are assigned to. See [Roles](#) for more details.
- **Groups**—device groups that the ports are assigned to. See [Groups](#) for more details.

## Users

The **Users** tab displays the details of the users of the Nexus Dashboard Data Broker controller.

A table with the following details is displayed:

Column Name	Description
User	<p>The login name of the user.</p> <p>This field is a hyperlink. Click <b>User</b> and a new pane is displayed on the right. The following additional actions can be performed from here:</p> <ul style="list-style-type: none"> <li>• <a href="#">Change Password</a></li> <li>• <a href="#">Change Role</a></li> <li>• <a href="#">Delete User</a></li> </ul> <p><b>Note</b> If you are logged in as the default <i>admin</i> user, the <b>Delete User</b> and <b>Change Role</b> options are not available. If you have logged in using TACACS, the <b>Change Password</b> option is not available.</p>
Role	The role of the user that was assigned while creating the user.

The following actions can be performed from the **Users** tab:

- **Add User**—Use this to add a new user. See [Adding a User](#) for details about this task.
- **Delete User**—Select the user(s) to be deleted by checking the check box which is available at the beginning of the row and then click **Delete User**. The selected user(s) are deleted. If you choose the delete action without selecting a check box, an error is displayed. You will be prompted to select a user.

## Adding a User

Use this procedure to add a new user.

### Before you begin

Create role(s) that the new user can be assigned to.

### Procedure

- Step 1** Navigate to **Administration > User Management > Users**.
- Step 2** From the **Actions** drop down menu, select **Add User**.
- Step 3** In the **Add User** dialog box, enter the following details:

*Table 79: Add User*

Field	Description
Username	Enter the user name.

Field	Description
<b>Password</b>	Enter a password for the user.  Passwords must be between 8 and 256 characters long, contain uppercase and lowercase characters, have at least one numeric character, and have at least one non-alphanumeric character.
<b>Verify Password</b>	Verify the password by re-entering it.
<b>Choose User Type</b>	Select one of the options: <ul style="list-style-type: none"> <li>• <b>Regular User</b>—can login to the NDB controller without a slice (default slice).</li> <li>• <b>Slice User</b>—has access only to a specific slice.</li> </ul>
<b>Select Slice</b> This field is applicable only when the User Type is <b>Slice User</b> .	Select a slice from the drop-down list. The created user has access only to the selected slice.
<b>Set Role</b> This field is applicable only when the User Type is <b>Regular User</b> .	Click <b>Select Role</b> . In the <b>Select Role</b> dialog box that opens, check the check box for the role(s) you want to assign to the user. The role details are displayed on the right side. Click <b>Select</b> to assign the role. You can assign more than one role to a user.  The available role options are: <ul style="list-style-type: none"> <li>• <b>Network Admin</b>—Provides full administrative privileges to all applications.</li> <li>• <b>Network Operator</b>—Provides read-only privileges to all applications.</li> </ul>

**Step 4** Click **Add User** to add the user.

**Note**

After creating a user, you can change the password, but you cannot change the roles assigned to the user.

## Changing Password for a User

Use this procedure to change the password for a user.

**Before you begin**

Create one or more users.

## Procedure

- Step 1** Navigate to **Administration > User Management > Users**.
- Step 2** Click a **User** name. A new window opens on the right.
- Step 3** Click **Action > Change Password**.  
The **Change Password** window is displayed.
- Step 4** Make required changes in the **Change Password** window. The following details are displayed:

*Table 80: Change Password*

Field	Description
<b>General</b>	
<b>User Name</b>	Name of the user. This field cannot be changed.
<b>Current Password</b>	Enter the current password for the username. <b>Note</b> This field is displayed only for <i>admin</i> user.
<b>Password</b>	Enter the new password.
<b>Verify Password</b>	Enter the new password again.

- Step 5** Click **Change Password**.

## Changing Role for a User

Use this procedure to change the role of a user.

### Before you begin

Create one or more users.

## Procedure

- Step 1** Navigate to **Administration > User Management > Users**.
- Step 2** Click a **User** name. A new window opens on the right.
- Step 3** Click **Action > Change Role**.  
The **Change Role** window is displayed.
- Step 4** Make required changes in the **Change Role** window. The following details are displayed:



Table 81: Change Role

Field	Description
<b>General</b>	
<b>User Name</b>	Name of the user. This field cannot be changed.
<b>Choose User Type</b>	Select either <b>Regular User</b> or <b>Slice User</b> .
<b>Select Slice</b>	Select an option from the drop down list.  This option is displayed only if your User Type selection was <b>Slice User</b> .
<b>Select Role</b>	Click <b>Select Role</b> and the <b>Select Role</b> window is displayed. Choose a role using the radio button and click <b>Select</b> .  This option is displayed only if your User Type selection was <b>Regular User</b> .

**Step 5** Click **Save**.

## Roles

The **Roles** tab displays details of the roles available on the Nexus Dashboard Data Broker controller. The default roles are:

- Network-Admin
- Network-Operator

A table is displayed with the following details:

Column Name	Description
<b>Role</b>	The name of the role.  The displayed name is a hyperlink. Click the <b>Role</b> name, a new pane is displayed on the right. Additional actions that can be performed from here are: <ul style="list-style-type: none"> <li>• <a href="#">Assigning a Group</a></li> </ul>

Column Name	Description
<b>Level</b>	<p>The level assigned to the role. The following levels are available:</p> <ul style="list-style-type: none"> <li>• <b>App-Administrator</b>— Has full access to all data broker resources but the App-Administrator cannot add NXAPI or production devices into Nexus Dashboard Data Broker because Administration tab is not available in Nexus Dashboard Data Broker for App-Administrator role .</li> <li>• <b>App-User</b>—Has access to create, edit, clone, or delete connections and redirections that are assigned to his resource group and resources that are created by another user with similar permissions. An App-User can only view Edge-SPAN, Tap, Monitoring device, and Production ports.</li> </ul> <p>An App-User can view resources that are created by another user with similar permissions in Topology page of Nexus Dashboard Data Broker. But, you can not configure Edge-SPAN or Connections created by another App-User.</p> <ul style="list-style-type: none"> <li>• <b>App-Operator</b>—Has access for read-only operations.</li> </ul>
<b>Group</b>	The group assigned to the role.

The following actions can be performed from the **Roles** tab:

- **Add Role**—Use this to add a new role. See [Add Role](#) for details about this task.
- **Delete Role**—Select the roles to be deleted by checking the check box which is available at the beginning of the row and then click **Delete Role** from the **Actions** menu. If you choose the delete action without selecting a check box, an error is displayed. You will be prompted to select a role.



**Note** Default roles cannot be deleted.

## Adding a Role

Use this procedure to add a role and associate the role to a group.

### Before you begin

Create one or more groups to associate a role.

## Procedure

**Step 1** Navigate to **Administration > User Management > Roles**.

**Step 2** From the **Actions** drop down menu, select **Add Role**.

**Step 3** In the **Add Role** dialog box, enter the following details:

*Table 82: Add Role*

Field	Description
<b>Role Name</b>	Enter the role name.
<b>Select Level</b>	Select a level from the drop-down list.

**Step 4** Click **Add** to add the role.

## Assigning a Group to a Role

Use this procedure to assign a group to a role. This enables the role to access only the ports in the assigned group.

### Before you begin

Add one or more groups.

## Procedure

**Step 1** Navigate to **Administration > User Management > Roles**.

**Step 2** Click a **Role** name in the displayed table.

A new pane is displayed on the right.

**Step 3** Click **Action > Assign Group**.

Enter the following details:

*Table 83: Assign Group*

Field	Description
<b>Role Name</b>	Role name. This field cannot be edited.
<b>Select Level</b>	Level of the role. This field cannot be edited.
<b>Set Group</b>	Click <b>Select Group</b> and select a group in the <b>Select Group</b> window that is displayed.

**Step 4** Click **Assign**.

## Groups

The **Groups** tab displays details of the port groups. The default group is:

- allPorts

A group can be a group of ports of one device or across many devices.

A table with the following details is displayed:

Column Name	Description
<b>Group</b>	The name of the group.  The displayed name is a hyperlink. Click the name to see more details of the group.
<b>Ports</b>	The number of ports assigned to the group.

The following actions can be performed from the **Groups** tab:

- **Add Group**—Use this to add a new group. See [Add Group](#) for details.
- **Delete Group**—Select the groups to be deleted by checking the check box which is available at the beginning of the row and then click **Delete Group** from the **Actions** menu. If you choose the delete action without selecting a check box, an error is displayed. You will be prompted to select a group.



**Note** Default group(s) cannot be deleted.

## Adding a Group

Use this procedure to create a new group.

A group is created for defining access to port(s) for a user. A group is assigned to a role; a user is associated to a role.

### Procedure

- Step 1** Navigate to **Administration > User Management > Groups**.
- Step 2** From the **Actions** drop down menu, select **Add Group**.
- Step 3** In the **Add Group** dialog box, enter the following details:

Table 84: Add Group

Field	Description
Group Name	Enter the group name.
Selected Port(s)	Click <b>Select Ports</b> . In the <b>Select Ports</b> dialog box that opens, check the check box to assign port(s) to the group. The port details are displayed on the right side. Click <b>Select</b> to assign the port.

**Step 4** Click **Add Group** to add the group.

---

