



## **Service Advertisement Framework Configuration Guide, Cisco IOS XE Release 2**

### **Americas Headquarters**

Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA  
<http://www.cisco.com>  
Tel: 408 526-4000  
800 553-NETS (6387)  
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Cisco and the Cisco Logo are trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at [www.cisco.com/go/trademarks](http://www.cisco.com/go/trademarks). Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1005R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2011 Cisco Systems, Inc. All rights reserved.



## **CONTENTS**

### **Cisco IOS XE Service Advertisement Framework Configuration Guide 1**

Finding Feature Information	1
Prerequisites for Cisco SAF	2
Restrictions for Cisco SAF	2
Benefits of Cisco SAF	2
Information About Cisco SAF	3
Cisco SAF Overview	3
Cisco SAF Forwarder Overview	3
Cisco SAF Client Overview	4
Cisco SAF Client and SAF Forwarder Interaction Overview	5
Cisco SAF Service Identifier Number Formats	6
Cisco SAF and Role of Domains in a Network	6
Cisco SAF Virtual Routers	7
Cisco SAF Neighbor Relationships	7
Configuring a Cisco SAF Forwarder	8
Enabling Cisco SAF	8
Configuring Interface-Specific Commands for Cisco SAF	9
Configuring Cisco SAF for Multi-Topology Networks	11
Configuring Static Neighbor Relationships for Cisco SAF	12
Configuring Stub Routing for Cisco SAF	13
Configuring Route Authentication for Cisco SAF	14
Configuring Logs for Neighbor Changes and Warnings	17
Configuring the Percentage of Link Bandwidth Used for Cisco SAF	19
Setting Metric Dampening Intervals for Cisco SAF Interfaces	20
Change-based Dampening Configuration	21
Interval-based Dampening Configuration	22
Adjusting the Interval Between Hello Packets and the Hold Time	24
Disabling Split Horizon	26
Setting Metric Maximum Hops	27

Configuring a Cisco SAF Client	29
Prerequisites	29
Restrictions	29
Configuring a Cisco SAF External Client	29
Configuring Dynamic Neighbors	32
Neighbor Types	33
Remote Neighbor Session Policy	33
Neighbor Filter List	34
Maximum Remote Neighbors	34
Configuration Changes for Neighbor Filter List and Maximum Remote Neighbors	34
Remote Unicast-Listen (Point-to-Point) Neighbors	34
Remote Multicast-Group (Multipoint-to-Multipoint) Neighbors	35
Inheritance and Precedence of the Remote Neighbor Configurations	35
Prerequisites	35
Restrictions	36
Configuring Cisco SAF Dynamic Neighbors	36
Configuring Capabilities Manager	37
Capabilities Discovery	38
Interoperability with SAF Forwarder	38
Capabilities Information	38
Capabilities Groups	39
Hardware Group Information	39
Software Group Information	39
XML Schema for Capabilities Data	40
Prerequisites for Configuring Capabilities Manager	41
Disabling and Enabling and Capabilities Manager	41
Displaying Capabilities Manager Information	42
Clearing Registered Capabilities Information	43
Displaying Cisco SAF Statistics	44
Deleting Information from a Cisco SAF Configuration	49
Configuration Examples for Cisco SAF	50
Enabling Cisco SAF Example	50
Configuring Cisco SAF Interfaces Examples	50
Configuring Cisco SAF Topology Example	51
Configuring Cisco SAF Stub Routing Example	51

Configuring Cisco SAF with IP-RIP Example	51
Configuring Cisco SAF with OSPF Example	52
Configuring Cisco SAF with EIGRP Example	52
Configuring Cisco SAF Forwarders Located on Separate LANs Example	52
Configuring a Centralized Cisco SAF Forwarder Example	53
Configuring a Cisco SAF Client Examples	53
Configuring Logs for Neighbor Changes and Warnings Example	54
Configuring Cisco Unified Communications Manager as a Cisco SAF Client Example	54
Configuring Cisco SAF Dynamic Neighbors Examples	55
Additional References	55
Feature Information for Cisco Service Advertisement Framework	56





# Cisco IOS XE Service Advertisement Framework Configuration Guide

---

Last Updated: July 15, 2011

Cisco Service Advertisement Framework (SAF) provides a mechanism that allows applications to discover the existence, location, and configuration of networked resources within networks. Cisco SAF allows a timely and reliable awareness of the services within networks, as applications advertise and discover services on networks.

A service is any information that a Cisco SAF Client application wishes to advertise, that can then be used by other Cisco SAF Client applications.

- [Finding Feature Information, page 1](#)
- [Prerequisites for Cisco SAF, page 2](#)
- [Restrictions for Cisco SAF, page 2](#)
- [Benefits of Cisco SAF, page 2](#)
- [Information About Cisco SAF, page 3](#)
- [Configuring a Cisco SAF Forwarder, page 8](#)
- [Configuring a Cisco SAF Client, page 29](#)
- [Configuring Dynamic Neighbors, page 32](#)
- [Configuring Capabilities Manager, page 37](#)
- [Displaying Cisco SAF Statistics, page 44](#)
- [Deleting Information from a Cisco SAF Configuration, page 49](#)
- [Configuration Examples for Cisco SAF, page 50](#)
- [Additional References, page 55](#)
- [Feature Information for Cisco Service Advertisement Framework, page 56](#)

## Finding Feature Information

Your software release may not support all the features documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the Feature Information Table at the end of this document.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to [www.cisco.com/go/cfn](http://www.cisco.com/go/cfn). An account on Cisco.com is not required.

## Prerequisites for Cisco SAF

- Before configuring Cisco SAF, you should understand the concepts in this guide.
- Before configuring neighbor relationships for Cisco SAF Forwarders located on separate LANs, ensure IP routing is configured between each Cisco SAF Forwarder.


## Restrictions for Cisco SAF

- Using the **service-family ipv6** commands requires an IPv6-enabled SAF client, which currently does not exist.
- Cisco SAF works independently of Cisco EIGRP routing.

## Benefits of Cisco SAF

Traditionally, to locate services on a network, network applications must be configured with the hostname and the network address of the desired service or must use an overlay mechanism such as DNS. Existing protocols that support service advertisement provide periodic-based announcements of resource utilization. These network services are typically LAN-based.

The figure below shows a Cisco Unified Communications Manager network requiring a traditional configuration methodology.

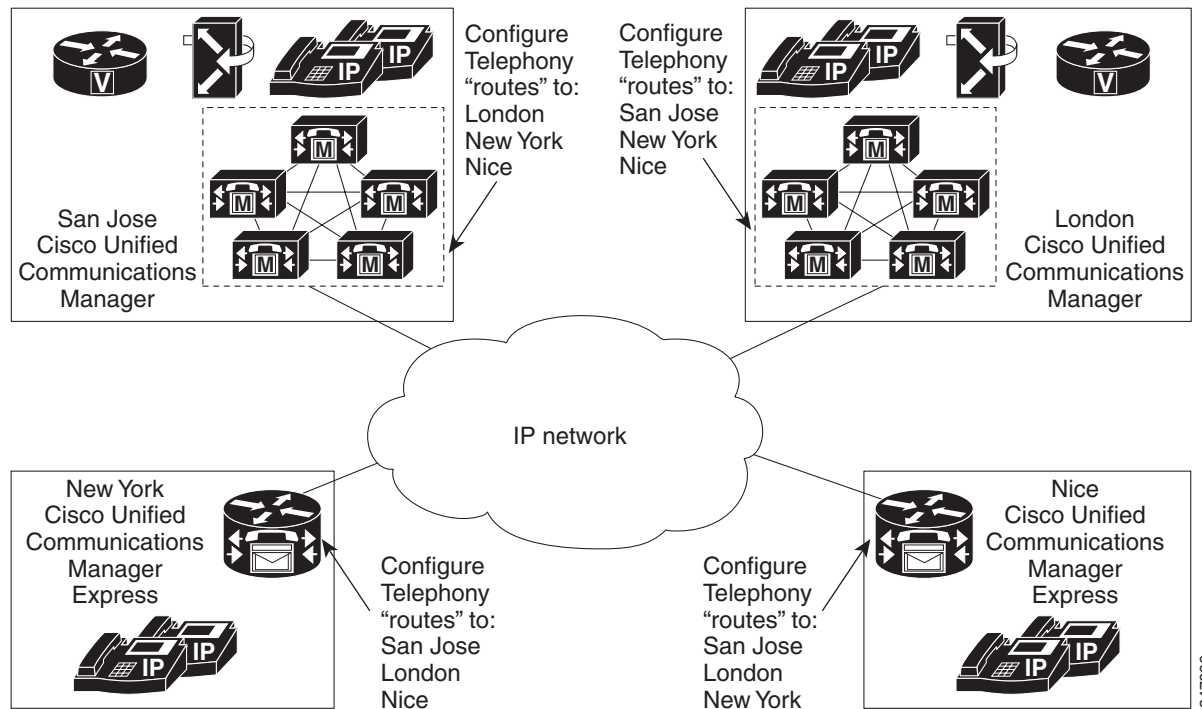

Cisco SAF provides a framework that allows networking applications to automatically discover the existence, location, and configuration of networked services within networks. This automated discovery of



services replaces the manual entry of complex configurations such as dial plans, that often require repetitive configuration changes. Cisco SAF also allows applications to advertise and discover their services. Cisco SAF allows you to create a configuration once, and then have it propagate to all devices that require the information.

The figure below shows a Cisco Unified Communications Manager network using Cisco SAF.



You can configure a Cisco SAF Client either on the same router as the Cisco SAF Forwarder or on an external router.

## Information About Cisco SAF

- [Cisco SAF Overview, page 3](#)
- [Cisco SAF Service Identifier Number Formats, page 6](#)
- [Cisco SAF and Role of Domains in a Network, page 6](#)
- [Cisco SAF Virtual Routers, page 7](#)
- [Cisco SAF Neighbor Relationships, page 7](#)

## Cisco SAF Overview

Cisco SAF provides a framework that allows applications to discover the existence, location, and configuration of networked resources within networks. Cisco SAF allows a timely and reliable awareness of the services within networks, as applications advertise and discover services on networks. Service information distributes through a network of Cisco SAF cooperative nodes that assume specific functions to efficiently distribute knowledge of services and facilitate their discovery.

A non-SAF node is any node in a network that does not understand SAF. Non-SAF nodes are called “dark nets” and are required to traverse ISPs. Cisco SAF messages are IP-based and therefore are unaffected by dark nets.

These Cisco SAF cooperative network nodes are grouped into two major functional responsibilities:

- Cisco SAF Forwarder
- Cisco SAF Client

To configure Cisco SAF, you must configure both an SAF Forwarder and an SAF Client.

The flexibility of Cisco SAF allows you to configure a single edge router to act as a Cisco SAF Forwarder and a Cisco SAF Client, if necessary.

This section provides the following information:

- [Cisco SAF Forwarder Overview, page 3](#)
- [Cisco SAF Client Overview, page 4](#)
- [Cisco SAF Client and SAF Forwarder Interaction Overview, page 5](#)

## Cisco SAF Forwarder Overview

A Cisco SAF Forwarder receives services advertised by Cisco SAF Clients, distributes the services reliably through the network, and make services available for Cisco SAF Clients to use. A Cisco SAF Forwarder:

- Ensures reliable delivery of service advertisements
- Maintains knowledge of path redundancy
- Is scalable
- Minimizes the use of network bandwidth by using targeted multicast and unicast messages.

The Cisco SAF Forwarder can propagate service advertisements to other Cisco SAF Forwarders and can propagate across a LAN, campus network, WAN, or ISP.

A basic Cisco SAF Forwarder provides the relationship between Cisco SAF Clients and the framework. A Cisco SAF Forwarder is normally located at the edges or boundaries of a network. The Cisco SAF Forwarder receives service advertisements and stores a copy before forwarding the advertisement to its neighbor SAF nodes. The Client and forwarder relationship is to maintain the advertisement. If a Client removes a service or disconnects from the forwarder node, the node will inform the framework about the services that are no longer available. When the forwarder node receives advertisements from other forwarder nodes, it will keep a copy of the entire advertisement (Header and opaque data) and forward to other SAF peers.

You can configure a Cisco SAF Forwarder on a LAN to automatically allow dynamic discovery of services to all enabled interfaces, and at the same time, specify interfaces (static configuration) you want blocked to other interfaces attempting to discover their services.


You can configure a Cisco SAF Forwarder across a non-SAF node to automatically allow dynamic discovery of services. For example, Cisco SAF Forwarders join a common peer-group. You can also create static configurations (Unicast) between pairs of Cisco SAF Forwarders.

**Note**

Multicast routing is required to allow dynamic discovery of services.

## Cisco SAF Client Overview

A Cisco SAF Client is a producer (advertises to the network) or consumer of services (requests a service from the network), or both. When a Cisco SAF Client sends a register message to a Cisco SAF Forwarder, it establishes a relationship with the Cisco SAF Forwarder. The Cisco SAF Forwarder uses this register message to obtain a unique handle that distinctly identifies this Cisco SAF Client from others connected to it. Only after a Cisco SAF Client registers is it able to advertise (publish) to, or request (subscribe), services. The figure below shows a typical Cisco SAF network.

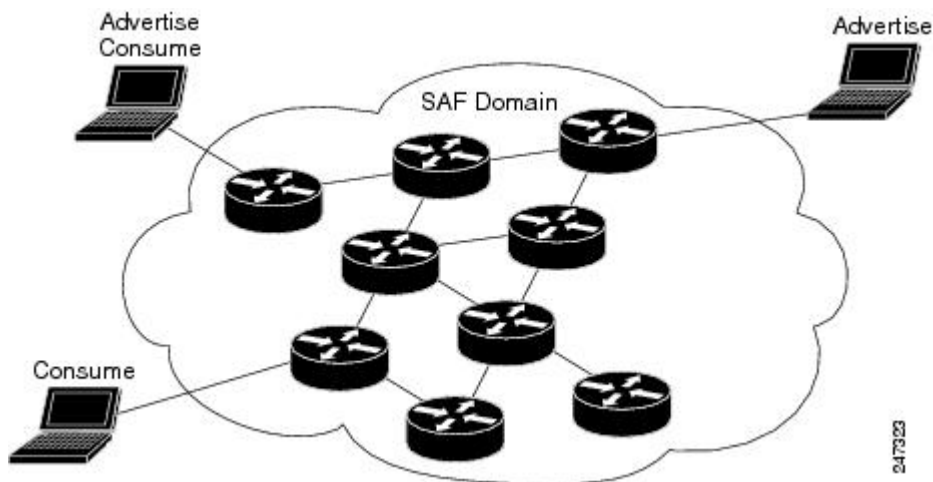

When advertising a service, a Cisco SAF Client publishes (sends) advertisements to the Cisco SAF Forwarder that contain information about the service it offers. The Cisco SAF Client can send multiple publish requests, each advertising a distinct service. The Cisco SAF Forwarder advertises all services published by the Cisco SAF Client.

When requesting a service, the Cisco SAF Client sends a request notification of services using a subscribe request. The subscribe request contains a filter that describes the set of services in which the Cisco SAF Client is interested. In response to this request, the Cisco SAF Forwarder sends the current set of services that match the filter to the Cisco SAF Client in a series of notify requests. Multiple notify requests are sent in order to provide flow control; the Cisco SAF Client must respond to each notify request before the Cisco SAF Forwarder sends the next request. As with a publish request, the Cisco SAF Client can generate multiple subscribe requests, each with a different filter. The Cisco SAF Client can also generate an unsubscribe request, which removes one of its existing subscriptions.

## Cisco SAF Client and SAF Forwarder Interaction Overview

In most situations, you would configure a Cisco SAF Client application with one or more IP addresses and ports that are used to connect to a Cisco SAF Forwarder. A Cisco SAF Client initiates a TCP connection to a Cisco SAF Forwarder. Once the TCP connection is established, a Cisco SAF Client sends a register message to the Cisco SAF Forwarder. This register message uniquely identifies the Cisco SAF Client from all other Cisco SAF Clients connected to the Cisco SAF Forwarder.

Once a Cisco SAF Client registers, it advertises a service by sending a publish request to a Cisco SAF Forwarder. A Cisco SAF Client can send multiple publish requests, each advertising a distinct service. Services are identified by a unique service ID, sub-service ID, and instance ID, and are described by service data. For more information on service identifiers, refer to Cisco SAF Service Identifier Number Formats.

A Cisco SAF Forwarder advertises all services published by a Cisco SAF Client. Similarly, a Cisco SAF Client can request notification of services using a subscribe request. The subscribe request contains a filter that describes the set of services in which the Cisco SAF Client is interested. In response to this request, the Cisco SAF Forwarder sends to the Cisco SAF Client, in a series of notify requests, the current set of services that match the filter. Multiple notify requests are sent in order to provide flow control. The Cisco SAF Client must respond to each notify request before the Cisco SAF Forwarder will send the next request. Similar to a publish request, the Cisco SAF Client can generate multiple subscribe requests, each with a different filter. The Cisco SAF Client can also generate an unsubscribe request, which removes one of its existing subscriptions.

A Cisco SAF Client and a Cisco SAF Forwarder use a shared secret for security. This shared secret consists of a username and a password. The username is an index that determines which password to use as the shared secret. When a Cisco SAF Client sends a request, it sends attributes including its username, the actual message contents, and the random password.

When a Cisco SAF Forwarder receives a request, it locates the username attribute and uses it to access its local copy of the password, and then computes similar computations the Cisco SAF Client performed. If the computations match, the Cisco SAF Client is authenticated and the request is known to be integrity protected. A Cisco SAF Forwarder can also elect to reject the request.

A Cisco SAF Forwarder requires verification regarding the liveness of the Cisco SAF Client to advertise its services into the Cisco SAF network. A Cisco SAF Forwarder and a Cisco SAF Client exchange a liveness timer at the time of registration. A Cisco SAF Forwarder considers a Cisco SAF Client failed if it has not seen a request from the Cisco SAF Client in a time period equal to the liveness timer. A Cisco SAF Client ensures that the interval between requests never exceeds this value. If a Cisco SAF Client has no data to send, it generates a register message to refresh the timer on the server.

When a Cisco SAF Forwarder detects that the Cisco SAF Client has failed, it withdraws the services advertised on behalf of that Cisco SAF Client from the network and removes any subscriptions that the

Cisco SAF Client had established. If the Cisco SAF Client has not failed, but just had a brief connection outage, it reconnects and re-registers with its previous handle informing the Cisco SAF Forwarder that it is operational. A Cisco SAF Client can be manually unregistered to gracefully cause a Cisco SAF Forwarder to withdraw all services and subscriptions.

## Cisco SAF Service Identifier Number Formats

A service is any information that a Cisco SAF Client application wishes to advertise, that can then be used by other Cisco SAF Client applications. A service advertisement consists of service data. Service advertisements are propagated between forwarders using header data. Cisco SAF Clients that are interested in a service receive, and may inspect, service header and service data.

A service identifier number uniquely identifies the service on a network. The following example shows the format of a service identifier number:

```
service:sub-service:instance.instance.instance.instance
```

The service identifier is a 16-bit decimal identifier for the major service being advertised. A major service refers to a specific technology area, such as Cisco Unified Communications (UC). Service identifiers are assigned by Cisco to various customers requiring an SAF client.

The following example shows the service ID values for IP Everywhere and Cisco Unified Communications:

```
Cisco Defined Numbers
  SAF_SERVICE_ID_IPE           = 100      ! IP Everywhere
  SAF_SERVICE_ID_UC           = 101      ! Unified Communications
```

The sub-service identifier is a 16-bit decimal identifier for the minor service being advertised. A sub-service (also referred to as a minor service) refers to the type of service within a technology. For example, within UC:

- Sub-service 1 is TDM gateway
- Sub-service 2 is hosted-DN
- Instance identifies a specific service advertisement for this kind of service. For example, service identifier 101:1:abcd.1234.ef.678 could be an advertisement of a UC (service 101) TDM gateway (sub-service 1) announced by the Communications Manager cluster in a certain location (instance abcd.1234.ef.678).

The instance identifier is a unique 128-bit number that identifies the specific service advertised.

Client teams define the use of sub-service and instance values for their applications. Clients must ensure instance uniqueness within a Cisco SAF domain.

## Cisco SAF and Role of Domains in a Network

As the variety and number of network services grows, providing timely and reliable awareness of these services starts to play a more significant role in increasing productivity and efficiency. One of the biggest challenges in propagating service availability awareness over a WAN is one of scalability. As networks grow, the services offered by the devices on these networks increases. Protocols responsible for the service advertisement need to scale to handle this increased load. These protocols also need to react to rapid changes efficiently and propagate the new information in a timely manner.

Cisco SAF is designed to be a scalable solution for enterprise service locations and is capable of spanning LAN and WAN internet segments. As an enterprise solution, you can configure Cisco SAF to use domains to scale for very large networks. Just as Cisco Enhanced Interior Gateway Routing Protocol (EIGRP)

defines the concept of an autonomous system in which routes can be searched for in a hierarchical manner, Cisco SAF employs the similar concept of a domain and sub-domains.

Cisco SAF provides a dynamic peer discovery and service advertisement propagation technique known as IP multicast. IP multicast requires the cooperation of IP Cisco SAF Forwarders (the devices that connect IP subnets together to form intranets). IP multicasting, however, may not be completely implemented across some intranets. In the absence of IP multicasting, Cisco SAF operates within the configured subnet, or within the groups of subnets over which IP multicast is supported.

Cisco SAF Forwarders offer two primary types of administrative domains (AD); a domain and a subdomain. A domain and a subdomain function the same with one notable exception; subdomains do not form unique neighbor relationships, but instead rely on a single peering.

Ideally, a network would only require a single domain to use for advertising all services. However, due to scaling and policy issues, some networks require the creation of multiple domains. The recommendation is to use a single domain. Consider using multiple domains when:

- More than 30,000 services are registered in a single domain
- Logical grouping of services is needed to restrict propagation of services

Closed groups are needed to prevent users from browsing services they are not allowed to access

Service redistribution allows different domains to exchange service information. Services may need to be bound to specific areas of the network, or the number of services in a given network may need to be limited. If you cannot use a single domain, service advertisement redistribution might be the solution.

Each domain on a network is separated into an administrative domain (AD). All Cisco SAF Forwarders in the same AD (running the same domain) have complete knowledge of the entire AS. A Cisco Forwarder that connects two (or more) administrative domains is known as a border Forwarder. A border Forwarder advertises service information from one AS to another AS. Proper design should also be considered if multiple border Forwarders are used to avoid loops (information learned from one AD being sent back to the same AD).

## Cisco SAF Virtual Routers

Cisco EIGRP Service-Family Support extends the named configuration to allow configuration of multiple instances, which operate independently. The addition of a Virtual Router ID (VRID) to the base Cisco EIGRP packet encoding allows for multiple instances.

As each virtual router is created, a VRID is assigned to the top level router and shared with the address families and service families that are configured under it.

## Cisco SAF Neighbor Relationships

Cisco SAF Forwarders can operate in networks that do not have routers that support the Cisco SAF Forwarder protocol. These networks are referred to as “dark nets.” There are two methods for configuring Cisco SAF Forwarders over IP networks that do not support Cisco SAF (IP clouds); unicast Cisco SAF neighbors and multicast Cisco SAF neighbors.

You can use a unicast configuration to provide a reliable point-to-point adjacency with neighbors. As the number of Cisco SAF Forwarders increases, you can use multicast to provide an efficient transport between multiple Cisco SAF neighbors. A single IP multicast group address can be used for multiple Cisco SAF neighbors to exchange SAF information in a peer-group.

# Configuring a Cisco SAF Forwarder

- [Enabling Cisco SAF, page 8](#)
- [Configuring Interface-Specific Commands for Cisco SAF, page 9](#)
- [Configuring Cisco SAF for Multi-Topology Networks, page 11](#)
- [Configuring Static Neighbor Relationships for Cisco SAF, page 12](#)
- [Configuring Stub Routing for Cisco SAF, page 13](#)
- [Configuring Route Authentication for Cisco SAF, page 14](#)
- [Configuring Logs for Neighbor Changes and Warnings, page 17](#)
- [Configuring the Percentage of Link Bandwidth Used for Cisco SAF, page 19](#)
- [Setting Metric Dampening Intervals for Cisco SAF Interfaces, page 20](#)
- [Adjusting the Interval Between Hello Packets and the Hold Time, page 24](#)
- [Disabling Split Horizon, page 26](#)
- [Setting Metric Maximum Hops, page 27](#)

## Enabling Cisco SAF

To enable Cisco SAF and create a Cisco SAF service-discovery process, use the following commands:

### SUMMARY STEPS

1. `enable`
2. `configure terminal`
3. `router eigrp virtual-instance-name`
4. `service-family {ipv4 | ipv6} [vrf vrf-name ] autonomous-system autonomous-system-number`
5. `exit-service-family`

### DETAILED STEPS

Command or Action	Purpose
<b>Step 1</b> <code>enable</code>  <b>Example:</b> <pre>Router&gt; enable</pre>	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<b>Step 2</b> <code>configure terminal</code>  <b>Example:</b> <pre>Router# configure terminal</pre>	Enters global configuration mode.

Command or Action	Purpose
<p><b>Step 3</b> <code>router eigrp</code> <i>virtual-instance-name</i></p> <p><b>Example:</b></p> <pre>Router(config)# router eigrp saf</pre>	<p>Enables an EIGRP virtual instance in global configuration mode.</p>
<p><b>Step 4</b> <code>service-family {ipv4   ipv6} [vrf vrf-name ] autonomous-system</code> <i>autonomous-system-number</i></p> <p><b>Example:</b></p> <pre>Router(config-router)# service-family ipv4 autonomous-system 4453</pre>	<p>Enables a Cisco SAF service family for the specified autonomous system on the router.</p>
<p><b>Step 5</b> <code>exit-service-family</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf)# exit-service-family</pre>	<p>Exits service-family configuration mode.</p>

## Configuring Interface-Specific Commands for Cisco SAF

Cisco SAF provides an inheritance precedence for interface-specific commands. Configurations made in sf-interface configuration mode have priority over specific sf-interface and factory default configurations. To configure interface-specific commands under the service-family for Cisco SAF, use the following commands:

### SUMMARY STEPS

1. `enable`
2. `configure terminal`
3. `router eigrp` *virtual-instance-name*
4. `service-family {ipv4 | ipv6} [vrf vrf-name ] autonomous-system` *autonomous-system-number*
5. `sf-interface` *interface-name interface-number*
6. `sf-interface`
7. `exit-sf-interface`

## DETAILED STEPS

Command or Action	Purpose
<p><b>Step 1</b> <code>enable</code></p> <p><b>Example:</b></p> <pre>Router&gt; enable</pre>	<p>Enables privileged EXEC mode.</p> <ul style="list-style-type: none"> <li>Enter your password if prompted.</li> </ul>
<p><b>Step 2</b> <code>configure terminal</code></p> <p><b>Example:</b></p> <pre>Router# configure terminal</pre>	<p>Enters global configuration mode.</p>
<p><b>Step 3</b> <code>router eigrp virtual-instance-name</code></p> <p><b>Example:</b></p> <pre>Router(config)# router eigrp saf</pre>	<p>Enables an EIGRP virtual instance in global configuration mode.</p>
<p><b>Step 4</b> <code>service-family {ipv4   ipv6} [vrf vrf-name ] autonomous-system autonomous-system-number</code></p> <p><b>Example:</b></p> <pre>Router(config-router)# service-family ipv4 autonomous-system 4453</pre>	<p>Creates a Cisco SAF service family for the specified autonomous system on the router, which is enabled by default.</p>
<p><b>Step 5</b> <code>sf-interface interface-name interface-number</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf)# sf-interface ethernet 0/0</pre>	<p>Enables service-family interface configuration mode for the specified interface on the router.</p>
<p><b>Step 6</b> <code>sf-interface</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf-interface)# sf-interface hello-interval 10</pre>	<p>Enter the appropriate <b>interface</b> commands required for your configuration.</p>
<p><b>Step 7</b> <code>exit-sf-interface</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf-interface)# exit-sf-interface</pre>	<p>Exits service-family interface configuration mode.</p>



## Configuring Cisco SAF for Multi-Topology Networks

Use the following configuration to register clients and publish or subscribe services into a named topology. If you configure a second topology using an existing topology name, but with a different ID, it will replace the existing topology, rather than create two IDs for the same topology.

To configure Cisco SAF for multi-topology networks, use the following commands:

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **router eigrp** *virtual-instance-name*
4. **service-family** {**ipv4** | **ipv6**} [**vrf** *vrf-name* ] **autonomous-system** *autonomous-system-number*
5. **topology base**
6. **exit-sf-topology**

### DETAILED STEPS

Command or Action	Purpose
<p><b>Step 1</b> <b>enable</b></p> <p><b>Example:</b></p> <pre>Router&gt; enable</pre>	<p>Enables privileged EXEC mode.</p> <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<p><b>Step 2</b> <b>configure terminal</b></p> <p><b>Example:</b></p> <pre>Router# configure terminal</pre>	<p>Enters global configuration mode.</p>
<p><b>Step 3</b> <b>router eigrp</b> <i>virtual-instance-name</i></p> <p><b>Example:</b></p> <pre>Router(config)# router eigrp saf</pre>	<p>Enables an EIGRP virtual instance in global configuration mode.</p>
<p><b>Step 4</b> <b>service-family</b> {<b>ipv4</b>   <b>ipv6</b>} [<b>vrf</b> <i>vrf-name</i> ] <b>autonomous-system</b> <i>autonomous-system-number</i></p> <p><b>Example:</b></p> <pre>Router(config-router)# service-family ipv4 autonomous-system 4453</pre>	<p>Enables a Cisco SAF service family for the specified Autonomous system on the router.</p>

Command or Action	Purpose
<b>Step 5</b> <code>topology base</code>  <b>Example:</b> <pre>Router(config-router-sf)# topology base</pre>	Enables service-family interface topology configuration mode and creates a topology base for the specified interface on the router.
<b>Step 6</b> <code>exit-sf-topology</code>  <b>Example:</b> <pre>Router(config-router-sf-topology)# exit-sf-topology</pre>	Exits service-family interface topology configuration mode.

## Configuring Static Neighbor Relationships for Cisco SAF

Use the following commands to configure static neighbor adjacencies between Cisco SAF Forwarders.

### SUMMARY STEPS

1. `enable`
2. `configure terminal`
3. `router eigrp virtual-instance-name`
4. `service-family { ipv4 | ipv6 } [vrf vrf-name ] autonomous-system autonomous-system-number`
5. `neighbor {ip-address {interface-type interface-number} description word | maximum-service} maximum-service number [threshold-value][dampened| reset-time| restart interval| restart-count| warning-only]}`
6. `exit-service-family`

### DETAILED STEPS

Command or Action	Purpose
<b>Step 1</b> <code>enable</code>  <b>Example:</b> <pre>Router&gt; enable</pre>	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<b>Step 2</b> <code>configure terminal</code>  <b>Example:</b> <pre>Router# configure terminal</pre>	Enters global configuration mode.

Command or Action	Purpose
<p><b>Step 3</b> <code>router eigrp virtual-instance-name</code></p> <p><b>Example:</b></p> <pre>Router(config)# router eigrp saf</pre>	<p>Enables an EIGRP virtual instance in global configuration mode.</p>
<p><b>Step 4</b> <code>service-family {ipv4   ipv6} [vrf vrf-name ] autonomous-system autonomous-system-number</code></p> <p><b>Example:</b></p> <pre>Router(config-router)# service-family ipv4 autonomous-system 4453</pre>	<p>Enables a Cisco SAF service family for the specified autonomous system on the router.</p>
<p><b>Step 5</b> <code>neighbor {ip-address{interface-type interface-number}  description word   maximum-service} maximum-service number [threshold-value] [dampened  reset-time  restart interval  restart-count  warning-only]}</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf)# neighbor 10.10.10.1 Ethernet 0/0</pre>	<p>Enables a Cisco SAF neighbor relationship for the specified interface on the router.</p>
<p><b>Step 6</b> <code>exit-service-family</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf)# exit-service-family</pre>	<p>Exits service-family configuration mode.</p>

## Configuring Stub Routing for Cisco SAF

You can configure a Cisco SAF Forwarder as a stub router. For complete information on Cisco EIGRP stub routing, refer to the Configuring EIGRP module in the *Cisco IOS IP Routing: EIGRP Configuration Guide*.

To create an Cisco SAF stub router, use the following commands:

### SUMMARY STEPS

1. `enable`
2. `configure terminal`
3. `router eigrp virtual-instance-name`
4. `service-family {ipv4 | ipv6} [vrf vrf-name ] autonomous-system number`
5. `eigrp stub [receive-only | connected ]`
6. `exit-service-family`

## DETAILED STEPS

Command or Action	Purpose
<p><b>Step 1</b> <code>enable</code></p> <p><b>Example:</b></p> <pre>Router&gt; enable</pre>	<p>Enables privileged EXEC mode.</p> <ul style="list-style-type: none"> <li>Enter your password if prompted.</li> </ul>
<p><b>Step 2</b> <code>configure terminal</code></p> <p><b>Example:</b></p> <pre>Router# configure terminal</pre>	<p>Enters global configuration mode.</p>
<p><b>Step 3</b> <code>router eigrp virtual-instance-name</code></p> <p><b>Example:</b></p> <pre>Router(config)# router eigrp saf</pre>	<p>Enables an EIGRP virtual instance in global configuration mode.</p>
<p><b>Step 4</b> <code>service-family {ipv4   ipv6} [vrf vrf-name ] autonomous-system number</code></p> <p><b>Example:</b></p> <pre>Router(config-router)# service-family ipv4 autonomous-system 4453</pre>	<p>Enables a Cisco SAF service family for the specified autonomous system on the router.</p>
<p><b>Step 5</b> <code>eigrp stub [receive-only   connected ]</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf)# eigrp stub connected</pre>	<p>Configures a stub router for Cisco SAF.</p>
<p><b>Step 6</b> <code>exit-service-family</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf)# exit-service-family</pre>	<p>Exits service-family configuration mode.</p>

## Configuring Route Authentication for Cisco SAF

Cisco SAF route authentication provides Message Digest 5 (MD5) authentication of routing updates from the routing protocol. The MD5 keyed digest in each packet prevents the introduction of unauthorized or false routing messages from unapproved sources. To configure route authentication for Cisco SAF, use the following commands:

**SUMMARY STEPS**

1. **enable**
2. **configure terminal**
3. **router eigrp** *virtual-instance-name*
4. **service-family** {**ipv4** | **ipv6**} [**vrf** *vrf-name* ] **autonomous-system** *autonomous-system-number*
5. **sf-interface** *interface-name* *interface-number*
6. **authentication key-chain** *name-of-chain*
7. **authentication mode** {**hmac-sha-256** {**0** | **7**} *password* | **md5**}
8. **exit-sf-interface**
9. **exit-service-family**
10. **exit**
11. **key-chain** *name-of-chain*
12. **key** *key-id*
13. **key-string** *text*
14. **accept-lifetime** *start-time* [**local** { **duration** *seconds* | **end-time** | **infinite** }]
15. **send-lifetime** *start-time* [**local** { **duration** *seconds* | **end-time** | **infinite** }]
16. **exit**

**DETAILED STEPS**

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<b>Step 2</b>	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
<b>Step 3</b>	<b>router eigrp</b> <i>virtual-instance-name</i>  <b>Example:</b> Router(config)# router eigrp saf	Enables an EIGRP virtual instance in global configuration mode.

Command or Action	Purpose
<p><b>Step 4</b> <code>service-family {ipv4   ipv6} [vrf vrf-name ] autonomous-system autonomous-system-number</code></p> <p><b>Example:</b></p> <pre>Router(config-router)# service-family ipv4 autonomous-system 4453</pre>	<p>Enables a Cisco SAF service family for the specified autonomous system on the router.</p>
<p><b>Step 5</b> <code>sf-interface interface-name interface-number</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf)# sf-interface ethernet 0/0</pre>	<p>Enables IPv4 service-family interface configuration mode for the specified interface on the router.</p>
<p><b>Step 6</b> <code>authentication key-chain name-of-chain</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf-interface)# authentication key-chain example</pre>	<p>Specifies an authentication key chain for EIGRP.</p>
<p><b>Step 7</b> <code>authentication mode {hmac-sha-256 {0   7} password   md5}</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf-interface)# authentication mode md5</pre>	<p>Enables IPv4 service-family authentication mode HMAC-SHA-256 or MD5 for the specified interface on the router.</p>
<p><b>Step 8</b> <code>exit-sf-interface</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf-interface)# exit-sf-interface</pre>	<p>Exits service-family interface configuration mode.</p>
<p><b>Step 9</b> <code>exit-service-family</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf)# exit-service-family</pre>	<p>Exits service-family configuration mode.</p>
<p><b>Step 10</b> <code>exit</code></p> <p><b>Example:</b></p> <pre>Router(config-router)# exit</pre>	<p>Exits router-configuration mode.</p>

Command or Action	Purpose
<p><b>Step 11</b> <code>key-chain name-of-chain</code></p> <p><b>Example:</b></p> <pre>Router(config)# key-chain example</pre>	<p>Defines an authentication key chain needed to enable authentication for routing protocols and enters key-chain configuration mode.</p>
<p><b>Step 12</b> <code>key key-id</code></p> <p><b>Example:</b></p> <pre>Router(config-keychain)# key example</pre>	<p>Identifies an authentication string for a key.</p>
<p><b>Step 13</b> <code>key-string text</code></p> <p><b>Example:</b></p> <pre>Router(config-keychain-key)# key-string example</pre>	<p>Specifies the authentication string for a key.</p>
<p><b>Step 14</b> <code>accept-lifetime start-time [local {duration seconds   end-time   infinite}]</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf-interface)# accept-lifetime example</pre>	<p>Set the time period during that the authentication key in a key chain is received as valid.</p>
<p><b>Step 15</b> <code>send-lifetime start-time [local {duration seconds   end-time   infinite}]</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf-interface)# send-lifetime example</pre>	<p>Configures a time period during that an authentication key on a key chain is valid to be sent.</p>
<p><b>Step 16</b> <code>exit</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf-interface)# exit</pre>	<p>Exits service-family interface configuration mode.</p>

## Configuring Logs for Neighbor Changes and Warnings

By default, the system logs neighbor adjacency changes to help you monitor the stability of the routing system and detect problems. If you disabled logging of such changes and want to reenble the logging, use the following commands:

**SUMMARY STEPS**

1. **enable**
2. **configure terminal**
3. **router eigrp** *virtual-instance-name*
4. **service-family** {**ipv4** | **ipv6**} [**vrf vrf-name** ] **autonomous-system** *autonomous-system-number*
5. **eigrp log-neighbor-changes**
6. **eigrp log-neighbor-warnings** *seconds*
7. **exit-service-family**

**DETAILED STEPS**

Command or Action	Purpose
<b>Step 1</b> <b>enable</b>  <b>Example:</b>  Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<b>Step 2</b> <b>configure terminal</b>  <b>Example:</b>  Router# configure terminal	Enters global configuration mode.
<b>Step 3</b> <b>router eigrp</b> <i>virtual-instance-name</i>  <b>Example:</b>  Router(config)# router eigrp saf	Enables an EIGRP virtual instance in global configuration mode.
<b>Step 4</b> <b>service-family</b> { <b>ipv4</b>   <b>ipv6</b> } [ <b>vrf vrf-name</b> ] <b>autonomous-system</b> <i>autonomous-system-number</i>  <b>Example:</b>  Router(config-router)# service-family ipv4 autonomous-system 4453	Enables a Cisco SAF service family for the specified autonomous system on the router.
<b>Step 5</b> <b>eigrp log-neighbor-changes</b>  <b>Example:</b>  Router(config-router-sf)# eigrp log-neighbor-changes	Enables the logging of changes in EIGRP service-family neighbor adjacencies.



Command or Action	Purpose
<b>Step 6</b> <code>eigrp log-neighbor-warnings seconds</code>  <b>Example:</b> <pre>Router(config-router-sf)# eigrp log-neighbor-warnings 60</pre>	Enables the logging of changes in service-family warning messages.
<b>Step 7</b> <code>exit-service-family</code>  <b>Example:</b> <pre>Router(config-router)# exit-service-family</pre>	Exits service-family configuration mode.

## Configuring the Percentage of Link Bandwidth Used for Cisco SAF

By default, packets consume a maximum of 50 percent of the link bandwidth, as configured with the **bandwidth interface** configuration command. You may want to change the value if a different level of link utilization is required or if the configured bandwidth does not match the actual link bandwidth (it may have been configured to influence route metric calculations). Use the following commands to configure the percentage of link bandwidth used for Cisco SAF.

### SUMMARY STEPS

1. `enable`
2. `configure terminal`
3. `router eigrp virtual-instance-name`
4. `service-family {ipv4 | ipv6} [vrf vrf-name ] autonomous-system autonomous-system-number`
5. `sf-interface interface-name interface-number`
6. `bandwidth-percent maximum-bandwidth-percentage`
7. `exit-sf-interface`

### DETAILED STEPS

Command or Action	Purpose
<b>Step 1</b> <code>enable</code>  <b>Example:</b> <pre>Router&gt; enable</pre>	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>

Command or Action	Purpose
<b>Step 2</b> <b>configure terminal</b>  <b>Example:</b> <pre>Router# configure terminal</pre>	Enters global configuration mode.
<b>Step 3</b> <b>router eigrp</b> <i>virtual-instance-name</i>  <b>Example:</b> <pre>Router(config)# router eigrp saf</pre>	Enables an EIGRP virtual instance in global configuration mode.
<b>Step 4</b> <b>service-family {ipv4   ipv6} [vrf vrf-name ] autonomous-system</b> <i>autonomous-system-number</i>  <b>Example:</b> <pre>Router(config-router)# service-family ipv4 autonomous-system 4453</pre>	Enables a Cisco SAF service family for the specified autonomous system on the router.
<b>Step 5</b> <b>sf-interface</b> <i>interface-name interface-number</i>  <b>Example:</b> <pre>Router(config-router-sf)# sf-interface ethernet0/0</pre>	Enables service-family interface configuration mode for the specified interface on the router.
<b>Step 6</b> <b>bandwidth-percent</b> <i>maximum-bandwidth-percentage</i>  <b>Example:</b> <pre>Router(config-router-sf-interface)# bandwidth-percent 75</pre>	Configures the maximum percentage of bandwidth used by the link for Cisco SAF.
<b>Step 7</b> <b>exit-sf-interface</b>  <b>Example:</b> <pre>Router(config-router-sf-interface)# exit-sf-interface</pre>	Exits service-family interface configuration mode.

## Setting Metric Dampening Intervals for Cisco SAF Interfaces

Because metric components can be changed rapidly, the frequency of the changes can have an impact on the network. Frequent changes require that prefixes learned through the SAF interface be updated and sent to all adjacencies. This update can result in further updates and in a worst-case scenario, cause network-wide churn. To prevent such effects, metrics can be dampened or thresholds set so that any change that does not exceed the dampening threshold is ignored.

Network changes that cause an immediate update include any change in a metric that results in the router selecting a new nexthop or a down interface or router.

Dampening the metric changes can be configured based on a change or on a time interval.

If the dampening method is:

- Change-based, changes in routes learned through a specific interface or in the metrics for a specific interface will not be advertised to adjacencies until the *computed* metric changes from the last advertised value are significant enough to cause an update to be sent.
- Interval-based, changes in routes learned through a specific interface or in the metrics for a specific interface will not be advertised to adjacencies until the *specified* interval is met or unless the change results in a new route path selection. When the timer expires, routes that have outstanding changes to report are sent. If a route changes and the final metric of the route matches the last updated metric, no updated routes are sent.

Refer to the following sections for information on configuring change-based and interval-based metric dampening configurations.

- [Change-based Dampening Configuration, page 21](#)
- [Interval-based Dampening Configuration, page 22](#)

## Change-based Dampening Configuration

Use the following commands to set the maximum change-based dampening percentage for Cisco SAF interfaces.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **router eigrp** *virtual-instance-name*
4. **service-family** {*ipv4* | *ipv6*} [*vrf vrf-name* ] **autonomous-system** *autonomous-system-number*
5. **sf-interface** *interface-name interface-number*
6. **dampening-change** [ *change-percentage* ]
7. **exit-sf-interface**

### DETAILED STEPS

Command or Action	Purpose
<b>Step 1</b> <b>enable</b>  <b>Example:</b>  Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>

Command or Action	Purpose
<b>Step 2</b> <code>configure terminal</code>  <b>Example:</b> <pre>Router# configure terminal</pre>	Enters global configuration mode.
<b>Step 3</b> <code>router eigrp virtual-instance-name</code>  <b>Example:</b> <pre>Router(config)# router eigrp saf</pre>	Enables an EIGRP virtual instance in global configuration mode.
<b>Step 4</b> <code>service-family {ipv4   ipv6} [vrf vrf-name ] autonomous-system autonomous-system-number</code>  <b>Example:</b> <pre>Router(config-router)# service-family ipv4 autonomous-system 4453</pre>	Enables a Cisco SAF service family for the specified autonomous system on the router.
<b>Step 5</b> <code>sf-interface interface-name interface-number</code>  <b>Example:</b> <pre>Router(config-router-sf)# sf-interface ethernet0/0</pre>	Enables service-family interface configuration mode for the specified interface on the router.
<b>Step 6</b> <code>dampening-change [ change-percentage]</code>  <b>Example:</b> <pre>Router(config-router-sf-interface)# dampening-change 50</pre>	Configures the percentage of change in a route learned through an EIGRP service-family interface that causes an update to be advertised to adjacent peers.
<b>Step 7</b> <code>exit-sf-interface</code>  <b>Example:</b> <pre>Router(config-router-sf-interface)# exit-sf-interface</pre>	Exits service-family interface configuration mode.

## Interval-based Dampening Configuration

Use the following commands to configure the interval-based dampening for Cisco SAF interfaces. The value you configure sets the interval when updates occur for topology changes that affect Cisco SAF interfaces and peers.

**SUMMARY STEPS**

1. **enable**
2. **configure terminal**
3. **router eigrp** *virtual-instance-name*
4. **service-family** {**ipv4** | **ipv6**} [**vrf vrf-name** ] **autonomous-system** *autonomous-system-number*
5. **sf-interface** *interface-name interface-number*
6. **dampening-interval** [*interval*]
7. **exit-sf-interface**

**DETAILED STEPS**

Command or Action	Purpose
<b>Step 1</b> <b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<b>Step 2</b> <b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
<b>Step 3</b> <b>router eigrp</b> <i>virtual-instance-name</i>  <b>Example:</b> Router(config)# router eigrp saf	Enables an EIGRP virtual instance in global configuration mode.
<b>Step 4</b> <b>service-family</b> { <b>ipv4</b>   <b>ipv6</b> } [ <b>vrf vrf-name</b> ] <b>autonomous-system</b> <i>autonomous-system-number</i>  <b>Example:</b> Router(config-router)# service-family ipv4 autonomous-system 4453	Enables a Cisco SAF service family for the specified autonomous system on the router.
<b>Step 5</b> <b>sf-interface</b> <i>interface-name interface-number</i>  <b>Example:</b> Router(config-router-sf)# sf-interface ethernet0/0	Enables service-family interface configuration mode for the specified interface on the router.

Command or Action	Purpose
<b>Step 6</b> <code>dampening-interval [interval]</code>  <b>Example:</b> <pre>Router(config-router-sf-interface)# dampening-interval 30</pre>	Sets the EIGRP interval-based dampening interval.
<b>Step 7</b> <code>exit-sf-interface</code>  <b>Example:</b> <pre>Router(config-router-sf-interface)# exit-sf-interface</pre>	Exits service-family interface configuration mode.

## Adjusting the Interval Between Hello Packets and the Hold Time

Routing devices periodically send hello packets to each other to dynamically learn of other routers on their directly attached networks. This information is used to discover neighbors and to learn when neighbors become unreachable or inoperative.

By default, hello packets are sent every 5 seconds. The exception is on low-speed, nonbroadcast multiaccess (NBMA) media on which the default hello interval is 60 seconds. Low speed is considered to be a rate of T1 or slower as specified in the **bandwidth interface** configuration command. The default hello interval remains at 5 seconds for high-speed NBMA networks. Note that for the purposes of Frame Relay and Switched Multimegabit Data Service (SMDS), networks may or may not be considered to be NBMA. These networks are considered NBMA if the interface has not been configured to use physical multicasting; otherwise they are not considered NBMA.

The hold time is advertised in hello packets and indicates to neighbors the length of time they should consider the sender valid. The default hold time is three times the hello interval, or 15 seconds. For slow-speed NBMA networks, the default hold time is 180 seconds. On congested and large networks, the default hold time might not be sufficient time for all routers to receive hello packets from their neighbors. In this case, you may want to increase the hold time. Do not adjust the hold time without advising your technical support personnel. To change the hold time on a specific interface for a particular routing process designated by the autonomous system number, use the **hold time** command.

You can adjust the interval between hello packets and the hold time. To change the interval between hello packets and the hold time, use the following commands in interface configuration mode.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **router eigrp** *virtual-instance-name*
4. **service-family** { **ipv4** | **ipv6** } [**vrf** *vrf-name* ] **autonomous-system** *autonomous-system-number*
5. **sf-interface** *interface-name interface-number*
6. **hello-interval** *seconds*
7. **hold-time** *seconds*
8. **exit-sf-interface**

## DETAILED STEPS

Command or Action	Purpose
<p><b>Step 1</b> <code>enable</code></p> <p><b>Example:</b></p> <pre>Router&gt; enable</pre>	<p>Enables privileged EXEC mode.</p> <ul style="list-style-type: none"> <li>Enter your password if prompted.</li> </ul>
<p><b>Step 2</b> <code>configure terminal</code></p> <p><b>Example:</b></p> <pre>Router# configure terminal</pre>	<p>Enters global configuration mode.</p>
<p><b>Step 3</b> <code>router eigrp virtual-instance-name</code></p> <p><b>Example:</b></p> <pre>Router(config)# router eigrp saf</pre>	<p>Enables an EIGRP virtual instance in global configuration mode.</p>
<p><b>Step 4</b> <code>service-family {ipv4   ipv6} [vrf vrf-name ] autonomous-system autonomous-system-number</code></p> <p><b>Example:</b></p> <pre>Router(config-router)# service-family ipv4 autonomous-system 4453</pre>	<p>Enables a Cisco SAF service family for the specified autonomous system on the router.</p>
<p><b>Step 5</b> <code>sf-interface interface-name interface-number</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf)# sf-interface ethernet0/0</pre>	<p>Enables service-family interface configuration mode for the specified interface on the router.</p>
<p><b>Step 6</b> <code>hello-interval seconds</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf-interface)# hello-interval 50</pre>	<p>Configures a time period for an EIGRP service-family process.</p>
<p><b>Step 7</b> <code>hold-time seconds</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf-interface)# hello-interval 50</pre>	<p>Configures a time period for an EIGRP service-family routing process designated by an autonomous system number.</p>

Command or Action	Purpose
<b>Step 8</b> <code>exit-sf-interface</code>  <b>Example:</b>  <code>Router(config-router-sf-interface)# exit-sf-interface</code>	Exits service-family interface configuration mode.

## Disabling Split Horizon

When split horizon is enabled on an interface, it blocks route information (such as update and query packets) from being advertised by a router out of any interface from which that information originates. Controlling update and query packets in this manner reduces the possibility of routing loops.

This behavior usually optimizes communications among multiple routing devices, particularly when links are broken. However, with nonbroadcast networks (such as Frame Relay and SMDS), situations can arise for which this behavior is less than ideal. For these situations, including networks in which you have Cisco SAF configured, you may want to disable split horizon.

By default, split horizon is enabled on all interfaces. To disable split horizon, use the **no split-horizon** command in interface configuration mode.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **router eigrp** *virtual-instance-name*
4. **service-family** { **ipv4** | **ipv6** } [**vrf** *vrf-name* ] **autonomous-system** *autonomous-system-number*
5. **sf-interface** *interface-name interface-number*
6. **no split-horizon**
7. **exit-sf-interface**

### DETAILED STEPS

Command or Action	Purpose
<b>Step 1</b> <code>enable</code>  <b>Example:</b>  <code>Router&gt; enable</code>	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<b>Step 2</b> <code>configure terminal</code>  <b>Example:</b>  <code>Router# configure terminal</code>	Enters global configuration mode.



Command or Action	Purpose
<p><b>Step 3</b> <code>router eigrp</code> <i>virtual-instance-name</i></p> <p><b>Example:</b></p> <pre>Router(config)# router eigrp saf</pre>	Enables an EIGRP virtual instance in global configuration mode.
<p><b>Step 4</b> <code>service-family {ipv4   ipv6} [vrf vrf-name ] autonomous-system</code> <i>autonomous-system-number</i></p> <p><b>Example:</b></p> <pre>Router(config-router)# service-family ipv4 autonomous-system 4453</pre>	Enables a Cisco SAF service family for the specified autonomous system on the router.
<p><b>Step 5</b> <code>sf-interface</code> <i>interface-name interface-number</i></p> <p><b>Example:</b></p> <pre>Router(config-router-sf)# sf-interface ethernet0/0</pre>	Enables service-family interface configuration mode for the specified interface on the router.
<p><b>Step 6</b> <code>no split-horizon</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf-interface)# no split-horizon</pre>	Disables split-horizon.
<p><b>Step 7</b> <code>exit-sf-interface</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf-interface)# exit-sf-interface</pre>	Exits service-family interface configuration mode.

## Setting Metric Maximum Hops

Maximum hops limits the number of hops a service can propagate to advertise its service. The default number of maximum hops is 100.

To limit the number of hops used to advertise a service, use the following commands:

**SUMMARY STEPS**

1. **enable**
2. **configure terminal**
3. **router eigrp** *virtual-instance-name*
4. **service-family** {**ipv4** | **ipv6**} [**vrf** *vrf-name* ] **autonomous-system** *autonomous-system-number*
5. **sf-interface** *interface-name interface-number*
6. **metric maximum-hops**
7. **exit-sf-interface**

**DETAILED STEPS**

Command or Action	Purpose
<b>Step 1</b> <b>enable</b>  <b>Example:</b>  Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<b>Step 2</b> <b>configure terminal</b>  <b>Example:</b>  Router# configure terminal	Enters global configuration mode.
<b>Step 3</b> <b>router eigrp</b> <i>virtual-instance-name</i>  <b>Example:</b>  Router(config)# router eigrp saf	Enables an EIGRP virtual instance in global configuration mode.
<b>Step 4</b> <b>service-family</b> { <b>ipv4</b>   <b>ipv6</b> } [ <b>vrf</b> <i>vrf-name</i> ] <b>autonomous-system</b> <i>autonomous-system-number</i>  <b>Example:</b>  Router(config-router)# service-family ipv4 autonomous-system 4453	Enables a Cisco SAF service family for the specified autonomous system on the router.
<b>Step 5</b> <b>sf-interface</b> <i>interface-name interface-number</i>  <b>Example:</b>  Router(config-router-sf)# sf-interface ethernet 0/0	Enables service-family interface configuration mode for the specified interface on the router.

Command or Action	Purpose
<p><b>Step 6</b> <code>metric maximum-hops</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf-interface)# metric maximum-hops 5</pre>	<p>Specifies a hop count to have the IP routing software advertise as unreachable routes.</p>
<p><b>Step 7</b> <code>exit-sf-interface</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf-interface)# exit-sf-interface</pre>	<p>Exits service-family interface configuration mode.</p>

## Configuring a Cisco SAF Client

This section describes the tasks to configure a Cisco Service Advertisement Framework (Cisco SAF) Client.

Cisco SAF Clients connect to the Cisco SAF network in one of two ways:

- Reside on the same router as a Cisco SAF Forwarder, in which case the Cisco SAF Client uses an internal API to connect to a Cisco SAF Forwarder.
- Be external to a Cisco SAF Forwarder. In this configuration, the SAF Client is referred to as a Cisco SAF External Client, and it requires a protocol interface for connecting to the Cisco SAF Forwarder.
- [Prerequisites, page 29](#)
- [Restrictions, page 29](#)
- [Configuring a Cisco SAF External Client, page 29](#)

## Prerequisites

Before configuring:

- Cisco SAF Clients, you should understand the concepts in the [Cisco SAF Client\\_Overview](#).
- Neighbor relationships for Cisco SAF External Clients located on separate LANs, ensure that you have IP routing configured between each Cisco External Client.

## Restrictions

Cisco SAF currently supports a maximum of 50 Cisco SAF External Clients.

## Configuring a Cisco SAF External Client

To configure a Cisco SAF External Client, use the following commands:

**SUMMARY STEPS**

1. **enable**
2. **configure terminal**
3. **router eigrp** *virtual-instance-name*
4. **service-family** { **ipv4** | **ipv6** } [**vrf** *vrf-name* ] **autonomous-system** *autonomous-system-number*
5. **topology base**
6. **external-client** *client-label*
7. **exit-sf-topology**
8. **exit-service-family**
9. **exit**
10. **service-family external-client listen** { **ipv4** | **ipv6** } *tcp\_port\_number*
11. **external-client** *client-label* **basename**
12. **username** *user-name*
13. **password** *password-name*
14. **keepalive** *number*
15. **exit**

**DETAILED STEPS**

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<b>Step 2</b>	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
<b>Step 3</b>	<b>router eigrp</b> <i>virtual-instance-name</i>  <b>Example:</b> Router(config)# router eigrp saf	Enables an EIGRP virtual instance in global configuration mode.

	Command or Action	Purpose
<b>Step 4</b>	<p><b>service-family</b> {ipv4   ipv6} [vrf vrf-name ]  <b>autonomous-system</b> <i>autonomous-system-number</i></p> <p><b>Example:</b></p> <pre>Router(config-router)# service-family ipv4 autonomous-system 4453</pre>	Enables a Cisco SAF service family for the specified autonomous system on the router.
<b>Step 5</b>	<p><b>topology base</b></p> <p><b>Example:</b></p> <pre>Router(config-router-sf)# topology base</pre>	Enables service-family interface topology configuration mode for the specified interface on the router.
<b>Step 6</b>	<p><b>external-client</b> <i>client-label</i></p> <p><b>Example:</b></p> <pre>Router(config-router-topology)# external- client example</pre>	Configures a Cisco SAF External Client with the specified Client label.
<b>Step 7</b>	<p><b>exit-sf-topology</b></p> <p><b>Example:</b></p> <pre>Router(config-router-sf-topology)# exit-sf- topology</pre>	Exits service-family topology configuration mode.
<b>Step 8</b>	<p><b>exit-service-family</b></p> <p><b>Example:</b></p> <pre>Router(config-router-sf)# exit-service-family</pre>	Exits service-family configuration mode.
<b>Step 9</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>Router(config-router)# exit</pre>	Exits router configuration mode.
<b>Step 10</b>	<p><b>service-family external-client listen</b> {ipv4   ipv6}  tcp_port_number</p> <p><b>Example:</b></p> <pre>Router(config)# service-family external- client listen ipv4 5050</pre>	Configures a Cisco SAF External Client TCP port to use to communicate with a Cisco SAF Forwarder. The valid port range is 1024 to 65536.

Command or Action	Purpose
<p><b>Step 11</b> <code>external-client</code> <i>client-label</i> <i>basename</i></p> <p><b>Example:</b></p> <pre>Router(config-external-client)# external-client example basename</pre>	<p>Configures a Cisco SAF External Client with the specified client label and optionally, a basename.</p> <p>Specifying the <b>basename</b> keyword allows SAF external clients to use a naming convention based on the client-label. The naming convention takes the form of <i>client-label</i> @[1-50] where you can specify a maximum of 50 SAF external clients. For example, if the <b>external-client</b> command specifies a client label of <i>example</i> , then the basename for a SAF external client would be <i>example@1</i> . Another SAF external client would be <i>example@2</i> , and so on up to a maximum of 50 basenames (@50).</p>
<p><b>Step 12</b> <code>username</code> <i>user-name</i></p> <p><b>Example:</b></p> <pre>Router(config-external-client)# username example</pre>	<p>Enables external-client label configuration mode and configures a Cisco SAF External Client with the specified username.</p>
<p><b>Step 13</b> <code>password</code> <i>password-name</i></p> <p><b>Example:</b></p> <pre>Router(config-external-client-mode)# password examplepass</pre>	<p>Configures a password for a Cisco SAF External Client. The minimum password length is 11 characters.</p>
<p><b>Step 14</b> <code>keepalive</code> <i>number</i></p> <p><b>Example:</b></p> <pre>Router(config-external-client-mode)# keepalive 360000</pre>	<p>(Optional) Specifies the keepalive timer for the Cisco SAF External Client. The keepalive value is in milliseconds (msecs). The default is 9600 msecs.</p>
<p><b>Step 15</b> <code>exit</code></p> <p><b>Example:</b></p> <pre>Router(config-external-client-mode)# exit</pre>	<p>Exits external-client label configuration mode.</p>

## Configuring Dynamic Neighbors

When neighbors are not adjacent, normal Cisco SAF peering mechanisms cannot be used to exchange SAF information over the networking cloud. The neighbors are often multiple hops away, and separated by dark nets (routers not running SAF).

To support this type of network, SAF provides the **neighbor** command, which allows remote neighbors to be configured and sessions established though unicast packet transmission. However, as the number of Forwarders needing to exchange SAF information over the networking cloud increases, unicast SAF

neighbor definitions may become cumbersome to manage. Each neighbor has to be manually configured, resulting in increased operational costs.

To better accommodate deployment of these topologies, ease configuration management, and reduce operational costs, the Dynamic Neighbors feature provides support for the dynamic discovery of remote unicast and multicast neighbors (referred to as “remote neighbors”). Remote neighbor support allows Cisco SAF peering to one or more remote neighbors, which may not be known at the time the router is configured, thus reducing configuration management.

This section contains the following major topics:

- [Neighbor Types, page 33](#)
- [Remote Neighbor Session Policy, page 33](#)
- [Remote Unicast-Listen \(Point-to-Point\) Neighbors, page 34](#)
- [Remote Multicast-Group \(Multipoint-to-Multipoint\) Neighbors, page 35](#)
- [Inheritance and Precedence of the Remote Neighbor Configurations, page 35](#)
- [Prerequisites, page 35](#)
- [Restrictions, page 36](#)
- [Configuring Cisco SAF Dynamic Neighbors, page 36](#)

## Neighbor Types

The following terms are used when describing neighbor types:

- **Local Neighbor**--A neighbor that is adjacent on a shared subnet (or common subnet) and uses a link-local multicast address for packet exchange. This is the default type of neighbor in Cisco SAF.
- **Static Neighbor**--Any neighbor that uses unicast to communicate, is one hop away, is on a common subnet, and whose IP address has been specified using the **neighborip-address** command.
- **Remote Neighbor**--Any neighbor that is multiple hops away, including Remote Static Neighbors.
- **Remote Static Neighbor**--Any neighbor that uses unicast to communicate, is multiple hops away, and whose IP address has been specified using the **neighborip-address** command.
- **Remote Multicast-Group**--Any neighbor that is multiple hops away, but does not have its IP address manually configured using the **neighborip-address** command, and uses a configured multicast group address for packet exchange.
- **Remote Unicast-listen (or simply Unicast-listen)**--Any neighbor that uses unicast to communicate, is multiple hops away, and whose IP address has not been configured using the **neighborip-address** command.

## Remote Neighbor Session Policy

When using remote unicast-listen or remote multicast-group neighbor configurations, SAF neighbor IP addresses are not pre-defined, and neighbors may be many hops away. A router with this configuration could peer with any router that sends a valid HELLO packet. Because of security considerations, this open aspect requires policy capabilities to limit peering to valid routers and to restrict the number of neighbors to limit resource consumption. This capability is accomplished using the following manually configured parameters, and takes effect immediately.

- [Neighbor Filter List, page 34](#)
- [Maximum Remote Neighbors, page 34](#)
- [Configuration Changes for Neighbor Filter List and Maximum Remote Neighbors, page 34](#)

## Neighbor Filter List

The optional **allow-list** keyword, available in the **remote-neighbors** command, enables you to use an access list (Access Control List) to specify the remote IP addresses from which Cisco SAF neighbor connections may be accepted. If you do not use the **allow-list** keyword, then all IP addresses (permit any) will be accepted.

The Access Control List (ACL) defines a range of IPv4 or IPv6 IP addresses with the following conditions:

- Any neighbor that has a source IP address that matches an IP address in the access-list will be allowed (or denied) based on the user configuration.
- If the **allow-list** keyword is not specified, any IP address will be permitted (permit any).
- The **allow-list** keyword is supported only for remote multicast-group and unicast-listen neighbors. It is not available for static, remote static, or local neighbors.
- Incoming Cisco SAF packets that do not match the specified access list will be rejected.

## Maximum Remote Neighbors

The optional **max-neighbors** keyword, available in the **remote-neighbors** command, enables you to specify a maximum number of remote neighbors that Cisco SAF can create using the remote neighbor configurations. When the maximum number of remote neighbors has been created for a configuration, Cisco SAF rejects all subsequent connection attempts for that configuration. This option helps to protect against denial-of-service attacks that attempt to create many remote neighbors in an attempt to overwhelm router resources.

The **max-neighbors** configuration option has the following conditions:

- This option is supported only for remote multicast-group or unicast-listen neighbors. It is not available for local, static, or remote static neighbors.
- There is no default maximum. If you do not specify a maximum number of remote neighbors, the number of remote neighbors is limited only by available memory and bandwidth.
- Reducing the maximum number of remote neighbors to a number less than the current sessions will result in the neighbors (in no specific order) being dropped until the count reaches the new limit.

## Configuration Changes for Neighbor Filter List and Maximum Remote Neighbors

When the **allow-list** or **max-neighbors** configurations are changed, any existing remote Cisco SAF sessions that are no longer allowed by the new configuration will be removed automatically and immediately. Pre-existing neighbors that are still allowed by the new configuration will not be affected.

## Remote Unicast-Listen (Point-to-Point) Neighbors

For configurations in which multiple remote neighbors peer with a single hub (point-to-point), the hub can be configured for remote unicast-listen peering using the **remote-neighbors** command to allow the remote neighbors to peer with the hub without having to manually configure the remote neighbor IP addresses on the hub.

When configured with this command, the hub router:

- Uses its interface IP address as the source IP address for any unicast transmissions. This IP address must be routable.



- Requires neighbors peering with the hub to be configured using the **neighborip-address loopback loopback-interface-number remotemaximum-hops** command where *ip-address* is the unicast address of the local router interface IP address.
- Listens for unicast HELLO packets on the interface specified in the **remote-neighbor** command.
- Accepts a unicast HELLO packet if it is in the IP address range configured using the **allow-list** keyword, or any unicast HELLO packet if an allow list is not defined.
- Rejects multicast HELLO packets from any neighbor that is also sending unicast HELLO packets and is permitted by the unicast allow-list (or all neighbors if an allow-list is not defined).
- Begins normal neighbor establishment using the IP addresses of the remote neighbors for packet transmission once the neighbor relationship is established.

## Remote Multicast-Group (Multipoint-to-Multipoint) Neighbors

Multicast can be used to provide an efficient transport between multiple Cisco SAF neighbors. A single multicast-group address can be used for multiple Cisco SAF neighbors to exchange information within the same multicast-group. To configure multipoint-to-multipoint configurations, use the **multicast-group** keyword available in the **remote neighbors** command.

When configured with this command, the router:

- Uses the interface IP address as the source IP address for any unicast transmissions. This IP address must be routable.
- Uses the configured multicast-group address for all multicast packets sent and received.
- Requires all forwarders and routers, which form the multipoint-to-multipoint neighbor relationships, to be configured using the same multicast-group IP address.
- Requires multicast forwarding for the defined multicast-group address to be configured and functional for packet delivery.

## Inheritance and Precedence of the Remote Neighbor Configurations

Static neighbors configured with the **neighborip-address** or the **neighborip addressremote** commands take precedence over the remote neighbors that are created as a result of the **remote-neighbors** command. If the remote IP address of an incoming unicast Cisco SAF connection matches both a static neighbor and the remote unicast-listen neighbor access list, the static neighbor is used and no remote unicast-listen neighbor is created. If you configure a new static neighbor while a remote neighbor for the same remote IP address already exists, Cisco SAF automatically removes the remote unicast-listen neighbor.

Remote unicast-listen neighbors take precedence over remote multicast-group neighbors. If Cisco SAF is receiving both unicast and multicast HELLOs from the same remote IP address targeted at the same local interface, the neighbor will be treated as unicast (unicast-listen) rather than multicast (multicast-group) for packet exchange.

## Prerequisites

Before configuring SAF dynamic neighbors, ensure that when using:

- Unicast-listen mode--IP connectivity (reachability) exists between routers that need to do dynamic peering.
- Multicast-group mode--Multicast is running on the network.
- **allow-list** keyword--The configured Access Control List that will specify the remote IP addresses from which EIGRP neighbor connections may be accepted.

## Restrictions

- The **remote-neighbors** command requires a loopback as a source interface.
- Only named ACLs (Access Control Lists) are permitted with the **allow-list** keyword. Numbered ACLs configured are not permitted.
- Within a service-family:
  - Only one **remote-neighbors unicast-listen** command and one **remote-neighbors multicast-group** command may be configured per interface. (For example, you cannot configure **remote-neighbors source Loopback1 multicast-group 224.1.1.1** and **remote-neighbors source Loopback1 multicast-group 224.1.1.2**.) If you want to configure multiple different multicast-group addresses in the same service-family, you need to use multiple source interfaces.
  - A multicast-group address may only be associated to a single source interface. (For example, you cannot configure **remote-neighbors source Loopback1 multicast-group 224.1.1.1** and **remote-neighbors source Loopback2 multicast-group 224.1.1.1**.)

## Configuring Cisco SAF Dynamic Neighbors

To configure Cisco SAF dynamic neighbors, use the following commands:

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **router eigrp** *virtual-instance-name*
4. **service-family** {*ipv4* | *ipv6*} [*vrf vrf-name*] **autonomous-system** *autonomous-system-number*
5. **remote-neighbors source** *interface* {**unicast-listen** | **multicast-group** *group-address*} [**allow-list** *access-list-name*] [**max-neighbors** *max-remote-peers*]
6. **exit-service-family**

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b>  Router> enable	Enables privileged EXEC mode.  • Enter your password if prompted.
Step 2	<b>configure terminal</b>  <b>Example:</b>  Router# configure terminal	Enters global configuration mode.

Command or Action	Purpose
<p><b>Step 3</b> <code>router eigrp</code> <i>virtual-instance-name</i></p> <p><b>Example:</b></p> <pre>Router(config)# router eigrp saf</pre>	<p>Enables an EIGRP virtual instance in global configuration mode.</p>
<p><b>Step 4</b> <code>service-family {ipv4   ipv6} [vrf vrf-name ]</code> <code>autonomous-system</code> <i>autonomous-system-number</i></p> <p><b>Example:</b></p> <pre>Router(config-router)# service-family ipv4 autonomous-system 4453</pre>	<p>Enables a Cisco SAF service family for the specified autonomous system on the router.</p>
<p><b>Step 5</b> <code>remote-neighbors source interface {unicast-listen  </code> <code>multicast-group group-address } [allow-list access-</code> <code>list-name ] [max-neighbors max-remote-peers ]</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf)# remote-neighbors source Loopback1 unicast-listen allow-list myNeighborList</pre>	<p>Configures a SAF process that enables remote neighbors to accept inbound connections from any remote IP address.</p> <p>Use the:</p> <ul style="list-style-type: none"> <li>• <b>allow-list</b> keyword to use an access list (Access Control List) to specify the remote IP addresses from which Cisco SAF neighbor connections may be accepted. If you do not use the allow-list keyword, then all IP addresses (permit any) will be accepted.</li> <li>• <b>max-neighbors</b> keyword to specify the maximum number of remote neighbors. If you do not specify a number, the maximum number of remote neighbors is limited only by available memory and bandwidth.</li> </ul>
<p><b>Step 6</b> <code>exit-service-family</code></p> <p><b>Example:</b></p> <pre>Router(config-router-sf)# exit-service-family</pre>	<p>Exits service-family configuration mode.</p>

## Configuring Capabilities Manager

The Service Routing Capabilities Manager feature enables Cisco IOS routing platforms to collect their network services (capability) information, store the information in their local Network Information Base (NIB), and then advertise those capabilities to other routers in the network that also have a SAF (Service Advertisement Framework) Forwarder configured and Capabilities Manager enabled. A capability designates a feature or service in the network, such as the presence of hardware, a software feature, or the configuration of a network service (IPv4 or IPv6). A NIB is a database located on each routing platform in which capabilities information is stored.

Using Capabilities Manager, you can access capability information without having to connect to each router to access the router's information. For example, if you want to know which software version is running on a router, you must log in to that router and enter a **show** command. By enabling Capabilities

Manager on routers in the network for which you wish to access capability information, you would only need to log in to one router and enter one **show** command to display the software versions for all routers.

When a new router that is running SAF and Capabilities Manager is added to the network, the router will automatically:

- Collect its own capabilities information
- Store it in its local NIB
- Distribute it to other routers in the network (that are also running SAF and Capabilities Manager) so that all routers are aware of the capabilities

This section contains the following major topics:

- [Capabilities Discovery, page 38](#)
- [Interoperability with SAF Forwarder, page 38](#)
- [Capabilities Information, page 38](#)
- [Capabilities Groups, page 39](#)
- [XML Schema for Capabilities Data, page 40](#)
- [Prerequisites for Configuring Capabilities Manager, page 41](#)
- [Disabling and Enabling and Capabilities Manager, page 41](#)
- [Displaying Capabilities Manager Information, page 42](#)
- [Clearing Registered Capabilities Information, page 43](#)

## Capabilities Discovery

Capabilities Manager is enabled by default at system startup. At startup, it registers as a Service Routing Client and proceeds to discover various capabilities of the hardware and software platform. Capabilities Manager only discovers whether a capability is supported on the local system. It does not discover whether the capability is configured or enabled or discover any other information about the capability for other routers in the network.

Capabilities information will be installed into the local Network Information Base (NIB) as service routing data and made available for advertisement by any SAF Forwarder to the Service Routing network. Capabilities information is passed to the Service Routing infrastructure in XML format and stored in the local NIB.

## Interoperability with SAF Forwarder

Capabilities Manager does not advertise capabilities information to the Service Routing network. A SAF Forwarder performs the functions to distribute capabilities information. However, a SAF Forwarder is not required for Capabilities Manager to function. If a SAF Forwarder is not configured, the capabilities information is bound to the local router and is not distributed to other routers in the network. When a SAF Forwarder is configured, it will distribute all capabilities information by default.

## Capabilities Information

Capabilities information is installed in the Network Information Base (NIB) as service routing data. It is identified by a SAF address in the form of:

- service ID—Capabilities Manager uses service ID 100.

- subservice ID—Capability group ID. The subservice ID indicates the group ID of the capabilities data type.
- Instance number—Unique identifier for the local router. It is assigned in order of the hardware serial number, default MAC address, IPv4 router ID, or IPv6 router ID.

## Capabilities Groups

Capabilities Manager classifies capabilities by group to facilitate query and retrieval, and assigns each group a unique ID. Capabilities Manager provides the following capability groups:

- 1 (HARDWARE)
- 2 (SOFTWARE)
- [Hardware Group Information, page 39](#)
- [Software Group Information, page 39](#)

### Hardware Group Information

Hardware information is designated as group ID 1. Group 1 provides the following capabilities information, when available. All hardware information may not be available on each platform that supports Capabilities Manager.

- Host Name
- Platform
- Main Memory Size
- IO Memory Size

### Software Group Information

Software information is designated as group ID 2. Group 2 provides the following capabilities information, when available. All software information may not be available on each platform that supports Capabilities Manager.

- Host Name
- Software
- Image
- Version
- Software subsystems:
  - IP Multicast
  - insp\_appfw
  - ip\_sla\_responder
  - eigrp\_ipv4
  - eigrp\_ipv6
  - ospf
  - ospfv3
  - isis
  - isis\_ipv6
  - bgp\_ipv4
  - bgp\_ipv6

- service\_routing

## XML Schema for Capabilities Data

If you have an Extensible Messaging Client Protocol (XMCP) client (external client) connected to a SAF Forwarder, you can subscribe to the Capabilities Manager, which is service ID 100. The data can be interpreted using the following XML schema:

```
<?xml version="1.0" encoding="UTF-8"?>
<xs:schema xmlns:xs="http://www.w3.org/2001/XMLSchema">
<xs:element name="Capabilities" type="CapabilitiesType" />
<xs:complexType name="CapabilitiesType">
<xs:sequence>
<xs:element ref="Group" minOccurs="1" maxOccurs="unbounded" />
</xs:sequence>
</xs:complexType>
<xs:element name="Group" type="GroupType" />
<xs:complexType name="GroupType">
<xs:sequence>
<xs:element ref="Capability" minOccurs="1" maxOccurs="unbounded" />
</xs:sequence>
<xs:attribute name="Name" type="xs:normalizedString" use="required" />
</xs:complexType>
<xs:element name="Capability" type="CapabilityType" />
<xs:complexType name="CapabilityType">
<xs:sequence>
<xs:element name="Value" type="xs:normalizedString" />
</xs:sequence>
<xs:attribute name="Name" type="xs:normalizedString" use="required" />
</xs:complexType>
</xs:schema>
```

Example:

```
<Capabilities>
<Group Name="HARDWARE">
<Capability Name="HostName">
<Value>R100</Value>
</Capability>
<Capability Name="Platform">
<Value>Solaris Unix (Sparc) processor</Value>
</Capability>
```

```

<Capability Name="MainMemorySize">
<Value>63683Kbytes</Value>
</Capability>
</Group>
<Group Name="SOFTWARE">
<Capability Name="HostName">
<Value>R100</Value>
</Capability>
<Capability Name="Software">
<Value>Cisco IOS Software</Value>
</Capability>
<Capability Name="Image">
<Value>Solaris Software (UNIX-ADVENTERPRISE-M)</Value>
</Capability>
<Capability Name="Version">
<Value>Experimental Version 15.1(20110323:093227)</Value>
</Capability>
<Capability Name="ipmulticast">
<Value>Subsystem loaded</Value>
</Capability>
<Capability Name="eigrp_ipv4">
<Value>Subsystem loaded</Value>
</Capability>
</Group>
</Capabilities>

```

## Prerequisites for Configuring Capabilities Manager

The following prerequisites apply to the Capabilities Manager feature:

- To ensure that a router has Capabilities Manager available, enter the **show service-routing plugin capman** command.
- To enable a router to distribute its capabilities information, configure a SAF Forwarder on the router.
- To view capabilities information present on other routers in the network, configure a SAF Forwarder

## Disabling and Enabling and Capabilities Manager

Capabilities Manager is enabled by default. You can disable and reenable Capabilities Manager at any time.

- Disabling Capabilities Manager will remove all the capabilities information that is installed in the local Network Information Base (NIB) and unregister the information from Service Routing.

- Re-enabling Capabilities Manager will rediscover capabilities and provide information to the local NIB and to the Service Routing network.

Perform this task to disable and reenable Capabilities Manager.

**SUMMARY STEPS**

1. enable
2. configure terminal
3. no service-routing capabilities-manager
4. service-routing capabilities-manager

**DETAILED STEPS**

Command or Action	Purpose
<p><b>Step 1</b> enable</p> <p><b>Example:</b></p> <pre>Router&gt; enable</pre>	Enables privileged EXEC mode. Enter your password if prompted.
<p><b>Step 2</b> configure terminal</p> <p><b>Example:</b></p> <pre>Router# configure terminal</pre>	Enters global configuration mode.
<p><b>Step 3</b> no service-routing capabilities-manager</p> <p><b>Example:</b></p> <pre>Router(config)# no service-routing capabilities-manager</pre>	Disables Capabilities Manager.
<p><b>Step 4</b> service-routing capabilities-manager</p> <p><b>Example:</b></p> <pre>Router(config)# service-routing capabilities-manager</pre>	Enables Capabilities Manager.

**Displaying Capabilities Manager Information**

To display information about Capabilities Manager, use the following commands in privileged EXEC mode.



**SUMMARY STEPS**

1. **show service-routing plugins capman**
2. **show service-routing capabilities-manager internal**
3. **show service-routing capabilities-manager [group value] [local]**

**DETAILED STEPS**

Command or Action	Purpose
<b>Step 1</b> <b>show service-routing plugins capman</b>  <b>Example:</b>  Router> show service-routing plugins capman	Displays information about Capabilities Manager plugins.
<b>Step 2</b> <b>show service-routing capabilities-manager internal</b>  <b>Example:</b>  Router# show service-routing capabilities-manager internal	Displays information about Capabilities Manager.
<b>Step 3</b> <b>show service-routing capabilities-manager [group value] [local]</b>  <b>Example:</b>  Router# show service-routing capabilities-manager group 1 local	Displays information about registered capabilities.

**Clearing Registered Capabilities Information**

Perform this task to clear current capabilities information from the NIB. Once the NIB is cleared, Capabilities Manager will automatically rediscover new capabilities.

**SUMMARY STEPS**

1. **enable**
2. **configure terminal**
3. **clear service-routing capabilities-manager**

**DETAILED STEPS**

Command or Action	Purpose
<p><b>Step 1</b> <code>enable</code></p> <p><b>Example:</b></p> <pre>Router&gt; enable</pre>	<p>Enables privileged EXEC mode.</p> <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<p><b>Step 2</b> <code>configure terminal</code></p> <p><b>Example:</b></p> <pre>Router# configure terminal</pre>	<p>Enters global configuration mode.</p>
<p><b>Step 3</b> <code>clear service-routing capabilities-manager</code></p> <p><b>Example:</b></p> <pre>Router(config)# clear service-routing capabilities-manager</pre>	<p>Clears the current capabilities information from the NIB database. Capabilities Manager will automatically rediscover new capabilities.</p>

## Displaying Cisco SAF Statistics

To display Cisco SAF statistics, use the following commands in privileged EXEC mode.

## SUMMARY STEPS

1. **show eigrp service-family** { **clients** [detail] | **external-client** [name] | **subscriptions** [detail] }
2. **show eigrp service-family** { **ipv4** | **ipv6** } [**vrf vrf-name**] *autonomous-system-number* **accounting**
3. **show eigrp service-family** { **ipv4** | **ipv6** } [**vrf vrf-name**] *autonomous-system-number* **clients** [detail]
4. **show eigrp service-family** { **ipv4** | **ipv6** } [**vrf vrf-name**] *autonomous-system-number* **events** [*starting-event-number ending-event-number*]
5. **show eigrp service-family** { **ipv4** | **ipv6** } [**vrf vrf-name**] *autonomous-system-number* **interfaces** [*interface-type interface-number*] [detail]
6. **show eigrp service-family** { **ipv4** | **ipv6** } [**vrf vrf-name**] *autonomous-system-number* **subscriptions**
7. **show eigrp service-family** { **ipv4** | **ipv6** } [**vrf vrf-name**] *autonomous-system-number* **timers**
8. **show eigrp service-family** { **ipv4** | **ipv6** } [**vrf vrf-name**] *autonomous-system-number* **summary**
9. **show eigrp service-family** { **ipv4** | **ipv6** } [**vrf vrf-name**] *autonomous-system-number* **zero successors**
10. **show eigrp service-family** { **ipv4** | **ipv6** } [**vrf vrf-name**] *autonomous-system-number* **topology**
11. **show eigrp service-family** { **ipv4** | **ipv6** } [**vrf vrf-name**] *autonomous-system-number* **topology active**
12. **show eigrp service-family** { **ipv4** | **ipv6** } [**vrf vrf-name**] *autonomous-system-number* **topology all-links**
13. **show eigrp service-family** { **ipv4** | **ipv6** } [**vrf vrf-name**] *autonomous-system-number* **topology base** [*service-instance-number*] | **clients** [detail]
14. **show eigrp service-family** { **ipv4** | **ipv6** } [**vrf vrf-name**] *autonomous-system-number* **topology** [detail-links]
15. **show eigrp service-family** { **ipv4** | **ipv6** } [**vrf vrf-name**] *autonomous-system-number* **topology events** [*starting-event-number ending-event-number*]
16. **show eigrp service-family** { **ipv4** | **ipv6** } [**vrf vrf-name**] *autonomous-system-number* **topology pending**
17. **show eigrp service-family** { **ipv4** | **ipv6** } [**vrf vrf-name**] *autonomous-system-number* **topology** [*service-type connected* | **external** | **internal** | **local** | **redistributed** | **summary**]
18. **show eigrp service-family** { **ipv4** | **ipv6** } [**vrf vrf-name**] *autonomous-system-number* **topology sia-events** [*starting-event-number ending-event-number*]
19. **show eigrp service-family** { **ipv4** | **ipv6** } [**vrf vrf-name**] *autonomous-system-number* **topology sia-statistics** [*ip-address*]
20. **show eigrp service-family** { **ipv4** | **ipv6** } [**vrf vrf-name**] *autonomous-system-number* **topology summary**
21. **show eigrp service-family** { **ipv4** | **ipv6** } [**vrf vrf-name**] *autonomous-system-number* **topology zero-successors**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>show eigrp service-family</b> { <b>clients</b> [detail]   <b>external-client</b> [name]   <b>subscriptions</b> [detail] }	Displays information about clients, external clients, or subscriptions configured for Cisco SAF.
	<b>Example:</b>  Router> show eigrp service-family	

Command or Action	Purpose
<p><b>Step 2</b> <code>show eigrp service-family {ipv4   ipv6} [vrf vrf-name] autonomous-system-number accounting</code></p> <p><b>Example:</b></p> <pre>Router# show eigrp service-family ipv4 4453 accounting</pre>	Displays accounting information about Cisco SAF.
<p><b>Step 3</b> <code>show eigrp service-family {ipv4   ipv6} [vrf vrf-name] autonomous-system-number clients [detail]</code></p> <p><b>Example:</b></p> <pre>Router# show eigrp service-family ipv4 4453 clients</pre>	Displays information about Cisco SAF Clients.
<p><b>Step 4</b> <code>show eigrp service-family {ipv4   ipv6} [vrf vrf-name] autonomous-system-number events [starting-event-number ending-event-number]</code></p> <p><b>Example:</b></p> <pre>Router# show eigrp service-family ipv4 4453 events</pre>	Displays information about Cisco SAF events.
<p><b>Step 5</b> <code>show eigrp service-family {ipv4   ipv6} [vrf vrf-name] autonomous-system-number interfaces [interface-type interface-number] [detail]</code></p> <p><b>Example:</b></p> <pre>Router# show eigrp service-family ipv4 4453 interfaces</pre>	Displays information about Cisco SAF interfaces.
<p><b>Step 6</b> <code>show eigrp service-family {ipv4   ipv6} [vrf vrf-name] autonomous-system-number subscriptions</code></p> <p><b>Example:</b></p> <pre>Router# show eigrp service-family ipv4 4453 subscriptions</pre>	Displays information about Cisco SAF subscriptions.
<p><b>Step 7</b> <code>show eigrp service-family {ipv4   ipv6} [vrf vrf-name] autonomous-system-number timers</code></p> <p><b>Example:</b></p> <pre>Router# show eigrp service-family ipv4 4453 timers</pre>	Displays information about Cisco SAF timers.

	Command or Action	Purpose
<b>Step 8</b>	<b>show eigrp service-family {ipv4   ipv6} [vrf vrf-name] autonomous-system-number summary</b>  <b>Example:</b> Router# show eigrp service-family ipv4 4453 summary	Displays summary information about Cisco SAF.
<b>Step 9</b>	<b>show eigrp service-family {ipv4   ipv6} [vrf vrf-name] autonomous-system-number zero successors</b>  <b>Example:</b> Router# show eigrp service-family ipv4 4453 zero successors	Displays information about Cisco SAF zero successors.
<b>Step 10</b>	<b>show eigrp service-family {ipv4   ipv6} [vrf vrf-name] autonomous-system-number topology</b>  <b>Example:</b> Router# show eigrp service-family ipv4 4453 topology	Displays information about the Cisco SAF topology table.
<b>Step 11</b>	<b>show eigrp service-family {ipv4   ipv6} [vrf vrf-name] autonomous-system-number topology active</b>  <b>Example:</b> Router# show eigrp service-family ipv4 4453 topology active	Displays only active entries for a Cisco SAF topology table.
<b>Step 12</b>	<b>show eigrp service-family {ipv4   ipv6} [vrf vrf-name] autonomous-system-number topology all-links</b>  <b>Example:</b> Router# show eigrp service-family ipv4 4453 topology all-links	Displays all active link entries for a Cisco SAF topology table.
<b>Step 13</b>	<b>show eigrp service-family {ipv4   ipv6} [vrf vrf-name] autonomous-system-number topology base service-instance-number   clients [detail]</b>  <b>Example:</b> Router# show eigrp service-family ipv4 4453 topology base clients	Displays all active link entries for a Cisco SAF topology base.

Command or Action	Purpose
<p><b>Step 14</b> <code>show eigrp service-family {ipv4   ipv6} [vrf vrf-name] autonomous-system-number topology [detail-links]</code></p> <p><b>Example:</b></p> <pre>Router# show eigrp service-family ipv4 4453 topology detail-links</pre>	Displays information about Cisco SAF.
<p><b>Step 15</b> <code>show eigrp service-family {ipv4   ipv6} [vrf vrf-name] autonomous-system-number topology events [starting-event-number ending-event-number]</code></p> <p><b>Example:</b></p> <pre>Router# show eigrp service-family ipv4 4453 topology</pre>	Displays information about Cisco SAF.
<p><b>Step 16</b> <code>show eigrp service-family {ipv4   ipv6} [vrf vrf-name] autonomous-system-number topology pending</code></p> <p><b>Example:</b></p> <pre>Router# show eigrp service-family ipv4 4453 topology pending</pre>	Displays information about Cisco SAF.
<p><b>Step 17</b> <code>show eigrp service-family {ipv4   ipv6} [vrf vrf-name] autonomous-system-number topology [service-type connected   external   internal   local   redistributed   summary]</code></p> <p><b>Example:</b></p> <pre>Router# show eigrp service-family ipv4 4453 topology service-type connected</pre>	Displays information about the specified service type for a Cisco SAF topology table.
<p><b>Step 18</b> <code>show eigrp service-family {ipv4   ipv6} [vrf vrf-name] autonomous-system-number topology sia-events starting-event-number ending-event-number</code></p> <p><b>Example:</b></p> <pre>Router# show eigrp service-family ipv4 4453 topology sia-events</pre>	Displays logged Stuck in Active (SIA) events in the Cisco SAF topology table.
<p><b>Step 19</b> <code>show eigrp service-family {ipv4   ipv6} [vrf vrf-name] autonomous-system-number topology sia-statistics [ip-address]</code></p> <p><b>Example:</b></p> <pre>Router# show eigrp service-family ipv4 4453 topology sia-statistics 10.10.10.1</pre>	Displays Stuck in Active (SIA) events for a Cisco SAF topology table.

	Command or Action	Purpose
<b>Step 20</b>	<b>show eigrp service-family {ipv4   ipv6} [vrf vrf-name] autonomous-system-number topology summary</b>  <b>Example:</b>  Router# show eigrp service-family ipv4 4453 topology summary	Displays a summary of a Cisco SAF topology table.
<b>Step 21</b>	<b>show eigrp service-family {ipv4   ipv6} [vrf vrf-name] autonomous-system-number topology zero-successors</b>  <b>Example:</b>  Router# show eigrp service-family ipv4 4453 topology zero-successors	Displays information about available services that have zero successors in a Cisco SAF topology table.

## Deleting Information from a Cisco SAF Configuration

To delete service-family information from a Cisco SAF configuration, use the following commands in EXEC mode.

### SUMMARY STEPS

1. **clear eigrp service-family external-client** external-client-name
2. **clear eigrp service-family {ipv4 | ipv6} [vrf vrf-name] autonomous-system-number**
3. **clear eigrp service-family neighbors** neighbor-address | interface-type interface-number

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>clear eigrp service-family external-client</b> external-client-name  <b>Example:</b>  Router> clear eigrp service-family external-client example	Deletes the specified client.
<b>Step 2</b>	<b>clear eigrp service-family {ipv4   ipv6} [vrf vrf-name] autonomous-system-number</b>  <b>Example:</b>  Router# clear eigrp service-family ipv4 4453	Deletes neighbors formed using the IPv4 or IPv6 protocol family for the specified autonomous system. Optionally, you can delete all virtual routing forwarding (VRF) instance tables or a specific VRF table for an IP address.  <b>Note</b> Using the <b>clear eigrp service-family ipv6</b> command requires an IPv6-enabled SAF client, which currently does not exist.

Command or Action	Purpose
<p><b>Step 3</b> <code>clear eigrp service-family neighbors</code> <i>neighbor-address   interface-type interface-number</i></p> <p><b>Example:</b></p> <pre>Router&gt; clear eigrp service-family neighbors Ethernet 0/0</pre>	<p>Deletes neighbors formed using the IPv4 protocol family from the neighbor table. Optionally, you can resynchronize with a peer without an adjacency reset (soft). Optionally, you can delete the interface type and number from the neighbor table that contains all entries learned through this interface.</p>

## Configuration Examples for Cisco SAF

- [Enabling Cisco SAF Example, page 50](#)
- [Configuring Cisco SAF Interfaces Examples, page 50](#)
- [Configuring Cisco SAF Topology Example, page 51](#)
- [Configuring Cisco SAF Stub Routing Example, page 51](#)
- [Configuring Cisco SAF with IP-RIP Example, page 51](#)
- [Configuring Cisco SAF with OSPF Example, page 52](#)
- [Configuring Cisco SAF with EIGRP Example, page 52](#)
- [Configuring Cisco SAF Forwarders Located on Separate LANs Example, page 52](#)
- [Configuring a Centralized Cisco SAF Forwarder Example, page 53](#)
- [Configuring a Cisco SAF Client Examples, page 53](#)
- [Configuring Logs for Neighbor Changes and Warnings Example, page 54](#)
- [Configuring Cisco Unified Communications Manager as a Cisco SAF Client Example, page 54](#)
- [Configuring Cisco SAF Dynamic Neighbors Examples, page 55](#)

## Enabling Cisco SAF Example

The following example enters router configuration mode, configures a Cisco SAF Forwarder, enables the service-family forwarder process, and configures an autonomous system named 4533.

```
Router(config)# router eigrp saf
Router(config-router)# service-family ipv4 autonomous-system 4533
```

## Configuring Cisco SAF Interfaces Examples

The following example places the router in service-family configuration mode and enables all interfaces.

```
Router(config)# router eigrp saf
Router(config-router)# service-family ipv4 autonomous-system 4533
Router(config-router-sf)# sf-interface default
Router(config-router-sf-interface)# no shutdown
```

The following example places the router in service-family configuration mode and enables Ethernet interface 0/0.

```
Router(config)# router eigrp saf
```



```
Router(config-router)# service-family ipv4 autonomous-system 4533
Router(config-router-sf)# sf-interface ethernet0/0
```

The following example places the router in service-family configuration mode and enables SAF on all interfaces, except the Ethernet0/0 interface.

```
Router(config)# router eigrp saf
Router(config-router)# service-family ipv4 autonomous-system 3
Router(config-router-sf)# interface default
Router(config-router-sf)# sf-interface ethernet0/0
Router(config-router-sf-interface)# shutdown
Router(config-router-sf-interface)# end
```

The following example places the router in service-family configuration mode and enables SAF on the Ethernet2/0 and Ethernet2/1 interfaces and disables all other interfaces.

```
Router(config)# router eigrp saf
Router(config-router)# service-family ipv4 autonomous-system 2
Router(config-router-sf)# sf-interface default
Router(config-router-sf-interface)# shutdown
Router(config-router-sf-interface)# sf-interface ethernet2/0
Router(config-router-sf-interface)# no
shutdown
Router(config-router-sf-interface)# sf-interface ethernet2/1
Router(config-router-sf-interface)# no
shutdown
Router(config-router-sf-interface)# end
```

## Configuring Cisco SAF Topology Example

The following examples configures a Cisco SAF topology base.

```
Router(config)# router eigrp saf
Router(config-router)# service-family ipv4 autonomous-system 4533
Router(config-router-sf)# sf-interface default
Router(config-router-sf-interface)# no shutdown
Router(config-router-sf-interface)# topology
base
```

## Configuring Cisco SAF Stub Routing Example

The following examples configures a Cisco SAF Forwarder as a stub router.

```
Router(config)# router eigrp saf
Router(config-router)# service-family ipv4 autonomous-system 4533
Router(config-router-sf)# eigrp stub connected
```

## Configuring Cisco SAF with IP-RIP Example

The following configuration example enables Cisco SAF with IP-RIP routing on network 10.0.0.0.

```
Router(config)# router eigrp saf
Router(config-router)# service-family ipv4 autonomous-system 4533
Router(config-router-sf)# topology base
Router(config-router-sf-topology)# exit-sf-topology
Router(config-router-sf)# exit service-family
Router(config-router)# router rip
Router(config-router)# network 10.0.0.0
```

## Configuring Cisco SAF with OSPF Example

The following configuration example enables Cisco SAF with OSPF routing on network 10.0.0.0, area 0.

```
Router(config)# router eigrp saf
Router(config-router)# service-family ipv4 autonomous-system 4533
Router(config-router-sf)# topology base
Router(config-router-sf-topology)# exit-sf-topology
Router(config-router-sf)# exit service-family
Router(config-router)# router ospf 787
Router(config-router)# network 10.0.0.0 0.0.0.255 area 0
```

## Configuring Cisco SAF with EIGRP Example

The following configuration example enables Cisco SAF with EIGRP routing on network 10.0.0.0.

```
Router(config)# router eigrp saf
Router(config-router)# service-family ipv4 autonomous-system 6476
Router(config-router-sf)# network 10.0.0.0 0.0.0.255
Router(config-router-sf)# topology base
Router(config-router-sf-topology)# exit-af-topology
Router(config-router-sf)# exit-service-family
Router(config-router)# service-family ipv4 autonomous-system 4533
Router(config-router-sf)# topology base
```



### Note

There is no requirement to run routing over the same interfaces or networks in which services are distributed, however this could lead to services being distributed to areas where reachability is not guaranteed.

## Configuring Cisco SAF Forwarders Located on Separate LANs Example

The following examples configures two Cisco SAF Forwarders located on separate LANs.



### Note

Use loopback mode to configure remote neighbors.

### Cisco SAF Forwarder 1:

```
Router(config)# interface loopback1
Router(config-if)# ip address 10.1.1.1 255.255.255.255
Router(config-if)# exit
Router(config)# router eigrp saf
Router(config-router)# service-family ipv4 autonomous-system 1
Router(config-router-sf)# neighbor 10.2.2.2 loopback1 remote 10
```

### Cisco SAF Forwarder 2:

```
Router(config)# interface loopback1
Router(config-if)# ip address 10.2.2.2 255.255.255.255
Router(config-if)# exit
Router(config)# router eigrp saf
Router(config-router)# service-family ipv4 autonomous-system 1
Router(config-router-sf)# neighbor 10.1.1.1 loopback1 remote 10
```

**Note**

This example assumes IP routing is configured between the two routers and the routers can ping both loopbacks.

## Configuring a Centralized Cisco SAF Forwarder Example

The following example configures a centralized Cisco SAF Forwarder from which all service advertisements will send to neighbors on IP addresses 10.4.15.5 and 10.4.15.1.

```
Router(config)# router eigrp saf
Router(config-router)# service-family ipv4 autonomous-system 4533
Router(config-router-sf)# sf-interface loopback0
Router(config-router-sf-interface)# no split-horizon
Router(config-router-sf-interface)# exit-sf-interface
Router(config-router-sf)# topology base
Router(config-router-sf-topology)# exit-sf-topology
Router(config-router-sf)# neighbor 10.4.15.5 Loopback0 remote 20
Router(config-router-sf)# neighbor 10.4.15.1 Loopback0 remote 20
Router(config-router-sf)# exit-service-family
```

## Configuring a Cisco SAF Client Examples

The following example configures a Cisco SAF External Client named *example*, with a username of *username\_example*, a password of *password\_example*, and a keepalive setting of 360000 seconds.

```
Router(config)# router eigrp saf
Router(config-router)# service-family ipv4 autonomous-system 4533
Router(config-router-sf)# topology base
Router(config-router-sf-topology)# external-client example
Router(config-router-sf-topology)# exit-sf-topology
Router(config-router-sf)# exit-service-family
Router(config-router)# exit
Router(config)# service-family external-client listen ipv4 3444
Router(config-external-client)# external-client example
Router(config-external-client-mode)# username
  username_example
Router(config-external-client-mode)# password
  password_example
Router(config-external-client-mode)# keepalive
  360000
```

The following example configures eight Cisco SAF External Clients named *example1* through *example5*, with usernames of *username\_example1* through *username\_example5*, passwords of *password\_example1* through *password\_example5*, and keepalive settings of 360000 seconds.

```
Router(config)# router eigrp saf
Router(config-router)# service-family ipv4 autonomous-system 4533
Router(config-router-sf)# topology base
Router(config-router-sf-topology)# external-client example1
Router(config-router-sf-topology)# external-client example2
Router(config-router-sf-topology)# external-client example3
Router(config-router-sf-topology)# external-client example4
Router(config-router-sf-topology)# external-client example5
Router(config-router-sf-topology)# exit-sf-topology
Router(config-router-sf)# exit-service-family
Router(config-router)# exit
Router(config)# service-family external-client listen ipv4 3444
Router(config-external-client)# external-client example1
Router(config-external-client-mode)# username
  username_example1
Router(config-external-client-mode)# password
  password_example1
```

```

Router(config-external-client-mode)# keepalive
360000
Router(config-external-client-mode)# external-client example2
Router(config-external-client-mode)# username
username_example2
Router(config-external-client-mode)# password
password_example2
Router(config-external-client-mode)# keepalive
360000
Router(config-external-client-mode)# external-client example3
Router(config-external-client-mode)# username
username_example3
Router(config-external-client-mode)# password
password_example3
Router(config-external-client-mode)# keepalive
360000
Router(config-external-client-mode)# external-client example4
Router(config-external-client-mode)# username
username_example4
Router(config-external-client-mode)# password
password_example4
Router(config-external-client-mode)# keepalive
360000
Router(config-external-client-mode)# external-client example5
Router(config-external-client-mode)# username
username_example5
Router(config-external-client-mode)# password
password_example5
Router(config-external-client-mode)# keepalive
360000

```

## Configuring Logs for Neighbor Changes and Warnings Example

By default, the system logs neighbor adjacency changes to help you monitor the stability of the routing system and detect problems. If you disabled logging of such changes and want to reenble the logging, use the commands as shown in the following example:

```

Router(config)# router eigrp saf
Router(config-router)# service-family ipv4 autonomous-system 4453
Router(config-router-sf)# eigrp log-neighbor-changes
Router(config-router-sf)# eigrp log-neighbor-warnings 60
Router(config-router-sf)# exit-service-family

```

## Configuring Cisco Unified Communications Manager as a Cisco SAF Client Example

The following example configures a Cisco Unified Communications Manager as a Cisco SAF Client.

```

Router(config)# router eigrp virtual-router
Router(config-router)# service-family ipv4 autonomous-system 4533
Router(config-router-sf)# topology
base
Router(config-router-sf-topology)# external-client cucm
Router(config-router-sf-topology)# exit-sf-topology
Router(config-router-sf)# exit service-family
Router(config-router)# exit
Router(config)# service-family external-client listen ipv4 3444
Router(config-router-sf)# topology base
Router(config-router-sf-topology)# external-client cucm basename
Router(config-external-client)# username cucm
Router(config-external-client)# password example
Router(config-external-client)# keepalive 360000

```

## Configuring Cisco SAF Dynamic Neighbors Examples

The following examples show how to configure both routers involved in the neighbor relationship.

This example uses the **unicast-listen** keyword to configure remote neighbors to accept inbound connections from IP addresses that match the access list myNeighborList.

```
Router1(config)# interface Loopback1
Router1(config-if)# ip address 10.1.1.1 255.255.255.255
Router1(config-if)# exit
Router1(config)# ip access-list standard myNeighborList
Router1(config-std-nacl)# permit 10.0.0.0 0.255.255.255
Router1(config-std-nacl)# exit
Router1(config)# router eigrp virtual-name
Router1(config-router)# service-family ipv4 autonomous-system 4453
Router1(config-router-sf)# remote-neighbors source Loopback1 unicast-listen allow-list
myNeighborList
Router2(config)# interface Loopback2
Router2(config-if)# ip address 10.2.2.2 255.255.255.255
Router2(config-if)# exit
Router2(config)# router eigrp virtual-name
Router2(config-router)# service-family ipv4 autonomous-system 4453
Router2(config-router-sf)# neighbor 10.1.1.1 Loopback2 remote 20
```

This example uses the **multicast-group** keyword to use IP multicast to discover remote neighbors and form remote neighbor relationships. It also specifies 30 as the maximum number of inbound connections from remote neighbors that a member of the multicast group may accept.

```
Router1(config)# interface Loopback1
Router1(config-if)# ip address 10.1.1.1 255.255.255.255
Router1(config-if)# ip pim sparse-mode
Router1(config-if)# exit
Router1(config)# router eigrp virtual-name
Router1(config-router)# service-family ipv4 autonomous-system 4453
Router1(config-router-sf)# remote-neighbors source Loopback1 multicast-group 224.44.56.1
max-neighbors 30
Router2(config)# interface Loopback2
Router2(config-if)# ip address 10.2.2.2 255.255.255.255
Router2(config-if)# ip pim sparse-mode
Router2(config-if)# exit
Router2(config)# router eigrp virtual-name
Router2(config-router)# service-family ipv4 autonomous-system 4453
Router2(config-router-sf)# remote-neighbors source Loopback2 multicast-group 224.44.56.1
max-neighbors 30
```

## Additional References

The following sections provide references related to the Service Advertisement Framework technology.

### Related Documents

Related Topic	Document Title
Cisco EIGRP technology implementation	<i>The Cisco EIGRP Implementation</i>
Cisco SAF commands: complete command syntax, command mode, defaults, usage guidelines, and examples	<i>Cisco IOS Service Advertisement Framework Command Reference</i>

**Standards**

Standard	Title
Cisco EIGRP	--

**MIBs**

MIB	MIBs Link
No new or modified MIBs are supported by this feature, and support for existing standards has not been modified by this feature.	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL: <a href="http://www.cisco.com/go/mibs">http://www.cisco.com/go/mibs</a>

**RFCs**

RFC	Title
None	--

**Technical Assistance**

Description	Link
The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.	<a href="http://www.cisco.com/cisco/web/support/index.html">http://www.cisco.com/cisco/web/support/index.html</a>

## Feature Information for Cisco Service Advertisement Framework

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to [www.cisco.com/go/cfn](http://www.cisco.com/go/cfn). An account on Cisco.com is not required.

**Table 1** Feature Information for Cisco Service Advertisement Framework

Feature Name	Software Releases	Feature Configuration Information
Cisco Service Advertisement Framework	Cisco IOS XE Release 2.5, Cisco IOS XE Release 3S, Cisco IOS XE Release 3.4S	<p>This feature allows applications to discover the existence, location, and configuration of networked resources within networks, and provides a timely and reliable awareness of the services within networks, as applications advertise and discover services on networks.</p> <p>In Cisco IOS XE Release 2.5, this feature was introduced on the Cisco ASR 1000 Series Aggregation Services Routers.</p> <p>The following commands were introduced in this feature:</p> <ul style="list-style-type: none"> <li>• <b>authentication (service-family)</b></li> <li>• <b>bandwidth-percent</b></li> <li>• <b>clear eigrp service-family</b></li> <li>• <b>dampening-change</b></li> <li>• <b>dampening-interval</b></li> <li>• <b>default external-client</b></li> <li>• <b>default (SAF)</b></li> <li>• <b>debug eigrp service-family</b></li> <li>• <b>default-metric (EIGRP)</b></li> <li>• <b>eigrp stub (service-family)</b></li> <li>• <b>exit-service-family</b></li> <li>• <b>exit-sf-interface</b></li> <li>• <b>exit-sf-topology</b></li> <li>• <b>external-client</b></li> <li>• <b>keepalive (SAF)</b></li> <li>• <b>maximum-service (EIGRP)</b></li> <li>• <b>neighbors (service-family)</b></li> <li>• <b>password (SAF)</b></li> <li>• <b>service-family</b></li> <li>• <b>service-family external-client listen</b></li> <li>• <b>sf-interface</b></li> <li>• <b>show eigrp service-family</b></li> <li>• <b>show eigrp service-family ipv4 topology</b></li> <li>• <b>show eigrp service-family ipv6 topology</b></li> </ul>

Feature Name	Software Releases	Feature Configuration Information
Cisco Service Advertisement Framework	Cisco IOS XE Release 2.5, Cisco IOS XE Release 3S, Cisco IOS XE Release 3.3S	<ul style="list-style-type: none"> <li>• <b>show eigrp tech-support</b></li> <li>• <b>shutdown</b></li> <li>• <b>topology</b></li> <li>• <b>username (SAF)</b></li> </ul> <p>The following commands were modified in this feature:</p> <ul style="list-style-type: none"> <li>• <b>accept-lifetime</b></li> <li>• <b>eigrp log-neighbor-changes</b></li> <li>• <b>eigrp-log-neighbor-warnings</b></li> <li>• <b>eigrp router-id</b></li> <li>• <b>hello-interval</b></li> <li>• <b>hold-time</b></li> <li>• <b>key</b></li> <li>• <b>key chain</b></li> <li>• <b>key-string (authentication)</b></li> <li>• <b>metric weights (EIGRP)</b></li> <li>• <b>next-hop-self</b></li> <li>• <b>send-lifetime</b></li> <li>• <b>split-horizon</b></li> <li>• <b>timers</b></li> </ul> <p>In Release 3.3S, support was added for the Dynamic Neighbor feature. The following commands were introduced or modified: <b>authentication mode, remote-neighbors source, show eigrp service-family external-client.</b></p>

Cisco and the Cisco Logo are trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at [www.cisco.com/go/trademarks](http://www.cisco.com/go/trademarks). Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1005R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.