

Configuring Multihop VPDN

Last Updated: July 22, 2011

Multihop virtual private dialup networking (VPDN) is a specialized VPDN configuration that allows packets to pass through multiple tunnels. Ordinarily, packets are not allowed to pass through more than one tunnel. In a multihop deployment, the VPDN tunnel is terminated after each hop and a new tunnel is initiated to the next hop destination.

Multihop VPDN deployments can also be used to configure a device as a tunnel switch. A tunnel switch acts as both a network access server (NAS) and a tunnel server, able to receive packets from an incoming VPDN tunnel and send them out over an outgoing VPDN tunnel. Tunnel switch configurations can be used between Internet service providers (ISPs) to provide wholesale VPDN services.

- Finding Feature Information, page 1
- Prerequisites for Multihop VPDN, page 2
- Restrictions for Multihop VPDN, page 2
- Information About Multihop VPDN, page 2
- How to Configure Multihop VPDN, page 3
- Configuration Examples for Multihop VPDN, page 8
- Where to Go Next, page 10
- Additional References, page 10
- Feature Information for Multihop VPDN, page 11

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the Feature Information Table at the end of this document.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Prerequisites for Multihop VPDN

Before you configure multihop VPDN, a VPDN deployment must be configured. For more information about VPDN deployments that are compatible with multihop VPDN scenarios, see the Configuring a Multihop Tunnel Switch, page 3.

Restrictions for Multihop VPDN

Only the Layer 2 Tunneling Protocol (L2TP) is supported on the Cisco ASR 1000 Series Aggregation Services Routers.

Information About Multihop VPDN

• Tunnel Switching Using Multihop VPDN, page 2


Tunnel Switching Using Multihop VPDN

Multihop VPDN can be used to configure a device as a tunnel switch. A tunnel switch acts as both a NAS and a tunnel server, receiving packets from an incoming VPDN tunnel and sending them out over an outgoing VPDN tunnel. Tunnel switch configurations can be used between ISPs to provide wholesale VPDN services. A VPDN tunnel switch on the Cisco ASR 1000 Series Aggregation Services Routers can forward L2TP sessions. L2F or Point-to-Point Tunneling Protocol (PPTP) are not supported.

In an L2TP tunnel switching deployment, the tunnel endpoints are considered the originating NAS and the terminating tunnel server. The tunnel switch is not considered a tunnel endpoint.

The figure below shows a network scenario using a basic L2TP tunnel switching deployment.

Figure 1

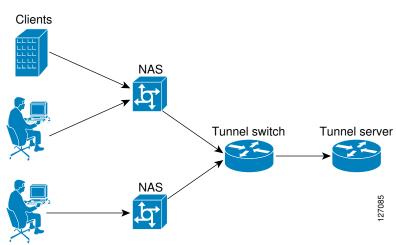

The tunnel switch can be configured to terminate incoming VPDN tunnels from multiple devices, and to initiate outgoing VPDN tunnels to one or more tunnel servers.

The Subscriber Service Switch (SSS) framework is supported for VPDN tunnel switching. SSS supports additional Layer 2 protocols, including PPP over Ethernet (PPPoE) and generic routing encapsulation

(GRE). Configuring SSS for VPDN tunnel switching is optional. SSS profiles increase the scalability of tunnel switching configurations, particularly in multiprotocol environments.

How to Configure Multihop VPDN

• Configuring a Multihop Tunnel Switch, page 3

Configuring a Multihop Tunnel Switch

Multihop VPDN can be used to configure a device as a tunnel switch. A tunnel switch acts as both a NAS and a tunnel server, and must be configured with both a NAS VPDN group and a tunnel server VPDN group.

Tunnel switching using the SSS infrastructure is supported. SSS allows L2TP, L2F, PPTP, PPPoE, PPPoA, GRE, and general packet radio service (GPRS) sessions to be switched over virtual links using a tunnel switch. SSS configurations are not required for tunnel switching data over L2TP, L2F, or PPTP tunnels, but SSS increases the scalability of tunnel switching deployments.



On the Cisco ASR 1000 Series Aggregation Services Router, a multihop VPDN tunnel switch can be configured to forward L2TP tunnels only.

Perform these tasks to configure a device as a multihop VPDN tunnel switch:

- Prerequisites for Configuring a Multihop Tunnel Switch, page 3
- Enabling Multihop VPDN on the Tunnel Switch, page 3
- Configuring the Multihop Tunnel Switch to Terminate Incoming VPDN Tunnels, page 4
- Configuring the Multihop Tunnel Switch to Initiate Outgoing VPDN Tunnels, page 6

Prerequisites for Configuring a Multihop Tunnel Switch

- The tunnel endpoints must be configured for VPDN tunneling as described in the Configuring NAS-Initiated Dial-In VPDN Tunneling module.
- If you want to perform VPDN tunnel authorization searches based on the multihop hostname, you
 must configure the search to use the multihop hostname as described in the Configuring AAA for
 VPDNs module.

Enabling Multihop VPDN on the Tunnel Switch

In tunnel switching deployments, packets must traverse multiple tunnels. Multihop VPDN must be enabled on the tunnel switch for the deployment to function.

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- 3. vpdn multihop

DETAILED STEPS

Command or Action		Purpose	
Step 1	enable	Enables privileged EXEC mode.	
		Enter your password if prompted.	
	Example:		
	Router> enable		
Step 2	configure terminal	Enters global configuration mode.	
	Example:		
	Router# configure terminal		
Step 3	vpdn multihop	Enables VPDN multihop.	
	Example:		
	Router(config)# vpdn multihop		

• What to Do Next, page 4

What to Do Next

You must perform the task in the Configuring the Multihop Tunnel Switch to Terminate Incoming VPDN Tunnels, page 4.

Configuring the Multihop Tunnel Switch to Terminate Incoming VPDN Tunnels

A tunnel switch must be configured as a tunnel server, allowing it to terminate incoming VPDN tunnels. You can configure a tunnel switch to terminate tunnels from multiple devices.

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- 3. vpdn-group name
- 4. description string
- 5. accept-dialin
- 6. protocol l2tp
- 7. virtual-template number
- 8. exit
- 9. terminate-from hostname host-name

DETAILED STEPS

	Command or Action	Purpose	
Step 1	enable	Enables privileged EXEC mode.	
		Enter your password if prompted.	
	Example:		
	Router> enable		
Step 2	configure terminal	Enters global configuration mode.	
	Example:		
	Router# configure terminal		
Step 3	vpdn-group name	Creates a VPDN group and to enters VPDN group configuration mode.	
	Example:		
	Router(config)# vpdn-group 1		
Step 4	description string	(Optional) Adds a description to a VPDN group.	
	Example:		
	Router(config-vpdn)# description myvpdngroup		
Step 5	accept-dialin	Configures a tunnel switch to accept requests from a NAS to establish a tunnel, creates an accept-dialin VPDN subgroup, and enters VPDN accept dial-in subgroup configuration mode.	
	Example:	emers VI Div accept that in subgroup configuration mode.	
	Router(config-vpdn)# accept-dialin		
Step 6	protocol 12tp	Specifies the Layer 2 Tunneling Protocol that the VPDN group will use.	
	Example:		
	Router(config-vpdn-acc-in)# protocol 12tp		
Step 7	virtual-template number	(Optional) Specifies which virtual template will be used to clone virtual access interfaces.	
	Example:	This step is not required if the virtual access interface is not going to be cloned when a user connects.	
	Router(config-vpdn-acc-in)# virtual-template	to be croned when a user connects.	
	1		

	Command or Action	Purpose
Step 8	exit	Exits to VPDN group configuration mode.
	Example:	
	Router(config-vpdn-acc-in)# exit	
Step 9	terminate-from hostname host-name	Specifies the hostname of the remote NAS that will be required when accepting a VPDN tunnel.
	Example:	
	Router(config-vpdn)# terminate-from hostname NAS12	

• What to Do Next, page 6

What to Do Next

You must perform the task in the Configuring the Multihop Tunnel Switch to Initiate Outgoing VPDN Tunnels section.

Configuring the Multihop Tunnel Switch to Initiate Outgoing VPDN Tunnels

A tunnel switch must be configured as a NAS, allowing it to initiate outgoing VPDN tunnels. You can configure a tunnel switch to initiate tunnels to multiple devices.

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- 3. vpdn-group name
- 4. description string
- 5. request-dialin
- 6. protocol l2tp
- **7.** Do one of the following:
 - domain domain-name
 - **dnis** { dnis-number | dnis-group-name }
 - multihop-hostname ingress-tunnel-name
- 8. exit
- **9.** initiate-to ip ip-address [limit limit-number] [priority priority-number]

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Router# configure terminal	
Step 3	vpdn-group name	Creates a VPDN group and enters VPDN group configuration mode.
	Example:	
	Router(config)# vpdn-group 1	
Step 4	description string	(Optional) Adds a description to a VPDN group.
	Example:	
	Router(config-vpdn)# description myvpdngroup	
Step 5	request-dialin	Configures a tunnel switch to request the establishment of a tunnel to a
		tunnel server, creates a request-dialin VPDN subgroup, and enters VPDN request dial-in subgroup configuration mode.
	Example:	
	Router(config-vpdn)# request-dialin	
Step 6	protocol 12tp	Specifies the Layer 2 Tunneling Protocol that the VPDN group will use.
	Example:	
	Router(config-vpdn-req-in)# protocol 12tp	

	Command or Action	Purpose	
Step 7	Do one of the following:	Requests that PPP calls from a specific domain name be tunneled.	
	 domain domain-name dnis {dnis-number dnis-group-name} multihop-hostname ingress-tunnel-name 	or Requests that PPP calls from a specific DNIS number or DNIS group be tunneled. or	
	<pre>Example: Router(config-vpdn-req-in)# domain</pre>	Enables the tunnel switch to initiate a tunnel based on the NAS host name or the ingress tunnel ID.	
	company.com	Note If you use the multihop-hostname command to configure your tunnel switch, you must configure vpdn search-order command with the multihop-hostname keyword. For more information on	
	Example: Router(config-vpdn-req-in)# dnis 5687	configuring the VPDN tunnel authorization search order, see the Configuring AAA for VPDNs module.	
	Example:		
	Router(config-vpdn-req-in)# multihop-hostname nas1		
Step 8	exit	Exits to VPDN group configuration mode.	
	<pre>Example: Router(config-vpdn-req-in)# exit</pre>		
Step 9	<pre>initiate-to ip ip-address [limit limit-number] [priority priority-number] Example:</pre>	 Specifies an IP address that will be used for Layer 2 tunneling. limitMaximum number of connections that can be made to this IP address. priorityPriority for this IP address. 	
	Router(config-vpdn)# initiate-to ip 10.1.1.1 limit 12	 Note The priority keyword is typically not configured on a tunnel switch. Information used for load balancing and failover is configured on a remote authentication, authorization, and accounting (AAA) server instead. For more information about configuring load balancing and failover priorities using a remote AAA server, see the Configuring AAA for VPDNs module. • Multiple tunnel servers can be configured on the tunnel switch by configuring multiple initiate-to commands. 	

Configuration Examples for Multihop VPDN

• Example Configuring Multihop VPDN Tunnel Switching, page 9

Example Configuring Multihop VPDN Tunnel Switching

The following example configures a NAS, tunnel switch, and tunnel server to establish a multihop VPDN tunnel using L2TP:

NAS Configuration

```
! Configure the NAS to initiate VPDN dial-in sessions to the tunnel switch vpdn-group 1 request-dialin protocol 12tp domain cisco.com ! initiate-to ip 172.22.66.25 local name ISP-NAS
```

Tunnel Switch Configuration

```
!Enable VPDN
vpdn enable
!Enable multihop
vpdn multihop
! Configure the tunnel switch to use the multihop hostname in the authentication search.
vpdn search-order multihop-hostname domain dnis
! Configure the tunnel switch to accept dial-in sessions from the NAS
vpdn-group tunnelin
 accept-dialin
  protocol 12tp
  virtual-template 1
 terminate-from hostname ISP-NAS
 local name ISP-Sw
! Configure the tunnel switch to initiate VPDN dial-in sessions to the tunnel server
vpdn-group tunnelout
 request-dialin
  protocol 12tp
  multihop-hostname ISP-NAS
 initiate-to ip 10.2.2.2
 local name ISP-Sw
```

Tunnel Server Configuration

```
! Configure the tunnel server to accept dial-in sessions from the NAS vpdn-group 1 accept-dialin protocol 12tp virtual-template 1 ! terminate-from hostname ISP-Sw local name ENT-TS
```

Where to Go Next

You can perform any of the relevant optional tasks in the Configuring Additional VPDN Features and in the VPDN Tunnel Management modules.

Additional References

Related Documents

Related Topic	Document Title
Cisco IOS commands	Cisco IOS Master Commands List, All Releases
VPDN commands	Cisco IOS VPDN Command Reference
VPDN technology overview	VPDN Technology Overview
Broadband access aggregation and DSL commands	Cisco IOS Broadband Access Aggregation and DSL Command Reference

Standards

Standard	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	

MIBs

MIB	MIBs Link
No new or modified MIBs are supported by this feature, and support for existing MIBs has not been modified by this feature.	To locate and download MIBs for selected platforms, Cisco software releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

RFCs

RFC	Title
RFC 2661	Layer Two Tunneling Protocol (L2TP)

Technical Assistance

Description	Link
The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.	http://www.cisco.com/cisco/web/support/index.html

Feature Information for Multihop VPDN

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Table 1 Feature Information for Multihop VPDN

Feature Name	Software Releases	Feature Configuration Information
Multihop VPDN	Cisco IOS XE Release 2.2	This feature was introduced on Cisco ASR 1000 Series Routers.
		Multihop VPDN is a specialized VPDN configuration that allows packets to pass through multiple tunnels. Ordinarily, packets are not allowed to pass through more than one tunnel. In a multihop deployment, the VPDN tunnel is terminated after each hop and a new tunnel is initiated to the next hop destination.
		No commands were introduced or modified by this feature.

Feature Name	Software Releases	Feature Configuration Information
Subscriber Service Switch	Cisco IOS XE Release 2.2.1	This feature provides flexibility on where and how many subscribers are connected to available services and how those services are defined. The primary focus of SSS is to direct PPP from one point to another using a Layer 2 subscriber policy. The policy will manage tunneling of PPP in a policy-based bridging fashion.
		The following VPDN commands were introduced or modified by this feature:
		multihop-hostname and vpdn search-order.

Cisco and the Cisco Logo are trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at www.cisco.com/go/trademarks. Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1005R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.