



# NSF/SSO - MPLS LDP and LDP Graceful Restart

---

**First Published: August 16, 2004**

**Last Updated: August 21, 2007**

Cisco Nonstop Forwarding with Stateful Switchover provides continuous packet forwarding, even during a network processor hardware or software failure. In a redundant system, the secondary processor recovers control plane service during a critical failure in the primary processor. SSO synchronizes the network state information between the primary and the secondary processor.

Multiprotocol Label Switching (MPLS) Label Distribution Protocol (LDP) uses SSO, NSF, and graceful restart to allow a Route Processor to recover from disruption in control plane service (specifically, the LDP component) without losing its MPLS forwarding state. LDP NSF works with LDP sessions between directly connected peers and with peers that are not directly connected (targeted sessions).



**Note**

---

In this document, the NSF/SSO - MPLS LDP and LDP Graceful Restart feature is called LDP NSF for brevity.

---

## Finding Feature Information in This Module

Your Cisco IOS software release may not support all of the features documented in this module. To reach links to specific feature documentation in this module and to see a list of the releases in which each feature is supported, use the “[Feature Information for NSF/SSO - MPLS LDP and LDP Graceful Restart](#)” section on [page 15](#).

## Finding Support Information for Platforms and Cisco IOS and Catalyst OS Software Images

Use Cisco Feature Navigator to find information about platform support and Cisco IOS and Catalyst OS software image support. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>. An account on Cisco.com is not required.



---

**Americas Headquarters:**  
**Cisco Systems, Inc., 170 West Tasman Drive, San Jose, CA 95134-1706 USA**

© 2007 Cisco Systems, Inc. All rights reserved.

# Contents

- [Prerequisites for NSF/SSO - MPLS LDP and LDP Graceful Restart, page 2](#)
- [Restrictions for NSF/SSO - MPLS LDP and LDP Graceful Restart, page 2](#)
- [Information About NSF/SSO - MPLS LDP and LDP Graceful Restart, page 2](#)
- [How to Configure and Use NSF/SSO - MPLS LDP and LDP Graceful Restart, page 5](#)
- [Configuration Examples for LDP NSF, page 8](#)
- [Additional References, page 14](#)
- [Command Reference, page 15](#)
- [Feature Information for NSF/SSO - MPLS LDP and LDP Graceful Restart, page 15](#)

## Prerequisites for NSF/SSO - MPLS LDP and LDP Graceful Restart

For information about supported hardware, see the release notes for your platform.

MPLS high availability (HA) requires that neighbor networking devices be NSF-aware.

To perform LDP NSF, Route Processors must be configured for SSO. See the *Stateful Switchover* feature module for more information:

You must enable nonstop forwarding on the routing protocols running between the provider (P) routers, provider edge (PE) routers, and customer edge (CE) routers. The routing protocols are:

- Border Gateway Protocol (BGP)
- Open Shortest Path First (OSPF)
- Intermediate System-to-Intermediate System (IS-IS)

See the *Cisco Nonstop Forwarding* feature module for more information.

## Restrictions for NSF/SSO - MPLS LDP and LDP Graceful Restart

LDP NSF has the following restrictions:

- Tag Distribution Protocol (TDP) sessions are not supported. Only LDP sessions are supported.
- LDP NSF cannot be configured on label-controlled ATM (LC-ATM) interfaces.

## Information About NSF/SSO - MPLS LDP and LDP Graceful Restart

To configure LDP NSF, you need to understand the following concepts:

- [How NSF/SSO - MPLS LDP and LDP Graceful Restart Works, page 3](#)
- [How a Route Processor Advertises That It Supports NSF/SSO - MPLS LDP and LDP Graceful Restart, page 4](#)
- [Checkpointing, page 5](#)

## How NSF/SSO - MPLS LDP and LDP Graceful Restart Works

LDP NSF allows a Route Processor to recover from disruption in service without losing its MPLS forwarding state. LDP NSF works under the following circumstances:

- **LDP restart**—An LDP Restart occurs after an SSO event interrupts LDP communication with all LDP neighbors. If the Route Processors are configured with LDP NSF, the backup Route Processor retains the MPLS forwarding state and reestablishes communication with the LDP neighbors. Then the Route Processor ensures that the MPLS forwarding state is recovered.
- **LDP session reset**—An LDP session reset occurs after an individual LDP session has been interrupted, but the interruption is not due to an SSO event. The LDP session might have been interrupted due to a TCP or UDP communication problem. If the Route Processor is configured with MPLS LDP NSF support and graceful restart, the Route Processor associates a new session with the previously interrupted session. The LDP bindings and MPLS forwarding states are recovered when the new session is established.

If an SSO event occurs on an LSR, that LSR performs an LDP restart. The adjacent LSRs perform an LDP session reset.


See the following section for more information about LDP restart and reset.

### What Happens During an LDP Restart and an LDP Session Reset

In the topology shown in [Figure 1](#), the following elements have been configured:

- LDP sessions are established between Router 1 and Router 2, as well as between Router 2 and Router 3.
- A label switched path (LSP) has been established between Router 1 and Router 3.
- The routers have been configured with LDP NSF.

**Figure 1** Example of a Network Using LDP Graceful Restart

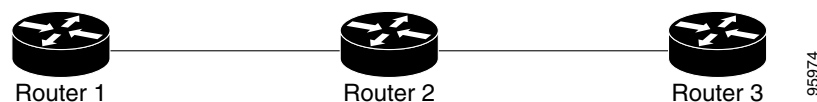

The following process shows how LDP recovers when one of the routers fails:

1. When a Route Processor fails on Router 2, communications between the routers is interrupted.
2. Router 1 and Router 3 mark all the label bindings from Router 2 as stale, but they continue to use the bindings for MPLS forwarding.
3. Router 1 and Router 3 attempt to reestablish an LDP session with Router 2.
4. Router 2 restarts and marks all of its forwarding entries as stale. If you issue a **show mpls ldp graceful-restart** command, the command output includes the following line:  

```
LDP is restarting gracefully.
```
5. Router 1 and Router 3 reestablish LDP sessions with Router 2, but they keep their stale label bindings. If you issue a **show mpls ldp neighbor** command with the **graceful-restart** keyword, the command output displays the recovering LDP sessions.

6. All three routers readvertise their label binding information. If a label has been relearned after the session has been established, the stale flags are removed. The **show mpls forwarding-table** command displays the information in the MPLS forwarding table, including the local label, outgoing label or VC, prefix, label-switched bytes, outgoing interface, and next hop.

You can set various timers to limit how long the routers wait for an LDP session to be reestablished before restarting the router. See the following commands for more information:

- **mpls ldp graceful-restart timers forwarding-holding**
- **mpls ldp graceful-restart timers max-recovery**
- **mpls ldp graceful-restart timers neighbor-liveness**

## How a Route Processor Advertises That It Supports NSF/SSO - MPLS LDP and LDP Graceful Restart

A Route Processor that is configured to perform LDP NSF includes the Fault Tolerant (FT) Type Length Value (TLV) in the LDP initialization message. The Route Processor sends the LDP initialization message to a neighbor to establish an LDP session.

The FT session TLV includes the following information:

- The Learn from Network (L) flag is set to 1, which indicates that the Route Processor is configured to perform LDP Graceful Restart.
- The Reconnect Timeout field shows the time (in milliseconds) that the neighbor should wait for a reconnection if the LDP session is lost. This field is set to 120 seconds and cannot be configured.
- The Recovery Time field shows the time (in milliseconds) that the neighbor should retain the MPLS forwarding state during a recovery. If a neighbor did not preserve the MPLS forwarding state before the restart of the control plane, the neighbor sets the recovery time to 0.

## What Happens if a Route Processor Does Not Have LDP Graceful Restart

If a Route Processor is not configured for MPLS LDP Graceful Restart and it attempts to establish an LDP session with a Route Processor that is configured with LDP Graceful Restart, the following events occur:

1. The Route Processor that is configured with MPLS LDP Graceful Restart sends an initialization message that includes the FT session TLV value to the Route Processor that is not configured with MPLS LDP Graceful Restart.
2. The Route Processor that is not configured for MPLS LDP Graceful Restart receives the LDP initialization message and discards the FT session TLV.
3. The two Route Processors create a normal LDP session but do not have the ability to perform MPLS LDP Graceful Restart.

You must enable all Route Processors with MPLS LDP Graceful Restart for an LDP session to be preserved during an interruption in service.

## Checkpointing

Checkpointing is a function that copies state information from the active Route Processor to the backup Route Processor, thereby ensuring that the backup Route Processor has the latest information. If the active Route Processor fails, the backup Route Processor can take over.

For the LDP NSF feature, the checkpointing function copies the active Route Processor's LDP local label bindings to the backup Route Processor. The active Route Processor sends updates to the backup Route Processor when local label bindings are modified as a result of routing changes.

**Note**

Local label bindings that are allocated by BGP and null local label bindings are not included in the checkpointing operation.

The checkpointing function is enabled by default.

To display checkpointing data, issue the **show mpls ldp graceful-restart** command on the active Route Processor.

To check that the active and backup Route Processors have identical copies of the local label bindings, you can issue the **show mpls ldp bindings** command with the **detail** keyword on the active and backup Route Processors. This command displays the local label bindings that have been saved. The active Route Processor and the backup Route Processor should have the same local label bindings.

## Troubleshooting Tips

You can use the **debug mpls ldp graceful-restart** command to enable the display of MPLS LDP checkpoint events and errors.

# How to Configure and Use NSF/SSO - MPLS LDP and LDP Graceful Restart

- [Configuring MPLS LDP Graceful Restart, page 5](#) (required)
- [Verifying the Configuration, page 7](#) (optional)

## Configuring MPLS LDP Graceful Restart

MPLS LDP Graceful Restart (GR) is enabled globally. When you enable LDP GR, it has no effect on existing LDP sessions. LDP GR is enabled for new sessions that are established after the feature has been globally enabled.

### Prerequisites

- Route Processors must be configured for SSO. See the [Stateful Switchover](#) feature module for more information:
- You must enable Nonstop Forwarding on the routing protocols running between the P, PE, routers, and CE routers. See the [Cisco Nonstop Forwarding](#) feature module for more information.

## SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ip cef [distributed]**
4. **mpls ldp graceful-restart**
5. **interface type slot/port**
6. **mpls ip**
7. **mpls label protocol {ldp | tdp | both}**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
Step 2	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
Step 3	<b>ip cef [distributed]</b>  <b>Example:</b> Router(config)# ip cef distributed	Enables distributed Cisco Express Forwarding on Cisco 7500 series routers. Distributes Cisco Express Forwarding information to line cards.  <b>Note</b> For the Cisco 10000 series routers, IP Cisco Express Forwarding is on by default and it cannot be disabled.
Step 4	<b>mpls ldp graceful-restart</b>  <b>Example:</b> Router (config)# mpls ldp graceful-restart	Enables the router to protect the LDP bindings and MPLS forwarding state during a disruption in service.
Step 5	<b>interface type slot/port</b>  <b>Example:</b> Router(config)# interface pos 3/0	Specifies an interface and enters interface configuration mode.
Step 6	<b>mpls ip</b>  <b>Example:</b> Router(config-if)# mpls ip	Configures MPLS hop-by-hop forwarding for an interface.
Step 7	<b>mpls label protocol {ldp   tdp   both}</b>  <b>Example:</b> Router(config-if)# mpls label protocol ldp	Configures the use of LDP for an interface. You must use LDP. You can also issue the <b>mpls label protocol ldp</b> command in global configuration mode, which enables LDP on all interfaces configured for MPLS.

## Verifying the Configuration

Use the following procedure to verify that MPLS LDP Graceful Restart has been configured correctly.

### SUMMARY STEPS

1. **show mpls ldp graceful-restart**
2. **show mpls ldp neighbor graceful restart**
3. **show mpls ldp checkpoint**

### DETAILED STEPS

---

**Step 1 show mpls ldp graceful-restart**

The command output displays Graceful Restart sessions and session parameters:

```
Router# show mpls ldp graceful-restart

LDP Graceful Restart is enabled
Neighbor Liveness Timer: 5 seconds
Max Recovery Time: 200 seconds
Down Neighbor Database (0 records):
Graceful Restart-enabled Sessions:
VRF default:

    Peer LDP Ident: 10.18.18.18:0, State: estab
    Peer LDP Ident: 10.17.17.17:0, State: estab
```

**Step 2 show mpls ldp neighbor graceful restart**

The command output displays the Graceful Restart information for LDP sessions:

```
Router# show mpls ldp neighbor graceful-restart

Peer LDP Ident: 10.20.20.20:0; Local LDP Ident 10.17.17.17:0
  TCP connection: 10.20.20.20.16510 - 10.17.17.17.646
  State: Oper; Msgs sent/rcvd: 8/18; Downstream
  Up time: 00:04:39
  Graceful Restart enabled; Peer reconnect time (msecs): 120000
Peer LDP Ident: 10.19.19.19:0; Local LDP Ident 10.17.17.17:0
  TCP connection: 10.19.19.19.11007 - 10.17.17.17.646
  State: Oper; Msgs sent/rcvd: 8/38; Downstream
  Up time: 00:04:30
  Graceful Restart enabled; Peer reconnect time (msecs): 120000
```

**Step 3 show mpls ldp checkpoint**

The command output displays the summary of the checkpoint information:

```
Router# show mpls ldp checkpoint

Checkpoint status: dynamic-sync
Checkpoint resend timer: not running
5 local bindings in add-skipped
9 local bindings in added
1 of 15+ local bindings in none
```

# Configuration Examples for LDP NSF


This section contains the following examples:

- [Configuring NSF/SSO - MPLS LDP and LDP Graceful Restart: Example, page 8](#)

## Configuring NSF/SSO - MPLS LDP and LDP Graceful Restart: Example

The following configuration example shows the LDP NSF feature configured on three routers. (See [Figure 2](#).) In this configuration example, Router 1 creates an LDP session with Router 2. Router 1 also creates a targeted session with Router 3 through a TE tunnel using Router 2.

**Figure 2** *MPLS LDP: NSF/SSO Support and Graceful Restart Configuration Example*

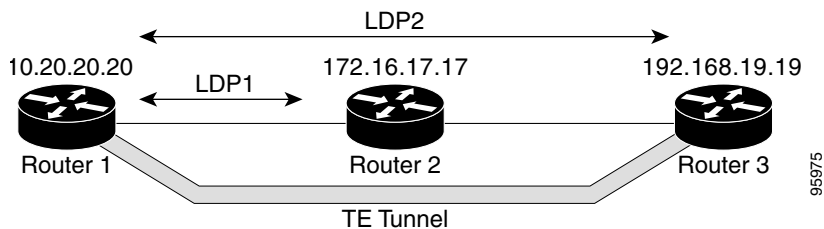

### Router 1—Cisco 7500 Series

```
boot system slot0:rsp-pv-mz
hw-module slot 2 image slot0:rsp-pv-mz
hw-module slot 3 image slot0:rsp-pv-mz

redundancy
mode sso
ip subnet-zero
ip cef
mpls label range 16 10000 static 10001 1048575
mpls label protocol ldp
mpls ldp logging neighbor-changes
mpls ldp graceful-restart
mpls traffic-eng tunnels
no mpls traffic-eng auto-bw timers frequency 0
mpls ldp router-id Loopback0 force
!
interface Loopback0
 ip address 172.20.20.20 255.255.255.255
 no ip directed-broadcast
 no ip mroute-cache
!
interface Tunnell
 ip unnumbered Loopback0
 no ip directed-broadcast
 mpls label protocol ldp
 mpls ip
 tunnel destination 10.19.19.19
 tunnel mode mpls traffic-eng
 tunnel mpls traffic-eng autoroute announce
 tunnel mpls traffic-eng priority 7 7
 tunnel mpls traffic-eng bandwidth 500
 tunnel mpls traffic-eng path-option 1 dynamic
```



```

!
interface ATM5/1/0
    no ip address
    no ip directed-broadcast
    atm clock INTERNAL
    no atm enable-ilmi-trap
    no atm ilmi-keepalive
!
interface ATM5/1/0.5 point-to-point
    ip address 172.17.0.2 255.255.0.0
    no ip directed-broadcast
    no atm enable-ilmi-trap
    pvc 6/100
        encapsulation aal5snap
    mpls label protocol ldp
    mpls traffic-eng tunnels
    mpls ip
    ip rsvp bandwidth 1000
!
router ospf 100
    log-adjacency-changes
    redistribute connected
    nsf enforce global
    network 172.17.0.0 0.255.255.255 area 100
    network 172.20.20.20 0.0.0.0 area 100
    mpls traffic-eng router-id Loopback0
    mpls traffic-eng area 100

```

### Router 2—Cisco 7500 Series

```

boot system slot0:rsp-pv-mz
hw-module slot 2 image slot0:rsp-pv-mz
hw-module slot 3 image slot0:rsp-pv-mz

redundancy
mode sso
!
ip cef
no ip domain-lookup
mpls label range 17 10000 static 10001 1048575
mpls label protocol ldp
mpls ldp logging neighbor-changes
mpls ldp graceful-restart
mpls traffic-eng tunnels
no mpls traffic-eng auto-bw timers frequency 0
no mpls advertise-labels
mpls ldp router-id Loopback0 force
!
interface Loopback0
    ip address 172.18.17.17 255.255.255.255
    no ip directed-broadcast
!
interface ATM4/0/0
    no ip address
    no ip directed-broadcast
    no ip mroute-cache
    atm clock INTERNAL
    atm sonet stm-1
    no atm enable-ilmi-trap
    no atm ilmi-keepalive
!
interface ATM4/0/0.5 point-to-point
    ip address 172.17.0.1 255.255.0.0
    no ip directed-broadcast

```

```

    no atm enable-ilmi-trap
    pvc 6/100
        encapsulation aal5snap
    mpls label protocol ldp
    mpls traffic-eng tunnels
    mpls ip
    ip rsvp bandwidth 1000
!
interface POS5/1/0
    ip address 10.0.0.1 255.0.0.0
    no ip directed-broadcast
    encapsulation ppp
    mpls label protocol ldp
    mpls traffic-eng tunnels
    mpls ip
    no peer neighbor-route
    clock source internal
    ip rsvp bandwidth 1000
!
router ospf 100
    log-adjacency-changes
    nsf enforce global
    redistribute connected
    network 10.0.0.0 0.255.255.255 area 100
    network 172.17.0.0 0.255.255.255 area 100
    network 172.18.17.17 0.0.0.0 area 100
    mpls traffic-eng router-id Loopback0
    mpls traffic-eng area 100
!
ip classless

```

### Router 3—Cisco 7500 Series

```

boot system slot0:rsp-pv-mz
hw-module slot 2 image slot0:rsp-pv-mz
hw-module slot 3 image slot0:rsp-pv-mz

redundancy
mode sso
!
ip subnet-zero
ip cef
!
no ip finger
no ip domain-lookup
mpls label protocol ldp
mpls ldp neighbor 10.11.11.11 targeted ldp
mpls ldp logging neighbor-changes
mpls ldp graceful-restart
mpls traffic-eng tunnels
no mpls traffic-eng auto-bw timers frequency 0
mpls ldp discovery directed-hello interval 12
mpls ldp discovery directed-hello holdtime 130
mpls ldp discovery directed-hello accept
mpls ldp router-id Loopback0 force
!
interface Loopback0
    ip address 172.19.19.19 255.255.255.255
    no ip directed-broadcast
!
interface POS1/0
    ip address 10.0.0.2 255.0.0.0
    no ip directed-broadcast
    encapsulation ppp

```

```

mpls label protocol ldp
mpls traffic-eng tunnels
mpls ip
no peer neighbor-route
clock source internal
ip rsvp bandwidth 1000
!
router ospf 100
  log-adjacency-changes
  nsf enforce global
  redistribute connected
  network 10.0.0.0 0.255.255.255 area 100
  network 172.19.19.19 0.0.0.0 area 100
  mpls traffic-eng router-id Loopback0
  mpls traffic-eng area 100
!
ip classless

```

### Router 1—Cisco 10000 Series

```

boot system flash:c10k2-p11-mz

redundancy
mode sso
ip subnet-zero
ip cef
mpls label protocol ldp
mpls ldp logging neighbor-changes
mpls ldp graceful-restart
no mpls traffic-eng auto-bw timers frequency 0
mpls ldp router-id Loopback0 force
!
interface Loopback0
  ip address 172.20.20.20 255.255.255.255
  no ip directed-broadcast
  no ip mroute-cache
!
interface ATM5/1/0
  no ip address
  no ip directed-broadcast
  atm clock INTERNAL
  no atm enable-ilmi-trap
  no atm ilmi-keepalive
!
interface ATM5/1/0.5 point-to-point
  ip address 172.18.0.2 255.255.0.0
  no ip directed-broadcast
  no atm enable-ilmi-trap
  pvc 6/100
    encapsulation aal5snap
  mpls label protocol ldp
  mpls ip
!
router ospf 100
  log-adjacency-changes
  redistribute connected
  nsf enforce global
  network 172.18.0.0 0.255.255.255 area 100
  network 172.20.20.20 0.0.0.0 area 100

```

### Router 2—Cisco 10000 Series

```

boot system flash:c10k2-p11-mz

```

```

redundancy
mode sso
!
ip cef
no ip domain-lookup
mpls label protocol ldp
mpls ldp logging neighbor-changes
mpls ldp graceful-restart
no mpls traffic-eng auto-bw timers frequency 0
mpls ldp router-id Loopback0 force
!
interface Loopback0
  ip address 172.17.17.17 255.255.255.255
  no ip directed-broadcast
!
interface ATM4/0/0
  no ip address
  no ip directed-broadcast
  no ip mroute-cache
  atm clock INTERNAL
  atm sonet stm-1
  no atm enable-ilmi-trap
  no atm ilmi-keepalive
!
interface ATM4/0/0.5 point-to-point
  ip address 172.18.0.1 255.255.0.0
  no ip directed-broadcast
  no atm enable-ilmi-trap
  pvc 6/100
    encapsulation aal5snap
  mpls label protocol ldp
  mpls ip
!
interface POS5/1/0
  ip address 10.0.0.1 255.0.0.0
  no ip directed-broadcast
  encapsulation ppp
  mpls label protocol ldp
  mpls ip
  no peer neighbor-route
  clock source internal
!
router ospf 100
  log-adjacency-changes
  nsf enforce global
  redistribute connected
  network 10.0.0.0 0.255.255.255 area 100
  network 172.18.0.0 0.255.255.255 area 100
  network 172.17.17.17 0.0.0.0 area 100
  mpls traffic-eng router-id Loopback0
!
ip classless

```

### Router 3—Cisco 10000 Series

```

boot system flash:c10k2-p11-mz

redundancy
mode sso
!
ip subnet-zero
ip cef
!

```

```
no ip finger
no ip domain-lookup
mpls label protocol ldp
mpls ldp logging neighbor-changes
mpls ldp graceful-restart
no mpls traffic-eng auto-bw timers frequency 0
mpls ldp router-id Loopback0 force
!
interface Loopback0
    ip address 172.19.19.19 255.255.255.255
    no ip directed-broadcast
!
interface POS1/0
    ip address 10.0.0.2 255.0.0.0
    no ip directed-broadcast
    encapsulation ppp
    mpls label protocol ldp
    mpls ip
    no peer neighbor-route
    clock source internal
!
router ospf 100
    log-adjacency-changes
    nsf enforce global
    redistribute connected
    network 10.0.0.0 0.255.255.255 area 100
    network 172.19.19.19 0.0.0.0 area 100
    mpls traffic-eng router-id Loopback0
!
ip classless
```

# Additional References

## Related Documents

Related Topic	Document Title
Stateful switchover	<i>Stateful Switchover</i>
MPLS Label Distribution Protocol	<i>MPLS Label Distribution Protocol (LDP)</i>
Cisco nonstop forwarding	<i>Cisco Nonstop Forwarding</i>

## Standards

Standard	Title
None	—

## MIBs

MIB	MIBs Link
MPLS Label Distribution Protocol MIB Version 8 Upgrade	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL: <a href="http://www.cisco.com/go/mibs">http://www.cisco.com/go/mibs</a>

## RFCs

RFC	Title
RFC 3036	LDP Specification
RFC 3478	Graceful Restart Mechanism for Label Distribution

## Technical Assistance

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies. Access to most tools on the Cisco Support website requires a Cisco.com user ID and password. If you have a valid service contract but do not have a user ID or password, you can register on Cisco.com.	<a href="http://www.cisco.com/techsupport">http://www.cisco.com/techsupport</a>

# Feature Information for NSF/SSO - MPLS LDP and LDP Graceful Restart

[Table 1](#) lists the release history for this feature.

Not all commands may be available in your Cisco IOS software release. For release information about a specific command, see the command reference documentation.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS and Catalyst OS software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>. An account on Cisco.com is not required.

**Note**

---

[Table 1](#) lists only the Cisco IOS software release that introduced support for a given feature in a given Cisco IOS software release train. Unless noted otherwise, subsequent releases of that Cisco IOS software release train also support that feature.

---

**Table 1** Feature Information for NSF/SSO - MPLS LDP and LDP Graceful Restart

Feature Name	Releases	Feature Information
NSF/SSO - MPLS LDP and LDP Graceful Restart	12.2(25)S 12.2(28)SB 12.2(33)SRA 12.2(33)SXH	<p>LDP NSF allows a Route Processor to recover from disruption in service without losing its MPLS forwarding state.</p> <p>In 12.2(25)S, this feature was introduced on Cisco 7500 series routers.</p> <p>In 12.2(28)SB, this feature was integrated into Cisco IOS Release 12.2(28)SB and implemented on Cisco 10000 series routers.</p> <p>In 12.2(33)SRA, this feature was integrated into Cisco IOS Release 12.2(33)SRA.</p> <p>In 12.2(33)SXH, this feature was integrated into Cisco IOS Release 12.2(33)SXH.</p> <p>The following commands are introduced or modified in the feature or features documented in this module.</p> <ul style="list-style-type: none"> <li>• <b>debug mpls ldp graceful-restart</b></li> <li>• <b>mpls label protocol (global configuration)</b></li> <li>• <b>mpls ldp graceful-restart</b></li> <li>• <b>mpls ldp graceful-restart timers forwarding-holding</b></li> <li>• <b>mpls ldp graceful-restart timers max-recovery</b></li> <li>• <b>mpls ldp graceful-restart timers neighbor-liveness</b></li> <li>• <b>show mpls ip binding</b></li> <li>• <b>show mpls ldp bindings</b></li> <li>• <b>show mpls ldp checkpoint</b></li> <li>• <b>show mpls ldp graceful-restart</b></li> <li>• <b>show mpls ldp neighbor</b></li> </ul>

CCVP, the Cisco logo, and Welcome to the Human Network are trademarks of Cisco Systems, Inc.; Changing the Way We Work, Live, Play, and Learn is a service mark of Cisco Systems, Inc.; and Access Registrar, Aironet, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Enterprise/Solver, EtherChannel, EtherFast, EtherSwitch, Fast Step, Follow Me Browsing, FormShare, GigaDrive, HomeLink, Internet Quotient, IOS, iPhone, IP/TV, iQ Expertise, the iQ logo, iQ Net Readiness Scorecard, iQuick Study, LightStream, Linksys, MeetingPlace, MGX, Networkers, Networking Academy, Network Registrar, PIX, ProConnect, ScriptShare, SMARTnet, StackWise, The Fastest Way to Increase Your Internet Quotient, and TransPath are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0711R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and



coincidental.

© 2007 Cisco Systems, Inc. All rights reserved.

