



# Managing Cisco VIM through Unified Management

---

This functionality brings in clear separation of roles. It does not store any pod related details obtained directly through Rest API from the pods locally, except for RBAC information.

- [UI Administrators Privileges and Responsibilities, on page 1](#)
- [Pod UI Privileges and Responsibilities, on page 2](#)
- [Adding Cisco VIM Pod, on page 2](#)
- [Deleting Pod from Cisco VIM Unified Management, on page 3](#)
- [Context Switching Within Insight, on page 4](#)
- [Dashboard, on page 4](#)

## UI Administrators Privileges and Responsibilities

The Insight UI Admin has the following privileges and responsibilities:

1. Insight UI Admin(s) can only add Pod Admin.
2. Insight UI Admin can manage all the users in Insight from **Manage Pod Users**.
  - UI Admin can revoke permission of Users: If UI Admin wants to revoke a user from a Pod, click **Revoke permission** icon under Action column.
  - UI Admin can delete a User: If UI Admin wants to delete a user from the UM, Click **Delete** icon under Action column. If there is only one user associated with a Pod then UI Admin needs to delete the pod and then delete or revoke the user permission.
3. Insight UI Admin can manage Pod Admin(s) from **Manage Pod Admin**.
  - UI Admin can add a new Pod Admin in Insight.
  - UI Admin can revoke permission of a user from being a Pod Admin.
4. Insight UI Admin can manage Pods from Manage Pods.
  - UI Admin can delete a Pod from Insight.
  - UI Admin can also update password for the REST incase there was a system update on the pod and REST password was changed in that process.

5. Insight UI Admin can manage other UI Admin(s) from **Manage UI Admin Users**.
  - Insight UI Admin can add another UI Admin.
  - Insight UI Admin can revoke permission of the user from being an UI Admin.




---

**Note** If there is only one UI Admin for Insight then revoke permission icon will be disabled for the user.

---

## Pod UI Privileges and Responsibilities

As Cisco VIM is Rest API based, you can manage a pod through CLI, Rest API or UI. You can always bring in a partial or fully functional Pod and register with VIM UM. UM queries the pod status through Rest API and reflect the same.




---

**Note** We recommended the admin to choose only one path to manage the pod.

---

## Adding Cisco VIM Pod

### Before you begin

Complete the following pre-requisites to add a Cisco VIM Pod:

- Bootstrap of VIM Insight is complete and successful as per the install guide.
- At minimum, a UI and Pod Admin exists as per the install guide.

---

**Step 1** Navigate to [https://br\\_api:9000](https://br_api:9000)

**Step 2** Click **Register Management Node** link.

- Enter the Endpoint IP which is the **br\_api** of your Pod.

**Note** Run time validation to check if the Endpoint IP is already registered to Insight.

- Give a name or tag for the pod you are registering.
- Enter the REST API password for the Pod.
  - You can locate the REST API password on the Pod you are registering.
  - The path to locate REST API password is : `/opt/cisco/ui_config.json`.
- A brief description about management node. Description field is optional and can be left blank.
- Enter the Email ID of the Pod Admin.

- Run time validation to check if the Email ID is Pod admin or not.
- If False, the Insight will give an error User is not registered as Pod Admin.
- If True, the User Name is auto-populated and the **Register** button will be enabled.

**Step 3** Click **Browse** to upload restapi server CA Certificate. This is enabled once the Pod Admin validation is successful.

- Navigate to `/var/www/mercury/mercury-ca.crt` of the management node.
- Download the Certificate to the local machine and upload the certificate using Insight.

Validation check for file size and extension is done as a part of upload and in case of failure the Certificate is deleted and you need to upload the valid certificate again.

If the Certificate is uploaded successfully then **Register** button is enabled. To do a management node health check click **Register**.

- If the REST API service is down on the management node then a failure message will be displayed as : Installer REST API service not available. The certificate will not be deleted.
- If the Certificate is invalid and there is a SSL connection problem with the management node then certificate is deleted and message is displayed to upload the certificate again.
- If the Certificate is valid user is redirected to the login page with a message- management node registered successfully.

**Step 4** Click **Register** to redirect the user to the landing or login page. Pod Admin receives the notification mail that the management node is registered successfully.

---

## Deleting Pod from Cisco VIM Unified Management

When you delete a Pod from Cisco VIM UM, you are not deleting the Pod from your OpenStack deployment.

### Before you begin

Following the steps to delete a Cisco VIM Pod:

- Bootstrap of VIM Insight is complete and successful as per the install guide.
- At least one UI and Pod Admin exists as per the install guide.
- The UM manages the targeted Pod.

---

**Step 1** Log in as the **UM UI Admin**.

**Step 2** In the navigation pane, click **Manage Pods**.

**Step 3** Choose the pod that you want to delete in the Action column and click **Delete**.

**Step 4** Click **Proceed**, to confirm the deletion.

---

## Context Switching Within Insight

Cisco VIM UM has permissions to switch between two or more pods for a particular node. The user can be an admin for one or more pods, and a normal user for some other pod, simultaneously. Ability to access multiple pods, provides the user to maintain context and yet scale from a pod management point of view.


There are two ways a user can switch to another pod.

- **Context Switching Icon:** Context Switching Icon is situated on the top right corner and is the third icon from the right tool tip of the UI. Click **Context Switching** Icon to view all the pods that you can access. Pod with a red dot indicates that the REST Password that is entered during registration of the Management node does not match with the current REST Password for that of particular node. In such a situation the Pod admin or User has to reach out to UI admin to update the password for that Node. UI admin updates the password from Manage Pods in Insight UI admin Portal.
- **Switch Between Management Nodes:** Switch Between Management Nodes is available in the Dashboard. The user can see all the pods in the table and can navigate to any Pod using a single click. If mouse pointer changes from hand or cursor to a red dot sign it indicates that the REST Password entered during registration of Management node does not match with the current REST Password for that particular node.

## Dashboard

After selecting a Pod from landing page you will be redirected to the **Dashboard** of that particular Pod.

**Figure 1: Dashboard**

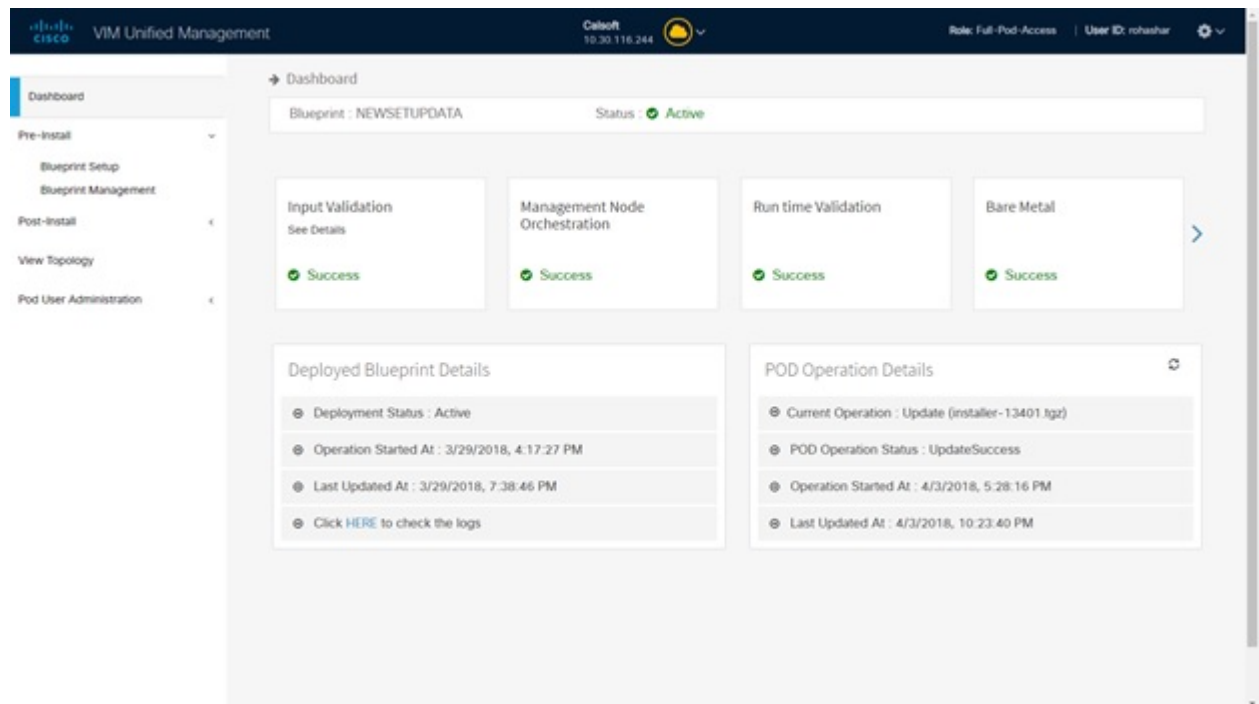

## Blueprint Name

Blueprint section provides the name of the Blueprint, the health status of the blueprint and the various installation stages with the status. The different status is Success, Failed or Not Run.

Click **Next and Previous**, you can navigate between various installation stages.

## Deployed Cloud Status

This section highlights the cloud status on the Pod.

- Active (Green): If the cloud is deployed without any failures.
- Failed (Red): If the cloud deployment fails.
- Not Available (Gray): If the cloud is not deployed on the Pod.

## Deployed Blueprint Details

In this section you get information about deployed blueprint which includes Deployment Status, Operation start time, Operation update time, and a link to the log of last operation. When any of the Cloud installation steps fails, the name with keyword failed is visible next to Deployment Status. If you click the name of the step, carousel reorders where failed step is the first box.

## Pod Operation Details

The Pod operation details table provides information regarding the current and last operation which includes Current operation details, Pod operation status and information about the operation start time and update time. Refresh icon facilitates the user to fetch latest operation status from the Pod.

