



## Configuring the Card Mode

This chapter lists the supported configurations and the procedures to configure the card mode on the line cards.



---

**Note** Unless otherwise specified, “line cards” refers to 1.2T and 1.2TL line cards.

---

- [1.2T line cards, on page 1](#)
- [2.4T and 2.4TX card modes , on page 17](#)

### 1.2T line cards

This section describes the supported card modes, card configurations, and procedures to configure the card modes on the 1.2T line card.

A 1.2T line card

- supports both module and slice configurations,
- provides flexible trunk and client port assignment.

Port details:

The line cards are equipped with trunk and client ports:

- Two trunk ports (0 and 1), and
- 12 client ports (2 through 13).

#### Configuration modes

You can configure the line cards in these two modes:

- **Muxponder mode:** both trunk ports are configured with the same trunk rate. The client-to-trunk mapping is sequential.
- **Muxponder slice mode:** the client-to-trunk mapping is fixed.

This table lists the client ports assigned to each trunk for the 1.2T card in muxponder slice mode.

**Table 1: Client-to-trunk mapping for muxponder slice mode**

Card	Trunk 0 client ports	Trunk 1 client ports
1.2T	2 to 7	8 to 13

## Supported data rates on the 1.2T line card

The 1.2T line card supports these data rates.

This table shows the client and trunk ports that are enabled on these muxponders for the 100GE and OTU4 data rates.

- Muxponder
- Muxponder slice 0
- Muxponder slice 1

**Table 2: Data rates for muxponder and muxponder slice 0 and slice 1 mode configuration**

Trunk data rate	Client data rate (100GE, OTU4)	Muxponder mode		Muxponder slice mode	
		Trunk ports	Client ports	Client ports for trunk 1	Client ports for trunk 0
100	100GE, OTU4	0	2	8	2
200	100GE, OTU4	0, 1	2, 3, 4, 5	8, 9	2, 3
300	100GE, OTU4	0, 1	2, 3, 4, 5, 6, 7	8, 9, 10	2, 3, 4
400	100GE, OTU4	0, 1	2, 3, 4, 5, 6, 7, 8, 9	8, 9, 10, 11	2, 3, 4, 5
500	100GE, OTU4	0, 1	2, 3, 4, 5, 6, 7, 8, 9, 10, 11	8, 9, 10, 11, 12	2, 3, 4, 5, 6
600	100GE, OTU4	0, 1	2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13	8, 9, 10, 11, 12, 13	2, 3, 4, 5, 6, 7

All configurations can be accomplished by using appropriate values for client bitrate and trunk bitrate parameters of the **hw-module** command.

This table shows the trunk parameter ranges for the 1.2T line card.

**Table 3: Trunk parameter range for the 1.2T line card**

Trunk payload	FEC	Min BPS	Max BPS	Min GBd	Max GBd
50G	15%	1	1.3125	24.0207911	31.5272884
50G	27%	1	1.4453125	24.0207911	34.7175497
100G	15%	1	2.625	24.0207911	63.0545768

Trunk payload	FEC	Min BPS	Max BPS	Min GBd	Max GBd
100G	27%	1	2.890625	24.0207911	69.4350994
150G	15%	1.3203125	3.9375	24.0207911	71.6359689
150G	27%	1.453125	4.3359375	24.0207911	71.6749413
200G	15%	1.7578125	5.25	24.0207911	71.7420962
200G	27%	2	4.40625	31.51	69.43
250G	15%	2.1953125	6	26.2727403	71.8059237
250G	27%	2.4140625	6	28.9312914	71.9068991
300G	15%	2.6328125	6	31.5272884	71.8485385
300G	27%	2.8984375	6	34.7175497	71.8681352
350G	15%	3.0703125	6	36.7818364	71.8790086
350G	27%	3.3828125	6	40.503808	71.8404724
400G	15%	3.5078125	6	42.0363845	71.9018782
400G	27%	3.8671875	6	46.2900663	71.8197392
450G	15%	3.9453125	6	47.2909326	71.9196757
450G	27%	4.34375	6	52.0763245	71.9327648
500G	15%	4.3828125	6	52.5454806	71.93392
500G	27%	4.8281250	6	57.8625828	71.9068991
550G	15%	4.8203125	6	57.8000287	71.9455787
550G	27%	5.3125	6	63.6488411	71.88575
600G	15%	5.2578125	-	-	71.9552971

Trunk Payload	FEC	Min BPS	Max BPS	Min GBd	Max GBd
100G	15%	1	2.625	24.0207911	63.0545768
100G	27%	1	2.890625	24.0207911	69.4350994
150G	15%	1.3203125	3.9375	24.0207911	71.6359689
150G	27%	1.453125	4.3359375	24.0207911	71.6749413
200G	15%	2	4	31.5272884	63.0545768
200G	27%	2	4.40625	31.51664088	69.43509943

Trunk Payload	FEC	Min BPS	Max BPS	Min GBd	Max GBd
250G	15%	2.1953125	4.5	35.0303204	71.8059237
250G	27%	2.4140625	4.5	38.5750552	71.9068991
300G	15%	2.6328125	4.5	42.0363845	71.8485385
300G	27%	2.8984375	4.5	46.2900662857142	71.86813526
350G	15%	3.0703125	4.5	49.0424486	71.8790086
350G	27%	3.3828125	4.5	54.0050773	71.8404724
400G	15%	3.5078125	4.5	56.0485127	71.9018782
400G	27%	3.8671875	4.5	61.72008838	71.81973921

You can configure the sub 50G or coupled mode on the 1.2T line card only in the muxponder mode.

This table shows the port configuration for the supported data rates in the muxponder mode.

**Table 4: Supported data rates for muxponder mode**

Trunk data rate (per trunk)	Total configured data rate	Trunk ports	Client ports for trunk 0 (100G)	Shared client port (50G per trunk)	Client ports for trunk 1 (100G)
50G	100G	0, 1	-	2	-
150G	300G	0, 1	2	3	4
350G	700G	0, 1	2, 3, 4	5	6, 7, 8
450G	900G	0, 1	2, 3, 4, 5	6	7, 8, 9, 10
550G	1.1T	0, 1	2, 3, 4, 5, 6	7	8, 9, 10, 11, 12

The 1.2T line card supports an alternate port configuration for Sub 50G (split client port mapping) that you can configure using CLI.

This table shows the port configuration for the supported data rates in the split client port mapping mode.

**Table 5: Supported data rates for split client port mapping mode**

Trunk data rate (per trunk)	Total configured data rate	Trunk ports	Client ports for trunk 0 (100G)	Shared client port (50G per trunk)	Client ports for trunk 1 (100G)
50G	100G	0, 1	-	7	-
150G	300G	0, 1	2	7	8
250G	500G	0, 1	2, 3	7	8, 9
350G	700G	0, 1	2, 3, 4	7	8, 9, 10

Trunk data rate (per trunk)	Total configured data rate	Trunk ports	Client ports for trunk 0 (100G)	Shared client port (50G per trunk)	Client ports for trunk 1 (100G)
450G	900G	0, 1	2, 3, 4, 5	7	8, 9, 10, 11
550G	1.1T	0, 1	2, 3, 4, 5, 6	7	8, 9, 10, 11, 12



**Note** In all x50G configurations, client traffic on the middle port is affected with ODUK-BDI and LF alarms after the **power cycle or link flap** on the trunk side. This issue is raised when the two network lanes work in coupled mode and move from low to high power. To solve this issue, create a new frame either at the near-end or far-end by performing **shut** or **no shut** of the trunk ports.

### Coupled mode restrictions

These restrictions apply to the coupled mode configuration:

- Both trunk ports must be configured with the same bits-per-symbol or baud rate. Both must be sent over the same fiber and direction.
- The chromatic dispersion must be configured to the same value for both trunk ports.
- When trunk internal loopback is configured, you must configure it on both trunk ports. If you configure internal loopback only on one trunk, traffic loss occurs.
- Fault on a trunk port of a coupled pair may cause errors on all clients including those running only on the unaffected trunk port.

## Configure split client port mapping

Use this task to configure the trunk port to client port mapping for sub 50G data rates in the default mode or in the split client port mapping mode.

### Procedure

**Step 1** Perform any of these steps to configure or remove the split client port mapping mode:

- To configure the trunk port to client port mapping for sub 50G configuration in the split client port mapping mode, run the **split-client-port-mapping** command.

#### Example:

```
RP/0/RP0/CPU0:ios#configure
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 mxponder
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#split-client-port-mapping
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#commit
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#end
```

- To remove the split client port-mapping configuration, run the **no split-client-port-mapping** command.

**Example:**

```
RP/0/RP0/CPU0:ios#configure
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 mxponder
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#no split-client-port-mapping
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#commit
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#end
```

**Step 2** Run the **commit** command to apply the changes.

**Example:**

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#commit
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#end
```

**Step 3** Verify the port mapping using the **show hw-module location location mxponder** command.

**Example:**

This example shows how to verify the split client port-mapping configuration.

```
RP/0/RP0/CPU0:ios#show hw-module location 0/1/NXR0 mxponder
Location:                0/1/NXR0
Client Bitrate:          100GE
Trunk Bitrate:           450G
Status:                  Provisioning In Progress
LLDP Drop Enabled:       FALSE
ARP Snoop Enabled:       FALSE
Client Port              Mapper/Trunk Port          CoherentDSP0/1/0/0  CoherentDSP0/1/0/1
Traffic Split Percentage
HundredGigEctrler0/1/0/2      ODU40/1/0/0/1          100                  0
HundredGigEctrler0/1/0/3      ODU40/1/0/0/2          100                  0
HundredGigEctrler0/1/0/4      ODU40/1/0/0/3          100                  0
HundredGigEctrler0/1/0/5      ODU40/1/0/0/4          100                  0
HundredGigEctrler0/1/0/7      ODU40/1/0/0/5          50                   50
HundredGigEctrler0/1/0/8      ODU40/1/0/1/1          0                    100
HundredGigEctrler0/1/0/9      ODU40/1/0/1/2          0                    100
HundredGigEctrler0/1/0/10     ODU40/1/0/1/3          0                    100
HundredGigEctrler0/1/0/11     ODU40/1/0/1/4          0                    100
```

The split client port mapping is configured.

This is a sample in which split-client-port-mapping is configured with a 450G trunk payload.

```
RP/0/RP0/CPU0:ios#configure
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 mxponder
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#split-client-port-mapping
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#commit
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#end
```

This is a sample in which split-client-port-mapping is removed.

```
RP/0/RP0/CPU0:ios#configur
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 mxponder
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#no split-client-port-mapping
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#commit
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#end
```

## Configure the card mode

Use this task to configure the 1.2T line card in the module (muxponder) or slice configuration (muxponder slice), specifying its client and trunk data rates.

### Procedure

**Step 1** Configure the client and trunk rates for the muxponder at the specified location.

- **hw-module location** *location* **mxponder client-rate** {100GE | OTU4}
- **hw-module location** *location* **mxponder trunk-rate** {50G | 100G|150G | 200G | 250G | 300G | 350G | 400G | 450G | 500G | 550G | 600G }

#### Example:

This is a sample in which the card is configured in the muxponder mode with a 550G trunk payload.

```
RP/0/RP0/CPU0:ios#config
Tue Oct 15 01:24:56.355 UTC
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 mxponder client-rate 100GE
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 mxponder trunk-rate 550G
RP/0/RP0/CPU0:ios(config)#commit
```

This is a sample in which the card is configured in the muxponder mode with a 500G trunk payload.

```
RP/0/RP0/CPU0:ios#config
Sun Feb 24 14:09:33.989 UTC
RP/0/RP0/CPU0:ios(config)#hw-module location 0/2/NXR0 mxponder client-rate OTU4
RP/0/RP0/CPU0:ios(config)#hw-module location 0/2/NXR0 mxponder trunk-rate 500G
RP/0/RP0/CPU0:ios(config)#commit
```

**Step 2** Use these commad to configure the client data rates and trunk data rates of the card in the muxponder slice mode.

- **configure hw-module location** *location* **mxponder-slice** *mxponder-slice-number* **client-rate** { 100GE|OTU4}
- **hw-module location** *location* **mxponder-slice trunk-rate** { 100G | 200G | 300G | 400G | 500G | 600G }

#### Example:

This is a sample in which the card is configured in the muxponder mode with a 550G trunk payload.

```
RP/0/RP0/CPU0:ios#config
Tue Oct 15 01:24:56.355 UTC
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 mxponder client-rate 100GE
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 mxponder trunk-rate 550G
RP/0/RP0/CPU0:ios(config)#commit
```

This is a sample in which the card is configured in the muxponder mode with a 500G trunk payload.

```
RP/0/RP0/CPU0:ios#config
Sun Feb 24 14:09:33.989 UTC
RP/0/RP0/CPU0:ios(config)#hw-module location 0/2/NXR0 mxponder client-rate OTU4
RP/0/RP0/CPU0:ios(config)#hw-module location 0/2/NXR0 mxponder trunk-rate 500G
RP/0/RP0/CPU0:ios(config)#commit
```

This is a sample in which the card is configured in the muxponder slice 0 mode with a 500G trunk payload.

## Verify the 1.2T line card configuration

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 mxponder-slice 0 client-rate 100GE
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 mxponder-slice 0 trunk-rate 500G
RP/0/RP0/CPU0:ios(config)#commit
```

This is a sample in which the card is configured in the muxponder slice 1 mode with a 400G trunk payload.

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 mxponder-slice 1 client-rate 100GE
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 mxponder-slice 1 trunk-rate 400G
RP/0/RP0/CPU0:ios(config)#commit
```

This is a sample in which the card is configured with mixed client rates in the muxponder slice mode.

```
RP/0/RP0/CPU0:ios#configure
Mon Mar 23 06:10:22.227 UTC
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 mxponder-slice 0 client-rate OTU4 trunk-rate
500G
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 mxponder-slice 1 client-rate 100GE trunk-rate
500G
RP/0/RP0/CPU0:ios(config)#commit
```

## Verify the 1.2T line card configuration

Use this task to verify the configured settings of the 1.2T line card in either muxponder or muxponder slice mode.

### Procedure

Use the **show hw-module location** *<location>* **mxponder** command to verify the card configuration.

### Example:

```
RP/0/RP0/CPU0:ios#show hw-module location 0/2/NXR0 mxponder
Fri Mar 15 11:48:48.344 IST

Location:                0/2/NXR0
Client Bitrate:          100GE
Trunk Bitrate:           500G
Status:                  Provisioned
LLDP Drop Enabled:       FALSE
Client Port              Mapper/Trunk Port   CoherentDSP0/2/0/0   CoherentDSP0/2/0/1
                        Traffic Split Percentage

HundredGigEctr0/2/0/2   ODU40/2/0/0/1           100                   0
HundredGigEctr0/2/0/3   ODU40/2/0/0/2           100                   0
HundredGigEctr0/2/0/4   ODU40/2/0/0/3           100                   0
HundredGigEctr0/2/0/5   ODU40/2/0/0/4           100                   0
HundredGigEctr0/2/0/6   ODU40/2/0/0/5           100                   0
HundredGigEctr0/2/0/7   ODU40/2/0/1/1           0                     100
HundredGigEctr0/2/0/8   ODU40/2/0/1/2           0                     100
HundredGigEctr0/2/0/9   ODU40/2/0/1/3           0                     100
HundredGigEctr0/2/0/10  ODU40/2/0/1/4           0                     100
HundredGigEctr0/2/0/11  ODU40/2/0/1/5           0                     100
```

This is a sample output of the coupled mode configuration where the shared client port is highlighted.

```
RP/0/RP0/CPU0:ios#show hw-module location 0/1/NXR0 mxponder
Tue Oct 15 01:25:57.358 UTC
```

```
Location:                0/1/NXR0
Client Bitrate:          100GE
Trunk Bitrate:           550G
Status:                  Provisioned
LLDP Drop Enabled:       FALSE
Client Port              Mapper/Trunk Port      CoherentDSP0/1/0/0 CoherentDSP0/1/0/1
                        Traffic Split Percentage

HundredGigEctrler0/1/0/2  ODU40/1/0/0/1                100                0
HundredGigEctrler0/1/0/3  ODU40/1/0/0/2                100                0
HundredGigEctrler0/1/0/4  ODU40/1/0/0/3                100                0
HundredGigEctrler0/1/0/5  ODU40/1/0/0/4                100                0
HundredGigEctrler0/1/0/6  ODU40/1/0/0/5                100                0
HundredGigEctrler0/1/0/7  ODU40/1/0/0/6                50                 50
HundredGigEctrler0/1/0/8  ODU40/1/0/1/1                0                 100
HundredGigEctrler0/1/0/9  ODU40/1/0/1/2                0                 100
HundredGigEctrler0/1/0/10 ODU40/1/0/1/3                0                 100
HundredGigEctrler0/1/0/11 ODU40/1/0/1/4                0                 100
HundredGigEctrler0/1/0/12 ODU40/1/0/1/5                0                 100
```

This is a sample output of all the muxponder slice 0 configurations.

```
RP/0/RP0/CPU0:ios#show hw-module location 0/1/NXR0 mxponder-slice 0
Fri Mar 15 06:04:18.348 UTC
```

```
Location:                0/1/NXR0
Slice ID:                0
Client Bitrate:          100GE
Trunk Bitrate:           500G
Status:                  Provisioned
LLDP Drop Enabled:       FALSE
Client Port              Mapper/Trunk Port      CoherentDSP0/1/0/0
                        Traffic Split Percentage

HundredGigEctrler0/1/0/2  ODU40/1/0/0/1                100
HundredGigEctrler0/1/0/3  ODU40/1/0/0/2                100
HundredGigEctrler0/1/0/4  ODU40/1/0/0/3                100
HundredGigEctrler0/1/0/5  ODU40/1/0/0/4                100
HundredGigEctrler0/1/0/6  ODU40/1/0/0/5                100
```

This is a sample output of all the muxponder slice 1 configurations.

```
RP/0/RP0/CPU0:ios#show hw-module location 0/1/NXR0 mxponder-slice 1
Fri Mar 15 06:11:50.020 UTC
```

```
Location:                0/1/NXR0
Slice ID:                1
Client Bitrate:          100GE
Trunk Bitrate:           400G
Status:                  Provisioned
LLDP Drop Enabled:       TRUE
Client Port              Mapper/Trunk Port      CoherentDSP0/1/0/1
                        Traffic Split Percentage

HundredGigEctrler0/1/0/8  ODU40/1/0/1/1                100
HundredGigEctrler0/1/0/9  ODU40/1/0/1/2                100
HundredGigEctrler0/1/0/10 ODU40/1/0/1/3                100
HundredGigEctrler0/1/0/11 ODU40/1/0/1/4                100
```

## Clear alarm statistics

This is a sample output of the muxponder slice 1 configuration with client configured as OTU4.

```
RP/0/RP0/CPU0:ios#sh hw-module location 0/0/NXR0 mxponder-slice 1

Wed Mar 11 13:59:11.073 UTC

Location:                0/0/NXR0
Slice ID:                 1
Client Bitrate:          OTU4
Trunk Bitrate:           200G
Status:                  Provisioned
Client Port              Peer/Trunk Port          CoherentDSP0/0/0/1
                        Traffic Split Percentage
OTU40/0/0/8              ODU40/0/0/1/1          100
OTU40/0/0/9              ODU40/0/0/1/2          100
```

This is a sample to verify the mixed client rate configuration in the muxponder slice mode.

```
RP/0/RP0/CPU0:ios#show hw-module location 0/1/NXR0 mxponder
Mon Mar 23 06:20:22.227 UTC

Location:                0/1/NXR0
Slice ID:                 0
Client Bitrate:          OTU4
Trunk Bitrate:           500G
Status:                  Provisioned
Client Port              Peer/Trunk Port          CoherentDSP0/1/0/0
                        Traffic Split Percentage
OTU40/1/0/2              ODU40/1/0/0/1          100
OTU40/1/0/3              ODU40/1/0/0/2          100
OTU40/1/0/4              ODU40/1/0/0/3          100
OTU40/1/0/5              ODU40/1/0/0/4          100
OTU40/1/0/6              ODU40/1/0/0/5          100

Location:                0/1/NXR0
Slice ID:                 1
Client Bitrate:          100GE
Trunk Bitrate:           500G
Status:                  Provisioned
LLDP Drop Enabled:      FALSE
ARP Snoop Enabled:      FALSE
Client Port              Mapper/Trunk Port       CoherentDSP0/1/0/1
                        Traffic Split Percentage
HundredGigEctr0/1/0/8    ODU40/1/0/1/1          100
HundredGigEctr0/1/0/9    ODU40/1/0/1/2          100
HundredGigEctr0/1/0/10   ODU40/1/0/1/3          100
HundredGigEctr0/1/0/11   ODU40/1/0/1/4          100
HundredGigEctr0/1/0/12   ODU40/1/0/1/5          100
```

## Clear alarm statistics

Use this task to clear alarm statistics on the optics or coherent DSP controller.

## Procedure

Run the **clear counters controller** *controllertype R/S/I/P* command to clear alarm statistics on the optics or coherent DSP controller.

### Example:

This is a sample in which the alarm statistics are cleared on the coherent DSP controller.

```
RP/0/RP0/CPU0:ios#show controller coherentDSP 0/1/0/0
Tue Jun 11 05:15:12.540 UTC

Port                : CoherentDSP 0/1/0/0
Controller State    : Up
Inherited Secondary State : Normal
Configured Secondary State : Normal
Derived State       : In Service
Loopback mode       : None
BER Thresholds      : SF = 1.0E-5  SD = 1.0E-7
Performance Monitoring : Enable

Alarm Information:
LOS = 1 LOF = 1 LOM = 0
OOF = 1 OOM = 1 AIS = 0
IAE = 0 BIAE = 0      SF_BER = 0
SD_BER = 2      BDI = 2 TIM = 0
FECMISMATCH = 0 FEC-UNC = 0
Detected Alarms      : None

Bit Error Rate Information
PREFEC BER           : 8.8E-03
POSTFEC BER          : 0.0E+00

TTI :
  Remote hostname    : P2B8
  Remote interface   : CoherentDSP 0/1/0/0
  Remote IP addr     : 0.0.0.0

FEC mode              : Soft-Decision 15

AINS Soak            : None
AINS Timer           : 0h, 0m
AINS remaining time  : 0 seconds
RP/0/RP0/CPU0:ios#clear counters controller coherentDSP 0/1/0/0
Tue Jun 11 05:17:07.271 UTC
All counters are cleared
RP/0/RP0/CPU0:ios#show controllers coherentDSP 0/1/0/1
Tue Jun 11 05:20:55.199 UTC

Port                : CoherentDSP 0/1/0/1
Controller State    : Up
Inherited Secondary State : Normal
Configured Secondary State : Normal
Derived State       : In Service
Loopback mode       : None
BER Thresholds      : SF = 1.0E-5  SD = 1.0E-7
Performance Monitoring : Enable

Alarm Information:
LOS = 0 LOF = 0 LOM = 0
```

```

OOF = 0 OOM = 0 AIS = 0
IAE = 0 BIAE = 0 SF_BER = 0
SD_BER = 0 BDI = 0 TIM = 0
FECMISMATCH = 0 FEC-UNC = 0
Detected Alarms : None

Bit Error Rate Information
PREFEC BER : 1.2E-02
POSTFEC BER : 0.0E+00

TTI :
Remote hostname : P2B8
Remote interface : CoherentDSP 0/1/0/1
Remote IP addr : 0.0.0.0

FEC mode : Soft-Decision 15

AINS Soak : None
AINS Timer : 0h, 0m
AINS remaining time : 0 seconds

```

## Regeneration mode

In an optical transmission system, 3R regeneration helps extend the reach of the optical communication links by reamplifying, reshaping, and retiming the data pulses.

Regeneration helps to correct any distortion of optical signals by converting it to an electrical signal, processing that electrical signal, and then retransmitting it again as an optical signal.

In Regeneration (Regen) mode, the OTN signal is received on a trunk port and the regenerated OTN signal is sent on the other trunk port of the 1.2T line card and the other way round. In this mode, only the trunk optics controller and coherentDSP controllers are created.

Regeneration can be configured only on the 1.2T line card.

## Configure the card in Regen mode

Use this task to configure the regeneration mode on the 1.2T line card. The supported trunk rates are 100G to 600G in multiples of 100G.

### Procedure

**Step 1** Run the **hw-module location *location* regen trunk-rate** command to configure the regeneration mode on the 1.2T card.

#### Example:

The is a sample to configure the regeneration mode on the 1.2T line card with the trunk-rate 300.

```

RP/0/RP0/CPU0:ios#configure
RP/0/RP0/CPU0:ios(config)#hw-module location 0/0/NXR0
RP/0/RP0/CPU0:ios(config-hwmod)#regen
RP/0/RP0/CPU0:ios(config-regen)#trunk-rate 300

```

**Step 2** Commit and exit the configuration.

**Example:**

```
RP/0/RP0/CPU0:ios(config-regen)#commit
RP/0/RP0/CPU0:ios(config-regen)#exit
```

**Verify the Regen mode**

Use this task to verify the regeneration mode configuration.

**Procedure**

Run the **show hw-module location location regen** command to verify the regen mode.

**Example:**

```
RP/0/RP0/CPU0:ios#show hw-module location 0/0 regen
Mon Mar 25 09:50:42.936 UTC
Location:          0/0/NXR0
Trunk Bitrate:    400G
Status:           Provisioned
East Port         West Port
CoherentDSP0/0/0/0  CoherentDSP0/0/0/1
```

The terms, **East Port** and **West Port** are used to represent OTN signal regeneration at the same layer.

**Configure the BPS**

This section provides instructions for configuring the Bits-Per-Symbol (BPS) parameter and viewing BPS and baud rate ranges on supported optical interfaces.

The `bits-per-symbol` parameter allows you to configure the modulation format on optical interfaces. This setting directly affects the spectral efficiency and data rate on a per-wavelength basis.

Supported baud rates are shown in the table.

**Table 6: Supported baud rates**

Traffic rate	Minimum baud rate	Maximum baud rate
400	43.34518	130.4647
600	59.53435	148.0555
800	79.37913	148.0555
1000	99.22392	148.0555

Use this task to configure BPS value to 3.4375 on the 1.2T line cards to support 300G trunk configurations on 75 GHz networks.

## Procedure

**Step 1** Run the **controller optics R/S/I/P bits-per-symbol value** command to configure the BPS to 3.4375 on the 1.2T line cards. This configuration supports 300G trunk configurations on 75 GHz networks.

### Example:

This is a sample in which the BPS is configured to 3.4375.

```
RP/0/RP0/CPU0:ios#configure
Wed Mar 27 14:12:49.932 UTC
RP/0/RP0/CPU0:ios(config)#controller optics 0/3/0/0 bits-per-symbol 3.4375
RP/0/RP0/CPU0:ios(config)#commit
```

**Step 2** Run these commands to view the BPS and baud for a specific range.

- **show controller optics R/S/I/P bps-range bps-range | include data-rate | include fec-type**
- **show controller optics R/S/I/P baud-rate-range baud-range | include data-rate | include fec-type**

### Example:

```
RP/0/RP0/CPU0:ios#show controllers optics 0/3/0/0 bps-range 3 3.05 | include 300G | include SD27
Thu Mar 28 03:01:39.751 UTC
300G          SD27          3.0000000          69.4350994
300G          SD27          3.0078125          69.2547485
300G          SD27          3.0156250          69.0753320
300G          SD27          3.0234375          68.8968428
300G          SD27          3.0312500          68.7192736
300G          SD27          3.0390625          68.5426174
300G          SD27          3.0468750          68.3668671
```

### Example:

```
RP/0/RP0/CPU0:ios#show controllers optics 0/3/0/0 baud-rate-range 43 43.4 | include 300G | include
SD27
Thu Mar 28 03:12:36.521 UTC
300G          SD27          4.8046875          43.3545986
300G          SD27          4.8125000          43.2842178
300G          SD27          4.8203125          43.2140651
300G          SD27          4.8281250          43.1441394
300G          SD27          4.8359375          43.0744397
300G          SD27          4.8437500          43.0049648
```

## Trunk rates and BPSK modulation

Trunk rates on the 1.2T line cards can be configured to 50G, 100G, and 150G to support Binary Phase-Shift Keying (BPSK) modulation.

This configuration optimizes the efficiency of carrying information over radio signals.

### Supported trunk rates and BPSK modulation

This table lists the trunk rates with the supported BPSK modulation:

Table 7: Trunk rates with the supported BPSK modulation

Trunk rate	BPSK modulation
50G	1 to 1.4453125
100G	1 to 2.890625
150G	1.453125 to 4.3359375

## Configure trunk rate for BPSK modulation

Use this task to configure the trunk rate for BPSK modulation.

### Procedure

Run the **configurehw-module location location mxponder trunk-rate {50G | 100G | 150G}** command to configure the trunk rate for BPSK modulation.

#### Example:

This example shows how to configure trunk rate to 50G:

```
RP/0/RP0/CPU0: (config) #hw-module location 0/0/NXR0 mxponder
RP/0/RP0/CPU0: (config-hwmod-mp) #trunk-rate 50G
RP/0/RP0/CPU0: (config-hwmod-mp) #commit
```

## View BPSK trunk rate ranges

Determine the trunk rate configured for BPSK modulation on network hardware.

Use this task to verify modulation settings or to troubleshoot device performance. It displays the current trunk rate for BPSK modulation.

### Procedure

Run the **show** command to view the trunk rate configured for BPSK modulation.

#### Example:

```
RP/0/RP0/CPU0: ios (hwmod-mp) #show hw-module location 0/0/NXR0 mxponder

Tue Feb 25 11:13:41.934 UTC

Location:                0/0/NXR0
Client Bitrate:          100GE
Trunk Bitrate:           50G
Status:                  Provisioned
LLDP Drop Enabled:      FALSE
ARP Snoop Enabled:      FALSE
Client Port              Mapper/Trunk Port          CoherentDSP0/0/0/0    CoherentDSP0/0/0/1
```

## Traffic Split Percentage

HundredGigECtrlr0/0/0/2                      ODU40/0/0/0                      50                      50

RP/0/RP0/CPU0:ios#show controllers optics 0/0/0/0

Thu Mar 5 07:12:55.681 UTC

Controller State: Up

Transport Admin State: In Service

Laser State: On

LED State: Green

Optics Status

Optics Type: DWDM optics

DWDM carrier Info: C BAND, MSA ITU Channel=61, Frequency=193.10THz,  
Wavelength=1552.524nm

Alarm Status:

-----

Detected Alarms: None

LOS/LOL/Fault Status:

Alarm Statistics:

-----

HIGH-RX-PWR = 0                      LOW-RX-PWR = 2

HIGH-TX-PWR = 0                      LOW-TX-PWR = 0

HIGH-LBC = 0                      HIGH-DGD = 0

OOR-CD = 0                      OSNR = 0

WVL-OOL = 0                      MEA = 0

IMPROPER-REM = 0

TX-POWER-PROV-MISMATCH = 0

Laser Bias Current = 0.0 %

Actual TX Power = 1.97 dBm

RX Power = 1.58 dBm

RX Signal Power = 0.60 dBm

Frequency Offset = 386 MHz

Performance Monitoring: Enable

THRESHOLD VALUES

-----

Parameter	High Alarm	Low Alarm	High Warning	Low Warning
Rx Power Threshold(dBm)	4.9	-12.0	0.0	0.0
Tx Power Threshold(dBm)	3.5	-10.1	0.0	0.0
LBC Threshold(mA)	N/A	N/A	0.00	0.00

Configured Tx Power = 2.00 dBm

Configured CD High Threshold = 180000 ps/nm

Configured CD lower Threshold = -180000 ps/nm

Configured OSNR lower Threshold = 0.00 dB

Configured DGD Higher Threshold = 180.00 ps

Baud Rate = 34.7175521851 GBd

Bits per Symbol = 1.0000000000 bits/symbol

Modulation Type: BPSK

Chromatic Dispersion -9 ps/nm

Configured CD-MIN -180000 ps/nm CD-MAX 180000 ps/nm

Polarization Mode Dispersion = 0.0 ps

Second Order Polarization Mode Dispersion = 125.00 ps^2

```
Optical Signal to Noise Ratio = 34.60 dB
SNR = 20.30 dB
Polarization Dependent Loss = 0.20 dB
Polarization Change Rate = 0.00 rad/s
Differential Group Delay = 2.00 ps
Filter Roll Off Factor : 0.100
Rx VOA Fixed Ratio : 15.00 dB
Enhanced Colorless Mode : 0
Enhanced SOP Tolerance Mode : 0
NLEQ Compensation Mode : 0
Cross Polarization Gain Mode : 0
Cross Polarization Weight Mode : 0
Carrier Phase Recovery Window : 0
Carrier Phase Recovery Extended Window : 0
AINS Soak : None
AINS Timer : 0h, 0m
AINS remaining time : 0 seconds
```

---

## 2.4T and 2.4TX card modes

This section helps you familiarize with the different card modes available in the 2.4T and 2.4TX cards, their corresponding data rates, baud rate of each data rate, and the step-by-step procedure to configure line card in muxponder modes with the QDD-4x100GE and QDD-400GE pluggables.

### Available card modes

The 2.4T and 2.4TX line cards have two trunk ports (0 and 7) and six client ports (from 1 to 6) each. You can configure the line card in:


- Muxponder slice: You can configure each trunk port independent of the other with different trunk rates. The client-to-trunk mapping is fixed. For Trunk 0, the client ports are 1 to 3. For Trunk 7, the client ports are 4 to 6.

## Muxponder slice mode for 2.4T and 2.4TX cards

This section details the slice and ports supported on the 2.4T and 2.4TX cards.

The line card is divided into two slices, namely, Slice 0 and Slice 1. Each slice contains a trunk port and three client ports. In this mode, the trunk ports operate independently, carrying different data rates. The slices enable the card to function as two different modules. For example, if you set the trunk as 400 G for Slice 0 and 600 G for Slice 1, then Trunk 0 delivers 400 G and Trunk 7 delivers 600 G.

Figure 1: 2.4T line card slices and ports

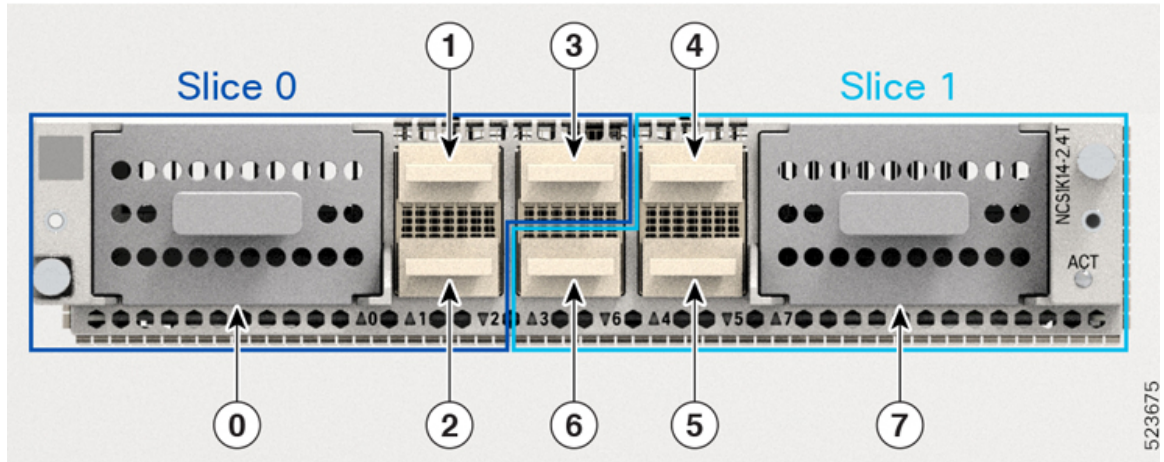

2.4TX

Figure 2: line card slices and ports

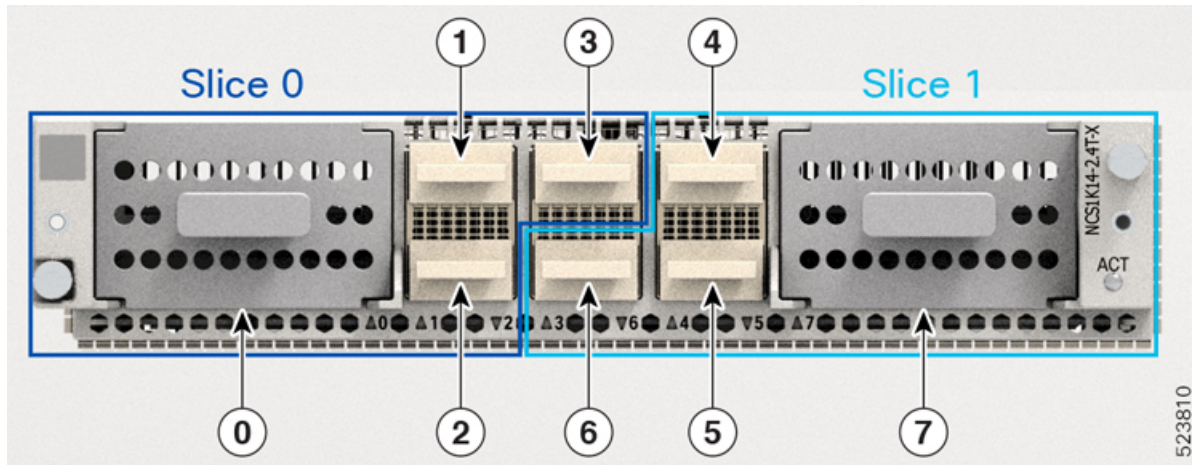


Table 8: Client-to-trunk mapping in slice 0 and slice 1 modes

Slice 0		Slice 1	
Trunk port	Client ports	Trunk port	Client ports
0	1, 2, 3	7	4, 5, 6

## Data rate capabilities for 2.4T and 2.4TX cards in muxponder slice mode

The 2.4T and 2.4TX line cards support various trunk rates.

This table shows the releases from which the 2.4T and 2.4TX cards started supporting each trunk rate.

## Recommended trunk parameters in the 2.4T and 2.4TX cards

This section details the baud rate range for each trunk rate in the 2.4T and 2.4TX cards.

### Baud rate ranges for each trunk rate in the 2.4T card

The 2.4T card carries signals at different trunk rates, with each trunk rate operating within a baud rate range.

In the *Baud Rate Ranges for Each Trunk Rate in the 2.4T card* table, you can find the recommended baud rate ranges to maintain the signal health for each trunk rate in the network.

Data rate per trunk (G)	Minimum baud rate (GBd)	Maximum baud rate (GBd)
400	43.34518	130.4647
500	49.61196	147.7235
600	59.53435	148.0555
700	69.45674	147.8182
800	79.37913	148.0555
900	89.30152	147.8709
1000	99.22392	148.0555
1100	109.1463	148.2068
1200	119.0687	148.0555

Data rate per trunk (G)	Minimum baud rate (GBd)	Maximum baud rate (GBd)
400	43.34518	130.4647
500	49.61196	147.7235
600	59.53435	148.0555
700	69.45674	147.8182
800	79.37913	148.0555
900	89.30152	147.8709
1000	99.22392	148.0555
1100	109.1463	148.2068
1200	119.0687	148.0555

### Baud rate and bit rate range for each trunk rate in the 2.4TX card

The 2.4TX card carries trunk signals at different data rates. Each trunk data rate operates in a default baud rate. However, you can customize the baud rate within the recommended baud rate range based on your deployment scenario. To customize baud rate, see.

In the *Baud Rate and Bit Rate Range for Each Trunk Rate in the 2.4TX Card* table, you can find the recommended baud rate ranges to maintain the signal health for each trunk rate in the network. The table also features the bit per second information for the respective baud rates.

## Customize baud rates

Customizing baud rates is to enable users to adjust the default baud rates for the 2.4T and 2.4TX cards, particularly when operating in muxponder mode. This customization allows for optimization of network bandwidth based on specific deployment scenarios and ensures that the baud rates align with the available bandwidth in the network.

The muxponder mode enables the 2.4T and 2.4TX cards to carry signals in default baud rates when you set up the trunk rate. However, you can customize the baud rates for each trunk rate based on the bandwidth in the network.

Use this task to customize the baud rates within the recommended range as per your deployment scenario.

### Before you begin

- Install these pluggable modules as required.
  - QDD-4x100G
  - QDD-400G
- Enter the Cisco IOS XR configuration mode.

### Procedure

**Step 1** Locate the trunk optics controller for the 2.4T and 2.4TX cards.

#### Example:

```
RP/0/RP0/CPU0:ios(config)# controller optics 0/0/0/7
```

**Step 2** Enter baud rate.

#### Example:

```
RP/0/RP0/CPU0:ios(config-Optics)# baud-rate 120.0000
```

**Step 3** Save the changes.

#### Example:

```
RP/0/RP0/CPU0:ios(config-Optics)#commit
```

## Client pluggables for configuring muxponder slice modes

This section provides details about the client pluggable combinations that you need to set up the client rate for each trunk rate in slice 0 and slice 1.

### Pluggable combinations in muxponder slice modes

The client data rates and ports differ for each trunk rate in the muxponder slice 0 (Trunk 0) and muxponder slice 1 (Trunk 1) configurations. However, the type of client pluggable modules stays the same for both slice modes.



**Note** The 2x 100 GE client rate is supported only on 2.TX cards.

**Table 9: Trunk rate and client pluggable combinations for Slices 0 and Slice 1**

Trunk rate (G) per trunk	Card support	Client rate	Client pluggable	Client ports	
				Slice 0	Slice 1
400	2.4T	2x 100 GE 400 GE	QDD-400G	1	4
		2x 100 GE 4x 100 GE	QDD-4x100G		
600	2.4T	400 GE + 2x 100 GE	QDD-400G + QDD-4x100G	1, 2	4, 5
		6x 100 GE	2x QDD-4x100G		
800	2.4T	2x 100 GE 2x 400 GE	2x QDD-400G	1, 2	4, 5
		400 GE + 4x 100 GE	QDD-400G + QDD-4x100G		
		8x 100 GE	2x QDD-4x100G		
1000	2.4T	2x 100 GE 2x 400GE + 2x 100 GE	2x QDD-400G + 2x QDD-4x100G	1, 2, 3	4, 5, 6
		10x 100 GE	3x QDD-4x100G		

<sup>1</sup> QDD-400G refers to QDD-400G-FR4-S, QDD-400G-AOCxM, and QDD-400G-DR4-S pluggable modules.

<sup>2</sup> QDD-4x100G refers to QDD-4X100G-LR-S, and QDD-400G-DR4-S pluggable modules.

Make sure you use the appropriate values for client bitrate and trunk bitrate parameters when configuring the Muxponder slide mode using the **hw-module** command.

## Set up the client and trunk rate in the muxponder slice mode for 2.4T and 2.4TX cards

Set up the client and trunk rate in the muxponder slice mode for the 2.4T and 2.4TX cards to configure these cards to handle specific data rates for both the aggregated trunk and individual client ports.

Use this task to set up the client and trunk rate in the muxponder slice mode for the 2.4T and 2.4TX cards.

This task considers that you are setting up the 600-G data rate in one of the trunk ports of the 2.4T and 2.4TX cards. This scenario requires you to set the client rate for the client ports. Based on the client pluggable that you use, the client rate can change to 400-GE client, 100-GE client, or mixed client.

For more information on the the data rate on each client port, see [Client pluggables for configuring muxponder slice modes, on page 20](#).

### Before you begin

- Install these pluggables as required.
  - QDD-400G
  - QDD-4x100G

### Procedure

**Step 1** Specify the card location.

#### Example:

```
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0
```

**Step 2** Configure the 2.4T or 2.4TX line card in the muxponder slice mode.

For Trunk 0 port, enter the `muxponder-slice 0` mode.

#### Example:

```
RP/0/RP0/CPU0:ios(config)# muxponder-slice 0
```

For Trunk 1 port, enter the `muxponder-slice 1` mode.

#### Example:

```
RP/0/RP0/CPU0:ios(config)# muxponder-slice 1
```

#### Note

You can configure both muxponder slice 0 and slice 1 modes when needed.

For more information on how to configure muxponder slice mode with QDD-4x100GE and QDD-4x100GE pluggables, see the [hw-module](#) command.

**Step 3** Set up the trunk rate for the 2.4T or 2.4TX card.

#### Example:

```
RP/0/RP0/CPU0:ios(config-hwmod-mp)#trunk-rate 600G
```

**Step 4** Set up the client rate based on the pluggables that you use.

For the QDD-400G pluggable, run this command.

#### Example:

```
RP/0/RP0/CPU0:ios(config-hwmod-mp)#
client-port-rate 1 client-type 400GE
RP/0/RP0/CPU0:ios(config-hwmod-mp)#
client-port-rate 2 client-type 400GE
```

For the QDD-4x100G pluggable, run this command.

**Example:**

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#
client-port-rate 1 lane 1 client-type 100GE
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#
client-port-rate 1 lane 2 client-type 100GE
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#
client-port-rate 1 lane 3 client-type 100GE
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#
client-port-rate 1 lane 4 client-type 100GE
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#
client-port-rate 2 lane 1 client-type 100GE
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#
client-port-rate 2 lane 2 client-type 100GE
```

**Note**

Use the **lane** keyword to set up the 100-GE client rate in the client ports.

For the mixed client pluggable, use the combination of the QDD-400G and QDD-4x100G commands.

**Step 5** Save the configuration and exit the muxponder slice mode.

**Example:**

**Command**

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#
commit
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#
exit
RP/0/RP0/CPU0:ios(config)#
exit
```

**Step 6** Verify the 600-G data rate that you set up.

This sample shows the 600-G data rate ( Trunk Bitrate: 600G ) set up in client ports 1 ( FourHundredGigEctr0/1/0/1 ) and 2 with breakout lanes 1 and 2 ( HundredGigEctr0/1/0/2/1 and HundredGigEctr0/1/0/2/2 ) using 400-GE and 100-GE client type pluggables ( Client Bitrate: MIXED ) in muxponder slice 0 ( Slice ID: 0 ).

**Example:**

```
RP/0/RP0/CPU0:ios#show hw-module location 0/1/NXR0 mxponder-slice 0
Thu Nov 16 15:41:25.720 UTC
Location:          0/1/NXR0
Slice ID: 0 Client Bitrate: MIXED Trunk Bitrate: 600G
Status:           Provisioned
LLDP Drop Enabled: FALSE
ARP Snoop Enabled: FALSE
Client Port              Mapper/Trunk Port              CoherentDSP0/1/0/0
Traffic Split Percentage
FourHundredGigEctr0/1/0/1 ODU-FLEX0/1/0/0/1 100
  HundredGigEctr0/1/0/2/1 ODU-FLEX0/1/0/0/2/1 100
  HundredGigEctr0/1/0/2/2 ODU-FLEX0/1/0/0/2/2 100
```

This sample shows the 600-G data rate ( Trunk Bitrate: 600G ) set up in client ports 0 with breakout lanes 1 to 4 ( HundredGigEctr0/1/0/1/1 to HundredGigEctr0/1/0/1/4 ) and 1 ( HundredGigEctr0/1/0/2/1 ) using 100-GE client type pluggable ( Client Bitrate: 100GE ) in muxponder slice 0 ( Slice ID: 0 ).

**Example:**

```

RP/0/RP0/CPU0:ios#show hw-module location 0/1/NXR0 muxponder-slice 0
Thu Nov 16 16:06:57.575 UTC
Location:                0/1/NXR0
Slice ID: 0 Client Bitrate: 100GE Trunk Bitrate: 600G
Status:                  Provisioned
LLDP Drop Enabled:      FALSE
ARP Snoop Enabled:      FALSE
Client Port              Mapper/Trunk Port          CoherentDSP0/1/0/0
Traffic Split Percentage
HundredGigEctr0/1/0/1/1 ODU-FLEX0/1/0/0/1/1 100
HundredGigEctr0/1/0/1/2 ODU-FLEX0/1/0/0/1/2 100
HundredGigEctr0/1/0/1/3 ODU-FLEX0/1/0/0/1/3 100
HundredGigEctr0/1/0/1/4 ODU-FLEX0/1/0/0/1/4 100
HundredGigEctr0/1/0/2/1 ODU-FLEX0/1/0/0/2/1 100
HundredGigEctr0/1/0/2/2 ODU-FLEX0/1/0/0/2/2 100

```

## Muxponder mode for 2.4TX card

The muxponder mode enables the 2.4TX card to split wavelengths in specific client ports between the two trunk ports. In the slice mode, the client ports that support wavelength splitting act the same as other client ports. However, in the muxponder mode, the 2.4TX card activates the split client ports. The shared client ports are client port 2 for 600G and client port 3 for 1000G.

### How muxponder mode splits 400GE and 4x100GE client traffic

This use case explains the wavelength splitting for 600G trunk rate.

For 600G trunk rate, you must configure client port 1, 2, and 4 as 400GE or 4x100GE. Trunk 0 receives 400GE from port 1. Trunk 7 receives 400GE from port 4. As per split client configuration, port 2 gives 200GE to Trunk 0 and another 200GE to Trunk 7. In this way, both trunk ports deliver 600G trunk rate each.

## Recommended connections for point-to-point topology in muxponder mode

- Connect the port 0 and port 7 in the near end node to their respective port 0 and port 7 in the far end node.
- Make sure the optic fibers connected to trunk ports 0 and 7 are the same length. The difference must be less than 500 m; otherwise, you'll lose traffic on the split port.

## Data rate capabilities for the 2.4TX card card

To outline the data rate capabilities of the 2.4TX card card.

The 2.4TX card card supports different trunk rates.

## Client pluggables for configuring 2.4TX muxponder mode

Table 10: Feature History

Feature Name	Release Information	Description
100GE Channel Support for the 600G and 1000G Trunk Rate in NCS1K14-2.4T-X-K9 Muxponder Mode	Cisco IOS XR Release 24.3.1	The NCS1K14-2.4T-X-K9 line card now allows 100G breakout client support for 600G and 1000G trunk rate in muxponder mode. It features 4x100GE breakout channels in shared client ports, enabling easy integration with existing 100G networks using QDD-4X100G-LR-S, QDD-4X100G-FR-S, and QDD-400G-DR4-S pluggable modules. These channels offer high density and bandwidth efficiency without extra costs.

This section provides details about the client pluggable combinations that you need to set up the client rate for each trunk rate.

### Client pluggable combinations in muxponder mode

The 2.4TX card muxponder mode supports various trunk rate per trunk with different client pluggable combinations.



**Note** From R24.3.1, the 2.4TX card supports 100GE client traffic in the shared client port for both 600G and 1000G trunk rates.

The client channel rate in the table refers to both the total client rate and the client rate per channel in the client ports. For example, **2x 400GE + 2x 100GE** indicates that the client traffic consists of two channels at 400GE each and two channels at 100GE each.

Table 11: 2.4TX card muxponder mode port configurations

Trunk rate (G) per trunk	Total configured trunk rate (G)	Client channel rate	Client pluggable	Shared client port	Client ports
500	1000	2x 400GE + 2x 100GE	2x QDD-400G + 1x QDD-4x100G	2	1, 4
		1x 400GE + 6x 100GE	1x QDD-400G + 2x QDD-4x100G		
		10x 100GE	3x QDD-4x100G		

Trunk rate (G) per trunk	Total configured trunk rate (G)	Client channel rate	Client pluggable	Shared port	client	Client ports
600	1200	3x 400GE	3x QDD-400G	2		1, 4
		2x 400GE + 4x 100GE	2x QDD-400G + 1x QDD-4x100G			
		1x 400GE + 8x 100GE	1x QDD-400G + 2x QDD-4x100G			
900	1800	4x 400GE + 2x 100GE	4x QDD-400G + 1x QDD-4x100G	3		1, 2, 4, 5
		3x 400GE + 6x 100GE	3x QDD-400G + 2x QDD-4x100G			
		2x 400GE + 10x 100GE	2x QDD-400G + 3x QDD-4x100G			
		1x 400GE + 14x 100GE	1x QDD-400G + 4x QDD-4x100G			
		18x 100GE	5x QDD-4x100G			
1000	2000	5x 400GE	5x QDD-400G	3		1, 2, 4, 5
		4x 400GE + 4x 100GE	4x QDD-400G + 1x QDD-4x100G			
		3x 400GE + 8x 100GE	3x QDD-400G + 2x QDD-4x100G			
		2x 400GE + 12x 100GE	2x QDD-400G + 3x QDD-4x100G			
		1x 400GE + 16x 100GE	1x QDD-400G + 4x QDD-4x100G			

### Understanding client rates per client port for each trunk rate

This table shows the sample client rate per client port for each trunk rate. This simplified matrix helps you understand the traffic flow in each client port. It also indicates the number of channels that each client port

uses to deliver the client traffic. The type of pluggable module inserted in the shared client port determines the traffic rate through breakout and non-breakout channels.

You can customize the configuration by mixing and matching the client pluggable modules according to your requirements.

**Table 12: Client rate traffic per trunk rate and client pluggable combinations**

Trunk rate (G) per trunk	Client pluggable	Client rate (GE) per trunk 0 client ports		Client rate (GE) per shared client ports			Client rate (GE) per trunk 1 client ports		
		1	2	2	3	4	5	6	
500	2x QDD-400G + 1x QDD-4x100G	400	-	2x 100	-	400	-	-	
	1x QDD-400G + 2x QDD-4x100G	400	-	2x 100 <sup>3</sup>	-	4x 100	-	-	
	3x QDD-4x100G	4x 100	-	2x 100 <sup>3</sup>	-	4x 100	-	-	
600	3x QDD-400G	400	-	400	-	400	-	-	
	2x QDD-400G + 1x QDD-4x100G	400	-	4x 100 <sup>3</sup>	-	400	-	-	
	1x QDD-400G + 2x QDD-4x100G + 3x QDD-4x100G	400	-	4x 100 <sup>3</sup>	-	4x 100	-	-	
900	4x QDD-400G + 1x QDD-4x100G	400	400	-	2x 100 <sup>3</sup>	400	400	-	
	3x QDD-400G + 2x QDD-4x100G	400	400	-	2x 100 <sup>3</sup>	400	4x 100	-	
	2x QDD-400G + 3x QDD-4x100G	400	400	-	2x 100 <sup>3</sup>	4x 100	4x 100	-	
	1x QDD-400G + 4x QDD-4x100G	400	4x 100	-	2x 100 <sup>3</sup>	4x 100	4x 100	-	
	5x QDD-4x100G	4x 100	4x 100	-	2x 100 <sup>3</sup>	4x 100	4x 100	-	

Trunk rate (G) per trunk	Client pluggable	Client rate (GE) per trunk 0 client ports		Client rate (GE) per shared client ports		Client rate (GE) per trunk 1 client ports		
		1	2	2	3	4	5	6
1000	5x QDD-400G	400	400	-	400	400	400	-
	4x QDD-400G + 1x QDD-4x100G	400	400	-	4x 100	400	400	-
	3x QDD-400G + 2x QDD-4x100G	400	400	-	4x 100	400	4x 100	-
	2x QDD-400G + 3x QDD-4x100G	400	400	-	4x 100	4x 100	4x 100	-
	1x QDD-400G + 4x QDD-4x100G + 5x QDD-4x100G	400	4x 100	-	4x 100	4x 100	4x 100	-

<sup>3</sup> In this shared port, the pluggable capacity is 400GE or 4x 100GE, but, for this trunk rate, the 2.4TX card consumes only 2x 100GE client data.

## Set up the client and trunk rate in the muxponder mode for the 2.4TX card

Use this task to configure a trunk rate in muxponder mode for the 2.4TX card card.



**Note** This task considers that you're setting up the 600G trunk rate in the muxponder mode for the 2.4TX card card. The commands and output shown are for 600G trunk rate. The commands and output change for other trunk rates.

This task uses a mix of client pluggable modules. For this task, the card has:

- QDD-4x100G pluggable in shared client port 2, and
- QDD-400G pluggable in client ports 1 and 4



**Note** For the 600G trunk rate, the split port supports both 400GE and 4x100GE. For more information on required pluggable modules for other trunk rates, see [Client pluggables for configuring 2.4TX muxponder mode, on page 25](#).

### Before you begin

- Install the pluggables as required.
  - QDD-400G
  - QDD-4x100G

## Procedure

**Step 1** Specify the card location.

**Example:**

```
RP/0/RP0/CPU0:ios(config)# hw-module location 0/1/NXR0
```

**Step 2** Enter the muxponder card mode.

**Example:**

```
RP/0/RP0/CPU0:ios(config-hwmod)#muxponder
```

**Step 3** Set up the trunk rate.

**Example:**

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp)# trunk-rate 600G
```

**Step 4** Set up the client rate for the QDD-400G and QDD-4x100G pluggable modules.

**Example:**

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#
client-port-rate 1 client-type 400GE
// QDD-400G pluggable in client port 1
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#
client-port-rate 2 lane 1 client-type 100GE
// Enter lane for the QDD-4x100G pluggable in client port 2
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#
client-port-rate 2 lane 2 client-type 100GE
// Enter lane for the QDD-4x100G pluggable in client port 2
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#
client-port-rate 2 lane 3 client-type 100GE
// Enter lane for the QDD-4x100G pluggable in client port 2
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#
client-port-rate 2 lane 4 client-type 100GE
// Enter lane for the QDD-4x100G pluggable in client port 2
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#
client-port-rate 4 client-type 400GE
```

**Note**

Use the **lane** keyword to set up the 100GE client rate in the client ports.

**Step 5** Save the configuration and exit the muxponder mode.

**Example:**

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#
commit
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#
exit
// Exits muxponder mode
RP/0/RP0/CPU0:ios(config)#
exit
// Exits configuration moder
```

**Step 6** Verify the 600G mixed client rate configured for the 2.4TX card muxponder mode.

This sample shows the 600G data rate ( Trunk Bitrate: 600G ) set up in client ports 1 and 4 ( FourHundredGigEctr0/2/0/1 and FourHundredGigEctr0/2/0/4 ) and split client port 2 with breakout lanes 1 to 4 ( HundredGigEctr0/2/0/2/1 to HundredGigEctr0/2/0/2/4 ).

### Example:

```
RP/0/RP0/CPU0:ios# show hw-module location 0/2/NXR0 muxponder
Location:                0/2/NXR0
Client Bitrate: MIXED Trunk Bitrate: 600G
Status:                  Provisioned
LLDP Drop Enabled:      FALSE
ARP Snoop Enabled:      FALSE
Client Port              Mapper/Trunk Port          CoherentDSP0/2/0/0  CoherentDSP0/2/0/7

Traffic Split Percentage
FourHundredGigEctr0/2/0/1  ODU-FLEX0/2/0/0/1          100
0

HundredGigEctr0/2/0/2/1  ODU-FLEX0/2/0/0/2/1 100 0
HundredGigEctr0/2/0/2/2  ODU-FLEX0/2/0/0/2/2 100 0
HundredGigEctr0/2/0/2/1  ODU-FLEX0/2/0/7/2/3 0 100
HundredGigEctr0/2/0/2/2  ODU-FLEX0/2/0/7/2/4 0 100
FourHundredGigEctr0/2/0/4  ODU-FLEX0/2/0/7/4          0
100
```

## 800GE support in bundle configuration mode on 2.4TA cards

A 800GE client port is a high-bandwidth Ethernet interface that

- is internally divided into eight 100GE sub-channels (8x100GE),
- distributes the 100GE sub-channels across two trunk ports, Port 0 and Port 7, and
- is configured in muxponder mode using the **hw-module location** configuration commands on 2.4TA line cards.

**Table 13: Feature history**

Feature name	Release information	Feature description
800GE support in Bundle Configuration mode for NCS1K14-2.4T-A-K9 line card	Cisco IOS XR Release 26.2.1	The NCS1K14-2.4T-A-K9 line card now supports the 800GE client rate in muxponder mode, paired with the 400G, 600G, and 1200G trunk rates. In this mode, the 800GE client is split as 8x100GE and the sub-channels are carried over the two trunk ports, Port 0 and Port 7.  This support increases bandwidth flexibility and optimizes port utilization for high-speed client traffic.

### Supported line card and trunk rates

The 800GE client rate in muxponder mode is supported on NCS1K14-2.4T-A-K9 line card.

The 800GE client rate in muxponder mode is supported with these trunk rates:

- 400G
- 600G
- 1200G

**Table 14: 2.4TA bundle mode configurations for 800GE client**

Trunk rate (G) per trunk	Total configured trunk rate (G)	Client channel rate	Client pluggable	Split port	Client ports
400	800	1x 800GE (8x 100GE)	1x QDD-8X100	2	Clients: 2 Trunks: 0, 7
600	1200	1x 800GE + 1x 400GE (12x 100GE)	1x QDD-8X100 + 1x QDD-4X100	2	Clients: 2, 4 Trunks: 0, 7
1200	2400	3x 800GE	3x QDD-8X100	6	Clients: 2, 5, 6 Trunks: 0, 7



**Note** Ethernet PRBS and idle frame insertion are not supported for the 800GE split configuration in muxponder mode.

## Configure 800GE in bundle mode on 2.4TA cards

Set up the 800GE client ports and the corresponding trunk rate in muxponder mode so that the 800GE client is split as 8x100GE and the sub-channels are carried over the two trunk ports, Port 0 and Port 7.

Use this task when configuring or reconfiguring line cards that require multiplexed client and trunk rates on 2.4TA hardware.

### Before you begin

- Install the required client pluggables in the client ports that you plan to configure.

Follow these steps to configure the 800GE split client rate in muxponder mode.

### Procedure

**Step 1** Enter the **hw-module location** mxponder to specify the card location.

#### Example:

```
RP/0/RP0/CPU0:ios#configure
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 mxponder
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#
```

**Step 2** Run the **trunk-rate rate client-port-rate port client-type rate** command and assign each client port to the 800GE or 400GE client type to configure the trunk rate.

**Example:**

This is a sample to configure 400G trunk rate with 800GE client in muxponder mode.

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#trunk-rate 400G
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#client-port-rate 2 client-type 800GE
```

**Example:**

This is a sample to configure 600G trunk rate with 800GE + 400GE clients in muxponder mode.

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#trunk-rate 600G
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#client-port-rate 2 client-type 800GE
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#client-port-rate 4 client-type 400GE
```

**Example:**

This is a sample to configure 1200G trunk rate with three 800GE clients in muxponder mode.

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#trunk-rate 1200G
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#client-port-rate 2 client-type 800GE
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#client-port-rate 5 client-type 800GE
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#client-port-rate 6 client-type 800GE
```

**Step 3** Commit the configuration to apply the changes.

**Example:**

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#commit
```

**Step 4** Run the **show hw-module location location mxponder** to verify the configuration.

**Example:**

```
RP/0/RP0/CPU0:ios#show hw-module location 0/0/NXR0 mxponder
Tue Jan 20 09:58:19.083 UTC

Location:                0/0/NXR0
Client Bitrate:          800GE
Trunk Bitrate:           400G
Status:                  Provisioned
LLDP Drop Enabled:       FALSE
ARP Snoop Enabled:       FALSE
Client Port              Mapper/Trunk Port          CoherentDSP0/0/0/0    CoherentDSP0/0/0/7

                          Traffic Split Percentage

EightHundredGigEctrlr0/0/0/2  ODU-FLEX0/0/0/0/2          50
50
```

```
RP/0/RP0/CPU0:ios#show hw-module location 0/0/NXR0 mxponder
Tue Jan 20 10:06:37.996 UTC
```

```
Location:                0/0/NXR0
Client Bitrate:          800GE
Trunk Bitrate:           600G
Status:                  Provisioned
LLDP Drop Enabled:       FALSE
```

```

ARP Snoop Enabled:    FALSE
Client Port           Mapper/Trunk Port      CoherentDSP0/0/0/0   CoherentDSP0/0/0/7
                       Traffic Split Percentage
EightHundredGigEctrlr0/0/0/2   ODU-FLEX0/0/0/0/2           75
25

RP/0/RP0/CPU0:ios#show hw-module location 0/0/NXR0 muxponder
Tue Jan 20 10:17:04.069 UTC

Location:              0/0/NXR0
Client Bitrate:        800GE
Trunk Bitrate:         1200G
Status:                Provisioned
LLDP Drop Enabled:    FALSE
ARP Snoop Enabled:    FALSE
Client Port           Mapper/Trunk Port      CoherentDSP0/0/0/0   CoherentDSP0/0/0/7
                       Traffic Split Percentage
EightHundredGigEctrlr0/0/0/6   ODU-FLEX0/0/0/7/6           50
50

```

Confirm that the client port shows the **800GE** client bitrate, the trunk bitrate matches the configured trunk rate, and the client-to-trunk mapping is distributed across Port 0 and Port 7 .

---

The line card runs in muxponder mode with the configured 800GE client ports. The 800GE client traffic is split as 8x100GE and distributed across the Port 0 and Port 7 trunks according to the selected trunk rate.

